5413143 Issue 1 Oct. 2010





# Service Information



38 cm GAS HOBS

Models Comm. Covered Code

Single Ring PMG41DCDRSF 57506

2 Ring **PMG42SF** 57507



#### SAFETY NOTES & GENERAL SERVICING ADVICE

- All Gas Appliances MUST by law be installed by a competent person. Only use a Gas Safe (Corgi in Northern Ireland) Registered Engineer. Service or repairs should always be carried out by Scholtès UK Service personnel.
- 2. ALWAYS ISOLATE THE APPLIANCE FROM THE GAS, AND WHERE NECESSARY, ELECTRICAL SUPPLIES BEFORE COMMENCING ANY SERVICE OR REPAIR WORK.
- 3. Personal safety precautions MUST be taken by engineers to protect against accidents caused by sharp edges on metal or plastic parts.
- 4. This Publication is intended for qualified service engineers and all reasonable care has been taken to ensure that the information contained in the service instructions is correct at the time of printing. Continued development of products means that specifications and parts are subject to modification and the information given may not entirely correspond with your appliance.
- Genuine Scholtès UK spares should always be used when repairing Scholtès UK products.
  For UK customers the fitting of non genuine spares could affect your rights under the product liability section of the Consumer Protection Act 1988.

#### IF YOU SUSPECT A GAS ESCAPE CARRY OUT THE FOLLOWING

- 1. DO turn off the gas supply immediately at the meter.
- DO extinguish all sources of ignition.
- 3. DO open doors and windows to ventilate the room (s).
- 4. DO ensure access can be made to the premises. Where the operation of entry phones or electric security doors are evident, these MUST NOT BE USED. Access will have to be arranged by another method.
- 5. If you cannot IMMEDIATELY attend to the gas escape, report the escape to the gas supplier. Their telephone number can be found in the local telephone directory.
- 6. DO NOT smoke.
- 7. DO NOT turn on or off electrical light or power switches.

#### IF IN DOUBT, EVACUATE THE PREMISES AND IF NECESSARY ADJACENT PROPERTIES.

#### **INDEX**

troduction	3
echnical Data3 - s	5
sposal	5
stallation Instructions	9
escription of the Appliance	0
smantling Procedure11 - 1	2
iring Diagram	3



# INTRODUCTION OF SCHOLTÈS 38cm GAS HOBS MODELS PMG41DCDRSF & PMG42SF

The above 38 cm Domino Gas Hobs were introduced to the Scholtès range during October 2010. Model PMG41DCDRSF is a single Double Crown Wok burner gas hob, model PMG42SF is a double burner gas hob with one Triple Crown burner. Both models have automatic ignition, cast iron pan supports and FSD fitted on each burner.

Model	Comm. Code	Colour		
PMG41DCDRSF	57506	Stainless Steel		
PMG42SF	57507	Stainless Steel		

#### **TECHNICAL DATA**

**GENERAL** 

LPG Conversion Kits are available:

C00090735 model PMG41, C00089138 model PMG42.

**COUNTRY OF ORIGIN** Italy

**OVERALL DIMENSIONS** 

Height 54 mm - PMG41, 47 mm - PMG42

Width 380 mm Depth (front to back) 510 mm

**GAS SPECIFICATIONS** 

Gas Connection Rp 1/2 (1/2" BSP Male) located on the left hand side of the hob when

viewed from the rear.

Supply Pressure Natural Gas Models - G20 @ 20 mbar

Propane (G31) at 37 mbar Butane (G30) at 28-30 mbar

Pressure Test Point Burner Injector

Gas Rate Adjustment None Aeration Adjustment None

#### **ELECTRICAL SPECIFICATIONS**

Electrical Connection Flexible cord fitted 1.5 m.230/240V AC - 50HZ supply with only a 3 amp

fuse.



# **BURNER INPUT RATES & INJECTOR SIZES**

Table 1			Liquid gas				Natural gas		
BURNER	Diameter (mm)	Thermal power kW (H.s.*)		By-pass 1/100	Injector 1/100	Flow * g/h		Injector 1/100	Flow* I/h
		Nomin.	Reduc.	(mm)	(mm)	G30	G31	(mm)	G20
D. Triple Ring	130	3.25	1.3	57	91	236	232	124	309
A. Auxiliary	55	1.00	0.4	30	50	73	71	71	95
I. Double flame DC DR (internal)	30	0.90	0.4	30	44	65	64	70	86
I. Double Flame DC DR (external)	130	4.10	1.3	57	70	298	293	110	390
Supply pressure	Nominal Minimum Maximum				28-30 20 35	37 25 45		20 17 25	


<sup>\*</sup> At 15°C and 1013 mbar - dry gas

Natural P.C.S. = 37.78 MJ/Kg

The hob can only be installed above built-in ovens with a cooling fan ventilation system.



PMG 41 DCDR ...

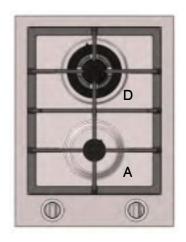

PMG 42 ...

<sup>\*\*</sup> Propane P.C.S. = 50.37 MJ/Kg

<sup>\*\*\*</sup> Butane P.C.S. = 49.47 MJ/Kg



#### **DIRECTIVES**

This model conforms with the following European Economic Community directives:

- 2006/95/EEC dated 12/12/06 (Low Voltage) and subsequent amendments;
- 2004/108/EEC dated 15/12/04 (Electromagnetic Compatibility) and subsequent amendments;
- 93/68/EEC dated 22/07/93 and subsequent amendments;
- 2009/142/EEC dated 30/11/09 (Gas) and subsequent amendments;
- 2002/96/EC and subsequent amendments.

#### **DISPOSAL**

To minimise the risk of injury to children please dispose of your product carefully and safely.

Remove all doors and lids. Remove the mains cable (where fitted) by cutting off flush with the appliance and always ensure that no plug is left in a condition where it could be connected to the electricity supply.

To help the environment, Local Authority instructions should be followed for the disposal of the product.

# **Disposal of Old Electrical Appliances**



The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out 'wheeled bin' symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



#### INSTALLATION INSTRUCTIONS

Prior to installation, ensure that the local distributions (nature of the gas and gas pressure) and the adjustment conditions are compatible. The adjustment conditions for this appliance are stated on the data badge which is fitted on the underside of the base panel.

The appliance is not designed to be connected to a combustion products evacuation device.

It must be installed and connected in accordance with current installation regulations. In particular attention should be given to the relevant requirements regarding ventilation.

The models in this manual are set to burn NATURAL GAS (G20) at 20 mbar. It can be converted for use on Butane (G30) at 28 - 30 mbar and Propane (G31) at 37 mbar with the use of the conversion kit.

The appliance is supplied with an LPG kit which includes the injectors, together with an LPG label. The customer is advised to keep the kit in a safe place.

The Conversion Kit for model PMG41 is Part Number C00090735 and for model PMG42 is part number C00089138.

#### **GAS SAFETY (INSTALLATION & USE) REGULATIONS**

It is the law that all gas appliances are installed by competent persons in accordance with the current edition of the above regulations. It is in your interest and that of safety to ensure compliance with the law.

In the UK, Gas Safe (CORGI in Northern Ireland) registered installers work to safe standards of practice.

The hob must also be installed in accordance with BS 6172: 2004.

Failure to install the hob correctly could invalidate the warranty liability claims and could lead to prosecution.

#### **LOCATION**

The hob may be located in a kitchen, kitchen/diner or a bed-sitting room, but not in a room containing a bath or shower. The hob must not be installed in a bed-sitting room of less than 20m<sup>3</sup>.

When adjusted for use on Butane (G30) or Propane (G31), this model must not be installed in a room or internal space below ground level, e.g. in a basement.

#### PROVISION FOR VENTILATION

The room containing the hob should have an air supply in accordance with BS 5440:Part 2:2009.

The room must have an opening window or equivalent; some rooms may also require a permanent vent.

If the room has a volume between 5 m<sup>3</sup> and 10 m<sup>3</sup>, it will require an air vent of 50 cm<sup>2</sup> effective area unless it has a door which opens directly to outside.

If the room has a volume of less than 5 m<sup>3</sup>, it will require an air vent of 100 cm<sup>2</sup> effective area.


If there are other fuel burning appliances in the same room, BS5440 Part 2: 2009 should be consulted to determine air vent requirements.



# **SITING THE HOB**

All Scholtès hobs are suitable for installation over any Scholtès Built -In Ovens. The hob should be checked to ensure that the voltage corresponds with the voltage supply, this is stated on the rating plate which is situated on the base panel.


These hobs are designed to fit into a worktop and base unit(s) with a cut-out as shown in Fig. 1.

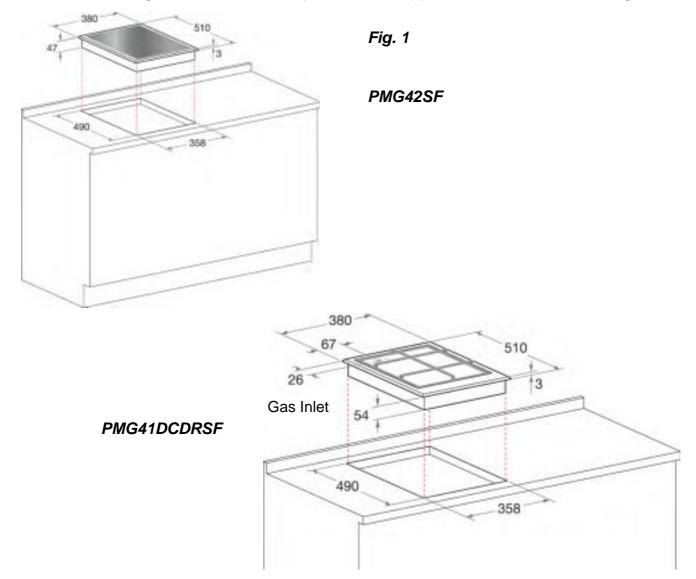



Any obstruction such as supports or side panels, must be removed to allow 15 mm minimum depth below the base of the gas hob. Any overhead surface of combustible material must not be closer than 650 mm. See Fig. 2 and Fig. 3.

It is recommended that the hob be installed at a distance of at least 55 mm from the rear wall or other vertical surfaces to ensure that the air circulated properly over the cooking area and to avoid overheating the surrounding surfaces. See Fig. 3.

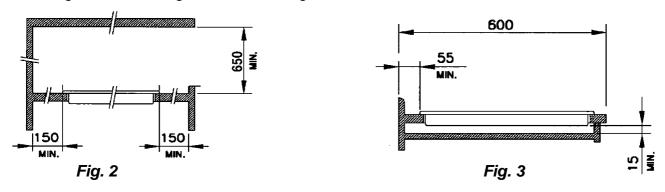


If a cooker hood is to be installed, refer to the manufacturers instructions regarding fixing heights.

#### FITTING THE HOB

Unpack the hob from the carton. Remove the bag containing the sealing tape, fixing brackets and screws. Make sure that the seal adheres properly to the bottom part of the frame of the hob. The seal must fit properly around the entire hob frame and especially along the corners in order to create a seal between the work top and the hob itself so as to prevent spills or splashes from leaking into the cabinet below. The hob must be fixed into the work top using the fixing clamps as shown in Fig. 4 below.

It is essential to install the hob on a totally flat surface. Any damage caused by incorrect fitting may alter the characteristics or impair performance.

Insert the hob into the hole, pressing firmly around the frame to make it adhere to the counter top. Connect the hob to the gas supply and check for gas tightness.

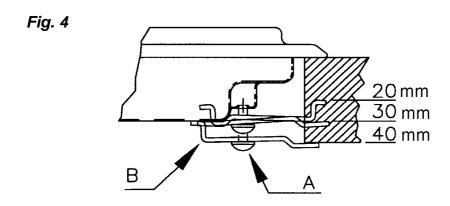



#### **INSTALLATION - ELECTRICAL REQUIREMENTS**

WARNING - REFER TO THE RATING PLATE FOR VOLTAGE AND CHECK THAT THE APPLIANCE VOLTAGE CORRESPONDS WITH THE SUPPLY VOLTAGE.

#### THIS APPLIANCE MUST BE EARTHED. CONNECT TO A 230-240V 50Hz SUPPLY ONLY

When connected to a B.S. 1363 fused plug, a 3 amp fuse must be fitted.

**IMPORTANT:** The wires in the mains lead fitted to this appliance may not correspond with the coloured marking identifying the terminals in the plug. if this is the case, proceed as follows: -

The wire which is coloured BLUE must be connected to the terminal which is marked with the N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug.

If you are in doubt, consult a qualified electrician.


BLUE - NEUTRAL


BROWN - LIVE GREEN/YELLOW STRIPES - EARTH



# **DESCRIPTION OF THE APPLIANCE**

#### **OVERALL VIEW - PMG42 shown**

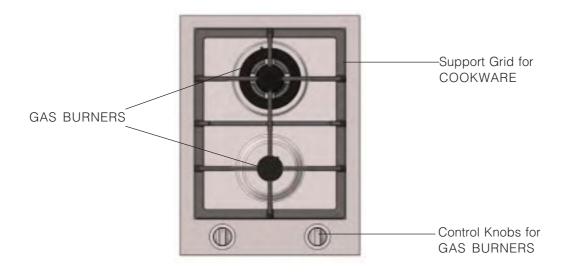

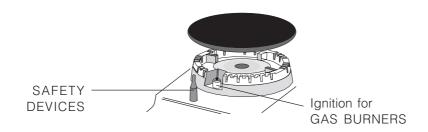

- GAS BURNERS differ in size and power. Use the diameter of the cookware to choose the most appropriate burner to cook with.
- CONTROL KNOBS for the gas burners adjust the power and size of the flame.
- IGNITION for the gas burner enables a specific burner to be lit automatically.
- SAFETY DEVICE stops the flow of gas if the flame is accidentally extinguished.



#### **DISMANTLING PROCEDURE**

#### WARNING

- A gas tightness test must be carried out, both before and after completion of any work involving installation, disconnection, removal, alteration and replacement or maintenance of any gas appliance, fitting, etc.
- Before continuing, ensure that the appliance is disconnected from the electrical supply, and before servicing any gas carrying component, disconnect the gas supply to the appliance.
- iii) Carry out insulation resistance, Earth continuity and functional tests on the appliance after service.
- iv) Personal safety precautions must be taken to protect against accidents caused by sharp edges on metal and plastic parts.

#### 1. TO REMOVE THE HOB TOP

- a. Disconnect the hob from the power supply and the gas supply.
- b. Remove the pan support, burner cap(s), burner ring(s), control knob(s), springs and shrouds.
- c. Remove the 4 screws, 2 per burner, which hold the burners to the hob top.
- d. Remove the 2 screws that secure the 2 control taps to the hob top (1 screw per tap).
- e. Lift the hob top clear.
- f. Reassemble in reverse order.

#### 2. TO ACCESS THE CONTROLS

- a. Disconnect the hob from the power supply.
- b. Remove the pan support, burner cap(s) and burner rings(s).
- c. Remove the 6 screws on the bottom cover to allow access to the controls.

#### 3. TO REMOVE THE SPARK GENERATOR

- a. Remove the hob top as in (1).
- b. Remove the Live, Neutral and Earth connections from the spark generator, noting their original positions.
- c. Remove the 2 electrode leads from the spark generator, noting their original positions.
- d. Remove the 2 screws holding the spark generator to the hob base panel. One of the screws supports the Earth pin.
- e. Reassemble in reverse order.

#### 4. TO REMOVE THE BURNER BASE (BASES)

- a. Remove hob top as in (1).
- b. Undo the hexagonal headed nuts holding the bundy tubes onto the burner bases using a 15 mm spanner.
- c. Remove the 2 screws from under the base holding the burner to the base panel. Remove the plate held by 4 screws and remove the burner.
- d. The small burner has no securing plate PMG42.
- e. Reassemble in reverse order.



#### 5. THERMOCOUPLES

- a. Remove the hob top as in (1).
- b. Undo the 15 mm union nut.
- c. Remove the 2 screws in the burner base. When loose, this will allow access to the 8 mm nut holding the thermocouple plate.
- d. Reassemble in reverse order.

#### 6. TO REMOVE THE HOB ELECTRODES & LEADS

- a. Remove the hob top as in (1).
- b Unclip and remove the retaining clip that holds the electrode and lead assembly to the burner base.
- c. Remove the electrode and lead assembly.
- d. Reassemble in reverse order.

#### 7. TO REMOVE THE CONTROL TAP & MICROSWITCH ASSEMBLIES

- a. Remove the hob top as in (1).
- b. Undo the hexagonal headed nuts securing the bundy tubes to both control taps using a 15 mm spanner.
- c. Remove the screw from under the base holding the gas rail assembly.
- d. Lift clear the gas rail assembly complete with control taps, noting that the Blue leads and microswitches are still connected.
- e. Remove the 2 screws securing the brackets on the gas rail to the control taps. Remove the control tap assemblies from the gas rail.
- f. Unclip and remove the retaining ring 'C' clip from the spindle of the control tap.
- g. Remove the washer.
- h. Lift the microswitch assemblies clear, noting the position of all the washers.
- i. Disconnect one Blue lead from the spark generator.
- j. Remove the 2 screws holding the mains terminal block cover plate from the underside of the base. Remove the cover.
- k. Unscrew the Blue microswitch lead from the mains terminal block.
- I. Remove the complete double microswitch assembly from the appliance.
- m. Reassemble in reverse order.

#### **NOTES: -**

On reassembly, all gas joints must be checked for leakage.

A new seal is to be used each time the control tap is removed from the gas rail.

#### 8. TO REMOVE THE BURNER INJECTOR(S)

- a. Remove the pan support, burner cap(s) and burner ring(s).
- b. The injector(s) can be removed by using a 7 mm box spanner.



# **WIRING DIAGRAM**

