

INSTALLATION INSTRUCTIONS FOR OPTIONAL STYLE VIEW DOOR KITS FOR USE WITH LENNOX (ELDV) ELITE™ SERIES AND (MPLDV) MERIT™ PLUS SERIES GAS FIREPLACES

STYLE VIEW DOOR KITS			
Cat. No.	Model	Description	Model Series
ARCH PANE DESIGN KITS			
H3970	APDL35C	35" Arch Doors, Charcoal	ELDV35
H3971	APDL35SP	35" Arch Doors, Satin Pewter	
H3973	APDL40C	40" Arch Doors, Charcoal	ELDV40
H3974	APDL40SP	40" Arch Doors, Satin Pewter	
H3976	APDL45C	45" Arch Doors, Charcoal	ELDV45
H3977	APDL45SP	45" Arch Doors, Satin Pewter	

SQUARE PANE DESIGN KITS			
Cat. No.	Model	Description	Model Series
H3979	SPDL35C	35" Square Doors, Charcoal	ELDV35
H3980	SPDL35SP	35" Square Doors, Satin Pewter	
H3982	SPDL40C	40" Square Doors, Charcoal	ELDV40
H3983	SPDL40SP	40" Square Doors, Satin Pewter	
H3985	SPDL45C	45" Square Doors, Charcoal	ELDV45
H3986	SPDL45SP	45" Square Doors, Satin Pewter	

Table 1

KIT CONTENTS		
ITEM	QUANTITY	DESCRIPTION
1	1 ea.	Door, Left
2	1 ea.	Door, Right
3	1 ea.	Doorframe Assembly
4	1 ea.	Instruction Sheet

TOOLS REQUIRED - None

Read and understand all instructions and warnings in this document before beginning the installation.


STYLE VIEW DOOR KITS			
Cat. No.	Model	Description	Model Series
ARCH PANE DESIGN KITS			
H6104	APDML30C	30" Arch Doors, Charcoal	MPLDV30*
H6105	APDML30SP	30" Arch Doors, Satin Pewter	
H6106	APDML35C	35" Arch Doors, Charcoal	MPLDV35
H6107	APDML35SP	35" Arch Doors, Satin Pewter	
H6108	APDML40C	40" Arch Doors, Charcoal	MPLDV40
H6109	APDML40SP	40" Arch Doors, Satin Pewter	
H6110	APDML45C	45" Arch Doors, Charcoal	MPLDV45
H6111	APDML45SP	45" Arch Doors, Satin Pewter	

SQUARE PANE DESIGN KITS			
Cat. No.	Model	Description	Model Series
H6096	SPDML30C	30" Square Doors, Charcoal	MPLDV30*
H6097	SPDML30SP	30" Square Doors, Satin Pewter	
H6098	SPDML35C	35" Square Doors, Charcoal	MPLDV35
H6099	SPDML35SP	35" Square Doors, Satin Pewter	
H6100	SPDML40C	40" Square Doors, Charcoal	MPLDV40
H6101	SPDML40SP	40" Square Doors, Satin Pewter	
H6102	SPDML45C	45" Square Doors, Charcoal	MPLDV45
H6103	SPDML45SP	45" Square Doors, Satin Pewter	


Table 2

KIT CONTENTS			
ITEM	QUANTITY	DESCRIPTION	
1	1 ea.	Door, Left	*30" Doors Feature A Single Piece Non-Operable Facade Panel
2	1 ea.	Door, Right	
3	1 ea.	Doorframe Assembly	
4	2 ea.	Door Clip	
5	1 ea.	Instruction Sheet	


Arch Pane Design

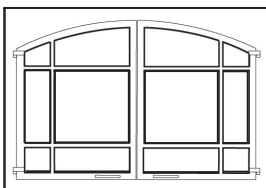


Square Pane Design

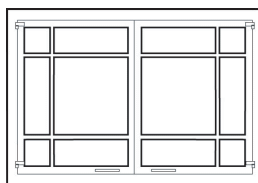

Arch Pane Door/Facade Design

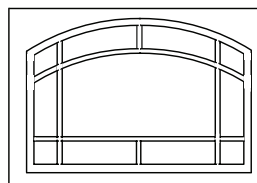

Square Pane Door/Facade Design

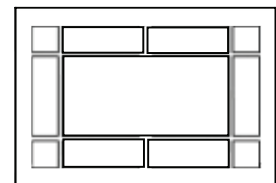

GENERAL INFORMATION

These decorative screen doors are offered in two attractive finishes and fit on the face of the appliance over the glass doorframe. If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

	 <h3>WARNINGS</h3>
	<p>Hot! Do not touch! The decorative screen doors and the glass behind the screen doors will become hot during operation and will retain heat for a while after shutting off the appliance. Severe burns may result. Carefully supervise children in the same room as appliance.</p>
<ul style="list-style-type: none"> • These decorative screen doors are NOT heat guards and are not intended to prevent burns. • Operate the doors by only using the door handles. Avoid touching the doorframe, screens, or the glass enclosure, if the door is opened. • Use care when opening doors. Avoid exerting any downward pressure on the doors when they are in an open position. Excessive force can cause the doors to come loose or be damaged. • INSTALL ONLY WHEN THE FIREPLACE IS OFF AND COLD! 	


INSTALLATION INSTRUCTIONS:

1. Remove and retain the Lower Panel per instructions in *Figure 1*.




* **NOTE:** The fireplace is equipped with a unit-mounted ON/OFF switch. In most installations this switch is not used. If you desire to use the switch and want to install these Style View Doors, you may desire to relocate the switch into the bracket provided on the door frame. This is **OPTIONAL**. If you desire to relocate the switch complete the optional procedures indicated by the asterisks below. Steps 2, 4 and 5 refer to ELDV Models only. For MPLDV Models, purchase a Rocker Switch kit model FRS (80L41).

- *2. Remove the Piezo / Switch Bracket from fireplace control compartment by pulling it forward as shown in *Figure 2* (also see *Figure 6*).

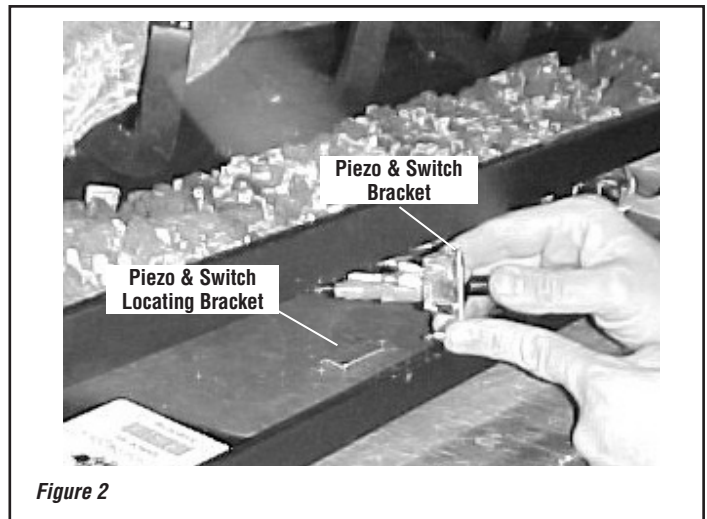

- *3. Disconnect the black and white wires from the ON/OFF switch.
- *4. Remove the ON/OFF switch from the bracket by squeezing the flex catches on sides of switch until it releases from bracket.
- *5. Reinstall the bracket with the piezo (reverse **Step 2**).
6. Remove Doorframe from packaging. Install as follows:
 - *a. Position switch wires in front, inside of control compartment (so they can easily be reached after doorframe is in position).
 - *b. Position the bottom of the doorframe so that the bracket on the inside of the doorframe locks behind the cabinet bottom flange as shown in *Figure 4*.
 - *c. Feed the switch wires through the switch mounting bracket on doorframe as shown in *Figure 3*.

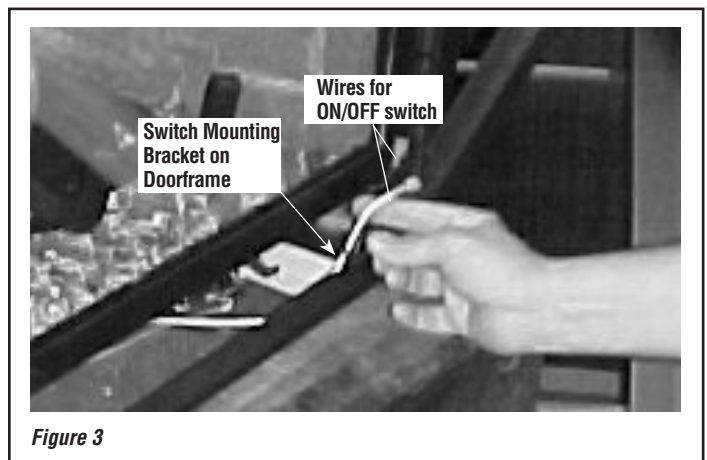

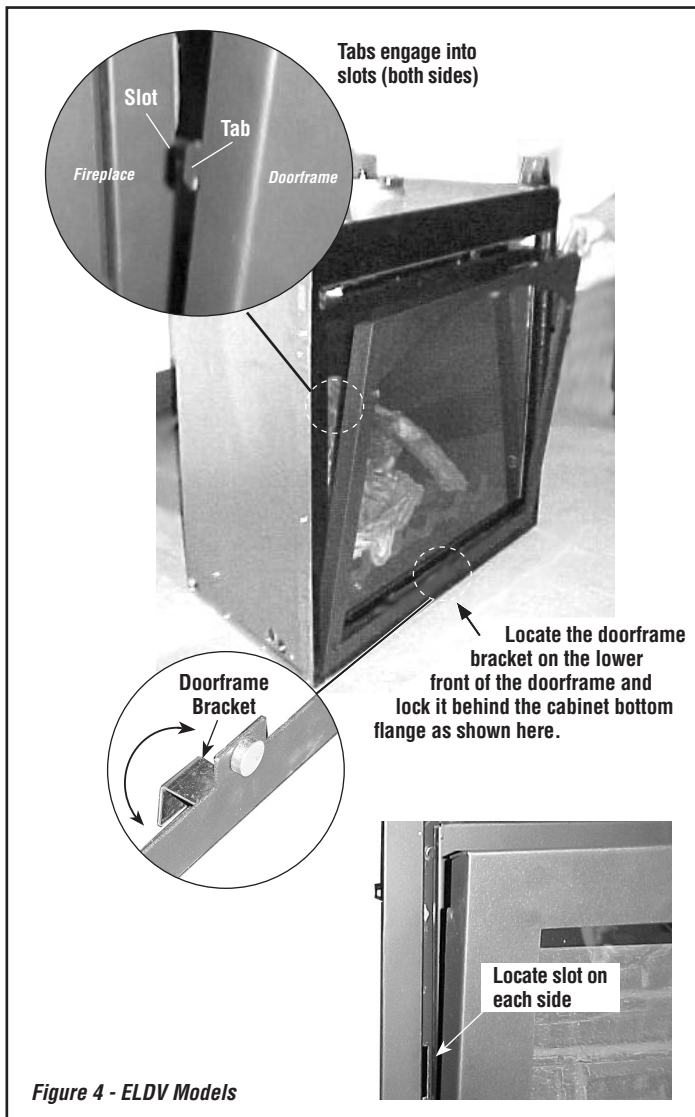


Figure 4 - ELDV Models

- d. ELDV Models - Locate slots on each side of fireplace (see **Figure 4**).
- e. ELDV Models - Hold the top of the door frame slightly away from the fireplace front while aligning the tabs on door frame with the corresponding slots on fireplace. While the tabs engage, slide the top of the door frame so that it goes over the top of glass door assembly (see **Figures 4 & 7**).
- f. MPLDV Models - Locate the top of the door frame and identify the return flange. Position the door frame in front of the glass door assembly and hook the door frame over it at the top. Let the door frame fall into place. Position the door frame right to left and use the clips to engage the door frame and glass door assembly, to lock it (lower left and right corners of the opening). The clip will slide between the metal frame of the glass door assembly and the glass. Refer to **Figures 5 and 6**.
- *g. Connect the switch wires to the ON/OFF switch. Press the ON/OFF switch down into the switch mounting bracket on door frame until it locks in place (see **Figure 8**).

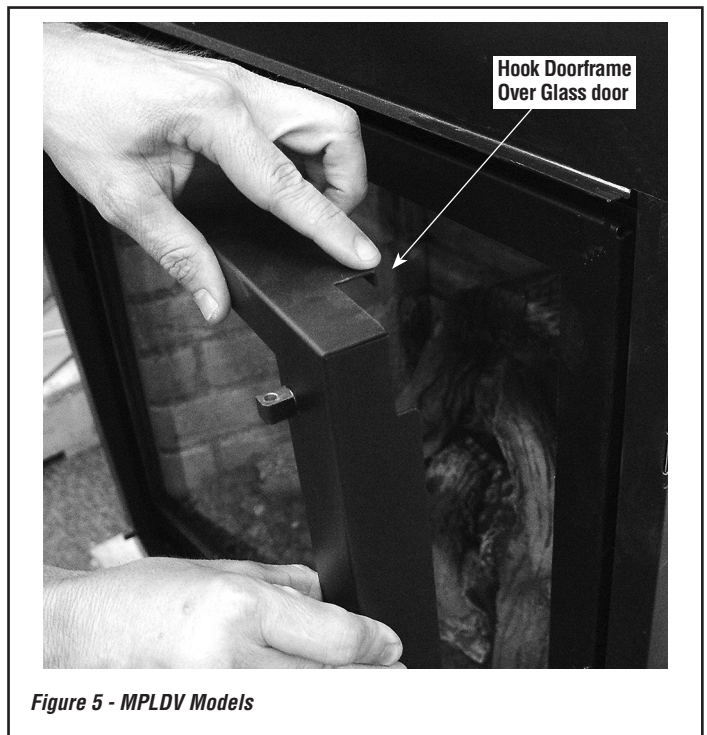


Figure 5 - MPLDV Models

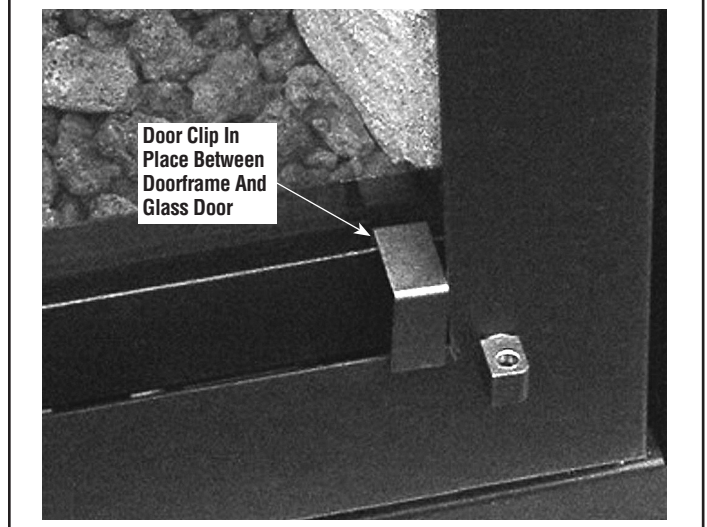
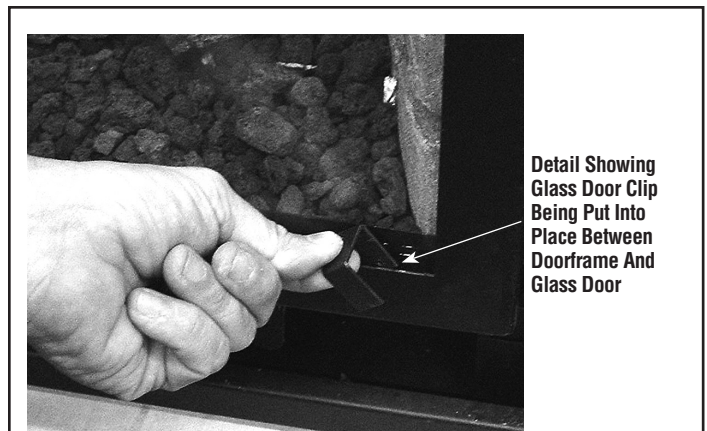


Figure 6 - MPLDV Models

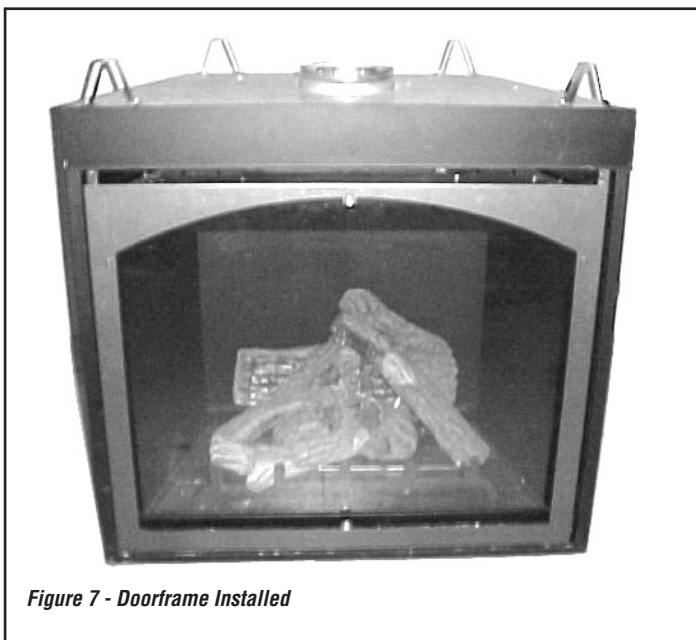


Figure 7 - Doorframe Installed

7. Remove the left and right side Style View doors from packaging. Install them by aligning hinge pins on the doors with the hinge holes on the doorframe and slide down (see **Figure 9**). Ensure the hinge pins are fully seated onto the shoulders of the hinge holes.

Note: For MPLDV 30" models, remove single piece facade panel and mount the four pins into the hinge shoulders.

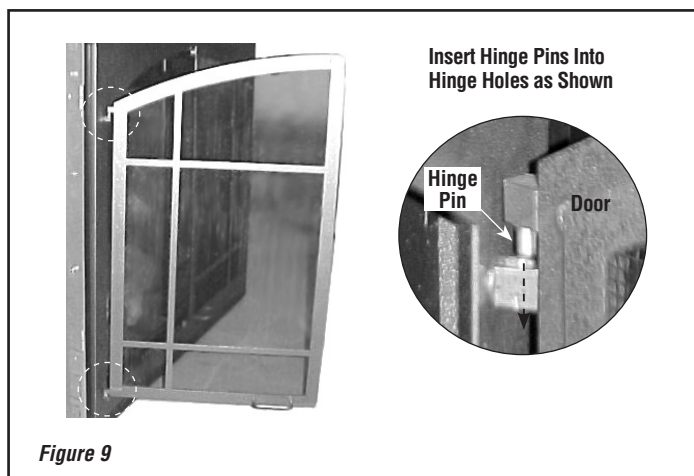


Figure 9

8. Close Doors (see **Figure 10**).

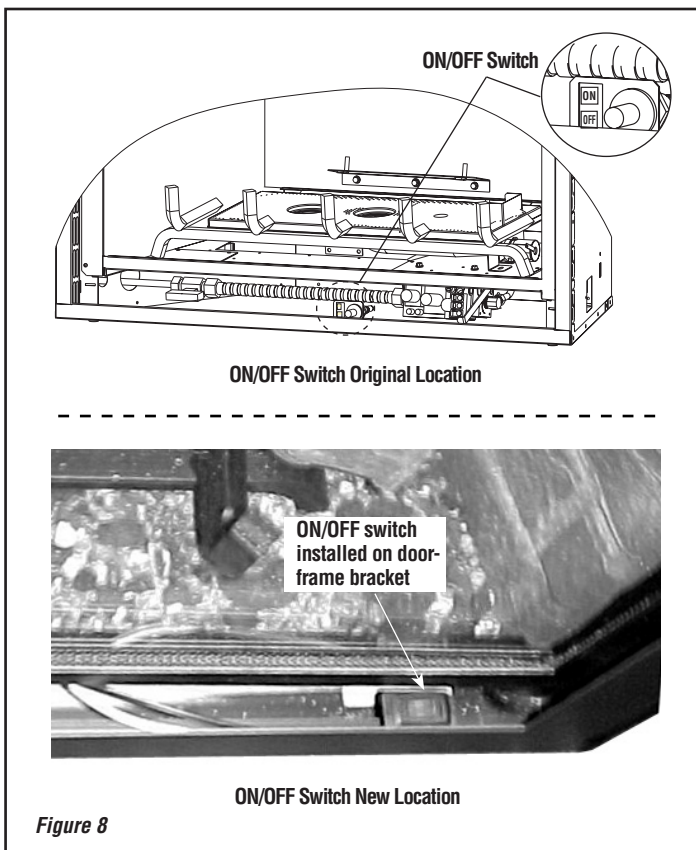


Figure 8

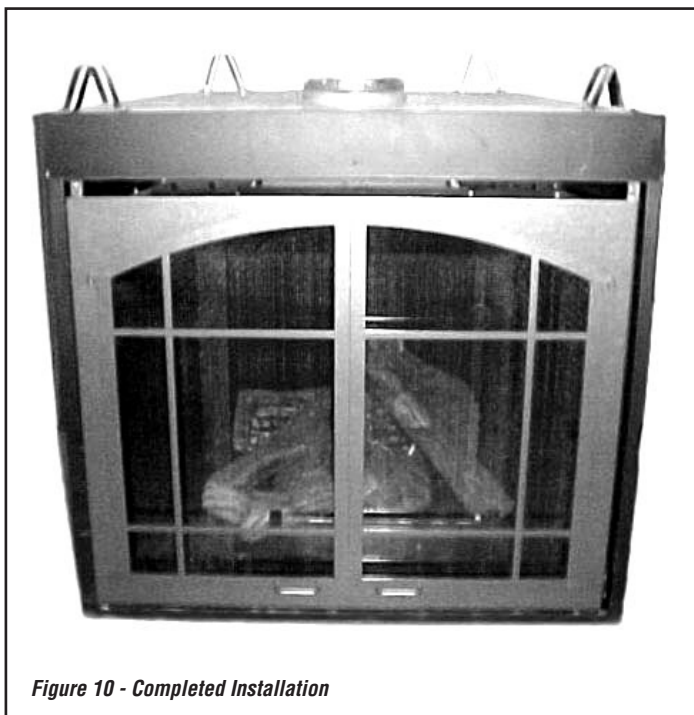


Figure 10 - Completed Installation

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and the discontinuance of colors, styles and products. Consult your local distributor for fireplace code information.