



Philips Consumer Lifestyle

# Service Manual

## PRODUCT INFORMATION

- Product meets the requirements regarding interference suppression on radio and television.

## TECHNICAL INFORMATION

- Voltage : 220 - 240 V, 50 - 60 Hz
- Power rated : 2400 W  $\pm$  10 % (max)
- Dimensions (w x d x h) : 260 x 175 x 260 mm
- Kettle contents : 250 ml min. 1,6 l max.
- Color setting : Alu / Black
- Usage conditions : Indoor use
- SAP coding : HD4631

## DISASSEMBLY- AND RE-ASSEMBLY ADVISE

- Before you start servicing!



For your safety be sure the Mains plug is disconnected from the Mains!

## REPAIR INSTRUCTIONS

- De-scaling

Fill the kettle with water up to three-quarters of the maximum level indication and press the On/Off switch. After the kettle has switched itself off, add white vinegar (8% acetic acid) or an appropriate descaler up to the maximum level indication.

Leave the solution in the kettle overnight.

Empty the kettle and rinse the inside thoroughly.

Repeat this procedure if there is still some scale left in the kettle.

- Cleaning filter

Clean the filter by rinsing it under a running tap.

If necessary, you can use a soft nylon brush.

The scale filter can also be cleaned in the dishwasher or


clean the filter by de-scaling it in the same way as the kettle.

Let the filter soak in a cup of warm water with some white vinegar or an appropriate descaler.

Take the filter out of the cup and rinse it thoroughly.

## OPTIONAL (accessories)

- No specific issues

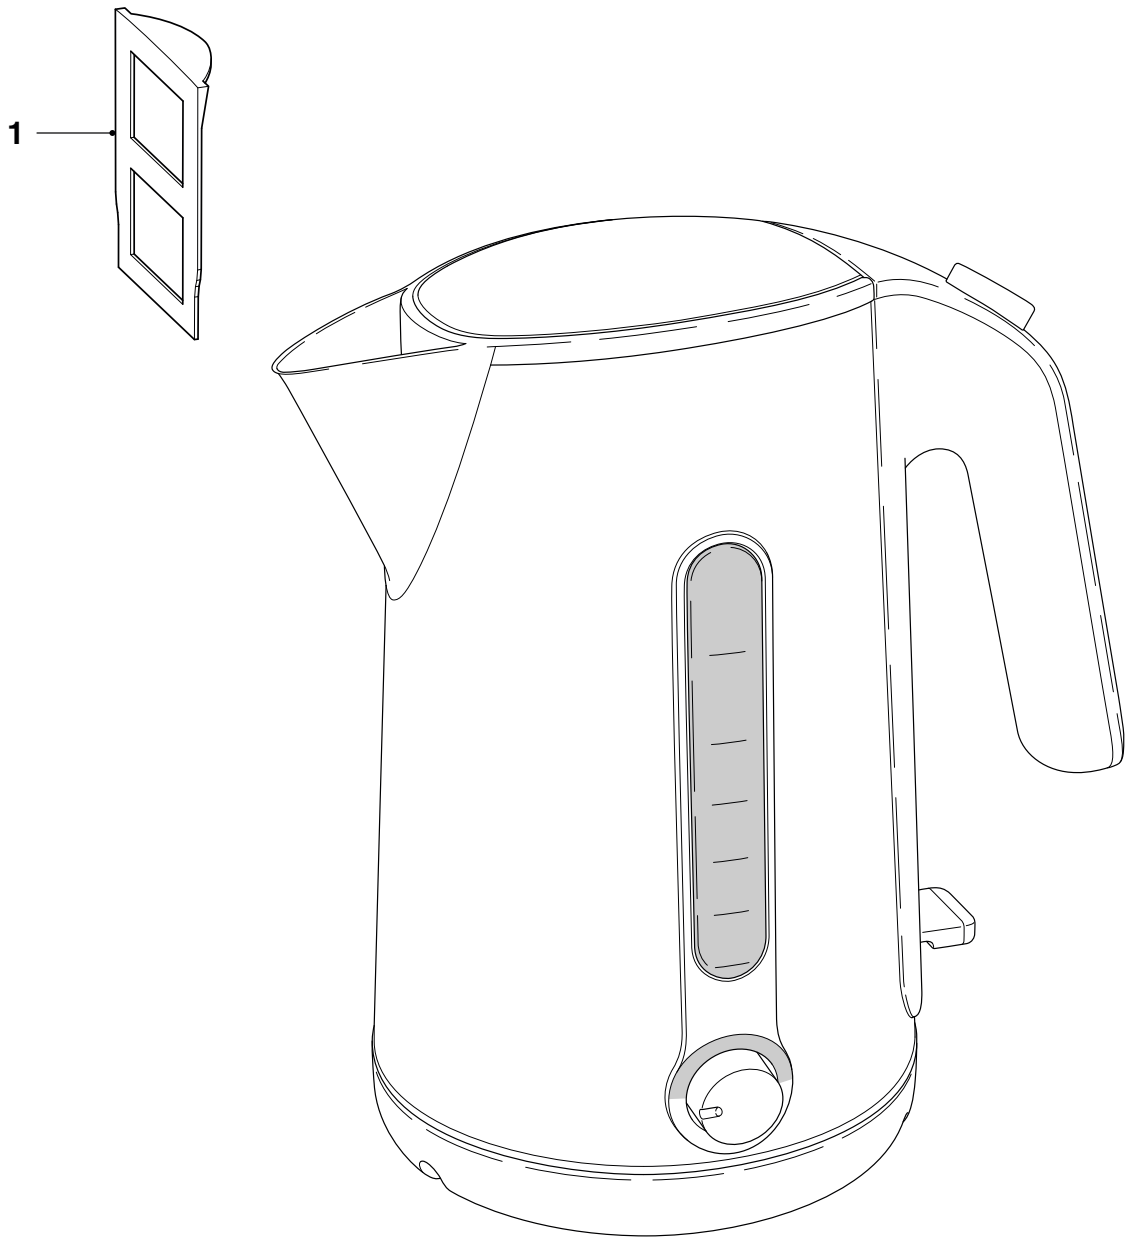

Pos	Service code	Description
1	4222 459 45845	Filter