

LCT6000

Belt Driven Leaf Collector



**Owner's Manual
Safety Manual
Pre-Operating Manual
Operating Manual
Maintenance Manual
Service Manual
Parts Catalog**

January 2014 edition

ODB Company
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823
www.leafcollector.com



LCT6000

413010



**DO NOT ATTEMPT TO OPERATE
OR REPAIR
THE LEAF COLLECTOR WITHOUT FIRST
READING AND UNDERSTANDING THIS
MANUAL**

IF YOU HAVE ANY QUESTIONS CONCERNING THE
INSTALLATION OR OPERATION OF THIS UNIT, PLEASE CALL
ODB FOR ASSISTANCE BEFORE ATTEMPTING TO REPAIR OR
OPERATE THE UNIT.

**IMPROPER USE OF ANY MACHINE CAN
RESULT IN SERIOUS INJURY!**

**STUDY AND FOLLOW ALL SAFETY
PRECAUTIONS BEFORE OPERATING OR
REPAIRING UNIT**

THIS MANUAL IS AN INTEGRAL PART OF THE LEAF COLLECTOR AND SHOULD
BE KEPT WITH THE UNIT WHEN IT IS SOLD.

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823



⚠ WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.



DANGER

**DO NOT RIDE, SIT OR STAND
ON UNIT.**

**RIDING ON UNIT
COULD RESULT IN BODILY
HARM OR FATAL INJURY
USE EXTREME CAUTION WHEN
UNIT IS IN USE, OR IN MOTION.**

If the decal above is missing or damaged call ODB immediately and we will send you a replacement free of charge. Never operate a unit with damaged or missing safety decals.

⚠ DANGER

DO NOT RIDE, SIT OR STAND ON UNIT

⚠ DANGER

**DO NOT MODIFY THE UNIT FOR RIDERS IN ANY
WAY. SERIOUS INJURY OR DEATH MAY OCCUR**

ODB's leaf collectors are NEVER to be used to accommodate riders. If your unit has been modified to accommodate riders, remove these modifications immediately as this can result in serious injury or death.

Municipal Products
Since 1910



Municipal Products
Since 1910

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823
www.odbc.co.com or
www.leafcollector.com

THANK YOU

Thank you and Congratulations on your purchase of your ODB Leaf Collector. Your ODB leaf collector has been carefully designed and manufactured to give you a maximum amount of dependability and years of trouble-free operation. Take comfort in the fact the ODB has been manufacturing municipal products since 1910 and takes pride in our product's quality and our customer service.

Please take the time to thoroughly read this manual, as well as the engine manual, in its entirety before operating, maintaining, servicing or repairing your leaf collector. Please thoroughly review and follow all the safety procedures located in this manual.

Whenever you need replacement parts, service information or any question regarding your ODB product please feel free to contact us at 800-446-9823 or www.odbc.co.com.

Please record the following information for future reference:

Model No.: _____

Serial No.: _____

Vin No: _____

Engine Serial No.: _____

Date of Purchase: _____

TABLE OF CONTENTS

WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

Table of Contents

Contents

LCT6000

Table of Contents

1.0 GENERAL SAFETY

1.1 Safety Symbol Definitions	10
1.2 Do's and Do Not's:.....	11
1.3 Training:.....	13
1.4 Safety Decals	14
1.5 VIN And Serial Number Locations.....	16

2.0 PRE-OPERATING SECTION

2.1 PowerView Overview:	18
2.1 PowerView Overview:	19
2.2 Safe Operations:.....	20
2.3 Preparation For Operation.....	22
2.4 Pre-Transport Checks.....	23
2.5 Personal Protective Equipment and Clothing	25
2.6 Work Site Preparation	26

3.0 OPERATING SECTION

3.1 Starting Engine.....	28
3.2 Engaging the PTO.....	30
3.3 Fluid Drive Coupler (if equipped)	32
3.4 Vacuuming Leaves	33

4.0 MAINTENANCE SECTION

4.1 Maintenance Overview:.....	35
4.2 Maintenance and Lubrication	36
4.3 Lubrication:.....	37
4.4 Preventative Maintenance	40
4.5 Torque Values	44

5.0 SERVICE SECTION

5.2 Auto Mfg. Clutch Adjustment - 2008 and after	48
5.3 Hydraulic Boom Troubleshooting Guide.....	49
5.4 Impeller Installation and Removal.....	50
5.4 Impeller Installation and Removal, continued.....	51
5.5 Belt Adjustment and Replacement Guide	52
5.6 Flange Bearing Installation and Removal.....	53
5.6 Impeller Installation and Removal.....	54
5.7 Replacing the Blower Housing Liners.....	55
5.7 Replacing the Blower Housing Liners; continued,.....	56

TABLE OF CONTENTS



Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

5.10 WIRING DIAGRAMS

5.10.1 PowerView Wiring Diagram.....	58
5.10.2 PowerView Wiring - Connectors	59
5.10.3 PowerView Wiring - Relays.....	60
5.10.4 Plug Wiring Harnesses.....	61
5.10.5 Engine Rocker Switch Wiring Diagrams.....	62
5.10.8 Trailer Plug Wiring Diagram	63
5.10.9 Trailer Wiring Harness	64
5.10.10 Brake Wiring Harness	65
5.10.11 Boom Wiring Diagram.....	66
5.10.12 Remote Throttle / Clutch Wiring Harness	67

5.20 POWERVIEW MAINTENANCE SECTION

5.20.1 Powerview Service Reminders	69
5.20.1 Powerview Service Reminders, continued.	70
5.20.2 Powerview Faults and Warnings	71
5.20.3 Powerview Troubleshooting	72

6.0 ENGINE GROUP

6-0	74
6.1 Instrument Panel Group	75
6.2 Air Cleaner Group.....	76
6.3 Strobe Light Parts Group	77
6.4 Sheet Metal Group, except LCT650	78
6.5 Engine Mount Group	79
6.6 Muffler (Exhaust) Assembly.....	80
6.7 Radiator Assembly Group.....	81
6.8 Engine Senders / Switch Group	82
6.9 Battery Group.....	83
6.10 Engine Miscellaneous Parts Group.....	84
6.11 Remote Clutch / Throttle Circuit Board Assembly.....	85
6.12 Remote Clutch and Remote Throttle Assembly.....	86
6.13 Chaffe Eliminator Assembly, hinged	87

7.0 CLUTCH GROUP

7-0	88
7.1 AutoHD PTO Clutch Group.....	89
7.2 AutoHD PTO Assembly Group	90
7.3 AutoHD PTO Linkage Group	91
7.4 Clutch Assist Group	92
7.5 Kraft Fluid Drive Group (Optional).....	93
7.6 Kraft Fluid Drive Installation (Optional).....	94
7.7 Kraft Fluid Drive Breakdown (Optional)	95

TABLE OF CONTENTS



Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

7.8 Kraft Fluid Drive Common Parts (Optional)	96
8.0 BLOWER HOUSING GROUP	
8-0	97
8.1 Blower Housing Group	98
8.2 Blower Housing Face Group - LCT6000	99
8.3 Belt Drive Assembly	100
8.4 Pedestal Group	101
8.5 Exhaust Duct Assembly	102
9.0 TRAILER GROUP	
9-0	103
9.1 Trailer Bed Group	104
9.2 Fuel Tank Group	105
9.3 Tongue Group	106
9.4 Hydraulic Parking Jack - OPTIONAL	107
9.4 Axle Hub Assembly	108
9.5 Brake Assembly	109
10-0 HOSE BOOM GROUP	
10-0	110
10.1 Boom Group	111
10.2 Intake Hose Group	112
10.3 M3219 Hydraulic Boom Pump	113
11.0 MULTI-AXIS BOOM SECTION (OPTIONAL)	
11-0	114
11.1 (2 or 3X) Hydraulic Tank - Valve Body Group	115
11.2 Joystick Group - 2 Axis Boom	116
11.3 (2 Axis) Boom Assembly	117
11.4 (3 Axis) Boom Assembly	118
11.5 Hinged Boom Frame Assembly	119
11.6 Auburn Gear Drive Assembly - 3 Axis	120
INDEX	
Index	122

SAFETY PRECAUTIONS

WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

1.0 General Safety

1.0 GENERAL SAFETY

Contents

LCT6000

Table of Contents

1.0 GENERAL SAFETY

1.1 Safety Symbol Definitions	10
1.2 Do's and Do Not's:.....	11
1.3 Training:.....	13
1.4 Safety Decals	14
1.5 VIN And Serial Number Locations.....	16

⚠ WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.



**DO NOT RIDE, SIT OR STAND
ON UNIT.**

**RIDING ON UNIT
COULD RESULT IN BODILY
HARM OR FATAL INJURY
USE EXTREME CAUTION WHEN
UNIT IS IN USE, OR IN MOTION.**

If the decal above is missing or damaged call ODB immediately and we will send you a replacement free of charge. Never operate a unit with damaged or missing safety decals.

⚠ DANGER

DO NOT RIDE, SIT OR STAND ON UNIT

⚠ DANGER

**DO NOT MODIFY THE UNIT FOR RIDERS IN ANY
WAY. SERIOUS INJURY OR DEATH MAY OCCUR**

ODB's leaf collectors are NEVER to be used to accommodate riders. If your unit has been modified to accommodate riders, remove these modifications immediately as this can result in serious injury or death.

SAFETY PRECAUTIONS





WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

1.1 Safety Symbol Definitions

This manual provides the owners/operator with procedures for safe operation, maintenance and repair of your leaf collector. As with any machine, there are hazards associated with their operation. For this reason safety is emphasized throughout this manual. To highlight specific safety information the following safety definitions are provided to assist the reader.

The purpose of safety symbols are to attract your attention to possible dangers. The safety symbols, and their explanations, deserve your careful attention and understanding. The safety warnings do not by themselves eliminate any danger. The instructions or warnings they give are not substitutes for proper accident prevention measures.

SYMBOL	MEANING
	SAFETY ALERT SYMBOL: Indicates danger, warning or caution. Attention is required in order to avoid serious personal injury. May be used in conjunction with other symbols or pictographs.
 DANGER	Disregarding this safety warning <u>WILL</u> result in serious equipment damage, injury or possible death.
 WARNING	Disregarding this safety warning <u>CAN</u> result in serious equipment damage, injury or possible death.
 CAUTION	Disregarding this safety warning <u>MAY</u> result in minor or moderate injury or property damage.

SAFETY PRECAUTIONS

WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

1.2 Do's and Do Not's:

This section contains some general safety precautions to do and not to do. This is not an all inclusive list and it is the responsibility of the operator to have proper training and use common sense in work situations.

WARNING

DO NOT:

1. **DO NOT** operate, maintain or repair this unit without having fully read and understood ALL the aspects of this manual.
2. **DO NOT** ride, sit or stand on unit at anytime.
3. **DO NOT** modify the leaf vacuum for any reasons to allow for riders.
4. **DO NOT** operate the unit in a state of disrepair.
5. **DO NOT** operate the unit with ANY guards or safety devices broken, missing, or inoperable.
6. **DO NOT** operate the unit without wearing proper safety equipment.
7. **DO NOT** operate this unit while under the influence of any alcohol or medication.
8. **DO NOT** operate this unit if you have a record of mental instability or dizziness which could result in injury to yourself or others.
9. **DO NOT** operate this unit if you are under 18 years of age.
10. **DO NOT** operate this unit without fully inspecting the unit for any damage or leakage.
11. **DO NOT** operate if the unit has any excessive vibration.
12. **DO NOT** operate unit with the inspection door limit switch damaged or missing.
13. **DO NOT** operate unit unless it is properly connected to a leaf collection box.
14. **DO NOT** operate unit unless it is properly attached to the tow vehicle.
15. **DO NOT** tow unit without using all the safety chains.
16. **DO NOT** tow unit with a damaged tongue.
17. **DO NOT** fill fuel tank with engine running. Allow engine to cool for 5 minutes before refueling.
18. **DO NOT** operate unit if fuel is spilled or with fuel cap off.
19. **DO NOT** smoke or weld near the unit.
20. **DO NOT** run engine in an enclosed area.
21. **DO NOT** place hands or feet near moving or rotating parts.

SAFETY PRECAUTIONS

WARNING

Do Not, continued;

- 22. **DO NOT** operate engine with an accumulation of grass, leaves or other debris on the engine.
- 23. **DO NOT** run engine with air cleaner removed.
- 24. **DO NOT** leave leaf machine unattended while in operation.
- 25. **DO NOT** park machine on steep grade or slope.
- 26. **DO NOT** vacuum a leaf pile without looking for foreign objects such as metal, glass, plastic or large pieces of wood.

WARNING

Do's:

- 1. **DO** completely read and understand the owner's manual before operating, maintaining or repairing the leaf collector.
- 2. **DO** follow engine and PTO manufacturer operating and maintenance instructions.
- 3. **DO** check fuel lines and fittings frequently for cracks or leaks. Replace if necessary.
- 4. **DO** completely inspect the unit before leaving the service garage.
- 5. **DO** check the tow tongue each day for cracks.
- 6. **DO** inspect and be attentive to what is being vacuumed.
- 7. **DO** check the impeller, liners and blower housing for cracks or holes daily.
- 8. **DO** wear proper safety equipment as described in this manual.
- 9. **DO** watch for pedestrians, animals and other foreign material when vacuuming leaves.
- 10. **DO** replace any worn or missing safety stickers immediately.

SAFETY PRECAUTIONS

1.3 Training:

WARNING

Improper use of the ODB leaf collector **CAN** result in severe personal injury or death. All personnel using this leaf vacuum must be trained and qualified with all the operations, maintenance, repair and safety procedures defined in this manual.


The warnings and procedures regarding safety in this manual are to be used as a guideline only. It is impossible to cover all the events that could happen in the vacuuming process. For this reason, it is vital that the owner accept the responsibility to implement a training program that will provide every operator or mechanic the basic skills and knowledge to make good judgement in all situations.

This training program must include the entire scope of hazards, precautions and government regulations encountered in the vacuuming process. The program should stress the need for regularly scheduled preventive maintenance and detailed equipment safety checks.

It is strongly recommended that all training programs be documented to ensure all operators and mechanics receive initial training on not just the operation but the safety features of the leaf collector.

SAFETY PRECAUTIONS


1.4 Safety Decals

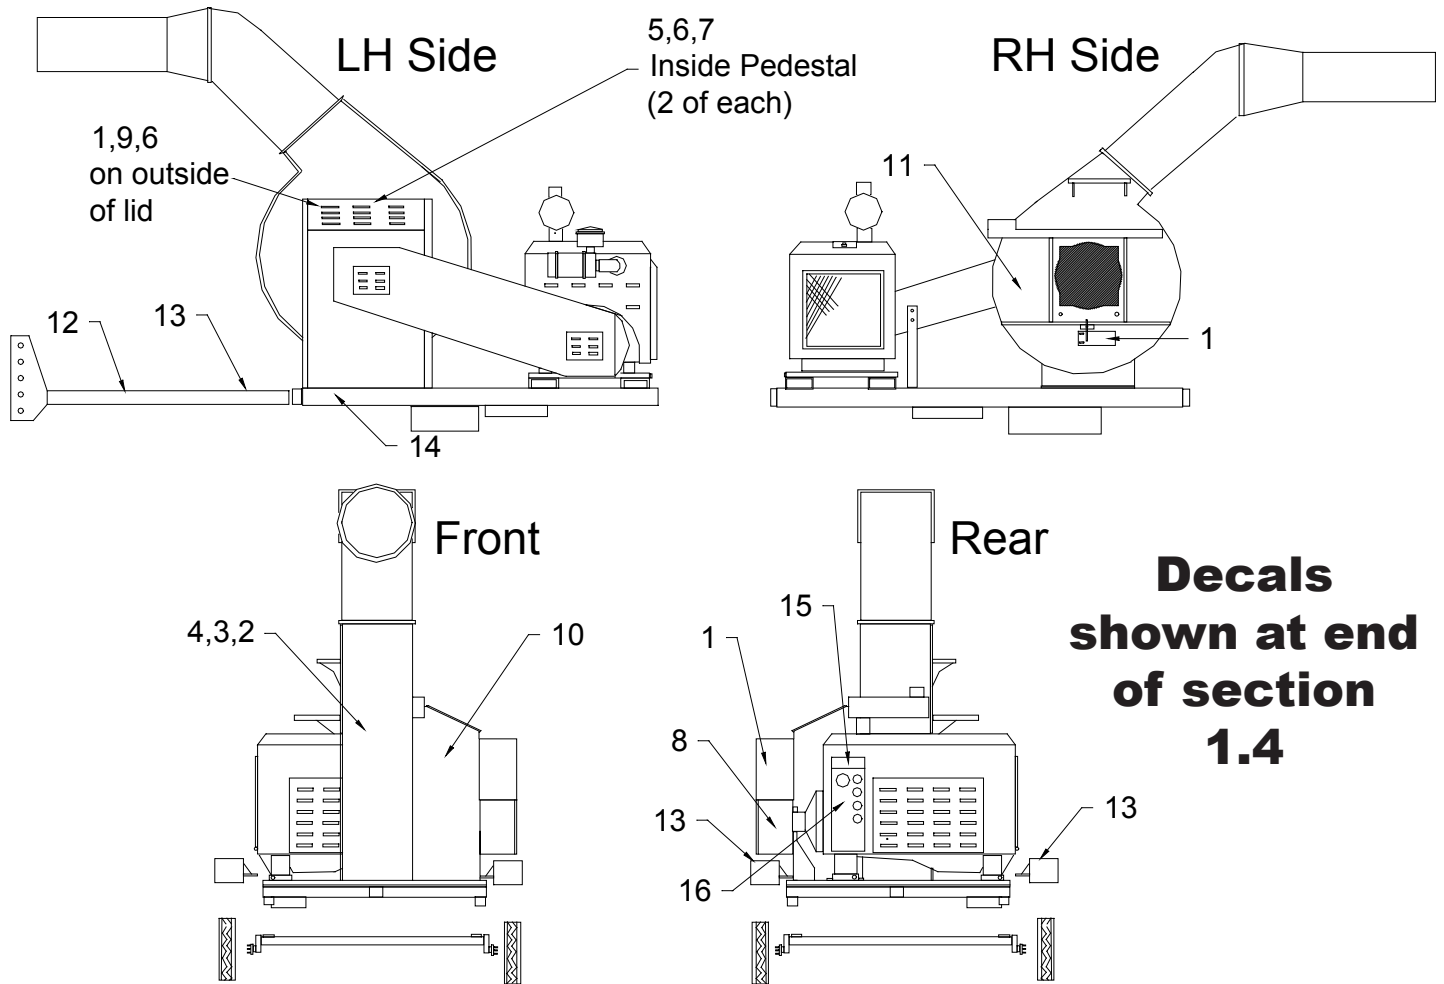

ITEM NO.	PART NUMBER	DESCRIPTION
1.	200182	Danger--Do Not Open Cover While in Operation
2.	200179	Danger--Do Not Ride, Sit or Stand on Unit
3.	200181	Danger--Head, Eye and Ear Protection Required
4.	200221	LCT600 Leaf Collector sticker
5.	200109	Do Not Over-Lubricate bearings
6.	200055	Use Diesel Only
7.	200177	Danger--Flammable
8.	200059	Do Not Engage PTO over 1,000 RPM
9.	200183	Danger--Rotating Parts
10.	200178	Danger--Explosion Hazard
11.	200189	Danger--Check Impeller and Liners Daily for Wear
12.	200180	Danger--Inspect Tow Bar for Damage
13.	200104	Warning--Check Lug nuts
14.	200061	ODB leaf collection systems sticker
15.	200120	Throttle decal
16.	200112	Safety Shut off-Ignition decal

SAFETY PRECAUTIONS

 1.4 Safety Decals - Decal Layout for LCT60C/600/650/6000



SAFETY PRECAUTIONS

1.5 VIN And Serial Number Locations

⚠ WARNING


Thoroughly read and understand the safety and pre-operating sections of this manual before starting the engine.

⚠ WARNING

Make sure each operator knows and understands the load ratings of the towed vehicle and that he/she is qualified to tow the vehicle.

The serial number tag and Vehicle Identification Number (VIN) sticker is located in front of the unit to the right of the the tongue. (See figure 1.5a).

The VIN sticker gives the user critical information regarding the trailer specifications such as Gross Vehicle Weight Rating (GVWR) which is the maximum allowable total weight of the fully loaded trailer, including liquids, cargo and the tongue weight of any towed vehicle, the GAWR or Gross Axle Weight Rating which is the maximum allowable weight the axles are designed to carry. The tire inflation pressure is also on the sticker.

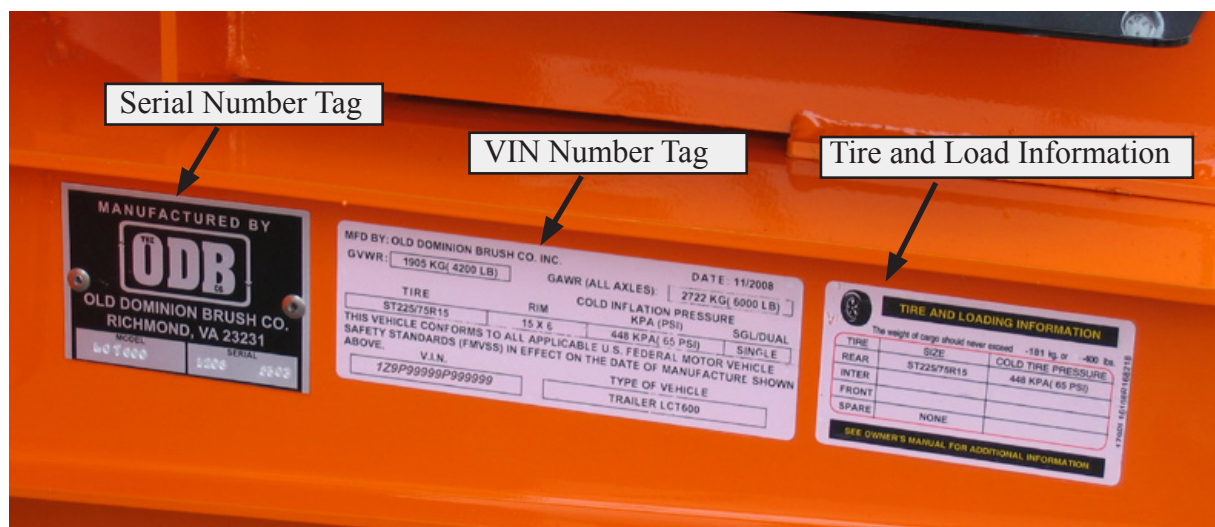

⚠ WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

**2.0
Pre-Operating
Section**

2.0 PRE-OPERATING SECTION

2.0 PRE-OPERATING SECTION


2.1 PowerView Overview:	18
2.1 PowerView Overview:	19
2.2 Safe Operations:.....	20
2.3 Preparation For Operation.....	22
2.4 Pre-Transport Checks.....	23
2.5 Personal Protective Equipment and Clothing	25
2.6 Work Site Preparation	26

Pre-Operating Section

2.1 PowerView Overview:

The engine instruments and controls are controlled and viewed through the PowerView Display. The following is a brief introduction to the basic controls of how to operate the display.

Faceplate Features

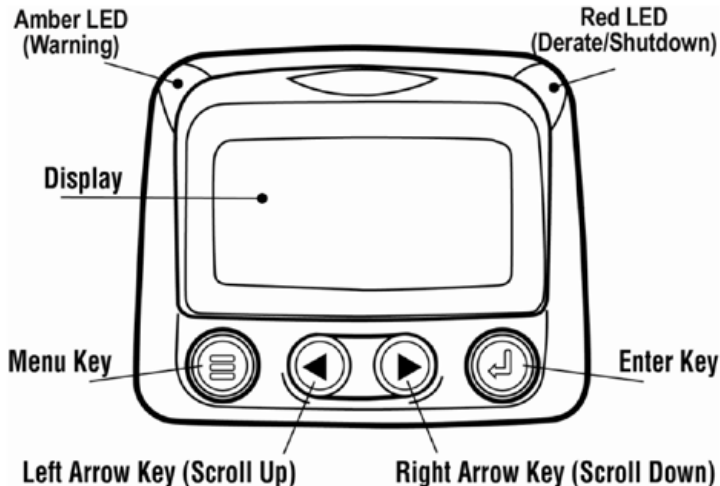


Navigation and Keypad Functions

The keypad on the PowerView display is a capacitive touch sensing system. There are no mechanical switches to wear or stick. The keys on the keypad perform the following functions:


	Menu – Enter or exit menu screens.
	Left Arrow – Scroll the screen or move the parameter selection to the left or upward.
	Right Arrow – Scroll the screen and move the parameter selection to the right or downward.
	Enter Key – Select a menu or parameter or hide/view an active fault code.

Basic Navigation


1. When **Menu** is touched, the Main menu items display

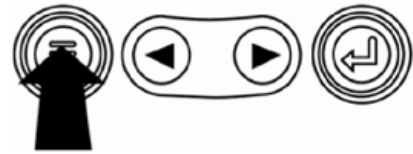

2. Touch the **Arrow Keys** to move the selection bar to other menu items.

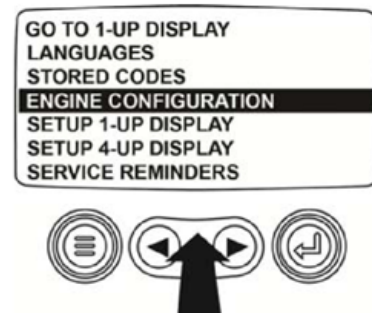


3. Some menus have multiple pages. Scroll to the top or bottom item on the current page to see other menu items on additional pages.

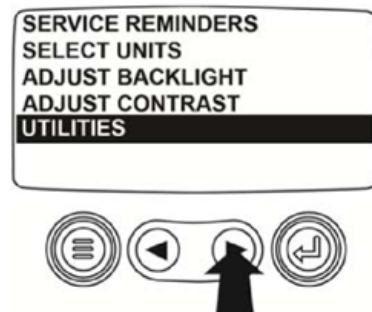

Pre-Operating Section

2.1 PowerView Overview:

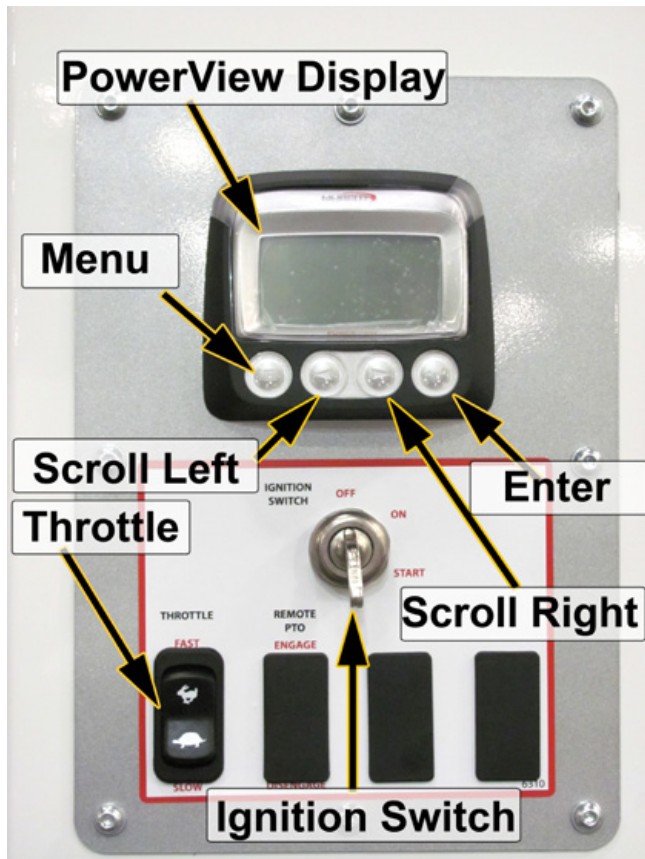

Ignition Switch:

Used to power the accessories and start the unit. Unit will not start without Murphy switch depressed.

ACCESSORIES - first position

STARTER ENGAGE - second position (springs return to first position)

Throttle Toggle Button:

This control provides positive locking and vernier adjustment of engine.

POWerview DISPLAY: (all below is viewed on PowerView)

The PowerView 101 display is a multifunction tool which enables equipment operators to view many standard engine and transmission parameters as well as active and stored trouble codes. It also is the safety shutdown device and will shut the engine down when engine variables warrant it. Use the scroll buttons to select the function needed.

Tachometer:

Tachometer indicates the engine r.p.m's.

Volt Meter:

The gauge shows the status of the engine charging system. When the charging system is operating properly it should read approximately 14 volts. If the gauge reads below 13 volts, the alternator is not charging the battery and the system should be checked by a qualified technician.

Oil Pressure:

Confirms and indicates the presense and pressure of engine oil. If the gauge reads low, it should be checked by a qualified technician.

Engine Temperature:

Indicates the engine coolant temperature. If the gauge reads over 240 degrees the unit should be checked by a qualified technician.

Hour Meter:

Indicates the accumulated hours of the the engine. This should be used to schedule maintenance.

*Please refer to the Murphy PowerView owner's manual and website for more detailed instructions.



Pre-Operating Section

2.2 Safe Operations:

WARNING

ALL personnel using, maintaining or servicing this unit must be trained in all safety procedures outlined in this manual. Improper or careless use of this equipment CAN result in personal injury or death.

Operations shall be restricted to:

1. Properly trained, qualified and experienced operators and/or qualified and experienced maintenance and test personnel.
2. Trainees under the direct supervision of qualified and experience personnel.
3. Qualified and experienced maintenance and service personnel.

Operators who qualify to operate this equipment under the above restrictions shall also comply with the following physical requirements:

1. Have good vision and the ability to read and understand this manual as well as all safety and operational decals on the equipment.
2. Be capable of hearing, with or without a hearing aid, at a level needed to safely operate this equipment.
3. A record of mental stability with no history of epileptic seizures, dizziness, or any other disability that may result in injury to himself or others.

If any of these requirements are not satisfied at any time, the person failing to meet these requirements **MUST NOT OPERATE THIS EQUIPMENT.**

Pre-Operating Section

2.2 Safe Operations (continued):

Additional Requirements:

1. Each operator must demonstrate competence to understand all safety decals, operator's manuals, safety codes, applicable government regulations, and all other information applicable to the safe and proper operation of the leaf vacuum.
2. Each operator must demonstrate the ability to recognize an emergency situation that may arise during vacuuming operations and the knowledge and procedures to implement corrective action.
3. Each operator must demonstrate or provide evidence of qualification and experience prior to operating the leaf vacuum.
4. Each operator must be able to recognize existing or potential problems regarding the mechanical integrity of the leaf vacuum and report any maintenance requirements to the supervisor in charge.
5. Each operator must wear the proper personal clothing and safety gear. (Refer to SAFETY PRECAUTIONS Section 5.4)
6. Operators must not be physically or mentally fatigued.
7. Operators must not be under the direct or indirect influence of alcohol and/or drugs. This includes prescription drugs that could cause drowsiness, dizziness, or any other condition that would impair their ability to operate or use this equipment in a safe manner.

Pre-Operating Section

2.3 Preparation For Operation

CAUTION

Before your leaf vacuum is put into operation it is very important to read and follow the procedures outlined in the engine owner's manual. (EOM).

For specific information regarding the following checks please refer to the "Maintenance" section of this manual and the engine owner's manual.

WARNING

DISENGAGE the clutch and remove the negative battery cable before performing the following checks.

WARNING

NEVER place any part of the body under or behind guards or any other area in which you cannot see.

IMPORTANT CHECKS:

NOTE: The following checks contained in the next three sections should be performed prior to leaving the storage area.

1. Check engine fuel, coolant and oil levels. (see EOM)
2. Check engine air filter
3. Check all bolts and nuts to ensure they are tight.
4. Check all controls for free and proper operation.
5. Check main drive belt (if equipped) for proper adjustment.
6. Inspect the fan blades to ensure that they are not bent , deformed, fatigued or cracked. Replace fan if any damage is present.
7. Inspect the intake hose flange to make sure it is connected correctly to the blower housing.
8. Inspect the leaf vacuum frame and structure for any bent, broken, cracked, missing or loose parts.
9. Check all guards to ensure they are undamaged, in place and properly secured.
10. All decals must be in place and legible prior to operating the leaf vacuum. See the decal section for decal replacement.

Pre-Operating Section

2.4 Pre-Transport Checks

WARNING

Failure to properly hitch the leaf vacuum to the tow vehicle, verify the road worthiness of the leaf vacuum and the tow vehicle and verify all equipment is properly stowed, may cause serious injury or death to yourself or others.

TOW VEHICLE MUST have proper towing capacity for the leaf vacuum being towed. Check the tow vehicles operating manual for rated capacity.

Do not tow the leaf vacuum unless all important checks listed below are completed.

IMPORTANT CHECKS

1. Hitch is properly secured to tow vehicle and hose boom secured.
Frame must be level or the tongue slightly lower than the rear of the leaf vacuum while towing to ensure proper weight distribution. The hitch may have to be adjusted when towing with vehicles of varying tow hitch height.
2. Safety chains installed correctly.
3. Chains routed under trailer tongue in an “X” pattern between tow vehicle and trailer.
4. Slack in chain should be adjusted to permit turning but should not be dragging on the ground.
5. Connect trailer wiring to the tow vehicle and ensure that all trailer lighting is operating properly.
6. Ensure that the safety breakaway switch is functioning properly and attached securely to the tow vehicle. Allow enough slack to ensure that vehicle turns will not activate the safety breakaway switch. **NOTE:** Follow manufacturers procedure to ensure tow vehicles brake control box is properly adjusted.

Pre-Operating Section

2.4 Pre-Transport Checks (continued):

7. Check the general condition of the tires, tire pressure and ensure that all lug-nuts are securely fastened.
8. Visual examination of the leaf vacuum frame, suspension and structure to determine if all components are correctly positioned and secured for travel.
9. Check the intake hose boom to verify that it is securely fastened to the leaf vacuum and can not swing free. (if equipped).
10. Verify there are no loose tools or materials on the trailer, inside the intake and exhaust hoses, or inside the engine sheet metal.
11. Check all cones, wheel-chocks, signs or other support tools and materials to ensure proper stowage.

Pre-Operating Section

2.5 Personal Protective Equipment and Clothing

WARNING

Always wear proper safety equipment as outlined below, not wearing such equipment CAN result in serious personal injury or possible death.

IMPORTANT CHECKS:

Anyone operating the leaf vacuum equipment **MUST** wear appropriate protective equipment and clothing to protect them from injury during operations.

PROTECTIVE EQUIPMENT:

1. **Head Protection:** Hard hats without under-chin strapping.
2. **Eye Protection:** Wraparound goggle type eye protection held in place with an elastic band around the head or a hard hat mounted face shield, which provides full protection of the face.
3. Eye protection must meet ANSI Z87.1 standards.
4. **Hearing Protection:** plug type or “muff type” ear protection should be worn at all times while operating the unit.
5. **Breathing Protection:** Paper filter type dust masks should be worn to protect from dirt and dust particles during the vacuuming process.
6. **Reflective Vests:** Highly visible vests should be worn so motorists can see the operator in all weather and lighting conditions.
7. **Work Gloves:** Gloves should be worn to protect the hands and wrists from debris.
8. **Steel Toed Boots:** should be worn to protect the feet.

DANGER

Work clothes **MUST** be close fitting, but not restrictive of movement, without any loose parts that could be entangled in any parts of the leaf vacuum. This includes items such as jewelry, chains and backpacks.

Pre-Operating Section

2.6 Work Site Preparation

WARNING

Never place any part of the body under or behind guards or any other visually obscured area.

Making sure the leaves are clear of possible dangerous material is critical to safe vacuuming. Vacuuming up metal, glass, rocks or other dangerous material CAN cause serious damage to the equipment or personal injury.

The following guidelines must be followed to insure safety.

1. An inspection of the leaves to be vacuumed must be done prior to the vacuuming process. We realize that it is impossible to completely inspect every inch of leaves being vacuumed, but it is imperative that all leaves be inspected for obvious dangerous material before vacuuming.
2. The operator should never be in the line of traffic, the operator should work on the shoulder whenever possible.
3. The operators should place cones or other barriers to provide adequate warnings to vehicles and pedestrians that vacuuming is in progress.
4. Strobe lights on the leaf vacuum and on the tow vehicle should be on at all times for high visibility.
5. Confirm that all operators are wearing proper clothes and personal protective equipment.
6. Restrict all personnel, except the operator from the area near the leaf vacuum. **DO NOT** allow pedestrians, children or animals near the work area.
7. Make sure that the exhaust hose (if equipped) fits properly into the box container so that all debris is blown into the box container.

⚠ WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

3.0 OPERATING SECTION

3.0 OPERATING SECTION

3.1 Starting Engine.....	28
3.2 Engaging the PTO.....	30
3.3 Fluid Drive Coupler (if equipped)	32
3.4 Vacuuming Leaves	33

Operating Section

⚠ CAUTION

Always make sure the PTO is disengaged before starting unit.

figure 3.1a



3.1 Starting Engine

⚠ CAUTION

Always make sure the PTO is disengaged before starting unit. (See figure 3.1b)


⚠ WARNING

Thoroughly read and understand the safety and pre-operating sections of this manual before starting the engine.

⚠ CAUTION

DO NOT start the engine in an enclosed building. Proper ventilation is required before starting the engine.

figure 3.1b

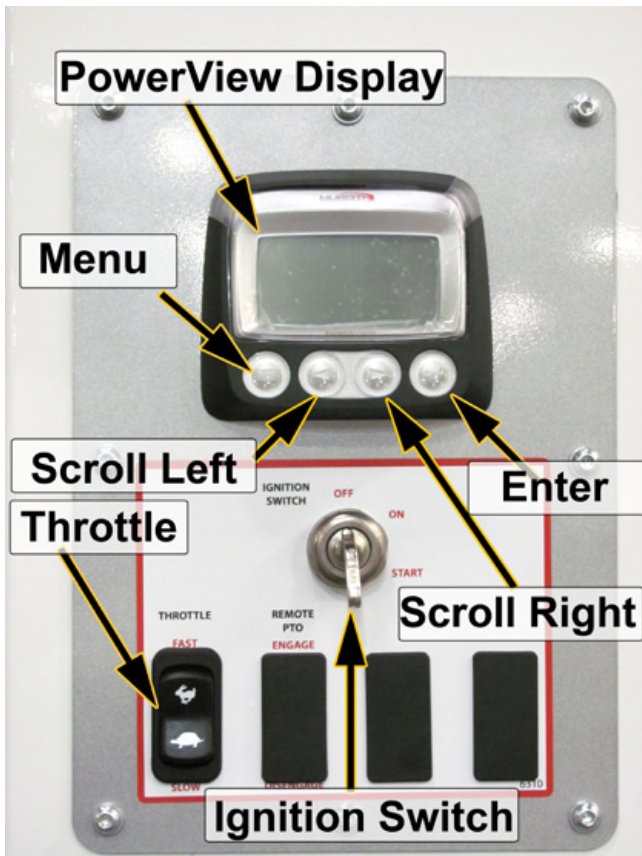

Review the Engine Operating Manual supplied with your leaf vacuum for specific start-up, maintenance and operating instructions. It is especially important to review break-in service procedures for brand new units.

Starting Procedure (refer to figures 3.1a and 3.1b):

Perform all the pre-starting, pre-operating checks outlined in the EOM and in this manual.


1. Make sure the PTO is disengaged as shown in figure 3.1a

IMPORTANT: Do not operate the starter for more than 30 seconds at a time. To do so may overheat the starter. If the engine does not start the first time, wait at least 2 minutes before trying again. If the engine fails to start after 4 attempts, see the trouble shooting section of the EOM and this manual.

Operating Section

3.1 Starting Engine, continued;

(Typical)

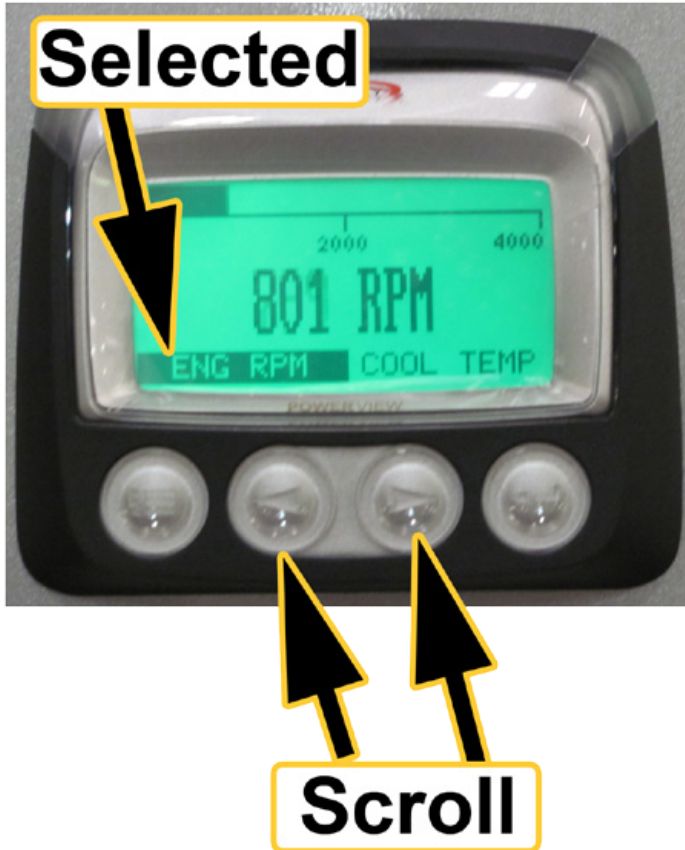

2. Turn the ignition switch all the way to the right, when the engine starts release the ignition switch. It should spring back to the first position.

IMPORTANT: If the ignition switch is released before the engine starts, wait until the starter and the engine stop turning before trying again. This will prevent possible damage to the starter and/or flywheel.

3. Using the right arrow scroll key to view all the engine statistics, coolant temperature, oil pressure and voltage. Be sure the engine is operating at normal operation before increasing the throttle.
4. If the oil pressure gauge does not rise above 15 psi within 5 seconds, stop the engine and determine the cause. Normal operating oil pressure is 50 psi with oil at normal operating temperature.


IMPORTANT: To assure proper lubrication, operate the engine at or below 1200 rpm with no load for 1 -2 minutes. Extend this period 2 - 4 minutes when operating at temperatures below freezing.

5. Watch the coolant temperature gauge. Do not place engine under load until it is properly warmed up. The normal engine coolant temperature range is 180 - 202 degrees F.




Operating Section

figure 3b

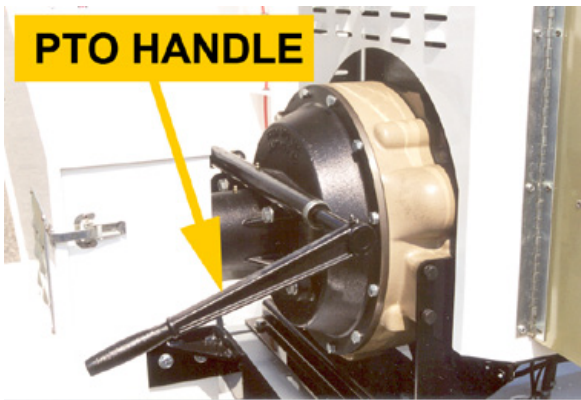

PTO shown disengaged

figure 3c

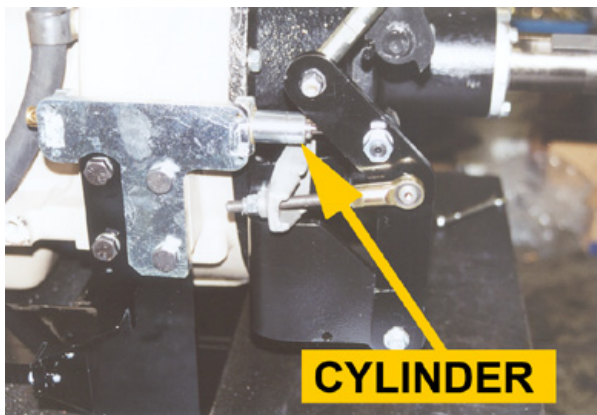

safety assist cylinder

figure 3d



PTO shown fully engaged

3.2 Engaging the PTO

⚠ WARNING

Thoroughly read and understand the safety and pre-operating sections of this manual before starting the engine.

⚠ WARNING

Make sure the intake hose is properly attached and make sure the front of the hose is clear of any objects which could be inadvertently vacuumed during the PTO engagement process.

Review the Engine Operating Manual supplied with your leaf vacuum for specific start-up, maintenance and operating instructions. It is especially important to review break-in service procedures for brand new units.

Engaging the PTO (refer to figures 3b, 3c and 3d):

1. Perform all the pre-starting, pre-operating checks outlined in the EOM and in this manual.
2. Start the engine as previously discussed in this manual and in the EOM.
3. Once the engine has been allowed to thoroughly warm up (engine temperature gauge should read at least 180 degrees) pull the throttle control until the engine reaches 1000 rpm.
4. Grasp the PTO handle (fig. 3b) and slowly raise the handle.
NOTE: Some units have a PTO assist cylinder which engages the PTO at a specific speed in order to properly engage the PTO. Because of this the PTO handle only needs to be raised slightly, then the assist cylinder will take over and engage the PTO automatically. (fig. 3c)

Operating Section

figure 3d




PTO shown fully engaged

3.2 Engaging the PTO, continued;

5. **IMPORTANT:** If the unit experiences any heavy vibrations or makes any unusual noises, shut the engine down and after following the necessary safety guidelines, have a qualified technician investigate the cause. **DO NOT** operate a unit that is in a state of disrepair.
6. If the unit is running smoothly and does not display any excessive vibration, the unit is ready to vacuum leaves. **NOTE:** Please see the next section before vacuuming leaves.

figure 3b

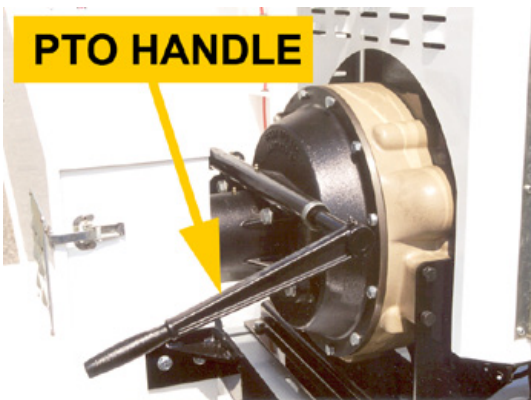

PTO shown disengaged

Disengaging the PTO (refer to figures 3b and 3d):

1. Decrease the rpm to 1000 rpm.
2. Grasp the PTO handle and slowly disengage the PTO.
3. When the PTO is fully disengaged, the engine can be shut down.

Operating Section

Figure 3.3A

3.3 Fluid Drive Coupler (if equipped)

⚠ WARNING

Thoroughly read and understand the safety and pre-operating sections of this manual before starting the engine.

⚠ WARNING

Make sure the intake hose is properly attached and make sure the front of the hose is clear of any objects which could be inadvertently vacuumed at any time.

There is no PTO engagement when the unit is equipped with a Fluid Drive Coupler. The impeller is ALWAYS engaged and rotating.

⚠ WARNING

The suction impeller is ALWAYS rotating when the engine is running and for a few minutes after the engine is shut off. Exercise caution whenever the unit is running.

⚠ CAUTION

IMPORTANT: If the unit experiences any heavy vibrations or makes any unusual noises, shut the engine down and after following the necessary safety guidelines, have a qualified technician investigate the cause. DO NOT operate a unit that is in a state of disrepair.



Operating Section

3.4 Vacuuming Leaves

WARNING

Thoroughly read and understand the safety, pre-operating and operating sections of this manual before vacuuming. Wear the proper safety equipment as outlined in this manual.

WARNING

Make sure the exhaust hose is connected to the box container properly before vacuuming leaves. Visually inspect the leaves before vacuuming for any material that could be harmful to the leaf vacuum or people. This includes bottles, wood, steel, glass, stone or other hard or breakable objects.

Vacuuming Leaves:

1. Start the engine and engage the PTO using the procedures stated earlier in this manual.
2. Set the engine throttle to around 1400 rpm.
3. NOTE: Always vacuum leaves using the lowest rpm as possible. This saves fuel and decreases the amount of dust escaping the box container.
4. Lower the intake hose to a few inches above the leaf pile. Hold the intake nozzle at a 45 degree angle to allow proper air flow. This should allow the leaves to be vacuumed. DO NOT bury the intake nozzle into the leaf pile, this will cut off the air flow and will make vacuuming much more difficult and increase the chance of clogging.
5. If the leaves are not vacuuming, increase the rpm to 1400 and try vacuuming at this setting.
6. NOTE: Wet leaves will need higher rpm's to vacuum whereas dry leaves will only need minimal rpm's.
7. Continue moving the nozzle in a sweeping motion above the leaves while vacuuming.

4.0 MAINTENANCE SECTION



Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.

4.0 MAINTENANCE SECTION

4.0 MAINTENANCE SECTION	
4.1 Maintenance Overview:	35
4.2 Maintenance and Lubrication	36
4.3 Lubrication:	37
4.4 Preventative Maintenance	40
4.5 Torque Values	44

Maintenance Section

4.1 Maintenance Overview:

CAUTION

Only properly trained personnel should perform maintenance or repair on this equipment. Consult ODB before performing any maintenance procedures that is not specifically covered in this manual. Improper maintenance or repair may void any and all warranties on this equipment.

WARNING

Improper maintenance or repair CAN result in equipment damage and/or personal injuries.

DANGER

BEFORE CONTINUING, please read and understand the Safety, Pre-operating and Operating sections of this manual before doing any procedures in this section.

A properly maintained leaf vacuum will dramatically extend the life of the unit and will create a safer work place as well. For the general safety and welfare of all personnel it is important to create a scheduled maintenance program that covers all the elements in this manual as well as the engine, PTO and axle owner's manuals provided with this unit.

Use the chart on the following page as a guide for your scheduled maintenance program. If there are any questions concerning any of these procedures please call ODB.

Maintenance Section

4.2 Maintenance and Lubrication

This chart is only a reference, always consult the Owners Manual of the Engine, PTO, axles, hoist, etc. for actual recommendations
(Use Hour Meter as a Guide)

ITEM	DAILY/ 10 HOURS	40 HOURS / WEEKLY	80 HOURS / 2 WEEKS
Check Engine Oil Level	X		
Check coolant level	X		
Check Fuel Filter	X		
Lubricate Main Shaft Bearings	X		
Lubricate PTO Bearings	X		
Check Air Filter	X		
Check / Clean Pre-Filter	X		
Check Lug Nuts and Tire Pressure	X		
Inspect Radiator and Radiator Screen	X		
Check Engine as described in Engine's Owner Manual	X		
Inspect Blower Housing Exterior	X		
Check Trailer Lights and Turn Signals	X		
Check Power Band	X		
Inspect Impeller Thoroughly for Damage	X		
Check All Nuts and Bolts for Tightness	X		
Check Tow Bar for Damage / Wear	X		
Check Bolt Hole where Tongue Connects to Trailer	X		
Clean and Inspect Battery and Connections		X	
Inspect Intake and Exhaust Hoses for Wear		X	
Inspect All Ducts for Damage		X	
Remove Blower Face and Inspect Liners for Wear		X	
Check PTO / Clutch Adjustment		X	
Grease / Inspect Wheel Bearings for Corrosion or Wear			X
Inspect all Hydraulic and Fuel Lines for Leaks or Wear			X


Maintenance Section

4.3 Lubrication:

⚠ CAUTION

Remove the negative battery terminal before attempting any lubrication procedures.

Figure 4.3A

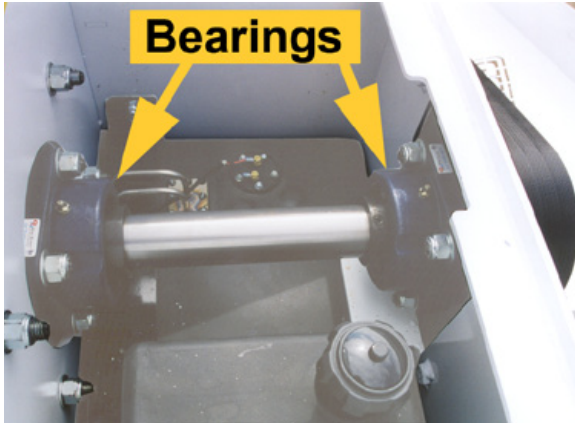

NOTE: DO NOT mix different types of grease. The old grease MUST BE purged before a different type of grease is used. Mixing grease WILL cause premature failure to the bearings.

⚠ WARNING

Thoroughly read and understand the safety and pre-operating sections of this manual before performing any lubrication procedures.

The following are general lubrication procedures for our standard units. Any special or custom built units may have other lubrication procedures not directly mentioned in this manual. Please consult the factory or your dealer before any lubricating procedures not specifically mentioned in this manual.

Proper lubrication of your unit correlates directly to how long your unit will last. A properly maintained unit will last much longer than a unit that is not maintained properly. **NOTE:** Always lubricate bearings at the end of each work day. This will displace any moisture in the bearings. Also lubricate thoroughly before extended shutdown or storage.

Lubrication Points:

1. **Drive Bearings (figure 4.3a):** These bearings are critical components of the belt-driven units. These bearings should be greased every 10 hours with approximately two strokes from the average hand pump grease gun. The type of grease used in these bearings are also critical to the performance of the bearings. A multi-purpose, heavy-load, high-temperature, moisture resistant #2 grease is required for the drive bearings. We recommend L Mantek Elite Supreme #1 WG Extreme Duty multi-purpose grease. Other premium quality grease that matches the above requirements may be used but after years of testing we recommends the Mantek grease.




Maintenance Section

4.3 Lubrcation, continued;

2. **Trailer Wheel Bearings (figure 4.3b):** Most of the units are equipped with "EZ-Lube" grease fittings. This allows the operator to grease the bearings without removing the hubs. The "EZ-Lube" feature consists of axle spindles that have been specially drilled and fitted with a grease zerk in their ends (fig. 4.3c). When grease is pumped into the zerk, it is channelled to the inner bearing and then flows back to the outer bearing and eventually back out the grease cap hole. The trailer wheel bearings should be checked and greased after the first 30 days of service then at the beginning of every season.


Figure 4.3b

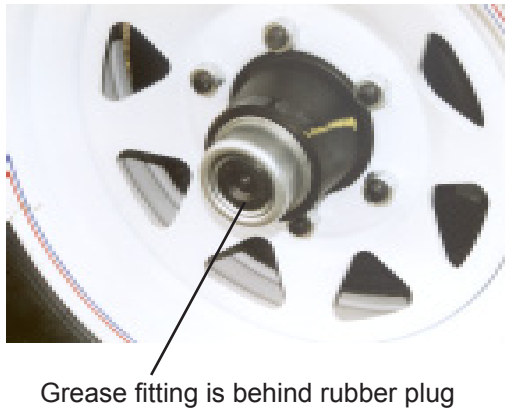

Grease specifications:

Thickener Point.....	Lithium Complex
Dropping Point.....	230 deg. C minimum
Consistency.....	NLGI No.2
Additives.....	EP, Corrosion & Oxidation Inhibitors
Base Oil.....	Solvent refined Petroleum Oil
Base Oil Viscosity.....	@40 deg. C 150cSt Min.
Viscosity Index.....	80 Minimum
Pour Point.....	-10 deg. Minimum

Figure 4.3c

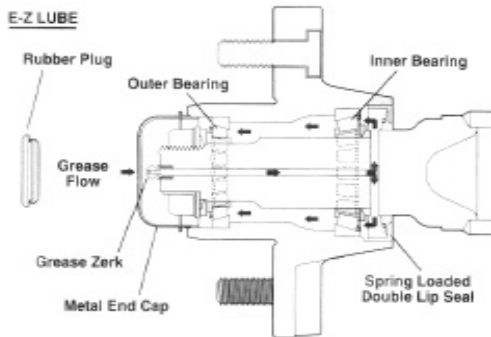

Approved Sources:

Mobil Oil.....	Mobilgrease HP
Exxon/Standard.....	Ronex MP
Kendall Refining.....	Kendall L-427
Ashland Oil Co.....	Valvoline Val-plex EP Grease.
Penzoil.....	Premium Wheel Bearing Grease 707L

For any questions concerning wheel lubrication please consult the axle owner's manual supplied with your leaf collector or contact the manufacturer or dealer.

Maintenance Section

4.3 Lubrication, continued;

Figure 4.3d

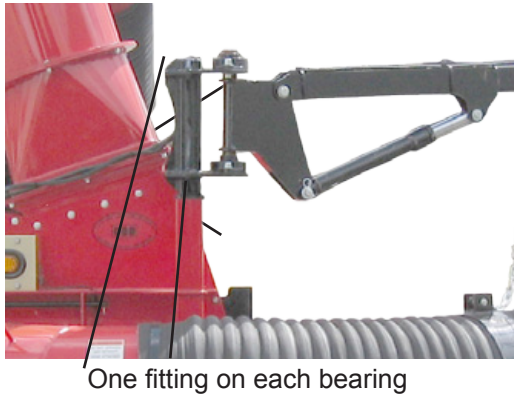


Figure 4.3e


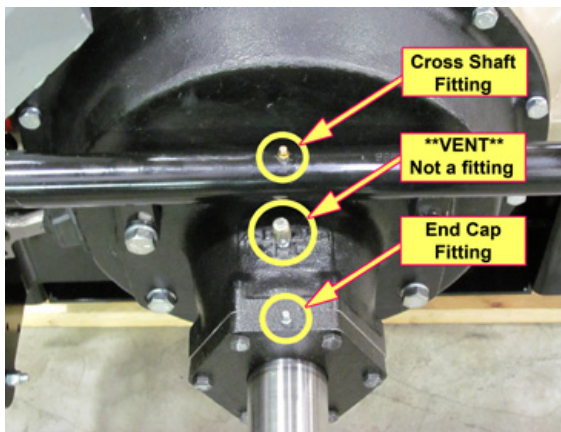


Figure 4.3f

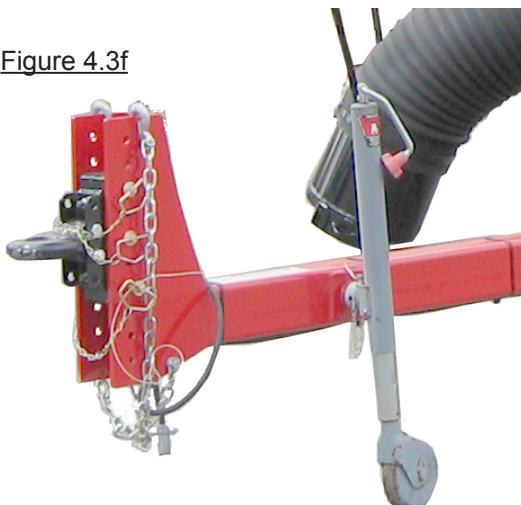

3. **Boom Swivel Bearings (figure 4.3d):** Grease the boom bearings once every week with a multi-purpose moisture resistant #2 grease.
4. **PTO Bearing & PTO Shaft Fitting (figure 4.3e):** The PTO bearings should be greased after every 50 hours of operation with a high grade, high temperature lithium base #2 lubricant having an operating temperature of 200 degrees F. Three to five pumps with a hand operated grease gun is sufficient. **NOTE:** Units manufactured after 2000 may not have a PTO bearing grease fitting. These bearings are sealed and do not require greasing. The PTO crossover shaft and linkage should be lubricated with high temperature lithium base #2 lubricant after 200 hours of operation.
5. **Hinge and Friction Points:** Leaf vacuum operation and longevity can be improved by keeping hinges and friction points lubricated. It is recommended that lubrication be performed weekly. Use SAE30 weight oil on hinges and a premium grade, high temperature lithium based EP#2 grease on friction points.
6. **Hitch and Tongue (figure 4.3f):** The hitch and hitch ring should be checked and lubricated daily to minimize wear. Apply grease and/or SAE30 weight oil wherever applicable.

Maintenance Section

4.4 Preventative Maintenance

CAUTION

Remove the negative battery terminal before attempting any maintenance procedures.

WARNING

Thoroughly read and understand the safety and pre-operating sections of this manual before performing any maintenance procedures.

The following are general preventative maintenance procedures for our standard units. Any special or custom built units may have other preventative maintenance procedures not directly mentioned in this manual. Please consult the manufacturer before doing any preventative maintenance procedures not specifically mentioned in this manual.

Proper preventative maintenance of your unit, just like lubrication, correlates directly to how long your unit will last. A properly maintained unit will last much longer than a unit that is not maintained properly.

Preventative Maintenance:

1. **Engine Oil:** Change the oil and oil filter according to schedules provided in your engine's owner's manual (EOM). The engine oil level should be checked every day. The level should be checked after the engine has been stopped for a period of time. This will allow the oil to drain back into the oil pan, allowing a better indication of the true oil level. If the level is low, see the engine's owner's manual for the correct type of oil.
2. **Engine Coolant:** Check the coolant level before starting the unit each day. The coolant level should not be less than one inch below the top of the radiator.

CAUTION

NEVER check the engine coolant when the engine is hot. Allow the engine to cool at least one hour before checking the coolant. Check the engine owner's manual for instructions. **ALWAYS** wear eye and hand protection when working with the radiator.

Maintenance Section

4.4 Preventative Maintenance, continued;

Preventative Maintenance, continued:

3. **Engine Radiator:** The engine radiator on a leaf vacuum becomes clogged with dust and debris frequently because of the nature of the job. If the radiator is not cleaned properly it WILL cause improper cooling and WILL eventually cause serious damage to your engine. The debris accumulating on the radiator can be lessened by lowering the RPM on the engine to a level just enough to vacuum the leaves. The higher the RPM the more dust that is put into the air. Also, it may be necessary to put mesh or tarps on the top of the leaf box container to reduce the debris and dust. If this is done, make sure there is enough air ventilation on the box so the box is not blown apart. Proper belt condition and coolant mix-ratio, as well as coolant conditioners, are all critical to proper engine cooling. See the engine's owner's manual for specifics on coolant mixture ratios and conditioners. The radiator should be inspected and cleaned with compressed air everyday at the very least.

 **DANGER**

NEVER attempt to clean or inspect the radiator with the engine running or while the engine is HOT. Allow the engine to cool at least one hour before maintaining the radiator. Check the engine owner's manual for instructions. ALWAYS wear eye and hand protection when working with the radiator.

4. **Engine Air Cleaner:** Due to the large amounts of dust generated in collection leaves, it is critical to your engine's life that the pre-cleaner and air filter be maintained properly. The pre-cleaner should be cleaned at least daily of any debris that has accumulated. If conditions warrant it should be cleaned more. The air filter should be checked daily and should be replaced at the first sign of it being dirty. DO NOT attempt to clean the air filter, replace the dirty air filter. It is a good idea to clean out the air filter housing once a week to clean any dust debris that may have accumulated.
5. **Tires and Wheels:** Tires and wheel lug nuts should be checked on a daily basis. Tires should be checked for excessive wear and proper air pressure. Check the side wall of the tire for proper inflation pressure. Torque all 1/2" diameter lug nuts from 90 to 120 foot pounds. Torque all 5/8" diameter lug nuts from 175 to 225 foot pounds. Consult the axle manufacturer's owner's manual for more detailed information.

Maintenance Section

4.4 Preventative Maintenance, continued;

Preventative Maintenance, continued:

6. **Trailer Brakes (if equipped):** The trailer's brakes should be checked daily, before leaving the equipment yard, for proper operation. The trailer brakes are designed to work in synchronization with your tow vehicles brakes. Never use your tow vehicle or trailer brakes alone to stop the combined load. The synchronization between the tow vehicle and the leaf vacuum is accomplished through the brake controller and needs to be set correctly. Please read the brake controllers manual and the axle owner's manual for these procedures.

WARNING

DO NOT tow the leaf vacuum with damaged or non-operating brakes. Check the brakes daily for proper operation.

The brakes should be adjusted after the first 200 miles of operation when the brake shoes and drums have "seated" and at 3,000 mile intervals, or as use and performance requires. The adjustment procedures are beyond the scope of this manual, please see the axle owners/service manual for specific instructions.

The trailer brakes should be inspected and serviced at yearly intervals or more often as use and performance requires. Magnets and shoes must be changed when they become worn or scored thereby preventing adequate vehicle braking. Again, see the axle owner's/service manual for specific procedures.

7. **FUEL TANK:** Fill the fuel tank at the beginning of the work shift leaving a gap of at the top of the tank for expansion of fuel. A full fuel tank will reduce the possibility of condensation forming in the tank and moisture entering the fuel lines. Check the fuel lines daily for cracks, holes or tightness.

Maintenance Section

4.4 Preventative Maintenance, continued;

Preventative Maintenance, continued;



 


CAUTION

ALWAYS wear eye and hand protection when working with the battery.

8. **BATTERY:** The units are supplied with "maintenance free" batteries so there is no need to check fluid levels but the battery terminals should be checked daily for corrosion. Remove any corrosion with a wire brush and coat the terminals with light grease or petroleum jelly to reduce the possibility of corrosion. Also check the battery cable for wear all cable connections and battery tie downs to be certain that they are not loose.
9. **DRIVE BELT (if equipped):** The main drive belt should be checked daily for cracks and for proper tension. If the belt shows any sign of cracking it should be replaced immediately. The proper tension of the belt should be approximately 1/2" deflection when applying a 8 pound pull.
10. **FASTENERS:** Fasteners should be checked weekly for the first 30 days and monthly thereafter. They must be in place at all times and properly torqued. For general torque values see the torque chart at the end of this section.
11. **INSTRUMENT PANEL AND CIRCUIT BOARD:** The instrument panel and circuit board should be cleaned with compressed air daily. Also the circuit board connectors should be wiped clean and have nonconductive grease applied weekly to help maintain solid connections.
12. **BOOM HYDRAULIC PUMP:** Check the fluid level daily. If fluid needs to be added, automatic transmission fluid (ATF) is recommended. Clean debris and oil off the solenoid and pump daily. A build up of debris can cause premature failure to the pump. Check and tighten all hydraulic fittings making sure there are no leaks.

Maintenance Section

4.5 Torque Values

INCH BOLT AND CAP SCREW TORQUE VALUES					METRIC BOLT AND CAP SCREW TORQUE VALUES						
TYPE	SAE GRADE					CLASS					
	5		8			8.8 or 9.8		10.9		12.9	
HEAD MARK					HEAD MARK						
SIZE(D)	LB-FT		LB-FT		SIZE(D)	LB-FT		LB-FT		LB-FT	
	Lub*	Dry*	Lub*	Dry*		Lub*	Dry*	Lub*	Dry*	Lub*	Dry*
1/4"	7	9	10	12.5	M6	6.5	8.5	9.5	12	11.5	14.5
5/16"	15	18	21	26	M8	16	20	24	30	28	35
3/8"	26	33	36	46	M10	32	40	47	60	55	70
7/16"	41	52	58	75	M12	55	70	80	105	95	120
1/2"	63	80	90	115	M14	88	110	130	165	150	190
9/16"	90	115	130	160	M16	140	175	200	255	240	300
5/8"	125	160	175	225	M18	195	250	275	350	325	410
3/4"	225	280	310	400	M20	275	350	400	500	460	580
7/8"	360	450	500	650	M22	375	475	540	675	625	800
1"	540	675	750	975	M24	475	600	675	850	800	1000
1-1/8"	675	850	1075	1350	M27	700	875	1000	1250	1150	1500
1-1/4"	950	1200	1500	1950	M30	950	1200	1350	1700	1600	2000
1-3/8"	1250	1550	2000	2550	M33	1300	1650	1850	2350	2150	2750
1-1/2"	1650	2100	2650	3350	M36	1650	2100	2350	3000	2750	3500

***Lub** means coated with a lubricant such as engine oil, or fasteners with phosphate or oil coatings. "Dry" means plain or zinc plated without any lubrication.

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Make sure fastener threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening. Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not the bolt head.



**DO NOT ATTEMPT TO OPERATE
OR REPAIR
THE LEAF COLLECTOR WITHOUT FIRST
READING AND UNDERSTANDING THIS
MANUAL**

IF YOU HAVE ANY QUESTIONS CONCERNING THE
INSTALLATION OR OPERATION OF THIS UNIT, PLEASE CALL
ODB FOR ASSISTANCE BEFORE ATTEMPTING TO REPAIR OR
OPERATE THE UNIT.

**IMPROPER USE OF ANY MACHINE CAN
RESULT IN SERIOUS INJURY!**

**STUDY AND FOLLOW ALL SAFETY
PRECAUTIONS BEFORE OPERATING OR
REPAIRING UNIT**

THIS MANUAL IS AN INTEGRAL PART OF THE LEAF COLLECTOR AND SHOULD
BE KEPT WITH THE UNIT WHEN IT IS SOLD.

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823





SERVICE SECTION

5.0 SERVICE SECTION

Service and Troubleshooting Wiring Diagrams

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823



SERVICE AND TROUBLESHOOTING

5.0 SERVICE SECTION

5.2 Auto Mfg. Clutch Adjustment - 2008 and after	48
5.3 Hydraulic Boom Troubleshooting Guide.....	49
5.4 Impeller Installation and Removal.....	50
5.4 Impeller Installation and Removal, continued.....	51
5.5 Belt Adjustment and Replacement Guide	52
5.6 Flange Bearing Installation and Removal.....	53
5.6 Impeller Installation and Removal.....	54
5.7 Replacing the Blower Housing Liners.....	55
5.7 Replacing the Blower Housing Liners; continued,.....	56

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823





Service Section

5.2 Auto Mfg. Clutch Adjustment - 2008 and after

⚠ CAUTION

Rotating Shafts, pulleys, and moving belts can cause severe injury or can be fatal. The engine and driven unit **MUST** be completely stopped before any adjustments or work is attempted to the engine, driven unit, or the PTO clutch itself.

The clutch linkage should be checked after the first 15 hours of operation and every 40 hours there after. An improperly adjusted clutch can result in premature wear to the clutch disc, flywheel and the throwout bearing and will void the warranty on the clutch and PTO.

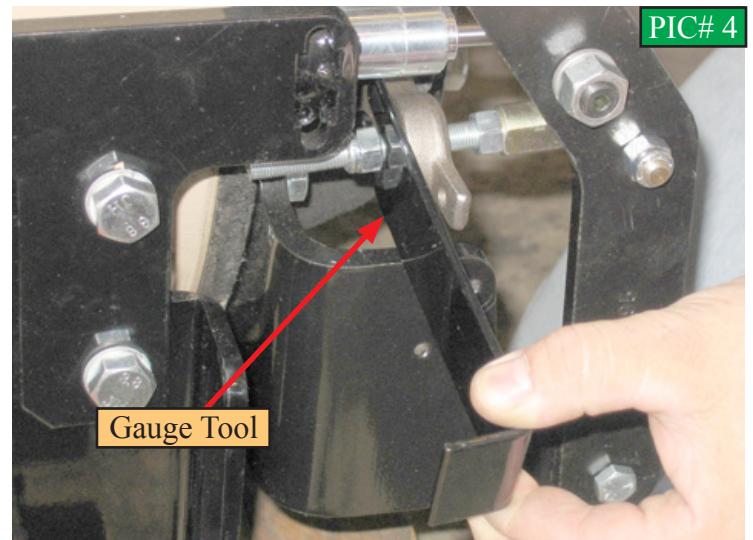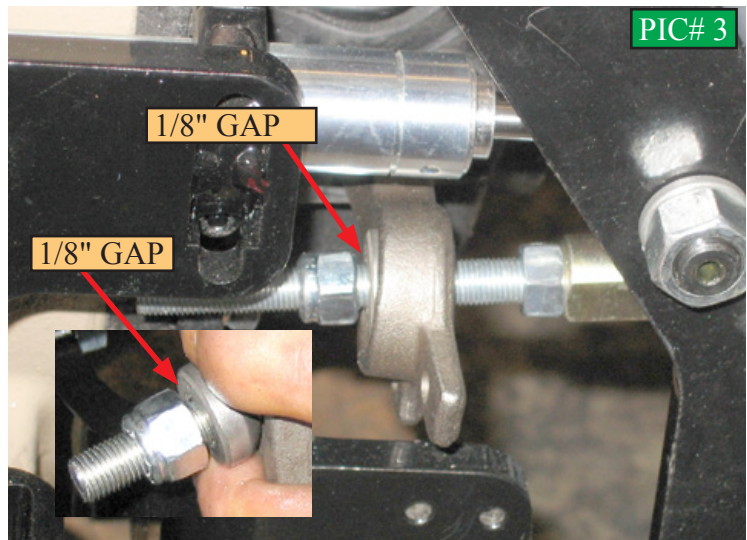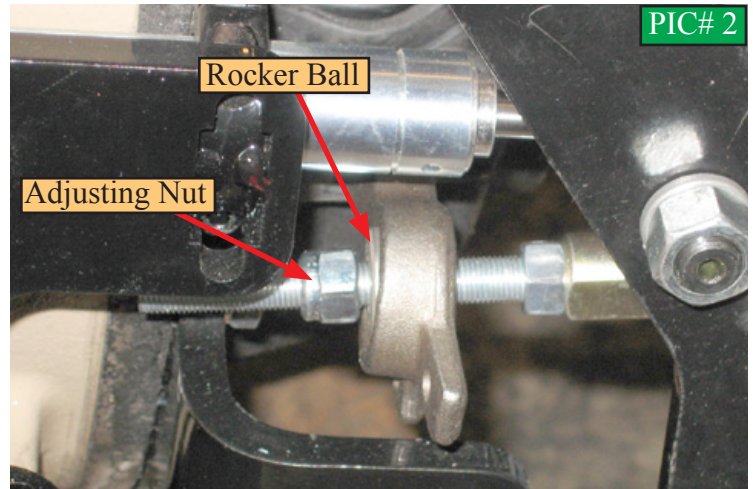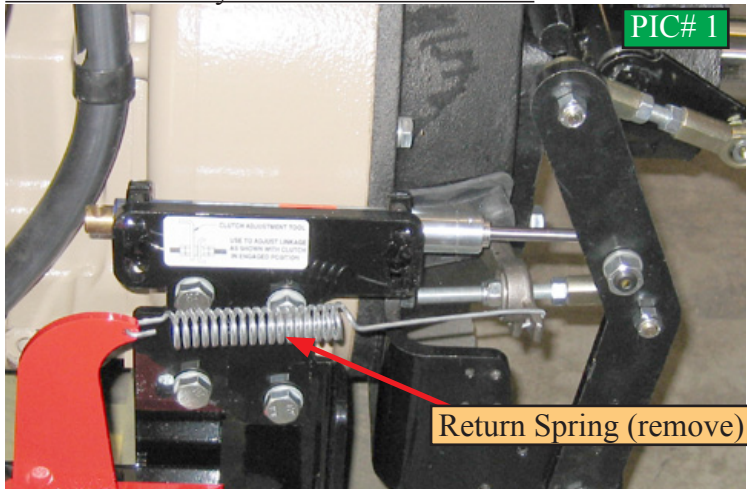


ADJUSTMENT OF THE CLUTCH LINKAGE

1. Make sure the engine is OFF and remove the negative battery cable to ensure the unit can not accidentally be started.
2. Remove the spring from the throwout arm. (See PIC# 1) An accurate measure of the arm tension **CAN NOT** be made with the spring attached.
3. With the clutch in the engaged position (the PTO is engaged when the PTO handle is pointing straight up on the LCT600 and LCT6000 and pointing out to the side (3 o'clock) on the LCT60C, LCT650 and SCL800TM) adjust the nut (See PIC# 2) against the "rocker ball" until a 1/8" gap between the nut and rocker ball is visible (See PIC# 3).
4. If available, use the special 1/8" gauge tool to slip between the nut and rocker ball. With the proper adjustment the gauge should slide between the nut and rocker ball with a slight amount of pressure. (See PIC# 4)
5. Move the adjustment nut to create the 1/8" gap.
6. Re-install the return spring.
7. Place the handle in the disengaged position. Check to make sure that the PTO output shaft turns freely.

Service Section

5.3 Hydraulic Boom Troubleshooting Guide

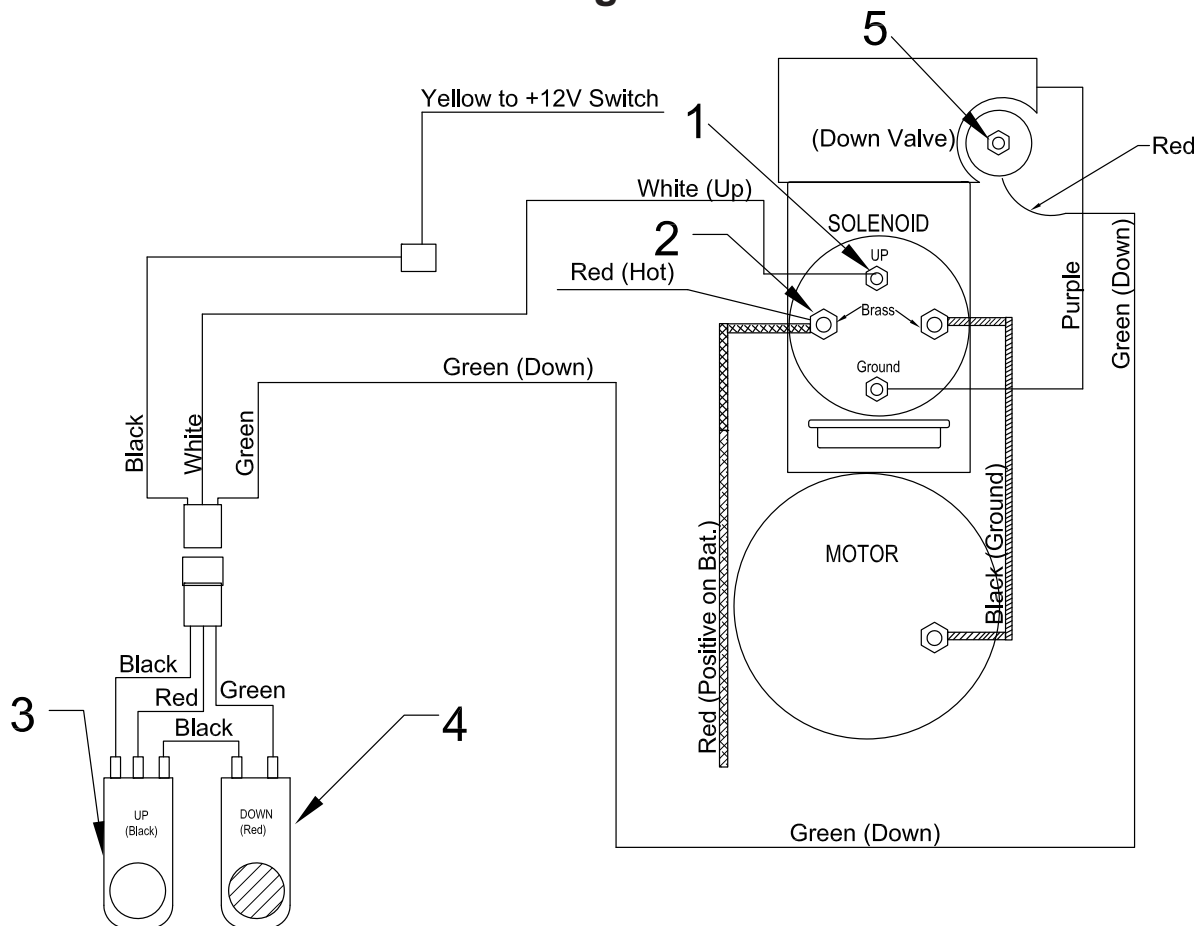

BOOM WILL NOT GO UP

1. Check the fluid level in the reservoir.
2. Using a test light make sure there is current at the outside solenoid post (item#2), this has a 4 gauge Red battery cable attached. If no current is found check the battery condition and battery connections.
3. If there is current at this post, depress the "up" button (item# 3), while pressing the "up" button check for current at the middle post (item# 1), it has a White wire attached. If there is current at the post (item# 1) the solenoid may be defective. Run a jumper wire connecting #1 and #2. This will test the motor, bypassing the solenoid. If the boom raises, the motor is okay (motor part# MP-08004) but the solenoid is bad and needs to be replaced. Solenoid part number is MP-17744.
4. If there is NO current at the post (item# 1) check the wiring between the switch and the solenoid. If the wiring checks out okay, the switch is bad and needs to be replaced.

BOOM WILL NOT GO DOWN

1. Using a test light make sure there is current at the outside solenoid post (item#2), this has a 4 gauge Red battery cable attached. If no current is found check the battery condition and battery connections.
2. Press and hold the "down" button (item# 4), take a test light and probe through the insulation and test for current on the red wire at the valve (item #5).
3. If there is current, the valve is bad and need to be replaced. Valve part number is MP-19283.D. If there is NO current, check the wiring between the switch and valve, especially any connections. If the wiring checks out okay, the switch is bad and needs to be replaced.

Service Section

5.4 Impeller Installation and Removal

CAUTION

Before removing the blower housing face remove the negative battery cable to ensure unit can not be started.

REMOVAL

1. The blower housing face must be removed to gain access to the impeller. Use an overhead crane or forklift to support the face while removing.
2. Once the face has been removed, remove the shaft protector (Fig. 1 or 2).
3. Saturate the shaft and bushing using a penetrating lubricant to help loosen the bushing. Clean any grease or debris from the bushing and shaft.
4. Remove the 3 bolts attaching the bushing to the impeller.(Fig. 3) Being careful not to break the bolts. If a set screw is on the lip of the bushing, loosen it using an allen wrench.(Fig. 4)
5. Using two of the bolts that were just removed screw those bolts into the threaded holes on the bushing. Drive the two bolts into the bushing.(Fig. 5) This will separate the bushing from the impeller. Alternate from one bolt to the other driving only about a 1/4" at a time to keep the bushing coming out straight. It is imperative to keep the bushing straight to remove it.

IMPORTANT: Be sure to drive the bushing out evenly or it will get in a bind making removal much harder.

6. If the bushing does not come off using the two bolts, drill and tap several additional 3/8-16 holes around the bushing. Using Grade 8, 3/8-16 - 2 inch bolts, alternately drive the bolts 1/4" at a time to remove the bushing. **KEEP THE BUSHING STRAIGHT** while removing.

IMPORTANT: If additional holes were drilled in the bushing, it can not be reused. It must be replaced.

7. Once the bushing has been removed use an overhead crane or other suitable device to help lift the impeller out of the blower housing.
8. At this point it would be a good idea to inspect the blower housing liners and blower housing for any damage or wear. Any damage or wear to the liners should be fixed by replacing the liners immediately.

Fig. 1

Direct
Drive



Fig. 2

Belt
Drive



Fig. 3



Fig. 4



Fig. 5



Service Section

5.4 Impeller Installation and Removal, continued

⚠ CAUTION

Before removing the blower housing face remove the negative battery cable to ensure unit can not be started.

INSTALLATION

1. Clean the shaft of any debris and remove any rust using a 120 grit emory cloth.
2. Using an overhead crane or other suitable lifting device lift the impeller on to the shaft. Turn the impeller to align the keyways of the shaft with the keyway in the impeller.
3. Insert key into the keyway. A light sanding of the keyway may be needed, as well as a few light blows with a rubber mallet.
4. Tap the bushing onto the shaft aligning the keyways.
5. **BELT DRIVE UNITS:** Align the bushing and key to be flush with the end of the shaft (Fig 1).
6. **DIRECT DRIVE UNITS:** The bushing and key should protrude from the shaft about 1/2 inch (Fig. 2).
7. Put the 3 bolts into the non-threaded holes and drive them into the impeller holes evenly. Alternate between the three bolts as you drive the bolts in. Torque to 40 to 50 lbs/ft. There should be a gap of 3/8" to 1/2" between the bushing and the impeller.

IMPORTANT: Slowly spin the impeller by hand making sure that the back of the impeller is not hitting any of the bolt heads located at the back of the blower housing.

8. If the bushing has a set screw on it, tighten the screw snug with an allen wrench (Fig. 3). This will help keep the key in place.
9. Install the shaft protector on to the shaft (Fig. 4 or 5).

Fig. 1



Fig. 2



Fig. 3



Fig. 4

Direct
Drive



Fig. 5

Belt
Drive



Service Section

5.5 Belt Adjustment and Replacement Guide

⚠ CAUTION

Before opening the belt cover remove the negative battery cable to ensure unit can not be started.

Belt Removal

1. Make sure the leaf vacuum is not running and remove the battery cable from the negative battery terminal to ensure that the unit cannot be accidentally started.
2. Open the belt guard assembly to gain access to the belt and pulleys.
3. Loosen the four motor mount bolts (Items A and B, figures #1 and #2) located above the motor mount adjustment brackets.
4. To create slack in the belt, the motor assembly needs to be moved toward the blower housing. Locate the adjustable motor mount nuts (C) at the rear of the unit (figure #3). Use a 7/8" socket to turn the nuts counter-clockwise alternating between the left and right mounts. Move one side approximately two inches then move the other side to keep the mounts from binding.
5. Continue moving the motor inward until the belt is loose enough to be removed.

Belt Replacement

1. Place the belt around the two pulleys, aligning the grooves of the belt with the grooves of the pulley.
2. The motor assembly needs to be moved back away from the blower housing to tighten the belt. Using the adjustable motor mount nuts at the rear of the unit (Item C, figure #3) turn one of the nuts clockwise to start moving the motor assembly. Move the motor assembly approximately two inches then do the same to the other side. Continue alternating between the two sides until the belt is tight.
3. **IMPORTANT:** Use a straight edge to make sure the pulleys are aligned (figure #4).
4. If the pulleys are not aligned use either of the adjustable motor mount nuts to compensate for the mis-alignments. Check the tightness at the center of the belt between the two pulleys. The belt should depress approximately 1/2".
5. Tighten down the 2 bolts closest to the blower housing (Item A, figures #1 and #2). Loosen the adjustable motor mount nuts (Item C, figure #3) by turning counter-clockwise a couple of turns until the front 2 motor mount bolts (Item B, figures #1 and #2) are completely straight. The motor assembly should not move, if it does move then the bolts (Item A) were not tight enough and the belt would need to be readjusted using the steps above. Once the bolts (Item B) are straight tighten them down.
6. Close the belt guard assembly and secure it with the latches.
7. Re-attach the battery cable to the negative battery post.
8. Start the engine and increase the throttle to 750 RPM's.
9. Engage the clutch, listening for any squealing from the belt. If the belt squeals use the above directions to tighten the belt a little more.
10. After approximately 8 hours of use the new belt should be checked for proper tightness in case the belt stretched.

Figure #1

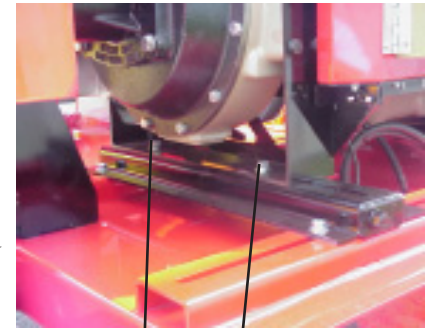


Figure #2

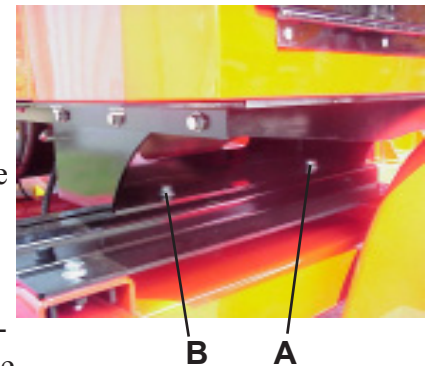


Figure #3

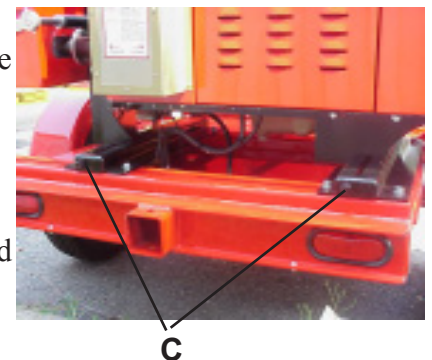



Figure #4



Service Section


5.6 Flange Bearing Installation and Removal

FIGURE #1

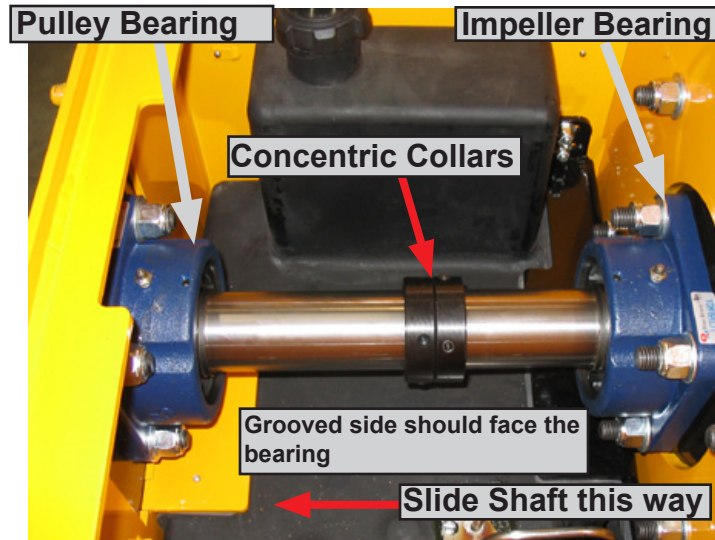

1. Place the bearings on to the black bearing plates inside the pedestal. Hand tighten the bolts onto the nuts at this point.
2. Slide the shaft through the back of the impeller bearing and half way to the pulley bearing. The shaft should fit tight. Clean the shaft and remove any burrs if necessary. Also lightly polishing it with a fine emery may ease installation.
3. Before going through the pulley bearing, place both concentric collars (black collars) onto the shaft (figure #1). Make sure the grooved side is facing the bearing.
4. Continue sliding the shaft through the pulley bearing until the shaft protrudes out from the pulley side 5-5/8". (Figure #2)
5. Now slide the concentric collar toward the respective bearing making sure the grooved side is toward the bearing.
6. Turn the concentric collar clockwise until it slips over the inner ring extension and engages the eccentric. Turn by hand until the parts are locket together.
7. Place a punch or drift in the blind hole in the collar and strike it sharply to lock the collar and ring tightly together (figure #3)
8. Tighten the set screws with an Allen wrench until the set screw stops turning and the Allen wrench starts to spring. (Figure #4)
9. Completely tighten all four of the nuts to secure each bearing.

FIGURE #2

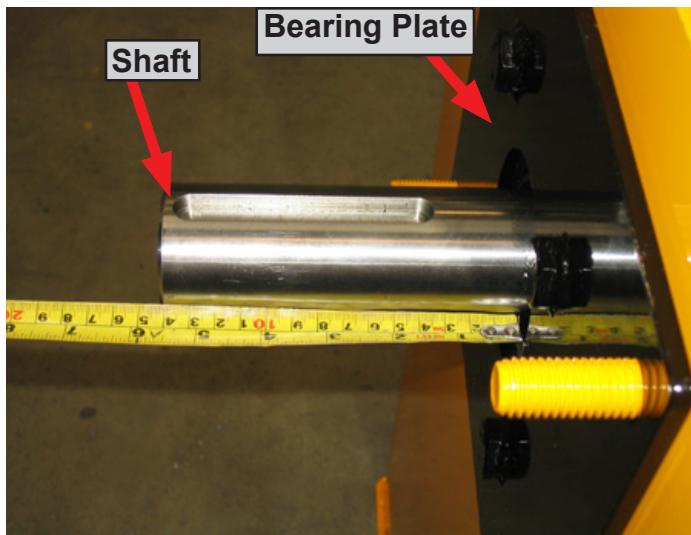

Continued... →

FIGURE #3




FIGURE #4



Service Section

5.6 Impeller Installation and Removal

FIGURE #5

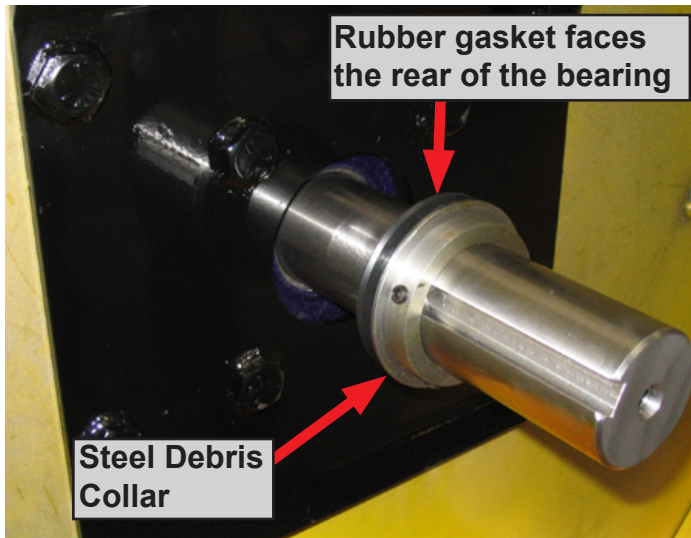

1. Now move to the blower housing where the shaft comes out from the bearing. Put the steel debris collar (chrome color with a rubber seal on one side) onto the shaft with the rubber gasket side facing the rear of the bearing (away from the impeller). See Figure #5.
2. Push the steel collar seal up to the bearing and make sure the groove in the collar goes inside the groove in the bearing. (Figure #6) This creates the sealed fit to keep debris out of the bearing.

NOTE:

3. If the collar is too large for the hole in the bearing plate, a "new style" bearing plate will need to be ordered that has a larger diameter hole. Units manufactured before April 2002 will most likely need to be converted to the new bearing plate (part number LCT600.603 {all but LCT6000} and LCT630.104A for the LCT6000. This plate is for the blower housing or impeller side only. The pulley side bearing does not use the steel debris collar.
4. Completely tighten the two Allen head screws. See figure #6.

NOTE:

Each bearing comes with a steel debris collar but it will be used only on the bearing on the impeller side. You may discard the other collar if you're replacing the pulley bearing.


FIGURE #6



Service Section

5.7 Replacing the Blower Housing Liners


figure 5.5a

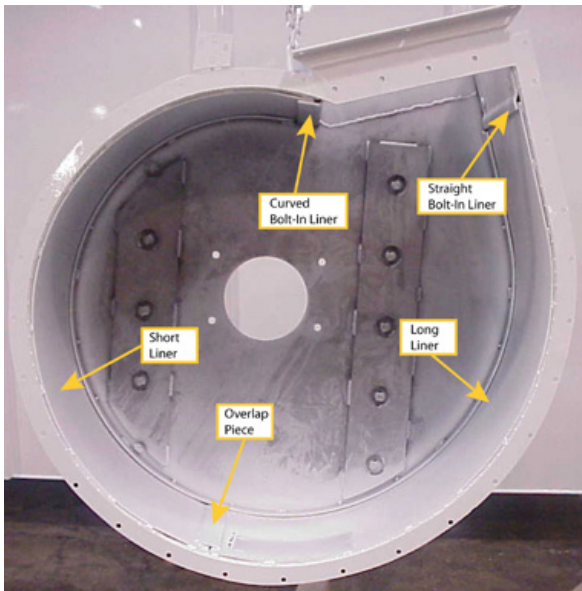

⚠ WARNING

Keep all fuel and fuel fumes away from the unit when grinding or welding. Work only in a well ventiated area.

figure 5.5b

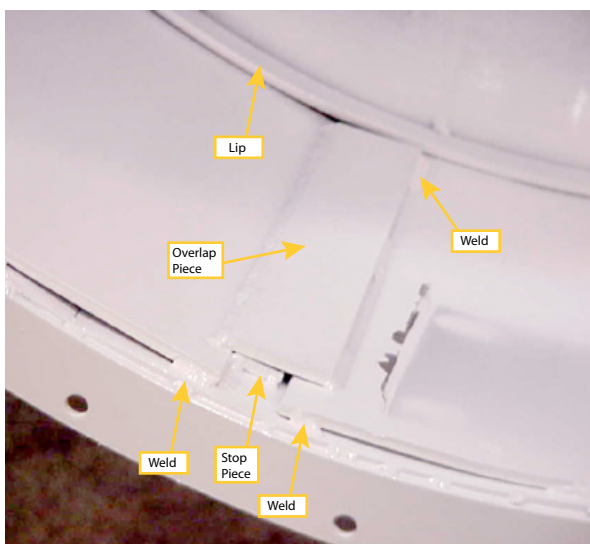

⚠ WARNING

Thoroughly read and understand the safety and pre-operating sections of this manual before working on the unit.

⚠ WARNING

Make sure the negative battery cable is disconnected before opening the blower housing.

Review the safety section of this manual before attempting these procedures. To gain access to the interior of the blower housing please see the previous sections.

Removing and installing the Liners (refer to 5.5a and 5.5b):

1. Unbolt the the blower housing face as described previously in this manual.
2. Remove the curved and straight bolt-in liners by removing the appropriate bolts.
3. With a grinder cut out the remaining welds to free the liners. DO NOT remove the "stop piece" at the bottom of the housing.


TO INSTALL:

1. Place the short liner into lip at the rear of the housing and line up the bottom of the liner with the "stop" at the bottom of the housing. The short liner has the overlap piece on it and should be installed as shown in the pictures at the left.
2. Tack weld the liner in place every 8 to 10 inches to help keep the liner in place.

Service Section

5.7 Replacing the Blower Housing Liners; continued,


figure 5.5a

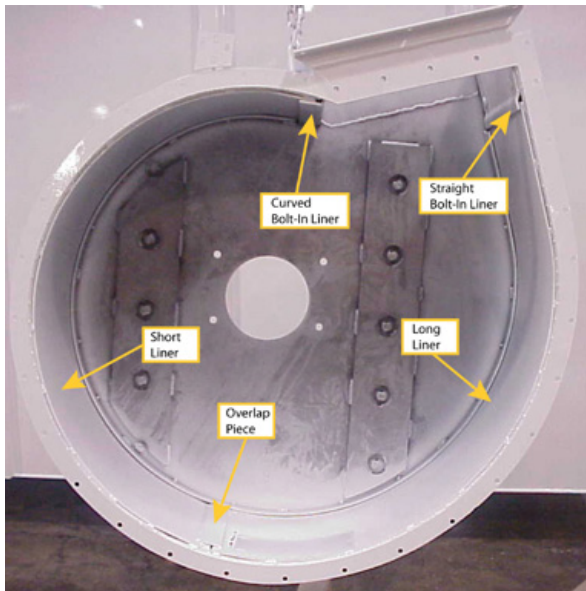

⚠ WARNING

Keep all fuel and fuel fumes away from the unit when grinding or welding. Work only in a well ventiated area.

figure 5.5b

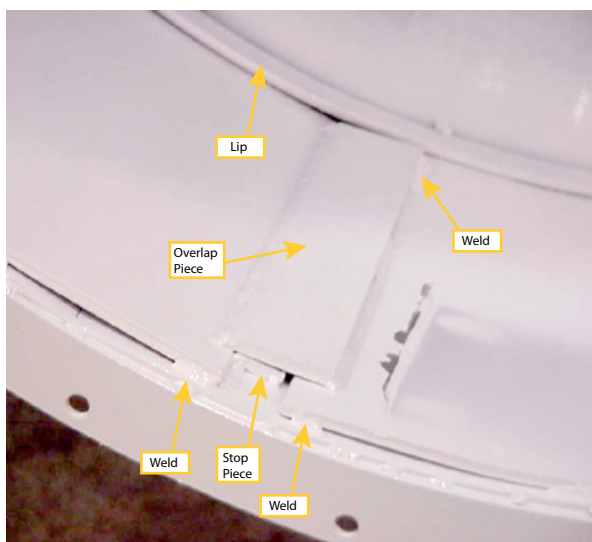

⚠ WARNING

Thoroughly read and understand the safety and pre-operating sections of this manual before working on the unit.

⚠ WARNING

Make sure the negative battery cable is disconnected before opening the blower housing.

Review the safety section of this manual before attempting these procedures. To gain access to the interior of the blower housing please see the previous sections.

Installing the Liners (refer to 5.5a and 5.5b), continued;

3. Install the long liner the same way as the short liner except the long liner should slip under the overlap piece. Make sure the liner slips under the rear lip and the overlap piece.
4. Tack weld the long liner to the overlap piece and tack weld around the liner as you did on the short liner.
5. Install the two bolt-in liners just as they were removed.



5.10 WIRING DIAGRAMS

5.10 WIRING DIAGRAMS


5.10.1 PowerView Wiring Diagram.....	58
5.10.2 PowerView Wiring - Connectors	59
5.10.3 PowerView Wiring - Relays.....	60
5.10.4 Plug Wiring Harnesses.....	61
5.10.5 Engine Rocker Switch Wiring Diagrams.....	62
5.10.8 Trailer Plug Wiring Diagram	63
5.10.9 Trailer Wiring Harness	64
5.10.10 Brake Wiring Harness	65
5.10.11 Boom Wiring Diagram.....	66
5.10.12 Remote Throttle / Clutch Wiring Harness	67

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823

Service Section



5.10.1 PowerView Wiring Diagram

For Detailed Connector Wiring see the next two pages
See 5.10.2 and 5.10.3


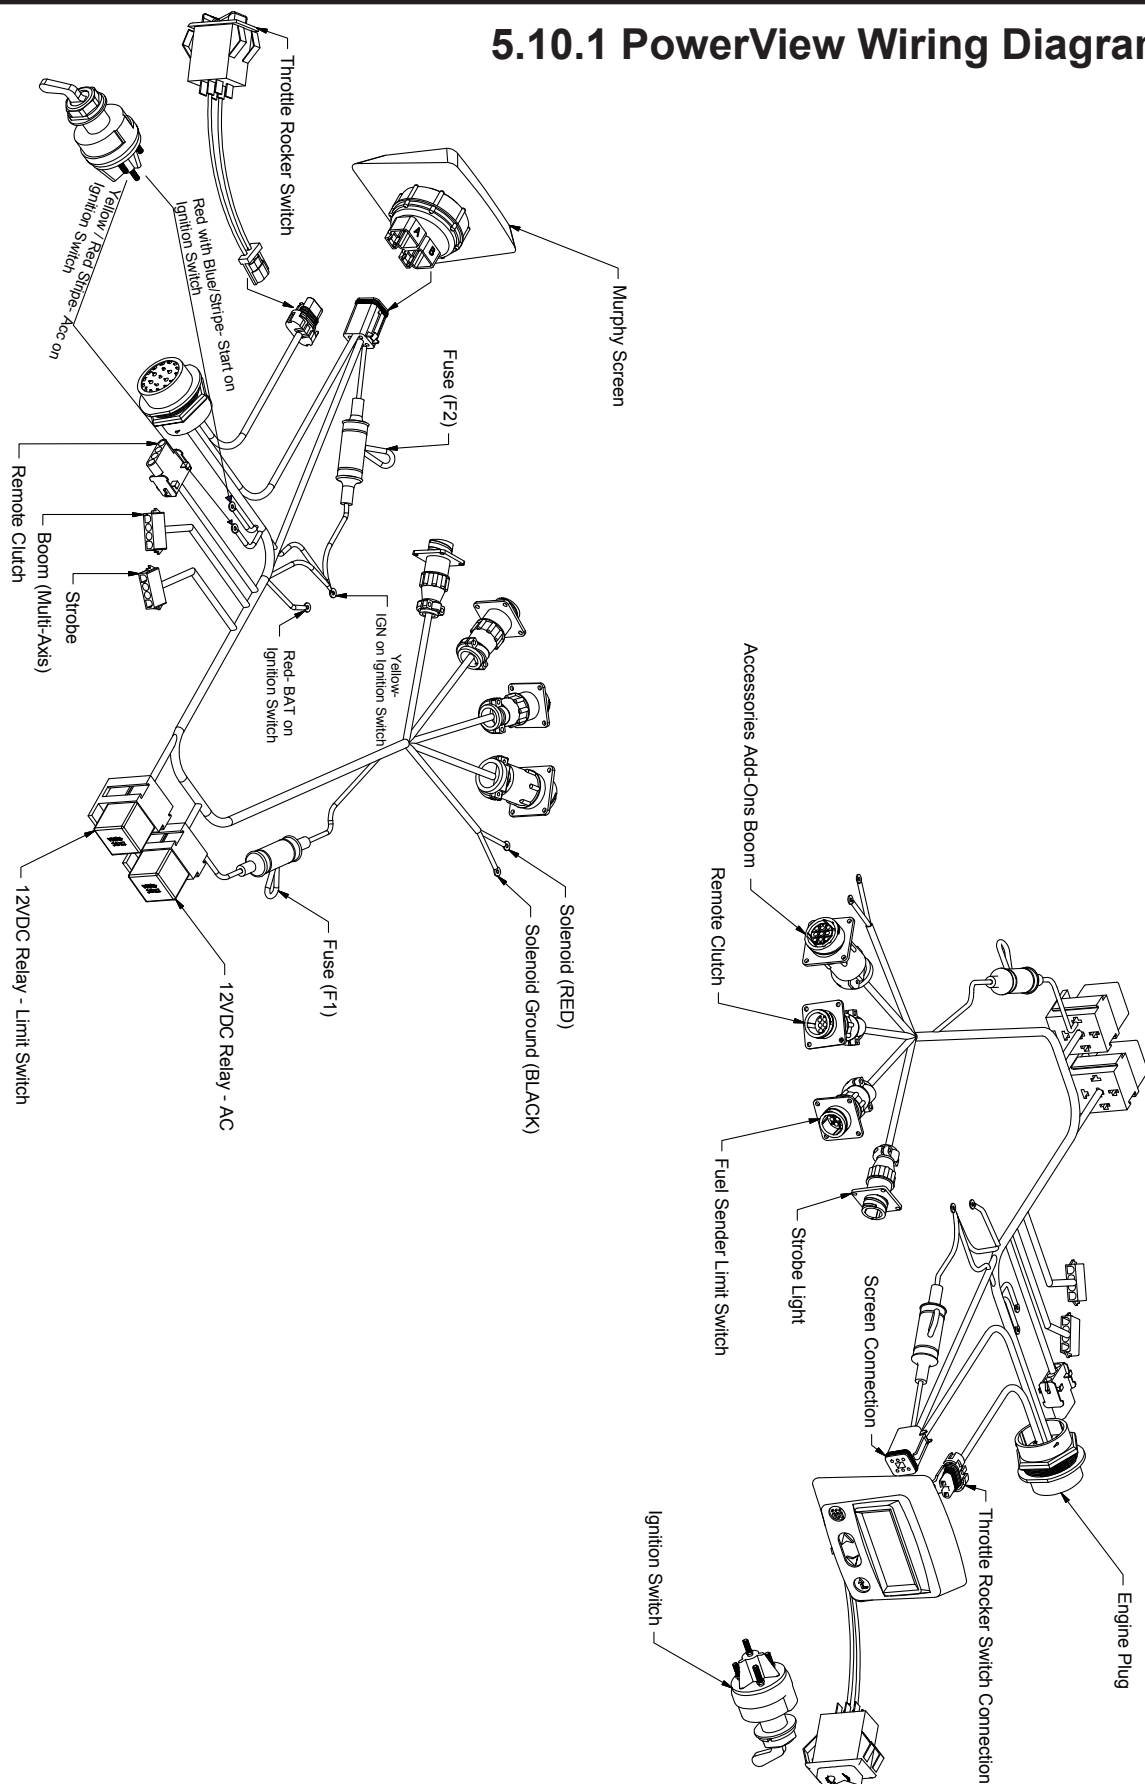


Service Section



5.10.2 PowerView Wiring - Connectors

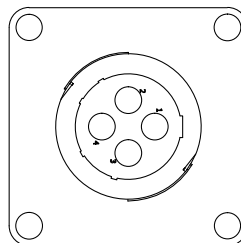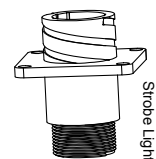



1. Yellow w/ Purple stripe Wire to Strobe
2. Black Wire to Strobe
3. Purple w/ Yellow Stripe wire to Strobe
4. (empty)

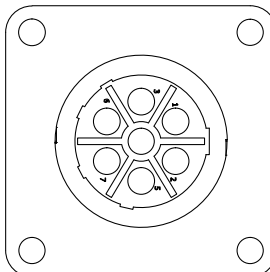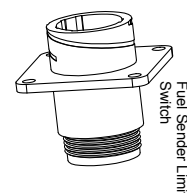



1. Pink Wire to Screen
2. Black Wire
3. Brown w/ Black Strip Wire to Limit Switch Relay
4. Black Wire
5. (empty)
6. (empty)
7. (empty)

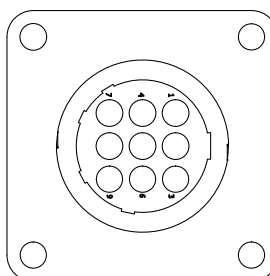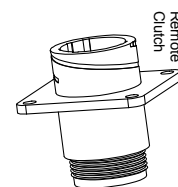

1. Yellow Wire to Remote Clutch
2. Black Wire to Remote Clutch
3. Yellow w/ Green stripe wire to Remote Clutch
4. Green w/ yellow wire to Remote Clutch
6. (empty)
7. (empty)
9. (empty)

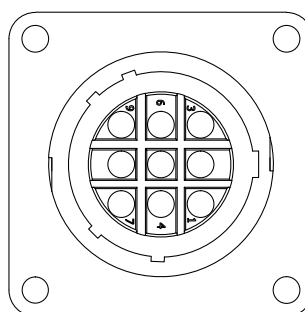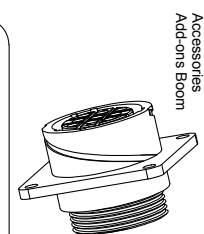


1. Yellow Wire to Boom (Multi-Axis)
2. Black Wire to Boom (Multi-Axis)
3. Yellow w/ Orange stripe Wire to Boom (Multi-Axis)
4. (empty)
6. (empty)
7. (empty)
9. Yellow Wire to Fuse(F1)

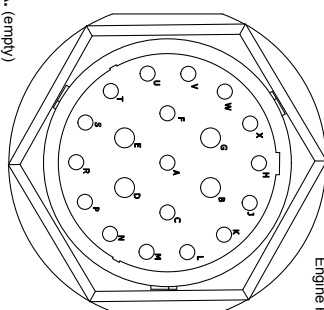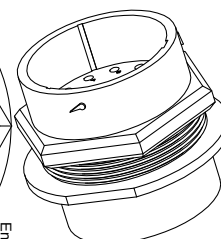


- A. (empty)
- B. Red Wire to Limit Switch Relay
- C. (empty)
- D. Red w/ Blue stripe Wire to Start Ignition Switch
- E. Black Wire to Screen
- F. Black Wire to Screen
- G. Yellow Wire to ACC on Ignition Switch
- H. (empty)
- J. Yellow w/ Red stripe Wire to Ignition Switch
- K. (empty)
- L. (empty)
- M. (empty)
- N. (empty)
- O. (empty)
- P. (empty)
- R. Black Wire to Throttle Rocker Switch
- S. Yellow Wire to Throttle Rocker Switch
- T. (empty)
- U. Green Wire to Screen
- V. Yellow Wire to Screen
- W. (empty)
- X. (empty)

 Remote Clutch




- (L to R)
1. Yellow Wire to Remote Clutch
2. Yellow w/ Green stripe Wire to Remote Clutch
3. Green w/ Yellow stripe Wire to Remote Clutch
4. Black wire to Remote Clutch

 Boom (Multi-Axis)




1. Black Wire to AC.
- Add-Ons Boom
2. Yellow to AC.
- Add-Ons Boom
3. Yellow w/ Red Stripe AC. Add-Ons Boom

 Strobe





1. Yellow Wire
2. Yellow w/ Purple Wire to Strobe light
3. Purple Wire to Strobe light
4. Black Wire to Strobe Light

Throttle Rocker Switch

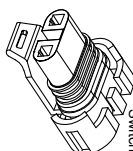

 
1. Yellow Wire to Engine Plug
2. Black Wire to Engine Plug

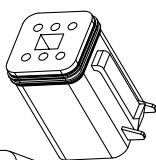


- (Top to bottom) [L-R]
1. Black Wire to Engine Plug (F) ; Yellow Wire to Fuse (F2)
2. Pink Wire to Fuel Sender Limit Switch ; Yellow Wire to Engine Plug
3. Black Wire to Engine Plug (E) ; Green Wire to Engine plug

Service Section


5.10.3 PowerView Wiring - Relays

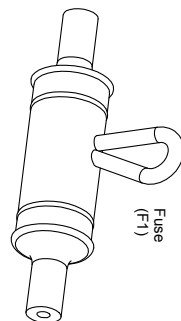


1. Yellow Wire to AC Relay
2. Yellow Wire to Accessories Add-Ons Boom

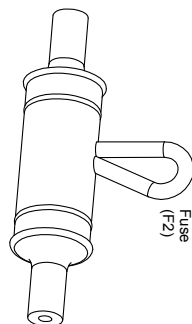


1. Yellow Wire to Screen
2. Yellow Wire to Relay

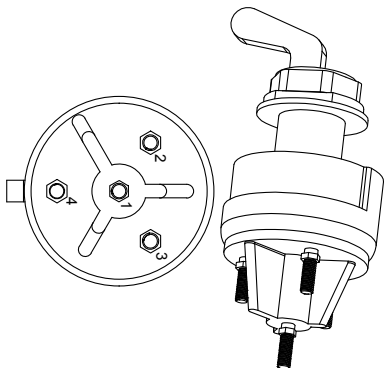


- [ST] 1. Red w/ Blue stripe wire to Engine Plug
[BAT] 2. Red Wire to Limit Switch Relay
[ACC] 3. Yellow w/ Red stripe Wire to Engine Plug
[IGN] 4. Yellow to Engine Plug

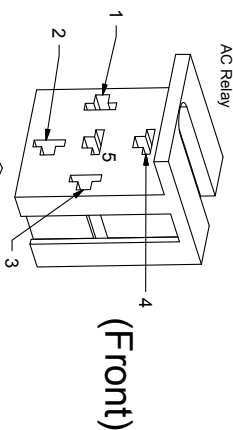


(Front)

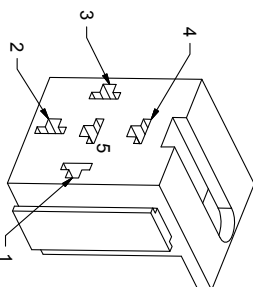

(Back)

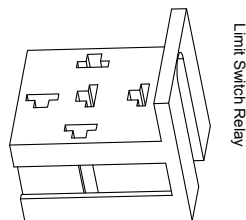

Limit Switch Relay

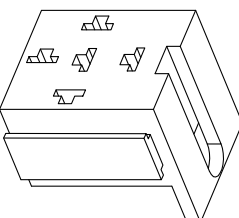

Front:

12VDC Relay-

1. 86
2. 30
3. 85
4. 87
5. 87a

Back

1. Black Wire to Solenoid Ground
2. Red Wire to Solenoid
3. Yellow wire to Relay
4. Yellow Wire to Fuse (F1)
5. (empty)

12VDC Relay-

1. 86
2. 30
3. 85
4. 87
5. 87a


Back:

1. Brown w/ Black stripe Wire to Fuel Sender Limit Switch
2. Red Wire to (3) ; Red Wire to Engine Plug
3. Red Wire to (2)
4. (empty)
5. Red Wire to Ignition Switch "Bat"


Service Section

5.10.4 Plug Wiring Harnesses


Accessories

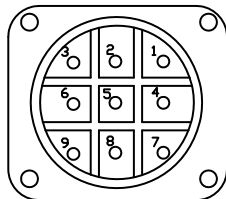



Remote
Clutch/
Throttle

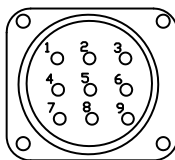

Limit Switch/
Fuel Sender

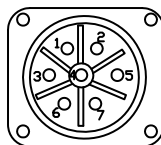

Strobe Light

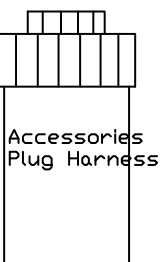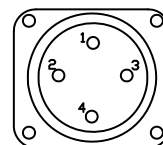

Accessories
Plug Harness


Yellow(1) - (+) from Ignition
Black(2) - (-) from Ignition
Yellow(3) - (+) from Ignition
Black(4) - (-) from Ignition
Yellow(5) - (+) from Ignition
Black(6) - (-) from Ignition
Orange with Yellow Stripe(8) - Rocker Switch



Remote
Clutch/Throttle
Harness

Yellow(1) - (+) from Ignition
Black(2) - (-) from Ignition
Yellow with Green Stripe(3) - Clutch Engage
Green with Yellow Stripe(4) - Clutch Disengage
Yellow with Blue Stripe(7) - Throttle Fast
Blue with Yellow Stripe(8) - Throttle Slow


Part#
600.2431C

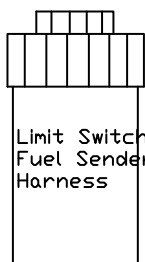

Limit Switch/
Fuel Sender
Harness

Pink(1) - Fuel Sender (+)
Black(2) - Fuel Sender (-)
Brown(3) Limit Switch(NC)
Black (4) Limit Switch (Com)
Brown Limit Switch Inspection Door
Black Limit Switch Inspection Door
Brown Limit Switch Belt Guard
Black Limit Switch Belt Guard

Part#
STD.2214C

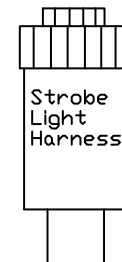


Strobe
Light
Harness

Yellow with Purple Stripe (1) - Strobe Light (+)
Black(2) - Strobe Light (-)
Red
Green
Black

Service Section


5.10.5 Engine Rocker Switch Wiring Diagrams

Strobe Light Rocker Switch

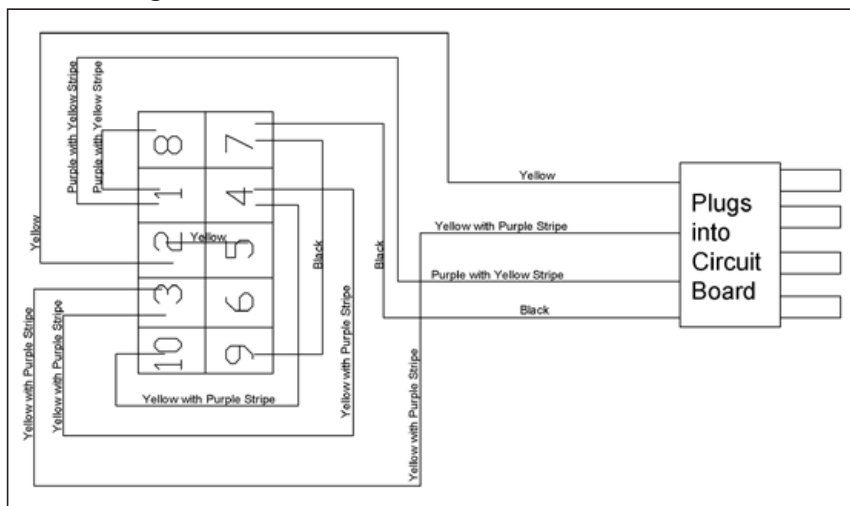

PIN#	COLOR	DESCRIPTION
1	Purple w/Yellow Str	"+" Aux from Switch
2	Yellow	"+" from Circuit Board
3	Yellow w/Purple Str	"+" from Strobe Light
4	Yellow w/Purple Str	Looped from #3
5	Yellow	Looped from #2
6		
7	Black	"-" from Circuit Board
8	Purple w/Yellow Str	Looped from #1
9	Black	Looped from #7
10	Yellow w/Purple Str	Looped from #4

Remote Throttle and Remote Clutch Rocker Switch

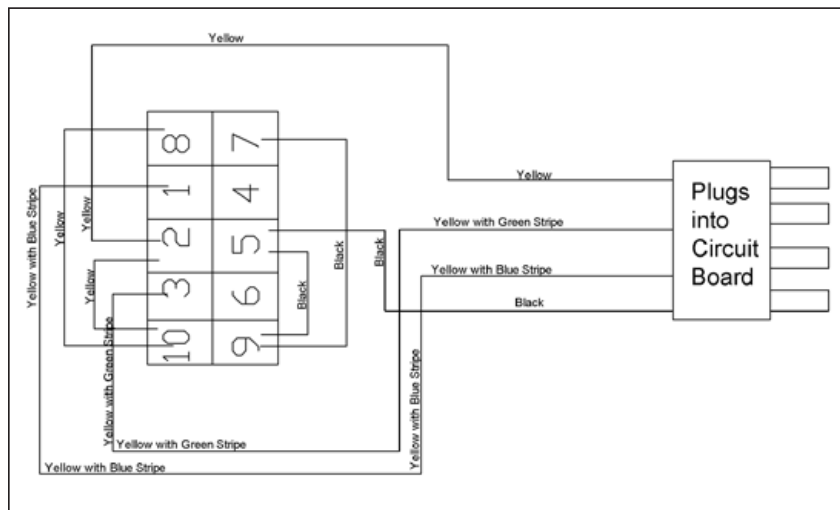


PIN#	COLOR	DESCRIPTION
1	Yellow w/Blue Stripe	Throttle Fast / Clutch Engage
2	Yellow	"+" from Circuit Board
3	Yellow w/ Green Stripe	Throttle Slow / Clutch Disengage
4		
5	Black	"-" from Circuit Board
6		
7	Black	Looped from #9
8	Yellow	Looped from #10
9	Black	Looped from #5
10	Yellow	Looped from #2

This plug is used for the Remote Throttle and the Remote Clutch Rocker Switches.

Service Section


5.10.8 Trailer Plug Wiring Diagram

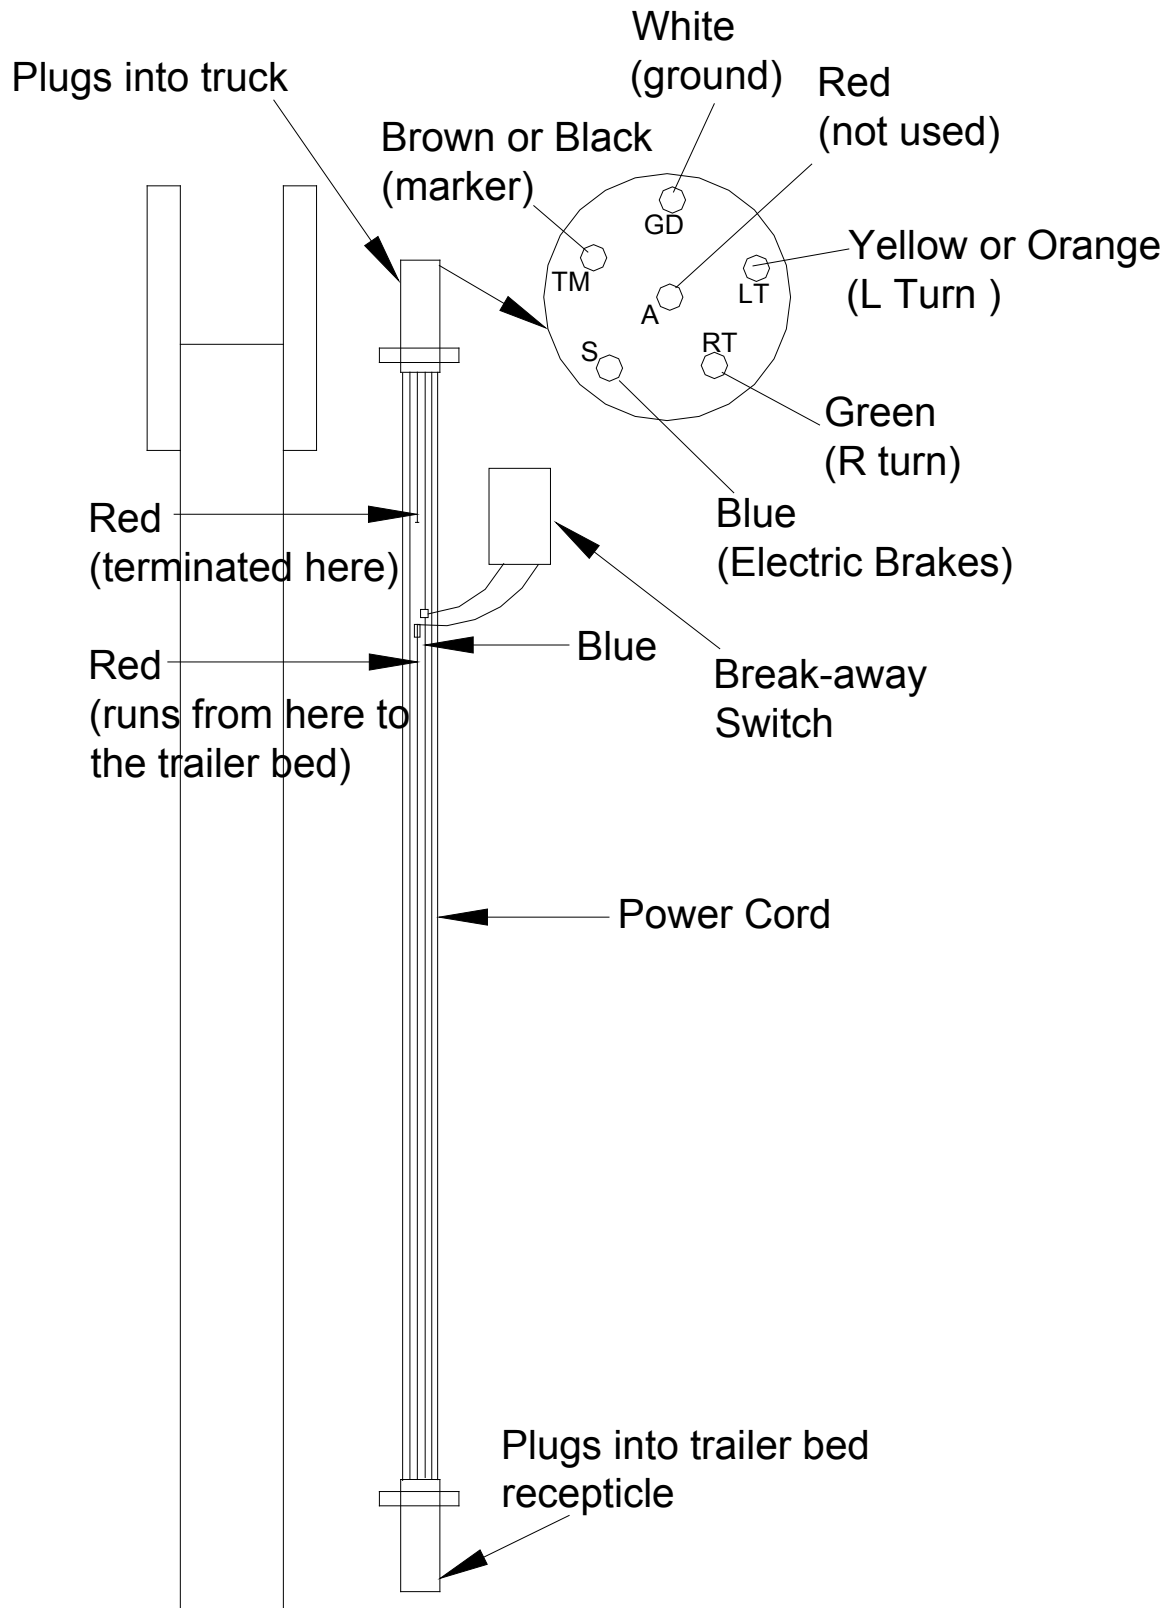

Service Section

5.10.9 Trailer Wiring Harness


TRAILER WIRING HARNESS

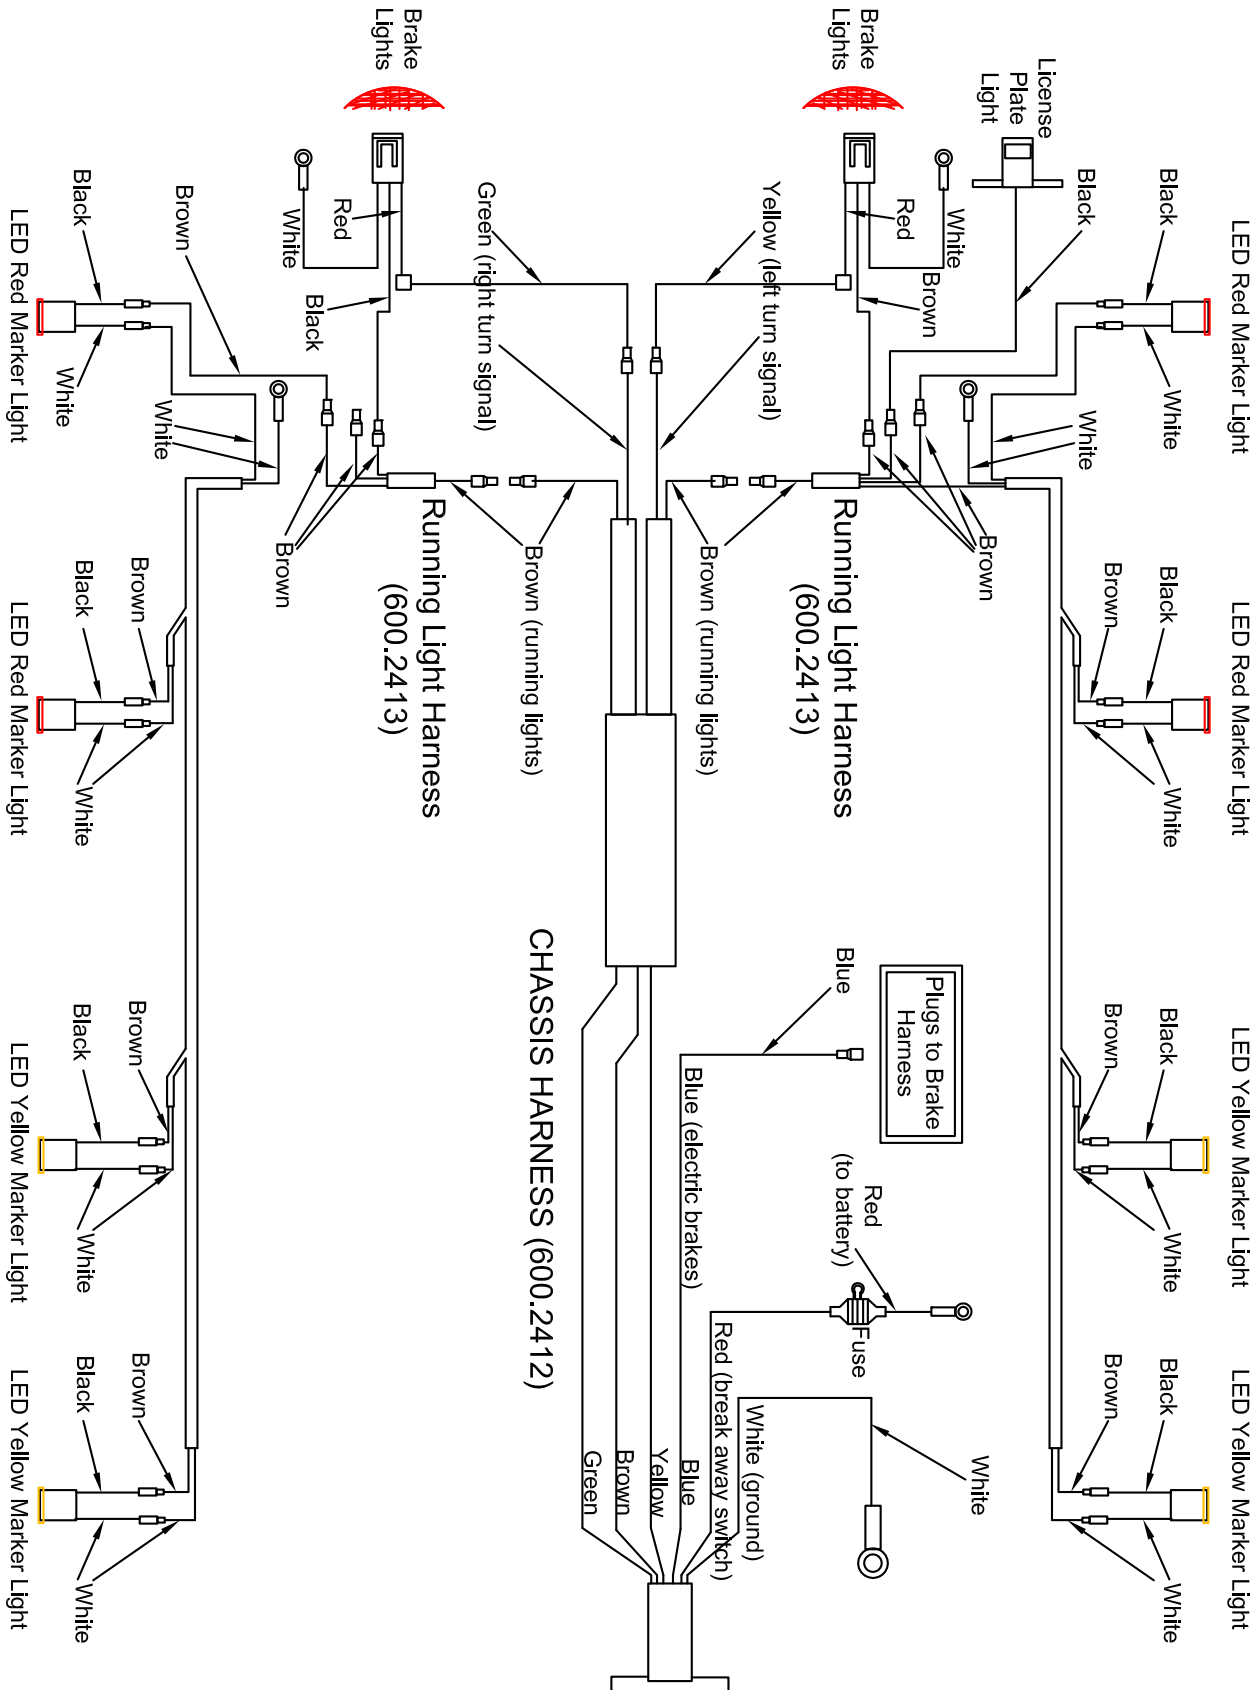

Service Section


5.10.10 Brake Wiring Harness

BRAKE HARNESS (600.613)

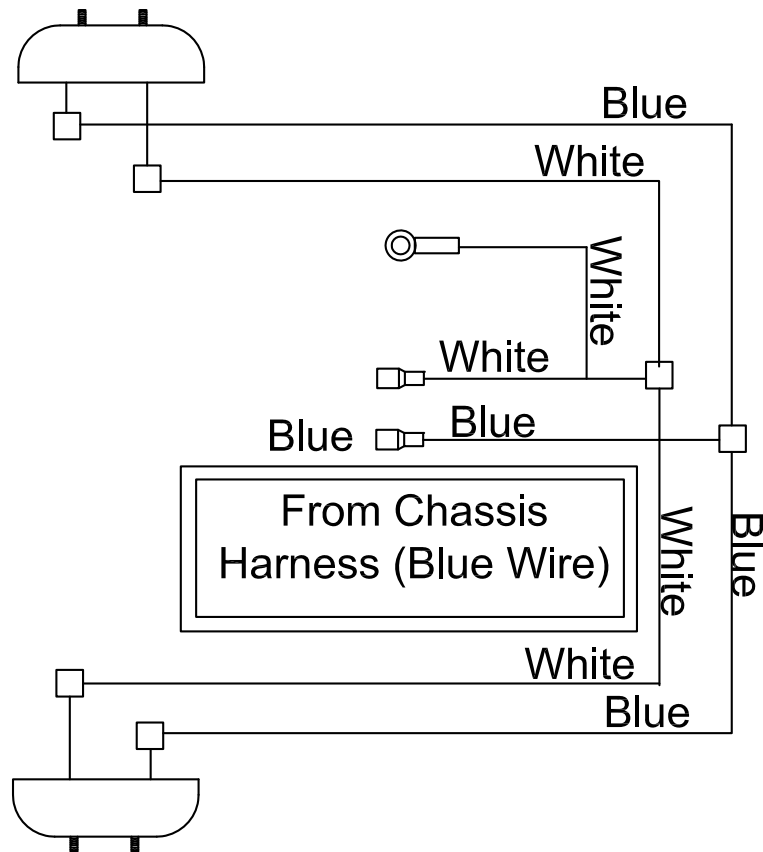

Service Section


5.10.11 Boom Wiring Diagram

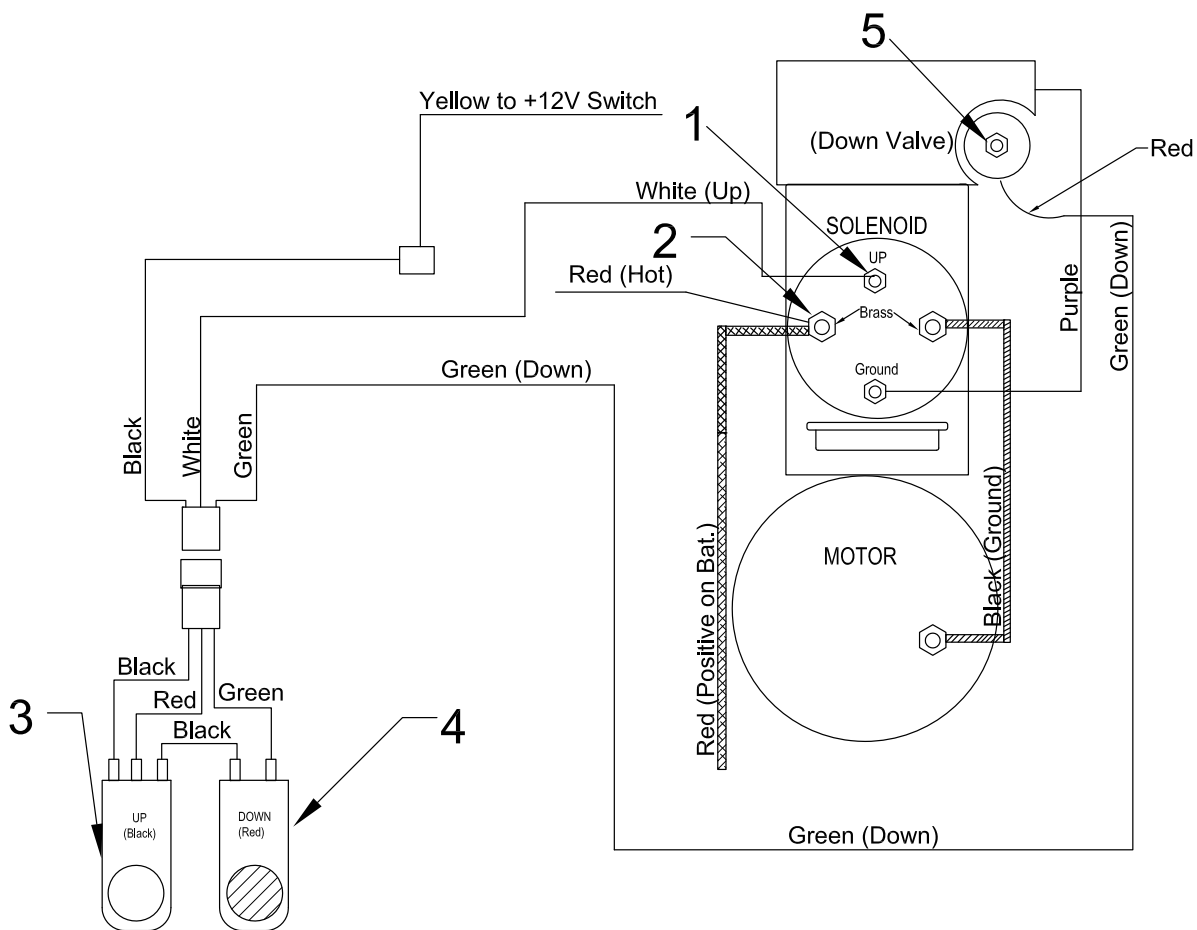

COLOR	FUNCTION
Green	Down
White	Up
Purple	Ground on Solenoid
Red (4 gauge cable)	Positive to Battery
Black (4 gauge cable)	Ground from Solenoid to Hydraulic Motor
Black (from up down switch)	changes to Yellow - Positive for Boom Rocker Switch on instrument panel (if equipped)

Service Section

5.10.12 Remote Throttle / Clutch Wiring Harness

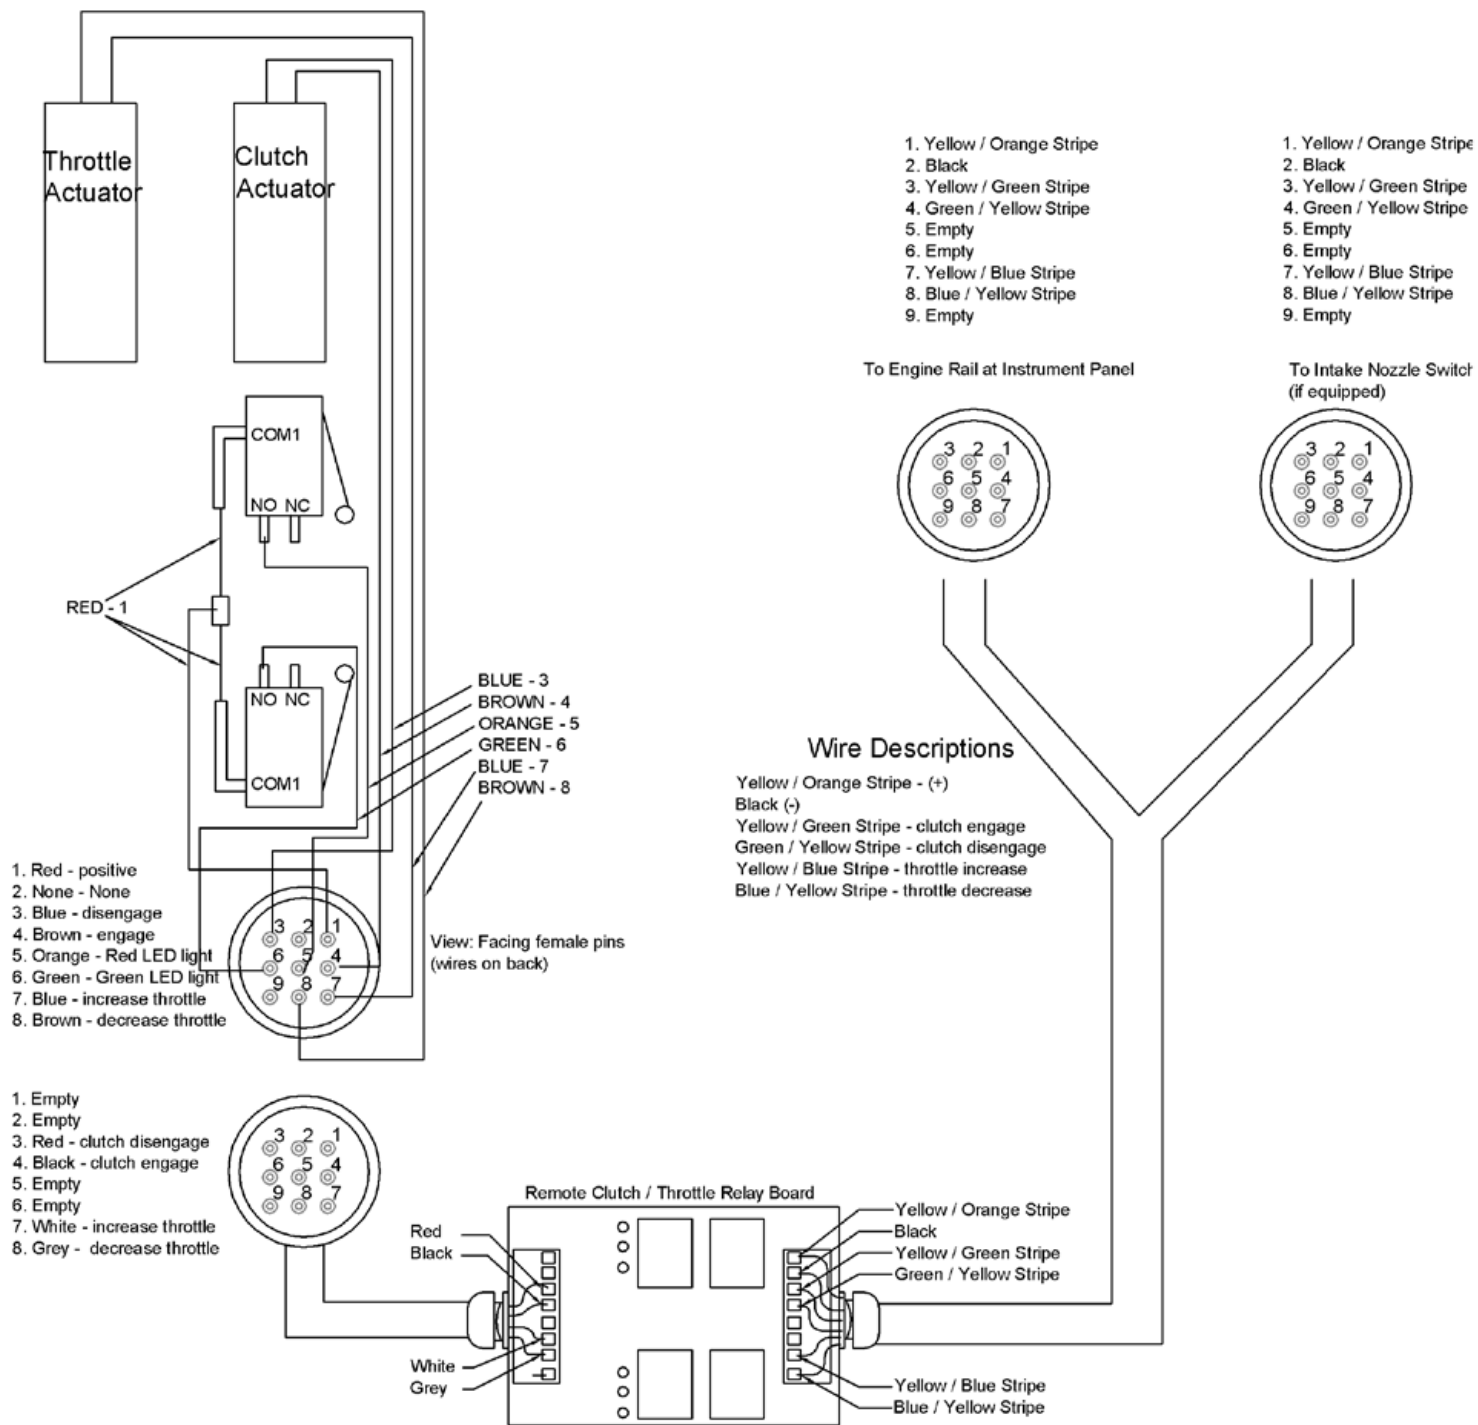



5.20 POWERVIEW MAINTENANCE SECTION

5.20 POWERVIEW MAINTENANCE SECTION

5.20.1 Powerview Service Reminders	69
5.20.1 Powerview Service Reminders, continued.	70
5.20.2 Powerview Faults and Warnings	71
5.20.3 Powerview Troubleshooting	72


ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823

Service Section

5.20.1 Powerview Service Reminders

Service Reminders:

SERVICE REMINDERS permit you to RESET REMINDERS or MODIFY REMINDERS for changing oil, air filters and hydraulic oil or for servicing the engine and /or machine. NOTE: Service reminders are internal reminders with PowerView. Once a service reminder is active, warnings will show SPN916 and FMI 17. Check PowerView Service Reminders prior to call Technical Support.

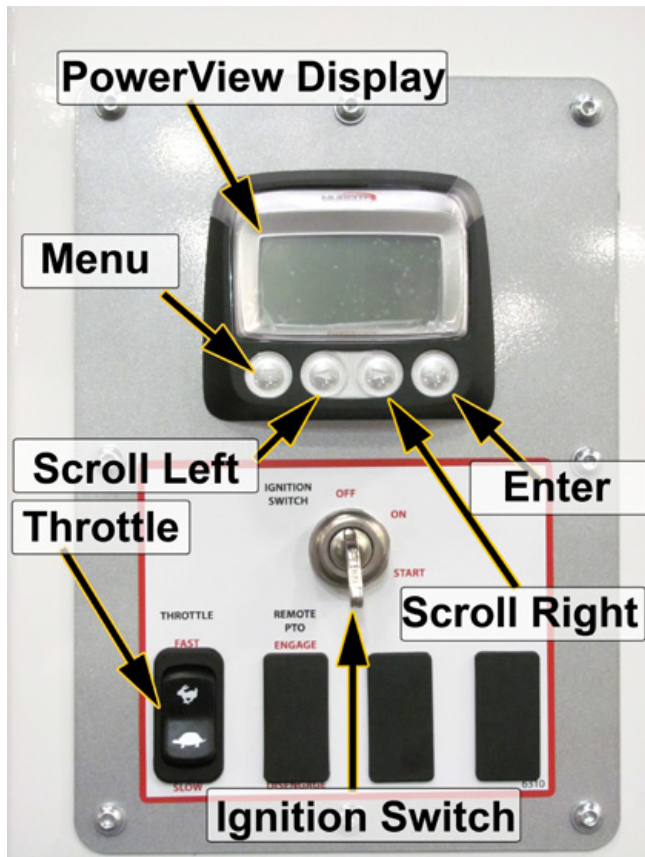


1. Use the **Arrow Keys** to highlight Service Reminders and touch **Enter**.
2. The **Service Reminders** options display. Use the **Arrow Keys** to select either **Reset Reminders** or **Modify Reminders**, and then touch **Enter**.
3. If you select **Reset Reminders**, use the **Arrow Keys** to highlight the **Reminder** you wish to edit. Touch **Enter**.
4. The **Reminder** name appears at the top of the screen. The action (**ON** or **OFF**) displays mid-screen, and two choices display at screen bottom. Touch **Menu** to **Cancel** the action. Touch **Enter** to choose **Reset**.
5. If you select **Modify Reminders**, use the **Arrow Keys** to highlight the **Reminder** to modify and touch **Enter**.
6. The **Reminder** name appears at top screen. The hour value displays mid-screen and allows you to set the number of hours to elapse before **Reminder** prompts. Bottom screen shows **Cancel** and **Save**. Touch **Cancel** to discard changes and return to **Reminders** list.
7. Use the right **Arrow Key** to increment the highlighted number. Use the left **Arrow Key** to move to the next number space.



Service Section

5.20.1 Powerview Service Reminders, continued.

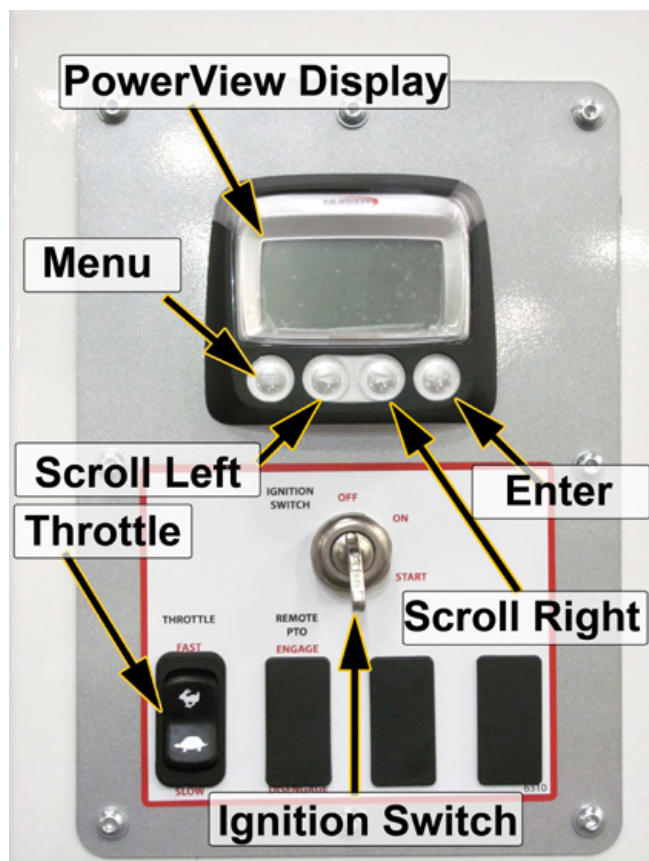

8. Touch **Save**. The **Modify Service Reminder** screen displays. Touch **YES** to save or **NO** to return to the **Reminders** list.
9. A modified **Reminder** list displays a (+) at right of **Reminder** name when successfully completed. Follow the above steps to modify other **Reminders**.
10. When finished, touch **Menu** to return to the Main Menu.

Select Units

From **SELECT UNITS**, you may select how information is displayed:

- ENGLISH for Imperial Units (PSI, Degrees F)
- METRIC KPA
- METRIC BAR for IS units (kPa, Bar, degree C)

Backlight Adjustment

ADJUST BACKLIGHT - Use the **Arrow Keys** to brighten or darken the backlight intensity.

Contrast Adjustment

Adjust Contrast - Use **Arrow Keys** to lighten or darken the text and graphics.



Service Section

5.20.2 Powerview Faults and Warnings

Fault and Warnings:

The PowerView provides two means for detecting faults and warnings: visual LEDs on the casing (Amber in the upper left corner, and Red in the upper right corner) and fault indicators on the display.

Visual Indication

- Amber LED (Warning)
- Red LED (Derate / Shutdown)

Fault Indicators

❗ Auxillary Gage Fault

⚠ Warning

❗ Derate / Shutdown


❗ Auxiliary Gage Fault

Murphy PVA Gages can be attached to the PowerView. If an auxiliary gage should fail, the 1-up or 4-up display will be replaced with a fault message: **GAGE NOT RESPONDING**.

Note: A fault can only be cleared by correcting the cause of the condition (See **Troubleshooting** in this document)

⚠ Active Fault Codes

When the PowerView receives a fault code from an engine, the 1-up or 4-up display is replaced with the active fault code message: See the following fault example:

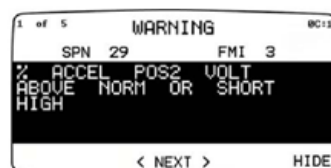

❗ Derate / Shutdown Codes

When the PowerView receives a severe fault code from an engine control unit the 1-up or 4-up is replaced with the SHUTDOWN message.

Acknowledging Fault Codes

To Acknowledge and hide the fault and return to the 1-up or 4-up display, touch Enter. The display will return to the 1-up or 4-up display, but the display will contain the warning and shutdown icon.

Touch Enter to redisplay the hidden fault. Touch Enter once again hides the fault and returns the screen to the 1-up or 4-up display.

Service Section

5.20.3 Powerview Troubleshooting

Troubleshooting:

* **WAIT TO START PREHEATING** is displayed.

The ECU is broadcasting a "Wait to Start" message. Engine manufacturers typically recommend against starting the engine while the ECU is broadcasting this message. Once the ECU stops broadcasting this message, this screen will no longer be displayed on the PowerView.

* **CANBUS** is displayed

The PowerView has not received any valid J1939 CAN messages for at least 30 seconds. Check wiring, CANBUS, termination resistors, and Engine ECU address in the OEM Menu.

* **TIMEOUT ECU NOT RESPONDING** is displayed.

The PowerView sent a request to the ECU for Stored Fault Code (DM2) information, and the ECU did not respond to the request. This message on the PowerView indicates the ECU may not support Stored Fault Code (DM2) functionality over J1939.

* **NO STORE CODES** is displayed

The PowerView sent a request to the ECU for Stored Fault Code (DM2) information. The ECU responded: There are zero stored codes.

* **NO GAGE DATA** is displayed

The PowerView has no record of gages connected to the RS485 bus.

* **NO DATA** is displayed in place of a parameter value. The PowerView has not received data for the selected parameter for at least 5 seconds.

* **NOT SUPPORTED** is displayed in place of a parameter value.

This means the data received for this parameter is not valid or not supported.

* **DATA ERROR is displayed in place of a parameter value**

The ECU is sending a message that there is a data error with this parameter. Alternatively, (PV101 only) FUEL LEVEL has been selected for display, ANALOG INPUT has been set to FUEL LEVEL, but no Murphy Fuel Sender has been connected to the analog input.

* **One of the 4-UP quadrants is empty**

No parameter has been selected for display in this quadrant.

* **Display is not readable, either very dim or very dark**

The LCD contrast may have been over or under adjusted. Press and hold the MENU key for approximately 5 seconds. This will reset the LCD contrast setting to factory default.

* **PVA Gages not working**

When PVA Gages are connected and do not seem to work, go to the Utilities menu and select Remove all Gages.



PARTS BREAKDOWNS SECTION

**Engine Group
Clutch Group
Blower Housing Group
Trailer Group
Hose Boom Group**

PARTS BREAKDOWN SECTION

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823



6-0

6.0 ENGINE GROUP

6.0 ENGINE GROUP


6-0	74
6.1 Instrument Panel Group	75
6.2 Air Cleaner Group	76
6.3 Strobe Light Parts Group	77
6.4 Sheet Metal Group, except LCT650	78
6.5 Engine Mount Group	79
6.6 Muffler (Exhaust) Assembly	80
6.7 Radiator Assembly Group	81
6.8 Engine Senders / Switch Group	82
6.9 Battery Group	83
6.10 Engine Miscellaneous Parts Group	84
6.11 Remote Clutch / Throttle Circuit Board Assembly	85
6.12 Remote Clutch and Remote Throttle Assembly	86
6.13 Chaffe Eliminator Assembly, hinged	87

ENGINE GROUP

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823

6.1 Instrument Panel Group


Standard units Januray 2012 and after

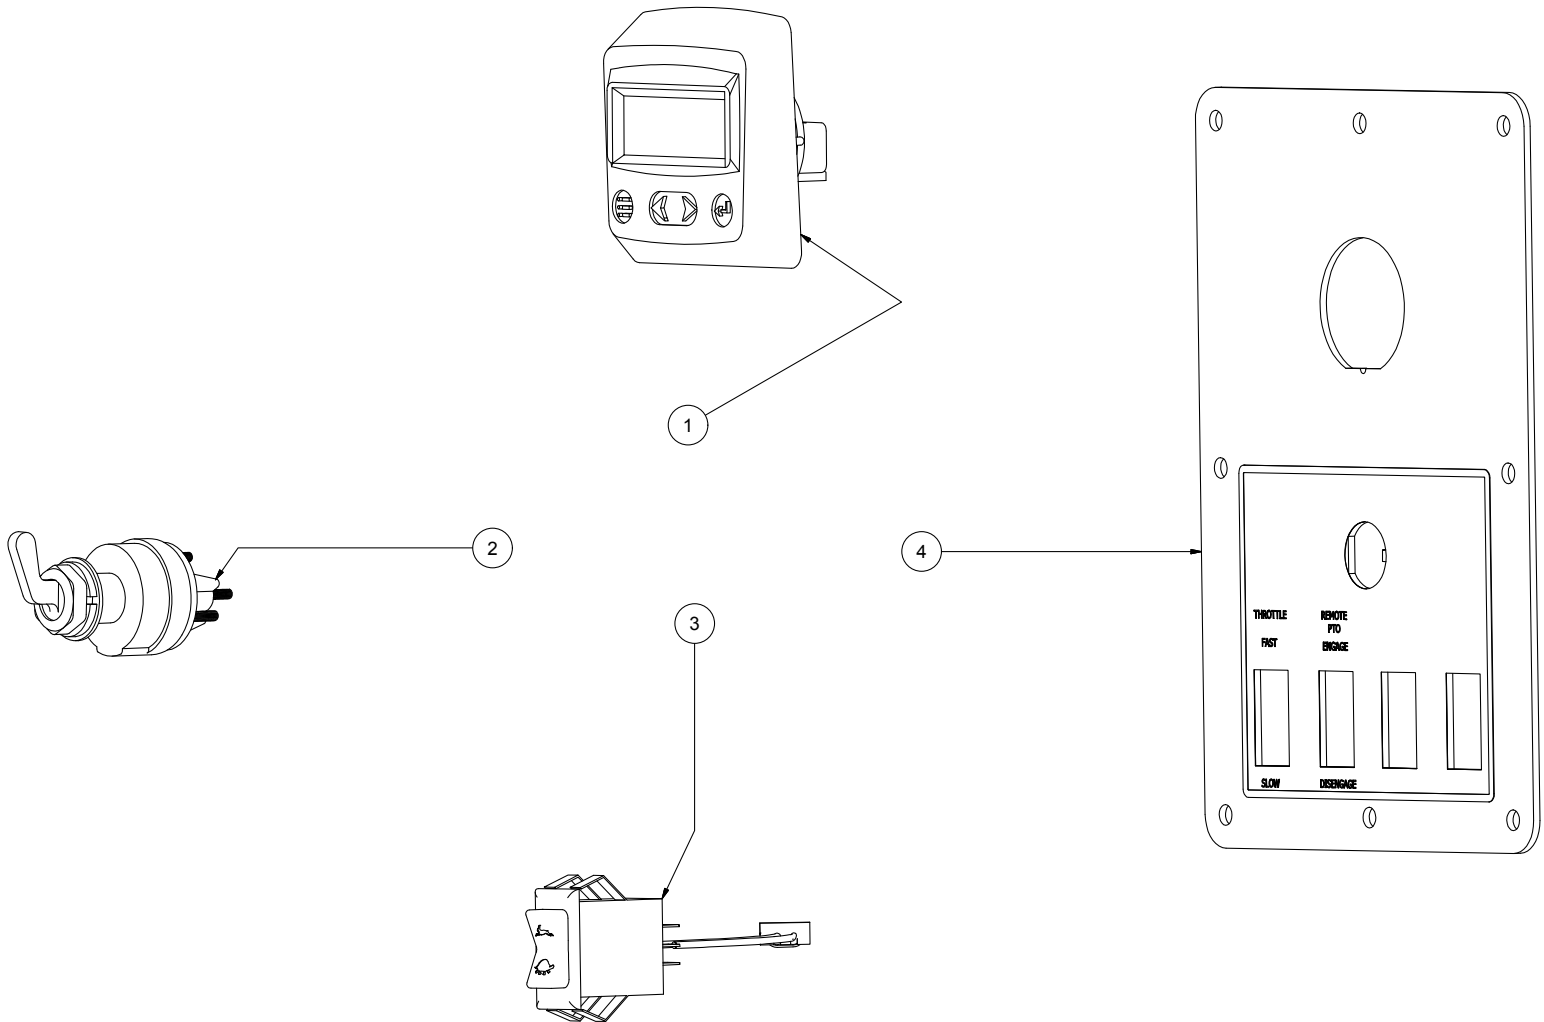

ITEM #	PART NUMBER	DESCRIPTION
1	PV101C	Murphy Display
2	31.253	Ignition Switch
3	RE192470	Throttle Rocker Switch
4	4045.2112H	Panel
NS	4045.2002	Harness for Power View Display


6.2 Air Cleaner Group

Approx. 08/96 and after

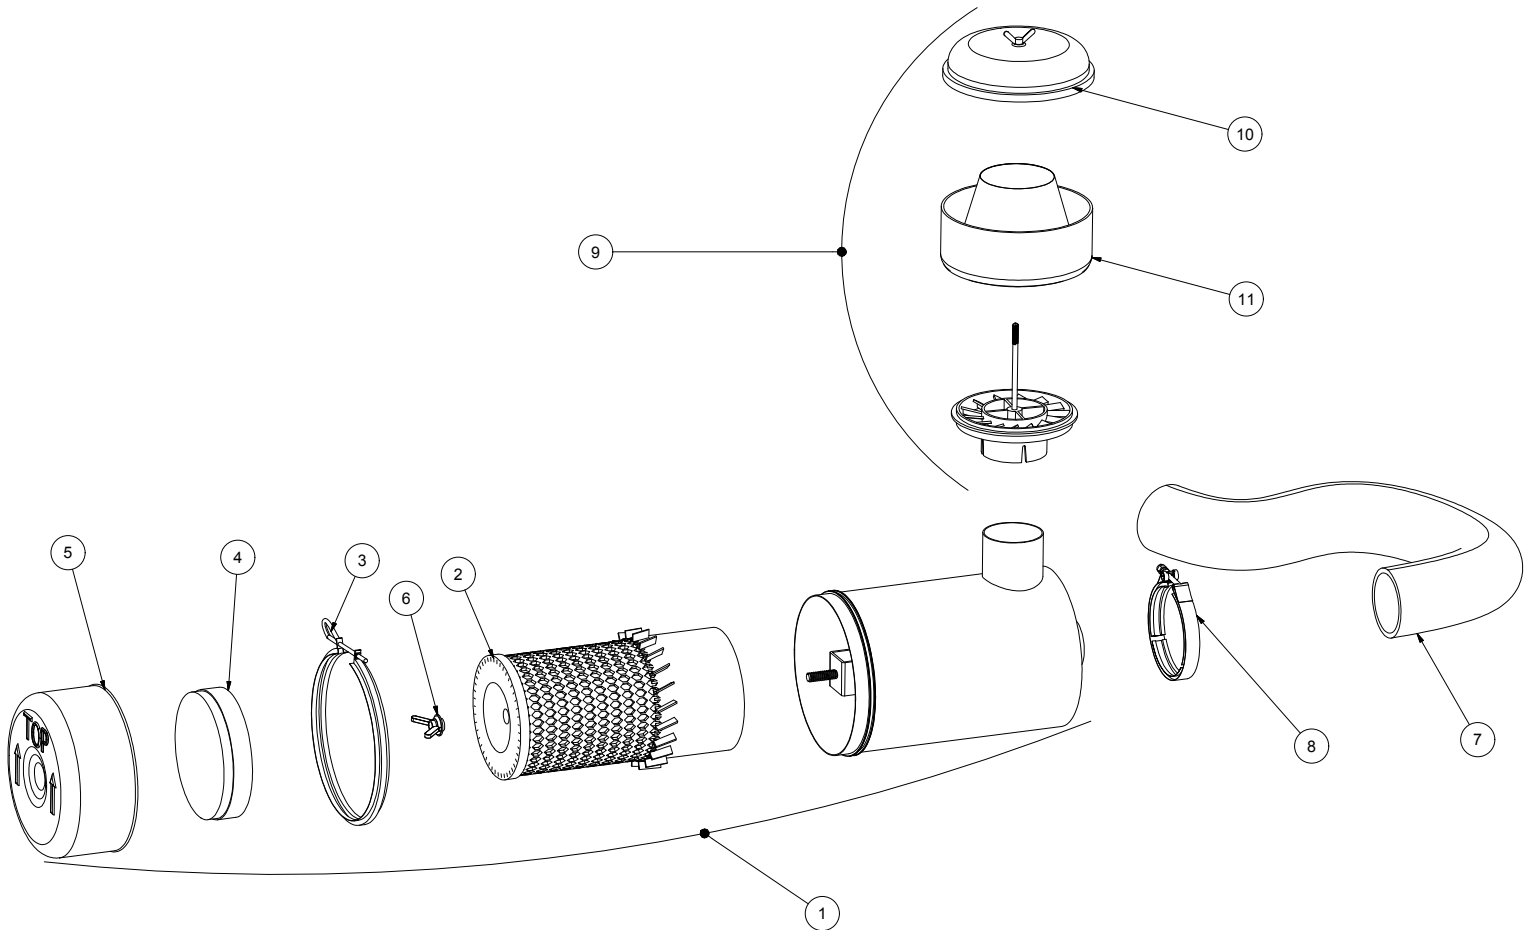

ITEM #	PART NUMBER	DESCRIPTION
1	UU-G080023	Air Cleaner Assembly
2	... P18105.4	... Filter Element
3	... P003951	... Clamp
4	... P102980	... Rubber Baffle
5	... P103113	... Dust Cap
6	... P101870	... Wing Nut
7	STD.2704	Rubber Elbow
8	P004307	Mounting Bands (to sheet metal)
9	H001249	Pre-Cleaner
10	... P020648	... Bowl Cover
11	... P020227	... Bowl


6.3 Strobe Light Parts Group

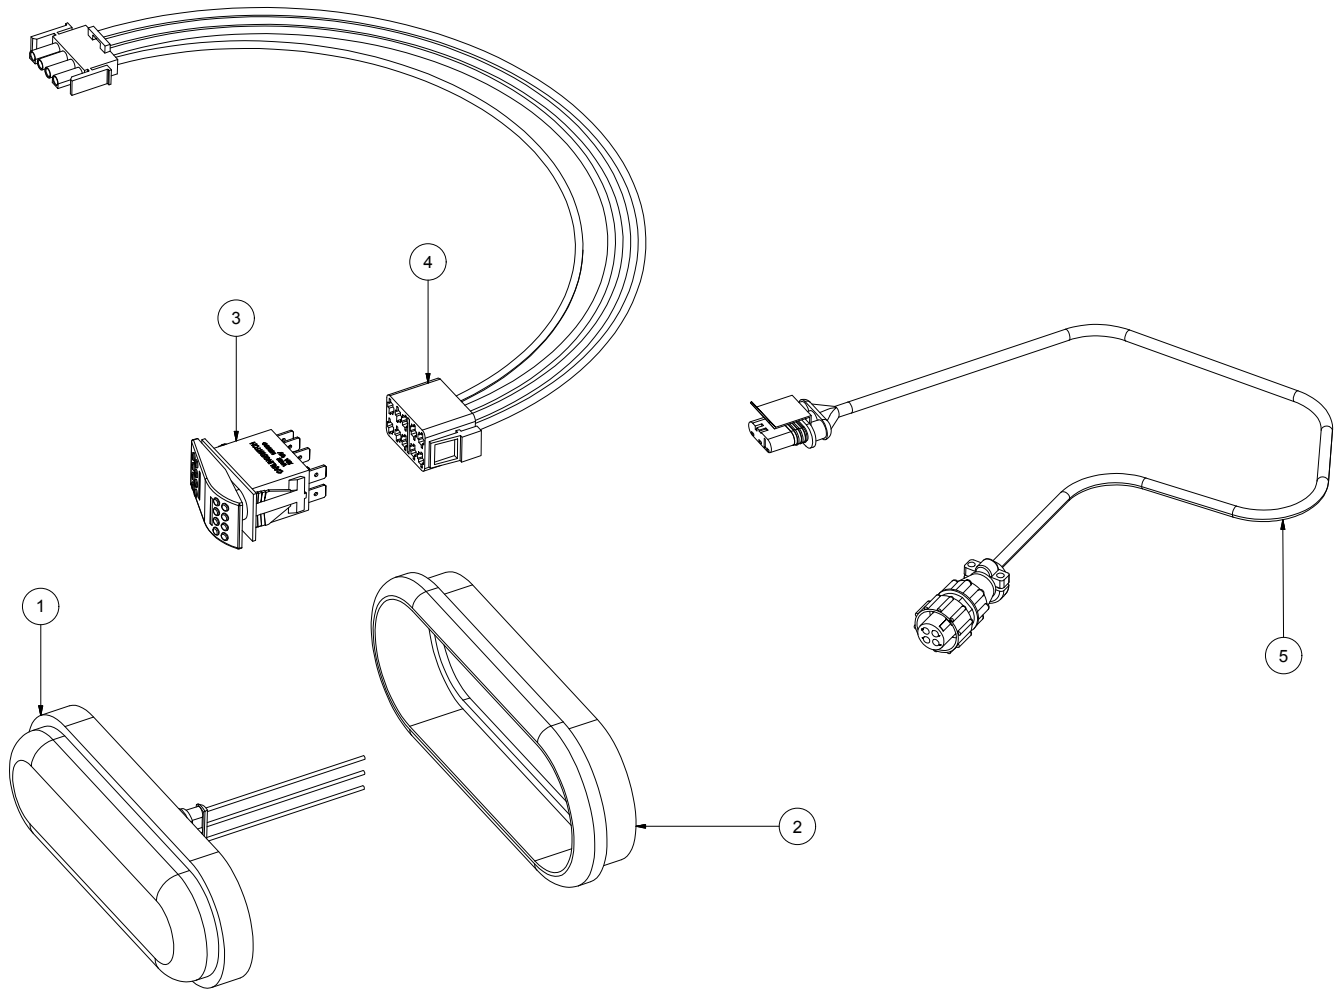

ITEM #	PART NUMBER	DESCRIPTION
1	STD.2213	LED Strobe Light
2	60700	Grommet
3	4045.0021B1	Rocker Switch
4	4045.0024B	Switch Wiring Harness
5	STD.2214	Wiring Harness, rocker switch to light.

6.4 Sheet Metal Group, except LCT650

John Deere 4045T and 6068D June 2005 and after

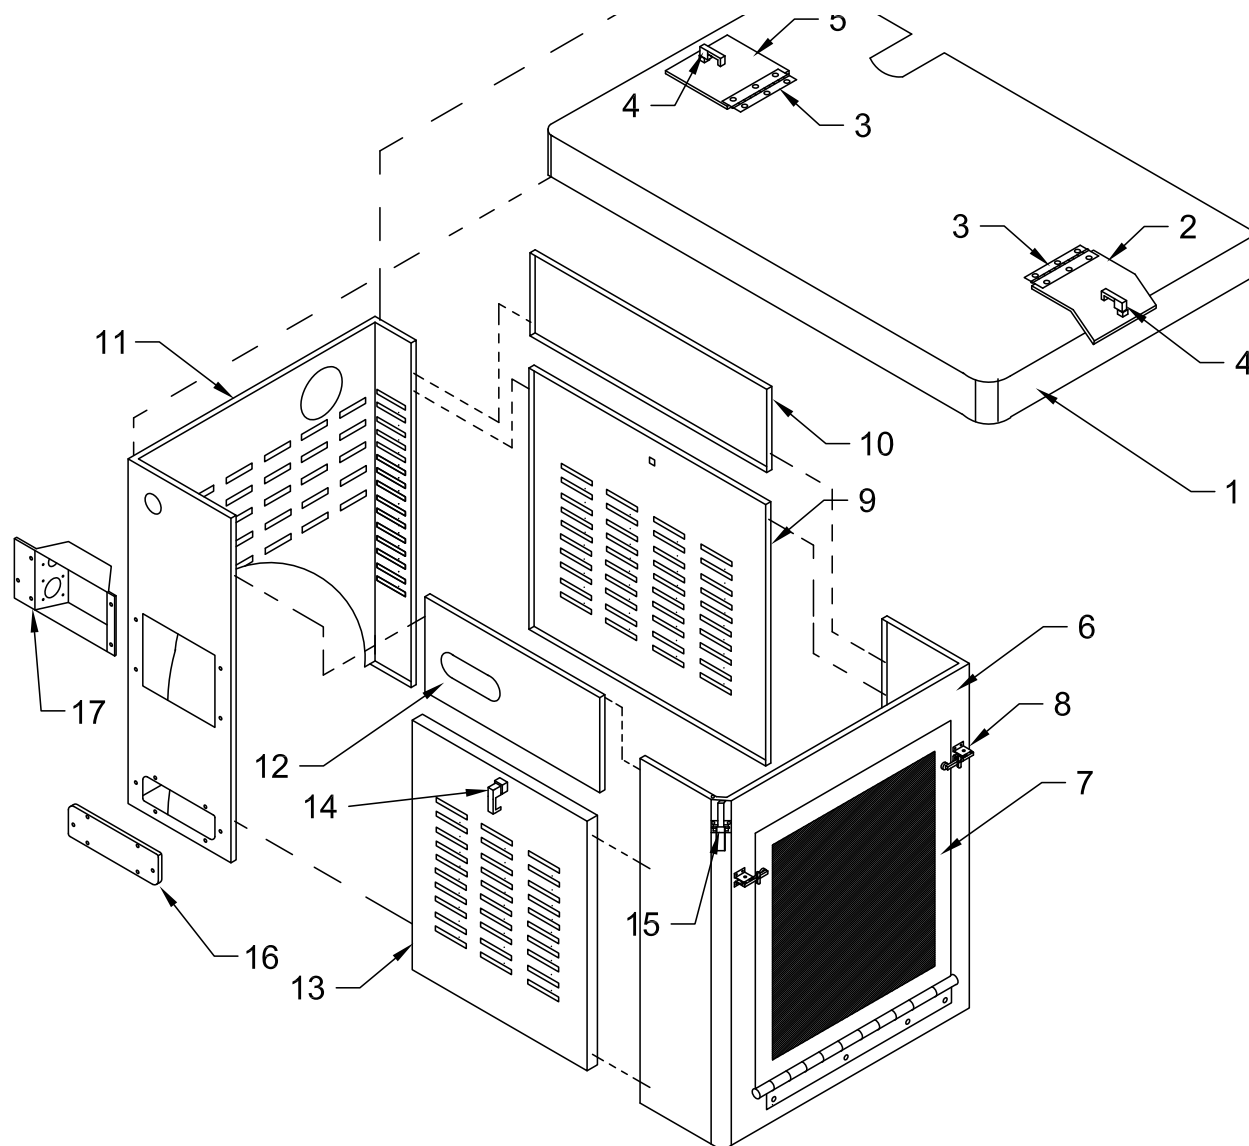


ITEM#	PART NO.	DESCRIPTION
1	4045T.2102 4045T.2102S	Hood, not SCL Hood, SCL800, JD TURBO
2	4045.2102A	Radiator Access Door
3	4045.2102C	Radiator Access Door Hinge
4	LCT60.624A	Lift and Turn Latch
5	4045.2102B	Oil Fill Access Door
6	4045.2101	Front Panel
7	4045.0018	Radiator Screen
8	LCT650.114	Radiator Screen Clamp
9	4045.2109	Panel Door, LH

ITEM#	PART NO.	DESCRIPTION
10	4045.2106A	Upper Side Panel, LH
11	4045.2112C 4045.2112T	Rear Panel, NOT SCL Rear Panel, SCL
12	4045.2105A	Upper Side Panel, RH
13	4045.2108	Panel Door, RH
14	LCT60.624	Lift and Turn Latch
15	LCT609.602	Overcenter Latch
16	4045.2112F	Cover, Solenoid
17	STD.6304	Wiring Plug Bracket
18	2856.26012	Door Grommet

6.5 Engine Mount Group


John Deere 4045D, 4045T and 6068D after 08/96

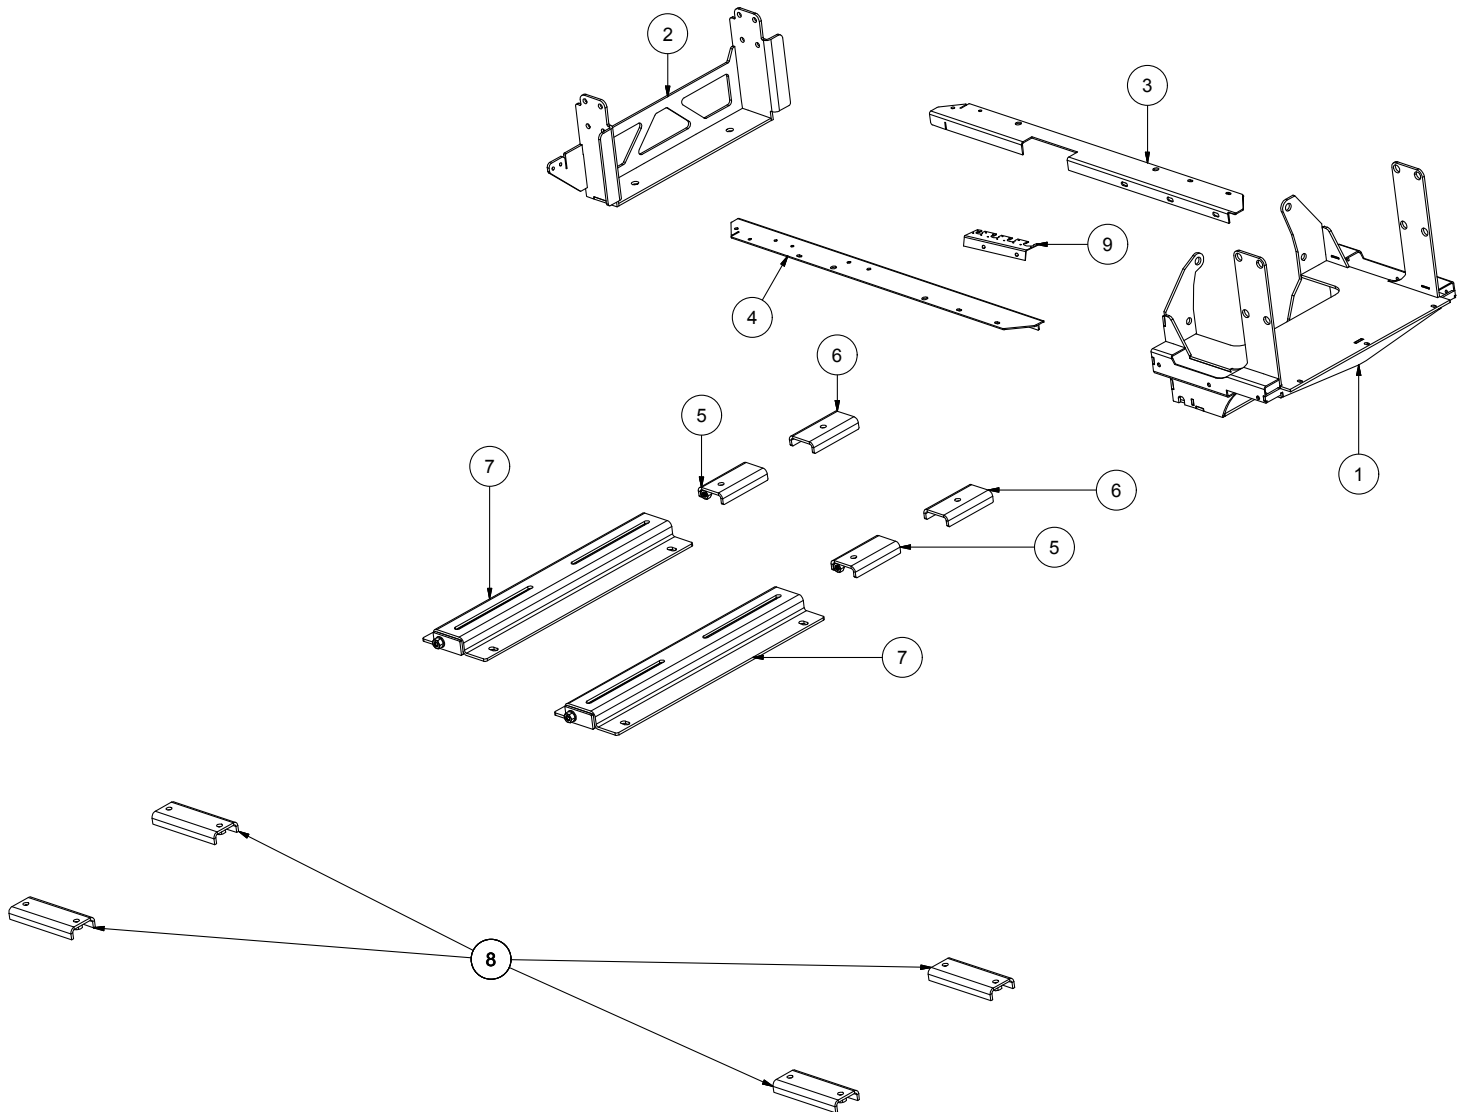

ITEM #	PART NUMBER	DESCRIPTION
1	4045.2151A	Engine Mount, Front
2	4045.2152	Engine Mount, Rear
3	4045.2154	Side Rail, LH, except LCT650
4	4045.2153	Side Rail, RH
5	LCT604.603.1	Engine Adjuster Nut
6	LCT604.603.2	Engine Adjuster Bracket
7	LCT604.603.2	Adjustable Motor Mount
8	LCT604.603.B	Engine Base Adjuster
9	4045.2155	Wiring Harness Bracket

6.6 Muffler (Exhaust) Assembly


LCT's only with John Deere engines (not SCL's) May 2004 and after

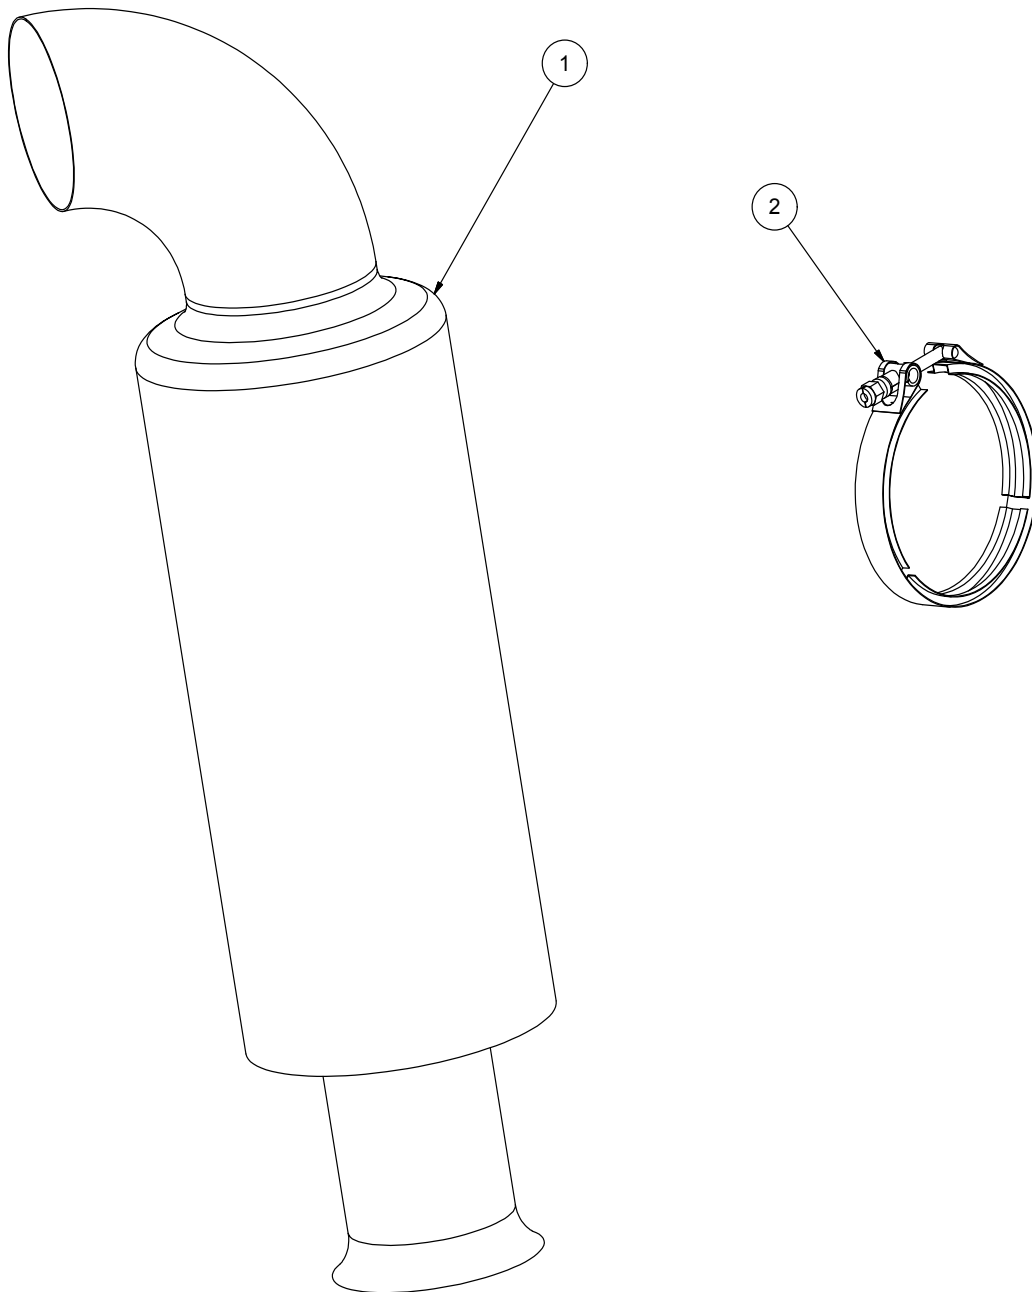

ITEM #	PART NUMBER	DESCRIPTION
1.	650.2701	Muffler
2.	STD.2702	Clamp, muffler

6.7 Radiator Assembly Group

John Deere after August 1996

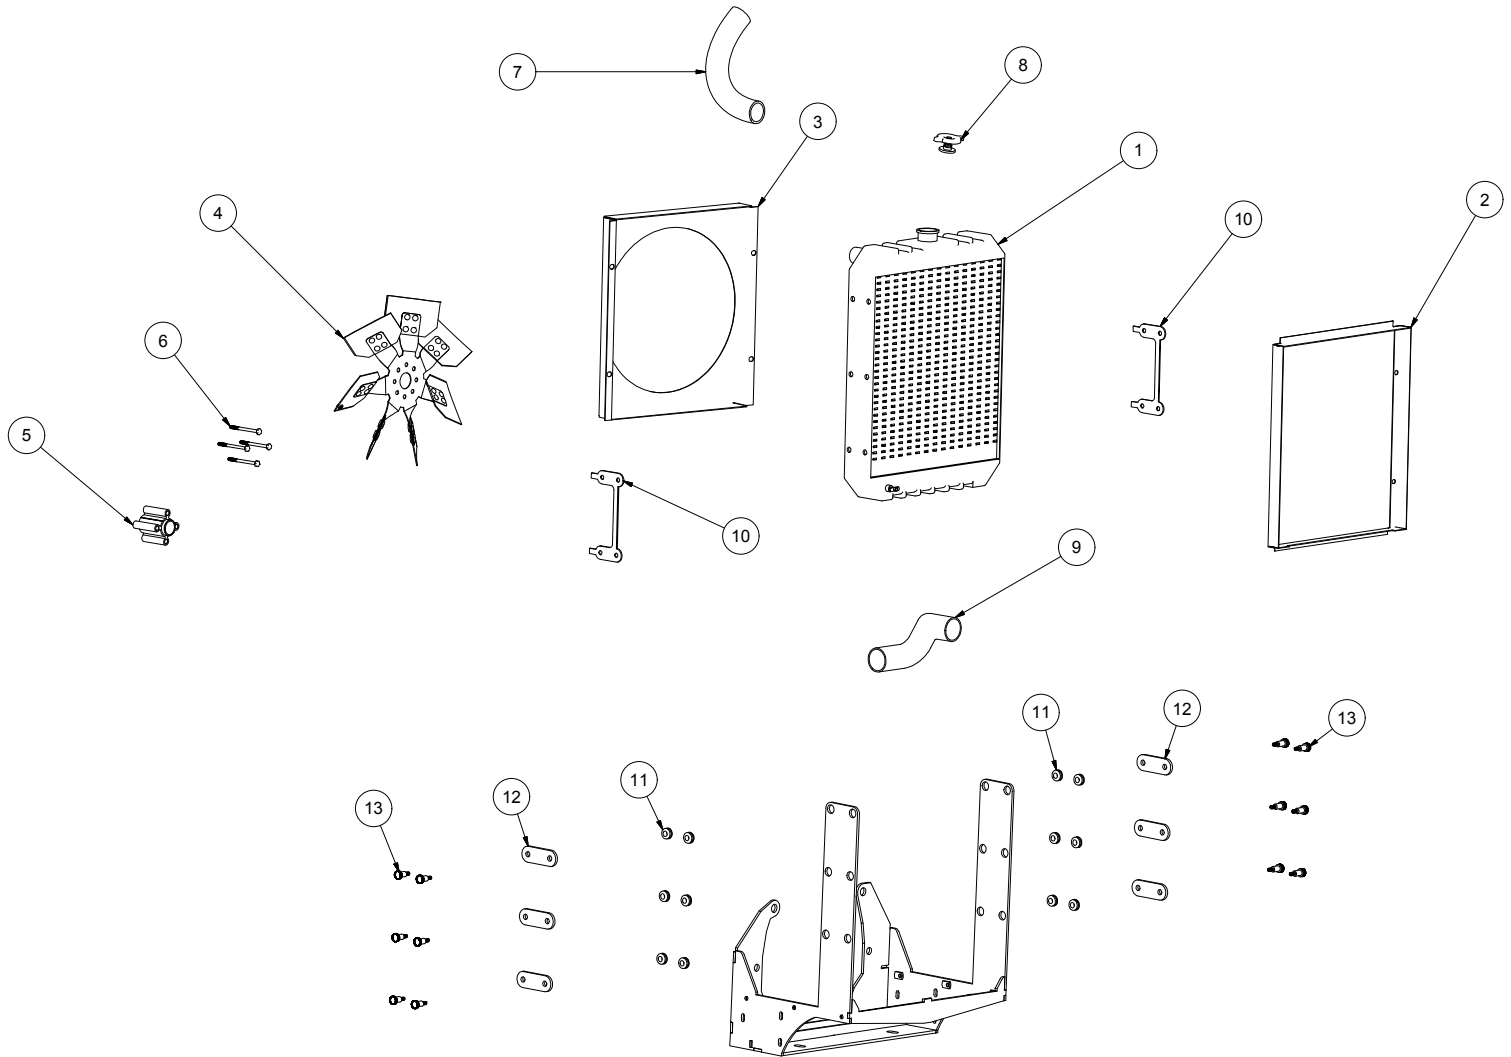

ITEM#	PART NO.	DESCRIPTION
1	4045.9503A	Radiator
2	4045.2190B	Front Fan Shroud
3	4045.2190A	Rear Fan Shroud
4	AT35158.A	Radiator Fan
5	R128443	Fan Spacer
6	G8M8X090	Spacer Bolts, 4 required
7	81331	Upper Radiator Hose


ITEM#	PART NO.	DESCRIPTION
8	C.89C.022.5010	Radiator Cap
9	4045.9681	Lower Radiator Hose
10	4045.2151E	Radiator Shim
11	H9601	Radiator Grommet
12	4045.2151F	Radiator Bolt Bracket
13	ZSB.500.750	Shoulder Bolt

6.8 Engine Senders / Switch Group


John Deere Engines

(Facing Radiator)

Left

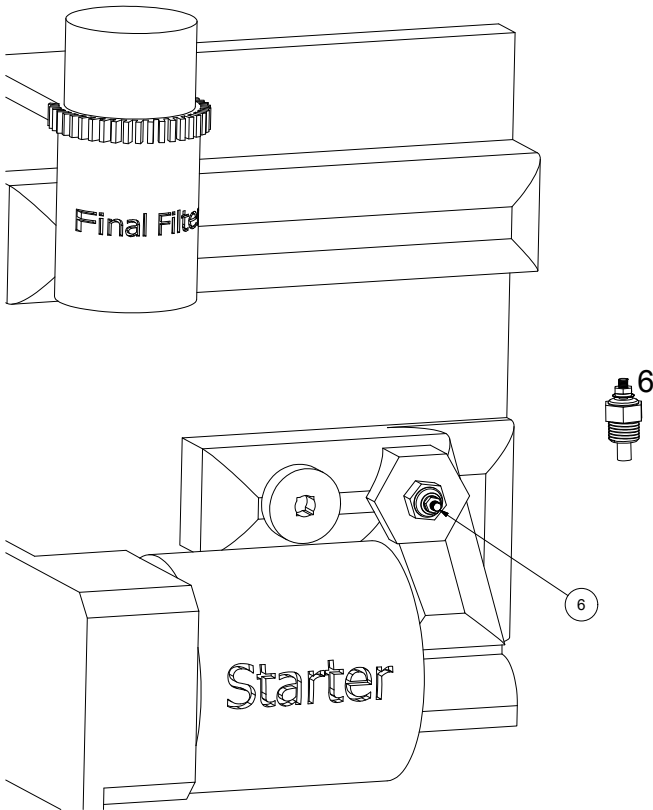


Right

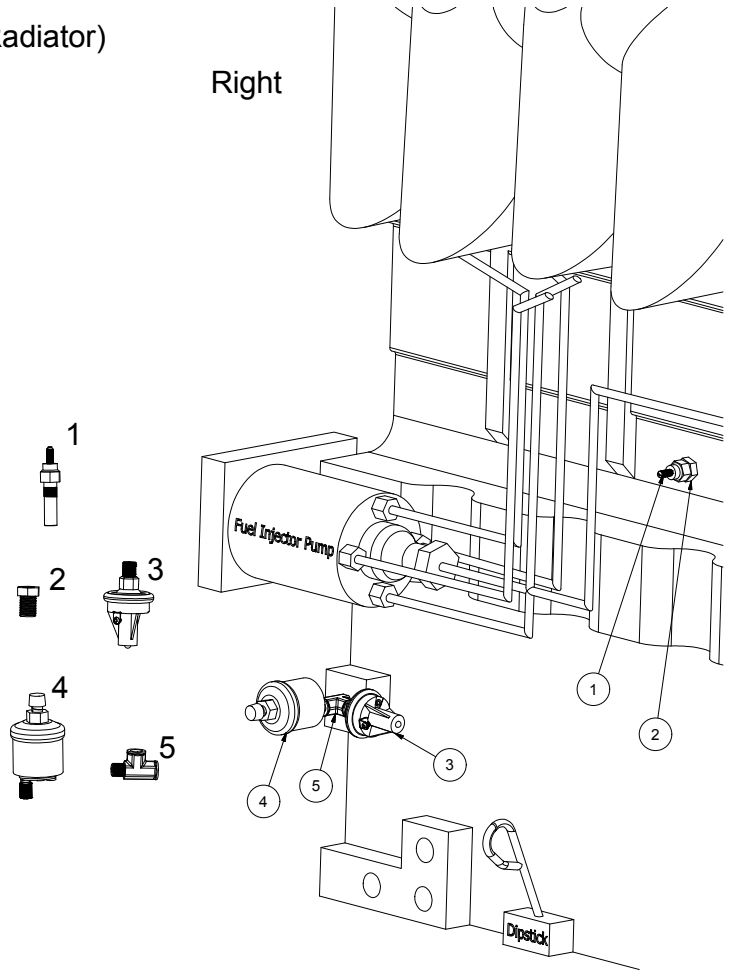

ITEM #	PART NUMBER	DESCRIPTION
1.	35423.049	Water Temperature Switch
2.	C5104.4.2	Fitting for Water Temperature Switch
3.	9603273	Oil Pressure Switch
4.	1500171	Oil Pressure Sender
5.	3750.2*	Bushing for Oil Pressure Switch and Sender
6.	52320.009	Water Temperature Sender

6.9 Battery Group


Standard units 2001 and after

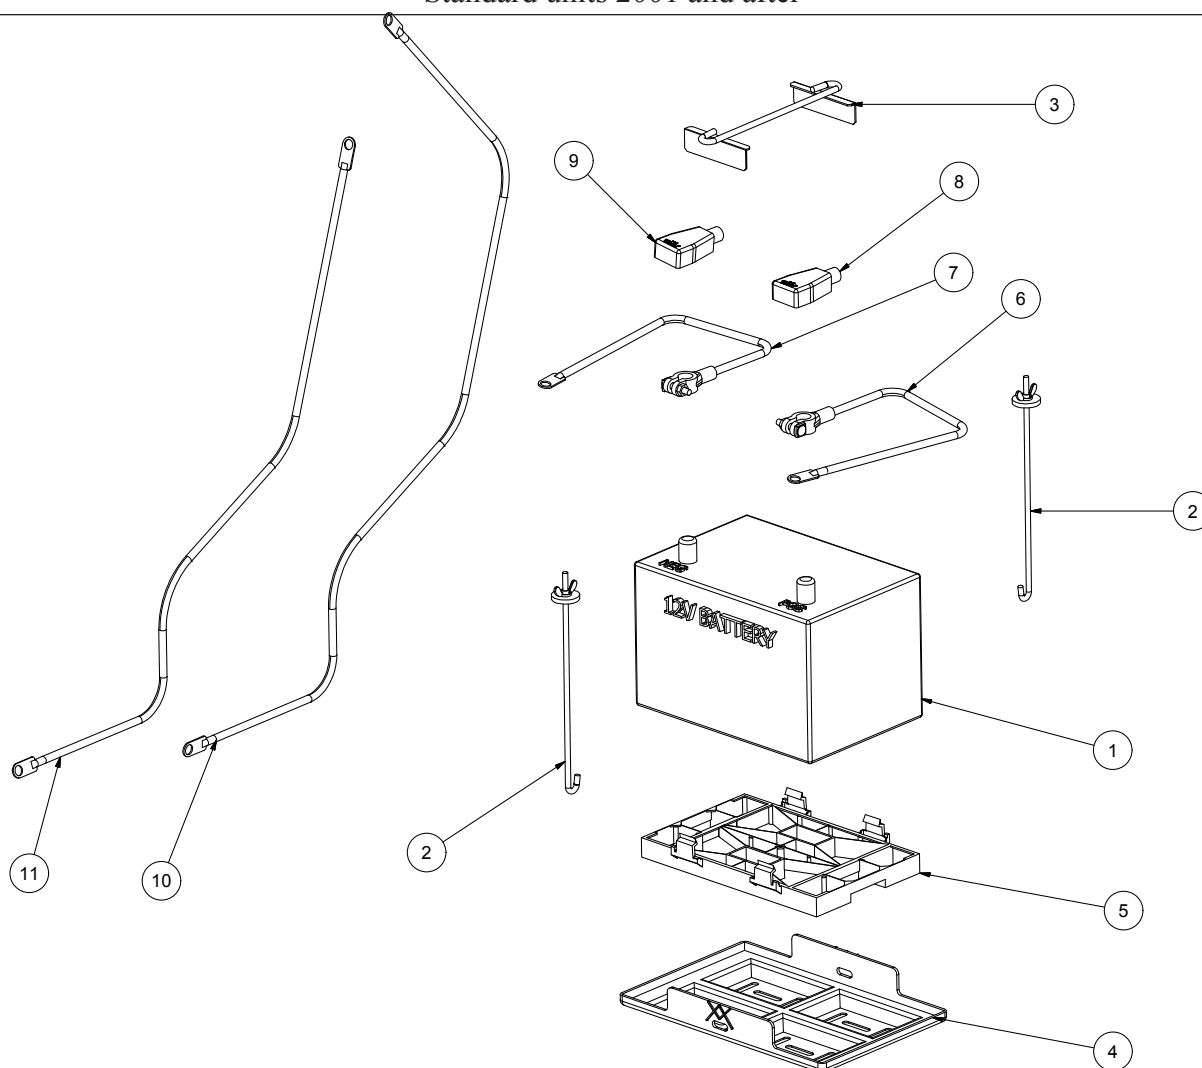

ITEM #	PART #	DESCRIPTION
1.	STD.2200	Battery, not shippable
2.	BHB10J	J-Hook
3.	BHCB	Battery Hold Down Bar
4.	BTS1	Battery Tray, all but SCL's
5.	N/A	N/A
6.	SCL.42B	Positive Battery Cable, Battery to Solenoid - LCT60C/650- 42" long
	LCT600.84B	Positive Battery Cable, Battery to Solenoid - LCT600/6000 - 84" long
7.	LCT60.15B	Negative Battery Cable, all - 15" long
8.	BTC.R	Terminal Cover, Red, all
9.	BTC	Terminal Cover, Black, all
10.	LCT600.72SS MET.60SS LCT60C.153SS	Red Cable to Hydraulic Boom Pump, SCL/600/6000 - 72" long Red Cable to Hydraulic Boom Pump, LCT650, 60" long Red Cable to Hydraulic Boom Pump, LCT60C, 153" long
11.	LCT600.24SS	Ground (Black) Cable to Chassis, 600/6000/60C - 24"

6.10 Engine Miscellaneous Parts Group


John Deere Engines

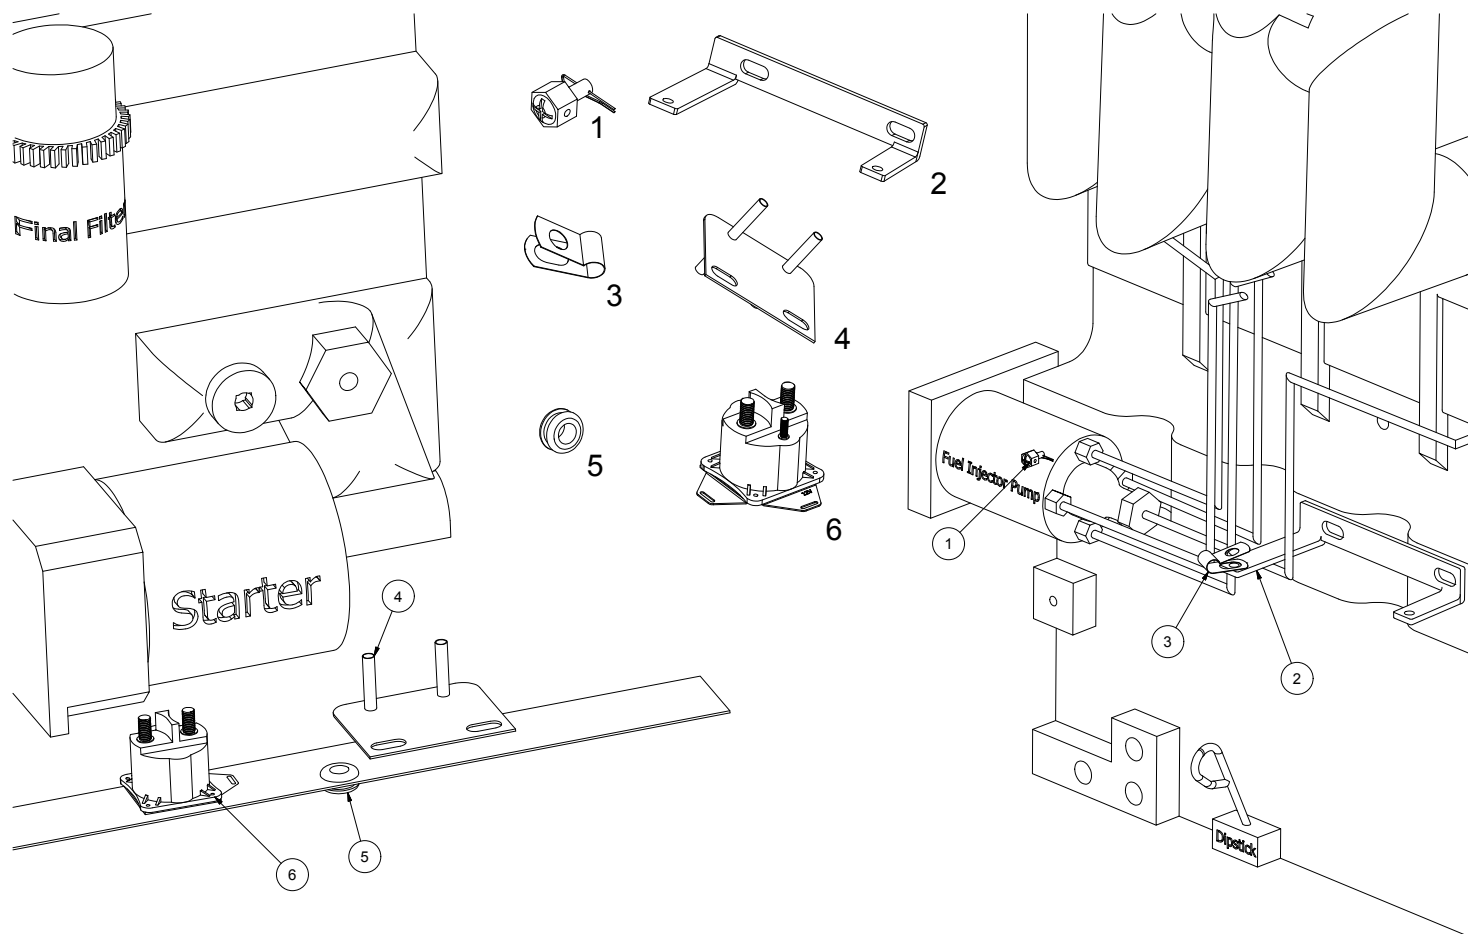

ITEM #	PART NUMBER	DESCRIPTION
1	39011.2	Throttle Connector
2	4045.9101	Throttle Cable Bracket, LCT
3	4045T.9101A	Throttle Cable Clamp
4	400016	Fuel Line Bracket
5	2856.26012	Grommet - Door
6	ST40	Starter Solenoid

6.11 Remote Clutch / Throttle Circuit Board Assembly


October 2005 and after with remote throttle / clutch option

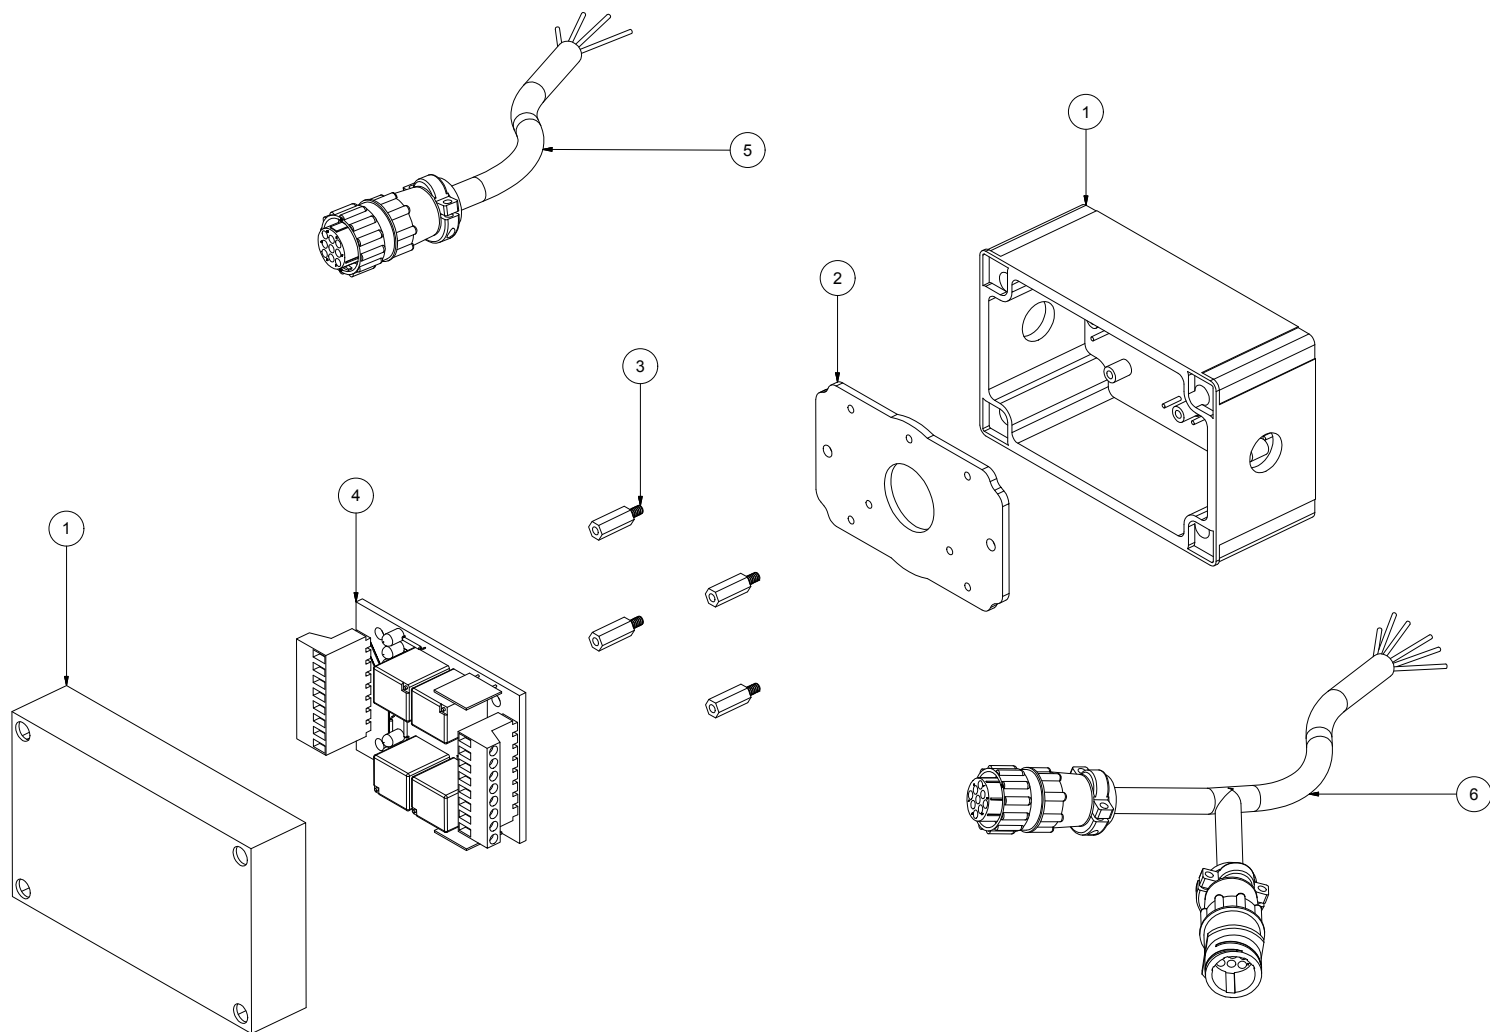

ITEM #	PART NUMBER	DESCRIPTION
*	STD.3000	Entire Assembly
1	only available as an assembly	Box and Cover
2	only available as an assembly	Backing Plate
3	only available as an assembly	Spacer, rquires 4
4	only available as an assembly	Circuit Board
5	only available as an assembly	Actuator Wiring Harness
6	only available as an assembly	Instrument Panel and Nozzle Wiring Harness

6.12 Remote Clutch and Remote Throttle Assembly


after March 2002- ver. 2

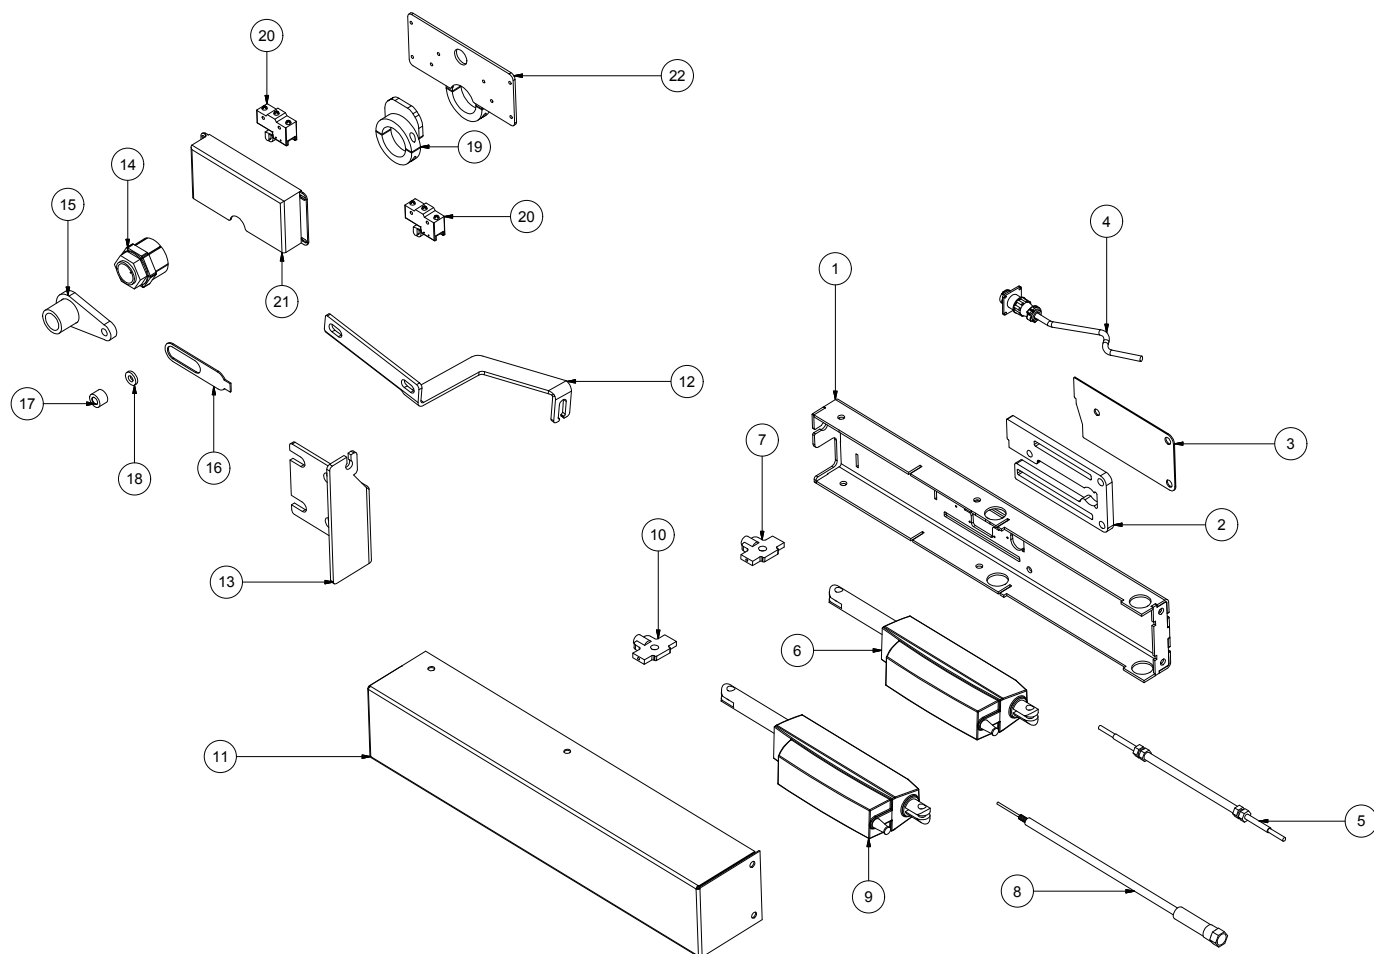

ITEM #	PART NO.	DESCRIPTION
	STD.6550B	Entire Assembly1
1	STD.6551A	Mounting Base
2	STD.6551A.01	Thick Spacer
3	STD.6551A.02	Thin Spacer
4	STD.6566	Wiring Harness
5	STD.6554 STD.6554B	Clutch Cable - Direct Drive Clutch Cable - Belt Drive
6	STD.6556	Clutch Actuator (top)
7	STD.6559	Cable Adaptor - clutch
8	STD.6553 STD.6553B	Throttle Cable - direct drive Throttle Cable - belt drive
9	STD.6557	Throttle Acuator (bottom)
10	STD.6558	Cable Adaptor-throttle

ITEM #	PART NO.	DESCRIPTION
11	STD.6552A	Cover
12	4045.6565	Throttle Cable Bracket
13	4045.6564	Clutch Cable Bracket
14	STD.6563	Torque Coupling
15	STD.6562	Coupling Sleeve
16	STD.6560	PTO Cable Adaptor
17	STD.6561	Roller Bearing
18	STD.6568	Spacer Washer
19	STD.6569	Collar Cam (3x only)
20	800.434	Limit Switch (3x only)
21	STD.6571	Cover
22	STD.6570	Limit Switch Bracket

6.13 Chaffe Eliminator Assembly, hinged

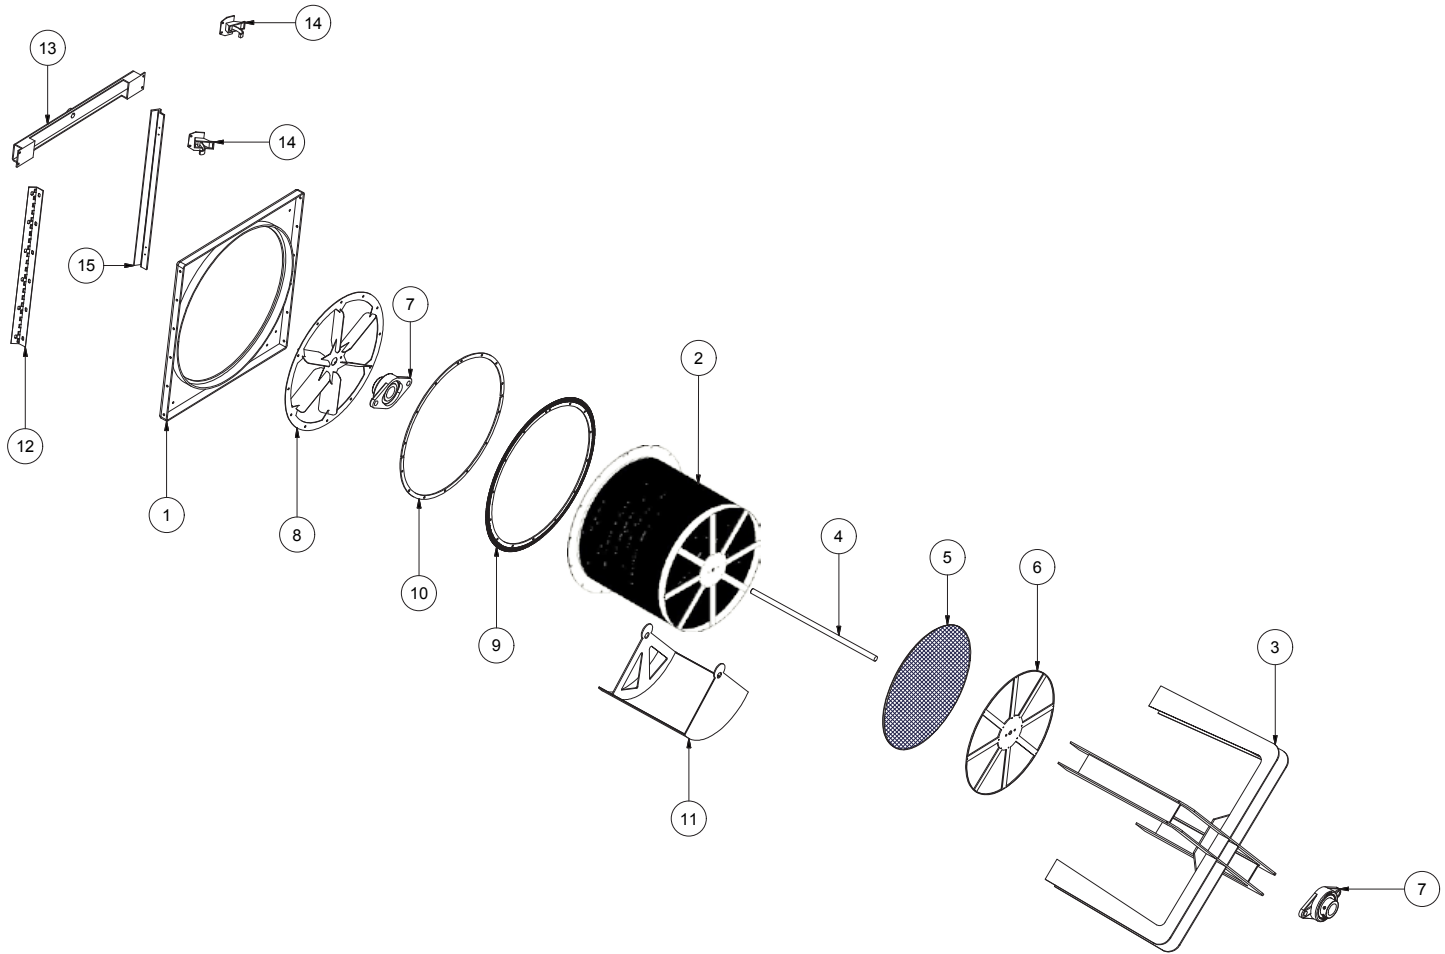

ITEM #	PART NO.	DESCRIPTION
1	RAS.102	Base Frame and Support Frame Assembly (#1 and #3 welded together.
2	RAS.103	Barrell Assembly
3	RAS.104	Support Frame, thru 04/02; after May 2002 must order RAS.102A
4	RAS.105	Shaft
5	RAS.106	Mesh Screen
6	RAS.107	Screen Holder
7	RAS.108	Flange Bearing

ITEM #	PART NO.	DESCRIPTION
8	RAS.101	Fan
9	RAS.109	Strip Brush
10	RAS.110	Brush Holder
11	RAS.111	Air Deflector
12	RAS.112	Hinge
13	RAS.113	Shaft Bracket
14	LCT609.602	Over center Latch, all but LCT650
	LCT650.114	Destaco Latch, not shown, LCT650 only
15	RAS.114	Angle Frame, LCT650 only



7-0

7.0 CLUTCH GROUP


7.0 CLUTCH GROUP

7-0	88
7.1 AutoHD PTO Clutch Group.....	89
7.2 AutoHD PTO Assembly Group	90
7.3 AutoHD PTO Linkage Group	91
7.4 Clutch Assist Group	92
7.5 Kraft Fluid Drive Group (Optional).....	93
7.6 Kraft Fluid Drive Installation (Optional).....	94
7.7 Kraft Fluid Drive Breakdown (Optional)	95
7.8 Kraft Fluid Drive Common Parts (Optional).....	96

CLUTCH GROUP

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823


7.1 AutoHD PTO Clutch Group

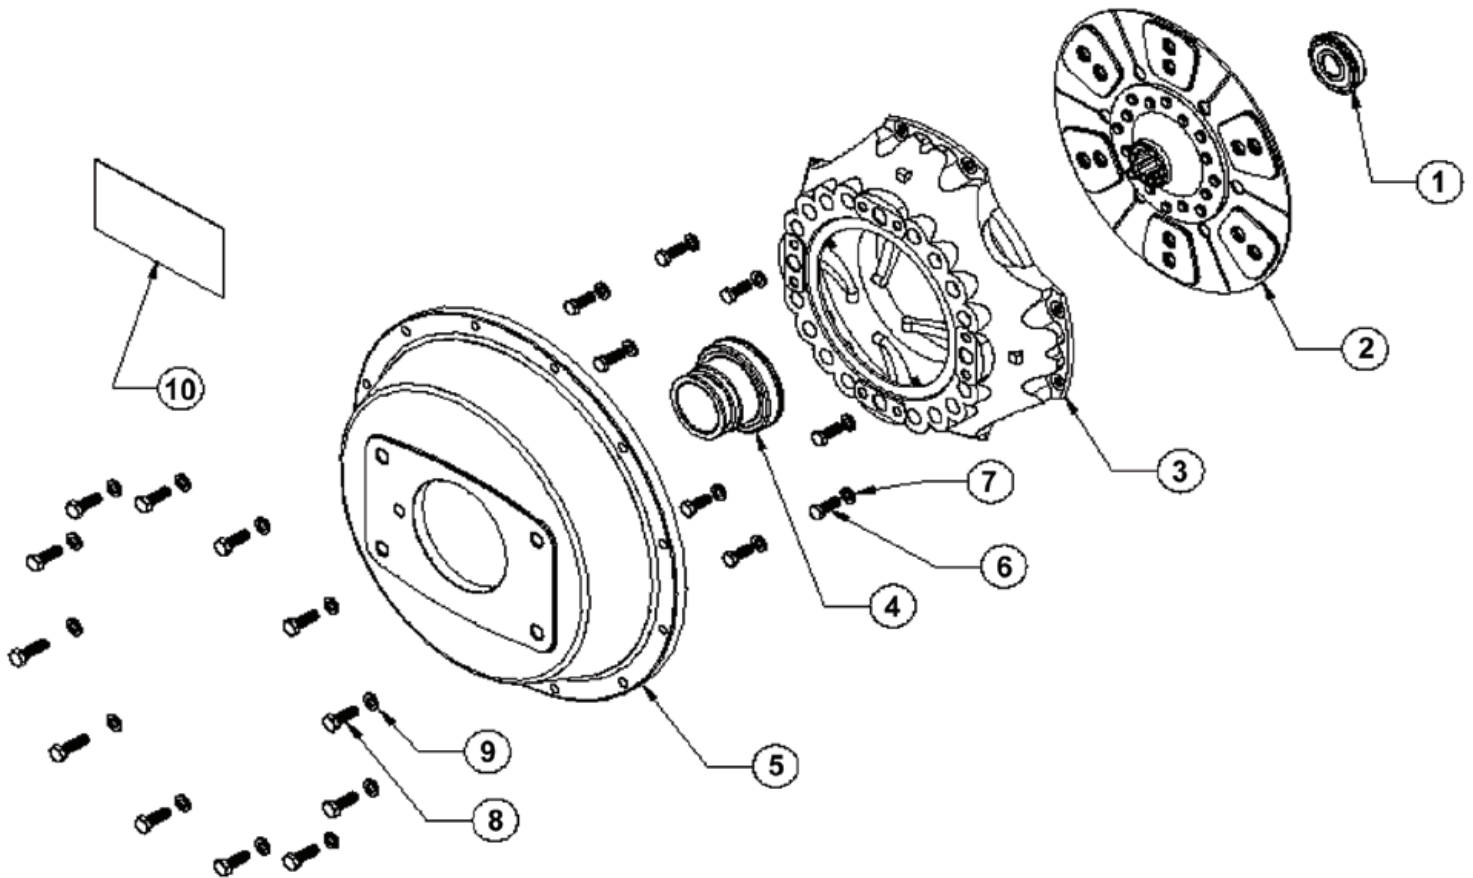

ITEM #	PART NUMBER	DESCRIPTION
*	OD-48080050.8OF	*Complete PTO and Clutch Assembly 03/08 -
1	OD-41500217	Pilot Bearing, JD
2	OD-41500237	Clutch Disk
3	OD-361919	Pressure Plate, 03/08 -
4	OD-41500248	Throw out Bearing, 03/08 -
5	OD-41500172	Clutch Cover
6	OD-45000054	Bolt, 3/18-16 x 1"
7	OD-45000063	Lock Washer, 3/8"
8	OD-45000226	Bolt, M10-1.50 x 35MM
9	OD-45000046	Lock Washer, M10
10	OD-41500216	Decal, Diesel Clutch

7.2 AutoHD PTO Assembly Group


February 2006 - Present

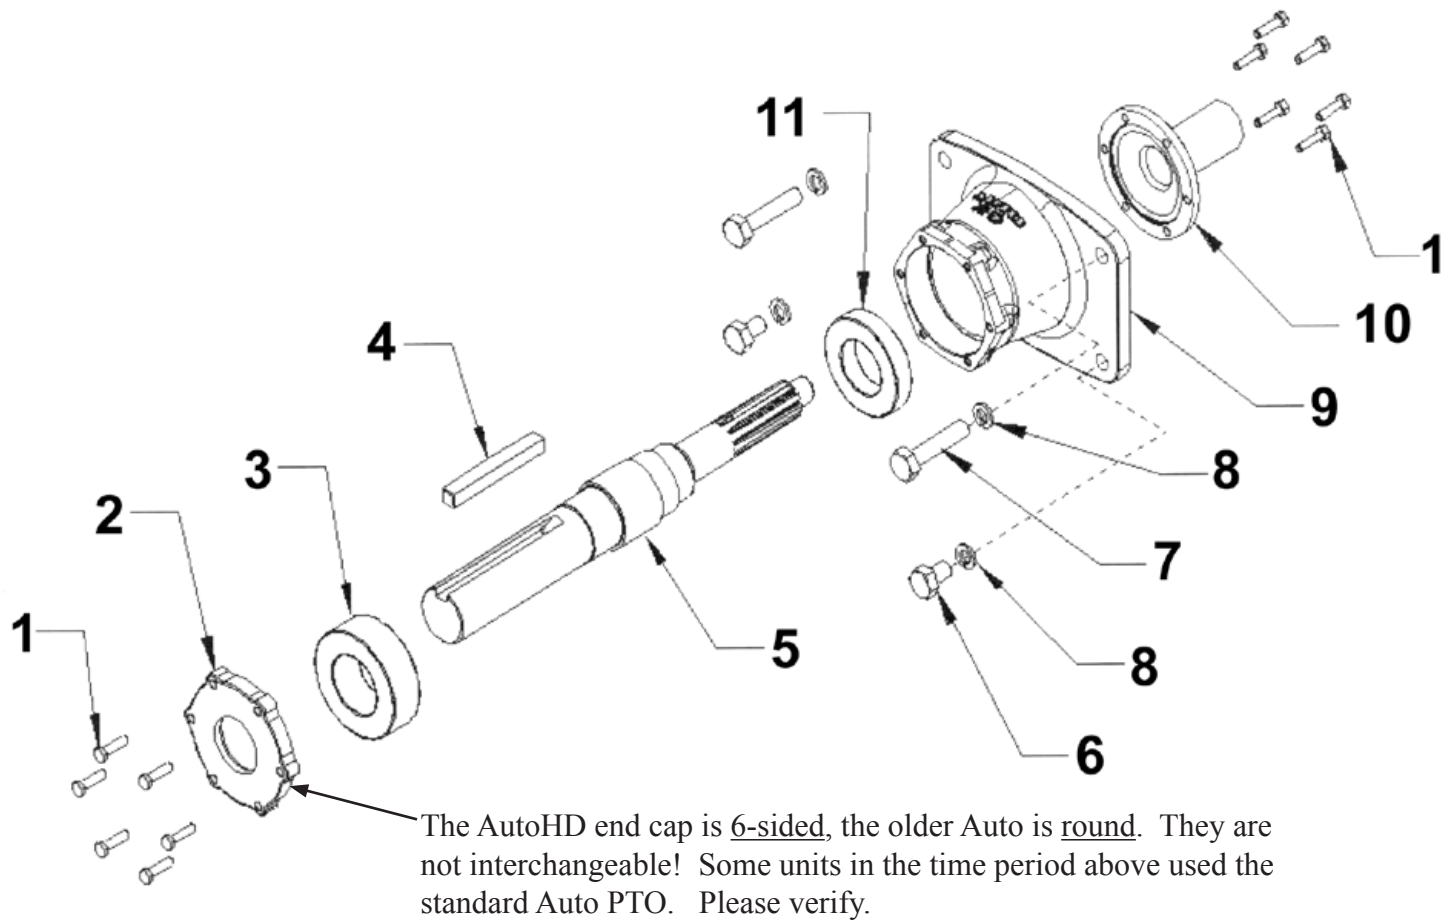

ITEM #	PART NUMBER	DESCRIPTION
*	OD-41500252	Complete PTO Assembly (items 1 -11,13)
**	OD-48080050.8OF	**Complete PTO & Clutch Assembly
1	OD-45000212	Bolt, 5/16-18 x 1-1/4" HD model
2	OD-41500205M	Bearing Retainer Cover
3	OD-41500206	PTO Bearing, Rear
4	OD-LCT650.601K OD-LCT650.601F	Key, Stepdown--direct drive units only Key, belt drive units only
5	OD-41500203	PTO shaft
6	OD-45000105	Bolt, 9/16-12 x 1- 3/4"
7	OD-45000177	Bolt, 9/16-12 x 3"
8	OD-45000103	Lock Washer, 9/16"
9	OD-41500204	PTO Housing
10	OD-41500242	PTO Collar, 03/08 - present
11	OD-41500207	PTO Bearing, Front

7.3 AutoHD PTO Linkage Group

February 2006 - Present

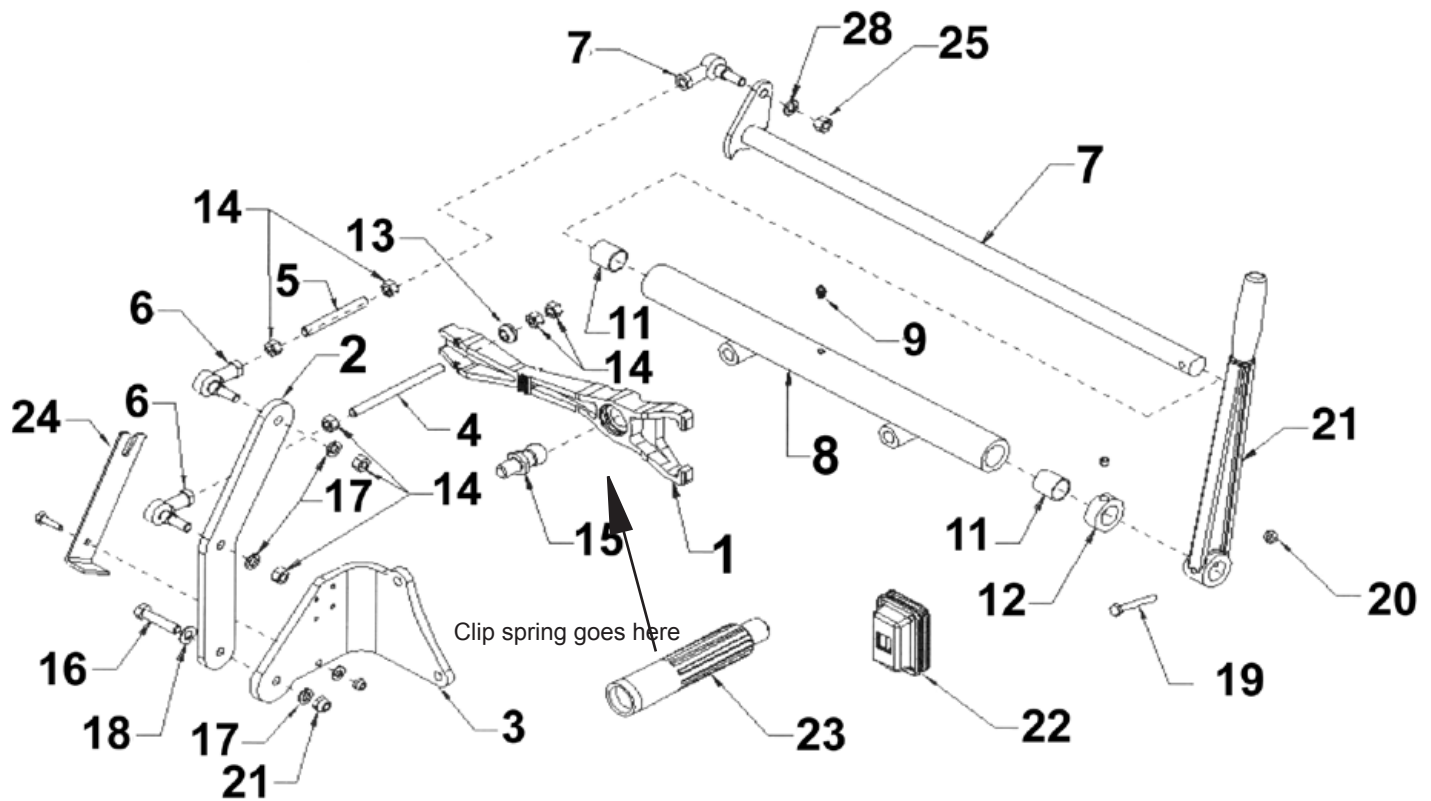


ITEM #	PART NO.	DESCRIPTION
1	41500251	Fork, 03/08-
NS	41500174	Clip Spring in Fork
NS	41500999	Return Spring
2	41500095	Linkage Bracket
3	41500241	Linkage Bracket
4	41500065	Linkage Rod
5	41500066	Linkage Rod
6	41500019	Linkage Rod End
7	see below	Shaft, Lever
8	41500102	Shaft Housing, AutoHD
9	41500043	Grease Zerk
10	NLA	NLA

ITEM #	PART NO.	DESCRIPTION
11	41500045	Shaft Bushing
12	41500046	Shaft Collar
13	41500030	Rocker Ball
14	45000050	Nut, 3/8 - 16
15	41500072	Pivot Ball 03/08-
16	45000177	Bolt, 3/8 - 16 x 1 3/4"
17	45000063	Lock Washer, 3/8"
18	45000064	Flat Washer, 3/8"
19	45000012	Bolt, 1/4 - 28 x 2"
20	45000015	Locknut, 1/4 - 28
21	45000044	Handle
22	45000175	Boot
23	41500164	Alignment Tool
24	41500103	Alignment Tool

7.4 Clutch Assist Group

Auto PTO- John Deere 4045D/T (11/00 -)

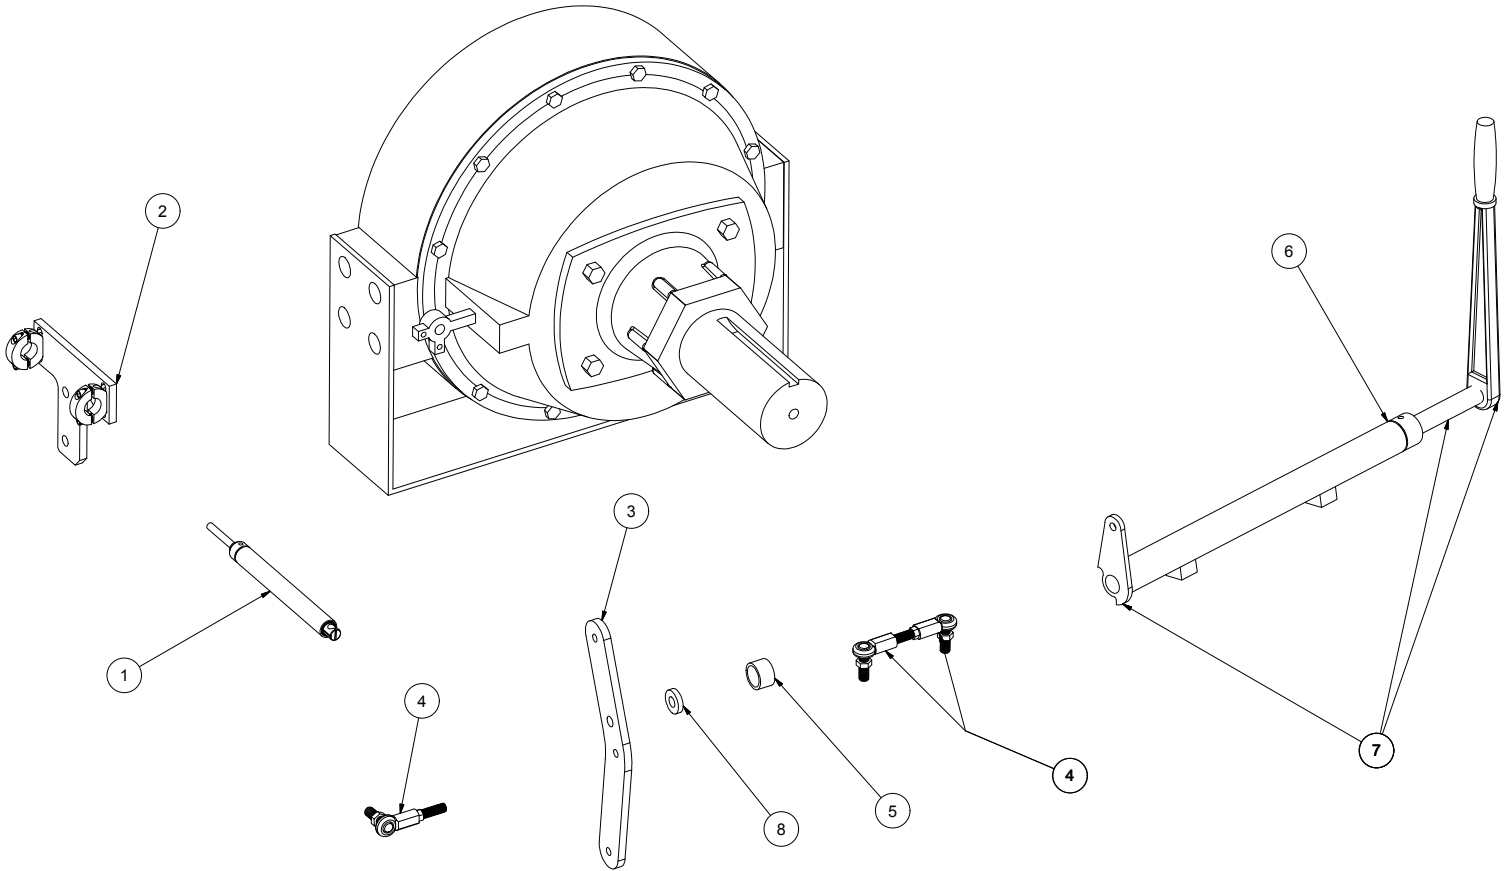

ITEM #	PART NUMBER	DESCRIPTION
1	400050.A	Clutch Cylinder
2	400054.C	Cylinder Support Bracket, JD
3	41500095	Clutch Bracket Arm, Auto HD
4	41500019	Linkage, Rod end
	41500019A	Linkage, Threaded insert
5	400050.C1	Bearing
6	41500102	Pivot Shaft Tube, Auto HD
7	41500041A.HD	Pivot Shaft,
8	400050.C2	Spacer

7.5 Kraft Fluid Drive Group (Optional)

Fluid Drive Coupler (Optional)

TRANSFLUID

trasmissioni industriali



1000B Northbrook Parkway

Suwanee, GA 30024

Ph: 770-963-6288

Fax: 770-963-9678

E-mail: transfluid@kraftpower.com

Massachusetts - New Jersey - New York - North
Carolina - Ohio - Pennsylvania

INSTALLATION AND MAINTENANCE MANUAL

THIS MANUAL CONTAINS INSTRUCTIONS FOR
INSTALLATION, START UP, FUNCTIONING, AND
MAINTENANCE KFB POWER TAKE OFFS.

WE SUGGEST THAT ANY PERSON WHO IS
RESPONSIBLE FOR USE AND/OR MAINTENANCE
SHOULD BE PROVIDED WITH THIS MANUAL. THE
RESPECT OF RULES, CONTAINED IN THIS MANUAL IS
MANDATORY FOR WARRANTY VALIDITY.

WE REQUIRE THAT, FOR SPARE PARTS ORDERS, IT
IS IMPORTANT TO PROVIDE, BESIDES PART NUMBER
AND QUANTITY: MODEL, SPECIFICATION No AND
SERIAL No WHICH ARE STAMPED ON NAME PLATE.

Type :

Spec. nr. :

Serial nr. :

drive with us

13KFBD

7.6 Kraft Fluid Drive Installation (Optional)

Fluid Drive Coupler (Optional)

TRANSFLUID trasmissioni industriali	 13 KFB MANUALE INSTALLAZIONE, USO E MANUTENZIONE INSTALLATION,USE AND MAINTENANCE MANUAL	TF 6217 Rev.0 1/3																		
<p>Questo manuale contiene le istruzioni per l'installazione, l'avviamento, l'uso e la manutenzione del giunto idrodinamico tipo KFB.</p> <p>CONSIGLIAMO CHE I RESPONSABILI DELL'USO E DELLA MANUTENZIONE DEL KFB, VENGANO DOTATI DEL PRESENTE MANUALE. IL NON RISPETTO DELLE REGOLE CITATE IN QUESTO MANUALE, PROVOCA IL DECADERE DELLA GARANZIA.</p> <p>Ricordiamo che, per ordinare le parti di ricambio, e' importante specificare, oltre al numero di dettaglio e quantita' richiesta, anche: TIPO - N° di SPECIFICA - N° di SERIE del KFB, che si trovano stampigliati sulla targhetta di identificazione a bordo macchina.</p> <p><i>This manual contains instructions for installation, start up, working, and maintenance of KFB fluid coupling.</i></p> <p>WE SUGGEST THAT ANY PERSON WHO IS RESPONSIBLE FOR USE AND/OR MAINTENANCE, SHOULD BE PROVIDED WITH THIS MANUAL. THE RESPECT OF RULES, CONTAINED IN THIS MANUAL, IS MANDATORY FOR WARRANTY VALIDITY.</p> <p><i>We recall that, for spare parts order, it is important to provide, besides detail number and quantity, even: TYPE - SPECIFICATION Nr. - SERIAL Nr. of KFB that are stamped on identification metal plate.</i></p>																				
<table border="1"><thead><tr><th>DESCRIZIONE</th><th>DESCRIPTION</th></tr></thead><tbody><tr><td>Il KFB e' un giunto idrodinamico la cui parte esterna, motrice, e' collegata al volano di un motore endotermico mediante un giunto elastico ed il cui albero di uscita e' supportato da un cuscinetto orientabile a rulli, lubrificato ad olio, alloggiati in una campana di supporto flangiata al coprivolano del motore. Un secondo cuscinetto, alloggiato nel volano, sostiene l'albero di uscita dal lato motore. Il KFB e' adatto per applicazioni con puleggia od i linea.</td><td>KFB is a fluid coupling having the outer driving impeller connected to the internal combustion engine flywheel through an elastic coupling. The output shaft is supported by a spherical roller bearing, oil lubricated, fitted in a cover flanged to the engine flywheel housing. Another bearing, fitted into the flywheel, supports the output shaft at the engine side. The KFB is suitable for pulley or in line applications.</td></tr></tbody></table>			DESCRIZIONE	DESCRIPTION	Il KFB e' un giunto idrodinamico la cui parte esterna, motrice, e' collegata al volano di un motore endotermico mediante un giunto elastico ed il cui albero di uscita e' supportato da un cuscinetto orientabile a rulli, lubrificato ad olio, alloggiati in una campana di supporto flangiata al coprivolano del motore. Un secondo cuscinetto, alloggiato nel volano, sostiene l'albero di uscita dal lato motore. Il KFB e' adatto per applicazioni con puleggia od i linea.	KFB is a fluid coupling having the outer driving impeller connected to the internal combustion engine flywheel through an elastic coupling. The output shaft is supported by a spherical roller bearing, oil lubricated, fitted in a cover flanged to the engine flywheel housing. Another bearing, fitted into the flywheel, supports the output shaft at the engine side. The KFB is suitable for pulley or in line applications.														
DESCRIZIONE	DESCRIPTION																			
Il KFB e' un giunto idrodinamico la cui parte esterna, motrice, e' collegata al volano di un motore endotermico mediante un giunto elastico ed il cui albero di uscita e' supportato da un cuscinetto orientabile a rulli, lubrificato ad olio, alloggiati in una campana di supporto flangiata al coprivolano del motore. Un secondo cuscinetto, alloggiato nel volano, sostiene l'albero di uscita dal lato motore. Il KFB e' adatto per applicazioni con puleggia od i linea.	KFB is a fluid coupling having the outer driving impeller connected to the internal combustion engine flywheel through an elastic coupling. The output shaft is supported by a spherical roller bearing, oil lubricated, fitted in a cover flanged to the engine flywheel housing. Another bearing, fitted into the flywheel, supports the output shaft at the engine side. The KFB is suitable for pulley or in line applications.																			
<p>Prima di iniziare il montaggio del KFB sul motore, e' bene verificare che il volano rientri nelle tolleranze SAE. Questo e' importante soprattutto per il buon funzionamento del giunto elastico.(Vedere foglio 2/3 Fig.1)</p> <p>Before KFB be mounted onto the engine, it is recommended to check that flywheel be within SAE tolerances. This is very important for elastic coupling good working.(see sheet 2/3 Fig.1)</p>																				
<table border="1"><thead><tr><th>INSTALLAZIONE (vedere foglio 2/3)</th><th>INSTALLATION (see sheet 2/3)</th></tr></thead><tbody><tr><td>1 Montare l'anello di trascinamento del giunto elastico sul volano del motore.</td><td>1 Mount elastic coupling driving ring, onto engine flywheel.</td></tr><tr><td>2 Montare il cuscinetto pilota, ingrassato a vita, sull'albero del KFB.</td><td>2 Mount pilot bearing, greased for life, onto KFB shaft.</td></tr><tr><td>3 Montare la flangia SAE 3 sul coprivolano.</td><td>3 Mount SAE 3 flange onto flywheel housing.</td></tr><tr><td>4 Posizionare il gruppo completo, osservando con cura l'allineamento dell'albero nel cuscinetto pilota e dei bloccetti del giunto elastico con l'anello di trascinamento montato sul volano. La campana esterna deve essere orientata in modo da avere l'apertura per il riempimento dell'olio a circa 60° dalla verticale, in senso orario guardando il volano del motore. Cosi' montato, si avra' l'apertura di drenaggio dell'olio in basso. Infine fissare il gruppo con le apposite viti sulla flangia esterna.</td><td>4 Install complete group paying attention at alignment between shaft and pilot bearing as well as alignment between rubber blocks and driving ring. External housing must be orientated to get the oil fill opening at about 60° clockwise from vertical line, looking at the flywheel. In such a way, the oil drain opening will be downwards. Therefore tighten screws of external flange. Fluid coupling oil filling (see recommended oil table). Remove cover. Turn fluid coupling until X mark be on vertical line (X-1-2-3-4 depends on application). Remove plug and fill until oil overflows (13KFB fill X=5,2 lt.). Therefore fit the plug using sealant on thread. Tightening torque is 30 Nm for 3/8" plug .Fit again the cover.</td></tr><tr><td>5 Riempimento olio giunto (vedere tabella olii consigliati). Togliere il coperchio che protegge il tappo di carico . Ruotare il giunto sino a portare il tappo in corrispondenza del segno di riferimento X sulla verticale (X-1-2-3-4 dipende dall'applicazione). Togliere il tappo e riempire fino allo sbocco dal foro (13KFB X=5,2 lt.), quindi chiudere utilizzando del sigillante sul filetto. La coppia di serraggio e' 30 Nm per tappo 3/8". Rimontare il coperchio di protezione.</td><td>5 Grease filling (see recommended grease table). Through the grease filler, fill grease until it comes out around the shaft. Rap the shaft on the end to relieve any preloading that may result due to the resistance of pilot bearing when being pressed into the flywheel.</td></tr><tr><td>6 Riempimento grasso (vedere tabella grassi consigliati). Mediante l'apposito ingrassatore,, riempire la camera di lavoro del cuscinetto fino a far fuoriuscire il grasso attorno all'albero</td><td>6 At first start up, run the unit engaged and engine at half of max speed for not less than 10 minutes.</td></tr><tr><td>7 Dare alcuni colpi, con un martello non metallico, sull'estremita' dell'albero onde eliminare ogni eventuale tensione sui cuscinetti dovuta alla resistenza offerta dal cuscinetto pilota, quando esso viene montato forzato nella sede del volano.</td><td></td></tr><tr><td>8 Al primo avviamento, far girare il gruppo innestato, per almeno 10 minuti, con il motore alla meta' dei giri massimi.</td><td></td></tr></tbody></table>			INSTALLAZIONE (vedere foglio 2/3)	INSTALLATION (see sheet 2/3)	1 Montare l'anello di trascinamento del giunto elastico sul volano del motore.	1 Mount elastic coupling driving ring, onto engine flywheel.	2 Montare il cuscinetto pilota, ingrassato a vita, sull'albero del KFB.	2 Mount pilot bearing, greased for life, onto KFB shaft.	3 Montare la flangia SAE 3 sul coprivolano.	3 Mount SAE 3 flange onto flywheel housing.	4 Posizionare il gruppo completo, osservando con cura l'allineamento dell'albero nel cuscinetto pilota e dei bloccetti del giunto elastico con l'anello di trascinamento montato sul volano. La campana esterna deve essere orientata in modo da avere l'apertura per il riempimento dell'olio a circa 60° dalla verticale, in senso orario guardando il volano del motore. Cosi' montato, si avra' l'apertura di drenaggio dell'olio in basso. Infine fissare il gruppo con le apposite viti sulla flangia esterna.	4 Install complete group paying attention at alignment between shaft and pilot bearing as well as alignment between rubber blocks and driving ring. External housing must be orientated to get the oil fill opening at about 60° clockwise from vertical line, looking at the flywheel. In such a way, the oil drain opening will be downwards. Therefore tighten screws of external flange. Fluid coupling oil filling (see recommended oil table). Remove cover. Turn fluid coupling until X mark be on vertical line (X-1-2-3-4 depends on application). Remove plug and fill until oil overflows (13KFB fill X=5,2 lt.). Therefore fit the plug using sealant on thread. Tightening torque is 30 Nm for 3/8" plug .Fit again the cover.	5 Riempimento olio giunto (vedere tabella olii consigliati). Togliere il coperchio che protegge il tappo di carico . Ruotare il giunto sino a portare il tappo in corrispondenza del segno di riferimento X sulla verticale (X-1-2-3-4 dipende dall'applicazione). Togliere il tappo e riempire fino allo sbocco dal foro (13KFB X=5,2 lt.), quindi chiudere utilizzando del sigillante sul filetto. La coppia di serraggio e' 30 Nm per tappo 3/8". Rimontare il coperchio di protezione.	5 Grease filling (see recommended grease table). Through the grease filler, fill grease until it comes out around the shaft. Rap the shaft on the end to relieve any preloading that may result due to the resistance of pilot bearing when being pressed into the flywheel.	6 Riempimento grasso (vedere tabella grassi consigliati). Mediante l'apposito ingrassatore,, riempire la camera di lavoro del cuscinetto fino a far fuoriuscire il grasso attorno all'albero	6 At first start up, run the unit engaged and engine at half of max speed for not less than 10 minutes.	7 Dare alcuni colpi, con un martello non metallico, sull'estremita' dell'albero onde eliminare ogni eventuale tensione sui cuscinetti dovuta alla resistenza offerta dal cuscinetto pilota, quando esso viene montato forzato nella sede del volano.		8 Al primo avviamento, far girare il gruppo innestato, per almeno 10 minuti, con il motore alla meta' dei giri massimi.	
INSTALLAZIONE (vedere foglio 2/3)	INSTALLATION (see sheet 2/3)																			
1 Montare l'anello di trascinamento del giunto elastico sul volano del motore.	1 Mount elastic coupling driving ring, onto engine flywheel.																			
2 Montare il cuscinetto pilota, ingrassato a vita, sull'albero del KFB.	2 Mount pilot bearing, greased for life, onto KFB shaft.																			
3 Montare la flangia SAE 3 sul coprivolano.	3 Mount SAE 3 flange onto flywheel housing.																			
4 Posizionare il gruppo completo, osservando con cura l'allineamento dell'albero nel cuscinetto pilota e dei bloccetti del giunto elastico con l'anello di trascinamento montato sul volano. La campana esterna deve essere orientata in modo da avere l'apertura per il riempimento dell'olio a circa 60° dalla verticale, in senso orario guardando il volano del motore. Cosi' montato, si avra' l'apertura di drenaggio dell'olio in basso. Infine fissare il gruppo con le apposite viti sulla flangia esterna.	4 Install complete group paying attention at alignment between shaft and pilot bearing as well as alignment between rubber blocks and driving ring. External housing must be orientated to get the oil fill opening at about 60° clockwise from vertical line, looking at the flywheel. In such a way, the oil drain opening will be downwards. Therefore tighten screws of external flange. Fluid coupling oil filling (see recommended oil table). Remove cover. Turn fluid coupling until X mark be on vertical line (X-1-2-3-4 depends on application). Remove plug and fill until oil overflows (13KFB fill X=5,2 lt.). Therefore fit the plug using sealant on thread. Tightening torque is 30 Nm for 3/8" plug .Fit again the cover.																			
5 Riempimento olio giunto (vedere tabella olii consigliati). Togliere il coperchio che protegge il tappo di carico . Ruotare il giunto sino a portare il tappo in corrispondenza del segno di riferimento X sulla verticale (X-1-2-3-4 dipende dall'applicazione). Togliere il tappo e riempire fino allo sbocco dal foro (13KFB X=5,2 lt.), quindi chiudere utilizzando del sigillante sul filetto. La coppia di serraggio e' 30 Nm per tappo 3/8". Rimontare il coperchio di protezione.	5 Grease filling (see recommended grease table). Through the grease filler, fill grease until it comes out around the shaft. Rap the shaft on the end to relieve any preloading that may result due to the resistance of pilot bearing when being pressed into the flywheel.																			
6 Riempimento grasso (vedere tabella grassi consigliati). Mediante l'apposito ingrassatore,, riempire la camera di lavoro del cuscinetto fino a far fuoriuscire il grasso attorno all'albero	6 At first start up, run the unit engaged and engine at half of max speed for not less than 10 minutes.																			
7 Dare alcuni colpi, con un martello non metallico, sull'estremita' dell'albero onde eliminare ogni eventuale tensione sui cuscinetti dovuta alla resistenza offerta dal cuscinetto pilota, quando esso viene montato forzato nella sede del volano.																				
8 Al primo avviamento, far girare il gruppo innestato, per almeno 10 minuti, con il motore alla meta' dei giri massimi.																				
<table border="1"><tr><td>tf6217-1 06/04/01</td><td>TRANSFLUID S.r.l. via V.Monti 19-20016 Pero (MI) Italy tel.0039-02-339315.1 - fax.0039-02-33910699 - www.transfluid.it - e-mail:info@transfluid.it</td></tr></table>			tf6217-1 06/04/01	TRANSFLUID S.r.l. via V.Monti 19-20016 Pero (MI) Italy tel.0039-02-339315.1 - fax.0039-02-33910699 - www.transfluid.it - e-mail:info@transfluid.it																
tf6217-1 06/04/01	TRANSFLUID S.r.l. via V.Monti 19-20016 Pero (MI) Italy tel.0039-02-339315.1 - fax.0039-02-33910699 - www.transfluid.it - e-mail:info@transfluid.it																			

Fluid Drive Coupler (Optional)



7.8 Kraft Fluid Drive Common Parts (Optional)

Fluid Drive Coupler (Optional)



ITEM #	PART NUMBER	DESCRIPTION
1	UU-TFP7018CC	390 Degree Fuse Plug, 5/8"
2	UU-TFP2292	Seal Kit
3	UU-8202AD	Roller Bearing
4	UU-TFP103602X	Shaft
5	UU-8002DX	Bearing, small
6	UU-8002AS	Ball Bearing
7	UU-KPC2.01.5	Fluid, 1-1/2 gallon



8-0

8.0 BLOWER HOUSING GROUP

8.0 BLOWER HOUSING GROUP


8-0	97
8.1 Blower Housing Group	98
8.2 Blower Housing Face Group - LCT6000.....	99
8.3 Belt Drive Assembly	100
8.4 Pedestal Group	101
8.5 Exhaust Duct Assembly	102

BLOWER HOUSING GROUP

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823

8.1 Blower Housing Group

Standard Units

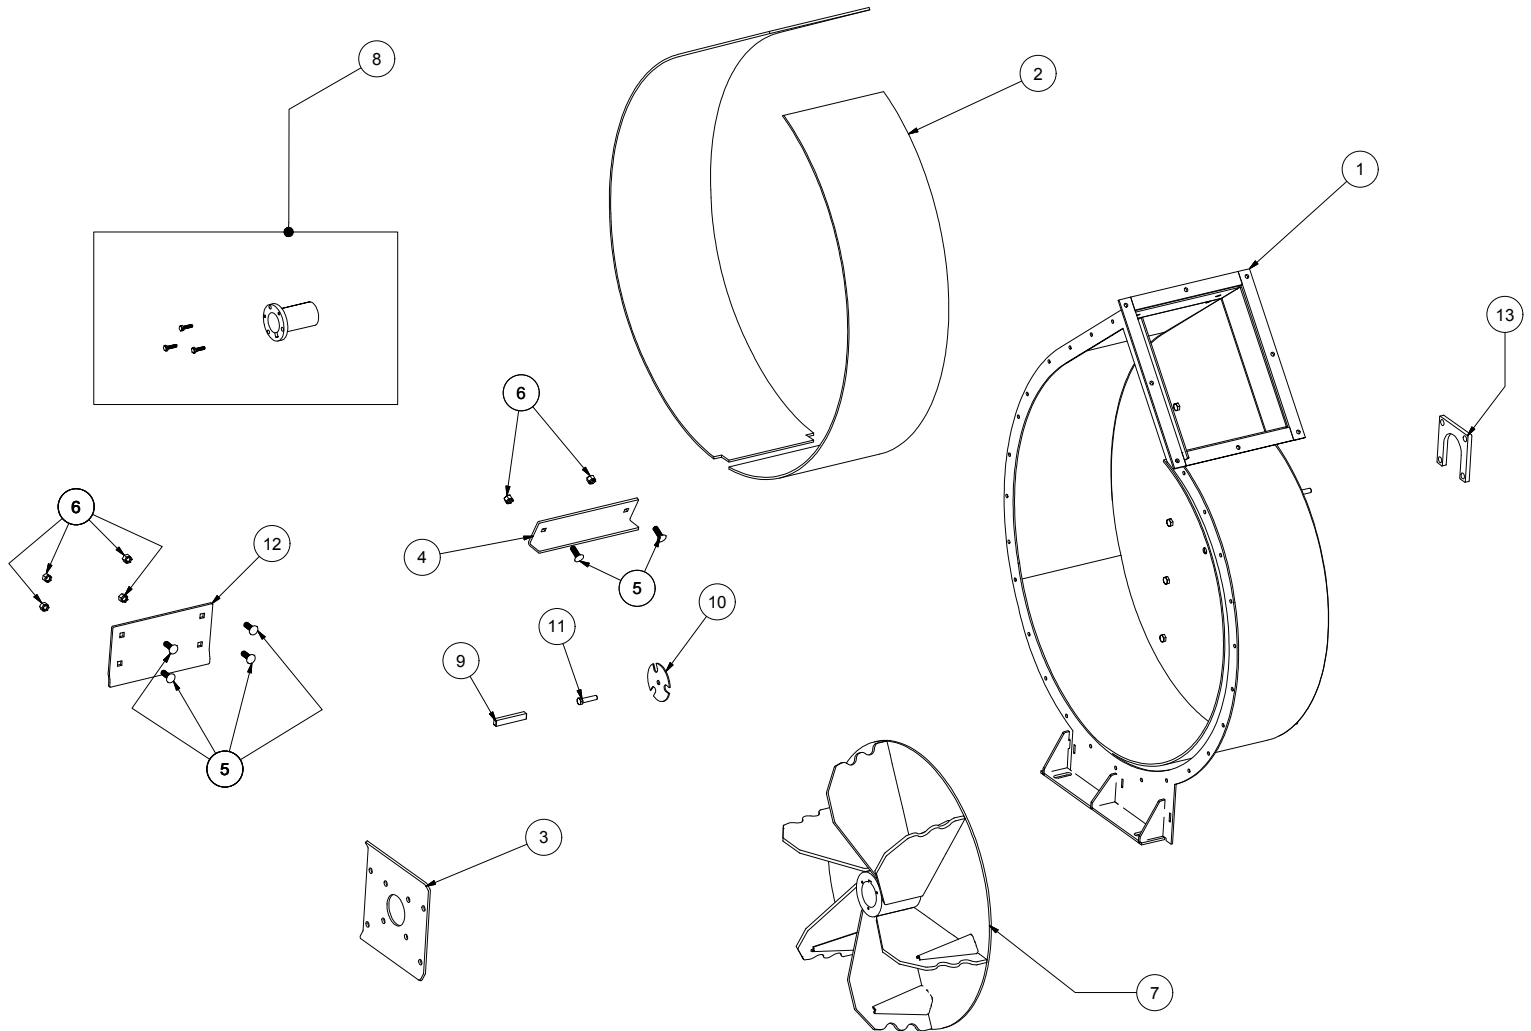


ITEM #	PART NUMBER	DESCRIPTION
1	LCT630.601	Blower Housing Back
2	LCT630.602	Liner Set
3	LCT630.104A	Inner Bearing Plate
4	LCT620.602A	Bolt-In Wrap around Liner
5	LCT620.603	Flat Head Bolt
6	LCT620.603N	Nut
7	LCT6000.38	Impeller
8	LCT630.101	Impeller Bushing

ITEM #	PART NUMBER	DESCRIPTION
9	LCT650.601F	Bushing Key
10	LCT630.102	Shaft Protector
11	5CZ.500.750	Shaft Bolt
12	LCT620.603	Straght Liner
13	LCT620.605	Bolt
14	LCT620.605N	Nut
15	LCT630.109.D	Spacer

8.2 Blower Housing Face Group - LCT6000


Single Axis units after September 2013

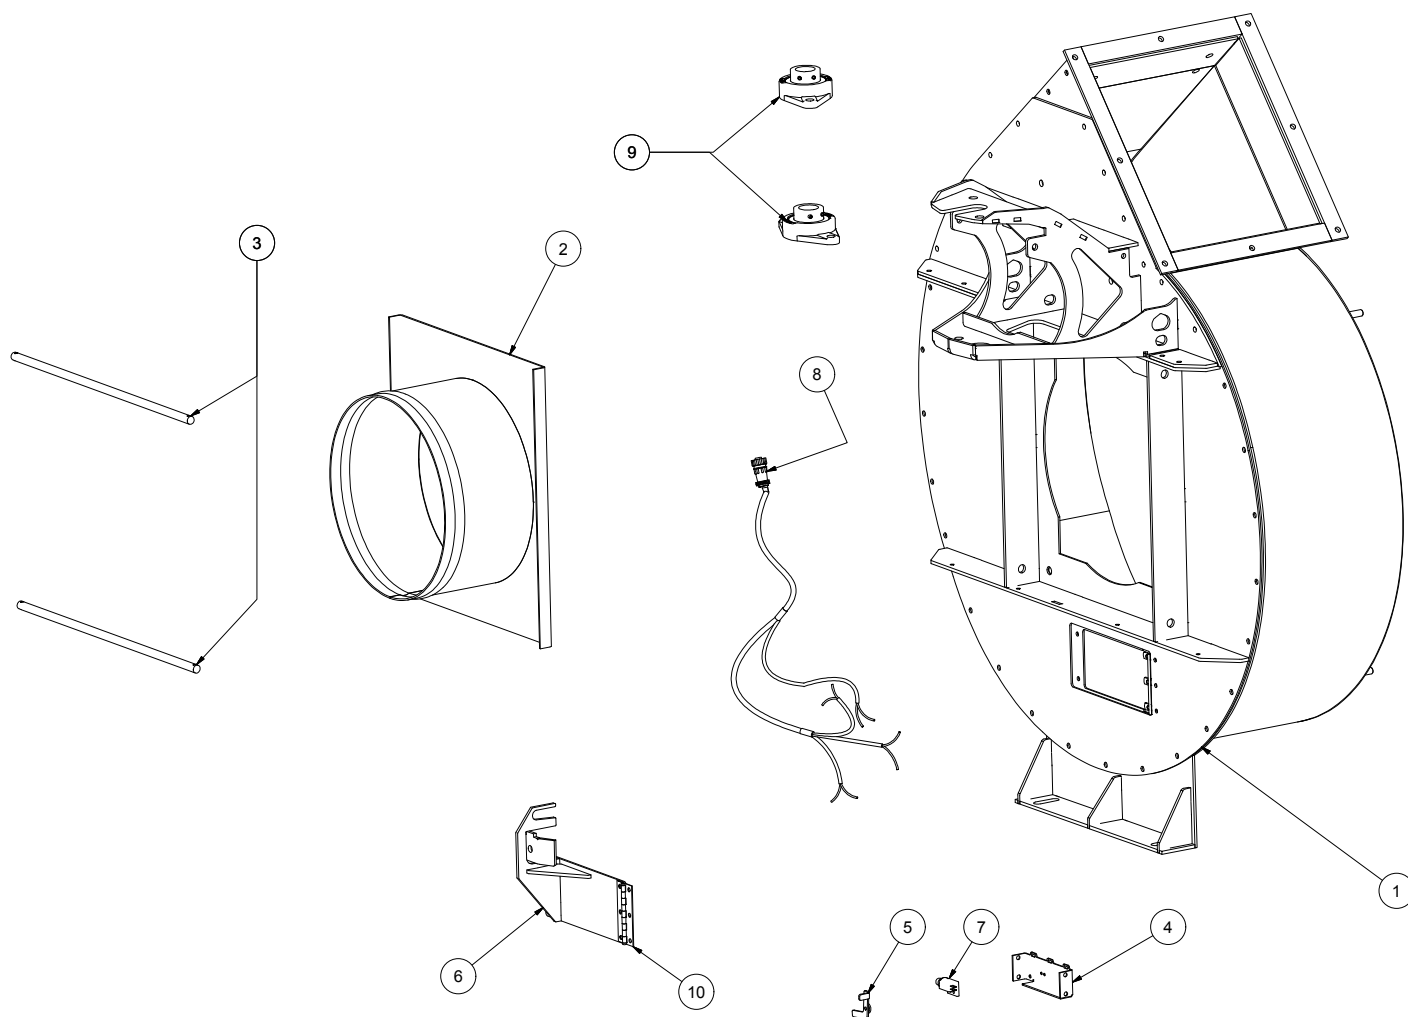

ITEM #	PART NUMBER	DESCRIPTION
1	6000.40	Blower Housing Face, 09/13 and later
	LCT630.601FB	Blower Housing Face, thru 08/13
2	LCT616.604.18	Intake Flange
3	LCT600.635.1	Lock Rod
4	6000.2208	Support Bar
5	6000.2209	Support Bar Bracket
6	6000.42	Inspection Door. 11" tall, 09/13 and later
	SCL621.602	Inspection Door, thru 08/13
7	LCT690.601.A	Limit Switch
8	LCT690.602	Limit Switch Wire
9	LCT616.801	Boom Bearing
10	6000.41	Inspection Door Hinge, 11", 09/13 and later
	LCT621.603	Inspection Door Hinge

8.3 Belt Drive Assembly


After August 2012

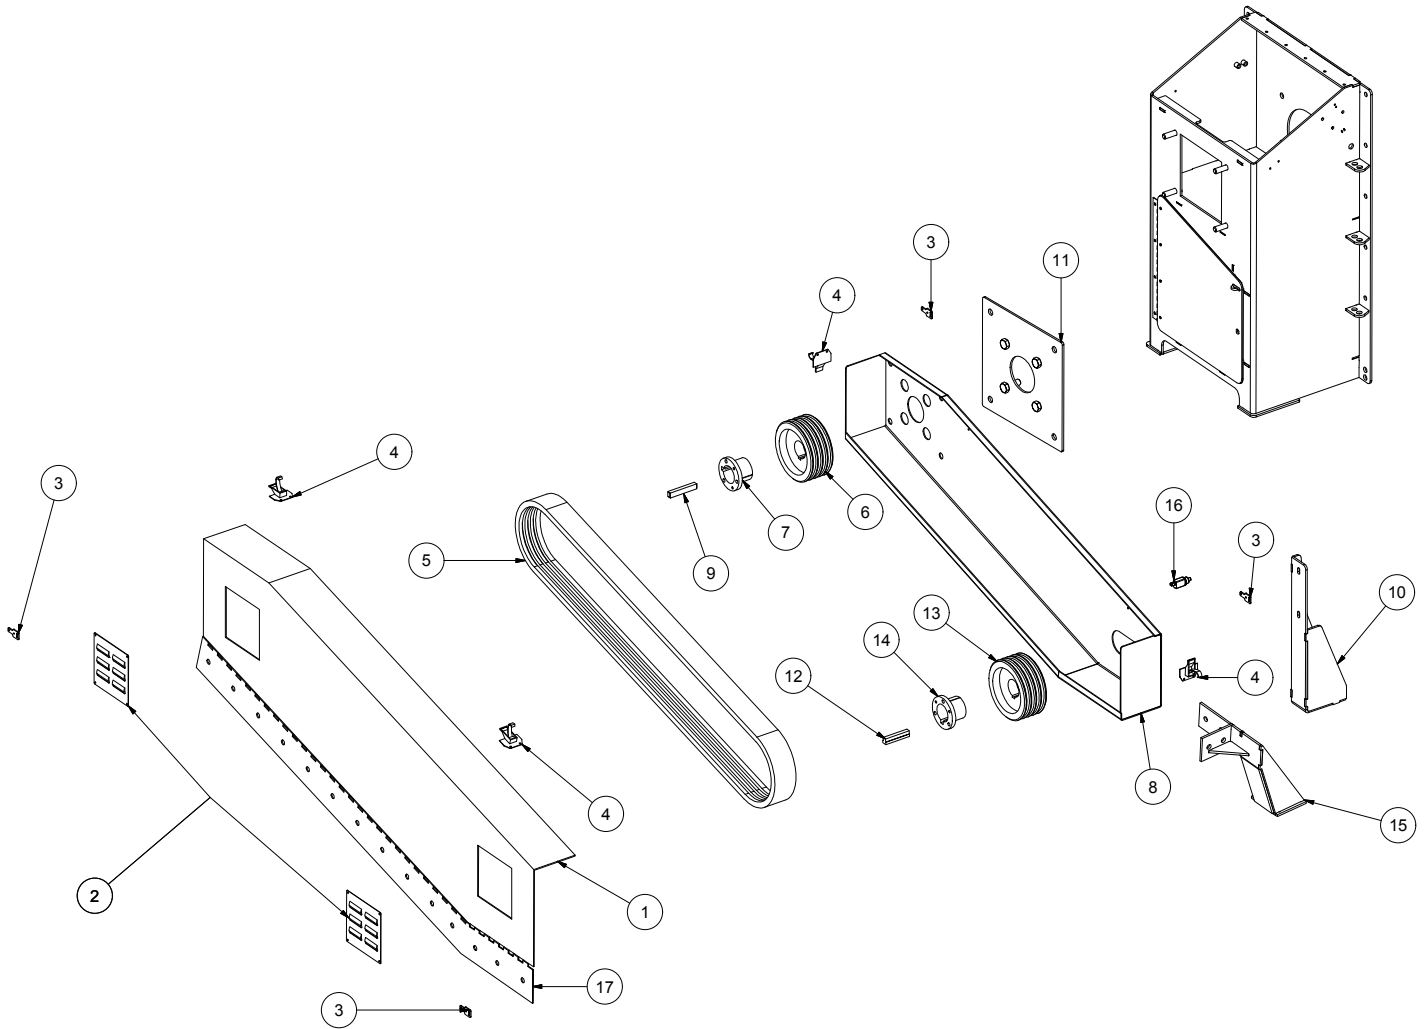

ITEM #	PART NUMBER	DESCRIPTION	ITEM #	PART NUMBER	DESCRIPTION
1	6000.2216	Belt Guard Door	10	LCT611.622	Belt Guard Mount
2	LCT600.699	Guard Vent	11	LCT630.105A	Outer Bearing Plate
3	200042	Striker Plate	12	6000.2227	Step Down Key
4	LCT609.602	Overcenter Latch	13	LCT630.108	Sheave, PTO Shaft
5	LCT630.106	Drive Belt	14	LCT630.111	Bushing, PTO Shaft
6	LCT630.107	Sheave, Impeller Shaft	15	LCT630.622	Belt Guard Mount, end
7	LCT630.110	Bushing, Impeller Shaft	16	6410.51	Limit Switch
8	6000.2215	Belt Guard Back	17	6000.2217	Hinge
9	LCT650.601F	Bushing Key			

8.4 Pedestal Group


2012 and after

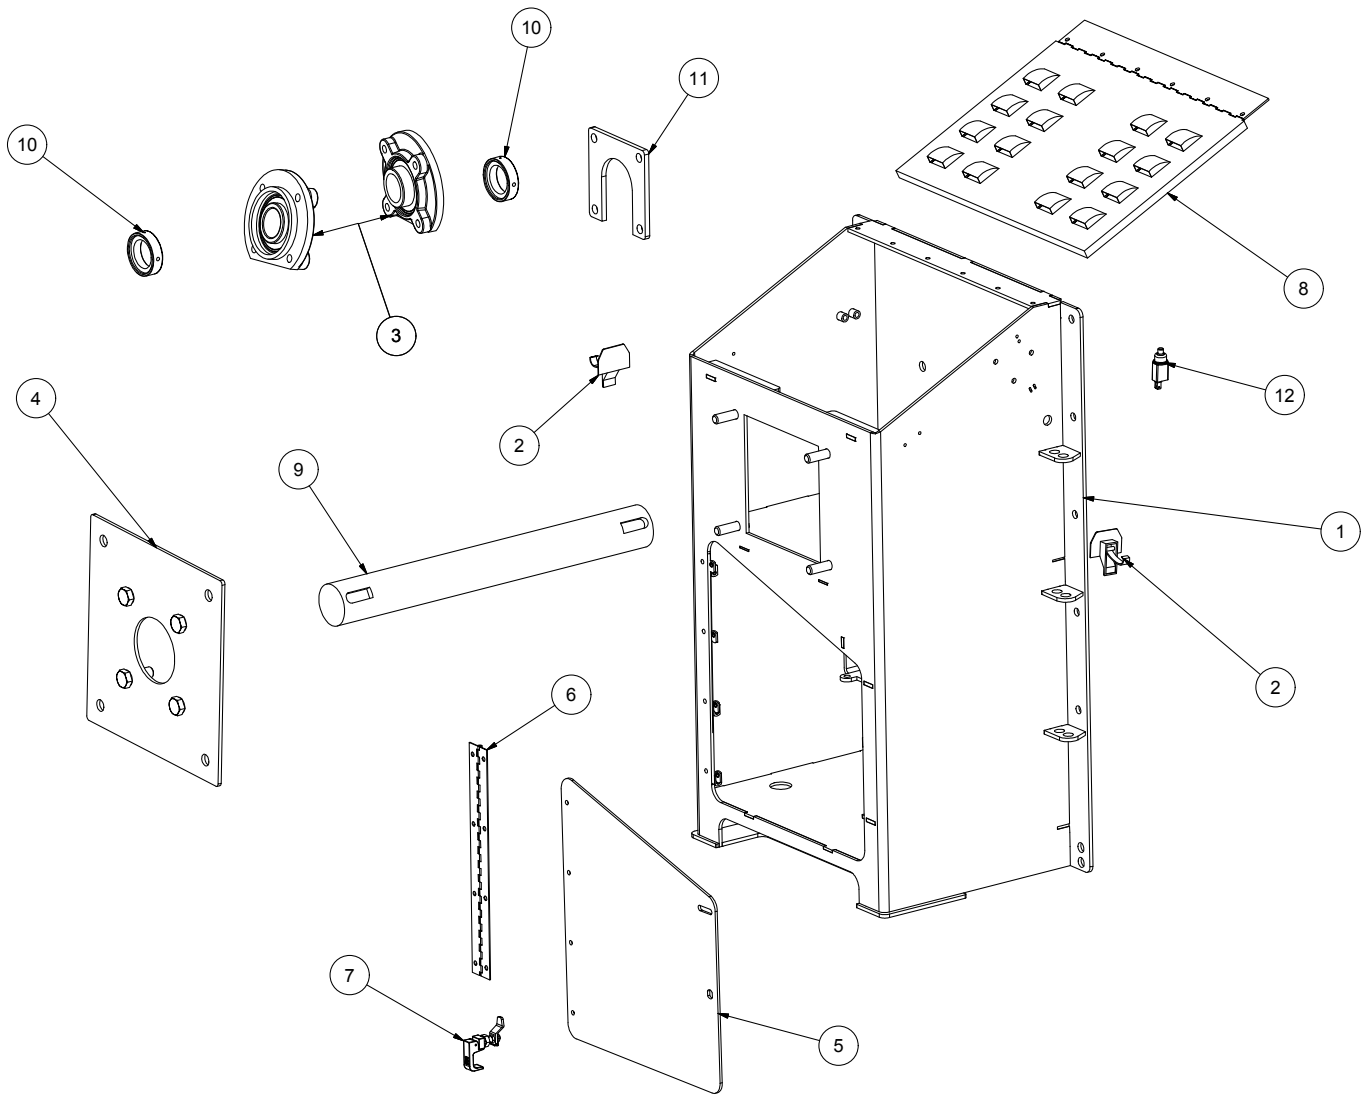

ITEM #	PART NUMBER	DESCRIPTION
1	LCT631.609B	Pedestal
2	LCT609.602	Overcenter Latch
3	LCT630.109.A	Flange Bearing
4	LCT630.105A	Outer Bearing Plate
5	6000.2213	Pedestal Utility Door
6	600.2214	Hinge
7	LCT622.602.L	Latch
8	LCT614.601	Pedestal Lid
9	LCT630.0	Shaft
10	LCT630.109.C	Lock Collar
11	LCT630.109.D	Spacer
12	6410.51	Limit Switch

8.5 Exhaust Duct Assembly

LCT6000 after February 2001

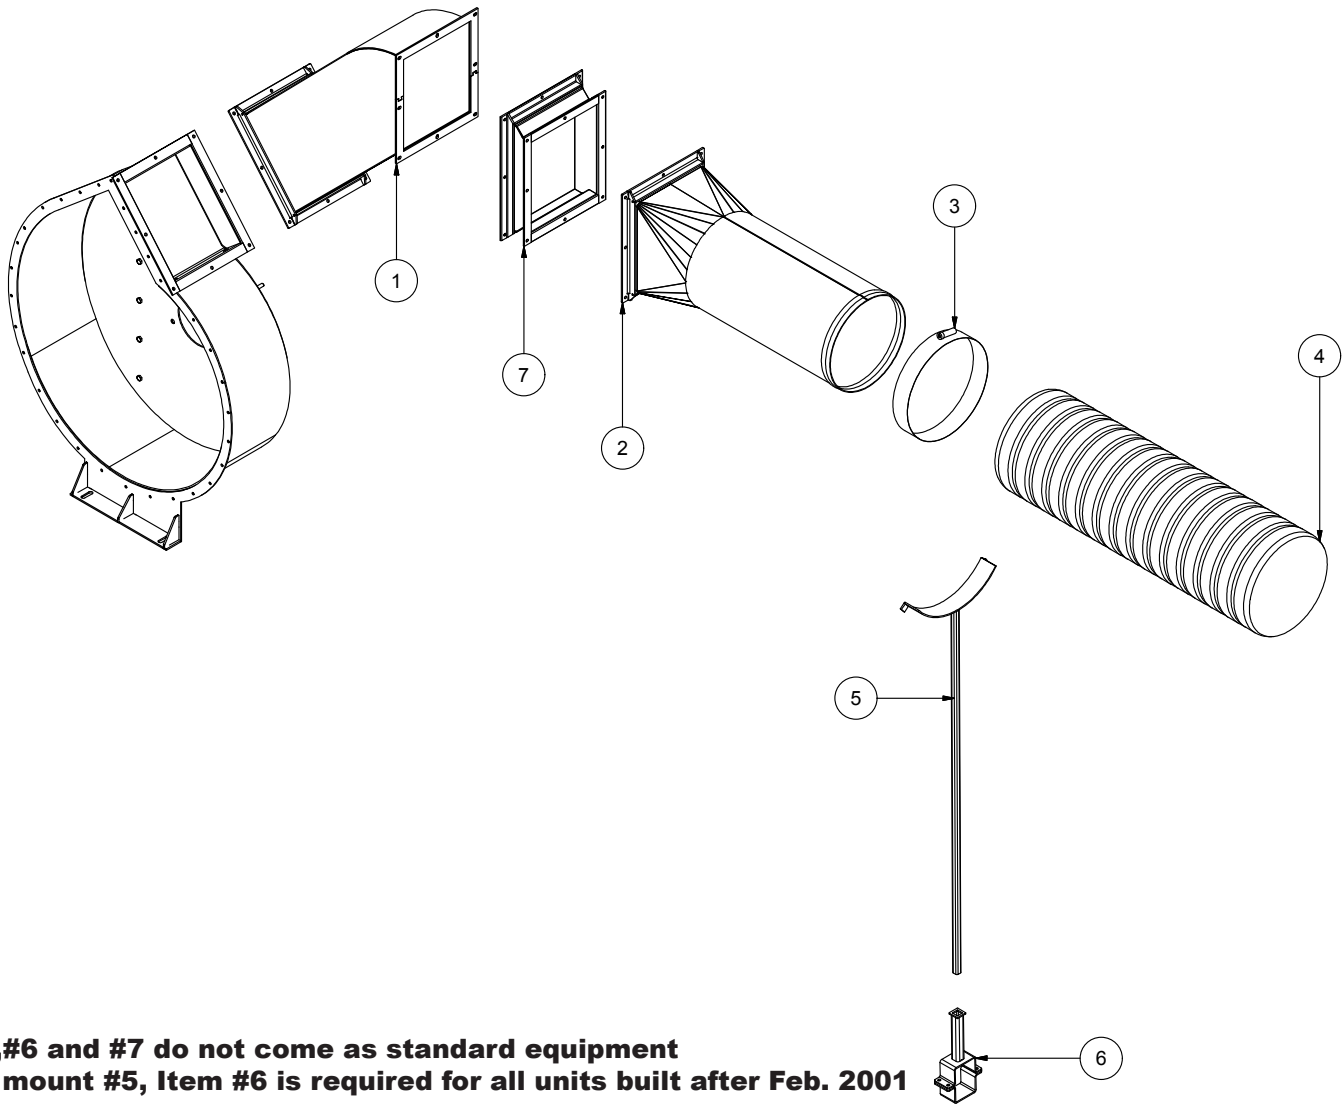

#5,#6 and #7 do not come as standard equipment
To mount #5, Item #6 is required for all units built after Feb. 2001

	18" DIAMETER (STANDARD)	*16" DIAMETER (OPTIONAL)	
ITEM #	PART NUMBER	PART NUMBER	DESCRIPTION
1	LCT631.610	LCT621.610	Discharge Duct
2	LCT631.611A LCT631.611	LCT621.611B LCT621.611A	Transition, 49" Long(18"),61"L(16") Transition, 43" Long(18"),43"L(16")
3	LCT616.618	LCT616.616	Hose Band
4	LC-MDH.18.60	LC-MDH.16.48	Exhaust Hose,5'L(18"), 4'L(16")
5	LCT60.629B	LCT60.629A	Exhaust Hose Support (OPTIONAL)
6	**LCT60.629BCL	**LCT60.629BCL	Hose Support Clamp (OPTIONAL)
7	N/A	LCT631.621	18" to 16" Rectangular Transition

*Note: the 16" column is for 6000 units that have a 16" diameter exhaust only.

**Note: Item #6 fits 6" x 4" (6000) tow bars only.



9-0

9.0 TRAILER GROUP

9.0 TRAILER GROUP


9-0	103
9.1 Trailer Bed Group	104
9.2 Fuel Tank Group	105
9.3 Tongue Group	106
9.4 Hydraulic Parking Jack - OPTIONAL	107
9.4 Axle Hub Assembly	108
9.5 Brake Assembly	109

TRAILER GROUP

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823

9.1 Trailer Bed Group

LCT6000

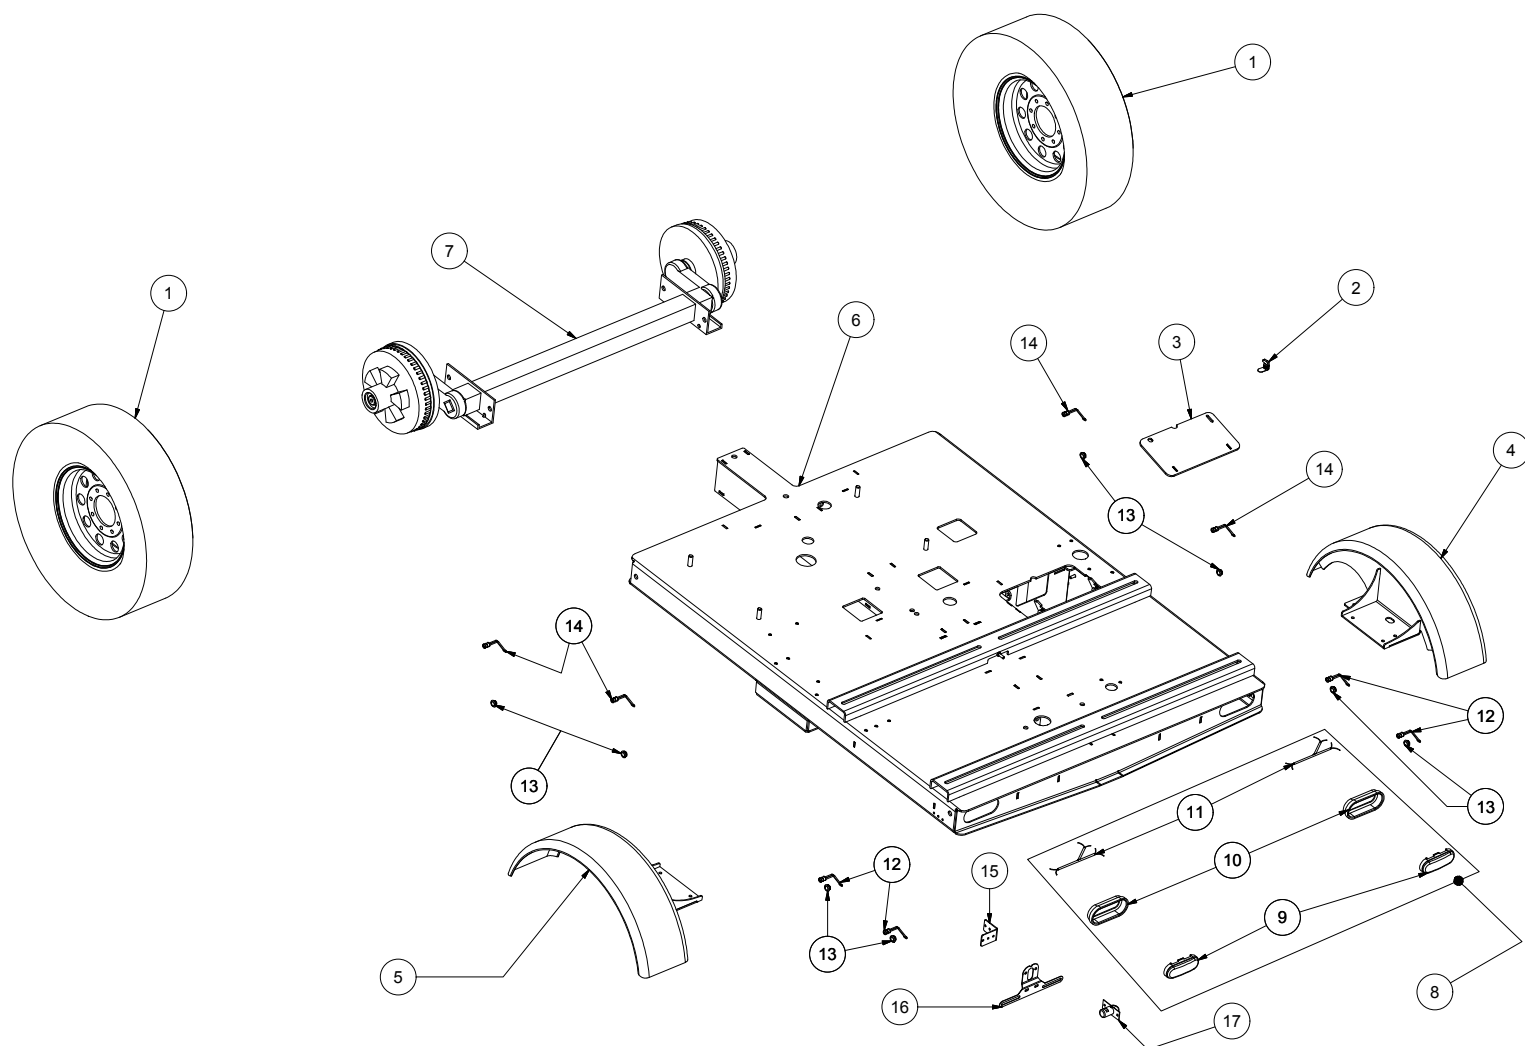


ITEM#	PART NO.	DESCRIPTION
1	SCL822.619A	Tire and Rim Assembly
	consists of:	
	.SCL822.619.T2	Tire only
	.SCL822.619.R	Rim only
2	LCT622.602.L	Battery Box Latch
3	600.602A	Battery Box Door
4	LCT613.601B	Fender, RH
5	LCT613.602B	Fender, LH
6	LCT622.601.09	Trailer Bed, 600
	LCT633.630.01	Trailer Bed, 6000
7	LCT622.614TE	Axle Assembly, 600
	6000.12	Axle Assembly, 6000

ITEM#	PART NO.	DESCRIPTION
8	STD.2414	Tail Light Assembly
9	OD-60250R	LED Light only
10	OD-60700	Grommet
11	OD-94706	Plug Harness
12	STD.2201	LED Market Light, Yellow
13	STD.2201G	Grommet, marker light
14	STD.2202	LED Marker Light, Red
15	600.2437	License Plate Mount Brkt
16	LCT600.010	License Plate Bracket
17	LCT60.615B	Licesne Plate Light

9.2 Fuel Tank Group


April 2007 and after

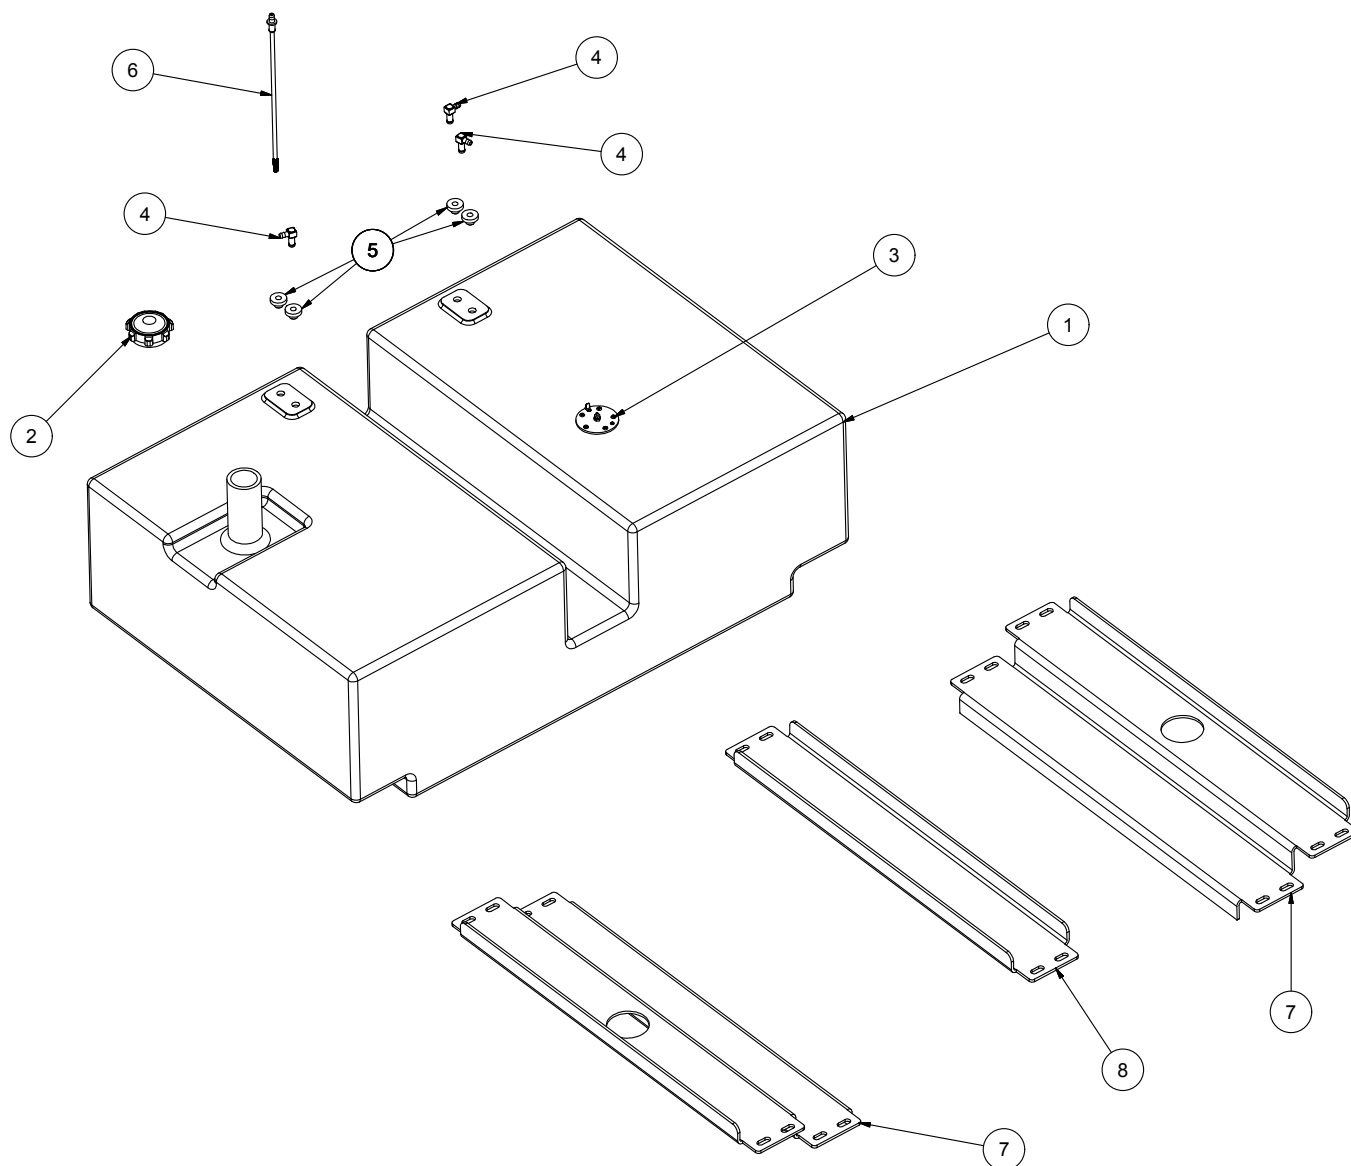

ITEM #	PART NUMBER	DESCRIPTION
1	600.2520	Fuel Tank
2	600.2521	Fuel Cap
3	600.2525	Fuel Sender
4	MET633.901	Fuel Fitting (not for pickup)
5	MET633.901M	Fuel Fitting Grommet
6	600.2527	Fuel Fitting, pickup tube and screen
7	600.2526	Tee Fitting
8	600.2523	Side Support Bracket
9	600.2522	Center Support Bracket
10	400016	Fuel Line Bracket (mounts on engine rail)

9.3 Tongue Group

LCT6000

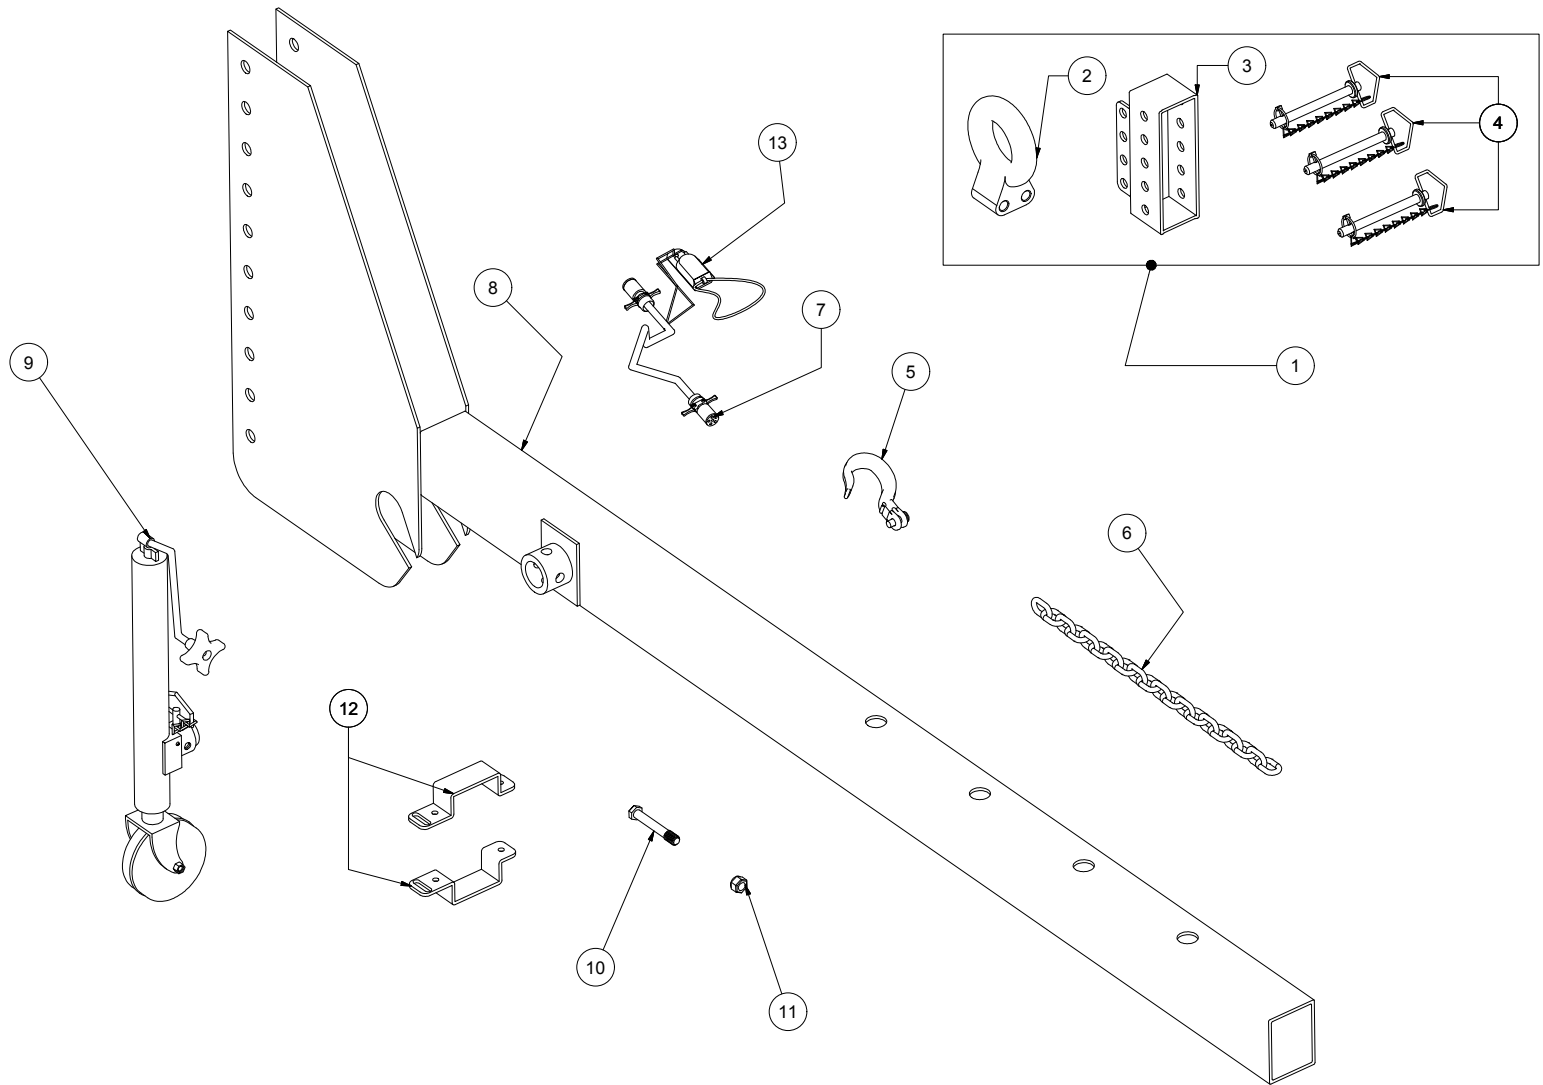


ITEM #	PART NO.	DESCRIPTION
1	LCT622.623D	Pintle Eye Assembly
	consists of	
2	LCT622.623	Pintle Eye Ring
3	LCT622.623A.2	Bracket w/ U-Channel
4	200012	Pintle Eye Pins
5	200009	Safety Hook, 3/8"
6	LCT600.201	Safety Chain
7	LCT622.626	Power Cord,#13 incl.

ITEM #	PART NO.	DESCRIPTION
8	LCT622.633 LCT622.634 LCT622.636	Tow Bar, LCT60C/650 Tow Bar, LCT600 Tow Bar, LCT6000
9	LCT622.624	Parking Jack
12	LCT622.635A LCT622.635B	Hose Lock Brkt,600 Hose Lock Brkt,6000
13	89102	Breakaway Switch, included in #7

9.4 Hydraulic Parking Jack - OPTIONAL


LCT60C/ 600 / 6000 / 650 - optional - Nov. 2006 and after

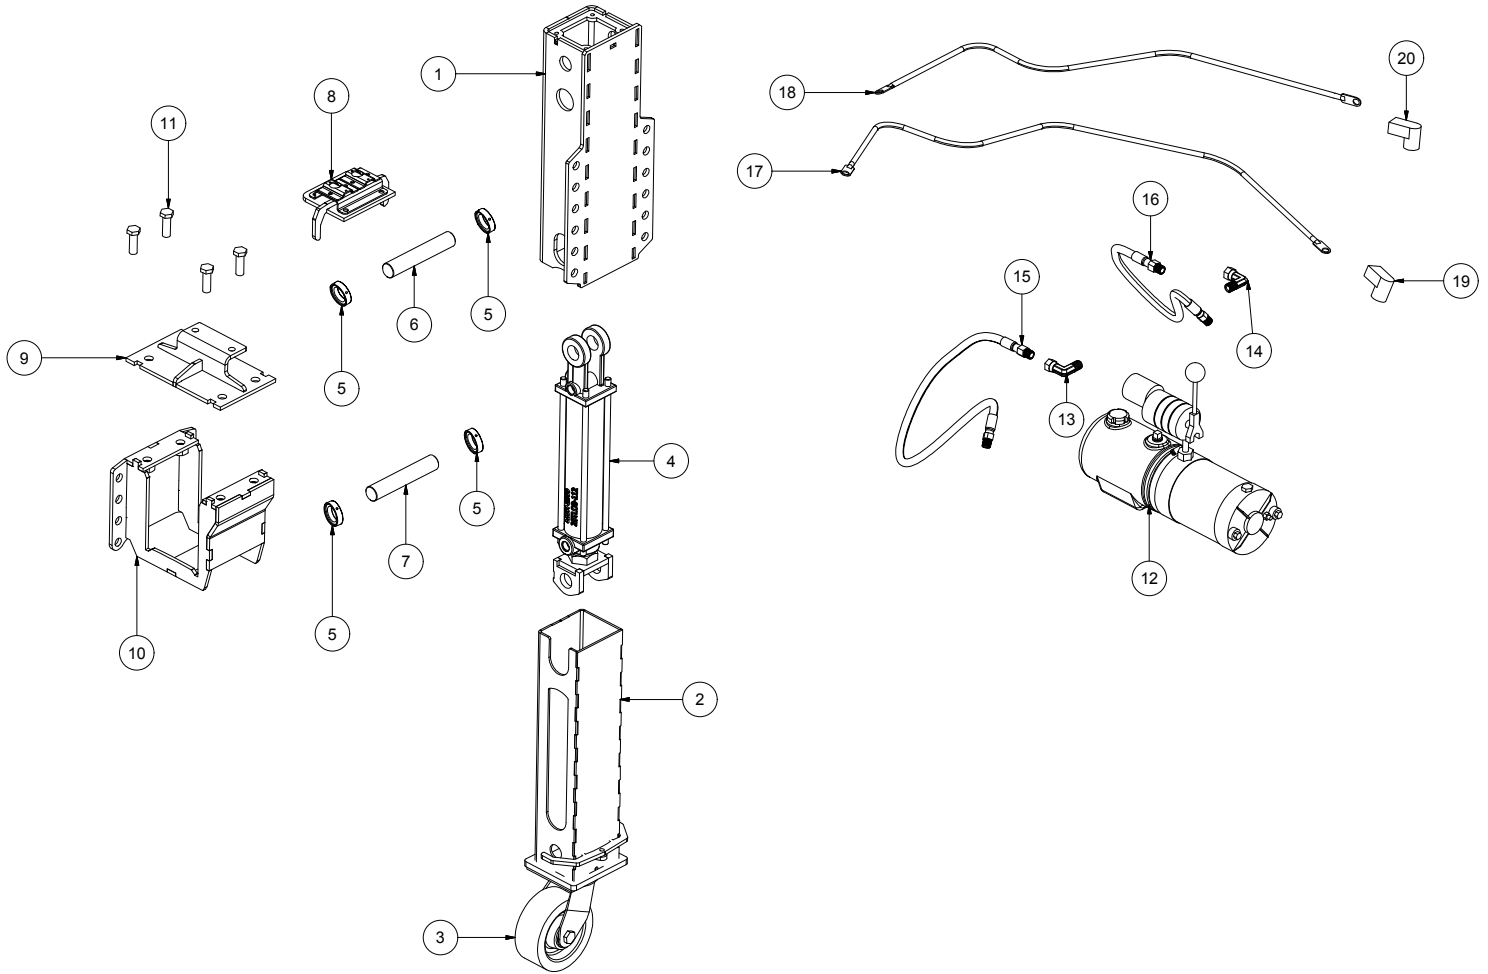

ITEM#	PART NO.	DESCRIPTION	ITEM#	PART NO.	DESCRIPTION
*	LCT622.624H1	Hyd. Parking Jack Assembly incl. all below except #1-10	11	5CZ.500.1.5	Clamp Bolts
*	LCT622.624H2	Hyd. Parking Jack Assembly complete (includes 1-19)	12	80.1550	Hydraulic Pump
1	STD.9001	Outer Tube	13	80.1552	Fitting, 90 degree
2	STD.9002	Inner Tube	14	80.1552	Fitting, 90 degree
3	STD.9003	Caster Assembly	15	STD.9009 STD.9009B	Hydraulic Hose, Top Hydraulic Hose, Top 2/3X
4	STD.9014	Cylinder	16	STD.9010 STD.9010B	Hydraulic Hose, Bottom Hydraulic Hose, Bttm 2/3x
5	STD.9006	Lock Collars	17	STD.9012	Battery Cable, Red
6	STD.9004	Top Pin	18	STD.9013	Battery Cable, Black
7	STD.9005	Bottom Pin	19	65.1306	Stud Cover, Red
8		Outer Tube Top	20	65.1307	Stud Cover, Black
9	STD.9008*	Clamp Top	Notes: *#8,9 not used on 2/3 axis units * #11-13,16-19 not used on 2/3 axis units * will wok on older units(use LCT622.624H2)		
10	STD.9007 6000.9007	Clamp Bottom, 600/800/650 Clamp Bottom, 6000			

9.4 Axle Hub Assembly


LCT60C/600/650/6000

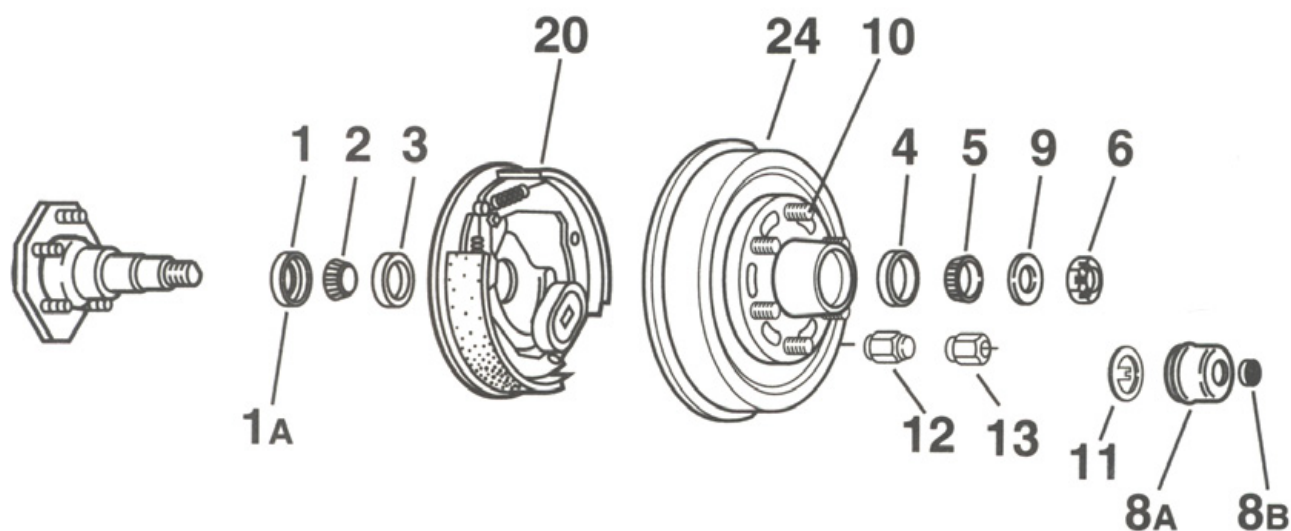

ITEM #	PART NUMBER	DESCRIPTION
1	10.10	Grease Seal
2	31.30.2	Inner Bearing Cone
3	31.30.1	Inner Bearing Cup
4	31.32.1	Outer Bearing Cup
5	31.32.2	Outer Cone
6	006.001.00	Spindle Nut
7	N/A	N/A
8A	021.042.01	Grease Cap
8B	085.001.00	Rubber Plug
9	005.023.00	Spindle Washer
10	7.122	Wheel Stud, 1/2-20
11	005.101.00	Tang Washer
12	006.080.00	Lug Nut, 1/2-20
20	K23.105 K23.106	Electric Brake Assembly, LH Electric Brake Assembly, RH
24	008.201.05	Grease Hub and Drum

9.5 Brake Assembly

LCT60C/600/650/6000

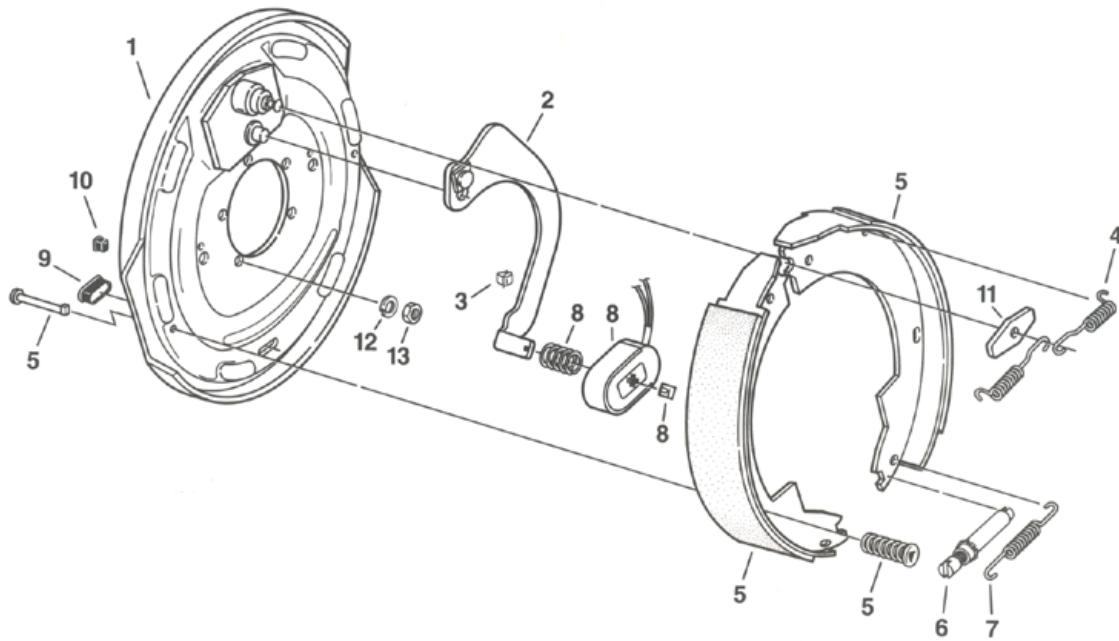

ITEM #	PART NUMBER	DESCRIPTION
0	K23.105	LH Complete Brake Assembly
0	K23.106	RH Complete Brake Assembly
1	36.89.5	Backing Plate Assembly
2	047.107.00 047.108.00	Actuator Lever Arm Assembly, LH Actuator Lever Arm Assembly, RH
3	027.005.00	Wire Clip
4	046.009.00	Retractor Spring
5	K71.048.00	Shoe and Lining Kit
6	043.004.00	Adjuster Assembly
7	046.0118.00	Adjusting Screw Spring
8	K71.105.00 042.099.01 027.099.00 046.080.00	Magnet Kit containing: (1) Magnet (1) Magnet Clip (1) Magnet Spring
9	046.007.00	Plug
10	046.016.00	Wire Grommet
11	005.004.00	Lockwasher
12	006.010.00	Brake Mounting Nut



10-0

10-0 HOSE BOOM GROUP


10-0 HOSE BOOM GROUP

10-0	110
10.1 Boom Group.....	111
10.2 Intake Hose Group	112
10.3 M3219 Hydraulic Boom Pump.....	113

HOSE BOOM GROUP

ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823


May 2012 - present

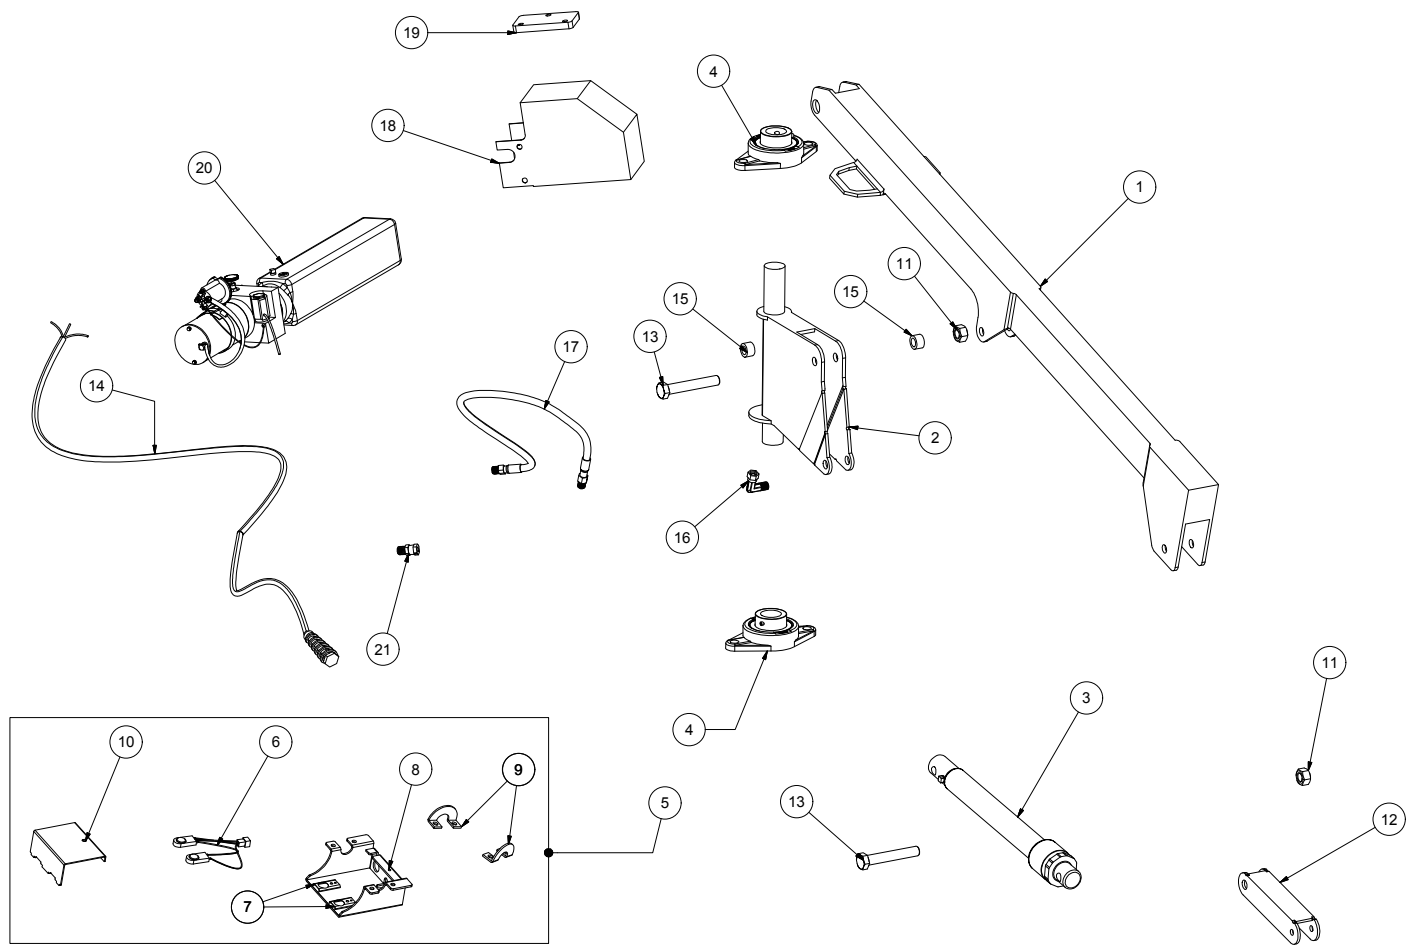

ITEM #	PART NO.	DESCRIPTION
1	LCT616.606A	Boom Arm
2	SCL816.606A	Boom Mast
3	MP-CS.150.12	Boom Cylinder
4	LCT616.801	Boom Mast Bearings
5	STD.2320	Up/Dwn Switch Assmby (Items #6 - 9)
6	STD.2321C	Push Buttons Only
7	LCT616.611B	SS Button Hold Down
8	STD.2322	Push Button Box
9	LCT616.615D	Hold Down Bracket
10	STD.2320E	Cover Plate
11	ZENC.625	Nut


ITEM #	PART NO.	DESCRIPTION
12	LCT616.607	Hose Support Hanger
13	5CZ.625.4.0	Bolt
14	600.2322B	Boom Harness
15	RMB531	Bushing
16	9405.4.4	90 Degree Fiting
17	LCT617.608	Hydraulic Hose
18	M3219.PC	Boom Pump Cover
19	200022	Pump Spacer
20	M3219.S	Boom Pump
21	9205.4.4	Straight Fitting

10.2 Intake Hose Group

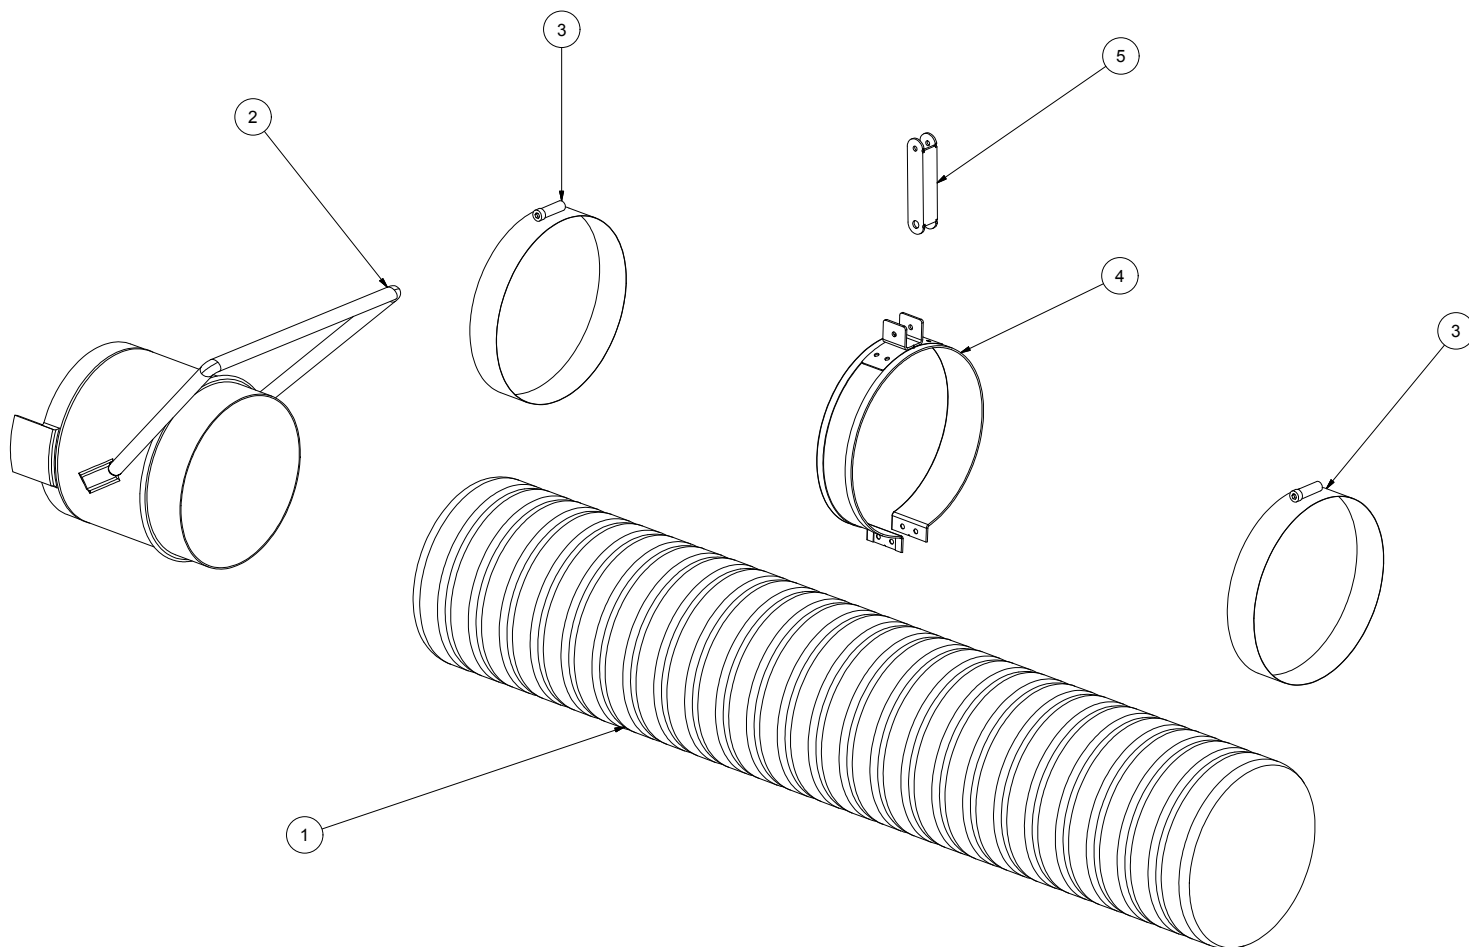

ITEM #	PART NUMBER	DESCRIPTION
1	LC-MDH.18.120 LC-SDH.16.120.UC	Intake Hose, 18" diameter Intake Hose, Urethane (multi-axis-16")
2	LCT616.601.18	Intake Nozzle, 18"
3	LCT616.618	Hose Band, Bolt Style, 18"
4	LCT616.603U.18 LCT616.603U.18	Hose Clamp, 3/8" thick hoses, 18" diam. Hose Clamp, urethane hoses. 18" diam.
5	LCT616.607	Hose Support Bar

10.3 M3219 Hydraulic Boom Pump

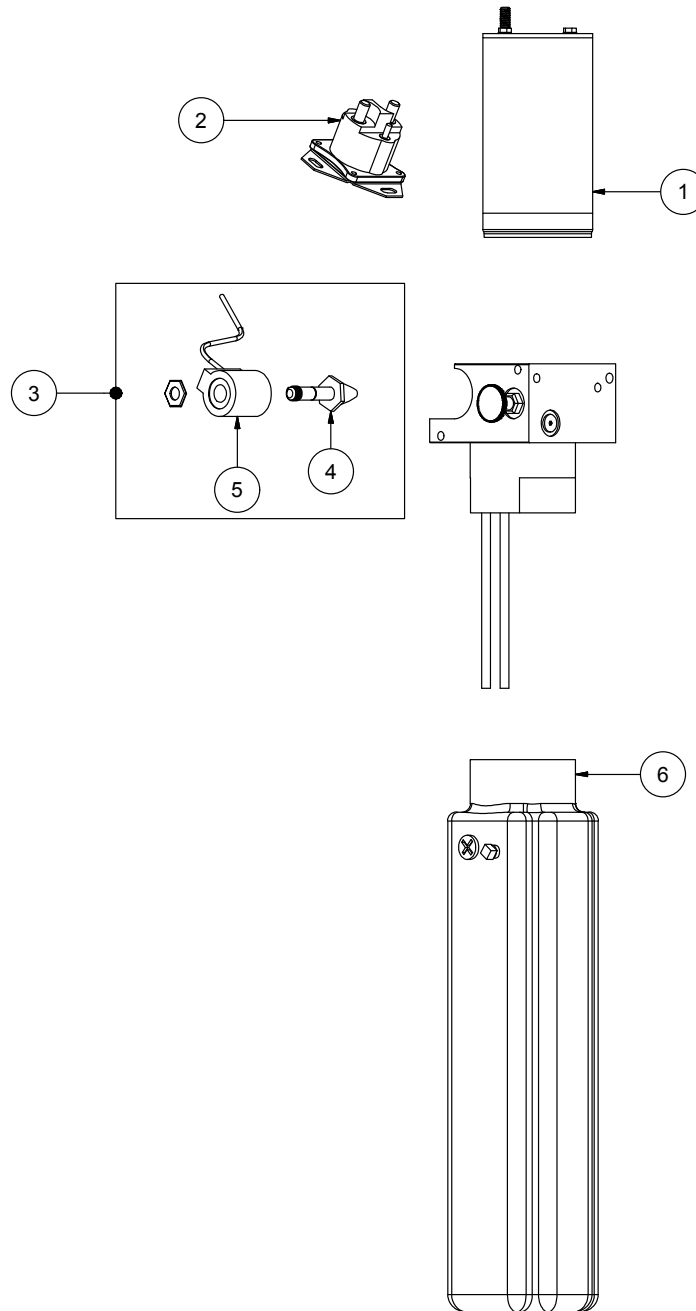

ITEM #	PART NUMBER	DESCRIPTION
	MP-M3219.S	Complete Pump Assembly (all above)
1	MP-08004	Electric Motor, 12V
2	MP-17744	Solenoid Switch, heavy duty
3	MP-19283.D	Coil, Cartridge Assembly
4	MP-07193.D	Cartridge
5	MP-10861.D	Coil, 2 way - 2 position
6	MP-06232	Plastic Reservoir, 3.5" x 15.7"



11-0

11.0 MULTI-AXIS BOOM SECTION (OPTIONAL)

11.0 MULTI-AXIS BOOM SECTION (OPTIONAL)

11-0	114
11.1 (2 or 3X) Hydraulic Tank - Valve Body Group	115
11.2 Joystick Group - 2 Axis Boom	116
11.3 (2 Axis) Boom Assembly	117
11.4 (3 Axis) Boom Assembly	118
11.5 Hinged Boom Frame Assembly	119
11.6 Auburn Gear Drive Assembly - 3 Axis	120

INDEX


Index	122
-------------	-----

Multi-Axis Boom Section - OPTION

ODB Company
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823

11.1 (2 or 3X) Hydraulic Tank - Valve Body Group

LCT600 / 6000 multi-axis units - January 2006 and after

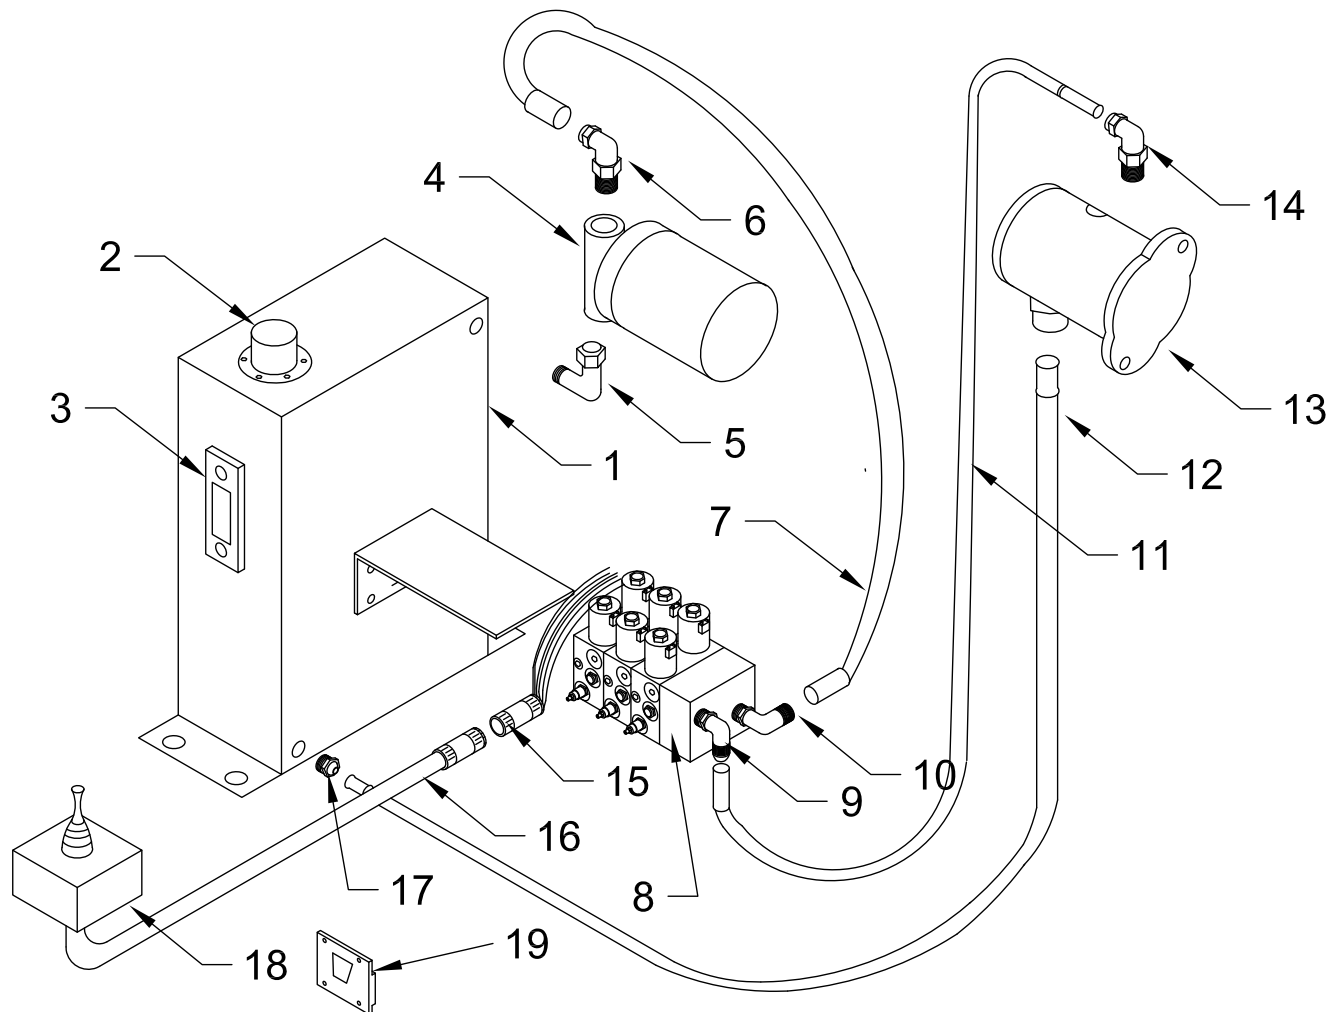


Notes: All hydraulic hoses and wiring harness are special and have to be made up to fit the particular application.

ITEM NO.	PART NUMBER	DESCRIPTION	ITEM NO.	PART NUMBER	DESCRIPTION
1.	600.2401	Hydraulic Tank	11.	Hose*	Hydraulic Hose, 1/2"
2.	800.2005	Filler Cap	12.	Hose*	Hydraulic Hose, 1/2"
3.	SCL.5CT1214	Site Gauge	13.	STD.9015	Hydraulic Pump, double valve
4.	800.2003	Hydraulic Filter Assembly	650.142		Hyd. Pump, single valve
	800.2004	Filter Only	14.		90 Degree Fitting
5.		90 Degree Fitting to tank	15.	Varies	Wiring Harnss to Valve Body
6.		90 Degree Fitting	16.	Varies	Wiring Harness to Joystick
7.	Hose*	Hydraulic Hose, 1/2"	17.		Fitting to Tank
8.	STD.2500	Valve Body 2 axis	18.	800.950	Joystick Assembly, single
	STD.2501	Valve Body 3 axis	800.900		Joystick Assembly, dual
9.		90 Degree Fitting	19.	800.952	Single Joystick Holder
10.		90 Degree Fitting			

11.2 Joystick Group - 2 Axis Boom


LCT600 / 6000 multi-axis units - January 2006 and after

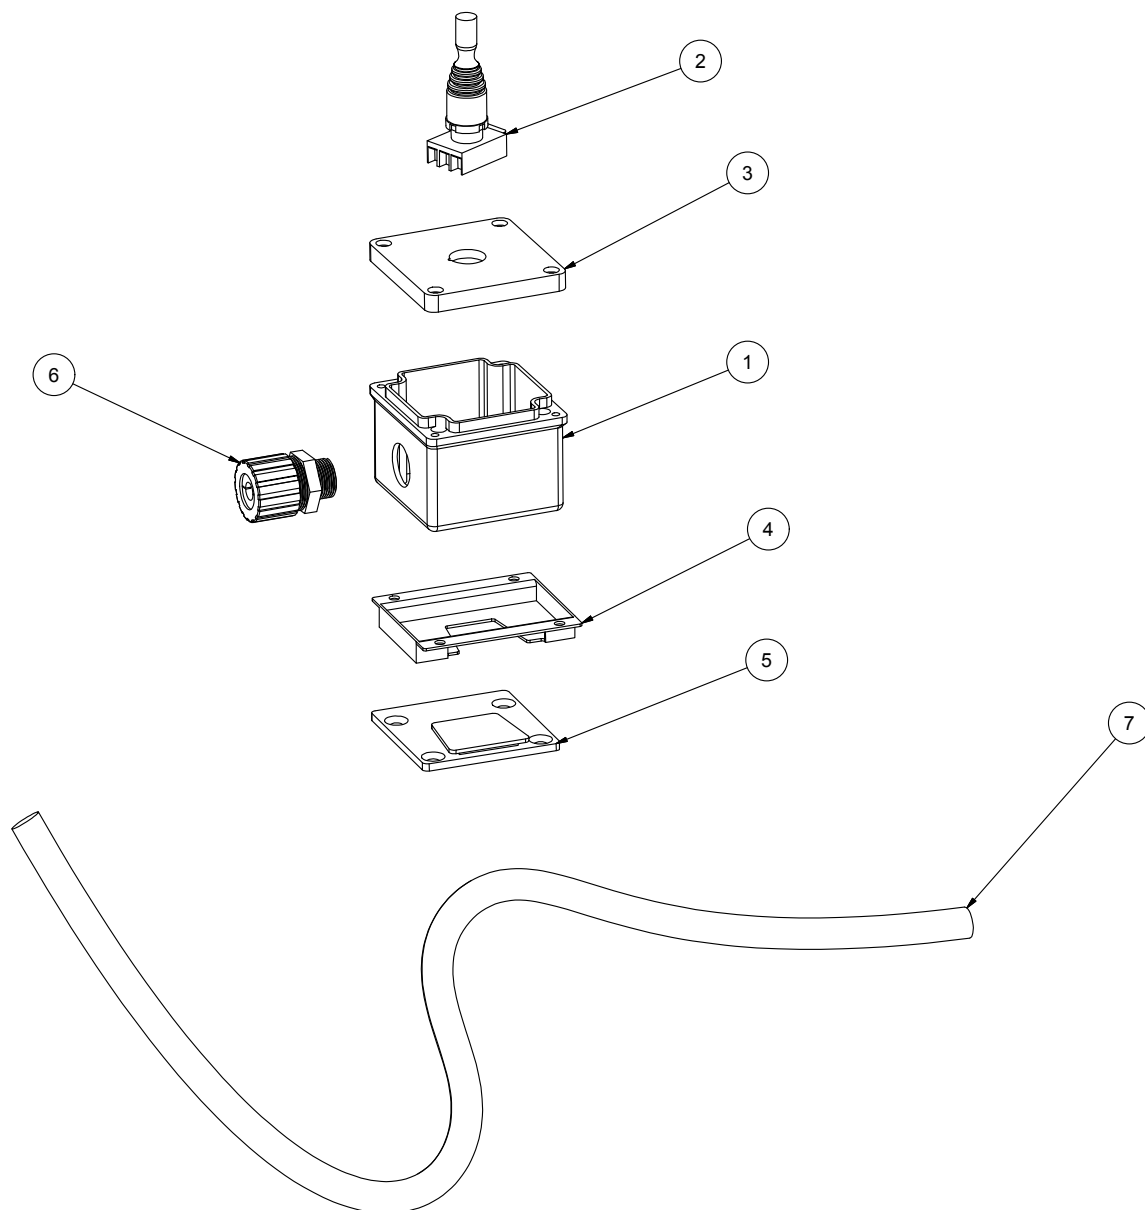

ITEM #	PART NUMBER	DESCRIPTION
1	800.903	Joystick
2		Box Cover
3		Box
4	800.952	Box Bottom, comes with #5
5	800.952	Box Holder, comes with #4
6	800.953	Grip Fitting, strain relief
7		Wiring Harness

11.3 (2 Axis) Boom Assembly

(2010 thru present)

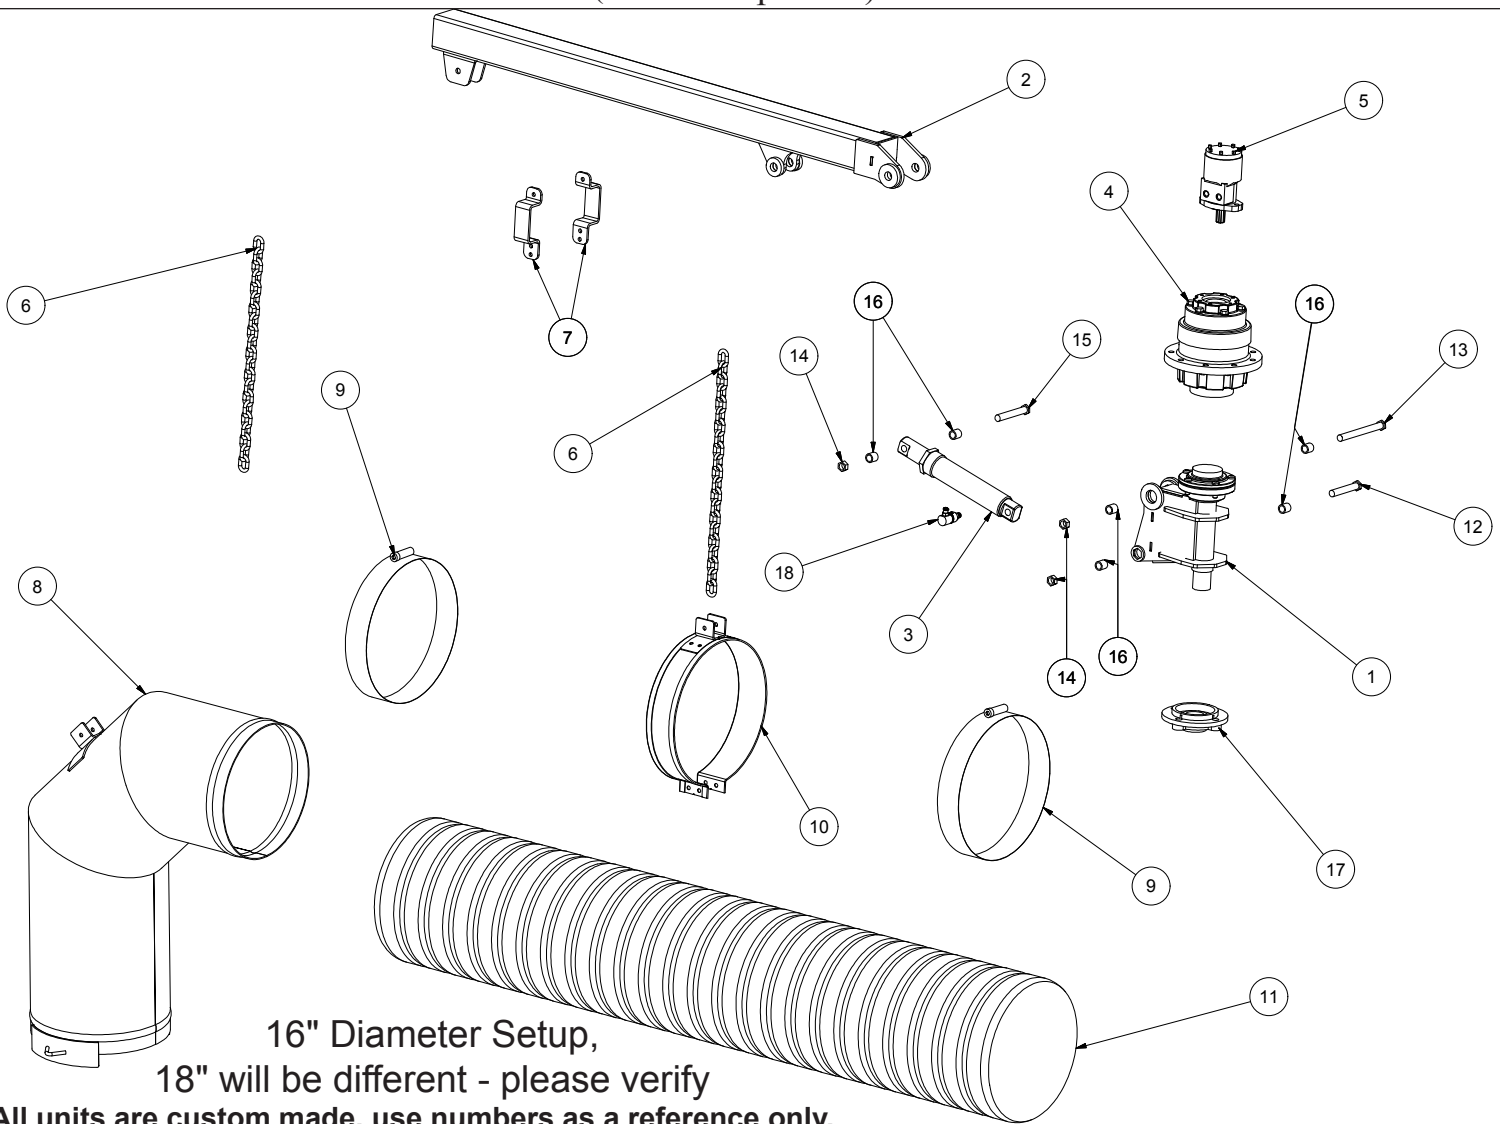


*All units are custom made, use numbers as a reference only.

ITEM #	PART NO.	DESCRIPTION
1	800.707B	Boom Mast
2	LCT616.606MA.3 LCT616.606MA.4	Boom Arm, 2 Axis when using 90 degree nozzle Boom Arm, 2 axis when using standard nozzle
3	SCL816.812	Boom Cylinder
4	800.704B	Auburn Gear
5	800.701D	Hydraulic Motor
6	Call	Chain
7	LCT622.635	Boom Hanger Bracket
8	LCT616.601.90MA	90 Degree Nozzle

ITEM #	PART NO.	DESCRIPTION
9	LCT616.616	Hose Clamp
10	LCT616.603U	Hose Support
11	Varies, please call	Intake Hose
12	800.708	Bolt, 3/4-16 x 4.5" Long
13	800.710	Bolt, 3/4-16 x 7.5" Long
14	800.712	Nut, 3/4"
15	800.709	Bolt, 3/4-16 x 5" Long
16	8X.002E	Bushing, .75"x.375ODx1
17	800.609	Bearing
18	HYF.1028.M	Fitting, 90 degree swivel

11.4 (3 Axis) Boom Assembly

(2010 thru present)

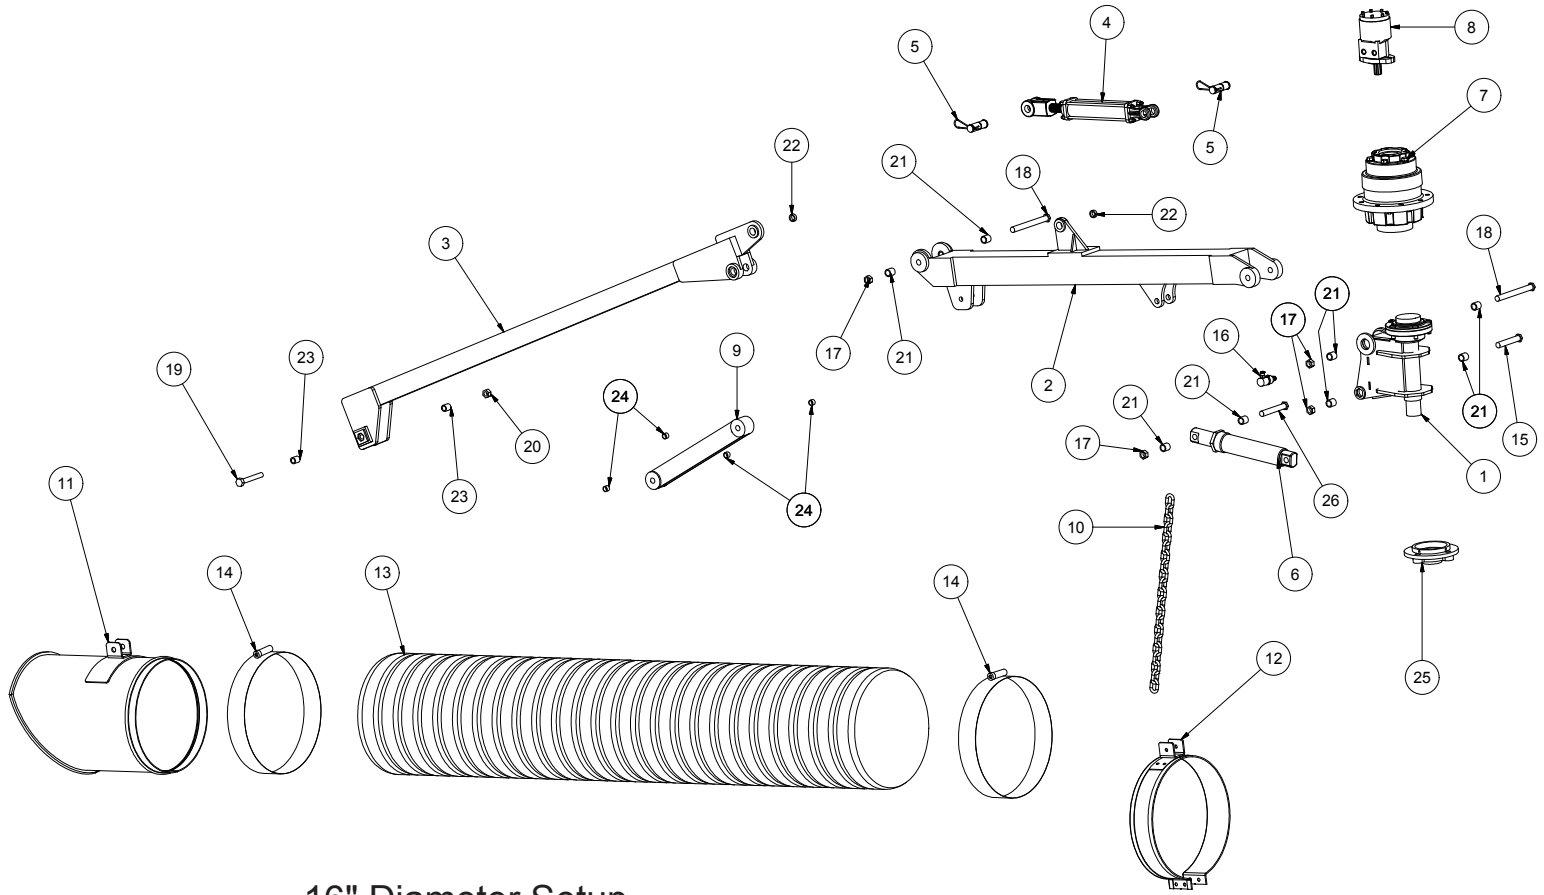

16" Diameter Setup,

18" will be different - please verify


*All units are custom made, use numbers as a reference only.

#	PART NO.	DESCRIPTION
1	800.707B	Boom Mast
2	LCT616.606MA.2	Boom Arm, Up/Down
3	LCT616.606MA.1	Boom Arm, In/Out
4	SCL816.810	Cylinder, In/Out
5	SCL816.814	Pin
6	SCL816.812	Cylinder, Up/Down
7	800.704B	Auburn Gear
8	800.701D	Hydraulic Motor
9	SCL816.813 SCL816.813.24	Hose Support Tube, 18" Hose Support Tube, 24"
10	Call	Chain
11	LCT616.601.A.HD	Nozzle, 45 degree
12	LCT616.603U	Hose Support Band
13	SDH.16.120.UC	Intake Hose, 10' Long

#	PART NO.	DESCRIPTION
14	LCT616.616	Hose Clamp
15	800.708	Bolt, 3/4-16 x 4.5" Long
16	HYF.1028	Fitting, 90 degree swivel
17	800.712	Nut, 3/4"
18	800.710	Bolt, 3/4-16 x 7.5" Long
19	800.711	Bolt, 5/8-11 x 4.5" Long
20	800.713	Nut, 5/8"
21	8X.002E	Bushing, .75"IDx1"ODx1"
22	8X.002G	Bushing, 1"IDx.375"ODx1"
23	8X.002F	Bushing, .625"IDx.875"ODx1"
24	8X.002D	Bushing, .625"IDx.75"ODx.5"
25	800.609	Bearing
26	800.709	Bolt, 3/4-16 x 5" Long

11.5 Hinged Boom Frame Assembly


2or 3 Axis units July 2005 and after

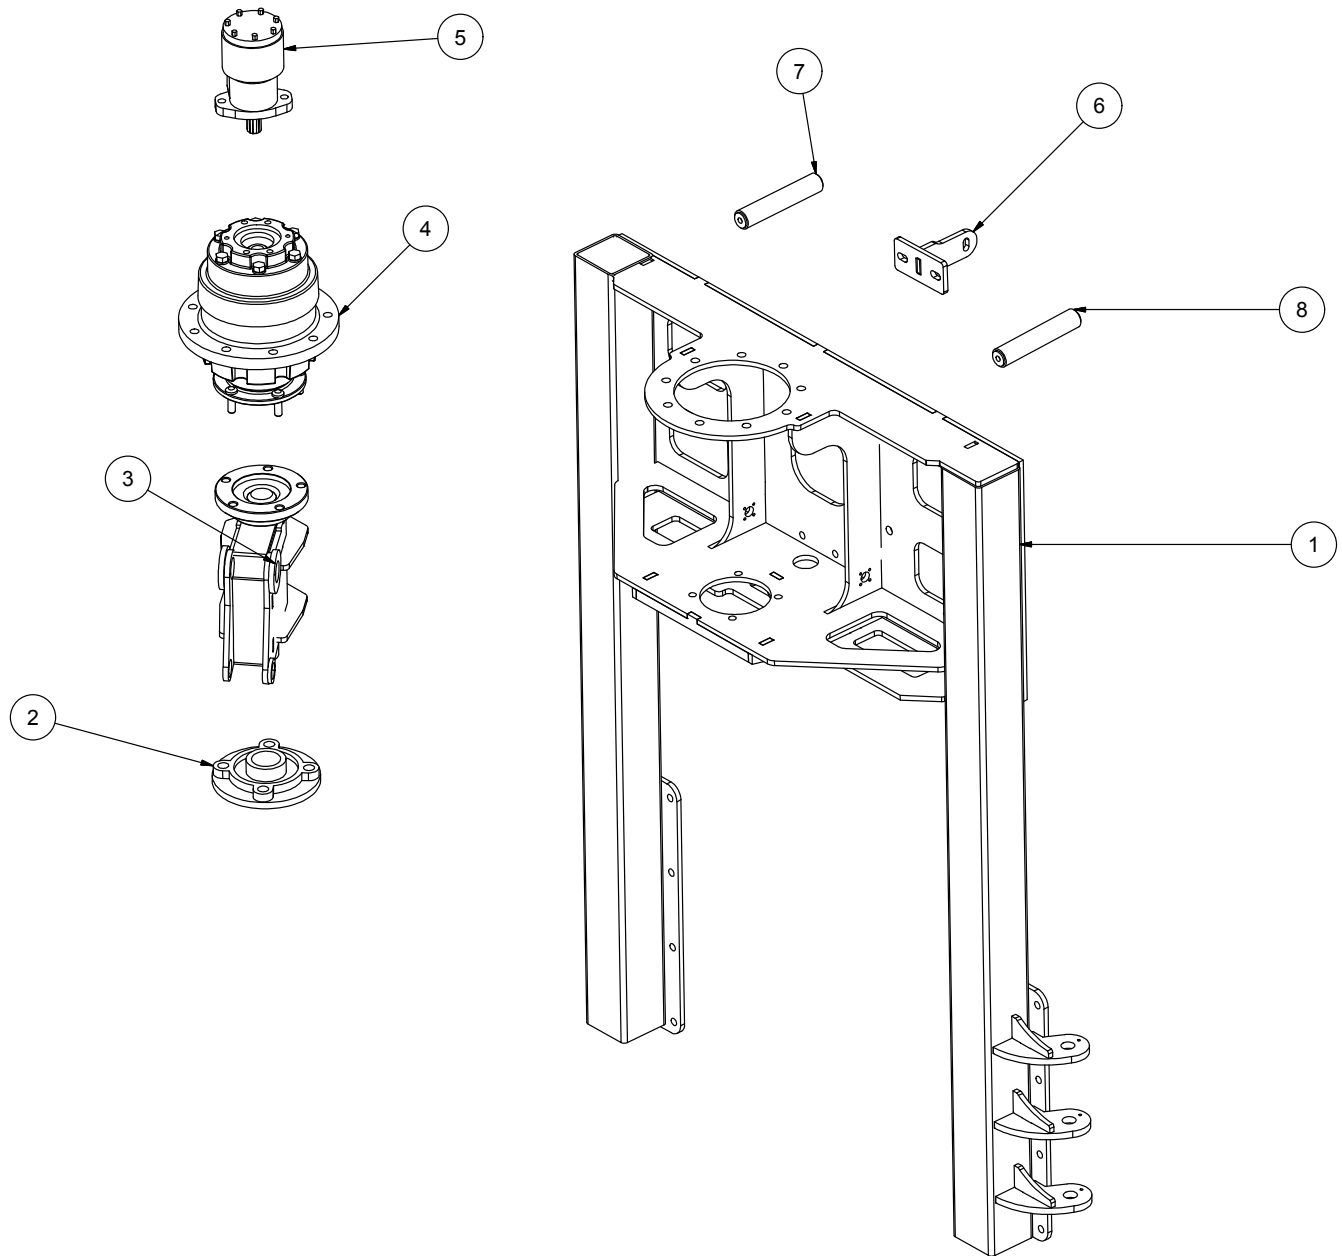

ITEM #	PART NUMBER	DESCRIPTION
1	800.600C	Boom Frame
2	SCL816.501	Bearing
3	800.707A	Boom Mast, Knuckle
4	800.704B	Auburn Gear (see breakdown next page)
5	800.801D	Hydraulic Motor
6	800.609	Frame Support
7	SCL816.503L	Boom Stop, LH
8	SCL816.503R	Boom Stop, RH

11.6 Auburn Gear Drive Assembly - 3 Axis

3 Axis units May 2010 and after

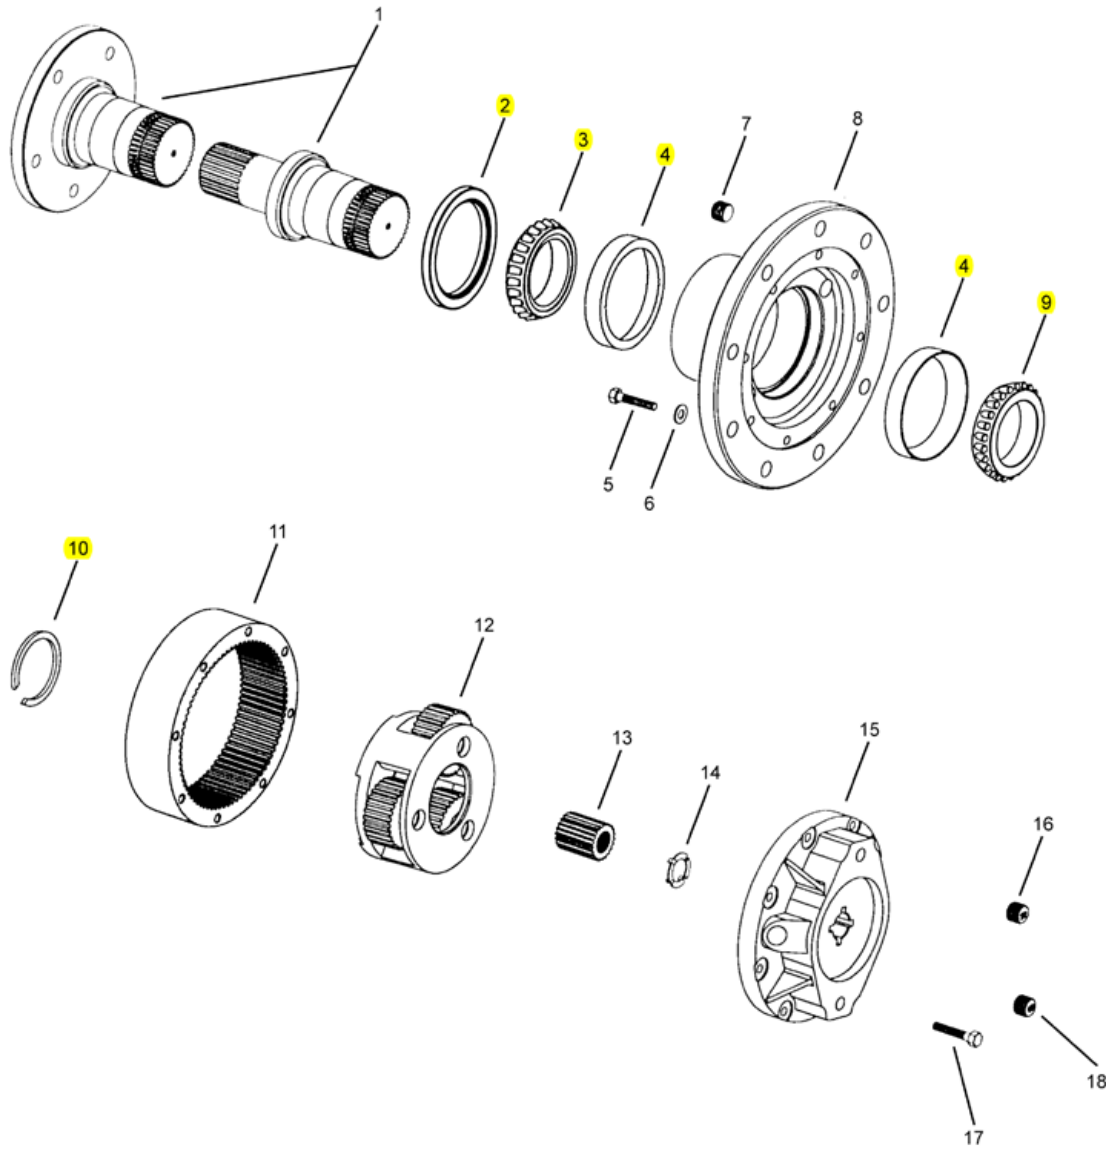

ITEM #	PART #	DESCRIPTION
1		Output Shaft or Spindle
2	14-00-044-010	Oil Seal
3	14-01-101-35	Bearing Cone
4	14-01-102-12	Bearing Cup
5		Hex Head Bolt (grade 8)
6		Flat Washer
7	03-04-101-09	Pipe Plug
8		Hub
9	04-01-101-17	Bearing Cone
10	14-02-410-003	Retaining Ring Kit
11		Ring Gear

ITEM #	PART #	DESCRIPTION
12		Carrier Assembly
13		Sun Gear
14		Thrust Washer
15		Cover
16	14-00-052-002	Magnetic Plug
17		Hex Head Bolt
18	03-04-101-01	Pipe Plug
*	641008	Bearing and Seal Kit, includes #2,3,4,8 and 10
*	641017	Seal Kit, includes #2 & #10

⚠ WARNING

Read and understand this entire manual before operating, maintaining or repairing the leaf vacuum.



DANGER

**DO NOT RIDE, SIT OR STAND
ON UNIT.**

**RIDING ON UNIT
COULD RESULT IN BODILY
HARM OR FATAL INJURY
USE EXTREME CAUTION WHEN
UNIT IS IN USE, OR IN MOTION.**

If the decal above is missing or damaged call ODB immediately and we will send you a replacement free of charge. Never operate a unit with damaged or missing safety decals.

⚠ DANGER

DO NOT RIDE, SIT OR STAND ON UNIT

⚠ DANGER

**DO NOT MODIFY THE UNIT FOR RIDERS IN ANY
WAY. SERIOUS INJURY OR DEATH MAY OCCUR**

ODB's leaf collectors are NEVER to be used to accommodate riders. If your unit has been modified to accommodate riders, remove these modifications immediately as this can result in serious injury or death.

A

Actuating Lever Arm 103
Actuator
 Remote or Clutch 84
Air Cleaner 74
Air Deflector 85
Alignment Tool 89
Axle 98
Axle Hub 102

B

Backing Plate 103
Baffle 74
Battery 81
Battery Box Door 98
Battery Box Latch 98
Battery Cable, 81
Battery Tray 81
Bearing Block 110
Bearing, Boom 93
Bearing Cone 102
Bearing Cup 102
Bearing, Flange
 Multi Axis 110
Bearing Plate, Inner 92
Bearing, PTO 88
Bearing Retainer Cover 88
Bearings, Boom Mast 105
Belt Guard 94, 95
Blower Housing Back 92
Blower Housing Fac 93
Blower Housing Face 93
Boom Arm 105
 Multi Axis 110
Boom Cylinder 105
Boom Mast 105
 Multi Axis 110
Brake Assembly 102, 103
Break Away Switch 100
Bushing, Impeller 92

C

Chaffe Eliminator 85
Chain
 Boom Support 106
Chain, Safety 100
Clamp, Hose 106
Clip Spring 89
Clutch 87
Clutch Bracket Arm 90
Clutch Cover 87
Clutch Cylinder 90
Coil, Boom Pump 107

Cover, Solenoid 76
Cylinder, Clutch 90
Cylinder, Hydraulic
 Multi Axis 110

D

Door, Inspection 93
Drum 102
Dust Cap 74

E

Engine Adjuster Nut 77
Engine Base Adjuste 77
Engine Moun 77
Exhaust Manifold 78

F

Fan, Chaffe 85
Fender 98
Filler Cap 109
Filter Element 74
Filter, Hydraulic 109
Flange Bearing 85
Fork 89
Front Panel 76
Fuel Cap 99
Fuel Fitting 99
Fuel Line Bracket 82, 99
Fuel Sender 99
Fuel Tank 99

G

Grease Cap 102
Grease Seal 102
Grommet - Door 82

H

Handle, Clutch 89
Hood 76
Hook, Safety 100
Hose
 Intake 106
Hose Clamp 106
Hose Flange, Multi Axis 110
Hydraulic Motor 110
Hydraulic Tank 109

I

Impeller 92
Inspection Door 93
Intake Flange 93
Intake Nozzle 106

J

Joystick 109

K

Key, Impeller Bushing 92
Key, Stepdown 88

L

Latch 76
License Plate Bracket 98
Light, LED 98
Light, License Plate 98
Light, Marker 98
Limit Switch 84, 93
Liner Set 92
Liner, Wrap 92
Linkage 90
Linkage Bracket 89
Linkage Rod 89
Lock Rod 93
Lug Nut 102

M

Motor, Boom Pump 107
Motor Mount 77
Mounting Bands 74
Muffler 78

N

Nozzle, Intake 106

O

Oil Fill Access Door 76
Oil Pressure Switch 80
Oil Temperature Sender 80
Overcenter Latch 76, 85

P

Panel Door 76
Parking Jack 100
 Hydraulic 101
Pilot Bearing 87
Pintle Eye 100
Pivot Shaft 90
Power Cord 100
Pre-Cleaner Assembly 74
 Bowl 74
Pressure Plate 87
PTO 87
PTO Assembly 88

R

Radiator 79
Bracket 79
Fan 79
Grommet 79
Shim 79
Shroud 79
Radiator Access Door 76
Radiator Cap 79
Radiator Hose 79
Radiator Screen 76
Clamp 76
Retractor Spring 103
Remote Clutch 83
Adaptor 83
Cable 83
Reservoir, Boom Pump 107
Return Spring 89
Rim 98
Rocker Ball 89
Roller Bearing 84
Rubber Plug 102

S

Sender
Oil Pressure 80
Water Temperature 80
Shaft Bushing, PTO 89
Shaft Collar, PTO 89
Shaft, Lever 89
Shaft Protector 92
shaft, PTO 88
Shroud 79
Side Panel 76
Side Rail 77
Site Gauge 109
Spacer, Bearing 92
Spindle Nut 102
Spindle Washer 102
Sprocket 110
Starter Solenoid 82
Strip Brush 85
Strobe Light 75
Strobe Module 75
Support Chain 106
Switch
Oil Pressure 80
Water Temperature 80
Switch, Up / Down 105

T

Tail Light 98
Tang Washer 102
Terminal Cover 81
Throttle Cable Bracket 82

Throttle Connector 82
Throw out Bearing 87
Tire 98
Torque Coupling 84
Tow Bar 100
Trailer Bed 98

U

Up/Down Switch 105

V

Vacuator Valve 74
Valve Body 109

W

Water Temperature Sender 80
Water Temperature Switch 80
Wheel Stud 102



**DO NOT ATTEMPT TO OPERATE
OR REPAIR
THE LEAF COLLECTOR WITHOUT FIRST
READING AND UNDERSTANDING THIS
MANUAL**

IF YOU HAVE ANY QUESTIONS CONCERNING THE
INSTALLATION OR OPERATION OF THIS UNIT, PLEASE CALL
ODB FOR ASSISTANCE BEFORE ATTEMPTING TO REPAIR OR
OPERATE THE UNIT.

**IMPROPER USE OF ANY MACHINE CAN
RESULT IN SERIOUS INJURY!**

**STUDY AND FOLLOW ALL SAFETY
PRECAUTIONS BEFORE OPERATING OR
REPAIRING UNIT**

THIS MANUAL IS AN INTEGRAL PART OF THE LEAF COLLECTOR AND SHOULD
BE KEPT WITH THE UNIT WHEN IT IS SOLD.

**ODB COMPANY
5118 Glen Alden Drive
Richmond, VA 23231
800-446-9823**

