

Electric Solid Plate Hob

User and Installation

Manual



Model: UEHS601SS

Your 1 Year Guarantee

Your appliance carries a 1 year parts and labour warranty. To fulfill the conditions of your guarantee, the appliance must be correctly installed, operated in accordance with the instructions and only be used for normal domestic purposes.

Please note that the guarantee and service availability only apply to the United Kingdom mainland.

Customer Service

In case of difficulty please call the Customer Service Helpline number.

0844 800 7848

- When calling customer service, please ensure you have the model and serial number to hand.
- Please keep your receipt or invoice in a safe place as they will be required as proof of date of purchase.

Appliance 365 Limited, 730 Mandarin Court, Centre Park, Warrington, WA1 1GG

Please make a note of the serial number of your appliance here as this will be requested in the event of a servicing requirement. You will find this located on the dataplate on the underside of your appliance.

Model Number: _____

Serial Number: _____



For Your Safety

These instructions have been drawn up for your safety and that of others. We therefore request you read them carefully before installing and using this appliance. Keep

this instruction manual in a convenient place near the appliance for future reference. If the appliance is sold or moved, make sure that the manual is handed over to the new user.

This appliance must only be installed by a qualified engineer in accordance with the instructions provided and the regulations in force. The manufacturer declines all responsibility for improper installation which may harm persons or animals, or cause damage to property.

This appliance must only be used for the purpose for which it was expressly designed. Any other use (e.g. heating rooms) is considered to be improper and consequentially dangerous. The manufacturer declines all responsibility for damage resulting from improper and irresponsible use.

DO NOT attempt to modify or change the characteristics of this product.

1. After removing the appliance from the packaging, make sure that it is not damaged. Report any damage or losses to your dealer before installing or putting the appliance into operation.
2. Check the Data Plate against the domestic supply to ensure that the appliance is correctly calibrated for the type of electricity supply in the property.
3. The Manufacturer declines all responsibility for failure to comply with Health and Safety accident prevention regulations.

During use

- ❖ This product is designed for domestic use only, for the cooking of food, and not for professional catering purposes. It should not be used for any other purpose.
- ❖ When using the appliance for the first time, some smoke may be emitted. This is quite normal and not a cause for concern. Leave the element on for a short period to burn off any excess sealant.
- ❖ After using the appliance, make sure that all controls are returned to the “OFF” position (0).
- ❖ If you use an electrical socket close to this appliance, take care to ensure that the cable to the appliance you are using cannot make contact with the hot parts of this appliance.
- ❖ Do not use unstable pans and always ensure the pan handle is positioned away from the edge of the hob.
- ❖ Do not cover the hob or place combustible materials on or near the surface when the hob is in use.
- ❖ Do not fill deep fat frying pans more than one third full of oil and NEVER leave them unattended.
- ❖ In the event of a fire:
 1. Don't take any risks.
 2. Turn off the heat only if it is safe to do so.
 3. Never throw water over it.
 4. Don't tackle the fire yourself.

5. GET OUT, STAY OUT and CALL 999

General safety

- ❖ This appliance must only be used by adults. Make sure that children are kept away from hot cooking areas when the appliance is in use. Children must not be left un-supervised or allowed to touch or play with the appliance controls.
- ❖ This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ❖ The exposed parts of this appliance heat up during cooking and remain hot for some time, even after it is switched off. Keep children well away at all times.
- ❖ Do not touch the hob with wet hands or feet.
- ❖ Do not operate the hob whilst bare foot.
- ❖ Please remove all packaging prior to use and dispose of or recycle accordingly.
- ❖ Packaging materials (e.g.; polystyrene and plastic items) must be kept out of reach of babies and young children at all times due to risk of suffocation.

The manufacturer cannot be held liable for any damage caused due to non-compliance with these important safeguards.

Environmental protection advice

- ✓ All the materials used in the construction of this appliance are environmentally friendly and recyclable. Please make your contribution to conserving the environment by using the local waste collection channels available in your area.

Disposal of your old appliance

Before discarding of your old appliance:

- Switch off and disconnect it from the power supply
- Cut off the plug
- Cut off the cable directly behind the appliance to prevent mis-use.

These steps should be carried out by a suitably qualified and competent person.



This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

 
By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Understanding your appliance

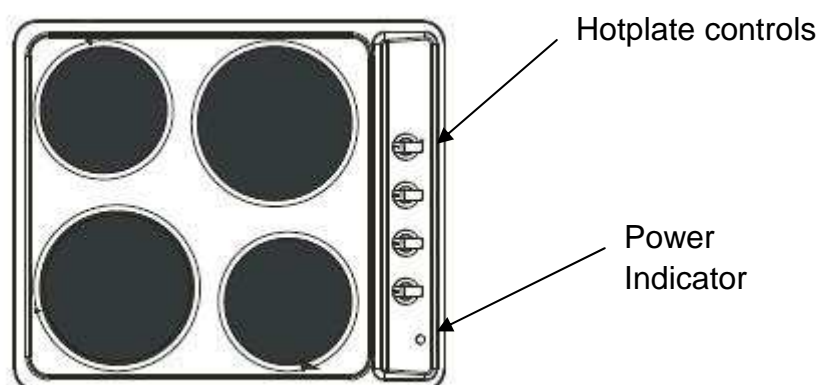

Front left zone	2000w red spot – 180mm diameter
Rear left zone	1000w – 145mm diameter
Rear right zone	1500w – 180mm diameter
Front right zone	1500w red spot – 145mm diameter

Using your appliance

This hob features 2 rapid and 2 standard hotplates. Rapid hotplates are denoted by the red dot in the centre of the element. To switch on the hob, turn the control knob in either a clockwise or anti-clockwise direction and select the required power level (see table overleaf). There are 6 power levels in total, labelled as 1-6, with 6 being the highest. The elements are controlled by a thermostat which will regulate the power to the element to maintain the required temperature.

The power indicator light will illuminate when the hob is in use.

Always turn the control knob to the off position (0) when cooking has been finalised.


	Reheating	Cooking	Frying
Power level	1 or 2	3 or 4	5 or 6

Advice on the use of solid plate hobs

- Use only flat-bottomed pans with a diameter not less than the diameter of the element itself.
- Do not use oversized pans. An overhang of more than 50mm can cause overheating which can result in damage to the hob top.
- Take care to ensure fluids do not spill on the elements.
- Never leave the elements switched on without pans on them or with empty pans on.
- Never use the elements to warm plates.
- Only switch the elements on once the pan is in position on the hotplate.
- Switch off the element before removing pans.

Caution: The hotplate will remain warm for some time after the elements have been switched off. Take care to avoid the risk of burns.

 Caution: Hot fat is highly flammable so pay extra attention when preparing food with grease or oil. Frying should only be carried out under constant supervision.

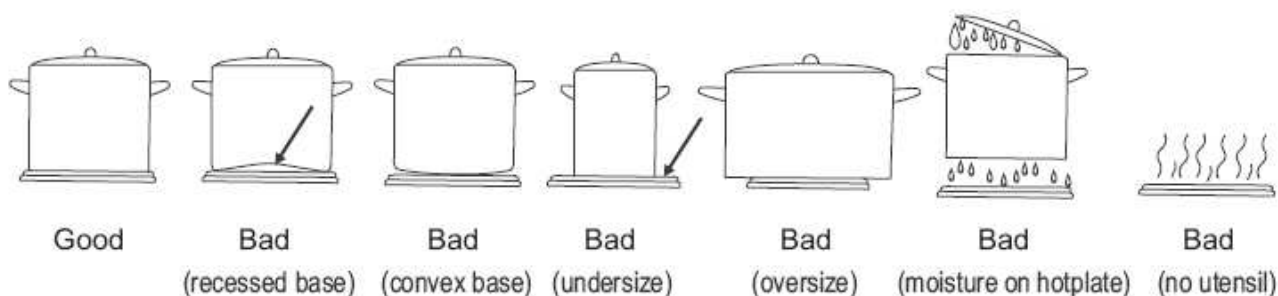

Cleaning and maintenance

- ❖ Before undertaking any cleaning operation, disconnect the appliance from the electrical supply and allow it to cool down.
- ❖ Keep the appliance thoroughly cleaned. Accumulations of food residues may cause fire risks.
- ❖ Clean the hob regularly with a soft damp cloth and lukewarm water with a little liquid detergent. Dry using a soft cloth.

- ❖ Clean the elements (solid plates) with a moist cloth then lightly oil them.
- ❖ **Do not use the following products:**
 - household detergents or bleaches.
 - soaped scouring pads.
 - steel wool scouring pads.
 - stain removers for baths or sinks.
 - paint remover, acids or similar solvents.
- ❖ Do not use Steam Cleaners to clean this appliance.
- ❖ Do not use scourers or abrasive materials that may scratch when cleaning the surfaces of the hob.
- ❖ Do not use too much water when cleaning as excess water can damage the electrical elements.

Important

Over time the stainless steel hotplate rims may discolour slightly. This is quite normal and not a cause for concern or complaint. This will not affect the operation of the appliance.

Service and parts

Before leaving the factory, this appliance was tested by specialist skilled staff. In the event of component failure or malfunction, do not attempt to repair the appliance yourself. Repairs by unskilled persons may cause damage and accidents. Contact your nearest Service Centre, specifying the nature of the problem, the model number of the appliance and the serial number. This information is provided on the data label which is located on the underside of the hob.

Any service work on this appliance should only be carried out by an Authorised Technical Service Centre, who will always use original spare parts.

Instructions for installation

Installation of the appliance and its connection to the electrical supply must only be carried out by a QUALIFIED ENGINEER in accordance with the regulations in force.

Before any maintenance or repairs are carried out, it is important to check that the appliance is DISCONNECTED from the electrical supply. The manufacturer declines any responsibility for damage arising from installation in breach of the regulations in force or from failure to comply with Health and Safety Regulations.

Electrical connection

The appliance is manufactured to operate with a power supply voltage of 230V to 240V single-phase. The connection must be made in accordance with I.E.E. Regulations and Laws in force.

Before making the connection, make sure that:

- 1) The safety circuit-breaker and the electrical system are able to withstand the load of the

appliance (see data plate).

- 2) The power supply system has an Earth connection in good working order in accordance with the Regulations in force;
- 3) The omni polar isolation switch used is easily accessible with the appliance installed.
- 4) When the appliance is installed above a built in oven, the two appliances must be connected to the electrical supply separately to ensure the easy removal and safe operation of the appliances.
- 5) The supply cable must be positioned so that it does not reach a temperature of 50°C above the room temperature at any point.

If you wish to make a direct connection to the mains, an omni polar switch with a separation gap between the contacts of at least 3 mm, with suitable R.C.D. / R.C.C.B., current rating for the load and complying with the regulations in force, must be installed between the appliance and the mains. The switch must not break a contact in the yellow/green Earth wire.

The Brown live wire (connected to the “L” terminal of the terminal board) must always be connected to the live wire of the power supply.

 
The Blue neutral wire (connected to the “N” terminal of the terminal board) must always be connected to the neutral wire of the power supply.

If the supply cable should need to be replaced, use only H05VV-F 3*2.5mm².



Building into fitted kitchen units

This hob is designed for installation into fitted kitchen units up to 600mm deep on the assumption that the clearances indicated below are observed. The worktop height should be between 40 and 50mm.

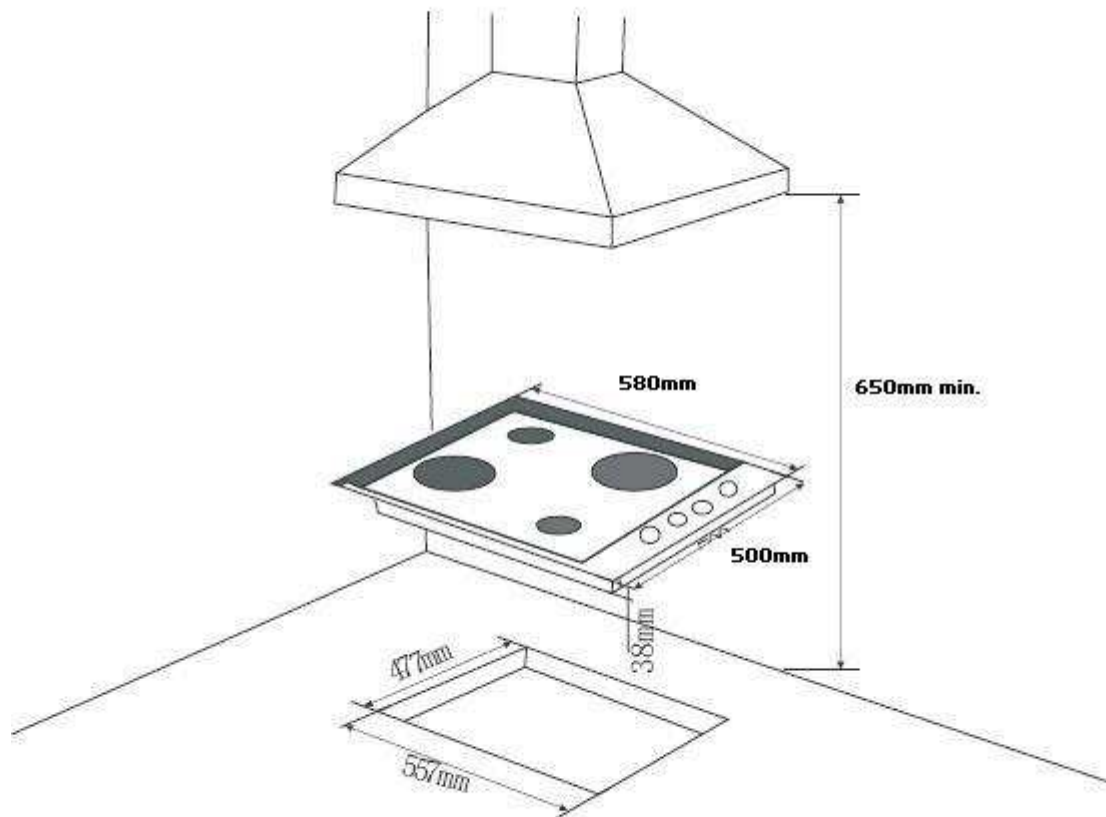

The wall and worktop materials must be able to withstand temperatures of up to 80°C, likewise with any components used in their construction / installation.

Fire resistant materials (eg; ceramic tiles) should be at a distance of 450mm above the hotplate if the wall or other vertical structures are within 200mm of the elements.

Cooker hood extractors should be at a minimum of 650mm above the hotplate.

Always ensure a 50mm clearance between the underside of the appliance and any combustible surface / material.

When fitting the hob above a drawer or standard housing unit, suitable precautions must be taken to prevent contact with the casing of the hob, which becomes very hot during operation. The recommended method for overcoming this problem is to fix a wooden panel within the cabinet at a distance of 15mm below the underside of the hob (see fig 1). This panel must have

adequate ventilation to the rear.


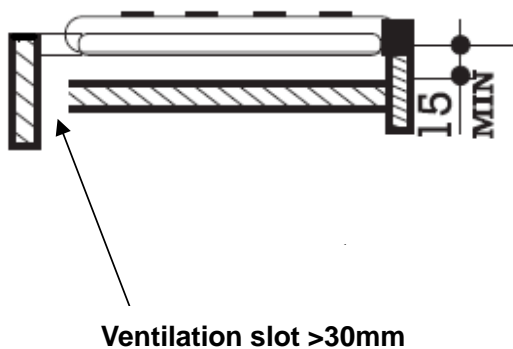 


Fig 1


The panel underneath the hob must be easily removable to allow for any servicing requirements.

Inserting and fixing the hob

 Before inserting the hob into the work surface, place the adhesive seal (E) on the underside of the hob as shown below. It is important to fix this gasket evenly, without gaps or overlapping to prevent liquids from seeping underneath the hob.

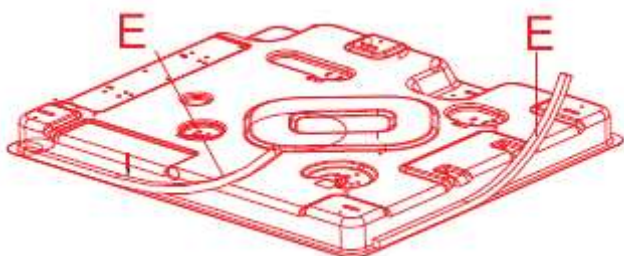

 Fit the hob into the opening, ensuring it is centrally located, and push down to ensure it is resting firmly on the cabinet. Fasten the appliance to the underside of the unit with the brackets supplied as detailed overleaf.

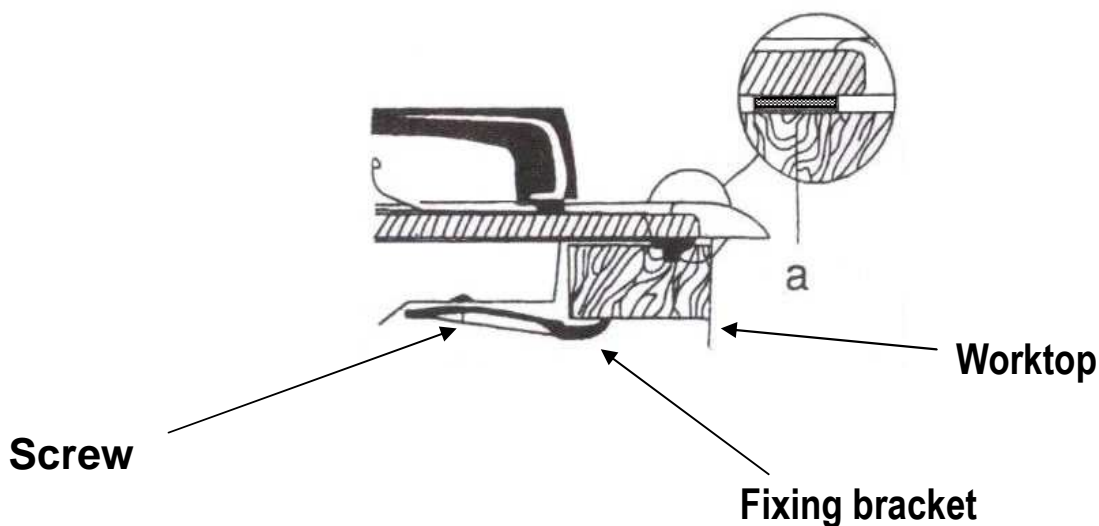

Secure the hob to the underside of the worktop using the fixings provided.

Screw one end of the bracket into the pre-drilled holes in the underside of the hob.

The other end of the bracket should be located underneath the worktop to secure the hob in position.

Technical Data

Power supply: AC220-240V ~ 50Hz

Product dimensions: W580 x D500 x H68mm

Installation dimensions: W557 x D477

Net Weight: 9kg

Total wattage: 6kw



Appliance365 End User Warranty Conditions

The conditions below outline the prerequisites and scope of the warranty offered by Appliance 365 Limited ("we / us") to consumer end users of appliances supplied by or through us. Please note that these conditions do not affect your statutory rights or the obligations of your retailer and your contract with them.

We provide warranty cover for appliances supplied by or through us for a period of 12 months from the date of delivery of the appliance to the initial end user subject always to the following conditions:

1. The appliance must be correctly installed and operated in accordance with its instructions and only be used for normal domestic purposes. Warranty cover is available only to consumer end users of the appliance; professional or commercial use of the appliance is not covered by this warranty.
2. For the warranty to be valid you must register the warranty together with your details within 28 days of delivery of the appliance to the initial end user. To register the warranty, please follow the instructions on the form included in the document package accompanying your appliance.
3. In accordance with the conditions below (items 4 - 8), defects affecting the appliance which are clearly attributable to material and/or manufacturing faults will be rectified, provided they are reported immediately after being identified and within 12 months of delivery of the appliance to the initial end user.
4. To make a claim under this warranty please contact our customer service department using the number provided in the appliance's service manual, giving full details of the appliance concerned (such as make, model and serial number) and the defect in respect of which the claim is being made. We reserve the right to inspect the appliance following notification of the alleged defect to verify whether a warranty claim is valid in accordance with the terms and conditions of this warranty. You must (wherever possible) retain the appliance in the condition as when the defect was reported until inspection has been carried out. If no defect is identified in the appliance upon inspection a reasonable call out charge may be applied.
5. The warranty does not cover fragile items such as glass or cosmetic parts or consumable items such as light-bulbs. Warranty liability will not be triggered by minor variances from nominal features which are of no significance to the appliance's value or fitness for purpose, or damage caused by the chemical or electrochemical effects of water and generally by exceptional environmental conditions, inappropriate operating conditions, or the appliance having come into contact with unsuitable materials. Likewise, no warranty liability will be accepted if the defects stem from transport damage for which we are not responsible, improper installation and assembly, improper use, poor maintenance or failure to follow operating or assembly instructions or any other instructions or guidance in respect of the storage, use or operation of the appliance. Furthermore, warranty does not apply to any defect arising from fair wear and tear, willful damage, accident or negligence by the end user or any third party.

This warranty will not apply: -

- a) If repairs or other interventions are carried out by persons not authorised by us to take such action, or if our appliances are fitted with non-original spare parts, extras or accessories; and / or
 - b) In the event of physical or verbal abuse towards any member of our staff.
6. In the event that a warranty claim is verified as valid, warranty provision will be free of charge and we will decide (at our discretion) whether this will take the form of a repair or the replacement of the appliance. All repairs to appliances will be carried out on the premises at which they are installed. Once repair / replacement has taken place, our responsibility under this warranty in respect of that reported defect will be complete. A purchase receipt with date of purchase or delivery must be presented prior to commencement of any repair or replacement. Replaced parts pass into our ownership.
 7. Service may not be available in all of the islands around the UK and Ireland. Please check with your retailer or contact our customer service department.
 8. The provision of services under warranty neither extends the 12 month term of the warranty nor sets in motion any new warranty period. The warranty period for spare parts fitted ends with the expiry of the 12 month warranty on the appliance as a whole.
 9. Nothing in this warranty shall exclude or limit our liability for matters which cannot be excluded or limited by law (for example, but without limitation, death or personal injury arising from our negligence or our fraudulent actions or statements).
 10. Subject to item 9 above, we shall not have any liability in respect of any special, indirect or consequential losses (including for example, loss of salaries or profit, loss of business, loss of income or revenue, loss of goodwill or reputation, loss of anticipated savings or loss of opportunity) except where loss of or damage to your physical property was a foreseeable consequence of our failure to comply with the terms of any contract between us.
 11. This warranty is offered only to the initial end user of the appliance and is not transferable to any other person unless we have agreed to this in writing.
 12. If any court or competent authority decides that any of the provisions (or any part of a provision) of these warranty conditions are invalid, unlawful or unenforceable to any extent, the term (or part thereof) will, to that extent only, be severed from the remaining terms, which will continue to be valid to the fullest extent permitted by law.
 13. These warranty conditions are governed by English law and the courts of England will have jurisdiction in relation to any dispute arising out of them.
 14. These warranty conditions only apply to appliances purchased in the United Kingdom.

Note: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.

Model No. UEHS601SS

October 2009

Appliance 365 Ltd.

Crantage House

730 Mandarin Court

Centre Park

Warrington

United Kingdom

WA1 1GG

www.appliance365.co.uk