



KONICA MINOLTA

SERVICE MANUAL

FIELD SERVICE

bizhub 162 bizhub 210

Main Unit

2005.04

KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. Ver. 1.0

repairmanual.com

After publication of this service manual, the parts and mechanism may be subject to change for improvement of their performance.

Therefore, the descriptions given in this service manual may not coincide with the actual machine.

When any change has been made to the descriptions in the service manual, a revised version will be issued with a revision mark added as required.

Revision mark:

- To indicate clearly a section revised, show \triangle to the left of the revised section.
A number within \triangle represents the number of times the revision has been made.
- To indicate clearly a section revised, show \triangle in the lower outside section of the corresponding page.
A number within \triangle represents the number of times the revision has been made.

NOTE

Revision marks shown in a page are restricted only to the latest ones with the old ones deleted.

- When a page revised in Ver. 2.0 has been changed in Ver. 3.0:
The revision marks for Ver. 3.0 only are shown with those for Ver. 2.0 deleted.
- When a page revised in Ver. 2.0 has not been changed in Ver. 3.0:
The revision marks for Ver. 2.0 are left as they are.

2005/04	10	—	Issue of the first edition
Date	Service manual Ver	Revision mark	Descriptions of revision

service-repairmanuals.com

CONTENTS

General

1.	System configuration.....	1
1.1	bizhub 210	1
1.2	bizhub 162	2
2	Product specification	3
2.1	Copier	3
2.2	Fax Kit (FK-505): (Option)	6

bizhub 162
bizhub 210

Maintenance

3.	Periodical check	7
3.1	Maintenance parts	7
3.1.1	Replacement parts.....	7
3.1.2	Cleaning parts.....	8
3.2	Concept of parts life.....	9
3.3	Maintenance procedure (Periodical check parts)	10
3.3.1	Replacing the Separation Roller Assy and Feed Roller	10
3.3.2	Replacing the Paper Dust Remover Assy.....	11
3.3.3	Replacing the Imaging Unit (IU)	11
3.3.4	Disassembly of the IU	12
3.3.5	Replacing the PC Drum	13
3.3.6	Replacing the Ozone Filter.....	14
3.3.7	Replacing the PC Drum Charge Corona Assy	14
3.3.8	Replacing the Cleaning Blade.....	14
3.3.9	Cleaning of the PC Drum Paper Separator Fingers.....	15
3.3.10	Cleaning of the Ds Collars	15
3.3.11	Cleaning of the Developer Scattering Prevention Plate	15
3.3.12	Replacing the Developer	16
3.3.13	Cleaning of the Pre-Image Transfer Guide Plate	16
3.3.14	Replacing the ATDC Sensor	17
3.3.15	Application of Toner	17
3.3.16	Replacing the Image Transfer Roller Assy	18
3.3.17	Replacing the Fusing Unit.....	19
3.3.18	Cleaning of the Original Glass and Original Scanning Glass.....	19
4.	Service tool	20
4.1	CE Tool list	20
5.	Firmware upgrade	21

General

Maintenance

Adjustment/ Setting

Troubleshooting

5.1	Preparations for Firmware rewriting	21
5.1.1	Installing the Driver	21
5.2	Firmware rewriting.....	23
5.2.1	Updating method	23
5.2.2	Procedure when Upgrading the Firmware has failed.....	25
6.	Other	27
6.1	Disassembly/Adjustment prohibited items.....	27
6.2	Disassembly/Assembly/Cleaning list (Other parts)	29
6.2.1	Disassembly/Assembly parts list	29
6.2.2	Cleaning parts list	30
6.3	Disassembly/Assembly procedure	31
6.3.1	Exterior Parts	31
6.3.2	Master Board (PWB-A)	33
6.3.3	Control Board (PWB-C/C).....	33
6.3.4	High Voltage Unit (HV1).....	35
6.3.5	Power Supply Unit (PU1)	35
6.3.6	Paper Size Detecting Board (PWB-I).....	36
6.3.7	Heater Relay Board (PWB-RY): 200 V area only.....	37
6.3.8	Pre-image Transfer Board (PWB-R2)	37
6.3.9	Manual Bypass	38
6.3.10	Manual Bypass (Duplex Unit)	38
6.3.11	Toner Hopper Unit.....	38
6.3.12	PH Unit	39
6.3.13	Disassembly of the Fusing Unit	40
6.3.14	CCD Unit.....	43
6.3.15	Scanner, Exposure Lamp, and Inverter Board (PU2)	44
6.3.16	Scanner Motor	45
6.3.17	Scanner Drive Cables.....	46
6.3.18	Main Motor	54
6.3.19	Power Unit Cooling Fan Motor	55
6.3.20	Fusing Cooling Fan Motor.....	55
6.3.21	Paper Size Sensor Assy	56
6.3.22	Fusing Unit Interlock Switch	57
6.3.23	Inch/Metric Sensor/1 Assy (3rd area Only).....	59
6.3.24	Flickerless Resistor (Only for 200 V area of bizhub 162).....	59
6.4	Cleaning procedure	60
6.4.1	Separation Roller	60
6.4.2	Feed Roller	60

6.4.3	Upper/Lower Synchronizing Rollers.....	60
6.4.4	Paper Dust Remover.....	61
6.4.5	Bypass Transport Roller/Roll.....	61
6.4.6	Mirrors.....	62
6.4.7	Lens	62
6.4.8	CCD Sensor	62
6.4.9	Scanner Rails/Bearings	63
6.4.10	PH Window	63
6.4.11	Pre-Image Transfer Lower Guide Plate.....	63
6.4.12	Charge Neutralizing Plate	64
6.5	Option counter	64
6.5.1	Installation of the Key Counter	64

Adjustment/Setting

7.	How to use the adjustment section	67
8.	Utility Mode	68
8.1	Utility Mode function tree	68
8.2	Utility Mode function setting procedure.....	69
8.2.1	Procedure	69
8.2.2	Exiting	69
8.2.3	Changing the setting value in Utility Mode functions.....	69
8.3	Setting in the Utility Mode	69
8.3.1	MACHINE SETTING	69
8.3.2	PAPER SOURCE SETUP	70
8.3.3	USER MANAGEMENT	71
8.3.4	ADMIN. MANAGEMENT.....	72
8.3.5	COPY SETTING 1	73
8.3.6	COPY SETTING 2	74
9.	Adjustment item list	76
10.	Service Mode	79
10.1	Service Mode function setting procedure	79
10.1.1	Procedure	79
10.1.2	Exiting	79
10.1.3	Changing the Setting Value in Service Mode Functions	79
10.2	Service Mode function tree.....	80
10.3	Setting in the Service Mode.....	83
10.3.1	SERVICE'S CHOICE	83
10.3.2	ADJUST	90

bizhub 162
bizhub 210

General

Maintenance

Adjustment/Setting

Troubleshooting

10.3.3	COUNTER	97
10.3.4	DISPLAY	101
10.3.5	FUNCTION	102
10.3.6	ADMIN. REGISTRATION.....	105
10.3.7	FIXED ZOOM CHANGE	105
10.3.8	FACTORY TEST	106
10.3.9	CLEAR DATA	107
11.	Security	109
11.1	Security Function Setting Procedure.....	109
11.1.1	Procedure	109
12.	Mechanical adjustment	110
12.1	Adjustment of the Position of the Scanner and 2nd/3rd Mirrors Carriage	110
12.2	CCD Unit Position Adjustment.....	111
12.3	Adjustment of the Gap between the Doctor Blade and Sleeve Roller (Db Adjustment)	112
12.4	Manual Bypass (for the optional AD-504) CD Registration Adjustment *bizhub 210 only.....	114

Troubleshooting

13.	Introduction	115
13.1	Electrical Components Check Procedure.....	115
13.1.1	Sensor	115
13.1.2	Switch	116
13.1.3	Solenoid.....	116
13.1.4	Clutch.....	116
13.1.5	Motor.....	117
14.	Jam Display.....	118
14.1	Misfeed Display	118
14.1.1	Display Resetting Procedure	118
14.2	Sensor layout.....	119
14.2.1	System Mounted with DF-502, PF-502 and MB-501.....	119
14.3	Solution	120
14.3.1	Initial Check Items	120
14.3.2	Misfeed at the Paper Feed Tray/1 Paper Take-up Section.....	121
14.3.3	Misfeed at the Manual Bypass Paper Take-up Section.....	122
14.3.4	Misfeed at the Multiple Bypass Paper Take-up Section (When the optional Multiple Bypass MB-501 is mounted)	123
14.3.5	Misfeed at the Paper Feed Unit Paper Take-up/Vertical Transport Section (When the optional Paper Feed Unit PF-502 is mounted)	124

14.3.6	Misfeed at the Paper Separating Section.....	125
14.3.7	Misfeed at the Fusing/Exit Section.....	126
14.3.8	Misfeed at the Document Take-up Section (When the optional Automatic Document Feeder DF-502 is mounted)....	127
14.3.9	Misfeed at the Document Transport Section (When the optional Automatic Document Feeder DF-502 is mounted)....	128
14.3.10	Misfeed at the Document Exit Section (When the optional Automatic Document Feeder DF-502 is mounted)....	129
15.	Malfunction code	130
15.1	Trouble code	130
15.1.1	Trouble code list	130
15.2	How to reset.....	134
15.3	Solution.....	135
15.3.1	C0000: Main Motor malfunction	135
15.3.2	C0044: ADF Cooling Fan Failure (When the optional Duplexing Document Feeder DF-605 is mounted)....	136
15.3.3	C0045: Fusing Cooling Fan Motor Malfunction.....	137
15.3.4	C004E: Power Supply Cooling Fan Motor Malfunction	138
15.3.5	C0070: Toner Replenishing Motor Malfunction	139
15.3.6	C0210: Abnormal Image Transfer Voltage	140
15.3.7	C0500: Warm-up Failure.....	141
15.3.8	C0501: Warm-up Failure 2 (bizhub 210 Only).....	141
15.3.9	C0510: Fusing Failure (Abnormally Low Fusing Temperature).....	141
15.3.10	C0511: Fusing Failure (Abnormally Low Fusing Temperature 2) (bizhub 210 Only).....	141
15.3.11	C0520: Fusing Failure (Abnormally High Fusing Temperature)	141
15.3.12	C0521: Fusing Failure (Abnormally High Fusing Temperature 2) (bizhub 210 Only).....	141
15.3.13	C0650: Faulty Scanner Home Position Sensor.....	144
15.3.14	C0F32: Faulty ATDC Sensor	145
15.3.15	C0F33: Improperly Adjusted ATDC Sensor	145
15.3.16	C1038: Engine Connection Failure	146
15.3.17	C1200: Faulty ASIC/Memory	147
15.3.18	C1300: Polygon Motor Malfunction	148
15.3.19	C13F0: Faulty HSYNC	148
15.3.20	C133B: Communication with Option Error	149
15.3.21	C133D: ROM Check Error	149
15.3.22	C1468: Faulty Parameter Chip.....	149
15.3.23	C14A3: IR Fluorescent Lamp Fault.....	150

15.4	Miscellaneous Errors	151
15.4.1	Flash ROM Error.....	151
16.	Power supply trouble	152
16.1	The copier does not turn ON	152
17.	Image quality problem	153
17.1	How to identify problematic part	153
17.1.1	Initial Check Items	153
17.1.2	Identification of the Faulty System	154
17.2	Solution	155
17.2.1	Image Reading Section: Blank copy	155
17.2.2	Image Reading Section: Black copy	156
17.2.3	Image Reading Section: Low image density	157
17.2.4	Image Reading Section: Foggy background or rough image	158
17.2.5	Image Reading Section: Black streaks or bands	159
17.2.6	Image Reading Section: Black spots	160
17.2.7	Image Reading Section: Blank streaks or bands	161
17.2.8	Image Reading Section: Uneven image density	162
17.2.9	Image Reading Section: Gradation reproduction failure	163
17.2.10	Image Reading Section: Periodically uneven image	164
17.2.11	Image Reading Section: Moire	165
17.2.12	Printer Section: Blank copy	166
17.2.13	Printer Section: Black copy	167
17.2.14	Printer Section: Low image density	168
17.2.15	Printer Section: Foggy background or rough image	169
17.2.16	Printer Section: Black streaks or bands	170
17.2.17	Printer Section: Black spots	171
17.2.18	Printer Section: Blank streaks or bands	172
17.2.19	Printer Section: Void areas	173
17.2.20	Printer Section: Smear on back	174
17.2.21	Printer Section: Uneven image density	175
17.2.22	Printer Section: Gradation reproduction failure	176
17.2.23	Printer Section: Periodically uneven image	177