

# GENUINE RIGGING-PARTS AND ACCESSORIES



SUZUKI MOTOR CORPORATION reserves the right to add any improvement to change the design or to discontinue any item at any time without notice. Some items might not be compatible with local standards or statutory requirements. Please check with your local AUTHORIZED SUZUKI DEALER for details at the time of ordering. Actual colors might differ from those appearing in this catalogue.

©2009 SUZUKI MOTOR CORPORATION. All rights reserved.

Printed in Japan. © October 2009. Part number: 99000-79N12-047

**SUZUKI MOTOR CORPORATION**

300 TAKATSUKA, MINAMI, HAMAMATSU, JAPAN

Your AUTHORIZED SUZUKI DEALER

BEFORE YOU SAIL OUT, CHECK YOUR MOTOR AND FUEL FOLLOWING THE OWNER'S MANUAL, AND WEAR PROPER ATTIRE.



Way of Life!

# GENUINE RIGGING-PARTS AND ACCESSORIES



**Dear Customer,**  
Quality. Dependability. Innovation. Everything that you expect from your outboard motors is delivered with style by SUZUKI. Demand no less from the products that you choose to enhance your total boating pleasure. Demand GENUINE SUZUKI ACCESSORIES. This catalogue represents our commitment to provide you with the finest products available. From our classic line of matching instruments and gauges to our custom-engineered propellers and rigging items, you can depend on GENUINE SUZUKI ACCESSORIES for optimum performance. Take a few minutes to browse through this catalogue, and then be sure to visit your AUTHORIZED SUZUKI DEALER for the complete ordering information. Thank you.

SUZUKI MOTOR CORPORATION

## TABLE OF CONTENTS

|                          |                                          |    |
|--------------------------|------------------------------------------|----|
| <b>INSTRUMENT</b>        | ELECTRONIC INSTRUMENT                    | 04 |
|                          | GAUGE CONNECTION CHART                   | 06 |
|                          | ANALOG INSTRUMENT                        | 08 |
| <b>CONTROL SYSTEM</b>    | SPC ELECTRONIC THROTTLE AND SHIFT SYSTEM | 12 |
|                          | MECHANICAL REMOTE CONTROL SYSTEM         | 16 |
| <b>STEERING</b>          |                                          | 20 |
| <b>ELECTRICAL PARTS</b>  |                                          | 22 |
| <b>ANODE</b>             |                                          | 23 |
| <b>FUEL SYSTEM</b>       |                                          | 24 |
| <b>PROPELLER</b>         |                                          | 26 |
| <b>CARE ITEM</b>         |                                          | 28 |
| <b>MAINTENANCE ITEM</b>  |                                          | 28 |
| <b>APPLICATION CHART</b> |                                          | 30 |

**NOTE**  
Items and their part numbers showing in this catalogue are basically applicable to 2010 model year models of engines. Please consult your local dealers reagrding other year models and their rigging-parts and accessories.

|                  |                                                                                                        |
|------------------|--------------------------------------------------------------------------------------------------------|
| <b>REFERENCE</b> |                                                                                                        |
| Part Number      | 15-digit alpha-numerical number shows Part Number to be used for ordering.                             |
| Gauge Size       | Shows the size (2" or 4") of the gauge.                                                                |
| Background       | Shows a main color of display panel on the front of a gauge.                                           |
| Applicable Model | Shows typical or recommended models of ENGINES that RIGGING-PARTS and ACCESSORIES can be installed to. |
| Maximum Speed    | Shows maximum speed that SPEEDOMETER displays.                                                         |
| kph              | Kilo-meter Per Hour                                                                                    |
| mph              | Miles Per Hour                                                                                         |

## 2010 MODEL LINE UP

|        |        |         |         |         |
|--------|--------|---------|---------|---------|
| DF300T | DF175T | DF90AT  | DF25    | DF9.9A  |
| DF300Z | DF175Z | DF80AT  | DF25R   | DF9.9AR |
|        |        | DF70AT  |         |         |
| DF250T | DF150T | DF60AT  | DF15    | DF8A    |
| DF250Z | DF150Z | DF60ATH | DF15R   | DF8AR   |
|        |        |         |         |         |
| DF225T | DF140T | DF50T   | DF9.9T  | DF6     |
| DF225Z | DF140Z | DF50TH  | DF9.9TH | DF5     |
|        |        |         |         | DF4     |
| DF200T | DF115T | DF40T   |         |         |
| DF200Z | DF115Z | DF40QH  |         | DF2.5   |
|        | DF100T |         |         |         |

## EXAMPLES OF APPLICABLE MODELS

|                 | INVOLVED MODELS                   | NOT INVOLVED MODELS |
|-----------------|-----------------------------------|---------------------|
| DF8A-9.9AR      | DF8A, DF8AR, DF9.9A and DF9.9AR   | DF9.9T and DF9.9R   |
| DF8A/9.9AR      | DF8A and DF9.9AR                  |                     |
| DF9.9T-15R      | DF9.9T, DF9.9TH, DF15 and DF15R   |                     |
| DF9.9T/15/15R   | DF9.9T, DF15 and DF15R            | DF9.9TH             |
| DF25/25R        | DF25 and DF25R                    |                     |
| DF70AT-90AT     | DF70AT, DF80AT and DF90AT         |                     |
| DF70AT/90AT     | DF70AT and DF90AT                 |                     |
| DF150T/Z-175T/Z | DF150T, DF150Z, DF175T and DF175Z |                     |
| DF150T/175T     | DF150T and DF175T                 | DF150Z and DF175Z   |
| DF250T/Z-300T/Z | DF250T, DF250Z, DF300T and DF300Z |                     |
| DF300T/Z        | DF300T and DF300Z                 |                     |

ELECTRONIC  
INSTRUMENT

TACHOMETER



|                        |              |
|------------------------|--------------|
| <b>34200-98J13-000</b> | <b>001</b>   |
| Gauge Size             | 4”           |
| Background             | White        |
| Applicable Model       | DF40T-300T/Z |
| Not Applicable Model   | DF60A        |

| Readout                  | Unit                       | Required item for displaying                                                |
|--------------------------|----------------------------|-----------------------------------------------------------------------------|
| Engine RPM               | rpm                        |                                                                             |
| Cylinder temperature     | °C or °F                   |                                                                             |
| Engine-operating hour    | hours                      |                                                                             |
| Atomospheric pressure    | kPa or lhg                 |                                                                             |
| Fuel-flow amount         | litre/hour or gallons/hour |                                                                             |
| Cooling-water pressure   | kPa or psi                 | Available on DF70A-90A/300 with WATER-PRESSURE-SENSOR KIT (34970-98J01-000) |
| Intake-manifold pressure | kPa or psi                 |                                                                             |
| Trim angle               | %                          |                                                                             |
| Battery voltage          | Vdc                        |                                                                             |

**WARNING ALARMS**  
Engine Over Rev, Engine Overheat, Low Oil Pressure, Low Battery Voltage, Oil Change Reminder, and Check Engine Warning.

SPEEDOMETER



|                        |                |
|------------------------|----------------|
| <b>34100-98J11-000</b> | <b>002</b>     |
| Gauge Size             | 4”             |
| Background             | White          |
| Maximum Speed          | 130km/h, 80mph |
| Applicable Model       | DF40T-300T/Z   |
| Not Applicable Model   | DF60A          |



|                        |                  |
|------------------------|------------------|
| <b>34100-98J41-000</b> | <b>003</b>       |
| Gauge Size             | 4”               |
| Background             | White            |
| Maximum Speed          | 110km/h, 60knots |
| Applicable Model       | DF40T-300T/Z     |
| Not Applicable Model   | DF60A            |

| Readout              | Unit                         | Required item for displaying                         |
|----------------------|------------------------------|------------------------------------------------------|
| Speed over water     | kph, mph or knots            | *Tranducer with speed input for DF40-250             |
| Speed over ground    | kph, mph or knots            | *NMEA 2000 GPS receiver/antenna connection           |
| Remaining fuel       | %                            | *Fuel-sender (Resistor type)                         |
| Fuel-flow rate       | litre or US-gallon           |                                                      |
| Fuel consumption     | kms/litre or miles/US-gallon | *NMEA 2000 GPS receiver/antenna connection           |
| Fuel used            | litre or US-gallon           |                                                      |
| Trip log             | kms or miles                 | *NMEA 2000 GPS receiver/antenna connection           |
| Water depth          | meter / feet                 | *NMEA 2000 tranducer with water-depth input          |
| Seawater temperature | °C or °F                     | *NMEA 2000 tranducer with seawater temperature input |

QUICK REFERENCE CHART for SPEEDOMETERS

| Part number                | Background | km/h | mph | knots | Applicable models |
|----------------------------|------------|------|-----|-------|-------------------|
| 34100-98J11-000 <b>002</b> | White      | 130  | 80  | -     | DF40T-300T/Z      |
| 34100-98J41-000 <b>003</b> | White      | 110  | -   | 60    | DF40T-300T/Z      |

Note: Not applicable for DF60A.

SPEEDOMETER-SUB KIT

**34120-98J01-000** **004**

Applicable Model DF70A-90A/300T/Z

|                        |                            |         |
|------------------------|----------------------------|---------|
| Contents:              | Part Number                | Qty/Kit |
| SPEEDOMETER SENDER     | 34190-95500-000 <b>034</b> | 1       |
| SPEEDOMETER-HOSE UNION | 55127-87D00-000            | 1       |
| HOSE                   |                            | 1       |

|                   |                 |         |
|-------------------|-----------------|---------|
| Contents:         | Part Number     | Qty/Kit |
| CLAMP (L: 100 mm) | 09407-10404-000 | 2       |

Use SPEEDOMETER SENDER (34190-95500-000) in case that the integrated sender cannot detect a proper boat-speed.

FUEL GAUGE



|                        |              |
|------------------------|--------------|
| <b>34300-98J10-000</b> | <b>005</b>   |
| Gauge Size             | 2”           |
| Background             | White        |
| Applicable Model       | DF40T-300T/Z |
| Not Applicable Model   | DF60A        |

VOLTMETER



|                        |              |
|------------------------|--------------|
| <b>34600-98J10-000</b> | <b>006</b>   |
| Gauge Size             | 2”           |
| Background             | White        |
| Applicable Model       | DF40T-300T/Z |
| Not Applicable Model   | DF60A        |

TRIM GAUGE



|                        |              |
|------------------------|--------------|
| <b>34800-98J10-000</b> | <b>007</b>   |
| Gauge Size             | 2”           |
| Background             | White        |
| Applicable Model       | DF40T-300T/Z |
| Not Applicable Model   | DF60A        |

WATER-PRESSURE GAUGE



|                        |                  |
|------------------------|------------------|
| <b>34650-98J10-000</b> | <b>008</b>       |
| Gauge Size             | 2”               |
| Background             | White            |
| Applicable Model       | DF70A-90A/300T/Z |
| Not Applicable Model   | DF60A            |

WATER-PRESSURE-SENSOR KIT (34970-98J01-000) is required for installation to DF70A-90A/300T/Z.



WATER-PRESSURE-SENSOR KIT

**34970-98J01-000** **009**

In case of use as WATER-PRESSURE SENSOR  
Applicable Model DF70A-90A/300T/Z

In case of use as SPEED SENSOR

Applicable Model DF70A-90A

This kit can be installed as a water pressure sensor or as a speed sensor. The detail is described in the installation manual, which is contained in the package. Previous version of kit (34970-98J00-000) functions only as a water-pressure sensor for DF300T/Z.

| Contents:                     | Quantity |                                |                       |
|-------------------------------|----------|--------------------------------|-----------------------|
|                               | in KIT   | used for water-pressure sensor | used for speed sensor |
| 1 Sensor                      | 1        | 1                              | 1                     |
| 2 Connector                   | 1        | 1                              | 1                     |
| 3 Bolt                        | 1        | 1                              | 1                     |
| 4 Clip                        | 4        | 4                              | 1                     |
| 5 3-way                       | 1        | 1                              | -                     |
| 6 Water-pressure hose (500mm) | 1        | 1                              | -                     |
| 7 Cap                         | 1        | -                              | 1                     |

CONNECTION between  
ENGINE and INSTRUMENT

ACTIVE-HUB UNIT



**34921-98J00-000** **010**

Applicable Model DF40T-300T/Z

PASSIVE-HUB UNIT



**34921-98J10-000** **011**

Applicable Model DF40T-300T/Z

INTERFACE UNIT



**34922-98J02-000** **012**

Applicable Model DF40T-300T/Z

Previous version of INTERFACE UNIT (34922-98J01-000) is not applicable to DF70A-90A.

INTERFACE-UNIT ADAPTER



**36661-93J00-000** **013**

Applicable Model DF40T-250T/Z

INTERFACE-UNIT HARNESS



**36661-98J00-000** **014**

Applicable Model DF40T-300T/Z

IIINTERFACE-UNIT-ADAPTER LEAD



**36646-87L00-000** **015**

Applicable Model DF70A-90A

HUB HARNESS



**36662-98J00-000** **016**

1.0 meter

Applicable Model DF40T-300T/Z

**36662-98J10-000**

6.5 meters

Applicable Model DF40T-300T/Z

4-INCH-GAUGE CONNECT KIT

**34011-98J02-000**

Applicable Model DF40T-300T/Z

|                        |                            |         |
|------------------------|----------------------------|---------|
| Contents:              | Part Number                | Qty/Kit |
| ACTIVE-HUB UNIT        | 34921-98J00-000 <b>010</b> | 1       |
| INTERFACE UNIT         | 34922-98J02-000 <b>012</b> | 1       |
| INTERFACE-UNIT HARNESS | 36661-98J00-000 <b>014</b> | 1       |
| JUMPER WIRE            | 36665-98J00-000 <b>021</b> | 1       |

|                                                                   |                            |   |
|-------------------------------------------------------------------|----------------------------|---|
| 4-INCH-GAUGE HARNESS with a 6-PIN CONNECTOR CAP (36666-98J10-000) | 36664-98J00-000 <b>017</b> | 1 |
| 6-PIN CONNECTOR CAP                                               | 36666-98J10-000 <b>020</b> | 2 |

Previous version of kit (34011-98J01-000) is not applicable to DF60A-90A.

4-INCH-GAUGE HARNESS



**36664-98J00-000** **017**

with a 6-PIN CONNECTOR CAP (36666-98J10-000)

Applicable Model DF40T-300T/Z

2-INCH-GAUGE HARNESS



**36664-98J10-000** **018**

Applicable Model DF40T-300T/Z

ACTIVE-HUB POWER HARNESS

**36663-98J00-000**

2.5 meters

Applicable Model DF40T-300T/Z



**36663-98J10-000** **019**

6.0 meters

Applicable Model DF40T-300T/Z

2-PIN CONNECTOR CAP

**36667-98J00-000**

Applicable Model DF40T-300T/Z

6-PIN CONNECTOR CAP



**36666-98J10-000** **020**

Applicable Model DF40T-300T/Z

8-PIN CONNECTOR CAP

**36666-98J00-000**

Applicable Model DF40T-300T/Z

JUMPER WIRE



**36665-98J00-000** **021**

Applicable Model DF40T-300T/Z

RESISTOR HARNESS



**36668-98J00-000** **022**

Applicable Model DF300T/Z

GAUGE-CONNECTION CHART

GAUGE-CONNECTION CHART

ENGINE(S)

STATION(S)

1

1

total

1st

2nd

2

2

total

1st

2nd

3

3

total

1st

2nd

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

2

1

2

3

1

Note: • Numbers between parentheses show the maximum quantities required.  
• “KIT” in cells means the content of 4-INCH-GAUGE CONNECT KIT (34011-98J02-000).  
• All signals go through the tachometer and are distributed to other gauges.  
It is essential to use the tachometer to bring the other gauges active.

for DF40-250 Without DF60A

|                            |                           |                                                                     |                                   | ENGINE(S)       | 1                                     | 2   | 3                                              |         |                                                                                                                                                                          |                                                                                     |
|----------------------------|---------------------------|---------------------------------------------------------------------|-----------------------------------|-----------------|---------------------------------------|-----|------------------------------------------------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|                            |                           |                                                                     |                                   | STATION         | 1                                     | 1   | 1                                              |         |                                                                                                                                                                          |                                                                                     |
| Category                   | Part Name & Description   |                                                                     |                                   |                 | Quantity Of Parts To Be Used Per Boat |     |                                                | Remarks |                                                                                                                                                                          |                                                                                     |
| for DF40-250 Without DF60A | 4-INCH GAUGE (White)      | SPEEDOMETER                                                         | Maximum speed: 130 kph / 80 mph   |                 | 34100-98J11-000                       | 002 | (1)                                            | (1)     | (1)                                                                                                                                                                      | Requires NMEA 2000 transducer with speed input or a NMEA 2000 GPS receiver/anntena. |
|                            |                           |                                                                     | Maximum speed: 110 kph / 60 knots |                 | 34100-98J41-000                       | 003 |                                                |         |                                                                                                                                                                          |                                                                                     |
|                            |                           | SPEEDOMETER SENDER                                                  |                                   | 34190-95500-000 | 034                                   | (1) | (1)                                            | (1)     | Only for DF70AT/80AT/90AT. For other models, DF40/50/100-250, either a NMEA 2000 certified speed sender or an analog-type of sendor available in the market can be used. |                                                                                     |
|                            |                           | TACHOMETER                                                          |                                   | 34200-98J13-000 | 001                                   | 1   | 2                                              | 3       |                                                                                                                                                                          |                                                                                     |
|                            | 2-INCH GAUGE (White)      | FUEL GAUGE                                                          |                                   | 34300-98J10-000 | 005                                   | (1) | (1)                                            | (1)     | Requires input from a widely-purchasable potentiometer-type of fuel level sensor.                                                                                        |                                                                                     |
|                            |                           | VOLT METER                                                          |                                   | 34600-98J10-000 | 006                                   | (1) | (1)                                            | (1)     |                                                                                                                                                                          |                                                                                     |
|                            |                           | WATER PRESSURE GAUGE                                                |                                   | 34650-98J10-000 | 008                                   | (1) | (1)                                            | (1)     | Only for DF70AT/80AT/90AT.                                                                                                                                               |                                                                                     |
|                            |                           | TRIM GAUGE                                                          |                                   | 34800-98J10-000 | 007                                   | (1) | (2)                                            | (3)     |                                                                                                                                                                          |                                                                                     |
|                            | GAUGE-CONNECTION HARDWARE | 4-INCH-GAUGE CONNECT KIT    *Contents are shown in the chart above. |                                   | 34011-98J02-000 |                                       | 1   | -                                              | -       |                                                                                                                                                                          |                                                                                     |
|                            |                           | ACTIVE-HUB UNIT                                                     |                                   | 34921-98J00-000 | 010                                   | KIT | 1                                              | 1       |                                                                                                                                                                          |                                                                                     |
|                            |                           | INTERFACE UNIT                                                      |                                   | 34922-98J02-000 | 012                                   | KIT | 1                                              | 1       |                                                                                                                                                                          |                                                                                     |
|                            |                           | INTERFACE-UNIT HARNESS                                              |                                   | 36661-98J00-000 | 014                                   | KIT | 1                                              | 1       |                                                                                                                                                                          |                                                                                     |
|                            |                           | INTERFACE-UNIT ADAPTER                                              |                                   | 36661-93J00-000 | 013                                   | 1   | 1                                              | 1       |                                                                                                                                                                          |                                                                                     |
|                            |                           | INTERFACE-UNIT-ADAPTER LEAD                                         |                                   | 36646-87L00-000 | 015                                   | (1) | (1)                                            | (1)     | Required for DF70AT/80AT/90AT only.                                                                                                                                      |                                                                                     |
|                            |                           | ACTIVE HUB POWER HARNESS                                            | 2.5 meters                        | 36663-98J00-000 |                                       | 1   | 1                                              | 1       | Select one according to the distance from battery.                                                                                                                       |                                                                                     |
|                            |                           |                                                                     | 6.0 meters                        | 36663-98J10-000 | 019                                   |     |                                                |         |                                                                                                                                                                          |                                                                                     |
|                            |                           | 4-INCH-GAUGE HARNESS with a 6-PIN CONNECTOR CAP (36666-98J10-000)   |                                   | 36664-98J00-000 | 017                                   | KIT | 2                                              | 3       | A 6-PIN CONNECTOR CAP (36666-98J10-000) is included.                                                                                                                     |                                                                                     |
|                            |                           | 2-INCH-GAUGE HARNESS                                                |                                   | 36664-98J10-000 | 018                                   | ►►  | ►►                                             | ►►      | ►► Quantity of 2-INCH GAUGE HARNESS is equal to the total quantity of 2-INCH GAUGE.                                                                                      |                                                                                     |
|                            |                           | JUMPER WIRE                                                         |                                   | 36665-98J00-000 | 021                                   | KIT | 1                                              | 1       |                                                                                                                                                                          |                                                                                     |
| 8-PIN CONNECTOR CAP        |                           | 36666-98J00-000                                                     |                                   | (1)             | (1)                                   | (1) | Installed in case that no speedometer is used. |         |                                                                                                                                                                          |                                                                                     |
| 6-PIN CONNECTOR CAP        |                           | 36666-98J10-000                                                     | 020                               | KIT             | 1                                     | 0   |                                                |         |                                                                                                                                                                          |                                                                                     |

Note: • Numbers between parentheses show the maximum quantities required.  
• “KIT” in cells means the content of 4-INCH-GAUGE CONNECT KIT (34011-98J02-000).  
• All signals go through the tachometer and are distributed to other gauges.  
It is essential to use the tachometer to bring the other gauges active.

Note: • Numbers between parentheses show the maximum quantities required.  
• “KIT” in cells means the content of 4-INCH-GAUGE CONNECT KIT (34011-98J02-000).  
• All signals go through the tachometer and are distributed to other gauges.  
It is essential to use the tachometer to bring the other gauges active.

ANALOG  
INSTRUMENT



TACHOMETER



|                        |                               |
|------------------------|-------------------------------|
| <b>34200-93J20-000</b> | <b>023</b>                    |
| Gauge Size             | 4"                            |
| Background             | Black                         |
| Applicable Model       | DF8AR/9.9T/9.9R/9.9AR/15R/25R |

Full-scale 7000-RPM TACHOMETER can be used on electric-start models by using 4, 6 or 12 pole switch on rear of meter.



|                        |              |
|------------------------|--------------|
| <b>34200-93J00-000</b> | <b>025</b>   |
| Gauge Size             | 4"           |
| Background             | Black        |
| Applicable Model       | DF40T-250T/Z |

Caution systems alert with a monitor lamp lighting on when an abnormal engine condition occurs. Refer to SERVICE MANUAL for the detail.



|                        |                               |
|------------------------|-------------------------------|
| <b>34200-93J31-000</b> | <b>024</b>                    |
| Gauge Size             | 4"                            |
| Background             | White                         |
| Applicable Model       | DF8AR/9.9T/9.9R/9.9AR/15R/25R |

Full-scale 7000-RPM TACHOMETER can be used on electric-start models by using 4, 6 or 12 pole switch on rear of meter.



|                        |              |
|------------------------|--------------|
| <b>34200-93J11-000</b> | <b>026</b>   |
| Gauge Size             | 4"           |
| Background             | White        |
| Applicable Model       | DF40T-250T/Z |

Caution systems alert with a monitor lamp lighting on when an abnormal engine condition occurs. Refer to SERVICE MANUAL for the detail.

SPEEDOMETER



|                        |                |
|------------------------|----------------|
| <b>34100-93J00-000</b> | <b>027</b>     |
| Gauge Size             | 4"             |
| Background             | Black          |
| Maximum Speed          | 130km/h, 80mph |
| Applicable Model       | DF40T-250T/Z   |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.



|                        |                          |
|------------------------|--------------------------|
| <b>34100-93J20-000</b> | <b>029</b>               |
| Gauge Size             | 4"                       |
| Background             | Black                    |
| Maximum Speed          | 80km/h, 50mph            |
| Applicable Model       | DF25R-115T/Z/140T-250T/Z |
| Not Applicable Model   | DF140Z                   |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.



|                        |                |
|------------------------|----------------|
| <b>34100-93J11-000</b> | <b>028</b>     |
| Gauge Size             | 4"             |
| Background             | White          |
| Maximum Speed          | 130km/h, 80mph |
| Applicable Model       | DF40T-250T/Z   |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.



|                        |               |
|------------------------|---------------|
| <b>34100-93J31-000</b> | <b>030</b>    |
| Gauge Size             | 4"            |
| Background             | White         |
| Maximum Speed          | 80km/h, 50mph |
| Applicable Model       | DF25R-250T/Z  |

Bourdon-tube type speedometer with readings in km/h and mph. Includes vinyl tube, hardware and installation manual.



|                        |                 |
|------------------------|-----------------|
| <b>34100-93J40-000</b> | <b>031</b>      |
| Gauge Size             | 4"              |
| Background             | Black           |
| Maximum Speed          | 80km/h, 45knots |
| Applicable Model       | DF25R-250T/Z    |

Bourdon-tube type speedometer with readings in km/h and knots. Includes vinyl tube, hardware and installation manual.



|                        |                  |
|------------------------|------------------|
| <b>34100-93J60-000</b> | <b>033</b>       |
| Gauge Size             | 4"               |
| Background             | White            |
| Maximum Speed          | 120km/h, 65knots |
| Applicable Model       | DF60AT-250T/Z    |

Bourdon-tube type speedometer with readings in km/h and knots. Includes vinyl tube, hardware and installation manual.



|                        |                 |
|------------------------|-----------------|
| <b>34100-93J51-000</b> | <b>032</b>      |
| Gauge Size             | 4"              |
| Background             | White           |
| Maximum Speed          | 80km/h, 45knots |
| Applicable Model       | DF25R-250T/Z    |

Bourdon-tube type speedometer with readings in km/h and knots. Includes vinyl tube, hardware and installation manual.

SPEEDOMETER SENDER



|                        |              |
|------------------------|--------------|
| <b>34190-95500-000</b> | <b>034</b>   |
| Applicable Model       | DF25R-300T/Z |



|                        |              |
|------------------------|--------------|
| <b>34190-87D00-000</b> | <b>035</b>   |
| Applicable Model       | DF25R-250T/Z |
| Not Applicable Model   | DF60A        |

Each of DF60-300 models has an integrated SPEEDOMETER SENDER as standard. In case that the integrated sender cannot detect a proper boat-speed, use SPEEDOMETER SENDER.

QUICK REFERENCE CHART for SPEEDOMETERS

| part number                | Background | km/h | mph | knots | Applicable models |
|----------------------------|------------|------|-----|-------|-------------------|
| 34100-93J00-000 <b>027</b> | Black      | 130  | 80  | -     | DF40T-250T/Z      |
| 34100-93J11-000 <b>028</b> | White      | 130  | 80  | -     | DF40T-250T/Z      |
| 34100-93J20-000 <b>029</b> | Black      | 80   | 50  | -     | DF25R/40T-250T/Z  |
| 34100-93J31-000 <b>030</b> | White      | 80   | 50  | -     | DF25R/40T-250T/Z  |
| 34100-93J40-000 <b>031</b> | Black      | 80   | -   | 45    | DF25R/40T-250T/Z  |
| 34100-93J51-000 <b>032</b> | White      | 80   | -   | 45    | DF25R/40T-250T/Z  |
| 34100-93J60-000 <b>033</b> | White      | 120  | -   | 65    | DF70AT-250T/Z     |

| Caution lamp | Caution type                                                |
|--------------|-------------------------------------------------------------|
| CHECK ENGINE | Low battery-voltage or Other cautions on S.D.S              |
| TEMP         | Overheat ( Over-revolution )                                |
| OIL          | Low oil-pressure ( Over-revolution )<br>Oil change reminder |
| REV LIMIT    | Over-revolution                                             |

# ANALOG INSTRUMENT

## FUEL GAUGE



|                        |                  |
|------------------------|------------------|
| <b>34300-93J00-000</b> | <b>036</b>       |
| Gauge Size             | 2"               |
| Background             | Black            |
| Applicable Model       | DF25R/40T-250T/Z |

FUEL GAUGE alone works with the US Standard 250Q sending unit. Use the 150Q adaptor to connect the gauge to a European standard sending unit.



|                        |                  |
|------------------------|------------------|
| <b>34300-93J11-000</b> | <b>037</b>       |
| Gauge Size             | 2"               |
| Background             | White            |
| Applicable Model       | DF25R/40T-250T/Z |

FUEL GAUGE alone works with the US Standard 250Q sending unit. Use the 150Q adaptor to connect the gauge to a European standard sending unit.

## HOURLY METER



|                        |              |
|------------------------|--------------|
| <b>34500-93J00-000</b> | <b>038</b>   |
| Gauge Size             | 2"           |
| Background             | Black        |
| Applicable Model       | DF25R-250T/Z |

12-volt-electric-motor-driven meter indicates hours that your outboard motor has been operated in order for you to know when each periodic service is required.



|                        |              |
|------------------------|--------------|
| <b>34500-93J11-000</b> | <b>039</b>   |
| Gauge Size             | 2"           |
| Background             | White        |
| Applicable Model       | DF25R-250T/Z |

12-volt-electric-motor-driven meter indicates hours that your outboard motor has been operated in order for you to know when each periodic service is required.

## VOLTMETER



|                        |              |
|------------------------|--------------|
| <b>34600-93J00-000</b> | <b>040</b>   |
| Gauge Size             | 2"           |
| Background             | Black        |
| Applicable Model       | DF25R-250T/Z |

To help your SUZUKI OUTBOARD MOTOR run at its best, monitor the charging system functioning with a VOLTMETER.



|                        |              |
|------------------------|--------------|
| <b>34600-93J11-000</b> | <b>041</b>   |
| Gauge Size             | 2"           |
| Background             | White        |
| Applicable Model       | DF25R-250T/Z |

To help your SUZUKI OUTBOARD MOTOR run at its best, monitor the charging system functioning with a VOLTMETER.

## TRIM GAUGE



|                        |                  |
|------------------------|------------------|
| <b>34800-93J00-000</b> | <b>042</b>       |
| Gauge Size             | 2"               |
| Background             | Black            |
| Applicable Model       | DF40T/50T-250T/Z |

Magnetic-type gauge shows trim angle for optimum performance and efficiency.



|                        |                  |
|------------------------|------------------|
| <b>34800-93J11-000</b> | <b>043</b>       |
| Gauge Size             | 2"               |
| Background             | White            |
| Applicable Model       | DF40T/50T-250T/Z |

Magnetic-type gauge shows trim angle for optimum performance and efficiency.

## WATER-PRESSURE GAUGE



|                        |              |
|------------------------|--------------|
| <b>34650-93J20-000</b> | <b>044</b>   |
| Gauge Size             | 2"           |
| Background             | Black        |
| Applicable Model       | DF40T-250T/Z |

Bourdon-tube type gauge measures cooling-water pressure. Select an appropriate INSTALLATION KIT for each model.



|                        |              |
|------------------------|--------------|
| <b>34650-93J31-000</b> | <b>045</b>   |
| Gauge Size             | 2"           |
| Background             | White        |
| Applicable Model       | DF40T-250T/Z |

Bourdon-tube type gauge measures cooling-water pressure. Select an appropriate INSTALLATION KIT for each model.

## INSTALLATION KIT for WATER-PRESSURE GAUGE



|                        |            |
|------------------------|------------|
| <b>34660-87J00-000</b> |            |
| Applicable Model       | DF40QH-50T |

|                        |               |
|------------------------|---------------|
| <b>34660-90J02-000</b> |               |
| Applicable Model       | DF60AT-140T/Z |

|                        |                 |
|------------------------|-----------------|
| <b>34660-96J00-000</b> |                 |
| Applicable Model       | DF150T/Z/175T/Z |

|                        |                 |
|------------------------|-----------------|
| <b>34660-93J00-000</b> | <b>046</b>      |
| Applicable Model       | DF200T/Z-250T/Z |

KIT includes fittings and hoses needed for motor to gauge connection.

SUZUKI PRECISION CONTROL

# ELECTRONIC THROTTLE AND SHIFT SYSTEM



047



048



049

## REMOTE-CONTROL KIT for DUAL ENGINE

| SINGLE STATION      |     | STATION                                                     |                               | DUAL STATION                     |    |                                   |       |
|---------------------|-----|-------------------------------------------------------------|-------------------------------|----------------------------------|----|-----------------------------------|-------|
| 67000-98J24-000     | QTY | BINNACLE-MOUNT CONTROL KIT<br>or<br>FLUSH-MOUNT CONTROL KIT | Applicable Model<br>Contents: | First Station<br>67000-98J24-000 | +  | Second Station<br>67000-98J34-000 | QTY   |
| DF300T/Z            |     |                                                             |                               | DF300T/Z                         |    | DF300T/Z                          |       |
| 67200-98J12-000 049 | 1   | BINNACLE MOUNT R/C BOX<br>or<br>FLUSH MOUNT R/C BOX         |                               | 67200-98J12-000 049              | 1  | 67200-98J12-000 049               | 1 2   |
| -                   |     |                                                             |                               | -                                |    | -                                 |       |
| 37100-98J02-000 050 | 1   | MAIN SWITCH PANEL                                           |                               | 37100-98J02-000 050              | 1  | -                                 | - 1   |
| 37100-98J21-000 052 | 1   | CONTROL PANEL                                               |                               | 37100-98J21-000 052              | 1  | 37100-98J21-000 052               | 1 2   |
| 38500-93J90-000 081 | 1   | WARNING BUZZER                                              |                               | 38500-93J90-000 081              | 1  | 38500-93J90-000 081               | 1 2   |
| 09407-08401-000     | 1   | WARNING-BUZZER CLAMP                                        |                               | 09407-08401-000                  | 1  | 09407-08401-000                   | 1 2   |
| -                   | -   | EMERGENCY SWITCH PANEL                                      |                               | -                                | -  | 37803-93J02-000                   | 1 1   |
| 36625-98J00-000 063 | 1   | BATTERY LEAD                                                |                               | 36625-98J00-000 063              | 1  | -                                 | - 1   |
| 36770-98J01-000 054 | 1   | BOAT CONTROL MODULE (BCM)                                   |                               | 36770-98J01-000 054              | 1  | 36770-98J01-000 054               | 1 2   |
| 36775-98J00-000 055 | 1   | BCM HOLDER (L)                                              |                               | 36775-98J00-000 055              | 1  | 36775-98J00-000 055               | 1 2   |
| 36776-98J00-000 056 | 1   | BCM HOLDER (R)                                              |                               | 36776-98J00-000 056              | 1  | 36776-98J00-000 056               | 1 2   |
| -                   | -   | BCM-CONNECT CAP                                             |                               | -                                | -  | -                                 | - -   |
| 33925-93J00-000 058 | 1   | BCM CUSHION                                                 |                               | 33925-93J00-000 058              | 1  | 33925-93J00-000 058               | 1 2   |
| 36623-98J11-000     | 1   | BCM #1 WIRING HARNESS                                       |                               | 36623-98J11-000                  | 1  | -                                 | - 1   |
| -                   | -   | BCM #2 WIRING HARNESS                                       |                               | -                                | -  | 36624-98J10-000                   | 1 1   |
| 33926-98J00-000 064 | 2   | TERMINAL RESISTOR                                           |                               | 33926-98J00-000 064              | 2  | -                                 | - 2   |
| 36621-98J00-000 061 | 1   | ENGINE WIRING HARNESS                                       |                               | 36621-98J00-000 061              | 1  | -                                 | - 1   |
| -                   | -   | DUAL-STATION WIRING HARNESS                                 |                               | -                                | -  | 36622-98J00-000 062               | 1 1   |
| 09403-13402-000     | 15  | HARNESS CLAMP                                               |                               | 09403-13402-000                  | 15 | 09403-13402-000                   | 10 25 |

## REMOTE-CONTROL KIT for SINGLE ENGINE

| SINGLE STATION      |     | STATION                                                     |                               | DUAL STATION                     |    |                                   |       |
|---------------------|-----|-------------------------------------------------------------|-------------------------------|----------------------------------|----|-----------------------------------|-------|
| 67000-98J03-000     | QTY | BINNACLE-MOUNT CONTROL KIT<br>or<br>FLUSH-MOUNT CONTROL KIT | Applicable Model<br>Contents: | First Station<br>67000-98J03-000 | +  | Second Station<br>67000-98J14-000 | QTY   |
| 67000-98J61-000     |     |                                                             |                               | 67000-98J61-000                  |    | DF300T                            |       |
| DF300T              |     |                                                             |                               | DF300T                           |    | DF300T                            |       |
| 67200-98J02-000 047 | 1   | BINNACLE MOUNT R/C BOX<br>or<br>FLUSH MOUNT R/C BOX         |                               | 67200-98J02-000 047              | 1  | 67200-98J02-000 047               | 1 2   |
| 67200-98J21-000 048 |     |                                                             |                               | 67200-98J21-000 048              |    | -                                 |       |
| 37100-98J01-000 050 | 1   | MAIN SWITCH PANEL                                           |                               | 37100-98J01-000 050              | 1  | -                                 | - 1   |
| 37100-98J11-000 051 | 1   | CONTROL PANEL                                               |                               | 37100-98J11-000 051              | 1  | 37100-98J11-000 051               | 1 2   |
| 38500-93J90-000 081 | 1   | WARNING BUZZER                                              |                               | 38500-93J90-000 081              | 1  | 38500-93J90-000 081               | 1 2   |
| 09407-08401-000     | 1   | WARNING-BUZZER CLAMP                                        |                               | 09407-08401-000                  | 1  | 09407-08401-000                   | 1 2   |
| -                   | -   | EMERGENCY SWITCH PANEL                                      |                               | -                                | -  | 37803-93J02-000                   | 1 1   |
| 36625-98J00-000 063 | 1   | BATTERY LEAD                                                |                               | 36625-98J00-000 063              | 1  | -                                 | - 1   |
| 36770-98J01-000 054 | 1   | BOAT CONTROL MODULE (BCM)                                   |                               | 36770-98J01-000 054              | 1  | 36770-98J01-000 054               | 1 2   |
| 36775-98J00-000 055 | 1   | BCM HOLDER (L)                                              |                               | 36775-98J00-000 055              | 1  | 36775-98J00-000 055               | 1 2   |
| 36776-98J00-000 056 | 1   | BCM HOLDER (R)                                              |                               | 36776-98J00-000 056              | 1  | 36776-98J00-000 056               | 1 2   |
| 33911-88BL0-000 057 | 1   | BCM-CONNECT CAP                                             |                               | 33911-88BL0-000 057              | 1  | 33911-88BL0-000 057               | 1 2   |
| 33925-93J00-000 058 | 1   | BCM CUSHION                                                 |                               | 33925-93J00-000 058              | 1  | 33925-93J00-000 058               | 1 2   |
| 36623-98J01-000 065 | 1   | BCM #1 WIRING HARNESS                                       |                               | 36623-98J01-000 065              | 1  | -                                 | - 1   |
| -                   | -   | BCM #2 WIRING HARNESS                                       |                               | -                                | -  | 36624-98J10-000 066               | 1 1   |
| 33926-98J00-000 064 | 2   | TERMINAL RESISTOR                                           |                               | 33926-98J00-000 064              | 2  | -                                 | - 2   |
| -                   | -   | ENGINE WIRING HARNESS                                       |                               | -                                | -  | -                                 | - -   |
| -                   | -   | DUAL-STATION WIRING HARNESS                                 |                               | -                                | -  | 36622-98J00-000 062               | 1 1   |
| 09403-13402-000     | 10  | HARNESS CLAMP                                               |                               | 09403-13402-000                  | 10 | 09403-13402-000                   | 10 20 |

## REMOTE-CONTROL KIT for TRIPLE ENGINE

| SINGLE STATION      |     | STATION                                                     |                               | DUAL STATION                     |    |                                   |       |
|---------------------|-----|-------------------------------------------------------------|-------------------------------|----------------------------------|----|-----------------------------------|-------|
| 67000-98J42-000     | QTY | BINNACLE-MOUNT CONTROL KIT<br>or<br>FLUSH-MOUNT CONTROL KIT | Applicable Model<br>Contents: | First Station<br>67000-98J42-000 | +  | Second Station<br>67000-98J52-000 | QTY   |
| DF300T/Z            |     |                                                             |                               | DF300T/Z                         |    | DF300T/Z                          |       |
| 67200-98J11-000 049 | 1   | BINNACLE MOUNT R/C BOX<br>or<br>FLUSH MOUNT R/C BOX         |                               | 67200-98J11-000 049              | 1  | 67200-98J11-000 049               | 1 2   |
| -                   |     |                                                             |                               | -                                |    | -                                 |       |
| 37100-98J00-000 050 | 1   | MAIN SWITCH PANEL                                           |                               | 37100-98J00-000 050              | 1  | -                                 | - 1   |
| 37100-98J31-000 053 | 1   | CONTROL PANEL                                               |                               | 37100-98J31-000 053              | 1  | 37100-98J31-000 053               | 1 2   |
| 38500-93J90-000 081 | 1   | WARNING BUZZER                                              |                               | 38500-93J90-000 081              | 1  | 38500-93J90-000 081               | 1 2   |
| 09407-08401-000     | 1   | WARNING-BUZZER CLAMP                                        |                               | 09407-08401-000                  | 1  | 09407-08401-000                   | 1 2   |
| -                   | -   | EMERGENCY SWITCH PANEL                                      |                               | -                                | -  | 37803-93J00-000 079               | 1 1   |
| 36625-98J00-000 063 | 1   | BATTERY LEAD                                                |                               | 36625-98J00-000 063              | 1  | -                                 | - 1   |
| 36770-98J01-000 054 | 1   | BOAT CONTROL MODULE (BCM)                                   |                               | 36770-98J01-000 054              | 1  | 36770-98J01-000 054               | 1 2   |
| 36775-98J00-000 055 | 1   | BCM HOLDER (L)                                              |                               | 36775-98J00-000 055              | 1  | 36775-98J00-000 055               | 1 2   |
| 36776-98J00-000 056 | 1   | BCM HOLDER (R)                                              |                               | 36776-98J00-000 056              | 1  | 36776-98J00-000 056               | 1 2   |
| -                   | -   | BCM-CONNECT CAP                                             |                               | -                                | -  | -                                 | - -   |
| 33925-93J00-000 058 | 1   | BCM CUSHION                                                 |                               | 33925-93J00-000 058              | 1  | 33925-93J00-000 058               | 1 2   |
| 36623-98J10-000     | 1   | BCM #1 WIRING HARNESS                                       |                               | 36623-98J10-000                  | 1  | -                                 | - 1   |
| -                   | -   | BCM #2 WIRING HARNESS                                       |                               | -                                | -  | 36624-98J10-000                   | 1 1   |
| 33926-98J00-000 064 | 2   | TERMINAL RESISTOR                                           |                               | 33926-98J00-000 064              | 2  | -                                 | - 2   |
| 36621-98J10-000     | 1   | ENGINE WIRING HARNESS                                       |                               | 36621-98J10-000                  | 1  | -                                 | - 1   |
| -                   | -   | DUAL-STATION WIRING HARNESS                                 |                               | -                                | -  | 36622-98J00-000 062               | 1 1   |
| 09403-13402-000     | 18  | HARNESS CLAMP                                               |                               | 09403-13402-000                  | 18 | 09403-13402-000                   | 10 28 |

SUZUKI PRECISION CONTROL

# ELECTRONIC THROTTLE AND SHIFT SYSTEM

MAIN SWITCH PANEL



**37100-98J02-000** 050  
Single ignition with Emergency-stop switch  
Applicable Model DF300T/Z

CONTROL PANEL



**37100-98J11-000** 051  
for Single-Engine  
Applicable Model DF300T



**37100-98J21-000** 052  
for Dual-Engine  
Applicable Model DF300T/Z



**37100-98J31-000** 053  
for Triple-Engine  
Applicable Model DF300T/Z

BOAT CONTROL MODULE (BCM)



**36770-98J01-000** 054  
Applicable Model DF300T/Z

BCM HOLDER (L/R)



**36775-98J00-000** 055  
Applicable Model DF300T/Z

**36776-98J00-000** 056  
Applicable Model DF300T/Z

BCM-CONNECT CAP



**33911-88BL0-000** 057  
Applicable Model DF300T/Z

BCM CUSHION



**33925-93J00-000** 058  
Applicable Model DF150T/Z-300T/Z

CONNECTION between ENGINE and CONTROL SYSTEM

MAIN WIRING HARNESS



**36620-98J00-000** 059  
6.5 meters for control system  
Applicable Model DF300T/Z

**36620-98J10-000**  
9.5 meters for control system  
Applicable Model DF300T/Z

MAIN-WIRING-HARNESS EXTENSION



**36620-98J20-000** 060  
2.0 meters for control system  
Applicable Model DF300T/Z

ENGINE WIRING HARNESS



**36621-98J00-000** 061  
for Dual engines  
Applicable Model DF300T/Z

**36621-98J10-000**  
for Triple engines  
Applicable Model DF300T/Z

DUAL-STATION WIRING HARNESS



**36622-98J00-000** 062  
for Dual-station control system  
Applicable Model DF300T/Z

BATTERY LEAD



**36625-98J00-000** 063  
6.5 meters  
Applicable Model DF300T/Z

TERMINAL RESISTOR



**33926-98J00-000** 064  
Applicable Model DF300T/Z

BCM #1 WIRING HARNESS



**36623-98J01-000** 065  
for Single engine and Single (First) station  
Applicable Model DF300T/Z

**36623-98J11-000**  
for Multiple engines and Single (First) station  
Applicable Model DF300T/Z

BCM #2 WIRING HARNESS



**36624-98J01-000** 066  
for Single engine and Second station  
Applicable Model DF300T/Z

**36624-98J10-000**  
for Multiple engines and Second station  
Applicable Model DF300T/Z

MECHANICAL  
REMOTE  
CONTROL  
SYSTEM

REMOTE-CONTROL KIT for  
SINGLE ENGINE + SINGLE STATION

|                                                       |     |                                                            |     |                                                            |     |
|-------------------------------------------------------|-----|------------------------------------------------------------|-----|------------------------------------------------------------|-----|
| 67000-93J01-000                                       | QTY | 67000-93J44-000                                            | QTY | -                                                          | QTY |
| -                                                     |     | -                                                          |     | 67000-93J21-000                                            |     |
| -                                                     |     | -                                                          |     | -                                                          |     |
| DF40T/50T/60AT-100T/115T/<br>150T/175T/200T/225T/250T |     | DF40T/50T/60AT-100T/115T/<br>140T/150T/175T/200T/225T/250T |     | DF40T/50T/60AT-100T/115T/<br>140T/150T/175T/200T/225T/250T |     |
| 67200-93J12-000 067                                   | 1   | 67200-93J12-000 067                                        | 1   | -                                                          | -   |
| -                                                     | -   | -                                                          | -   | 67200-93J30-000 069                                        | 1   |
| -                                                     | -   | -                                                          | -   | -                                                          | -   |
| -                                                     | -   | 34200-93J11-000 026                                        | 1   | -                                                          | -   |
| -                                                     | -   | 34800-93J11-000 043                                        | 1   | -                                                          | -   |
| -                                                     | -   | 36620-93J01-000 074                                        | 1   | -                                                          | -   |
| -                                                     | -   | -                                                          | -   | -                                                          | -   |
| 37100-96J21-000                                       | 1   | 37100-96J22-000 076                                        | 1   | 37100-96J21-000                                            | 1   |

REMOTE-CONTROL KIT for  
DUAL ENGINE + SINGLE STATION

|                                                            |     |                                                            |     |                                |                                       |     |                       |     |
|------------------------------------------------------------|-----|------------------------------------------------------------|-----|--------------------------------|---------------------------------------|-----|-----------------------|-----|
| -                                                          | QTY | -                                                          | QTY | BINNACLE-MOUNT CONTROL KIT     | 67000-93J11-000                       | QTY | 67000-93J54-000       | QTY |
| 67000-93J64-000                                            |     | -                                                          |     | FLUSH-MOUNT CONTROL KIT        | -                                     |     | -                     |     |
| -                                                          |     | 67000-93J73-000                                            |     | SIDE-MOUNT CONTROL KIT         | -                                     |     | -                     |     |
| DF40T/50T/60AT-100T/115T/<br>140T/150T/175T/200T/225T/250T |     | DF40T/50T/60AT-100T/115T/<br>140T/150T/175T/200T/225T/250T |     | Applicable Model               | DF40T/50T/60AT-90AT/<br>115T/Z-250T/Z |     | DF40T/50T/70AT-250T/Z |     |
| -                                                          | -   | -                                                          | -   | Contens:                       | 67200-93J22-000 068                   | 1   | 67200-93J22-000 068   | 1   |
| 67200-93J30-000 069                                        | 1   | -                                                          | -   | BINNACLE MOUNT R/C BOX         | -                                     | -   | -                     | -   |
| -                                                          | -   | -                                                          | -   | FLUSH MOUNT R/C BOX            | -                                     | -   | -                     | -   |
| -                                                          | -   | 67200-93J01-000                                            | 1   | SIDE MOUNT R/C BOX             | -                                     | -   | -                     | -   |
| 34200-93J11-000 026                                        | 1   | 34200-93J11-000 026                                        | 1   | TACHOMETER (Background: White) | -                                     | -   | 34200-93J11-000 026   | 1   |
| 34800-93J11-000 043                                        | 1   | 34800-93J11-000 043                                        | 1   | TRIM GAUGE (Background: White) | -                                     | -   | 34800-93J11-000 043   | 1   |
| 36620-93J01-000 074                                        | 1   | 36620-93J01-000 074                                        | 1   | MAIN WIRING HARNESS            | -                                     | -   | 36620-93J01-000 074   | 1   |
| -                                                          | -   | -                                                          | -   | MAIN-WIRING-HARNESS EXTENSION  | -                                     | -   | 36620-93J10-000       | 1   |
| 37100-96J22-000 076                                        | 1   | -                                                          | -   | IGNITION SWITCH PANEL          | 37100-96J10-000                       | 1   | 37100-96J12-000 077   | 1   |

BINNACLE-MOUNT  
REMOTE CONTROL BOX



**67200-93J12-000** 067  
Single-engine  
Applicable Model DF8A-9.9T/15-40T/50T/  
60AT-115T/140T/  
150T-175T/Z/200T/225T/  
250T  
Not Applicable Model DF150Z

BINNACLE-MOUNT  
REMOTE CONTROL BOX



**67200-93J22-000** 068  
Dual-engine  
Applicable Model DF40T/50TH/50T/  
70AT-250T/Z  
Not Applicable Model QH

FLUSH-MOUNT  
REMOTE CONTROL BOX



**67200-93J30-000** 069  
Single-engine  
Applicable Model DF25R/40T/50T/  
60AT-100T/115T/140T/Z/  
150T/200T/225T/250T  
Not Applicable Model DF140WZ/115WT

SIDE-MOUNT REMOTE CONTROL BOX



**67200-91J01-000**  
Single-engine  
Applicable Model DF4-6

**67200-94J11-000** 070  
Single-engine  
Applicable Model DF8AR/9.9AR/15/15R/25R  
Not Applicable Model DF9.9A

**67200-93J01-000**  
Single-engine  
Applicable Model DF9.9T/40T/50T/60AT-100T/115T/  
140T/150T/175T/200T/225T/250T

CONNECTION between ENGINE and  
CONTROL SYSTEM

MAIN WIRING HARNESS



 
**36620-93J51-000**  
5.0 meters for Control system  
Applicable Model DF40T-250T/Z

**36620-93J01-000** 074  
6.5 meters for Control system  
Applicable Model DF9.9T/40T-250T/Z

**36620-93J61-000**  
8.0 meters for Control system  
Applicable Model DF40T-250T/Z

**36620-94J01-000**  
6.5 meters for Control system without  
Monitor-signal wire,  
Trim-sender wire and PTT-SW wire  
Applicable Model DF8AR/9.9AR/15R/25R

SPACER KIT for REMOTE CONTROL BOX

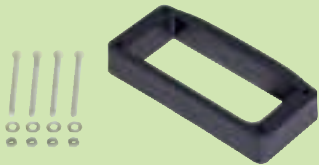

**67500-93J00-000** 071  
for Single Binnacle-mount type  
Applicable Model DF8A-15R/25R/40T/50T/  
60AT-100T/115T/140T/150T/  
175T/200T/225T/250T



**67500-93J10-000** 072  
for Dual Binnacle-mount type  
Applicable Model DF40T/50T/70AT-250T/Z



BATTERY LEAD



**36625-93J10-000** 073  
6.7 meters  
Applicable Model DF70AT-250T/Z

MAIN-WIRING-HARNESS  
EXTENSION

**36620-93J10-000**  
2.0 meters for Control system  
Applicable Model DF25R/40T/50T/  
60AT-250T/Z

**36620-93J40-000**  
3.0 meters for Control system  
Applicable Model DF40T/50T/60AT-90AT/  
115T/Z-250T/Z

MECHANICAL  
REMOTE  
CONTROL  
SYSTEM

SWITCH PANEL

IGNITION SWITCH PANEL



**37100-96J00-000**  
Single ignition  
Applicable Model DF25R/40T-250T/Z



LIGHTING SWITCH PANEL



**37210-93J00-000**  
Applicable Model DF25R/40T-250T/Z

IGNITION SWITCH PANEL



**37100-96J22-000**  
Single ignition with  
Emergency-stop switch  
Applicable Model DF25R/40T/50T/  
60AT-250T/Z

EMERGENCY SWITCH PANEL



**37803-93J00-000**  
Applicable Model DF25R/40T-300T/Z

IGNITION SWITCH PANEL



**37100-96J12-000**  
Dual ignition with  
Emergency-stop switch  
Applicable Model DF40T-250T/Z

PTT SWITCH PANEL



**37805-93J00-000**  
Applicable Model DF40T-250T/Z

WARNING BUZZER



 
**38500-93J90-000**  
Applicable Model DF25R/40T/50T/  
60AT-300T/Z

THRU-HULL-HOSE ATTACHMENT



**67300-93J00-000**  
Applicable Model DF150T/Z-300T/Z

TWIN REMOCON ATTACHMENT KIT

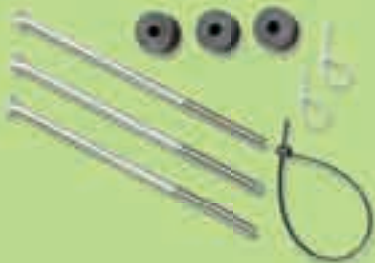

**67140-95600-000**  
Applicable Model DF9.9T/15/15R/40T/50TH/  
50T/70AT-250T/Z  
Not Applicable Model DF9.9TH/QH

REMOTE-CONTROL CABLE



**67320-93J00-000**  
8 feet 2.44 meters  
Applicable Model DF4-6/9.9T/9.9TH/15R/25R/  
40T/50T/60AT/  
150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J10-000

10 feet 3.05 meters  
Applicable Model DF4-6/9.9T/9.9TH/15R/25R/  
40T/50T/60AT/  
150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J20-000

12 feet 3.66 meters  
Applicable Model DF4-6/9.9T/9.9TH/15R/25R/  
40T/50T/60AT/  
150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J30-000

14 feet 4.27 meters  
Applicable Model DF4-6/9.9T/9.9TH/15R/25R/  
50T/60AT/150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J40-000

16 feet 4.88 meters  
Applicable Model DF4-6/9.9T/9.9TH/15R/25R/  
40T/50T/60AT/  
150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J50-000

18 feet 5.49 meters  
Applicable Model DF9.9T/9.9TH/15R/25R/40T/  
50T/60AT/150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J60-000

20 feet 6.10 meters  
Applicable Model DF9.9T/9.9TH/15R/25R/40T/  
50T/60AT/150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J70-000

22 feet 6.71 meters  
Applicable Model DF9.9T/9.9TH/15R/25R/40T/  
50T/60AT/150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

67320-93J80-000

24 feet 7.32 meters  
Applicable Model DF9.9T/9.9TH/15R/25R/40T/  
50T/60AT/150T/Z-250T/Z  
Not Applicable Model DF9.9A/9.9AR

GENUINE REMOTE-CONTROL CABLES employ the latest in cable technology. The inner core is encased in nylon, and travels back and forth in a high-density polyethylene liner.

REMOTE-CONTROL ATTACHING KIT

Converts ME model to REMOTE-CONTROL model.



**67130-91J00-000**  
Applicable Model DF4-6

67130-94J11-000

Applicable Model DF9.9T/15/15R  
Not Applicable Model DF9.9TH



**67130-95J01-000**  
Applicable Model DF25/25R

67130-99J00-000

Applicable Model DF8A-9.9AR

CLAMP BRACKET SET (41100-99J00-0EP) is required for installing 67130-99J00-000.

CLAMP BRACKET SET

41100-99J00-0EP

Applicable Model DF8A/8AR/9.9A/9.9AR

Available from December-2009.



STEERING

TILLER HANDLE KIT



**63001-94J20-0EP**  
Applicable Model DF15R

**63002-87J24-0EP**  
Applicable Model DF40T/50T

**63002-88L00-0EP**  
Applicable Model DF60A

**63002-87L00-0EP**  
Applicable Model DF70AT-90AT

**63002-90J24-0EP** 087  
with Adjustable Steering Damper  
Applicable Model DF100T/115T

CONTENTS: Ignition switch, Engine-stop switches, Wiring harness, Cables and Grommets  
TILLER HANDLE KITS are designed for easy installation for selected electric start models.

DUAL-ENGINE TIE-BAR



**67600-90J00-000** 088  
Stainless steel  
Applicable Model DF40T/50T/100T-140T/Z

**67600-93J00-000**  
Stainless steel  
Applicable Model DF150T/Z-250T/Z

TIE-BAR ADAPTER KIT



**67620-99E00-000** 089  
for installation of DUAL-ENGINE TIE-BAR (67600-90J00-000) on DF40T-60T only  
Applicable Model DF40T/50T

STEERING EXTENSION KIT



**67630-93J00-000** 090  
for installation of DUAL-ENGINE TIE-BAR (67600-93J00-000)  
Applicable Model DF150T/Z-250T/Z

STEERING-CABLE ATTACHMENT



 
**41141-89E00-000** 091  
Applicable Model DF9.9T-15  
Not Applicable Model DF9.9A/9.9AR  
Must be used when installing through-tilt-tube steering to ensure steering angles equally to the right and left.

STEERING-BRACKET SUB-ATTACHMENT



**67720-93E00-000** 092  
Applicable Model DF9.9TH-15R  
Not Applicable Model DF9.9T

STEERING CABLE SEAL

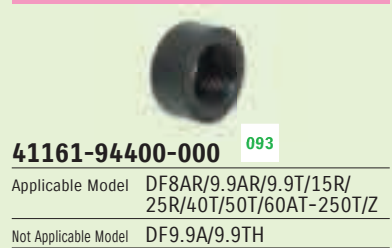

**41161-94400-000** 093  
Applicable Model DF8AR/9.9AR/9.9T/15R/25R/40T/50T/60AT-250T/Z  
Not Applicable Model DF9.9A/9.9TH

STEERING-BRACKET ATTACHMENT



**43755-94J01-000** 094  
Applicable Model DF9.9T/15/15R

**43755-94JA0-000**  
Applicable Model DF9.9T

**43755-95J01-000**  
Applicable Model DF25/25R

Used to connect DRAG LINK.

DRAG-LINK KIT



**67700-87L00-000**  
Applicable Model DF70AT-90AT

**67700-93J00-000**  
Applicable Model DF200T/Z-250T/Z

**67700-95J01-000**  
Applicable Model DF25

**67700-96J00-000**  
Applicable Model DF150T/Z/175T/Z

**67701-87J11-000**  
Applicable Model DF40T/50T/60AT/200T/Z-250T/Z

**67701-87L00-000**  
Applicable Model DF70AT-90AT

**67701-90J00-000**  
Applicable Model DF100T-140T/Z

**67701-93E12-000** 095  
Applicable Model DF9.9TH-15R  
Not Applicable Model DF9.9T

**67701-94JA0-000**  
Applicable Model DF9.9T  
Not Applicable Model DF9.9TH

**67701-95J00-000**  
Applicable Model DF25/25R

**67701-96J00-000**  
Applicable Model DF150T/Z/175T/Z

Recommended STEERING SYSTEM supplied by **Teleflex® MARINE** [www.teleflexmarine.com](http://www.teleflexmarine.com)

Order taking, delivery, technical support and warranty for these products are handled by Teleflex. Please consult to local Teleflex distributor or dealer if you need more detail for product information, price, availability and all business terms.

STEERING KIT



| BAYSTAR                           |          |
|-----------------------------------|----------|
| BAYSTAR OUTBOARD SYSTEM - HK4645H |          |
| System comprises:                 |          |
| BayStar Helm 1.4cu" (22.94cc)     | HH4314   |
| BayStar Compact Cylinder          | HC4645H* |
| 20ft "cut to length" tubing kit   | HT4420H  |
| 2 x 1 litre hydraulic oil         | HO5430   |


\*Note: 115-140hp four stroke 2001 to current model require HC4658H

| SEASTAR                                                |         |
|--------------------------------------------------------|---------|
| SEASTAR OUTBOARD SYSTEM - HK6400                       |         |
| System comprises:                                      |         |
| SeaStar Helm 1.7cu" (27.80cc)                          | HH5271  |
| SeaStar Pivot Cylinder                                 | HC5345* |
| 2 x 1 litre hydraulic oil                              | HO5430  |
| Note: 1 x SeaStar hose kits must be ordered separately |         |

\*Note: 115-140hp 1996 only requires HC5348, 40-140hp four stroke 1998 to current model and 90hp four stroke 2003 to current model require HC5358.

| SEASTAR POWER ASSIST                                   |         |
|--------------------------------------------------------|---------|
| SEASTAR OUTBOARD POWER ASSIST SYSTEM                   |         |
| System comprises:                                      |         |
| SeaStar Helm 1.7cu" (27.80cc)                          | HH5271  |
| SeaStar Pivot Cylinder                                 | HC5345* |
| 2 x 1 litre hydraulic oil                              | HO5430  |
| SeaStar 12v Power Assist Unit                          | PA1200  |
| Note: 2 x SeaStar hose kits must be ordered separately |         |

 \*Note: 115-140hp 1996 only requires HC5348, 40-140hp four stroke 1998 to current model and 90hp four stroke 2003 to current model require HC5358.

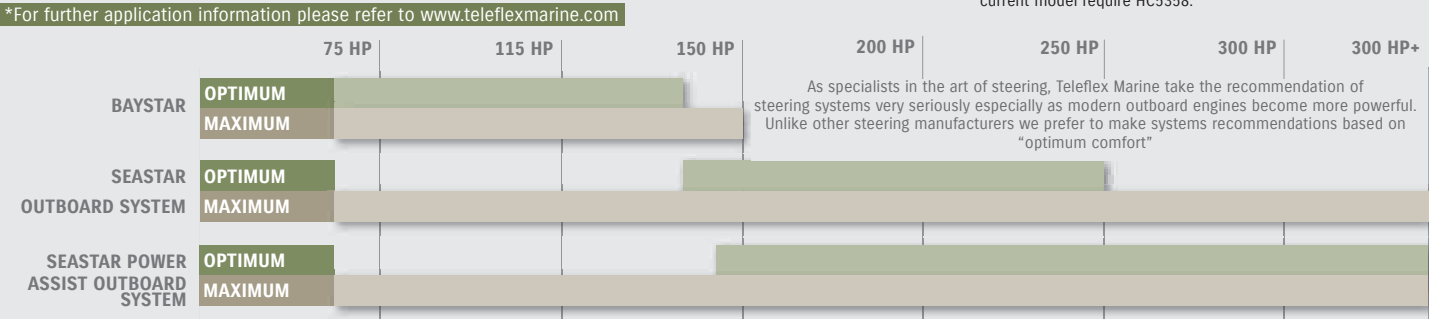

TIE-BAR KIT

**Features**  
General purpose system.  
Single and multiple engine capability.  
Total power up to 700 HP  
\*counter-rotating.

Independent engine tilt for twin engine  
Easy steering.  
5 turns lock to lock steering response.



| Twin Engine Application for 2010 Year Model Suzuki Outboard Motors |                      |          |                         |                       |                     |
|--------------------------------------------------------------------|----------------------|----------|-------------------------|-----------------------|---------------------|
| MODEL (4-CYCLE)                                                    | PRODUCTION PER.      | CYLINDER | TIE BAR KITS            |                       | NOTES               |
|                                                                    |                      |          | TWIN ENGINE SINGLE CYL. | TWIN ENGINE DUAL CYL. |                     |
| DF40/50                                                            | 1999 - CURRENT MODEL | HC5358   | HO6003                  | HO6002                | Requires kit HO5090 |
| DF70A/80A/90A                                                      | 2009 -               | HC5358   | HO6003                  | HO6002                | Requires kit HO5090 |
| DF100                                                              | 2009 -               | HC5358   | HO6003                  | HO6002                | Requires kit HO5090 |
| DF115/140                                                          | 2001 - CURRENT MODEL | HC5358   | HO6003                  | HO6002                | Requires kit HO5090 |
| DF150/175                                                          | 2006 - CURRENT MODEL | HC5345   | HO6003                  | HO6002                |                     |
| DF200/225/250                                                      | 2004 - CURRENT MODEL | HC5345   | HO6003                  | HO6002                |                     |
| DF300                                                              | 2007 - CURRENT MODEL | HC5345   | HO6003                  | HO6002                |                     |

| Triple Engine Configuration for 2010 Year Model Suzuki Outboard Motors |                      |          |                           |                                |            |
|------------------------------------------------------------------------|----------------------|----------|---------------------------|--------------------------------|------------|
| MODEL (4-CYCLE)                                                        | PRODUCTION PER.      | CYLINDER | TIE BAR KITS              |                                | NOTES      |
|                                                                        |                      |          | PORT ENGINE TO DRIVE CYL. | STARBOARD ENGINE TO DRIVE CYL. |            |
| DF150/175                                                              | 2006 - CURRENT MODEL | HC5345   | HO6003                    | HO6002                         | See notice |
| DF200/225/250                                                          | 2004 - CURRENT MODEL | HC5345   | HO6003                    | HO6002                         | See notice |
| DF300                                                                  | 2007 - CURRENT MODEL | HC5345   | HO6003                    | HO6002                         | See notice |

Notice : Two cylinders are required to operate a triple engine set up.

ELECTRICAL  
PARTS

BATTERY CHARGING KIT

32000-91J00-000

80W

Applicable Model DF4-6

RECTIFIER SET



32801-91J00-000

097

Applicable Model DF4-6

RECEPTACLE KIT

 


39600-91J00-000

098

Applicable Model DF4-6

ELECTRIC STARTER KIT

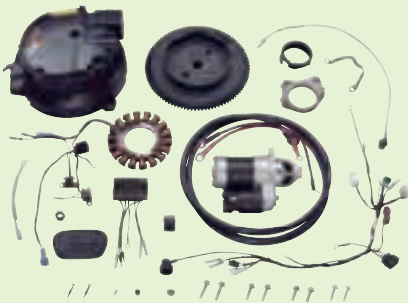

31000-94J01-000

Applicable Model DF15

31000-95J00-000

096

Applicable Model DF25

31000-99J00-000

Applicable Model DF8A/9.9A

Converts MZ model into ME model.

BATTERY CHARGING KIT

32000-95J01-000

80W

Applicable Model DF25

RECTIFIER SET



32801-95J01-000

101

Applicable Model DF8A/9.9A/25

RECEPTACLE KIT



39600-95J00-000

102

Applicable Model DF25

BATTERY CHARGING KIT

32000-94J01-000

80W

Applicable Model DF15

RECTIFIER SET



32801-94J01-000

099

Applicable Model DF15

RECEPTACLE KIT



39600-94J01-000

100

Applicable Model DF8A/9.9A/15

BATTERY CHARGING KIT

32000-99J00-000

80W

Applicable Model DF8A/9.9A

RECTIFIER SET



32801-95J01-000

101

Applicable Model DF8A/9.9A/25

RECEPTACLE KIT



39600-94J01-000

100

Applicable Model DF8A/9.9A/15

BATTERY ISOLATOR LEAD SET



33830-96J00-000

103

Applicable Model DF150T/Z/175T/Z

33830-98J01-000

Applicable Model DF300T/Z

STATOR & PULSER COIL COMPONENT



32120-94J10-000

12V, 120W

Applicable Model DF15

32120-95J00-000

12V, 180W

Applicable Model DF25

Raises the standard output (12V, 80W) to a larger output (12V, 120 or 180W).

ANODE

ZINC ANODE for saltwater



41811-98500-000

105

Applicable Model DF9.9T-15R

Not Applicable Model DF9.9A/9.9AR



55300-95500-000

106

Applicable Model DF8A-15R/40T-60ATH



55320-95311-000

107

Applicable Model DF40T-50T



55321-93900-000

108

Applicable Model DF9.9T/9.9TH/15/15R

Not Applicable Model DF9.9A/9.9AR



55321-95J00-000

109

Applicable Model DF2.5/25/25R



55321-90J01-000

110

Applicable Model DF100T-140T/Z



55321-99E00-000

111

Applicable Model DF9.9T/9.9TH/15/15R



55125-96310-000

112

Applicable Model DF25/25R



55125-95500-000

113

Applicable Model DF60T/100T-140T

ALUMINUM ANODE for brackish water, saltwater



55321-87J00-000

114

Applicable Model DF2.5-9.9TH/25-300T/Z



55321-87J10-000

116

Applicable Model DF4-9.9A/9.9AR/15-60ATH/100T-300T/Z

 
Not Applicable Model DF9.9T/9.9TH



55320-94900-000

115

Applicable Model DF60AT-300T/Z



55321-94910-000

117

Applicable Model DF70AT-300T/Z

FUEL SYSTEM

FUEL TANK



**65000-99100-000** 118  
12-litre plastic tank with no fuel-level gauge  
Applicable Model DF4-15R

**65000-95D01-000** 119  
25-litre plastic tank with a fuel-level gauge  
Applicable Model DF8A-140T/Z

REPLACEMENT FUEL CAP

**65520-99100-000**  
for 12-litre tank with no fuel-level gauge  
Applicable Model DF4-15R

**65520-95D00-000**  
for 25-litre tank with a fuel-level gauge  
Applicable Model DF8A-140T/Z

FUEL-HOSE SOCKET



**65750-98505-000** 120  
Metal, Inner diameter: 11.2 mm  
Applicable Model DF4-15R



**65750-87J11-000** 121  
Plastic, Inner diameter: 6.6 mm  
Applicable Model DF4-60AT



**65750-95500-000** 122  
Metal, Inner diameter: 13.0 mm  
Applicable Model DF8A-140T/Z

FUEL CONNECTOR (ENGINE SIDE)



**65720-986B0-000** 123  
Plastic  
Applicable Model DF4-6/9.9T-15R  
Not Applicable Model DF9.9A/9.9AR

FUEL CONNECTOR (TANK SIDE)



**65740-95D01-000** 124  
Outer diameter: 13 mm, 1/4"NPT  
Applicable Model DF8A-140T/Z



PRIMER BULB (SQUEEZE PUMP)

**65770-93904-000** 125  
Small-in & Large-out  
Applicable Model DF4-15R

**65770-95505-000**  
Large-in & Large-out  
Applicable Model DF8A-9.9AR/25-140T/Z  
Not Applicable Model DF9.9T/9.9TH

**65770-87D00-000**  
Large-in & Large-out  
Applicable Model DF150T/Z-300T/Z

WATER SEPARATOR / FUEL FILTER



**99000-79N12-012** 126  
Normal size  
Applicable Model DF60T-300T/Z

REPLACEMENT FILTER

**99000-79N12-011**  
for Normal size  
Applicable Model DF60T-300T/Z

BOWL & DRAIN VALVE ASSEMBLY

**99000-79N12-013**  
for Normal size  
Applicable Model DF60T-300T/Z

WATER SEPARATOR / FUEL FILTER



**99000-79N12-015** 127  
Compact size  
Applicable Model DF40T-140T/Z

REPLACEMENT FILTER

**99000-79N12-014**  
for Compact size  
Applicable Model DF40T-140T/Z

BOWL & DRAIN VALVE ASSEMBLY

**99000-79N12-016**  
for Compact size  
Applicable Model DF40T-140T/Z

FUEL-HOSE COMPONENT



**65700-91J13-000**  
for 25-litre plastic tank to engine  
Applicable Model DF4-9.9AR/15/15R  
Not Applicable Model DF9.9T/9.9TH

**65700-90J12-000**  
for 12-litre plastic tank to engine  
Applicable Model DF70AT-140T/Z

 
**65700-93J00-000** 128  
for 25-litre plastic tank to engine  
Applicable Model DF150T/Z-300T/Z

**65700-87D80-000**  
for 12-litre plastic tank to engine  
Applicable Model DF15/15R

**65700-87J12-000**  
for 25-litre plastic tank to engine  
Applicable Model DF8A-9.9AR/25-60AT  
Not Applicable Model DF9.9T/9.9TH

**65700-94JB1-000**  
for 25-litre plastic tank to engine  
Applicable Model DF9.9T/15  
Not Applicable Model DF9.9TH

Application Chart for FUEL HOSE COMPONENT

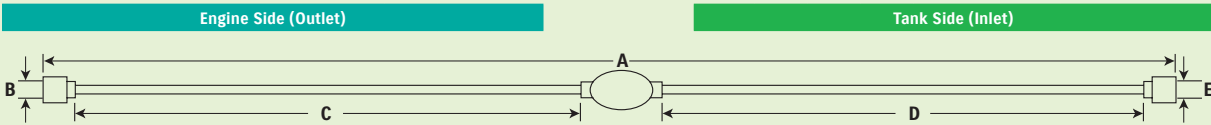

| FUEL HOSE COMPONENT |                     | SOCKET      |                  |                 | HOSE                |             |             | SQUEEZE PUMP | HOSE                |             |             | SOCKET   |                  |             |    |                 |
|---------------------|---------------------|-------------|------------------|-----------------|---------------------|-------------|-------------|--------------|---------------------|-------------|-------------|----------|------------------|-------------|----|-----------------|
| Part Number         | A<br>Length<br>(mm) | Material    | B<br>I/D<br>(mm) | Part Number     | C<br>Length<br>(mm) | I/D<br>(mm) | O/D<br>(mm) |              | D<br>Length<br>(mm) | I/D<br>(mm) | O/D<br>(mm) | Material | E<br>I/D<br>(mm) | Part Number |    |                 |
| 65700-91J13-000     | 1960                | Plastic     | 6.3              | 65750-87J11-000 | 700                 | Large       | 7.3         | 12.5         | 65770-93903-000     | 1100        | Small       | 5.3      | 10.5             | Metal       | 11 | 65750-98505-000 |
| 65700-90J12-000     | 1240                | (no socket) | -                | -               | (no hose)           | -           | -           | -            | 65770-95504-000     | 1100        | Large       | 7.3      | 12.5             | Metal       | 13 | 65750-95500-000 |
| 65700-93J00-000     | 2370                | (no socket) | -                | -               | (no hose)           | -           | -           | -            | 65770-87D00-000     | 2250        | Large       | 9.0      | 14.0             | (no socket) | -  | -               |
| 65700-87D80-000     | 2560                | Metal       | 11               | 65750-98505-000 | 300                 |             | 5.3         | 10.5         | 65770-95541-000     | 2090        |             | 7.3      | 12.5             | Metal       | 13 | 65750-95500-000 |
| 65700-87J12-000     | 1970                | Plastic     | 6.3              | 65750-87J11-000 | 700                 |             | 7.3         | 12.5         | 65770-95505-000     | 1100        |             | 7.3      | 12.5             | Metal       | 13 | 65750-95500-000 |
| 65700-94JB1-000     | 2560                | Metal       | 11               | 65750-98505-000 | 300                 |             | 5.3         | 10.5         | 65770-95541-000     | 2090        |             | 7.3      | 12.5             | Metal       | 13 | 65750-95500-000 |

PROPELLER



HARDWARE FOR PROPELLER

| Applicable Model | STOPPER         |                 | PROPELLER BUSH  |          | HARDWARE KIT    | Contents of HARDWARE KIT |                 |                     |                     |
|------------------|-----------------|-----------------|-----------------|----------|-----------------|--------------------------|-----------------|---------------------|---------------------|
|                  |                 | SPACER          |                 |          |                 | SPACER                   | WASHER          | NUT                 | COTTER PIN          |
| DF2.5            | -               | -               | -               | -        | N/A             | -                        | -               | -                   | ( 09204-02001-000 ) |
| DF4/5/6          | 57635-91J00-000 | -               | 58120-91J00-000 | Press-In | N/A             | -                        | -               | ( 58130-91J01-000 ) | ( 09204-03003-000 ) |
| DF8A/9.9A        | 57632-94J00-000 | -               | 58120-93701-000 | Press-In | 57630-99J00-000 | 57633-93901-000          | 09160-12066-000 | 59152-94J00-000     | 09204-02004-000     |
| DF9.9/15         | 57632-93902-000 | -               | 58120-93701-000 | Press-In | 57630-93900-000 | 57633-93901-000          | 09160-12066-000 | 09141-12005-000     | 09204-02004-000     |
| DF9.9            | 57632-94J00-000 | -               | 58120-94JA0-000 | Press-In | 57630-93900-000 | 57633-93901-000          | 09160-12066-000 | 09141-12005-000     | 09204-02004-000     |
| DF25             | 57632-95J00-000 | -               | 58120-96401-000 | Press-In | 57630-96300-000 | 57633-96300-000          | 09160-14028-000 | 09141-14008-000     | 09204-03003-000     |
| DF40/50          | 57632-95305-000 | -               | 58120-95300-000 | Press-In | 57630-94300-000 | 57633-94300-000          | 09160-18028-000 | 09141-18005-000     | 09204-03003-000     |
| DF60A            | 57632-95305-000 | -               | 58120-88L00-000 | Press-In | 57630-94300-000 | 57633-94300-000          | 09160-18028-000 | 09141-18005-000     | 09204-03003-000     |
| DF70A/80A/90A    | 57632-87L00-000 | -               | 58120-90J00-000 | Press-In | 57630-90J00-000 | 57633-90J02-000          | 09160-18028-000 | 09141-18005-000     | 09204-03003-000     |
| DF100/115        | 57635-90J01-000 | 57632-90J00-000 | 58120-90J00-000 | Press-In | 57630-90J00-000 | 57633-90J02-000          | 09160-18028-000 | 09141-18005-000     | 09204-03003-000     |
| DF115            | 57635-92J01-000 | -               | 58120-90J00-000 | Press-In | 57630-90J00-000 | 57633-90J02-000          | 09160-18028-000 | 09141-18005-000     | 09204-03003-000     |
| DF140            | 57635-92J01-000 | -               | 58120-90J00-000 | Press-In | 57630-90J00-000 | 57633-90J02-000          | 09160-18028-000 | 09141-18005-000     | 09204-03003-000     |
| DF150-300        | 57632-93J10-000 | -               | 58105-93J10-000 | Press-In | 57630-92E00-000 | 57633-87D30-000          | 09160-18028-000 | 09141-18005-000     | 09204-03003-000     |

\*Rotation: RR: Right-Hand-Rotation model, CR: Counter-Rotation model

| model       | type   | material  | blade | diameter | pitch | rotation* | description | part number     |
|-------------|--------|-----------|-------|----------|-------|-----------|-------------|-----------------|
| DF2.5       | A510   | Aluminum  | 3     | 7 3/8    | 5 3/8 | RR        |             | 58111-97J00-019 |
| DF4         | C601   | Aluminum  | 3     | 7 1/2    | 6     | RR        |             | 58110-91J00-019 |
| DF5         | C611   | Aluminum  | 3     | 7 1/2    | 6 1/2 | RR        |             | 58110-91J10-019 |
| DF6         | C701   | Aluminum  | 3     | 7 1/2    | 7     | RR        |             | 58110-91J20-019 |
| DF9.9       | M701   | Aluminum  | 3     | 9 1/4    | 7     | RR        |             | 58100-93703-019 |
|             | M821   | Aluminum  | 3     | 9 1/4    | 8     | RR        | THICK       | 58100-91D00-019 |
|             | M901   | Aluminum  | 3     | 9 1/4    | 9     | RR        |             | 58100-94J00-019 |
|             | M911   | Aluminum  | 3     | 9 1/4    | 9     | RR        | THICK       | 58100-93763-019 |
|             | M1001  | Aluminum  | 3     | 9 1/4    | 10    | RR        |             | 58100-93733-019 |
|             | M1011  | Aluminum  | 3     | 9 1/4    | 10    | RR        | THICK       | 58100-93773-019 |
|             | M1101  | Aluminum  | 3     | 9 1/4    | 11    | RR        |             | 58100-93743-019 |
|             | -      | Aluminum  | 4     | 10       | 5     | RR        | High Thrust | 58100-94JA0-019 |
| DF8A        | M701   | Aluminum  | 3     | 9 1/4    | 7     | RR        |             | 58100-93703-019 |
| DF9.9A      | M821   | Aluminum  | 3     | 9 1/4    | 8     | RR        | THICK       | 58100-91D00-019 |
| DF15        | M901   | Aluminum  | 3     | 9 1/4    | 9     | RR        |             | 58100-94J00-019 |
|             | M911   | Aluminum  | 3     | 9 1/4    | 9     | RR        | THICK       | 58100-93763-019 |
|             | M1001  | Aluminum  | 3     | 9 1/4    | 10    | RR        |             | 58100-93733-019 |
|             | M1011  | Aluminum  | 3     | 9 1/4    | 10    | RR        | THICK       | 58100-93773-019 |
|             | M1101  | Aluminum  | 3     | 9 1/4    | 11    | RR        |             | 58100-93743-019 |
| DF25        | P911   | Aluminum  | 3     | 10 1/4   | 9     | RR        | THICK       | 58100-96370-019 |
|             | P1001  | Aluminum  | 3     | 10 1/4   | 10    | RR        |             | 58100-96410-019 |
|             | P1101  | Aluminum  | 3     | 10 1/4   | 10    | RR        | THICK       | 58100-96470-019 |
|             | P101   | Aluminum  | 3     | 10 1/4   | 11    | RR        |             | 58100-96420-019 |
|             | P1201  | Aluminum  | 3     | 10 1/4   | 12    | RR        |             | 58100-96430-019 |
|             | P1211  | Aluminum  | 3     | 10 1/4   | 12    | RR        | THICK       | 58100-96480-019 |
|             | P1301  | Aluminum  | 3     | 10 1/4   | 13    | RR        |             | 58100-96440-019 |
|             | P1311  | Aluminum  | 3     | 10 1/4   | 13    | RR        | THICK       | 58100-96490-019 |
|             | P1401  | Aluminum  | 3     | 10 1/4   | 14    | RR        |             | 58100-95D00-019 |
|             | P1501  | Aluminum  | 3     | 10 1/4   | 15    | RR        |             | 58100-96460-019 |
| DF40        | S900   | Aluminum  | 3     | 11 1/2   | 9     | RR        |             | 58100-94302-019 |
| DF50        | S1000  | Aluminum  | 3     | 11 1/2   | 10    | RR        |             | 58100-95212-019 |
|             | S1100  | Aluminum  | 3     | 11 1/2   | 11    | RR        |             | 58100-95222-019 |
|             | S1200  | Aluminum  | 3     | 11 5/8   | 12    | RR        |             | 58100-95393-019 |
|             | S1301  | Aluminum  | 3     | 11 1/2   | 13    | RR        |             | 58100-94313-019 |
|             | S1400  | Aluminum  | 3     | 11 3/8   | 14    | RR        |             | 58100-95353-019 |
|             | S1500  | Aluminum  | 3     | 11 1/4   | 15    | RR        |             | 58100-95363-019 |
|             | S1600  | Aluminum  | 3     | 11 1/8   | 16    | RR        |             | 58100-95373-019 |
|             | S1700  | Aluminum  | 3     | 11       | 17    | RR        |             | 58100-95382-019 |
|             | SS1300 | Stainless | 3     | 11 1/2   | 13    | RR        |             | 58100-94401-000 |
|             | SS1400 | Stainless | 3     | 11 3/8   | 14    | RR        |             | 58100-94411-000 |
|             | SS1600 | Stainless | 3     | 11 1/8   | 16    | RR        |             | 58100-94431-000 |
| DF60A       | S900   | Aluminum  | 3     | 11 1/2   | 9     | RR        |             | 58100-88L00-019 |
|             | S1000  | Aluminum  | 3     | 11 1/2   | 10    | RR        |             | 58100-88L10-019 |
|             | S1100  | Aluminum  | 3     | 11 1/2   | 11    | RR        |             | 58100-88L20-019 |
|             | S1200  | Aluminum  | 3     | 11 5/8   | 12    | RR        |             | 58100-88L30-019 |
|             | S1301  | Aluminum  | 3     | 11 1/2   | 13    | RR        |             | 58100-88L40-019 |
|             | S1400  | Aluminum  | 3     | 11 3/8   | 14    | RR        |             | 58100-88L50-019 |
|             | S1500  | Aluminum  | 3     | 11 1/4   | 15    | RR        |             | 58100-88L60-019 |
|             | S1600  | Aluminum  | 3     | 11 1/8   | 16    | RR        |             | 58100-88L70-019 |
|             | S1700  | Aluminum  | 3     | 11       | 17    | RR        |             | 58100-88L80-019 |
| (tentative) | SS1300 | Stainless | 3     | 11 1/2   | 13    | RR        |             | 58200-88L00-000 |
| (tentative) | SS1400 | Stainless | 3     | 11 3/8   | 14    | RR        |             | 58200-88L10-000 |
| (tentative) | SS1600 | Stainless | 3     | 11 1/8   | 16    | RR        |             | 58200-88L30-000 |



| model | material  | blade | diameter | pitch | rotation* | part number     |
|-------|-----------|-------|----------|-------|-----------|-----------------|
| DF70A | Aluminum  | 3     | 14       | 13    | RR        | 58100-87L00-019 |
| DF80A | Aluminum  | 3     | 13 7/8   | 15    | RR        | 58100-87L10-019 |
| DF90A | Aluminum  | 3     | 13 3/4   | 17    | RR        | 58100-87L20-019 |
|       | Aluminum  | 3     | 13 3/4   | 19    | RR        | 58100-87L30-019 |
|       | Aluminum  | 3     | 13 3/4   | 21    | RR        | 58100-87L40-019 |
|       | Aluminum  | 3     | 13 3/4   | 23    | RR        | 58100-87L50-019 |
|       | Aluminum  | 3     | 13 1/2   | 15    | RR        | 58100-90J41-019 |
|       | Aluminum  | 3     | 14       | 17    | RR        | 58100-90J01-019 |
|       | Aluminum  | 3     | 14       | 19    | RR        | 58100-90J11-019 |
|       | Aluminum  | 3     | 14       | 21    | RR        | 58100-90J21-019 |
|       | Aluminum  | 3     | 14       | 23    | RR        | 58100-90J31-019 |
|       | Stainless | 3     | 14 1/4   | 18    | RR        | 58200-90J00-000 |
|       | Stainless | 3     | 14 1/4   | 20    | RR        | 58200-90J10-000 |
|       | Stainless | 3     | 14 1/4   | 22    | RR        | 58200-90J20-000 |
|       | Stainless | 3     | 14 1/4   | 24    | RR        | 58200-90J30-000 |
| DF100 | Aluminum  | 3     | 13 1/2   | 15    | RR        | 58100-90J41-019 |
| DF115 | Aluminum  | 3     | 14       | 17    | RR        | 58100-90J01-019 |
| DF140 | Aluminum  | 3     | 14       | 19    | RR        | 58100-90J11-019 |
|       | Aluminum  | 3     | 14       | 21    | RR        | 58100-90J21-019 |
|       | Aluminum  | 3     | 14       | 23    | RR        | 58100-90J31-019 |
|       | Stainless | 3     | 14 1/4   | 18    | RR        | 58200-90J00-000 |
|       | Stainless | 3     | 14 1/4   | 20    | RR        | 58200-90J10-000 |
|       | Stainless | 3     | 14 1/4   | 22    | RR        | 58200-90J20-000 |
|       | Stainless | 3     | 14 1/4   | 18    | CR        | 58200-92J00-000 |
|       | Stainless | 3     | 14 1/4   | 20    | CR        | 58200-92J10-000 |
|       | Stainless | 3     | 14 1/4   | 22    | CR        | 58200-92J20-000 |
|       | Stainless | 3     | 14 1/4   | 24    | CR        | 58200-92J30-000 |

| model | material  | blade | diameter | pitch  | rotation* | part number     |
|-------|-----------|-------|----------|--------|-----------|-----------------|
| DF150 | Stainless | 3     | 16       | 17     | RR        | 58200-93J00-000 |
| DF175 | Stainless | 3     | 16       | 18 1/2 | RR        | 58200-93J10-000 |
| DF200 | Stainless | 3     | 16       | 20     | RR        | 58200-93J20-000 |
| DF225 | Stainless | 3     | 16       | 21 1/2 | RR        | 58200-93J30-000 |
| DF250 | Stainless | 3     | 16       | 23     | RR        | 58200-93J40-000 |
| DF300 | Stainless | 3     | 16       | 24 1/2 | RR        | 58200-93J50-000 |
|       | Stainless | 3     | 16       | 26     | RR        | 58200-93J60-000 |
|       | Stainless | 3     | 16       | 27 1/2 | RR        | 58200-93J70-000 |
|       | Stainless | 3     | 16       | 17     | CR        | 58200-93JE0-000 |
|       | Stainless | 3     | 16       | 18 1/2 | CR        | 58200-93JA0-000 |
|       | Stainless | 3     | 16       | 20     | CR        | 58200-93JB0-000 |
|       | Stainless | 3     | 16       | 21 1/2 | CR        | 58200-93JC0-000 |
|       | Stainless | 3     | 16       | 23     | CR        | 58200-93JD0-000 |
|       | Stainless | 3     | 16       | 24 1/2 | CR        | 58200-93JF0-000 |
|       | Stainless | 3     | 16       | 26     | CR        | 58200-93JG0-000 |
|       | Stainless | 3     | 15 1/2   | 17     | RR        | 58200-96J00-000 |
|       | Stainless | 3     | 15 1/4   | 19     | RR        | 58200-96J10-000 |
|       | Stainless | 3     | 15       | 21     | RR        | 58200-96J20-000 |
|       | Stainless | 3     | 14 3/4   | 23     | RR        | 58200-96J30-000 |
|       | Stainless | 3     | 14 1/2   | 25     | RR        | 58200-96J40-000 |
|       | Stainless | 3     | 14 1/2   | 27     | RR        | 58200-96J50-000 |
|       | Stainless | 3     | 15 1/2   | 17     | CR        | 58200-96JA0-000 |
|       | Stainless | 3     | 15 1/4   | 19     | CR        | 58200-96JB0-000 |
|       | Stainless | 3     | 15       | 21     | CR        | 58200-96JC0-000 |
|       | Stainless | 3     | 14 3/4   | 23     | CR        | 58200-96JD0-000 |
|       | Stainless | 3     | 14 1/2   | 25     | CR        | 58200-96JE0-000 |
|       | Stainless | 3     | 14 1/2   | 27     | CR        | 58200-96JF0-000 |



CARE ITEM

MAINTENANCE ITEM

ENGINECOVER



68110-96110-000  
Applicable Model for DF4-15

68110-94400-000  
Applicable Model for DF25

68110-94510-000  
Applicable Model for DF40-60

FLUSH-HOSE ATTACHMENT



55181-95200-000  
Applicable Model DF4-15/40T/50T  
Not Applicable Model DF9.9A/9.9AR



17917-87L00-000  
Applicable Model DF25/25R/60T-300T/Z

LIQUID GASKET



99000-31120-000  
SILICONE SEAL 1212C  
50 grams (1.7 oz)



99000-31140-000  
1207B (BLACK)  
100 grams (3.4 oz)

PAINT



99000-10109-01T  
Francois white  
90 grams (3.0 oz)

99000-10109-0EP  
Metallic shadow black  
90 grams (3.0 oz)

GREASE



99000-25011-000  
SUPER GREASE-A  
450 grams (15.8 oz) for Crank oil seal



99000-25350-000  
WATER RESISTANT GREASE EP2  
250 grams (8.8 oz)



99000-25140-000  
MOLY PASTE  
50 grams (1.7 oz)

THREAD LOCK



99000-32020-000  
1333B (RED)  
50 grams (1.7 oz)



 
99000-32050-000  
1342 (BLUE)  
50 grams (1.7 oz)



SUZUKI APPROVED GENUINE OIL by MOTUL

These products are supplied directly by MOTUL. Please note that these oils are not available at some countries. Please contact with local distributor of MOTUL.

Suzuki and MOTUL have been in partnership in MotoGP since 1988. Extending this trusted relationship led to the development of new Suzuki Marine Oils. These ranges of oils have excellent oxidation stability and provide outstanding rust protection under severe operating conditions.

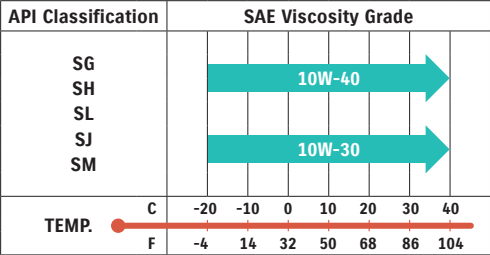

GEAR OIL  
SAE 90, API GL-5  
0.35 litre



4-STROKE ENGINE OIL  
SAE 10W-30 Semi-synthetic  
5 litre FCW



4-STROKE ENGINE OIL  
SAE 10W-40 Semi-Synthetic  
5 litre FCW

| part name     | volume                     | part number         | DF300           | DF250 | DF225 | DF200 | DF175 | DF150 | DF140 | DF115 | DF100 | DF90A | DF80A | DF70A | DF60 | DF50 | DF40 | DF25 | DF15 | DF9.9 | DF6 | DF5 | DF4 | DF2.5 |
|---------------|----------------------------|---------------------|-----------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|------|------|------|------|------|-------|-----|-----|-----|-------|
| LIQUID GASKET | SILICONE SEAL 1212C        | 50 grams ( 1.7 oz)  | 99000-31120-000 | 132   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0    | 0    | 0    | 0    | 0    | 0     | 0   | 0   | 0   | 0     |
| LIQUID GASKET | 1207B (BLACK)              | 100 grams ( 3.4 oz) | 99000-31140-000 | 133   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0    | 0    | 0    | 0    | 0    | 0     | 0   | 0   | 0   | 0     |
| GREASE        | SUPER GREASE-A             | 450 grams (15.8 oz) | 99000-25011-000 | 135   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0    | 0    | 0    | 0    | 0    | 0     | 0   | 0   | 0   | -     |
| GREASE        | WATER RESISTANT GREASE EP2 | 250 grams ( 8.8 oz) | 99000-25350-000 | 136   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0    | 0    | 0    | 0    | 0    | 0     | 0   | 0   | 0   | 0     |
| GREASE        | MOLY PASTE                 | 50 grams ( 1.7 oz)  | 99000-25140-000 | 137   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0    | 0    | 0    | 0    | 0    | 0     | 0   | 0   | 0   | 0     |
| THREAD LOCK   | 1333B (RED)                | 50 grams ( 1.7 oz)  | 99000-32020-000 | 138   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0    | -    | -    | 0    | 0    | 0     | -   | -   | -   | -     |
| THREAD LOCK   | 1342 (BLUE)                | 50 grams ( 1.7 oz)  | 99000-32050-000 | 139   | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0     | 0    | 0    | 0    | 0    | 0    | 0     | 0   | 0   | 0   | 0     |

0: Available - : Not available

APPLICATION CHART for 2010 MODEL

| page   | Part Name / Description                 | DF300             | DF200/225/250                  | DF150/175                          | DF140                              | DF100/115                          | DF70A/80A/90A                      | DF60A                              | DF40/50                            | DF25                           | DF15                           | DF9.9T only                    | DF8A/9.9A                      | DF4/5/6                        |                 |
|--------|-----------------------------------------|-------------------|--------------------------------|------------------------------------|------------------------------------|------------------------------------|------------------------------------|------------------------------------|------------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|--------------------------------|-----------------|
| 12, 16 | REMOTE CONTROL BOX                      |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | Binnacle-mount                          | for Single-Engine | 67200-98J02-000                | 67200-93J12-000 <sup>067</sup>     | 67200-93J12-000 <sup>067</sup>     | 67200-93J12-000 <sup>067</sup>     | 67200-93J12-000 <sup>067</sup>     | 67200-93J12-000 <sup>067</sup>     | 67200-93J12-000 <sup>067</sup>     | 67200-93J12-000 <sup>067</sup> | 67200-93J12-000 <sup>067</sup> | 67200-93J12-000 <sup>067</sup> | -                              | -                              |                 |
|        |                                         | for Dual-Engine   | 67200-98J12-000                | 67200-93J22-000 <sup>068</sup>     | 67200-93J22-000 <sup>068</sup>     | 67200-93J22-000 <sup>068</sup>     | 67200-93J22-000 <sup>068</sup>     | 67200-93J22-000 <sup>068</sup>     | -                                  | 67200-93J22-000 <sup>068</sup> | -                              | -                              | -                              | -                              | -               |
|        | Flush-mount                             | for Single-Engine | 67200-98J21-000                | 67200-93J30-000 <sup>069</sup>     | 67200-93J30-000 <sup>069</sup>     | 67200-93J30-000 <sup>069</sup>     | 67200-93J30-000 <sup>069</sup>     | 67200-93J30-000 <sup>069</sup>     | 67200-93J30-000 <sup>069</sup>     | 67200-93J30-000 <sup>069</sup> | 67200-93J30-000 <sup>069</sup> | -                              | -                              | -                              | -               |
|        | Side-mount                              | for Single-Engine | -                              | 67200-93J01-000                    | 67200-93J01-000                    | 67200-93J01-000                    | 67200-93J01-000                    | 67200-93J01-000                    | 67200-93J01-000                    | 67200-93J01-000                | 67200-94J11-000 <sup>070</sup> | 67200-94J11-000 <sup>070</sup> | 67200-93J01-000                | 67200-94J11-000 <sup>070</sup> | 67200-91J01-000 |
| 12, 16 | Binnacle-mount REMOTE CONTROL KIT       |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | for Single-Engine                       | + Single-station  | 67000-98J03-000                | 67000-93J01-000<br>67000-93J44-000 | 67000-93J01-000<br>67000-93J44-000 | 67000-93J01-000<br>67000-93J44-000 | 67000-93J01-000<br>67000-93J44-000 | 67000-93J01-000<br>67000-93J44-000 | 67000-93J01-000<br>67000-93J44-000 | -                              | -                              | -                              | -                              | -                              |                 |
|        |                                         | + Second-station  | 67000-98J14-000                | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
|        | for Dual-Engine                         | + Single-station  | 67000-98J24-000                | 67000-93J11-000<br>67000-93J54-000 | 67000-93J11-000<br>67000-93J54-000 | 67000-93J11-000<br>67000-93J54-000 | 67000-93J11-000<br>67000-93J54-000 | 67000-93J11-000<br>67000-93J54-000 | 67000-93J11-000<br>67000-93J54-000 | -                              | -                              | -                              | -                              | -                              |                 |
|        |                                         | + Second-station  | 67000-98J34-000                | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
|        | for Triple-Engine                       | + Single-station  | 67000-98J42-000                | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
|        |                                         | + Second-station  | 67000-98J52-000                | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
| 12, 16 | Flush-mount REMOTE CONTROL KIT          |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | for Single-Engine                       | + Single-station  | 67000-98J61-000                | 67000-93J21-000<br>67000-93J64-000 | 67000-93J21-000<br>67000-93J64-000 | 67000-93J21-000<br>67000-93J64-000 | 67000-93J21-000<br>67000-93J64-000 | 67000-93J21-000<br>67000-93J64-000 | 67000-93J21-000<br>67000-93J64-000 | -                              | -                              | -                              | -                              | -                              |                 |
| 17     | Side-mount REMOTE CONTROL KIT           |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | for Single-Engine                       | + Single-station  | -                              | 67000-93J73-000                    | 67000-93J73-000                    | 67000-93J73-000                    | 67000-93J73-000                    | 67000-93J73-000                    | 67000-93J73-000                    | -                              | -                              | -                              | -                              | -                              |                 |
| 16     | SPACER KIT for REMOTE CONTROL BOX       |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | for Single Binnacle-mount type          |                   | -                              | 67500-93J00-000 <sup>071</sup>     | 67500-93J00-000 <sup>071</sup>     | 67500-93J00-000 <sup>071</sup>     | 67500-93J00-000 <sup>071</sup>     | 67500-93J00-000 <sup>071</sup>     | 67500-93J00-000 <sup>071</sup>     | 67500-93J00-000 <sup>071</sup> | 67500-93J00-000 <sup>071</sup> | 67500-93J00-000 <sup>071</sup> | 67500-93J00-000 <sup>071</sup> | -                              |                 |
|        | for Dual Binnacle-mount type            |                   | -                              | 67500-93J10-000 <sup>072</sup>     | 67500-93J10-000 <sup>072</sup>     | 67500-93J10-000 <sup>072</sup>     | 67500-93J10-000 <sup>072</sup>     | 67500-93J10-000 <sup>072</sup>     | 67500-93J10-000 <sup>072</sup>     | -                              | -                              | -                              | -                              | -                              |                 |
| 19     | REMOTE-CONTROL CABLE                    |                   | -                              | See page 19                        | See page 19                        | -                                  | -                                  | See page 19                        | See page 19                        | See page 19                    | See page 19                    | See page 19                    | See page 19                    | See page 19                    |                 |
| 19     | REMOTE-CONTROL ATTACHING KIT            |                   | -                              | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | 67130-95J01-000 <sup>086</sup> | 67130-94J11-000                | 67130-94J11-000                | 67130-99J00-000                | 67130-91J00-000 <sup>085</sup> |                 |
| 15, 17 | MAIN WIRING HARNESS                     |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | 5.0 meters                              |                   | -                              | 36620-93J51-000                    | 36620-93J51-000                    | 36620-93J51-000                    | 36620-93J51-000                    | 36620-93J51-000                    | 36620-93J51-000                    | -                              | -                              | -                              | -                              | -                              |                 |
|        | 6.5 meters                              |                   | 36620-98J00-000 <sup>059</sup> | 36620-93J01-000 <sup>074</sup>     | 36620-93J01-000 <sup>074</sup>     | 36620-93J01-000 <sup>074</sup>     | 36620-93J01-000 <sup>074</sup>     | 36620-93J01-000 <sup>074</sup>     | 36620-93J01-000 <sup>074</sup>     | 36620-94J01-000                | 36620-94J01-000                | 36620-93J01-000 <sup>074</sup> | 36620-94J01-000                | -                              |                 |
|        | 8.0 meters                              |                   | -                              | 36620-93J61-000                    | 36620-93J61-000                    | 36620-93J61-000                    | 36620-93J61-000                    | 36620-93J61-000                    | 36620-93J61-000                    | -                              | -                              | -                              | -                              | -                              |                 |
|        | 9.5 meters                              |                   | 36620-98J10-000                | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
| 15, 17 | MAIN-WIRING-HARNESS EXTENSION           |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | 2.0 meters                              |                   | 36620-98J20-000 <sup>060</sup> | 36620-93J10-000                    | 36620-93J10-000                    | 36620-93J10-000                    | 36620-93J10-000                    | 36620-93J10-000                    | 36620-93J10-000                    | 36620-93J10-000                | 36620-93J10-000                | -                              | -                              | -                              | -               |
|        | 3.5 meters                              |                   | -                              | 36620-93J40-000                    | 36620-93J40-000                    | 36620-93J40-000                    | 36620-93J40-000                    | 36620-93J40-000                    | 36620-93J40-000                    | -                              | -                              | -                              | -                              | -                              |                 |
| 15, 17 | BATTERY LEAD                            |                   | 36625-98J00-000 <sup>063</sup> | 36625-93J10-000 <sup>073</sup>     | 36625-93J10-000 <sup>073</sup>     | 36625-93J10-000 <sup>073</sup>     | 36625-93J10-000 <sup>073</sup>     | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              |                 |
| 18     | IGNITION SWITCH PANEL                   |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | Single ignition                         |                   | -                              | 37100-96J00-000 <sup>075</sup>     | 37100-96J00-000 <sup>075</sup>     | 37100-96J00-000 <sup>075</sup>     | 37100-96J00-000 <sup>075</sup>     | 37100-96J00-000 <sup>075</sup>     | 37100-96J00-000 <sup>075</sup>     | 37100-96J00-000 <sup>075</sup> | 37100-96J00-000 <sup>075</sup> | -                              | -                              | -                              |                 |
|        | Single ignition + Emergency-stop switch |                   | -                              | 37100-96J22-000 <sup>076</sup>     | 37100-96J22-000 <sup>076</sup>     | 37100-96J22-000 <sup>076</sup>     | 37100-96J22-000 <sup>076</sup>     | 37100-96J22-000 <sup>076</sup>     | 37100-96J22-000 <sup>076</sup>     | 37100-96J22-000 <sup>076</sup> | 37100-96J22-000 <sup>076</sup> | -                              | -                              | -                              |                 |
|        | Dual ignition + Emergency-stop switch   |                   | -                              | 37100-96J12-000 <sup>077</sup>     | 37100-96J12-000 <sup>077</sup>     | 37100-96J12-000 <sup>077</sup>     | 37100-96J12-000 <sup>077</sup>     | 37100-96J12-000 <sup>077</sup>     | 37100-96J12-000 <sup>077</sup>     | 37100-96J12-000 <sup>077</sup> | 37100-96J12-000 <sup>077</sup> | -                              | -                              | -                              |                 |
| 14     | MAIN SWITCH PANEL                       |                   | 37100-98J02-000 <sup>050</sup> | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              |                 |
| 14     | CONTROL PANEL                           |                   |                                |                                    |                                    |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |
|        | for Single engine                       |                   | 37100-98J11-000 <sup>051</sup> | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
|        | for Dual engine                         |                   | 37100-98J21-000 <sup>052</sup> | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
|        | for Triple engine                       |                   | 37100-98J31-000 <sup>053</sup> | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              | -               |
| 18     | EMERGENCY SWITCH PANEL                  |                   | 37803-93J00-000 <sup>079</sup> | 37803-93J00-000 <sup>079</sup>     | 37803-93J00-000 <sup>079</sup>     | 37803-93J00-000 <sup>079</sup>     | 37803-93J00-000 <sup>079</sup>     | 37803-93J00-000 <sup>079</sup>     | 37803-93J00-000 <sup>079</sup>     | 37803-93J00-000 <sup>079</sup> | 37803-93J00-000 <sup>079</sup> | -                              | -                              | -                              |                 |
| 18     | PTT SWITCH PANEL                        |                   | -                              | 37805-93J00-000 <sup>080</sup>     | 37805-93J00-000 <sup>080</sup>     | 37805-93J00-000 <sup>080</sup>     | 37805-93J00-000 <sup>080</sup>     | 37805-93J00-000 <sup>080</sup>     | 37805-93J00-000 <sup>080</sup>     | -                              | -                              | -                              | -                              | -                              |                 |
| 18     | LIGHTING SWITCH PANEL                   |                   | -                              | 37210-93J00-000 <sup>078</sup>     | 37210-93J00-000 <sup>078</sup>     | 37210-93J00-000 <sup>078</sup>     | 37210-93J00-000 <sup>078</sup>     | 37210-93J00-000 <sup>078</sup>     | 37210-93J00-000 <sup>078</sup>     | 37210-93J00-000 <sup>078</sup> | 37210-93J00-000 <sup>078</sup> | -                              | -                              | -                              |                 |
| 23     | STATOR & PULSER COIL COMPONENT          |                   | -                              | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | 32120-95J00-000 <sup>104</sup> | 32120-94J10-000                | -                              | -                              | -                              |                 |
| 22     | ELECTRIC STARTER KIT                    |                   | -                              | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | 31000-95J00-000 <sup>096</sup> | 31000-94J01-000                | -                              | 31000-99J00-000                | -                              |                 |
| 22     | BATTERY CHARGING KIT                    |                   | -                              | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | 32000-95J01-000                | 32000-94J01-000                | -                              | 32000-99J00-000                | 32000-91J00-000                |                 |
| 23     | BATTERY ISOLATOR LEAD SET               |                   | 33830-98J01-000                | -                                  | 33830-96J00-000 <sup>103</sup>     | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              |                 |
| 23     | ANODE                                   |                   | See page 23                    | See page 23                        | See page 23                        | See page 23                        | See page 23                        | See page 23                        | See page 23                        | See page 23                    | See page 23                    | See page 23                    | See page 23                    | See page 23                    |                 |
| 20     | TILLER HANDLE KIT                       |                   | -                              | -                                  | -                                  | -                                  | 63002-90J24-0EP <sup>087</sup>     | 63002-87L00-0EP                    | 63002-88L00-0EP                    | 63002-87J24-0EP                | -                              | 63001-94J20-0EP                | -                              | -                              |                 |
| 20     | STEERING EXTENSION KIT                  |                   | -                              | 67630-93J00-000 <sup>090</sup>     | 67630-93J00-000 <sup>090</sup>     | -                                  | -                                  | -                                  | -                                  | -                              | -                              | -                              | -                              | -                              |                 |
| 20     | DRAG-LINK KIT                           |                   | -                              | 67700-93J00-000                    | 67700-96J00-000                    | 67701-90J00-000                    | 67701-90J00-000                    | 67701-87L00-000                    | 67701-87J11-000                    | 67701-87J11-000                | 67700-95J01-000                | 67701-93E12-000 <sup>095</sup> | 67701-94JA0-000                | 67701-99J00-000                |                 |
| 20     | STEERING-BRACKET ATTACHMENT             |                   | -                              | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | 43755-95J00-000                | 43755-94J01-000 <sup>094</sup> | 43755-94JA0-000                | 43755-99J00-000                | -                              |                 |
| 20     | DUAL-ENGINE TIE-BAR                     |                   | -                              | 67600-93J00-000                    | 67600-93J00-000                    | 67600-90J00-000 <sup>088</sup>     | 67600-90J00-000 <sup>088</sup>     | -                                  | -                                  | 67600-90J00-000 <sup>088</sup> | -                              | -                              | -                              | -                              |                 |
| 20     | TIE-BAR ADAPTER KIT                     |                   | -                              | -                                  | -                                  | -                                  | -                                  | -                                  | -                                  | 67620-99E00-000 <sup>089</sup> | -                              | -                              | -                              | -                              |                 |
| 24     | FUEL TANK                               |                   | -                              | -                                  | -                                  | 65000-95D01-000 <sup>119</sup>     | 65000-95D01-000 <sup>119</sup>     | 65000-95D01-000 <sup>119</sup>     | 65000-95D01-000 <sup>119</sup>     | 65000-95D01-000 <sup>119</sup> | 65000-95D01-000 <sup>119</sup> | 65000-99100-000 <sup>118</sup> | 65000-99100-000 <sup>118</sup> | 65000-99100-000 <sup>118</sup> |                 |
| 25     | FUEL-HOSE COMPONENT                     |                   | 65700-93J00-000 <sup>128</sup> | 65700-93J00-000 <sup>128</sup>     | 6                                  |                                    |                                    |                                    |                                    |                                |                                |                                |                                |                                |                 |