

# Yale Veracitor™ VX Supervisor Password Feature

Available on Yale Material Handling Corporation Veracitor trucks, the unique **Supervisor Password feature** enables end users, who know their specific operations best, to customize a number of truck performance parameters specifically for their needs.



- Truck parameters are adjusted utilizing the innovative Yale® Integrated Dashboard Display, which features a Liquid Crystal Display (LCD) readout, indicator lights, and input buttons
- Customize certain performance specifications to meet your application requirements
- Requires initial set up by an authorized Yale Service Technician

product spotlight



# Yale Veracitor™ VX Supervisor Password Feature

- We know that all customers' applications are different, that's why Yale Veracitor™ VX trucks provide the ability to adjust performance parameters to maximize operator efficiency, and improve productivity.
- **The Supervisor password feature** (standard on every Veracitor truck) enables the supervisor or manager to adjust many truck performance parameters to help customize the truck for their specific operation, helping to **improve operator productivity**.
- Truck parameters can be adjusted **without the use of tools**, using the Yale® Integrated Dashboard Display.
- Some of items available for adjustment include:
  - Set time and date
  - View diagnostic fault log
  - Inch/Brake Overlap
  - Set operator language
  - Acceleration Rate \*
  - Auto Deceleration Level \*
  - Power Reversal Rate \*
  - Time Delay Adjustment for Work Light Shut-Off \*\*
  - Operator Password administration \*\*
  - Return To Set Tilt option set up \*\*
  - Impact Sensor set up and administration \*\*
  - Traction Speed Limit \*\*
  - Operator Checklist administration \*\*
  - Load Weight Display calibration \*\*
- Contact your Yale dealer for more details.



\* *Adjustment not available if the truck is equipped with a Standard Electronic Powershift Transmission*

\*\* *These options must be ordered on the truck to have this adjustability.*




- Before it can be used, the Supervisor Password feature must be initially enabled and set up by an authorized Yale® dealer service technician with service level menu access.
- Once the initial Supervisor Password is installed, the password may be used to access and adjust the truck functions.
- Consult the Yale service manual for specific instructions and parameters on each adjustment.

## Yale Materials Handling Corporation

P.O. Box 7367, Greenville, North Carolina 27835-7367

© 2008, Yale Materials Handling Corporation • [www.yale.com](http://www.yale.com)

3103/08

Yale,  and Veracitor™ VX are trademarks or registered trademarks of Yale Materials Handling Corporation in the United States and other countries.

