User's Manual

Model 701927 PBDH0150 Differential Probe

Thank you for purchasing the PBDH0150 Differential Probe (Model 701927). To ensure correct use, please read this manual thoroughly before beginning operation.

After reading this manual, keep it in a safe place.

1st Edition: August 2012 (YMI)

All Rights Reserved, Copyright © 2012, Yokogawa Meters & Instruments Corporation



IM 701927-01EN 1st Edition

Safety Precautions

Make sure to observe the following safety precautions when handling the probe. YOKOGAWA assumes no liability for the customer's failure to comply with these safety precautions. Before you use the probe, read the oscilloscope user's manual to thoroughly familiarize yourself with the specifications and operations of the oscilloscope.

The following symbols are used on this instrument.



Warning: handle with care. Refer to the user's manual or service manual. This symbol appears on dangerous locations on the instrument which require special instructions for proper handling or use. The same symbol appears in the corresponding place in the manual to identify those instructions.



Risk of electric shock

Make sure to observe the following safety precautions to prevent electric shock, personal injury, or damage to the instrument.



WARNING

Ground the oscilloscope

Make sure to connect the protective grounding terminal of the oscilloscope to ground.

Before connecting the probe input terminal to the circuit under measurement, ensure that the measuring instrument is grounded properly and that the probe's BNC connector is connected the oscilloscope input.

Be careful of electric shock

Never use the probe with wet hands or when the probe itself is wet. Doing so may cause electric shock. Be careful of electric shock when you connect the probe to the circuit under

Observe the maximum input voltage

Do not apply voltage exceeding 1400 V (DC + ACpeak) between an input lead and ground or between two input leads. The maximum input voltage is 1400 V (DC + ACpeak) regardless of whether 50:1 or 500:1 attenuation is used.

Do not touch exposed circuitry

To prevent injury, do not touch exposed live connections or components.

Connect and disconnect the probe properly

Do not disconnect the probe from the oscilloscope while the probe is connected to the circuit under measurement. Doing so may cause electric shock.

Do not use in damp places

To prevent electric shock, do not use the probe in damp places.

Do not use in an explosive atmosphere

To prevent fire and injury, do not use the probe in a flammable or explosive atmosphere or

Do not disassemble or modify

Do not disassemble or modify the product. YOKOGAWA assumes no liability if you disassemble or modify the product.

Stop use if you suspect damage

If you suspect that the probe is broken, consult your nearest YOKOGAWA dealer.



CAUTION

- This product has not been designed or manufactured for applications in which high reliability is required over a long time period. This probe is not water or dust resistant. Do not use the probe in areas with a lot of dust or where water may be spilled
- Avoid storing or using the probe in direct sunlight or in areas with high temperature, humidity, or condensation. Deformation and insulation deterioration can occur causing the probe to no longer meet the specifications.
- Avoid vibration, shock, and static electricity during shipping and handling. Take extra care not to drop the probe.

Operating Environment Limitations

See below for operating environment limitations

CAUTION

This product is a Class A (for industrial environments) product. Operation of this product in a residential area may cause radio interference in which case the user will be required to correct the interference.

Conventions Used in This Manual



Improper handling or use can lead to injury to the user or damage to the instrument. This symbol appears on the instrument to indicate that the user must refer to the user' s manual for special instructions. The same symbol appears in the corresponding place in the user's manual to identify those instructions. In the manual, the symbol is used in conjunction with the word "WARNING" or "CAUTION."

WARNING Calls attention to actions or conditions that could cause serious or fatal injury to the user, and precautions that can be taken to prevent such occurrences.

CAUTION Calls attention to actions or conditions that could cause light injury to the user or cause damage to the instrument or user's data, and precautions that can be taken to prevent such occurrences

Note

Calls attention to information that is important for the proper operation of the instrument.

1. Overview


The PBDH0150 Differential Probe is a 150 MHz bandwidth, high-voltage, differential input probe that is used in combination with a digital oscilloscope that has a YOKOGAWA probe interface (hereafter referred as digital oscilloscope with a probe interface).*

To use the probe, simply connect it to a BNC input terminal on a digital oscilloscope with a probe interface. Touch the item under measurement with the probe tip to observe the voltage waveform.

For information on the digital oscilloscope models that the probe can connect to, contact your nearest YOKOGAWA dealer. The following digital oscilloscopes can automatically detect the probe attenuation ratio setting when the probe is connected to the oscilloscope. The digital oscilloscopes cannot detect changes in the attenuation ratio setting if you change the attenuation switch while the probe is connected.

DLM2000 series (products whose firmware version is 2.10 and later can automatically detect changes in the attenuation ratio setting that occurs while the probe connected), DL6000 series, DLM6000 series, DL9000 series, and SB5000 series.

2. Configuration and Part Names

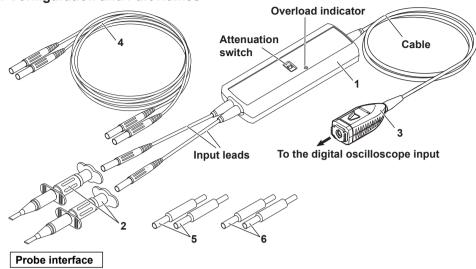

Variable resistor for adjusting offset voltage Standard Parts

Latch release lever

Optional Accessories (Sold separately)	Part No
Long test clip	701906
Alligator clip (dolphin type)	701954
Safety miniclip (hook type)	701959
Fork terminal adapter	758921
Alligator clip adapter (rated 300 V)	758922
Alligator clip adapter (rated 1000 V)	758929

758931

BNC connector

Interface spring pin

(yellow) 150 Ω resistance adapter (green)

100 Ω resistance adapter

To order standard parts and optional accessories, contact your nearest YOKOGAWA dealer.

Safety terminal adapter

Attenuation Switch

1. Probe head

2. Pincher tip

3. Probe interface

4. Extension lead (1 m)

Switches between 50:1 and 500:1 attenuation.

Overload Indicator

When the differential input voltage exceeds the following value, the indicator lights.

±140 V (DC + ACpeak) at 50:1 attenuation

±1400 V (DC + ACpeak) at 500:1 attenuation

Probe Interface

The section of the probe that connects to the digital oscilloscope input.

Interface Spring Pins

When the probe interface is connected, these pins touch the pad on the oscilloscope interface board. The probe's power is supplied through these interface pins. These interface pins are also used by the oscilloscope to automatically detect the probe attenuation setting

Releases the lock connecting the probe interface to the oscilloscope input.

Variable Resistor for Adjusting Offset Voltage

You can adjust the offset voltage using an appropriate screwdriver as described below.



Adjustment Screwdriver Use an adjustment screwdriver that matches the adjustment groove. Using a screwdriver with a large grip or a screwdriver with a small head can damage

the adjustment turn stop or groove. Recommended adjustment driver bit dimensions

Head thickness (W): 0.2 to 0.35 mm; head width (L): 1.3 to 1.5 mm; head shape: flat or Philips

3. How to Use



WARNING

- Turn off the power to the circuit under measurement when you connect or disconnect the probe from the circuit. Connecting or removing the probe while the power is on is dangerous. Do not touch the probe after turning on the power to the circuit under
- Do not disconnect the probe's BNC connector from the oscilloscope while the probe is connected to the circuit under measurement. Before disconnecting the BNC connector, turn off the power to the circuit under measurement, and disconnect the probe from the high voltage parts of the circuit.



CAUTION

 
- This probe is designed to measure the voltage difference between two points on the circuit under measurement. It does not electrically isolate the circuit under measurement from the measuring instrument.
- Use a soft cloth to clean the probe. Be careful not to break the probe. Do not immerse the probe in liquid or use abrasive cleaners on the probe. Do not use benzene or other solvents on the probe.

Preparation


- 1. Have the probe and a digital oscilloscope with a probe interface ready.
- 2. Insert the probe interface completely into the oscilloscope input, and confirm that the BNC connector and interface pin are securely fastened. You will hear the latch click when the connectors lock into place.
- 3. When you connect the probe to a digital oscilloscope with a probe interface, the probe's attenuation ratio and input coupling are set automatically. If you change the attenuation ratio using the attenuation switch, the attenuation ratio on the oscilloscope changes automatically.
- 4. If necessary, attach the provided extension lead, pincher tip, and resistance adapter to the input

Connecting Accessories

If you are using input leads and pincher tips, use the 100 Ω resistance adapters.



 If you are connecting extension leads to input leads, use the 150 Ω resistance adapters.



Note


- Accurate measurements may not be possible near objects with strong electromagnetic fields such as transformers, large current circuits, and wireless equipment.
- Before use, flip the attenuation switch back and forth several times. The switch's electrical contacts can weaken if not used for long periods of time.
- To take accurate measurements, we recommend that you calibrate the probe once a year

4. Specifications

Electrical Specifications

· · · · · · · · · · · · · · · · · · ·			
Item	Specifications		
Frequency bandwidth ^{1, 2}	DC to 150 MHz (-3 dB) ⁶		
	Using the extension leads (typical) ³ : DC to 100 MHz (−3dB) ⁷		
Input type	Balanced differential input		
Attenuation	50:1 or 500:1, switchable		
Input resistance and	4 MΩ + 5 pF (to ground)		
capacitance (typical) ³			
Allowable differential voltage	±140 V (DC + ACpeak) at 50:1 attenuation		
(between + and – terminals)	±1400 V (DC + ACpeak) at 500:1 attenuation		
Allowable common mode	±1400 V (DC + ACpeak) or 1000 Vrms		
voltage			
Maximum input voltage (to	±1400 V (DC + ACpeak) or 1000 Vrms		
ground) ⁴			
CMRR (typical) ^{1,3}	–80 dB at 60 Hz, –50 dB at 1 MHz		
Output voltage ¹	±2.8 V (DC + ACpeak)		
	Value when the probe is used in combination with an oscilloscope		
	whose input resistance is 50 k Ω or higher		
Output impedance	Used on a 1 MΩ input oscilloscope		
Noise (conversion to input,	50 mVrms at 50:1 attenuation		
typical) ³	300 mVrms at 500:1 attenuation		
Propagation delay (typical) ³	13 ns at 50:1 attenuation		
	12 ns at 500:1 attenuation		
DC gain accuracy ^{1, 5}	±2% when the common mode input voltage is ±400 V		
	±3% when the common mode input voltage is ±1000 V		
1 At an ambient temperature '	23 + 5°C humidity 55% + 10% RH 30 minutes after the nower is		

- At an ambient temperature 23 ± 5°C, humidity 55% ± 10% RH, 30 minutes after the power is turned on.
- The frequency bandwidth when combined with the oscilloscope.
- Specifications of items with "typical" are typical or mean values. They are not strictly guaranteed
- 4 Frequency derating (load reduction) applies.

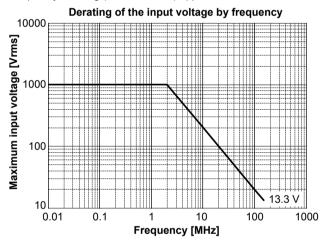

- The accuracy depends on the vertical axis accuracy of the oscilloscope. It is the sum of the DC gain accuracy and offset voltage.
- Specification when the probe is used in combination with an 100 Ω resistance adapter.
- Specification when the probe is used in combination with an 100 Ω resistance adapter and an the extension leads.

General Specifications

Item	Specifications
Operating environment	Probe (excluding the pincher tip)
	5°C to 40°C, 25% to 85% RH (no condensation)
	Pincher tip
	–40°C to 85°C, 25% to 85% RH (no condensation)
	Extension lead
	–40°C to 85°C, 25% to 85% RH (no condensation)
Storage environment	-30°C to 60°C, 25% to 85% RH (no condensation)
	(probe, excluding the pincher tip)
Operating altitude	2000 m or less
Storage altitude	3000m or less
Recommended	1 year
calibration period	
Narm-up time	At least 30 minutes
External dimensions	174 mm × 58 mm × 27 mm (excluding the connector and cable)
Total length	2420 mm ± 30 mm
Weight	Approx. 300 g (probe, excluding the pincher tip)

Compliant Standards

Item	Specifications				
Safety standards	Compliant standards				
	Probe (excluding the pincher tip)				
	EN61010-031				
	Measurement category II ^{8, 10} 1000 Vrms				
	Pollution degree 29				
	Pincher tip				
	EN61010-031				
	Measurement category III ¹⁰ 1000 Vrms				
	Pollution degree 29				
	Extension lead				
	EN61010-031				
	Measurement category III ¹⁰ 1000 Vrms				
	Pollution degree 2 ⁹				
	Probe and accessories				
	EN61010-031				
	Measurement category II ^{8, 10} 1000 Vrms				
	Pollution degree 29				
Emissions	Compliant standards				
	EN61326-1 Class A				
	EN55011 Class A, Group 1				
	C-Tick EN55011 Class A, Group 1				

8 This product is for measurement category II (CAT II). Do not use it for measurement category III (CAT III) or IV (CAT IV). Measurement category (CAT I) applies to measurement of circuits that are not directly connected to a main power source. CAT II applies to measurement of electrical equipment and wiring that is powered through a fixed installation, such as a wall outlet wired to a distribution board. CAT III applies to measurement at the distribution level, that is, building wiring and fixed installations. CAT IV applies to measurement at the primary supply level, that is, overhead lines, cable systems, and so on.

the user will be required to correct the interference

This product is a Class A (for industrial environments) product. Operation of

this product in a residential area may cause radio interference in which case

- Pollution degree refers to the degree of adhesion of a solid, liquid, or gas which deteriorates withstand voltage or surface resistivity. Pollution Degree 2 applies to normal indoor atmospheres (with only non-conductive pollution).
- 10 When using devices with different measurement categories, the lower measurement category
- Because the measurement category of the probe is lower than its accessories, when the probe and its accessories are used together, measurement category II (CAT II) applies.

Waste Electrical and Electronic Equipment



Immunity

Waste Electrical and Electronic Equipment (WEEE), DIRECTIVE 2002/96/EC

(This directive is valid only in the EU.)

Compliant standards EN61326-1 Table 1

This product complies with the WEEE Directive (2002/96/EC) marking requirement. This marking indicates that you must not discard this electrical/electronic product in domestic household waste.

Product Category

With reference to the equipment types in the WEEE directive Annex 1, this product is classified as a "Monitoring and Control instrumentation" product.

Do not dispose in domestic household waste. When disposing products in the EU, contact your local Yokogawa Europe B. V. office

Compliance with the Radio Waves Act (Republic of Korea)

This product complies with the Radio Waves Act (Republic of Korea). Note the following when using the product in Republic of Korea.

이 기기는 업무용 (A급) 전자파적합기기로서 판 매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으 로 합니다

(The product is for business use (Class A) and meets the electromagnetic compatibility requirements. The seller and the user must note the above point and use the product in a place except for home.)

Registration No: KCC-REM-IMY-EEN335 Equipment Name: Differential Probe

Yokogawa Meters & Instruments Corporation Trade Name: Manufacturer: Yokogawa Meters & Instruments Corporation

Country of Origin: Japan

产品中有毒有害物质或元素的名称及含量

This section is valid only in China.

部件名称	有毒有害物质					
	铅(Pb)	汞 (Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
框架(塑料)	×	0	0	0	0	0
线路板 ASSY	×	0	0	0	0	0
〇:表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。						

×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的 限量要求。

环保使用期限:



该标识适用于 2006 年 2 月 28 日颁布的《电子信息产品污染控制管理办法》以及 SJ/T 11364-2006《电子信息产品污染控制标识要求》中所述,在中华人民共和国销售的电子信息产品的环保使用期限。

只要您遵守该产品相关的安全及使用注意事项,在自制造日起算的年限内,则 不会因产品中有害物质泄漏或突发变异,而造成对环境的污染或对人体及财产 产生恶劣影响。

注)该年数为"环保使用期限",并非产品的质量保证期。零件更换的推荐周期。 请参照使用说明书。