


'Click' to download complete Manual



***Gestetner***® **RICOH**® **SAVIN**®

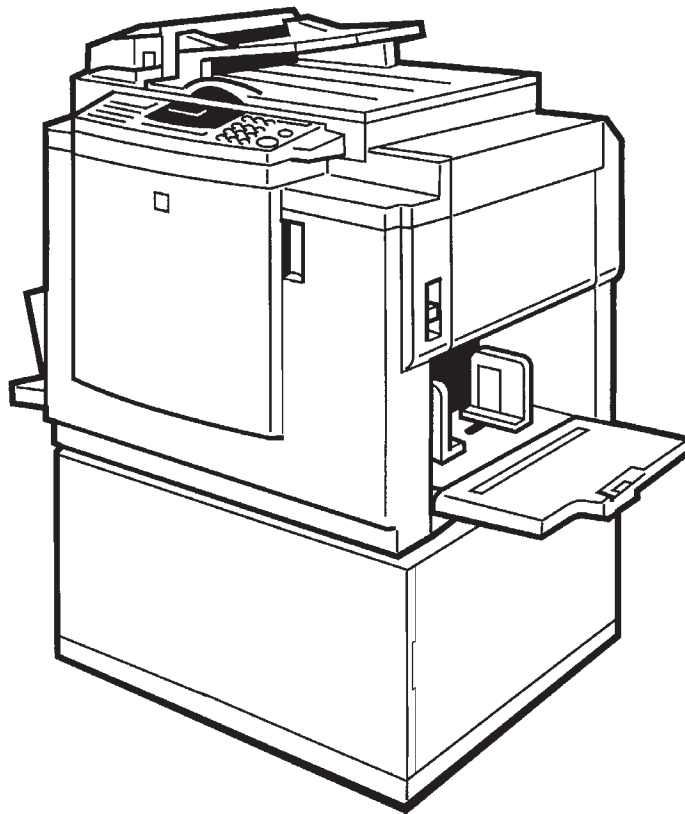

# **C226**

# **SERVICE MANUAL**

RICOH GROUP COMPANIES

PN: RCSM2250

***Gestetner***<sup>®</sup>

**RICOH**<sup>®</sup>

**SAVIN**<sup>®</sup>

**C226**  
**SERVICE MANUAL**



***Gestetner*® RICOH® SAVIN®**

**C226**

# **SERVICE MANUAL**

PN: RCSM2250



It is the reader's responsibility when discussing the information contained within this document to maintain a level of confidentiality that is in the best interest of Ricoh Corporation and its member companies.

***NO PART OF THIS DOCUMENT MAY BE REPRODUCED IN ANY  
FASHION AND DISTRIBUTED WITHOUT THE PRIOR  
PERMISSION OF RICOH CORPORATION.***

All product names, domain names or product illustrations, including desktop images, used in this document are trademarks, registered trademarks or the property of their respective companies.

They are used throughout this book in an informational or editorial fashion only and for the benefit of such companies. No such use, or the use of any trade name, or web site is intended to convey endorsement or other affiliation with Ricoh products.



## **WARNING**

***The Service Manual contains information regarding service techniques, procedures, processes and spare parts of office equipment distributed by Ricoh Corporation. Users of this manual should be either service trained or certified by successfully completing a Ricoh Technical Training Program.***

***Untrained and uncertified users utilizing information contained in this service manual to repair or modify Ricoh equipment risk personal injury, damage to property or loss of warranty protection.***

***Ricoh Corporation***





# LEGEND

PRODUCT CODE	COMPANY		
	GESTETNER	RICOH	SAVIN
C226	5329L	VT2250	3250DNP

## DOCUMENTATION HISTORY

REV. NO.	DATE	COMMENTS
*	1/97	Original Printing



# Table of Contents

## OVERALL INFORMATION

---

<b>1. SPECIFICATIONS .....</b>	<b>1-1</b>
<b>2. GUIDE TO COMPONENTS AND THEIR FUNCTION.....</b>	<b>1-5</b>
2.1 Machine Exterior .....	1-5
2.2 Machine Interior .....	1-7
<b>3. OPERATION PANEL .....</b>	<b>1-9</b>
3.1 Keys .....	1-9
3.2 Indicators .....	1-11
<b>4. PRINTING PROCESS .....</b>	<b>1-12</b>
<b>5. ELECTRICAL COMPONENTS LAYOUT .....</b>	<b>1-13</b>
5.1 ADF and Scanner .....	1-13
5.2 Main Body .....	1-15
<b>6. MECHANICAL COMPONENT LAYOUT.....</b>	<b>1-20</b>
6.1 ADF AND SCANNER.....	1-20
6.2 MECHANICAL COMPONENT LAYOUT .....	1-21

## DETAILED DESCRIPTIONS

---

<b>1. ORIGINAL FEED SECTION .....</b>	<b>2-1</b>
1.1 ADF AND SCANNER.....	2-1
1.1.1 Book Scanner Overview .....	2-1
1.1.2 ADF Overview .....	2-2
1.1.3 Contact Image Sensor .....	2-4
1.1.4 Drive Mechanism .....	2-5
1.1.5 Pick-up and Feed (ADF) .....	2-7
1.1.6 Separation Mechanism (ADF) .....	2-7
1.1.7 Error Conditions .....	2-8
<b>2. OPTICS/IMAGE PROCESSING .....</b>	<b>2-9</b>
2.1 OPTICS/IMAGE PROCESSING .....	2-9

2.1.1 Overview .....	2-9
2.1.2 A/D Conversion Processing .....	2-10
2.1.3 Binary Processing .....	2-12
2.2 THERMAL HEAD PULSE GENERATOR .....	2-18
2.3 THERMAL HEAD DRIVE .....	2-20
2.3.1 Thermal Head Outline .....	2-20
2.3.2 Power Lines .....	2-20
2.3.3 Movement .....	2-21
2.3.4 Temperature Rise Detection of Thermal Head/Power Supply: .....	2-23
<b>3. MASTER EJECT SECTION. ....</b>	<b>2-25</b>
3.1 OVERALL .....	2-25
3.2 MASTER EJECT ROLLER ROTATING MECHANISM .....	2-26
3.3 MASTER EJECT ROLLER DRIVE MECHANISM .....	2-27
3.4 MASTER EJECT CLAMPER MECHANISM .....	2-30
3.5 PRESSURE PLATE UP/DOWN MECHANISM .....	2-31
<b>4. MASTER FEED SECTION. ....</b>	<b>2-32</b>
4.1 OVERALL .....	2-32
4.2 MASTER CLAMPER OPENING MECHANISM .....	2-33
4.3 MASTER FEEDING MECHANISM .....	2-34
4.4 MASTER WRAPPING MECHANISM .....	2-35
4.5 CUTTER MECHANISM .....	2-36
4.6 ELECTRICAL TIMING .....	2-37
<b>5. PAPER FEED SECTION .....</b>	<b>2-40</b>
5.1 OVERALL .....	2-40
5.2 PAPER TABLE UP/DOWN MECHANISM .....	2-41
5.3 FEED ROLLER PRESSURE MECHANISM .....	2-43
5.4 SEPARATION ROLLER PRESSURE RELEASE MECHANISM .....	2-44
5.5 PAPER FEED ROLLER/UPPER SEPARATION ROLLER MECHANISM ..	2-45
5.6 SECOND FEED ROLLER MECHANISM .....	2-46
5.7 SIDE REGISTRATION MECHANISM .....	2-48
5.8 ELECTRICAL TIMING .....	2-49

<b>6. PRINTING SECTION .....</b>	<b>2-50</b>
6.1 OVERALL .....	2-50
6.2 PAPER DETECTING AND PRINTING PRESSURE ON/OFF MECHANISM .....	2-51
6.3 PRINT PRESSURE RELEASE MECHANISM.....	2-52
6.4 CIRCUIT .....	2-53
6.5 ELECTRICAL TIMING .....	2-53
<b>7. DRUM SECTION .....</b>	<b>2-54</b>
7.1 OVERALL .....	2-54
7.2 DRUM ROTATION MECHANISM .....	2-55
7.3 DRUM LOCK MECHANISM 1 .....	2-56
7.4 DRUM LOCK MECHANISM 2 .....	2-57
7.5 DRUM LOCK MECHANISM 3 .....	2-58
7.6 DRUM LOCK MECHANISM 4 .....	2-59
7.7 INK SUPPLY MECHANISM.....	2-60
7.8 INK KNEADING MECHANISM .....	2-61
7.9 INK DETECTION .....	2-62
7.10 ELECTRICAL TIMING .....	2-64
<b>8. DELIVERY SECTION .....</b>	<b>2-65</b>
8.1 OVERALL .....	2-65
8.2 EXIT PAWL AIR PUMP MECHANISM: .....	2-66
8.3 EXIT PAWL DRIVE MECHANISM.....	2-67
8.4 VACUUM UNIT DRIVE MECHANISM.....	2-68
8.5 MISFEED/PAPER WRAP .....	2-69
8.6 EXIT MISFEED/PAPER WRAP .....	2-69
<b>9. IMAGE SHIFTING SECTION.....</b>	<b>2-70</b>
9.1 OVERALL .....	2-70
9.2 IMAGE SHIFTING MECHANISM.....	2-70

## INSTALLATION

---

<b>1. INSTALLATION REQUIREMENTS</b>	<b>3-1</b>
1.1 OPTIMUM ENVIRONMENTAL CONDITIONS:	3-1
1.2 ENVIRONMENTS TO AVOID:	3-2
1.3 GROUND:	3-2
1.4 POWER CONNECTION:	3-3
1.5 ACCESS TO MACHINE:	3-4
<b>2. INSTALLATION PROCEDURE</b>	<b>3-5</b>
2.1 MAIN BODY	3-5
2.1.1 ADF (Option)	3-11
<b>3. TAPE MARKER INSTALLATION</b>	<b>3-14</b>
3.1 ACCESSORY CHECK	3-14
3.2 INSTALLATION	3-15

## SERVICE TABLES

---

<b>1. MAINTENANCE TABLES</b>	<b>4-1</b>
1.1 LUBRICATION POINTS	4-1
1.2 USER'S MAINTENANCE	4-1
1.3 TABLE OF PERIODIC INSPECTION (every 6 months)	4-2
1.4 TABLE OF PERIODIC INSPECTION (every 12 months)	4-3
<b>2. EXPECTED LIFE OF PARTS</b>	<b>4-5</b>
<b>3. SPECIAL TOOLS</b>	<b>4-5</b>
<b>4. TABLE OF SERVICE CALL INDICATIONS</b>	<b>4-6</b>
<b>5. DIP SW, LED, VR, AND TP TABLES</b>	<b>4-7</b>
5.1 DIP SWITCH TABLE	4-7
5.2 LED TABLE	4-7
5.3 VR TABLE	4-7
5.4 TEST PIN TABLE	4-7
<b>6. SERVICE PROGRAM TABLE (I/O CHECK MODE)</b>	<b>4-8</b>

6.1 SERVICE PROGRAM MODE OPERATION .....	4-8
6.2 SERVICE PROGRAM TABLE .....	4-10
6.3 INPUT/OUTPUT CHECK MODE .....	4-21
<b>7. TEST PATTERN IMAGE MODE .....</b>	<b>4-26</b>
<b>8. USER CODE MODE .....</b>	<b>4-27</b>
8.1 USER CODES .....	4-27
8.2 HOW TO USE A USER CODE .....	4-27
<b>9. AVAILABLE OPTION/SUPPLY TABLE .....</b>	<b>4-28</b>

## REPLACEMENT AND ADJUSTMENT

---

<b>1. EXTERIOR .....</b>	<b>5-1</b>
1.1 ADF .....	5-1
1.2 Operation Panel .....	5-2
1.3 Platen Cover and Upper Covers .....	5-3
1.4 Top Cover and Exposure Glass .....	5-3
1.5 Other Covers .....	5-4
<b>2. ORIGINAL FEED SECTION .....</b>	<b>5-5</b>
2.1 ADF ROLLER ASSEMBLY AND COVERS .....	5-5
2.2 Pick-up Roller .....	5-5
2.3 Feed Roller .....	5-6
2.4 Separation Roller .....	5-6
2.5 ADF Motor and Covers .....	5-7
2.6 R0 and R1 Rollers .....	5-7
2.7 R2 Roller .....	5-8
2.8 Document Sensor .....	5-9
2.9 Scan Line Sensor .....	5-9
2.10 Cover Sensors .....	5-10
<b>3. SCANNER SECTION .....</b>	<b>5-11</b>
3.1 CONTACT IMAGE SENSOR .....	5-11
3.2 Fluorescent Lamp Stabilizer .....	5-12



3.3 Platen Cover and Scanner Home Position Sensors .....	5-12
3.4 SCANNER MOTOR.....	5-13
3.5 IMAGE MAGNIFICATION ADJUSTMENT (IN THE SUB-SCAN DIRECTION) .....	5-14
<b>4. IMAGE SHIFTING SECTION.....</b>	<b>5-15</b>
4.1 ENCODER MOUNTING POSITION ADJUSTMENT.....	5-15
<b>5. MASTER FEED SECTION.....</b>	<b>5-17</b>
5.1 THERMAL HEAD VOLTAGE ADJUSTMENT .....	5-17
5.2 BELT TENSION ADJUSTMENT .....	5-18
5.3 RIGHT AND LEFT CUTTER SWITCHES ADJUSTMENT .....	5-19
5.4 THERMAL HEAD ALIGNMENT ADJUSTMENT .....	5-20
5.5 CUTTER UNIT REMOVAL .....	5-21
5.6 THERMAL HEAD REMOVAL .....	5-22
<b>6. MASTER EJECT SECTION.....</b>	<b>5-23</b>
6.1 MASTER EJECT SOLENOID ADJUSTMENT.....	5-23
6.2 MASTER EJECT SENSOR ADJUSTMENT .....	5-24
6.3 MASTER EJECT UNIT REPLACEMENT .....	5-25
6.4 MASTER EJECT BELT/ROLLER REPLACEMENT .....	5-26
<b>7. PAPER FEED SECTION .....</b>	<b>5-27</b>
7.1 PAPER TABLE SAFETY SWITCH ADJUSTMENT.....	5-27
7.2 PAPER TABLE HEIGHT ADJUSTMENT .....	5-28
7.3 PAPER FEED ROLLER PRESSURE ADJUSTMENT.....	5-29
7.4 LOWER GUIDE PLATE ADJUSTMENT .....	5-30
7.5 UPPER SECOND FEED ROLLER ADJUSTING.....	5-31
7.6 PAPER FEED ROLLER FEED-LENGTH ADJUSTMENT .....	5-32
7.7 PAPER FEED SECTOR GEAR STOPPER CLEARANCE ADJUSTMENT .....	5-33
7.8 SECOND FEED ROLLER SECTOR STOPPER CLEARANCE ADJUSTMENT .....	5-34
7.9 SECOND FEED ROLLER FEED LENGTH ADJUSTMENT .....	5-35
7.10 SECOND FEED ROLLER FEED TIMING ADJUSTMENT .....	5-36
7.11 PAPER FEED ROLLER REPLACEMENT.....	5-37
7.12 PAPER FEED ROLLER UNIT REPLACEMENT .....	5-38

7.13 UPPER SEPARATION ROLLER REPLACEMENT .....	5-39
7.14 SEPARATION PLATE/LOWER SEPARATION ROLLER REPLACEMENT .....	5-40
<b>8. PRINTING SECTION .....</b>	<b>5-41</b>
8.1 PAPER DETECTING ARM CLEARANCE ADJUSTMENT .....	5-41
8.2 PRESSURE ROLLER POSITION ADJUSTMENT .....	5-42
8.3 PRESSURE TIMING ADJUSTMENT .....	5-43
8.4 PRINTING PRESSURE ADJUSTMENT .....	5-44
8.5 PRINTING PRESSURE STOPPER CLEARANCE ADJUSTMENT .....	5-45
8.6 PRESSURE ROLLER REPLACEMENT .....	5-46
<b>9. DRUM SECTION .....</b>	<b>5-47</b>
9.1 MAIN DRIVE BELT TENSION ADJUSTMENT .....	5-47
9.2 DRUM ROTATION SENSOR ADJUSTMENT .....	5-48
9.3 PRINTING SPEED ADJUSTMENT .....	5-49
9.4 DRUM STOPPER ADJUSTMENT .....	5-50
9.5 MASTER FEED CLAMPER CAM ADJUSTMENT .....	5-51
9.6 MASTER EJECT CLAMPER CAM ADJUSTMENT .....	5-52
9.7 INK DETECTING PIN POSITION ADJUSTMENT .....	5-53
9.8 DOCTOR ROLLER CLEARANCE ADJUSTMENT .....	5-54
9.9 INK ROLLER UNIT POSITION ADJUSTMENT .....	5-55
9.10 INK SUPPLY SOLENOID POSITION ADJUSTMENT .....	5-56
9.11 ADJUSTING INK DETECTION .....	5-57
9.12 SCREEN REPLACEMENT .....	5-58
9.13 DRUM DRIVE BELT REPLACEMENT .....	5-59
<b>10. PAPER DELIVERY .....</b>	<b>5-62</b>
10.1 AIR PUMP TIMING ADJUSTMENT: .....	5-62
10.2 FIRST PAPER EXIT SENSOR ADJUSTMENT .....	5-63
10.3 SECOND PAPER EXIT SENSOR ADJUSTMENT .....	5-64
10.4 EXIT PAWL CLEARANCE ADJUSTMENT .....	5-65
10.5 EXIT PAWL TIMING ADJUSTMENT .....	5-66
10.6 VACUUM UNIT REPLACEMENT .....	5-67
10.7 DELIVERY BELT/PAPER EXIT SENSORS REPLACEMENT .....	5-68
10.8 VACUUM MOTOR REPLACEMENT .....	5-69

## TROUBLESHOOTING

---

<b>1. TROUBLESHOOTING</b> .....	<b>6-1</b>
1.2 PAPER FEED TROUBLE .....	6-5
⇒ 2.0 Electrical Component Troubleshooting .....	6-10

## TAPE MARKER TYPE 20 (C532)

---

<b>1. SPECIFICATIONS</b> .....	<b>7-1</b>
<b>2. BASIC OPERATION</b> .....	<b>7-2</b>
2.1 OVERVIEW .....	7-2
2.2 DRIVE AND CUTTING MECHANISM .....	7-3
2.3 MANUAL CUT .....	7-4
<b>3. REPLACEMENT AND ADJUSTMENT</b> .....	<b>7-5</b>
3.1 CUTTER REPLACEMENT .....	7-5
3.2 CUTTER HOME POSITION SENSOR REPLACEMENT .....	7-6
3.3 TAPE CUT LENGTH ADJUSTMENT .....	7-7

## DIFFERENCES BETWEEN MODELS

---

<b>1. DIFFERENCES BETWEEN MODELS</b> .....	<b>8-2</b>
1.1 C226 AND C224 .....	8-2
1.2 BETWEEN C224 AND C211/C212/C213 .....	8-5
1.3 BETWEEN C215/C216 AND C211/C212/C213 .....	8-8
1.4 BETWEEN C207/C208 AND C211/C212/C213 .....	8-10

## PCRIP-10 PRIORT CONTROLLER

---

## BULLETINS

---

## **IMPORTANT SAFETY NOTICES**

### **PREVENTION OF PHYSICAL INJURY**

1. Before disassembling or assembling parts of the printer and peripherals, make sure that the printer power cord is unplugged.
2. The wall outlet should be near the printer and easily accessible.
3. Note that some components of the printer are supplied with electrical voltage even if the main switch is turned off.
4. If any adjustment or operation check has to be made with exterior covers off or open while the main switch is turned on, keep hands away from electrified or mechanically driven components.

### **HEALTH SAFETY CONDITIONS**

1. If you get ink in your eyes by accident, try to remove it with eye drops or flush with water as first aid. If unsuccessful, get medical attention.
2. If you ingest ink by accident, induce vomiting by sticking a finger down your throat or by giving soapy or strong salty water to drink.

### **OBSERVANCE OF ELECTRICAL SAFETY STANDARDS**

1. The printer and its peripherals must be installed and maintained by a customer service representative who has completed the training course on those models.
2. The RAM board has a lithium battery which can explode if handled incorrectly. Replace only with the same type of RAM board. Do not recharge or burn this battery. Used RAM boards must be handled in accordance with local regulations.

### **SAFETY AND ECOLOGICAL NOTES FOR DISPOSAL**

1. Dispose of replaced parts in accordance with local regulations.
2. Used ink and masters should be disposed of in an environmentally safe manner and in accordance with local regulations.
3. When keeping used lithium batteries (from the main control boards) in order to dispose of them later, do not store more than 100 batteries (from the main control boards) per sealed box. Storing larger numbers or not sealing them apart may lead to chemical reactions and heat build-up.

## General Remarks

Each model code used in this manual represents the following models.

<b>Model Code</b>	<b>RICOH Model</b>	<b>NRG Model</b>	<b>A.B.Dick Model</b>	<b>SAVIN Model</b>
C215	VT2005	5323		
C216	VT2105	CP325/1250/5325		
C224	VT2200	CP327/1252/5327	6530	3200DNP
C226	VT2250/40	CP329(L)/1254(L)/5329(L)	6560	3250DNP