

GENUINE PARTS

INSTALLATION INSTRUCTIONS







Note: Fasteners at location(s) A maybe push in clips similar to B.

- 7) Unlock steering wheel.
- 8) Disconnect the negative battery cable, then wait at least 3 minutes.

A CAUTION

- Before servicing, disconnect both battery terminals and wait at least 3 minutes.
- Do not use air tools or electric tools for servicing.
- After the work is completed, make sure no system malfunction is detected by air bag warning lamp.
- In case a malfunction is detected by the air bag warning lamp, reset with the self-diagnosis function and delete the memory with CONSULT-III
- If a malfunction is still detected after the above operation, perform self-diagnosis to repair malfunctions. Refer to Service Manual.





12) Remove 2 screws from the combination switch and pull upwards for electrical connection. Disconnect electrical connector from combination switch by prying release tab and pulling up on the combination switch.

(Fig. 12)



13) Remove combination switch by lifting up and out of steering column.

- 14) Install kit supplied combination switch using original mounting screws and reconnect wiring. Connector should 'Click'.
- 15) Install the steering column upper and lower covers using the original screws.
- 16) Check all screws are in place and secure.
- 17) Connect the negative battery cable.

8. FUNCTIONALITY TEST PROCEDURE:

- 1) Turn ignition switch ON.
- 2) Turn headlamp and fog lamp switches ON.
- 3) Verify headlamps and fog lamps are illuminated.
- 4) Turn headlamp switch OFF (leaving fog lamp switch ON).
- 5) Verify both headlamp and fog lamps turn off.
- 6) Verify turn signal, wiper, washer and high beam functionality.