

INSTALLATION INSTRUCTIONS FOR INSTALLING TRIM KITS FOR USE WITH VISION DIRECT-VENT GAS STOVES

ELITE™ SERIES

KIT CONTENTS

Please ensure that all these parts are included

- 1 ea. Louver Assembly
- 2 ea. Side Window Trim
- 1 ea. Front Window Trim
- 1 ea. Ash Lip Trim
- 2 ea. Allen Head Screws
- 4 ea. 10-24 Hex Nuts
- 4 ea. #10 Washers
- 1 ea. Instruction Sheet

TOOLS NEEDED:

- 5/32" Allen Wrench or T-Handle Wrench
- 1/8" Allen Wrench or T-Handle Wrench
- 3/8" Open End Wrench

Cat. No.	Model	Description
75276	VISN-TRIM-B-G	Black Trim Kit / Gold Handle
75277	VISN-TRIM-B-N	Black Trim Kit / Nickel Handle
75274	VISN-TRIM-G-G	Gold Trim Kit / Gold Handle
75275	VISN-TRIM-N-N	Brushed Nickel Trim Kit / Nickel Handle
Kits Include: Matching Trim for Glass, Louvers and Ash Lip		

GENERAL INFORMATION

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.

All of these parts may scratch and bend, great care should be used in handling them.

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

TURN OFF THE STOVE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

CAUTION: Always ensure that plated surfaces are clean and free of fingerprints before lighting stove. Fingerprints will leave permanent blemishes if left on plated surface when lit. When installation is complete, the trim should be gently cleaned with a soft cloth and either alcohol or a household glass cleaner. Do not overtighten nuts, overtightening can create visible dimples on the plated surface.

INSTALLATION INSTRUCTIONS

Step 1. Remove the four screws from the top of the stove - Using a 1/8" allen wrench remove the two button head screws on the back of the stove (see **Figure 1**) and using a 5/32" allen wrench remove the two socket head screws on the front of stove (see **Figure 2**). Lift off the top of the stove. **Retain the screws for reinstallation of the stove top in Step 6.**

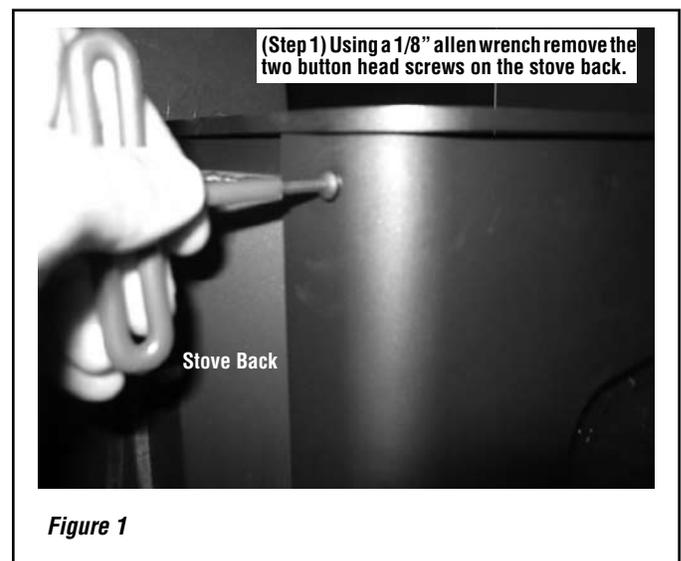


Figure 1


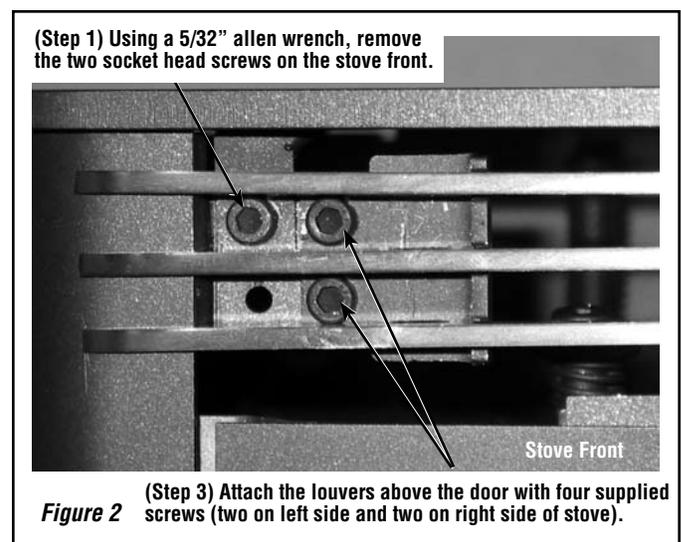



Figure 2 (Step 3) Attach the louvers above the door with four supplied screws (two on left side and two on right side of stove).

Step 2. Using a 5/32" allen wrench, attach the ash lip to the lower control door using two supplied screws. See **Figure 3**.

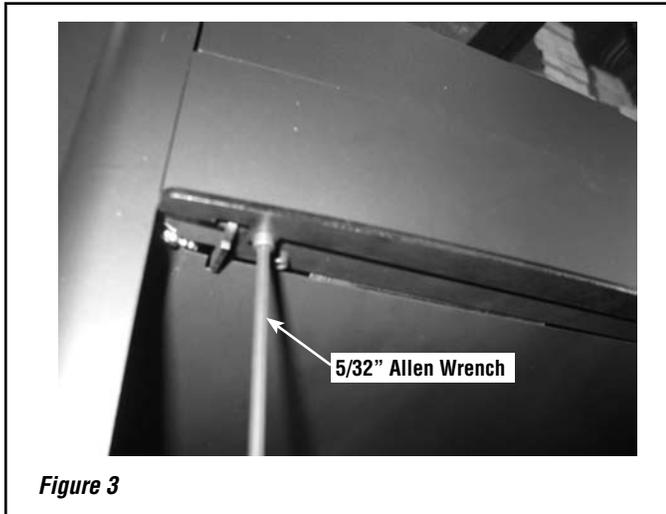


Step 3. Using a 5/32" allen wrench, attach the louvers above the door with four supplied screws (two on left side and two on right side of stove). See **Figure 1 on Page 1**.

Step 4. Slide the side window trim down into the brackets in the side wall of the stove. It may be helpful to slightly pry open the brackets on the stove to slide the side trim in. Be careful not to scratch the glass or the trim. See **Figure 4**.

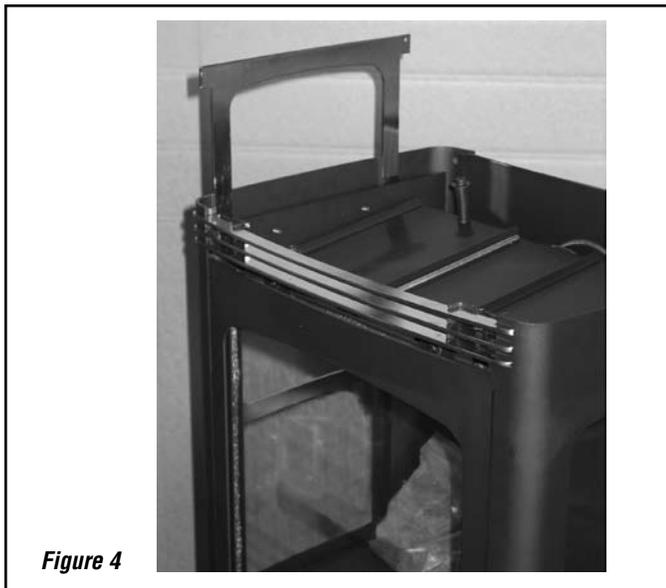

Step 5. Using a 3/8" open end wrench, install the front door trim with the four supplied nuts and washers. **DO NOT OVERTIGHTEN THE NUTS OR SCREWS.** See **Figure 5**.

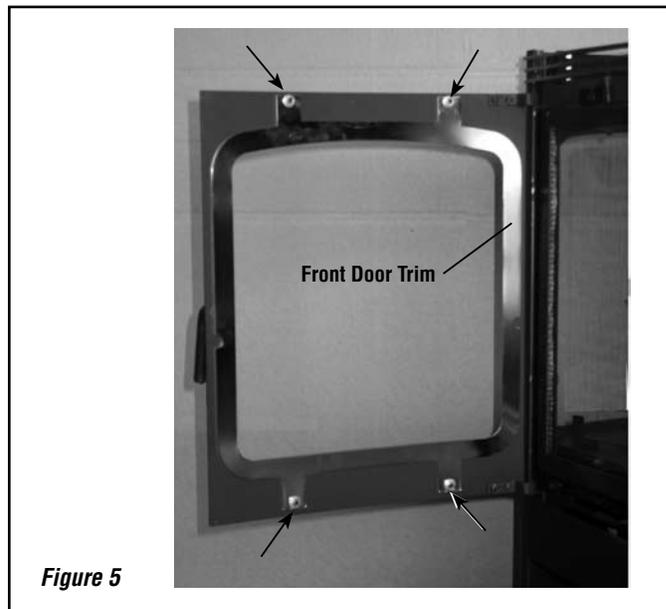

Step 6. Reattach the top of the stove with the four screws.

Step 7. To install the spring handle, first close the door and screw the handle into the receiving nut. Then spray a household glass cleaner or water on the shaft of the handle to act as a lubricant. Next, twist the spring handle counterclockwise onto the shaft. Use a household glass cleaner or alcohol and a soft cloth to remove any fingerprints from all plated surfaces **prior** to firing the stove. **Read Caution on Page 1.**



NOTE: DIAGRAMS AND ILLUSTRATIONS ARE NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.

LENNOX
HEARTH PRODUCTS