

LENNOX™

HEARTH PRODUCTS

EPA CERTIFIED
WOOD BURNING
STOVE

NATIONAL
FIREPLACE
INSTITUTE



CERTIFIED

www.nficertified.org

We suggest that our wood-burning hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Woodburning Specialists or who are certified in Canada by Wood Energy Technical Training (WETT).



RETAIN THESE
INSTRUCTIONS
FOR FUTURE
REFERENCE

Tested &
Listed By



Beaverton
Oregon USA

OMNI-Test Laboratories, Inc.

INSTALLATION AND OPERATION MANUAL



Model CI2000HT Shown

Spectra Series Wood Stoves MODELS CI1000HT and CI2000HT

THIS APPLIANCE MUST BE INSTALLED BY A QUALIFIED INSTALLER. READ
ENTIRE MANUAL THOROUGHLY BEFORE INSTALLATION.

P/N 775,080M; Rev. F, 3/2005

IMPORTANT WARNINGS

PLEASE READ THIS ENTIRE MANUAL BEFORE YOU INSTALL AND USE YOUR NEW ROOM HEATER. FOR YOUR SAFETY, FOLLOW THE INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS EXACTLY, WITHOUT DEVIATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PROPERTY DAMAGE, BODILY INJURY, OR EVEN DEATH. IF THIS APPLIANCE IS NOT PROPERLY INSTALLED, A HOUSE FIRE MAY RESULT. CONTACT YOUR LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION REQUIREMENTS IN YOUR AREA.

1. If utilizing an older chimney, it must be inspected for adequate serviceability. Refer to the heading *Chimney Inspection* on page 11 of this manual.
2. The minimum clearances must be maintained for all combustible surfaces. The following materials should be kept a minimum of 36 inches (914 mm) from the heater; furniture, carpet, drapes, clothing, wood, papers, etc. Do not store firewood within this clearance space. Failure to maintain clearances to all combustibles may result in a house fire.
3. This appliance requires floor protection as outlined in this manual (see *Floor Protection* on pages 5, 6 and 7).
4. **WARNING:** improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. This appliance must be properly installed or the listing will be void. Installations other than those specifically covered herein have not been confirmed by test and are not covered by the listing.
5. Minimum ceiling height must be 5 feet (measured from base of appliance to ceiling).
6. **DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE CONNECTED TO ANOTHER APPLIANCE.**
7. Do not connect this appliance to air ducts or any air distribution system.
8. **PREVENT CREOSOTE FIRE:** Inspect and clean chimney connector and chimney daily for creosote build-up until experience shows how often you need to clean to be safe. Under certain conditions of use, creosote buildup may occur rapidly. Be aware that the hotter the fire the less creosote is deposited, and weekly cleaning may be necessary in mild weather even though monthly cleaning may be enough in the coldest months. Using green or inadequately seasoned wood can greatly increase creosote buildup. Use dry wood to minimize creosote buildup.
9. **USE SOLID WOOD FUEL ONLY:** This appliance is approved for burning dry seasoned natural wood only. **CAUTION: BURN UNTREATED WOOD ONLY. DO NOT BURN GARBAGE OR FLAMMABLE FLUIDS SUCH AS GASOLINE, NAPHTHA OR ENGINE OIL.**
10. Never use gasoline, gasoline-type lantern fuel, kerosene, charcoal lighter fluid, or similar liquids to start or "freshen up" a fire in this heater. Keep all such liquids well away from the heater while it is in use.
11. **DO NOT OVERFIRE:** If heater or chimney connector glows, you are overfiring. Overfiring this appliance could cause a house fire. Overfiring is a condition where the appliance is operated at temperatures above its design capabilities. Overfiring can be caused by improper installation, improper operation, lack of maintenance or improper fuel usage. Do not operate the stove with the doors open or ajar, as this will produce extreme temperatures within the stove. Damage caused from overfiring is NOT covered under the manufacturer's limited warranty (see *Care and Operation*, pages 15 to 20).
12. **NEVER LEAVE AN UNATTENDED STOVE BURNING ON HIGH.** Operation of the stove with the primary air draft control at its highest burn rate setting for extended periods can cause dangerous overfiring conditions. The primary air draft control should only be positioned at the highest setting during start-up procedures (see *How to Start and Maintain a Fire* on page 16) and for short durations. When leaving the stove unattended ensure that the primary air draft control is set to the low or medium low range.
13. It is imperative that the control compartments and circulating air passageways of the appliance be kept clean.
14. Use a metal container with a tight fitting lid to dispose of ashes.
15. **IN THE EVENT OF A COMPONENT FAILURE, USE ONLY COMPONENTS PROVIDED BY THE MANUFACTURER AS REPLACEMENT PARTS.**
16. Burning any kind of fuel uses oxygen from the dwelling. Be sure that you allow an adequate source of fresh air into the room where the stove is operating (see *Ventilation Requirements* on page 12).
17. **CAUTION: HOT WHILE IN OPERATION.** An appliance hot enough to warm your home can severely burn anyone touching it. Keep children, clothing and furniture away. Contact may cause skin burns. Do not let children touch the appliance. Train them to stay a safe distance from the unit. The use of a fireguard is recommended.
18. Do not operate this appliance without the firebox baffle brick properly installed.
19. Always build wood fires directly on the firebox grate. Do not use andirons or any other method to elevate the fire.
20. Do not install these appliances into a Manufactured (Mobile) Home.
21. See the listing label located on the back of stove (or see Safety/Listing Labels on pages 35 & 36).
22. These appliances are designed as supplemental heaters. Therefore, it is advisable to have an alternate heat source when installed in a dwelling.
23. **SAVE THESE INSTRUCTIONS.** Ensure that this manual remains with the appliance and passed to the user after installation.

TABLE OF CONTENTS

Important Warnings	2
Testing/Listing, EPA, Using this Manual.....	3
Planning Your Installation	4-9
Installation	10-14
Care and Operation	15-20
Recommended Fuel / Wood Storage	19-20
Maintenance	21-23
Troubleshooting	23-24
Specifications.....	25-26
Replacement Parts List.....	27-33
Optional Accessories	34
Safety/Listing Labels.....	35-36
EPA Labels	37
Service and Maintenance Log	38

TESTING/LISTING

Models CI1000HT and CI2000HT have been Listed to UL Standard #1482 and ULC-S627 by OMNI-Test Laboratories, Inc.; Beaverton, OR; Report numbers; CI1000HT #132-S-03-2 and CI2000HT #132-S-05-2.

EPA CERTIFICATION

This heater meets EPA particulate matter (smoke) control requirements for noncatalytic wood heaters built on or after July 1, 1990.

CONGRATULATIONS ON THE PURCHASE OF YOUR NEW WOODSTOVE MANUFACTURED BY LENNOX HEARTH PRODUCTS.

When you purchased your new woodstove, you joined the ranks of thousands of concerned individuals whose answer to their home heating needs reflects their concern for aesthetics, efficiency and our environment. We extend our continued support to help you achieve the maximum benefit and enjoyment available from your new wood stove.

It is our goal at Lennox Hearth Products to provide you, our valued customer, with an appliance that will ensure you years of trouble free warmth and pleasure.

Thank you for selecting a Lennox Hearth Products stove as the answer to your home heating needs.

Sincerely,
All of us at Lennox Hearth Products

USING THIS MANUAL

Please carefully read and follow all instructions in this manual before starting the installation. Please pay special attention to the safety instructions provided in this manual. The Homeowner's Care and Operation Instructions included here will assure you have many years of dependable and enjoyable service from your appliance.

PACKAGING LIST

This appliance is packaged with an accessory package, which contains the following:

- One - Installation and Operation Manual
- One - Warranty Certificate
- One - Wood and Brass, Removable Door Handle (*for opening the ashpan door, firebox door and side door*)
- One - Air Control / Ash Pan Removal Tool
- One - Fire Poker
- Four - Leg Cushions
- One - Spray Can of Charcoal Paint

PLANNING YOUR INSTALLATION

QUESTIONS TO ASK LOCAL BUILDING OFFICIAL

A correct installation is critical and imperative for reducing fire hazards and perilous conditions that can arise when wood burning appliances are improperly installed. The installer must follow all of the manufacturers' instructions. These models are designed as radiant room heaters and should be used for no other purpose.

The installation of a wood burning appliance must conform to local codes and applicable state and federal requirements and a building permit must be obtained before installing. Familiarity with these requirements before installation is essential. Important considerations to discuss with local building officials include:

1. Applicable codes (i.e. Uniform Mechanical Code, State or Regional Codes.)?
2. Local amendments?
3. Is a permit required - cost?
(You may wish to contact your insurance company to ask if they require this?).
4. Rooms where the installation is not allowed?

SMOKE DETECTORS

Since there are always several potential sources of fire in any home, we recommend installing smoke detectors. If possible, install the smoke detector in a hallway adjacent to the room (to reduce the possibility of occasional false activation from the heat produced by the stove). If your local code requires a smoke detector be installed within the same room, you must follow the requirements of your local code. Check with your local building department for requirements in your area.

NOTE – This appliance is NOT approved for installation into a Manufactured (Mobile) Home.

SELECTING A LOCATION

The design of your home and where you place your stove will determine its value as a source of heat. A wood stove depends primarily on air circulation (convection) to disperse its heat, and therefore, a central location is often best. There are other practical considerations, which must be considered before a final selection of locations is made.

- ◆ Existing Chimneys
- ◆ Wood Storage
- ◆ Aesthetic Considerations
- ◆ Roof Design (Rafter Locations & Roof Pitch)
- ◆ Room Traffic
- ◆ Proximity to Combustibles
- ◆ Electrical Wiring

The installation of this stove will require some research. Once your options are determined, consult with your local building department who will be able to give you the necessary installation requirements for your area (Is a building permit required?, Rooms where installation may not be allowed?, etc.).

WARNING: CHECK ALL LOCAL BUILDING AND SAFETY CODES BEFORE INSTALLATION. THE INSTALLATION INSTRUCTIONS AND APPROPRIATE CODE REQUIREMENTS MUST BE FOLLOWED EXACTLY AND WITHOUT COMPROMISE. ALTERATIONS TO THE STOVE ARE NOT ALLOWED. DO NOT CONNECT THE STOVE TO A CHIMNEY SYSTEM SERVING ANOTHER STOVE, APPLIANCE, OR ANY AIR DISTRIBUTION DUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS WILL VOID THE MANUFACTURERS WARRANTY.

If you plan to vent your stove into an existing masonry chimney, have it inspected by a local fire marshal or qualified installer. Remember that a stove's performance is heavily influenced by the chimney and its location on the roof. An oversized flue may not provide effective draw, and a flue liner may be required (see *Draft Requirements* on page 12). Consult your dealer or qualified installer before final selection is made.

This stove requires pre-installation work to be completed before installation can take place. This may include modification for flue and chimney.

The appliance should be inspected before use and the chimney cleaned at least annually. More frequent cleaning may be required due to poor operation, installation, or low quality fuel.

CAUTION: THE STOVE BODY IS VERY HEAVY. THE USE OF A HEAVY DUTY ESCALARA (STAIR STEP HAND TRUCK) IS RECOMMENDED FOR LIFTING THE STOVE BODY.


PLANNING YOUR INSTALLATION – Model CI1000HT

FLOOR PROTECTION

**FOR INSTALLATIONS IN THE USA
MODEL CI1000HT**

The floor protector must meet or exceed the minimum thermal requirements as defined on this page (see *Floor Protection Using Alternate Material As Floor Protector*). If the floor protection is to be stone, tile, brick, etc., it must be mortared or grouted to form a continuous noncombustible surface. If a chimney connector extends horizontally over the floor, protection must also cover the floor under the connector and at least 2" (51 mm) to either side.

The floor protector must fully cover the area beneath the appliance and extend 18" to the front, 5.2" to the sides, and 0" from the back as shown in the illustration to the right.

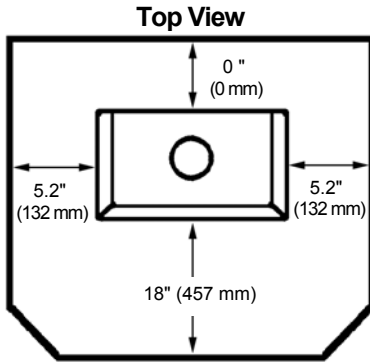

FLOOR PROTECTION

USING ALTERNATE MATERIAL AS FLOOR PROTECTOR

The hearth pad or alternate material used as a floor protector must be constructed of a durable noncombustible material having an equal or better thermal conductivity value (lower k value) of $k = .84 \text{ BTU} / \text{IN FT}^2 \text{ HR } ^\circ\text{F}$ or a thermal resistance that equals or exceeds $r = 1.19 \text{ HR } ^\circ\text{F FT}^2 / \text{IN/BTU}$ with a minimum thickness of 1/2". With these values, determine the minimum thickness of the alternate material required using the formula(s) and the table shown here (see chart – *Approved Alternative Materials for Floor Protection*).

Note: Any noncombustible material having a thickness of 1/2" (13 mm) whose k value is less than .84 or whose r value is more than 1.19 is acceptable. If the alternate material used has a higher k value or lower r value will require a greater thickness of the material used. In some cases, if the k value is less or the r value higher, a thinner material may be used.

Methods of determining floor protection equivalents:

To determine the thickness required for the alternate material when either the k value or r value is known, use either the k formula or r formula:

Example: Durock™ Cement Board is to be used for the floor protection. How thick must this material be? The following formulas give the means of determining minimum thickness required.

T_M = minimum thickness required for alternate material
 k_M = k value per inch of alternate material
 T_L = minimum thickness of listed material
 r_M = r value per inch of alternate material

Using the k formula:

Desired Thickness of the alternate material = $\frac{\text{k value of desire material (per inch)}}{\text{k value of listed material (per inch)}} \times$ **Minimu thickness of listed material**

$$T_M (\text{inches}) = \frac{k_M}{.84} \times T_L$$

$$T_M (\text{inches}) = \frac{1.92 \times 1/2"}{.84}$$

Answer using k: $2.286 \times 0.50" = 1.143 = \sim 1 \text{ 9/64}"$
 1 9/64" thickness Durock Cement Board will be required.

Using the r formula:

$$T_M (\text{inches}) = \frac{1.19 \times T_L}{r_M}$$

$$T_M (\text{inches}) = \frac{1.19 \times .5"}{.52}$$

Answer using r: $2.288 \times 0.50" = 1.143 = \sim 1 \text{ 9/64}"$
 1 9/64" thickness Durock Cement Board will be required.

At times it is important to know what combination of materials are acceptable for use as floor protection. The "R values" are used to determine acceptable combinations of materials because "R values" are additive where r and k values are not.

$$\text{"R value"} = \frac{1}{k} = r \times \text{thickness of material used}$$

Example: "R value" = $1/k = r \times \text{thickness of material used}$. Given that the required "R value" for a suitable floor protector used must be equal to or greater than: "R" = $r \times T_L = 1.19 \times .5" = .60$.

Listed Material

Listed Material	Thermal Values		Listed Min. Thickness T_L
	k (per inch)	r (per inch)	
Listed Material →	.84	1.19	1/2"

Approved Alternate Materials for Floor Protection (**)

Alternative Materials ↓	Thermal Values		* Minimum Thickness T_M
	k (per inch)	r (per inch)	
Kaowool M Board	.47	2.13	* 1/2"
Micore 160™	.35	2.86	* 1/2"
Micore 300™	.46	2.18	* 1/2"
Durock™ Cement Board	1.92	.52	1 3/16"
Hardibacker™	1.95	.51	1 3/16"
Hardibacker 500™	2.30	.44	1 3/8"
Cultered Stone Hearthstone™	2.82	.35	1 11/16"
Wonderboard	3.23	0.31	1 15/16"
Face brick	9.00	0.11	5 3/8"
Common brick	5.00	0.20	3"
Cement mortar	5.00	0.20	3"
Ceramic tile	12.5	.08	7 1/2"
Marble	~20.0	~.05	11 15/16"

Note: To convert inches to millimeters divide by .03937.

(*) After minimum thickness is calculated, the thickness can be no less than 1/2" (13mm).

(**) If the floor protector to be used is a noncombustible material and is NOT listed on this chart on this page, the manufacturer of the material must provide either the listed k-value per inch or r-value per inch and the minimum thickness will need to be calculated per instructions on this page.


PLANNING YOUR INSTALLATION – Model CI1000HT

FLOOR PROTECTION

**FOR INSTALLATIONS IN CANADA
MODEL CI1000HT**

The floor protector must meet or exceed the minimum thermal requirements as defined on this page (see *Floor Protection Using Alternate Material As Floor Protector*). If the floor protection is to be stone, tile, brick, etc., it must be mortared or grouted to form a continuous noncombustible surface. If a chimney connector extends horizontally over the floor, protection must also cover the floor under connector and at least 2" (51 mm) to either side.

The floor protector must fully cover the area beneath the appliance and extend 18" to the front, 8" to the sides, and 8" from the back as shown in the illustration to the right.

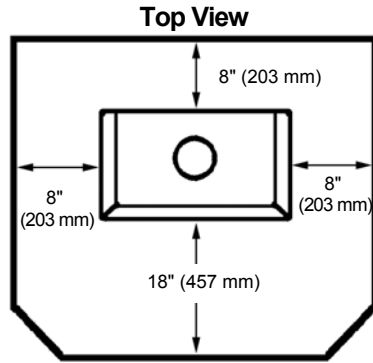

FLOOR PROTECTION USING ALTERNATE MATERIAL AS FLOOR PROTECTOR

The hearth pad or alternate material used as a floor protector must be constructed of a durable noncombustible material having an equal or better thermal conductivity value (lower k value) of $k = .84 \text{ BTU} / \text{IN FT}^2 \text{ HR } ^\circ\text{F}$ or a thermal resistance that equals or exceeds $r = 1.19 \text{ HR } ^\circ\text{F FT}^2 \text{ IN/BTU}$ with a minimum thickness of 1.45". With these values, determine the minimum thickness of the alternate material required using the formula(s) and the table shown here (see chart – *Approved Alternate Materials for Floor Protection*).

Note: Any noncombustible material having a thickness of 1.45" (37 mm) whose k value is less than .84 or whose r value is more than 1.19 is acceptable. If the alternate material used has a higher k value or lower r value will require a greater thickness of the material used. In some cases, if the k value is less or the r value higher, a thinner material may be used.

Methods of determining floor protection equivalents:

To determine the thickness required for the alternate material when either the k value or r value is known, use either the k formula or r formula:

Example: Durock™ Cement Board is to be used for the floor protection. How thick must this material be? The following formulas give the means of determining minimum thickness required.

T_M = minimum thickness required for alternate material
 k_M = k value per inch of alternate material
 T_L = minimum thickness of listed material
 r_M = r value per inch of alternate material

Using the k formula:

Desired thickness of the alternate material = $\frac{\text{k value of desired material (per inch)}}{\text{k value of listed material (per inch)}} \times$ **Minimum thickness of listed material**

$$T_M (\text{inches}) = \frac{k_M}{.84} \times T_L$$

$$T_M (\text{inches}) = \frac{1.92}{.84} \times 1.45"$$

Answer using k: $\sim 2.287 \times \sim 1.45" = \sim 3.316" = \sim 3 \text{ } 5/16"$
 $\sim 3 \text{ } 5/16"$ thickness Durock Cement Board will be required.

Using the r formula:

$$T_M (\text{inches}) = \frac{1.19}{r_M} \times T_L$$

$$T_M (\text{inches}) = \frac{1.19}{.52} \times 1.45"$$

Answer using r: $\sim 2.287 \times 1.45" = \sim 3.316" = \sim 3 \text{ } 5/16"$
 $\sim 3 \text{ } 5/16"$ thickness Durock Cement Board will be required.

At times it is important to know what combination of materials are acceptable for use as floor protection. The "R values" are used to determine acceptable combinations of materials because "R values" are additive where r and k values are not.

$$\text{"R value"} = \frac{1}{k} = r \times \text{thickness of material used}$$

Example: "R value" = $1/k = r \times \text{thickness of material used}$. Given that the required "R value" for a suitable floor protector used must be equal to or greater than: "R" = $r \times T_L = 1.19 \times 1.45" = \sim 1.73$.

Listed Material

Listed Material	Thermal Values		Listed Min. Thickness T_L
	k (per inch)	r (per inch)	
Listed Material →	.84	1.19	1.45"

Approved Alternate Materials for Floor/Hearth Protection (**)

Alternative Materials ↓	Thermal Values		* Minimum Thickness T_M
	k (per inch)	r (per inch)	
Kaowool M Board	.47	2.13	* 1.45"
Micore 160™	.35	2.86	* 1.45"
Micore 300™	.46	2.18	* 1.45"
Durock™ Cement Board	1.92	.52	3.5/16"
Hardibacker™	1.95	.51	3 3/8"
Hardibacker 500™	2.30	.44	4"
Cultered Stone Hearthstone™	2.82	.35	4 7/8"
Wonderboard	3.23	0.31	5 9/16"
Face brick	9.00	0.11	15 9/16"
Common brick	5.00	0.20	8 5/8"
Cement mortar	5.00	0.20	8 5/8"
Ceramic tile	12.5	.08	21 9/16"
Marble	~20.0	~.05	34 9/16"

Note: To convert inches to millimeters divide by .03937.

(*) After minimum thickness is calculated, the thickness can be no less than 1.45" (36.8mm).

(**) If the floor protector to be used is a noncombustible material and is NOT listed on this chart on this chart, the manufacturer of the material must provide either the listed k-value per inch or r-value per inch and the minimum thickness will need to be calculated per instructions on this page.


PLANNING YOUR INSTALLATION– Model CI2000HT

FLOOR PROTECTION

**FOR INSTALLATIONS IN THE USA & CANADA
MODEL CI2000HT**

The floor protector must meet or exceed the minimum thermal requirements as defined on this page (see *Floor Protection Using Alternate Material As Floor Protector*). If the floor protection is to be stone, tile, brick, etc., it must be mortared or grouted to form a continuous noncombustible surface. If a chimney connector extends horizontally over the floor, protection must also cover the floor under the connector and at least 2" (51 mm) to either side.

The floor protector must fully cover the area beneath the appliance and extend 18" to the front, 5"-USA and 8"-Canada to the sides, and 0"-USA and 8"-Canada from the back as shown in the illustration to the right.

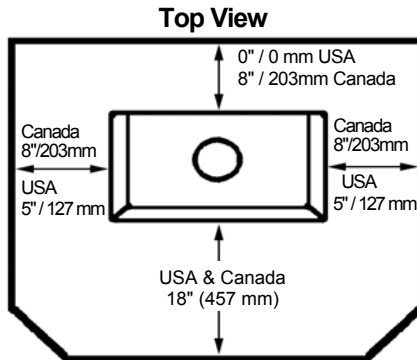

FLOOR PROTECTION USING ALTERNATE MATERIAL AS FLOOR PROTECTOR

The hearth pad or alternate material used as a floor protector must be constructed of a durable noncombustible material having an equal or better thermal conductivity value (lower k value) of $k = .84 \text{ BTU} / \text{IN FT}^2 \text{ HR } ^\circ\text{F}$ or a thermal resistance that equals or exceeds $r = 1.19 \text{ HR } ^\circ\text{F FT}^2 \text{ IN/BTU}$ with a minimum thickness of 1/2". With these values, determine the minimum thickness of the alternate material required using the formula(s) and the table shown here (see chart – *Approved Alternative Materials for Floor Protection*).

Note: Any noncombustible material having a thickness of 1/2" (13 mm) whose k value is less than .84 or whose r value is more than 1.19 is acceptable. If the alternate material used has a higher k value or lower r value will require a greater thickness of the material used. In some cases, if the k value is less or the r value higher, a thinner material may be used.

Methods of determining floor protection equivalents:

To determine the thickness required for the alternate material when either the k value or r value is known, use either the k formula or r formula:

Example: Durock™ Cement Board is to be used for the floor protection. How thick must this material be? The following formulas give the means of determining minimum thickness required.

T_M = minimum thickness required for alternate material
 k_M = k value per inch of alternate material
 T_L = minimum thickness of listed material
 r_M = r value per inch of alternate material

Using the k formula:

Desired thickness of the alternate material = $\frac{\text{k value of desired material (per inch)}}{\text{k value of listed material (per inch)}} \times$ **Minimum thickness of listed material**

$$T_M \text{ (inches)} = \frac{k_M}{.84} \times T_L$$

$$T_M \text{ (inches)} = \frac{1.92 \times 1/2"}{.84}$$

Answer using k: $2.286 \times 0.50" = 1.143 = \sim 1 \text{ 9/64}"$
 $\sim 1 \text{ 9/64}"$ thickness Durock Cement Board will be required.

Using the r formula:

$$T_M \text{ (inches)} = \frac{1.19 \times T_L}{r_M}$$

$$T_M \text{ (inches)} = \frac{1.19 \times .5"}{.52}$$

Answer using r: $2.288 \times 0.50" = 1.143 = \sim 1 \text{ 9/64}"$
 $\sim 1 \text{ 9/64}"$ thickness Durock Cement Board will be required.

At times it is important to know what combination of materials are acceptable for use as floor protection. The "R values" are used to determine acceptable combinations of materials because "R values" are additive where r and k values are not.

$$\text{"R value"} = \frac{1}{k} = r \times \text{thickness of material used}$$

Example: "R value" = $1/k = r \times \text{thickness of material used}$. Given that the required "R value" for a suitable floor protector used must be equal to or greater than: "R" = $r \times T_L = 1.19 \times .5" = .60$.

Listed Material

Listed Material	Thermal Values		Listed Min. Thickness
	k (per inch)	r (per inch)	T_L
Listed Material →	.84	1.19	1/2"

Approved Alternate Materials for Floor Protection (**)

Alternative Materials ↓	Thermal Values		* Minimum Thickness
	k (per inch)	r (per inch)	T_M
Kaowool M Board	.47	2.13	* 1/2"
Micore 160™	.35	2.86	* 1/2"
Micore 300™	.46	2.18	* 1/2"
Durock™ Cement Board	1.92	.52	1 3/16"
Hardibacker™	1.95	.51	1 3/16"
Hardibacker 500™	2.30	.44	1 3/8"
Cultered Stone Hearthstone™	2.82	.35	1 11/16"
Wonderboard	3.23	0.31	1 15/16"
Face brick	9.00	0.11	5 3/8"
Common brick	5.00	0.20	3"
Cement mortar	5.00	0.20	3"
Ceramic tile	12.5	.08	7 1/2"
Marble	~20.0	~.05	11 15/16"

Note: To convert inches to millimeters divide by .03937.

(*) After minimum thickness is calculated, the thickness can be no less than 1/2" (13mm).

(**) If the floor protector to be used is a noncombustible material and is NOT listed on this chart on this chart, the manufacturer of the material must provide either the listed k-value per inch or r-value per inch and the minimum thickness will need to be calculated per instructions on this page.

PLANNING YOUR INSTALLATION– Model CI1000HT

MODEL CI1000HT COMBUSTIBLE WALL CLEARANCE – USA & Canada

WARNING: It is very important that you observe the minimum clearances.

There are listed clearances for your stove which were determined in a Laboratory test using various "classes" of stove pipe or chimney. Minimums are first established for the stove itself and increased based on how much heat is transferred by each class of pipe.

Position the unit no closer than the minimum clearances to combustible materials. Check that no overhead cross members in the ceiling or roof will be cut. Reposition unit if necessary being careful not to move closer than the minimum clearances.

Minimum Ceiling Height – 7 feet / 2133mm from floor to ceiling.

SINGLE WALL PIPE WITHOUT PIPE SHIELD

Using single wall 24 MSG black or 25 MSG blued steel connector pipe with factory-built chimney listed to either UL 103HT or ULC S629.

Minimum Clearances (inches)

A. 27 1/2" / 699mm D. 24" / 610mm
B. 27" / 686mm E. 18" / 457mm
C. 27" / 686mm F. 19" / 483mm

G. 35 3/16" / 894 mm (this is a reference dimension only)

SINGLE WALL PIPE WITH PIPE SHIELD / REDUCED CLEARANCE

Using single wall 24 MSG black or 25 MSG blued steel connector pipe with factory-built chimney listed to either UL 103HT or ULC S629. The use of a pipe shield for 6" connector with 1" clearance to the pipe is mandatory.

Minimum Clearances (Inches)


A. 21 1/2" / 546mm D. 18" / 457 mm
B. 27" / 686mm E. 18" / 457mm
C. 19" / 483mm F. 11" / 279mm

G. 23 7/8" / 606 mm (this is a reference dimension only)


PROTECTED WALL CLEARANCE

Some local codes will allow reduced clearances when the stove is installed adjacent to a protected wall system. The variance must be approved by your local building official. Normally, the protected wall system is defined as a non-combustible material with a minimum of 1" air space behind. Check your local building codes or with a qualified installer (Ref. NFPA 211).

Parallel Installation

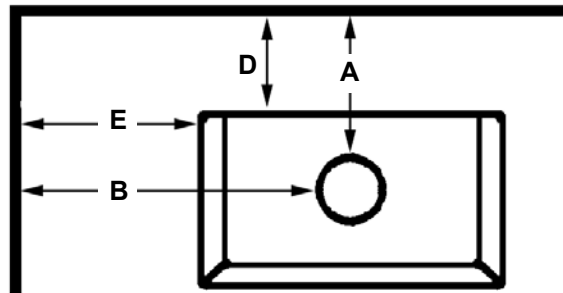

Corner Installation

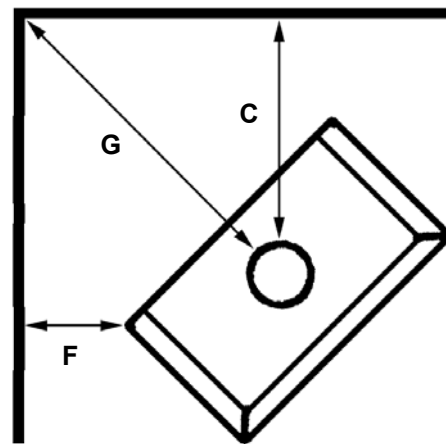

- **MODEL CI1000HT IS NOT APPROVED FOR USE WITH DOUBLE WALL PIPE.**
- **DO NOT INSTALL THE CI1000HT INTO AN ALCOVE OR A CONFINED SPACE.** This unit has not been tested or approved for installation into a confined space such as an alcove (see the national standard below).

NFPA 211-96, 9-2.2: (Applies to Solid Fuel Burning Appliances, which are not alcove tested) - Solid fuel-burning appliances shall not be installed in confined spaces. The space or room shall be of ample size to allow adequate circulation of heated air. Appliances shall be so located as not to interfere with the proper circulation of air within the heated space.

PLANNING YOUR INSTALLATION– Model CI2000HT

MODEL CI2000HT COMBUSTIBLE WALL CLEARANCE – USA & Canada

WARNING: It is very important that you observe the minimum clearances.

There are listed clearances for your stove which were determined in a Laboratory test using various "classes" of stove pipe or chimney. Minimums are first established for the stove itself and increased based on how much heat is transferred by each class of pipe.

Position the unit no closer than the minimum clearances to combustible materials. Check that no overhead cross members in the ceiling or roof will be cut. Reposition unit if necessary being careful not to move closer than the minimum clearances.

SINGLE WALL PIPE (Not approved for alcove installations) Using single wall 24 MSG black or 25 MSG blued steel connector pipe with factory-built chimney listed to either UL 103HT or ULC S629.

Minimum Clearances (inches)

A. 18" / 457mm	D. 13" / 330mm
B. 32" / 813mm	E. 20" / 508mm
C. 27" / 686mm	F. 16" / 406mm

G. 35 3/16" / 894 mm (this is a reference dimension only)

DOUBLE WALL PIPE (For alcove installations, clearances "C" and "F" are not applicable) Use listed double wall chimney connector or Type L vent pipe to the top of the stove.

Minimum Clearances (Inches)

A. 14 1/2" / 368mm	D. 10" / 254mm
B. 28 1/2" / 724mm	E. 17" / 432mm
C. 18" / 457mm	F. 7" / 178mm

Minimum Ceiling Height for Single wall pipe and double wall pipe installations and Alcove Installations – 60" / 1524mm from floor to ceiling and 29" / 737mm from stove top to ceiling.

ALCOVE INSTALLATION CLEARANCES

Alcove Installations Require Double Wall Pipe Only


Use listed double wall chimney connector or Type L vent pipe to the top of the stove.

Minimum Clearances (Inches)


A. 14 1/2" (368 mm)	D. 10" (254 mm)
B. 28 1/2" (724 mm)	E. 17" (432 mm)
C. N/A	F. N/A

Note: Alcove clearances cannot be reduced using wall protection. Maximum alcove depth must be no more than 48" (1220 mm).

Parallel & Alcove Installations

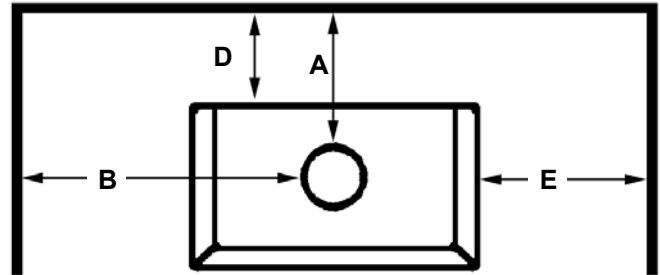

Corner Installation

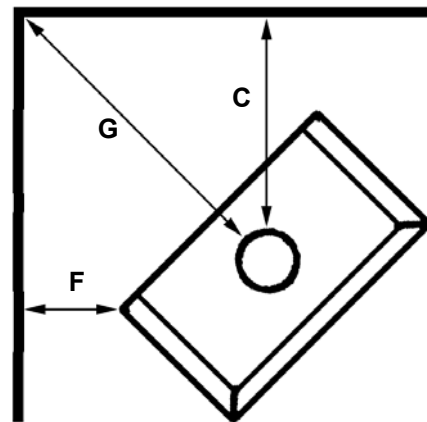

PROTECTED WALL CLEARANCE

Some local codes will allow reduced clearances when the stove is installed adjacent to a protected wall system. The variance must be approved by your local building official. Normally, the protected wall system is defined as a non-combustible material with a minimum of 1" air space behind. Check your local building codes or with a qualified installer (Ref. NFPA 211).

INSTALLATION

INSTALLING LEG PADS

The four leg pads (included in accessory package), are provided for placement under the four legs.

TYPES OF CHIMNEYS

The unit must be connected to either a code-approved masonry chimney with a flue liner, or a 6 inch diameter factory-built chimney complying with the requirements for Type HT chimneys in the standard UL 103.

The chimney is a vital part of your stove installation. A properly built masonry chimney or a properly installed factory-built chimney will assure a consistent draft under a variety of weather conditions (a smoking stove is usually caused by a chimney problem). The stove flue size is 6 inches diameter, which is approximately 28 square inches minimum. The maximum flue size should be no more than (3)-three times the cross sectional area of the size of the stove flue collar. In this case, that would be no larger than an 10-inch diameter stack, or approximately 85 square inches maximum.

All chimneys must be installed as specified by local building codes and according to the chimney manufacturer instructions (in the case of a factory-built chimney). See the chimney manufacturer instructions for exact specifications. Factory-built chimneys must comply with UL 103HT or ULC S629. A chimney connector shall not pass through an attic or roof space, closet or similar concealed space, or a floor, or ceiling. Where passage through a wall, or partition of combustible construction is desired, the installation shall conform to CAN/CSA-B365, Installation Code for Solid-Fuel-Burning Appliances and Equipment.



Tile-lined
Masonry
Chimney



Factory
Built
Chimney

ACCEPTABLE CONNECTOR PIPE FOR INSTALLATIONS

When Using Single Wall Pipe: Install a six (6) inch diameter, single wall, 24 MSG black steel or 26 MSG blued steel connector pipe on the flue collar of the unit. When installing pipe, the crimped ends of the pipe should all point down. Position all seams toward the back for aesthetics. Three (3) pre-drilled holes are provided in the flue collar for fastening the pipe securely to the stove. Use sheet metal screws to do this. Additional sections of single wall pipe should be fastened together with at least three (3) sheet metal screws each section. All pipe connections must be sealed (ie. high temperature silicone). When connecting to the factory-built ceiling support package, use the manufacturer's transition piece, usually called a dripless connector, to join single wall pipe to their factory-built chimney section.

When Using Approved Double Wall Pipe (Approved for Model CI2000HT Only): Type L and listed double wall connector pipe is acceptable. Install any factory-built brand of pipe according to the manufacturer's instructions. All pipe connections must be sealed (ie. high temperature silicone).

Minimum / Maximim Flue Diameter:

Minimum 6", Maximum 10"

Chimney Connector Adapter - Use a chimney connector adapter to connect the chimney connector up to the chimney. The small ends of the chimney connector should all point down for a drip free installation. Position all seams toward the back for aesthetics. The chimney connector must be 6-inch diameter.

Secure adjoining sections of chimney connector to each other using three equally spaced sheet metal screws. Secure the connector pipe to flue collar using three equally spaced sheet metal screws. **DO NOT secure chimney connector to chimney with screws.**

Connection To A Factory-built Chimney - This space heater is to be connected to a factory-built chimney conforming to CAN / ULC – S629, Standard for 650°C Factory-Built Chimneys. All pipe connections must be sealed (ie. high temperature silicone).

For Reduced Residential Clearances Using Double Wall Pipe (Approved for Model CI2000HT Only): Type L and listed double wall connector pipe is acceptable. Install any factory-built brand of pipe according to the manufacturer's instructions.

Vapor Barrier at Chimney Penetration

Install all venting components per the Vent Manufacturers installation instructions. Ensure that there is an effective vapor barrier at the location where the chimney penetrates to the exterior of the structure. This can be accomplished by applying a non-hardening waterproof sealant to the following components:

- Around the chimney at the point where the storm collar will meet the chimney just above the Flashing.
- Along the vertical seam of the chimney pipe, where it is exposed to the weather.
- On each nail head on the flashing.
- Around the chimney at the point where the storm collar will meet the chimney just above the flashing.

Notes:

- On a flat or tarred and graveled roofs, nail and seal the flat roof flashing to the roof on all sides with roofing compound.
- Do not put screws through the flashing into the chimney pipe.

INSTALLATION

CHIMNEY INSPECTION


Existing chimneys must be inspected before installing your stove. Consult your local building department for chimney code requirements. A masonry chimney must have a code approved liner. This liner must not have broken or missing pieces. Some non-code masonry chimneys may be brought up to code by being relined. (Consult your dealer or qualified chimney sweep). Factory-built chimneys should also be inspected, first for creosote deposits (which should be removed), and then for integrity of the stainless steel liner. Look for obvious bulges in the lining, which may indicate the need to replace that section (use a bright flashlight). Also, inspect the attic to see that the chimney has proper clearance to combustible framing members. For interior masonry chimneys and most factory-built chimneys, this must be a (2) two inch air space clearance, which must not be filled with insulation or any other material. An exterior masonry chimney must have a (1) one-inch air space clearance.

CHIMNEY HEIGHT REQUIREMENTS

The chimney must extend 3 feet above the level of roof penetration and a minimum of 2 feet higher than any roof surface within 10 feet (see below). Check with your local building officials for any additional requirements for your area.

Due to prevailing winds, local terrain, adjacent tall trees, a hill, or ravine near the home, or adjacent structures, additional chimney height or a special chimney cap may be required to ensure optimum performance.

The 10' by 2' Rule for Vent Termination

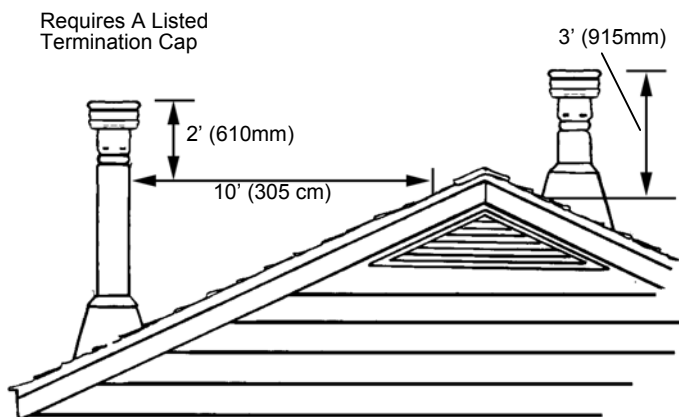

The top of the flue must be 2' (610 mm) higher than any part of the roof within 10' (305 cm) horizontal and a minimum of 3' (915 mm) higher than the highest point of roof penetration.

SPECIAL NOTE:

The installation of a barometric damper is recommended for all freestanding stoves in areas that may have high winds, which can effect the draft. The installation must be only in units with a newly constructed chimney, free of creosote deposits. The barometric damper is an automatic device designed to regulate the draft in a heating appliance, which in turn, stabilizes the chimney temperatures, lessening the potential of over-firing. Do not place the barometric damper greater than 24 inches (610 mm) above the unit. Excessive draft will lead to poor control of the burning rate and possible over-firing of the stove and damage to the cast iron firebox. Most barometric dampers are calibrated in inches of water column and can be set to draft requirements of -.03 to -.08 inches (-7.5 to -20 Pa). It is recommended that the barometric dampers to be set between -.05 and -.06 inches.

THE RECOMMENDED DRAFT REQUIREMENTS FOR THESE APPLIANCES IS NO LESS THAN -.05 AND NO GREATER THAN -.06. OPERATION OF YOUR STOVE WITH A DRAFT GREATER THAN -.06 CAN POSSIBLY CAUSE DAMAGE TO THE STOVE AND VOID THE WARRANTY.

Fire intensity is a function of several factors. One of these factors is DRAFT. Normally, increasing draft increases fire intensity. Conversely, increasing the fire intensity will increase draft. Draft can also be affected by external factors such as wind strength and direction, outside temperature, airflow in or out of the structure, and so forth. If one of these factors changes, the draft of a low-burning appliance may increase. This increased draft may cause dangerously high temperature to develop, possibly causing failure of the unit or flue, or ignition of nearby combustibles. Closing down the combustion airflow ("Primary Air Draft Control") may not guarantee that this will not happen.

CAUTION: MANY STRUCTURE FIRES HAVE RESULTED WHEN A SLOW BURNING FIRE HAS BEEN LEFT UNATTENDED FOR ANY EXTENDED PERIOD OF TIME. THESE FIRES NORMALLY OCCUR BECAUSE COMBUSTIBLE MATERIALS CLOSE TO AN APPLIANCE BECAME HEATED TO THE IGNITION POINT BY AN OVERFIRED APPLIANCE WHICH THE OPERATOR THOUGHT WAS SAFETY "THROTTLED DOWN."

INSTALLATION

DRAFT REQUIREMENTS

The appliance is merely one component of a larger system. The other equally important component is the venting system which is necessary for achieving the required flow of combustion air to the fire chamber and for safely removing unwanted combustion byproducts from the appliance. If the venting system's design does not promote these ends, the system may not function properly. Poorly functioning venting systems may create performance problems (i.e. smoking stove, poor heat output, fire goes out, window blackens, increased creosote buildup, etc.) as well as be a safety hazard. Some factors that may lead to performance problems are as follows:

- Oversized or undersized chimney.
- Excessive offsets in venting.
- Insufficient vertical height of chimney.
- Insufficient chimney termination height in relationship to roof.
- Insufficient ventilation.
- Lack of maintenance.
- Improper operation.
- Burning improper fuel (unit is approved for use with natural dry well-seasoned wood only).
- Down drafts in the chimney (may need a special wind cap).

To ensure that the venting system is functioning properly a draft test should be performed (see *Draft Test Procedure* on this page).

American National Standards Institute ANSI/NFPA 211-96: A chimney or vent shall be so designed and constructed to develop a flow sufficient to completely remove all flue and vent gases to the outside atmosphere. The venting system shall satisfy the draft requirements of the connected appliance in accordance with the manufacturer instructions.

DRAFT TEST PROCEDURE

After this appliance is installed a draft test should be performed to ensure proper draft. A qualified technician should perform the draft test procedure as follows:

- 1) Close all windows and doors in the dwelling.
- 2) Turn on or operate all appliances which remove air from the home (such as a furnace, heat pump, air conditioner, clothes dryer, exhaust fans, fireplaces, and other fuel burning appliances).

- 3) Drill a hole in the vent pipe per the draft gauge manufacturer's instructions (to create a draft test port). Note: Hole location should be a minimum of 1 foot above flue outlet collar.
- 4) Start a fire (See *How To Start And Maintain A Fire* on page 16).
- 5) After the fire is well established (20-25 minutes) and burning at a low setting, perform the draft test per the gauge manufacturer instructions. The draft gauge should read between .05 and .06" W.C. (inches water column). Excessive draft (above .06 W.C.I.) can result in too much combustion air to be pulled into the firebox, this will produce hotter burns and could result in overfiring. Too little draft (below .05" W.C.) will not allow enough combustion air delivery to maintain a fire well or cause performance problems such as smoking (this may result in improper operation of appliance, i.e. will not maintain fire well unless ash drawer or fuel door is left open).
- 6) Install a screw to seal the draft test port in the vent pipe. If the draft test reading was not within the required range, correct the installation and repeat this procedure.

VENTILATION REQUIREMENTS / PROVIDE ADEQUATE AIR FOR COMBUSTION

THE FRESH AIR REQUIREMENTS OF THIS APPLIANCE MUST BE MET WITHIN THE SPACE WHERE IT WILL BE INSTALLED. VENTILATION IS ESSENTIAL WHEN USING A SOLID FUEL BURNING HEATER.


In well insulated and weather tight homes, it may be difficult to establish a good draft up the chimney (caused by a shortage of air in the home). The lack of air is caused by many common household appliances which exhaust air from the home (such as a furnace, heat pump, air conditioner, clothes dryer, exhaust fans, fireplaces, and other fuel burning appliances). Also, the combustion process of this heater uses oxygen from inside the dwelling. If the available fresh air delivery in the dwelling is insufficient to support the demands of these appliances, problems can result (i.e. excessive negative pressure can develop in the dwelling which will affect the rate at which this appliance can draft thus resulting in performance problems; See *Draft Requirements* on this page). To correct this problem it may help to open a window (preferably on the windward side of the house) or install a vent to provide make-up air into the dwelling.

INSTALLATION


See Pipe Manufacturers Instructions For Installation Requirements Of Venting Components And Vent Clearances.

SINGLE WALL PIPE

Using 6" Diameter Single Wall Connector Pipe

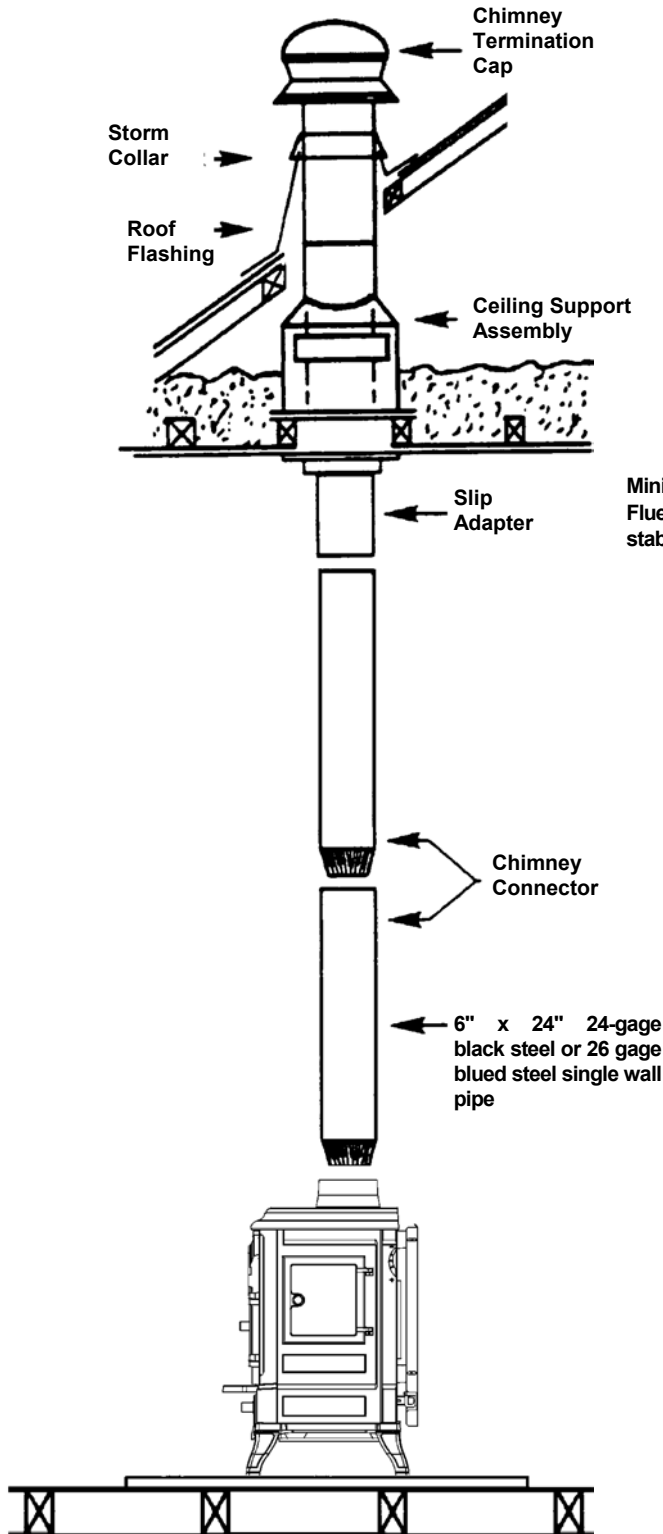


DOUBLE WALL PIPE (Approved for Model CI2000HT Only) Using 6" Diameter Type L-Vent Connector Pipe

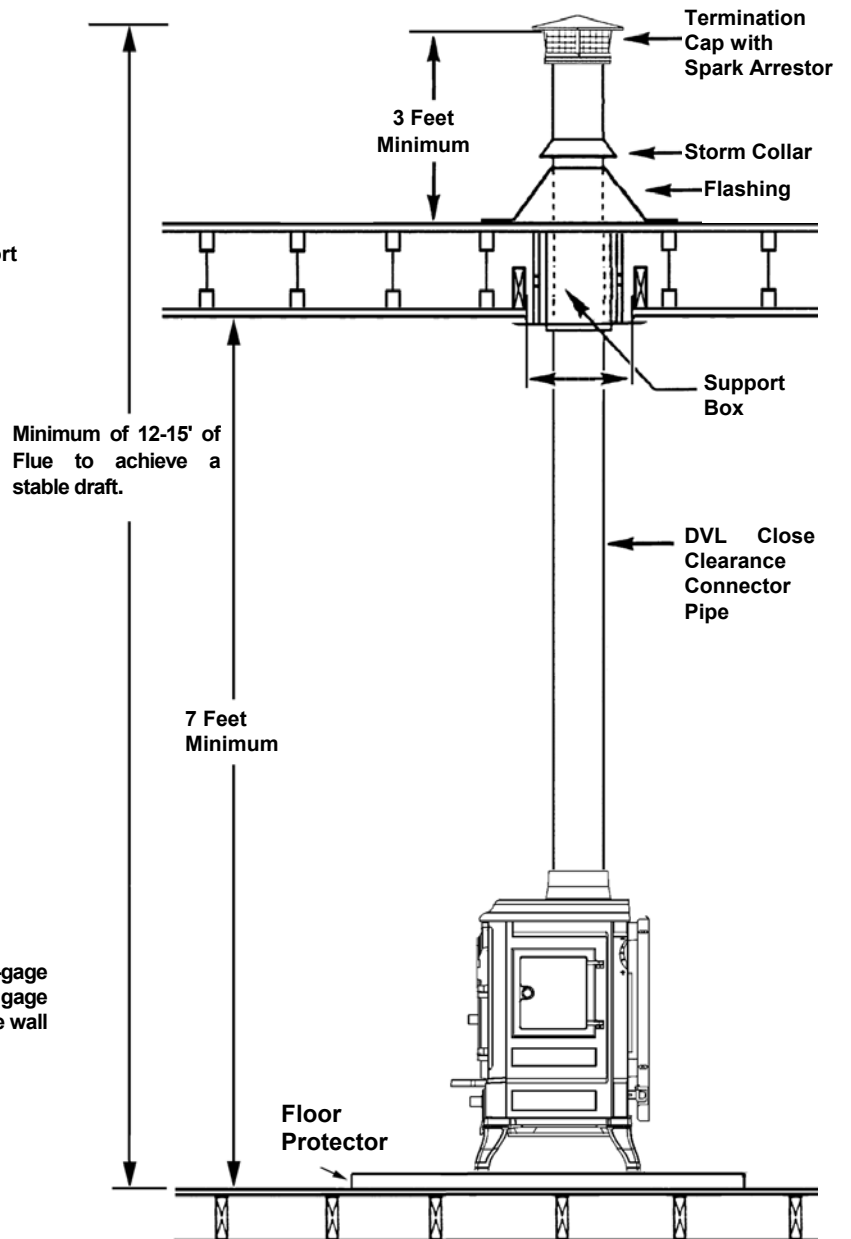


IMPORTANT NOTES:

- **Minimize the use of elbows (30°, 45° or 90°)** - Offsets in the venting system are very restrictive and will inhibit the draft (i.e. You will lose approximately 5 feet of effective draft for every 90 degrees of direction change). This appliance requires 12 to 15 feet of effective draft for optimum performance (see *Draft Requirements* on page 12).
- **First section of pipe must be vertical** - Use as much straight vertical pipe directly above the appliance as possible before using an elbow (a 2' to 3' initial vertical rise is suggested).


INSTALLATION – Combustible Wall Chimney Connector Pass-Throughs

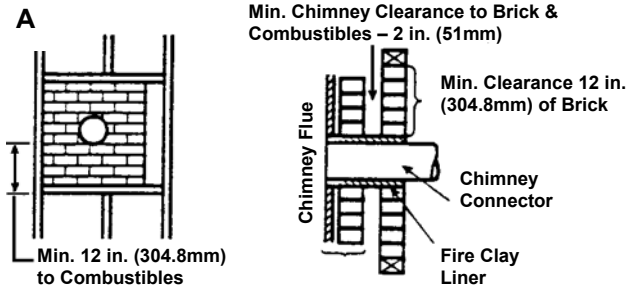


Method A. 12" (305 mm) Clearance to Combustible Wall Member: Using a minimum thickness 3.5" (89 mm) brick and a 5/8" (16 mm) minimum wall thickness clay liner, construct a wall pass-through. The clay liner must conform to ASTM C315 (Standard Specification for Clay Fire Linings) or its equivalent. Keep a minimum of 12" (305 mm) of brick masonry between the clay liner and wall combustibles. The clay liner shall run from the brick masonry outer surface to the inner surface of the chimney flue liner but not past the inner surface. Firmly grout or cement the clay liner in place to the chimney flue liner.

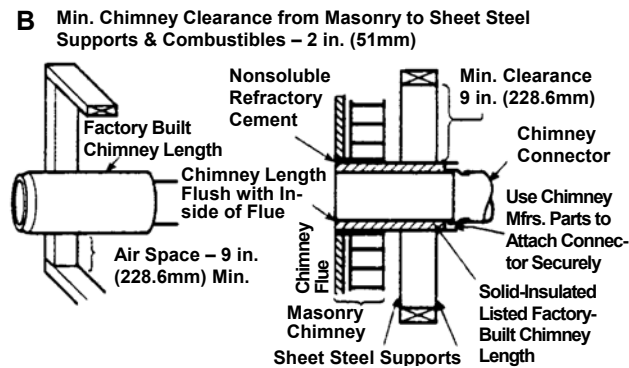

Method B. 9" (229 mm) Clearance to Combustible Wall Member: Using a 6" (153 mm) inside diameter, listed, factory-built Solid-Pak chimney section with insulation of 1" (26 mm) or more, build a wall pass-through with a minimum 9" (229 mm) air space between the outer wall of the chimney length and wall combustibles. Use sheet metal supports fastened securely to wall surfaces on all sides, to maintain the 9" (229 mm) air space. When fastening supports to chimney length, do not penetrate the chimney liner (the inside wall of the Solid-Pak chimney). The inner end of the Solid-Pak chimney section shall be flush with the inside of the masonry chimney flue, and sealed with a non-water soluble refractory cement. Use this cement to also seal to the brick masonry penetration.

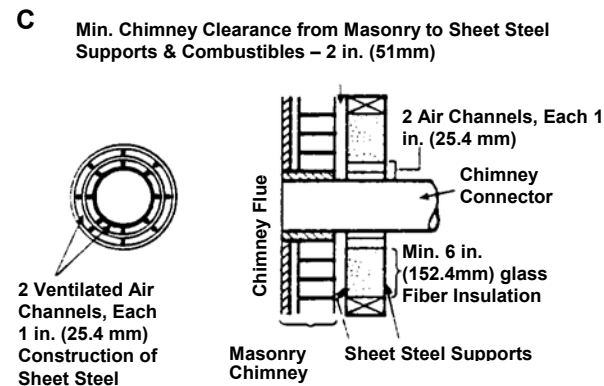

Method C. 6" (153 mm) Clearance to Combustible Wall Member: Starting with a minimum 24 gage (.024" [.61 mm]) 6" (153 mm) metal chimney connector, and a minimum 24 gage ventilated wall thimble which has two air channels of 1" (26 mm) each, construct a wall pass-through. There shall be a minimum 6" (153 mm) separation area containing fiberglass insulation, from the outer surface of the wall thimble to wall combustibles. Support the wall thimble, and cover its opening with a 24-gage minimum sheet metal support. Maintain the 6" (153 mm) space. There should also be a support sized to fit and hold the metal chimney connector. See that the supports are fastened securely to wall surfaces on all sides. Make sure fasteners used to secure the metal chimney connector do not penetrate chimney flue liner.

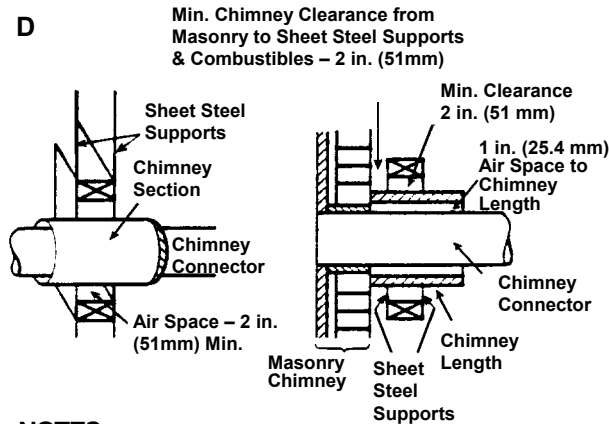

Method D. 2" (51 mm) Clearance to Combustible Wall Member: Start with a solid-pak listed factory built chimney section at least 12" (304 mm) long, with insulation of 1" (26 mm) or more, and an inside diameter of 8" (2 inches [51 mm] larger than the 6" [153 mm] chimney connector). Use this as a pass-through for a minimum 24-gage single wall steel chimney connector. Keep solid-pak section concentric with and spaced 1" (26 mm) off the chimney connector by way of sheet metal support plates at both ends of chimney section. Cover opening with and support chimney section on both sides with 24 gage minimum sheet metal supports. See that the supports are fastened securely to wall surfaces on all sides. Make sure fasteners used to secure chimney section do not penetrate chimney flue liner.

NOTES:


1. Connectors to a masonry chimney, excepting method B, shall extend in one continuous section through the wall pass-through system and the chimney wall, to but not past the inner flue liner face.
2. A chimney connector shall not pass through an attic or roof space, closet or similar concealed space, or a floor, or ceiling.
3. Where passage through a wall, or partition of combustible construction is desired, the installation shall conform to CAN/CSA-B365.

CARE AND OPERATION

PRIMARY AIR DRAFT CONTROL

Use the air control adjustment tool (provided) to adjust the air controls per the following instructions.

Air Control / Ash Pan Removal Tool

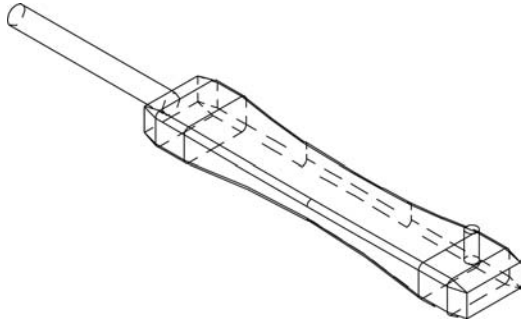


The primary combustion air delivery is controlled by the Primary Air Draft Control Assembly (located above the front door). The heat output can be controlled by sliding the control to a higher or lower heat output setting using the Air Control Tool Provided (See *Primary Air Draft Control* below).

The fuel, the amount of heat and burn times desired, the type of installation are all variables that will affect the control setting. The same control settings in a variety of installations will produce different results. You will need to try different settings so you can learn how much heat to expect and how long the fire will burn.

With the air control tool (provided in accessory package) the control can be adjusted to the heat output desired (see following illustration).

Primary Air Draft Control

Using the air control tool (provided) slide the control above door to adjust burn rate.

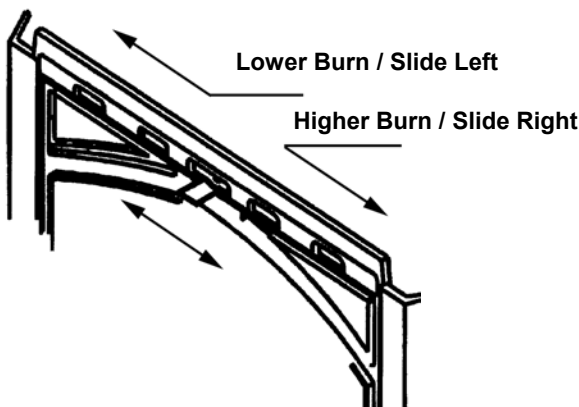

Adjusting Burn Rate:

The primary air draft control located above the front door can be adjusted to the right for higher temperatures and to the left for lower temperatures.

Generally, you will want to set the draft control somewhere in the low or medium range


Tips - Adjust the primary air control to a medium to low setting for a slow and more efficient burn. When burning on a higher setting, it is more efficient to burn with a bright but not roaring fire.

START UP AIR CONTROL (IGNITION BOOSTER)

To facilitate lighting, your stove is equipped with an ignition booster, which brings start-up air to the fire for a short period of time. This can be especially helpful when your chimney is cold. The ignition booster can also be used to allow the fire to recover quickly following refueling.

Start-Up Air Control

PROVIDES SUPPLEMENTAL PRIMARY AIR. DO NOT LEAVE THE START-UP AIR CONTROL OPEN FOR MORE THAN FIVE MINUTES.

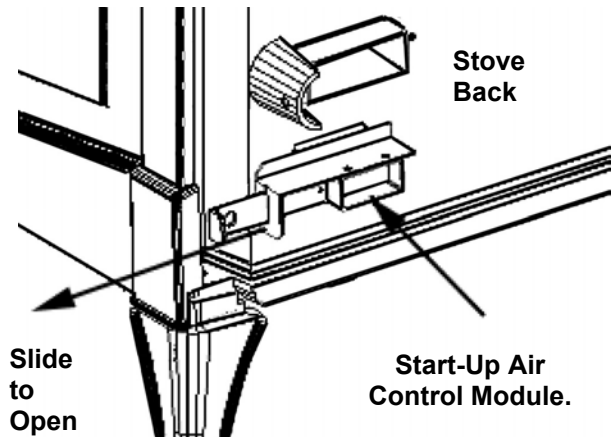

Before Initial Lighting

1. Using the air control tool open the start-up air control by pulling the lever outwards (see illustration above).
2. Load fuel into the firebox and light the fire as usual (see *How To Start And Maintain A Fire* on page 16)

DO NOT LEAVE THE START-UP AIR CONTROL IN THE OPEN POSITION FOR MORE THAN FIVE MINUTES (THIS COULD RESULT IN DANGEROUS OVERFIRING WHICH IS NOT COVERED UNDER THE WARRANTY). CLOSE BY PUSHING THE LEVER INWARDS.

See *How to Start And Maintain A Fire* on page 16

CARE AND OPERATION

HOW TO START AND MAINTAIN A FIRE

1. Using the Air Control Tool (provided), open the Start-Up Air Control (see *Start-Up Air Control*, on page 15).
2. Adjust the primary air draft control to the full open position (see *Primary Air Draft Control* on page 15).
3. Open the side fuel loading door and build your fire directly on the grate in the firebox.
 - a. Place five or six loosely crumpled sheets of newspaper in the stove.
 - b. Add a small amount of dry kindling randomly on the top of the newspaper.
 - c. Place a few more loosely crumpled newspapers on top of the kindling and light the bottom paper first, then light the top paper. Once the fire is well underway, close the door. The upper fire should preheat the chimney and create an effective draft while the lower fire ignites the kindling.
4. After the kindling is burning well, add increasingly larger pieces of wood until the fire is actively burning (see notes below). Leave the fuel door open (slightly ajar for 5 minutes). Then close the stove door. Never leave the stove unattended when the door is open.
 - When loading fuel, be careful not to smother the fire.
 - Load logs evenly across the base being cautious not to place wood in front of the rear edge of the log guard.
5. Once a bed of coals has been established, adjust the primary air control to a lower setting **AND CLOSE THE START-UP AIR CONTROL.**

AIR DELIVERY SYSTEMS


Tip – Using the air control tool, adjust the primary air draft control to a medium to low setting for a slow and more efficient burn. On higher settings, it is more efficient to burn with a bright but not roaring fire.

When Refueling


1. Follow the normal procedure for refuelling described on page 18. However, instead of cracking the door open $\frac{1}{2}$ ", open the start-up air control by pulling the lever outwards. This will supply enough primary combustion air to allow the fire to recover.

DO NOT LEAVE THE START-UP AIR CONTROL OPEN FOR MORE THAN FIVE MINUTES. CLOSE BY PUSHING THE LEVER INWARDS.

CI1000HT
Side Cut-A-Way View

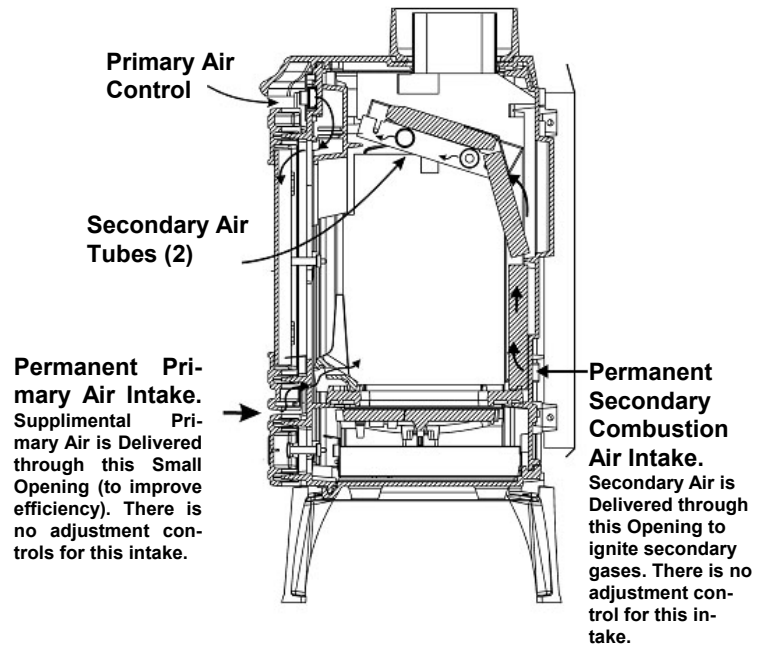

CI2000HT
Side Cut-A-Way View

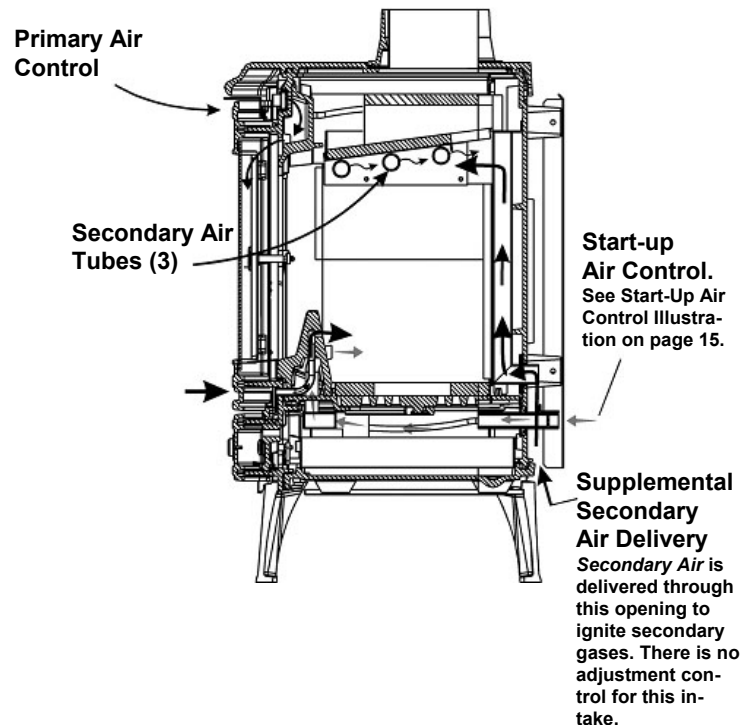

CARE AND OPERATION

FRONT ASH REMOVAL DOOR AND SIDE FUEL LOADING DOOR

CAUTION: When opening the doors, do not extend them beyond their normal travel. Overextending the doors to a further open position can put excessive stress on the hinge area of the doors which may result in breakage.

Latch Assemblies

(For front ash removal door, side fuel loading door and ash drawer door).

The door latch assemblies are designed to securely latch the front door, side door and ash drawer door. To open the latches, insert the door handle (provided) into hole in the latch assembly and rotate counterclockwise until door releases. To close and latch, reverse the process

GLASS

The glass is a 5mm super heat resistant ceramic that withstands continuous temperatures up to 1256° F. This temperature is well beyond the temperatures in which you operate your stove.

These models are designed to provide a flow of air over the inside of the glass, where along with high heat helps keep it clean. When operating the stove on low for extended periods of time, the glass may get dirty. A short, hot fire (15 - 20 minutes) will help clean off much of the normal buildup (see *Dirty Glass*, page 23). A commercial glass cleaner designed for stoves is recommended for cleaning.

The glass should be cleaned thoroughly with glass cleaner and a soft cloth BEFORE the stove is burned.

USE CONTROL SETTINGS THAT WORK FOR YOU

CAUTION: NEVER LEAVE STOVE UNATTENDED ON HIGH SETTINGS.

The fuel, the amount of heat you want, the type of installation you have and how long you wish the fire to burn are all variables that will affect the control setting. The same control settings in a variety of installations will produce different results.

Familiarize yourself with your stove by trying different settings so you can learn how much heat to expect and how long the fire will burn. It may take a week or two to learn but your patience will be rewarded by the warmth and pleasant satisfaction that only a wood fire can provide.

REPLENISH HUMIDITY LEVEL OF DWELLING

Heating the air in a closed building decreases the relative humidity of the air, which will dry wood and other combustible materials. This drying lowers the ignition temperature of these materials, thus increasing the fire hazard. To reduce the risk of fire, some provision should be made for replenishing moisture to the air whenever a structure is being heated for extended periods.

• BREAK-IN PERIOD

Your stove finish is a high temperature paint that requires time and temperature to completely cure. We recommend that you ventilate the house during the initial burns. The paint emits non-toxic odors during this process.

KEEP YOUR HOUSE WELL VENTILATED DURING THE CURING PROCESS TO PREVENT ACTIVATION OF YOUR HOME SMOKE DETECTOR.

It will take approximately three burn cycles to cure the paint. The first two burns should be low heat, approximately 250°F., for 20 minutes each, using paper and light kindling.

After each 20-minute burn, allow the appliance to cool completely. The third burn should be at least medium high or about 450°F. for 45 - 60 minutes. The paint will become soft and emit non-toxic haze during these burns. Keep the area well ventilated.

As the paint cures it will become slightly lighter in color. Eventually the entire surface will become an even color. Once the paint has been softened and cooled two or three times, it will harden. Do not place anything on the stove surface until the paint is completely cured. Do not attempt to repaint the stove until the paint is completely cured. If the surface later becomes stained or marred, it may be lightly sanded and touched up with spray paint from the same paint (See *Small Area Paint Touch-up*, page 21). Paint is available at your local authorized Lennox Hearth Products dealer. Never attempt to paint a hot stove.

CARE AND OPERATION

FIRST FIRE

NOTE: There is often an unpleasant odor and non-toxic fumes during the first initial burns (this is a natural result of the paint curing). We recommend that a window should be left open near the appliance during this curing process. See *Break-In Period* on page 17.

When your installation has been completed and inspected you are ready to build your first fire.

1. Using the air control tool, open the primary air draft control to the full open position (see *Primary Air Draft Control*, page 15).
2. Open fuel loading door and build a small fire in the stove using tightly rolled paper and dry kindling. Wait a few minutes for a good updraft to establish the fire.
3. Now place two or three thoroughly dried logs on the burning kindling and secure door.
5. After about 25-30 minutes of burning (when fire is well established), slide the primary air draft control to a medium setting. This will keep the fire burning at a moderate level so heat is transferred through the stove rather than up the chimney.
6. Once a bed of coals has been established, adjust the primary air draft control to a low setting.
7. During the first few fires, keep the combustion rate at a low to moderate level. Avoid burning fires with the primary air control wide open for long periods of time. This results in an updraft fire with most of the heat escaping up the chimney.

WARNING! READ AND USE THE INFORMATION PROVIDED IN THIS SECTION. TO DISREGARD THIS MAY CAUSE SERIOUS PERMANENT DAMAGE TO THE STOVE AND VOID YOUR WARRANTY. IT IS BEST TO WARM YOUR STOVE UP SLOWLY AND KEEP IT AT A MODERATE LEVEL.

REFUELING

CAUTION: ALWAYS CHECK FOR HIGH FLAMES WHEN OPENING A DOOR BY PARTIALLY OPENING DOOR FOR A FEW SECONDS BEFORE OPENING FULLY.

To prevent smoke blowing into the room follow these recommendations:

1. Using the air control tool adjust the primary air draft control and start-up air control to the full open position and let the fire "liven up" for about one minute before opening the fuel loading door. Open door about 1/2" and hold in this position about 30 seconds or until stove is drafting well, then fully open the door.
2. Rake the embers towards the front of the stove and spread evenly. If there are logs only partially burned rake these to the front of stove.
 - Feed the logs to the embers. When loading wood, add one or two logs at a time, depending on size. Try and use the side fuel loading door as it will allow for cleaner operation. Load logs evenly across the base being cautious not to place wood in front of the rear edge of the log guard.
 - Close the fuel loading door.
 - With the primary air draft control in the full open position. Crack the door open about 1/2" and let it burn for approximately 5 minutes. Then close the door and adjust the primary air draft control to the desired setting and **CLOSE THE START-UP AIR CONTROL.**
 - In order to maintain an attractively burning fire, logs should be up to 18" (457 mm) long and well seasoned. Loading the appliance full of damp wood on a low fire is certain to cause low combustion efficiency resulting in tar and dirty glass.
 - High combustion temperatures are the secret to clean glass operation.

OVERNIGHT BURNING

To inhibit excessive build-up on the glass during a slow overnight burn, it is recommended that the primary air draft control be adjusted to at least a slightly open position (the optimum setting will depend on how well your chimney draws). To achieve a slow burn (the maximum burn time is 8 hours under optimum conditions - dry, high BTU wood such as oak and proper draft from the chimney).

Note: With a good drafting chimney, the primary air control will need to be closed further than with a poor drafting chimney.

CARE AND OPERATION

BURN RECOMMENDED FUEL

This appliance is designed for use with natural well-seasoned wood. Do not burn particleboard scraps or pressed logs because they can produce conditions which will deteriorate metal. Green or uncured wood does not work well as fuel, and can cause increased creosote buildups. The value of green wood as a source of heat is limited. Do not overload or use kindling wood or mill ends as primary fuel as this may cause overfiring. Overfiring is a condition where excessive temperatures are reached, beyond the design capabilities of the stove. The damage that occurs from overfiring is not covered under the stove warranty.

What is the best wood for the fire?

Some woods are easier to light than others (i.e. hornbeam, beech, & oak do not light easily whereas aspen, birch and lime light easily but they do not last as long). Then come the softwoods and conifers. Regardless if you are burning a softer or harder wood, what is most important is that it is well-seasoned dry wood. Damp wood has far less heating power, this lowers the combustion temperature of the fire therefore, the output. Green wood is difficult to light, it burns badly and gives off smoke and causes the formation of deposits (tarring and soot staining) in the chimney flue and on the door glass.

What is tarring and soot staining in the chimney?

When the smoke arrives in the chimney at low temperature, part of the water vapor which they convey condenses. The heaviest constituents are deposited on the inside of the flue (this is TARRING). The mixture oxidizes in the air and forms brownish patches (this is SOOT STAINING). Four essential points for avoiding these drawbacks, use dry wood, use a stove designed for wood, connect it to a chimney with thick walls and of suitable cross-section (size and height), and ensure the connecting pipes are as short as possible (horizontal pipes should be no more than 6" / 150mm).

Flue Gas Temperature

It is recommended to thoroughly heat the flue system during start-up, before adjusting the burn rate to a medium or low setting (see *How To Start And Maintain A Fire*, Page 16). To ensure that the flue system is thoroughly heated, adjust the primary air to a medium/high position for approximately 20-25 minutes after the start-up air is closed before adjusting to a lower setting. This helps to establish the draft and it reduces creosote deposits on the internal surfaces of the stove, glass and chimney.

Hints:

- Creosote condenses in a cold chimney, not a warm one. Avoid a smoldering fire for more than a twelve-hour period and your chimney will never get cold.
- Burn a hot fire for a short period once or twice a day (and after reloading), and then adjust the primary air draft module to a medium or low position.

- When loading wood, add one or two logs at a time, depending on size. Loading the appliance full of damp wood on a low fire is certain to cause poor combustion efficiency resulting in creosote and dirty glass.
- If the wood is not quite as dry as it should be, to assist for a short period, smokeless coal can be added with the wood to raise the combustion temperature.
- Have the chimney cleaned and inspected by a professional chimney sweep once a year.

WARNING: BURNING IMPROPER FUEL (I.E. CHARCOAL) CAN RESULT IN CARBON MONOXIDE POISONING WHICH MAY LEAD TO DEATH!

CARBON MONOXIDE POISONING – EARLY SIGNS OF CARBON MONOXIDE POISONING RESEMBLE THE FLU WITH HEADACHES, DIZZINESS, OR NAUSEA. IF YOU HAVE THESE SIGNS, GET FRESH AIR AT ONCE! HAVE THE HEATER INSPECTED BY A QUALIFIED SERVICE TECHNICIAN. SOME PEOPLE ARE MORE AFFECTED BY CARBON MONOXIDE THAN OTHERS. THESE INCLUDE PREGNANT WOMEN, PEOPLE WITH HEART OR LUNG DISEASE OR ANEMIA, THOSE UNDER THE INFLUENCE OF ALCOHOL, AND THOSE AT HIGH ALTITUDES.

WHY SEASON WOOD?

The key to the success of a good fire that produces heat from a woodstove is the wood. It needs to be well-seasoned natural wood.

What does "Well-Seasoned" mean?

When a tree is cut down, the wood is green, full of sap and moisture. This moisture content can exceed 80%, which must be reduced to less than 20%. Wood properly seasoned is then capable of generating the heat the stove was designed to provide.

Green wood does not burn easily. Attempting to burn green wood often results in a lot of smoke and very little fire. Time is the most important factor in seasoning wood. Ideally the moisture content should be reduced to 11-20%, although very few of us will be able to check that figure. There are several steps that should be taken to ensure that you come close to these figures.

CARE AND OPERATION

SEASONING GUIDE

Softwoods – 18 months

Hardwoods – 18 months to 24 months

This period can be shortened (12 to 15 months) if the wood is cut to the right length and immediately stored under a ventilated shelter.

Logs that are 5" diameter across or larger should be split in half, three pieces if over 8 inches, and four pieces when over a foot across (split wood dries quicker than round logs). Round logs left in the open for more than a year end up rotten. If the tree was fell 2 to 4 years ago, it still needs to be cut, split, and seasoned for 18 to 24 months depending on the wood.

Wood which is too small to split must be drained, by removing some of the bark.

WOOD STORAGE

Wood to be seasoned should be stacked in an area open enough to ensure good air circulation on both sides – leaving adequate space between woodpiles to walk comfortable. Do not stack wood against a wall or building. It helps to elevate the woodpiles off the ground (two 2 x 4's running lengthwise beneath the woodpile works well). This allows air to flow under the bottom logs.

Store wood in a cool, dry place, well away from any source of flame or heat. Keep paper, wood, rags and other easily ignited materials away from the wood. If wood should become wet, separate it and allow it to dry naturally; do not mix wet and dry wood or pile wet wood on top of dry wood. If Wood is kept outdoors, either covered with a tarp, or not covered at all, it will not burn well until it has been in an enclosed space for one to two months. If stored outside, keep the wood covered to protect from rain or snow.

Wood supplied in ready-cut lengths stored immediately under a ventilated shelter dries quicker than wood stocked in high piles.

MAINTENANCE

DO NOT CLEAN STOVE WHILE HOT

INSPECT THE ENTIRE STOVE FREQUENTLY FOR PROPER OPERATION, FIT AND SOUNDNESS OF PARTS. IF ANY MALFUNCTIONING, CRACKED, BROKEN, OR LOOSE PARTS OR OTHER PROBLEMS ARE NOTED, CONTACT YOUR DEALER OR QUALIFIED SERVICEMAN TO INSPECT AND REPAIR THE UNIT. DO NOT OPERATE THE UNIT IF INSTALLED OR FUNCTIONING IMPROPERLY.

SUMMER SHUT DOWN

Remove ashes and cinders from the stove and dispose of (see *Ash Removal and Disposal* on this page). If the room is damp, place some absorbent crystals inside the stove and/or disconnect it completely from the chimney. Close doors and secure the latches closed.

CLEANING HEATER SURFACE

Clean the heater surface with a dry or slightly damp cloth. In case of condensation, clean the affected areas before they dry.

SMALL AREA PAINT TOUCH-UP

The stove body is painted with a quality high-temperature stove paint. Use only Stove Paint, Catalog # 40M68. Do not touch-up your stove with any other paint.

Using one small piece of 320 grit sand paper and lightly sand the blemish so that the edges are “feathered” or smooth to the touch between the painted and bare surfaces. Do not let the sand paper gum up with paint, as this will cause scratches on the metal surface. If there are any scratches, use 600 grit sandpaper instead. Mask off surfaces you do not want painted. Paint lightly over the bare surface first as this will act as an undercoat. Then paint over a larger area in smooth even strokes to blend.

See *Break-In Period* on page 17 for information on curing the paint.

ASH REMOVAL AND DISPOSAL

Empty the ash pan regularly to prevent the ash from spilling over. Do not allow the ash to build up and touch the under side of the grate.

To remove the ash from the stove, operate the firebox grate using the handle.

A layer of ash left over the grate when burning wood will protect the grate and retain heat so encouraging clean combustion.

The tool provided for removal of the ash pan should not be used to carry the ash pan. Use a leather glove and hold the ash pan on both sides.

CAUTION: MAKE SURE THAT THE FIRE IS OUT AND THE STOVE IS COLD BEFORE REMOVING ASHES!

Ashes can hold live embers for several days, and must be disposed of with care.

NEVER place ashes in a cardboard box or any other combustible receptacle.

Proper Disposal of Ashes:

Ashes should be placed in a metal container with a tight fitting lid. The closed container of ashes should be placed on a noncombustible floor or on the ground, well away from all combustible materials, pending final disposal.

If the ashes are disposed of by burial in soil or otherwise locally dispersed, they should be retained in the closed container until all cinders have thoroughly cooled.

DOOR, AND GLASS GASKETS

If the gaskets which provide a seal around the doors or glass should become frayed or damaged they should be replaced with the same size and type as the original gasket. Contact your dealer for ordering. Use high temperature silicone sealer as an adhesive for the door gasket. The glass gasket has a self-adhesive backing (see *Replacement Parts* on pages 27-33). If the gasketing is in good condition, check the closure latch screws; if these are loose, tighten with a Phillips screwdriver (do not over-tighten).

WARNING: THE GASKETS MUST BE KEPT IN GOOD CONDITION. DO NOT LEAVE THE STOVE BURNING WITH THE FUEL LOADING DOORS OPEN OR AJAR. THIS WILL CAUSE EXCESSIVE HEAT BUILD UP IN THE UNIT AND COULD IGNITE SURROUNDING COMBUSTIBLES AS WELL AS DAMAGE THE STOVE BY OVERFIRING IT. OVERFIRING IS A CONDITION WHERE EXCESSIVE TEMPERATURES ARE REACHED, BEYOND THE DESIGN CAPABILITIES OF THE STOVE (SUCH DAMAGE IS NOT COVERED BY THE MANUFACTURERS WARRANTY).

FIREBRICK

The firebrick should be inspected periodically and replaced if damaged (crumbling or excessively cracked). Through normal wear and tear, the firebrick may need to be replaced over time (through proper installation, operation, maintenance and fuel, the longevity of the firebrick will be increased – see *Overfiring Damage*, page 24). For information on warranty of the firebrick, see warranty statement provided with the appliance.

MAINTENANCE


SERVICING GLASS

CAUTION: BE CAREFUL NOT TO ABUSE DOOR ASSEMBLY BY STRIKING OR SLAMMING IT. IF THE DOOR ASSEMBLY OR GLASS IS BROKEN OR DAMAGED, THEY MUST BE REPLACED WITH FACTORY ORIGINAL PARTS BEFORE HEATER CAN BE SAFELY OPERATED. USE ONLY COMPONENTS PROVIDED BY THE MANUFACTURER AS REPLACEMENT PARTS.

Cleaning Glass: Ensure stove is cold prior to cleaning glass. A commercial glass cleaner designed for stoves is recommended. Do not use abrasive cleaners. Do not clean with any materials, which may scratch or otherwise damage the glass. Scratches on the glass can develop into cracks or break. Inspect the glass regularly. If you detect a crack, extinguish the fire and contact your dealer for a replacement.

Replacing Glass:

1. Open the door. Using a phillips screwdriver loosen the 4 screws which secure the glass then carefully remove broken glass one piece at a time (protective leather gloves are recommended).
2. Remove screws and clips from doorframe and set aside.

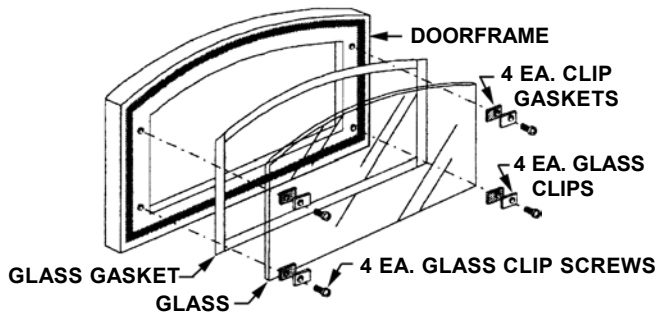

3. Clean the area where the glass with gasket will be installed.
4. Install new glass with gasket (use only factory 4-mm glass with glass channel gasket. Do not substitute).
5. Carefully reinstall glass clips with gasket and screws. Be very careful not to overtighten the screws (this could result in breakage when stove is hot).

CREOSOTE FORMATION AND NEED FOR REMOVAL

What is Creosote - When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining. When ignited this creosote makes an extremely hot fire. Also, creosote deposits tend to form in long runs of venting where gases be-

come too cool prior to exhausting. Note: Single wall pipe cools rapidly, therefore installations using this type of flue are more susceptible to creosote deposits.

To inhibit the build up of creosote, adjust the primary air draft control to a medium-high or high setting for a 10-minute period each day. Do not attempt to burn out heavy creosote accumulations in this manner. This must be removed from the chimney by scraping or brushing to reduce the risk of a chimney fire.

Burn Approved Fuel Only - This stove is approved for burning dry seasoned natural wood only. Using green or inadequately seasoned wood may increase creosote buildup.

Inspection Frequency - The chimney connector and chimney should be inspected at least twice monthly during the heating season to determine if a creosote buildup has occurred. If creosote has accumulated it should be removed to reduce the risk of a chimney fire. If creosote has accumulated (1/8 "(3 mm) or more) it should be removed to reduce the risk of a chimney fire. Experienced chimney servicing personnel should be consulted.

Cleaning - Remove the baffle brick in the firebox prior to having your chimney cleaned (should be done by a qualified chimney sweep). See following - *Removing Baffle Brick for Cleaning*.

Removing Baffle for Cleaning

Before flue can be cleaned, the baffle in the stove firebox must be removed. The C11000HT has one vermiculite firebrick, which serves as a baffle for the flue gases. The C12000HT has a 5-sided box made of ceramic fiber brick that serves as a baffle. In both cases, the baffles are located just above the secondary air tubes (which must be removed to access the baffle). Suggestion: Wear a pair of leather work gloves when removing secondary air tube assembly and baffle.

1. To access the baffle, the secondary air tube assembly must be removed. Locate the 4 screws, which secure the assembly into place (located at the ceiling of the firebox). Remove the assembly and set aside. Slide the baffle out and set aside.
2. Once the baffle is removed from the firebox, the flue can be cleaned. The accumulated soot that is removed by brushing will fall to the firebox floor where it can be removed and disposed of.

WARNING! DO NOT OPERATE THE STOVE WITHOUT THE BAFFLE BRICK PROPERLY INSTALLED. THIS WILL VOID THE WARRANTY AND THE STOVE WILL NOT FUNCTION PROPERLY.

MAINTENANCE / TROUBLESHOOTING

IN THE EVENT OF A CHIMNEY FIRE

Make sure the fuel loading doors are securely closed. Adjust the primary air draft control to the lowest (most closed) setting and ensure that the start-up air control is closed. Call the fire department immediately. After a chimney fire, the complete chimney system should be checked by a qualified technician before further use.

Consult your dealer for suggestions on proper chimney care. Contact your local municipal or provincial fire authority for information on how to handle a chimney fire. Have a clearly understood plan for handling a chimney fire. Establish a routine for the fuel, stove and firing technique. Check daily for creosote build-up until experience shows how often you need to clean to be safe. Be aware that the hotter the fire the less creosote is deposited, and weekly cleaning may be necessary in mild weather even though monthly cleaning may be enough in the coldest months.

REINSTALL BAFFLE BRICK

After your chimney has been swept, reinstall the baffle brick. See – *Removing Baffle Plates for Cleaning* (on previous page) and reverse steps.

TROUBLESHOOTING

* *When Fuel Door Is Opened, Smoke Enters Room.*

1. The primary air draft control is closed.
2. The chimney is too cool. Set the primary air draft control on "HIGH" for a few minutes before opening either fuel loading door.
3. Excess creosote will not only restrict your draft but it will create a risk of a creosote fire. Strictly adhere to maintenance requirements as outlined in this manual. If excess creosote has built up on the inside of the firebox sides and door, burn a small hot fire at intervals that are more frequent with air control on HIGH for a few minutes.
4. Deposits may have built up in the chimney and are restricting the draft, or the spark arrester on top of the chimney may be plugged.
5. Chimney diameter too large or too small to provide adequate draft.
6. The house is too airtight (usually takes 20 to 30 minutes for problem to appear as stove lowers air pressure in house). Crack a window open or provide an outside source of air near stove.
7. Insufficient vertical height to chimney to achieve adequate draft.

Does Not Produce Enough Heat

1. Using green or insufficiently cured wood.
2. Excessive draft.

3. High ceilings (heat rises quickly, but can be recirculated by a well-placed ceiling fan with a winter/summer switch).
4. The area to heat is too large (square foot heating estimates are based on "average" climates and home design).
5. There is an obstruction in the chimney.
6. The chimney or chimney cap is restricted by creosote preventing enough draw to sustain a "high" heat output rate.

* *Does Not Maintain A Fire*

1. Soft wood does not burn as long or as well as seasoned hardwood resulting in a short burn time.
2. Wood size too small. Burns at too rapid a rate.
3. The gasket seal on the fuel loading doors, or glass is leaking air. Repair or replace it if necessary.
4. Excessive Draft.
5. There may be an obstruction in the chimney.

* *Backpuffing*

Definition: *This is a term describing the condition when combustible gases remain unlit because of insufficient combustion air delivery which results in combustible gases building, then flash igniting. If backpuffing is occurring, it can push some smoke into the room through the primary or secondary air openings. The combustion air delivery is dependent upon the draft of the venting system. The following are variables, which can negatively affect the draft resulting in backpuffing.*

1. Downdraft in the chimney (a special wind cap may be needed).
2. The house is too air tight (ventilation is needed).
3. Insufficient vertical height to chimney to achieve adequate draft.

Odors

1. Creosote accumulation in firebox (brush out on next cleaning).
2. Chimney downdraft when stove is not operating (close the primary air draft control).
3. Paint curing on first several burns.

* *Dirty Glass*

1. Poor draft conditions.
2. Long burn periods at low draft settings.
3. Burning wet, pitchy or spongy wood.
4. Poorly arranged logs (too close to glass).

* **Draft problems; if installing into a larger flue, it may be necessary to use a full-length liner to achieve adequate draft for the appliance. A draft gauge should read a minimum of .05" W.C. (inches water column) not to exceed .06" W.C. for optimum performance (See *Draft Requirements* on 11).**

TROUBLESHOOTING

OVERFIRING DAMAGE

If the heater or chimney connector glows, you are overfiring. Other symptoms may include: Cracking, warping or burning out of components, stove glass may develop a haze, which will not come off with cleaning.

Overfiring of a stove is a condition where excessive temperatures are reached, beyond the design capabilities of the appliance. The damage that occurs from overfiring is not covered under the manufacturers limited warranty.

The following are a few conditions that should be evaluated and (corrected if necessary) if an overfiring condition is suspected:

Overfiring Caused From Improper Installation

Ensure that all installation requirements have been met as outlined in the installation manual. The chimney should be clean and in good repair. A draft test should be performed to determine if the draft requirements of the appliance are being met. A draft gauge should read between .05 and .06 " W.C. (inches water column). Excessive draft (above .06 " W.C.) will allow too much combustion air to be pulled in which results in hotter burns. Too little draft (below .05 " W.C.) will not allow enough combustion air delivery to maintain a fire (this may result in improper operation of appliance, i.e. wont maintain fire unless fuel loading door is left open. See following, *Overfiring Caused From Improper Operation*).

Overfiring Caused From Improper Operation

Operate this appliance only as outlined in this manual. Never burn the appliance with either fuel loading door open or ajar. Do not operate this stove with the Primary Air Draft Control in the full "open" position for extended periods. This wastes fuel and can cause dangerous overfiring conditions. NEVER leave the stove unattended on high settings.

Overfiring Caused From Improper Maintenance

Strictly adhere to all maintenance requirements at frequent intervals as prescribed in this manual including cleaning of flue and stove. Should either fuel loading door or glass gaskets become worn or damaged, they should be replaced.

Overfiring Caused From Improper Fuel

This appliance is approved for use with natural dry well-seasoned wood only (ask your authorized dealer what are approved fuels for your area). Do not burn garbage, particleboard scraps, or pressed logs because they can produce conditions that will deteriorate metal. Do not overload or use kindling wood or mill ends as primary fuel as this may cause overfiring.


SPECIFICATIONS - Model C11000HT

- Flue position..... Top
- Flue collar size6" (152 mm)
- Approx. burn time..... 6 to 8 hours
- Maximum burn rate87,301 BTU
- EPA BTU Range.....11,500 – 55,000 BTU
- Emissions Rate (grams/hr).....4.42 grams
- Maximum Log length18" (457 mm)
- Firebox Size.....1.12 cu. feet
- Loading.....Front & Side

- Width (overall).....23 3/4" (604 mm)
- Depth (overall).....15 5/16" (389 mm)
- Height (to flue)30" (762 mm)
- Height (to stove top).....27 1/4" (693 mm)
- Back to centerline of flue6 7/16" (163 mm)
- Approx. weight with brick.....~280 lbs. (140 kg)


Note: Dimensions shown are approximate only (+/- 1/4").

FRONT VIEW *

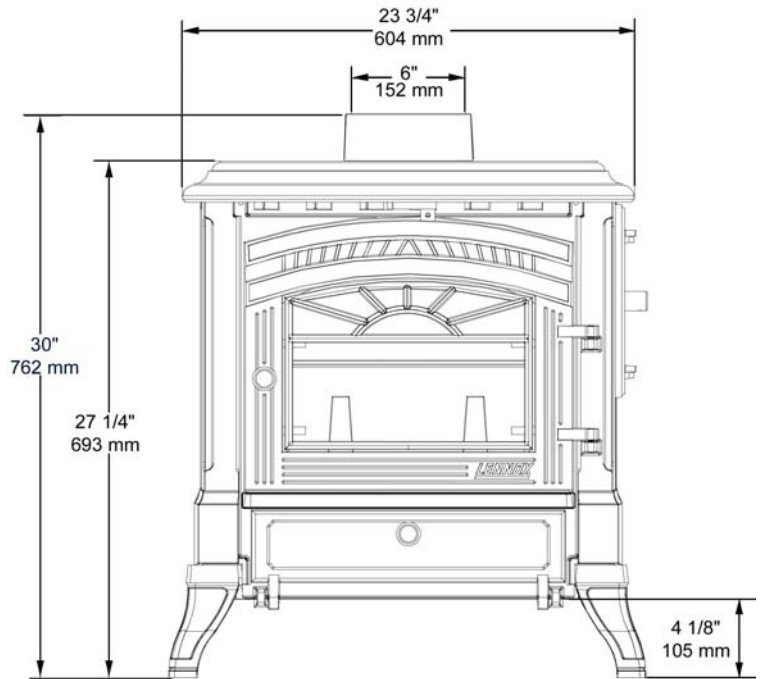


** Shown with optional window trim*

SIDE VIEW

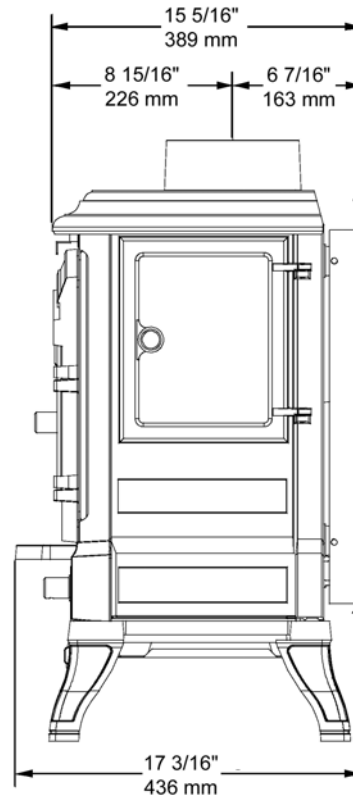


SPECIFICATIONS - Model CI2000HT

- Flue position..... Top
- Flue collar size6" (152 mm)
- Approx. burn time..... 6 to 8 hours
- Maximum burn rate96,662 BTU
- EPA BTU Range.....11,923 – 60,897 BTU
- Emissions Rate (grams/hr).....2.72 grams
- Maximum Log length22" (559 mm)
- Firebox Size..... 1.97 cu. feet

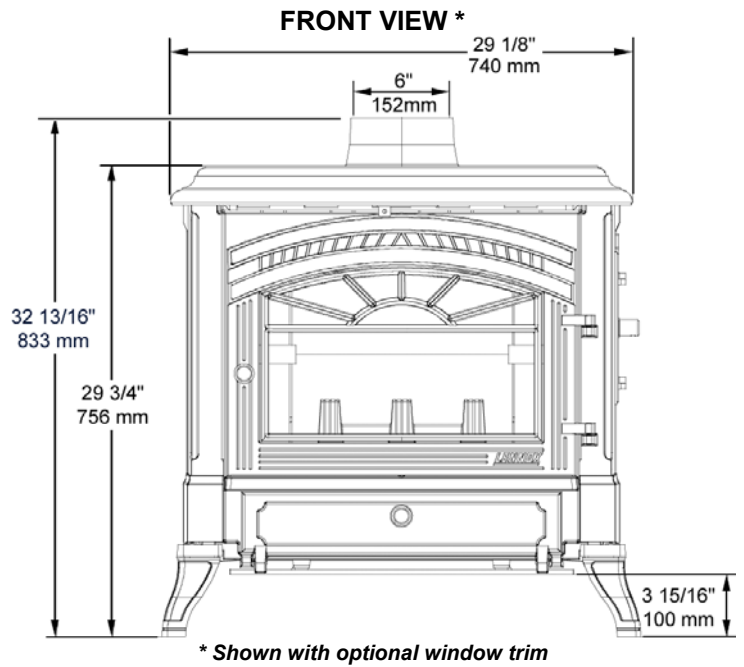

- Loading..... Front & Side
- Width (overall).....29 1/8" (740 mm)
- Depth (overall)..... 18 3/4" (476 mm)
- Height (to flue)32 13/16" (833 mm)
- Height (to stove top).....29 3/4" (756 mm)
- Back to centerline of flue 7 11/16" (195 mm)
- Approx. weight with brick.....~410 lbs. (205 kg)

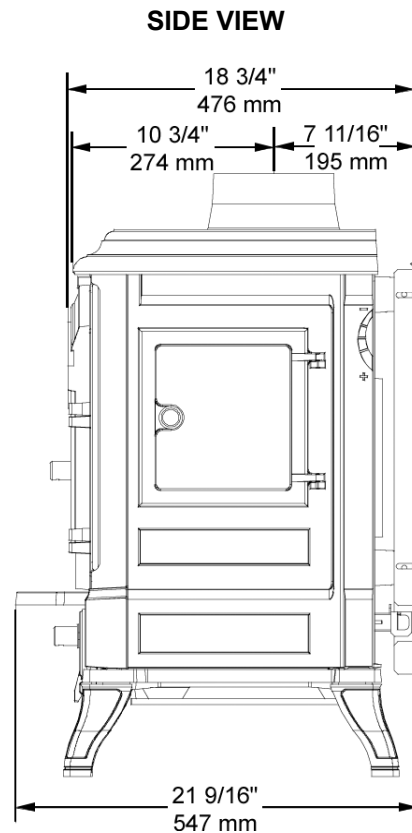

Note: Dimensions shown are approximate only (+/- 1/4").

REPLACEMENT PARTS - Models: CI1000HT & CI2000HT


PART # (ITEM #)	DESCRIPTION	WHERE USED See Note
40M5701 (◆31)	Air Column Set, Left & Right (Includes Gaskets & Screws)	CI1000HT
40M6901 (◆32)	Air Column Set, Left & Right (Includes Gaskets & Screws)	CI2000HT
40M2301 (◆33)	Air Deflector (Air Wash), Upper (Includes Hardware)	CI1000HT
40M9801 (◆34)	Air Deflector (Air Wash), Upper (Includes Hardware)	CI2000HT
40M2101 (◆35)	Ashlip, Charcoal, Painted (Includes Gasket & Screws)	CI1000HT
40M8601 (◆35)	Ashlip, Charcoal, Painted (Includes Screws)	CI2000HT
40M3901 (◆36)	Ashpan Assembly	CI1000HT
41M0501 (◆36)	Ashpan Assembly	CI2000HT
40M3601	Back, Steel Stove (Includes Hardware)	CI1000HT
41M0301	Back, Steel Stove (Includes Hardware)	CI2000HT
40M5101 (◆37)	Baffle Assembly, ceramic fiber brick (Baffle Box)	CI2000HT
41M0401 (◆38)	Channel Assembly, Start-Up Air (Includes Gasket And Hardware)	CI2000HT
41M0101	Clip Set, Glass (Includes 4 Ea. Gaskets, Screws & Clips)	CI1000HT & CI2000HT
40M2701 (◆39)	Collar Kit, Charcoal Replacement Flue (Includes Gasket & Hardware)	CI1000HT
40M9001 (◆40)	Collar Kit, Charcoal Replacement Flue (Includes Gasket & Hardware)	CI2000HT
40M0701 (◆3)	Door, Ashpan, Charcoal (Handle Receiver Not Included)	CI1000HT
40M4301 (◆4)	Door, Ashpan, Charcoal (Handle Receiver Not Included)	CI2000HT
40M1701 (◆1)	Door, Firebox, Charcoal (Handle Receiver Not Included)	CI1000HT
40M8201 (◆1)	Door, Firebox, Charcoal (Handle Receiver Not Included)	CI2000HT
40M1201 (◆2)	Door, Side Loading, Charcoal (Handle Receiver Not Included)	CI1000HT
40M7801 (◆2)	Door, Side Loading, Charcoal (Handle Receiver Not Included)	CI2000HT
40M3501 (◆47)	Draft Module, Air Intake (Slide Assembly) Includes Gasket & Hardware	CI1000HT
41M0201 (◆48)	Draft Module, Air Intake (Slide Assembly) Includes Gasket & Hardware	CI2000HT
41M3901 (◆12)	Firebrick, Left	CI1000HT
41M3801 (◆13)	Firebrick, Lower Rear	CI1000HT
41M4001 (◆14)	Firebrick, Right	CI1000HT
41M3701 (◆15)	Firebrick, Baffle (vermiculite)	CI1000HT
41M4101 (◆16)	Firebrick, Upper Rear	CI1000HT
41M5501 (◆5)	Firebrick, Bottom Center	CI2000HT
41M4901 (◆6)	Firebrick, Bottom Side (left or right)	CI2000HT
41M5001 (◆7)	Firebrick, Left Lower	CI2000HT
41M5101 (◆8)	Firebrick, Left Upper	CI2000HT
41M5401 (◆9)	Firebrick, Lower Rear	CI2000HT
41M5201 (◆10)	Firebrick, Right Lower	CI2000HT
41M5301 (◆11)	Firebrick, Upper Rear	CI2000HT
40M7201 (◆17)	Frame, Fuel Grate (bottom)	CI1000HT
40M9301 (◆18)	Frame, Fuel Grate (bottom)	CI2000HT

REPLACEMENT PARTS - Models: CI1000HT & CI2000HT


PART # (ITEM #)	DESCRIPTION	WHERE USED See Note
40M4501	Gasket Kit, 6 mm X 156cm (14979) For Air Intake Slide & Glass & 4 Ea. 6mm Glass Clip Gaskets (31856)	CI1000HT & CI2000HT
40M0201	Gasket Kit, Ashpan Door Rope (8mm Dia. X 97 cm)	CI1000HT
40M4201	Gasket Kit, Rope (10mm Dia. X 146cm) Ashpan Door-CI2000HT,Side & Front Firebox Door-CI1000HT	CI1000HT & CI2000HT
40M4401	Gasket Kit, Rope (12mm Dia. X 177 Cm) Front & Side Door CI200*	CI2000HT
40M4901 (♦19)	Gasket Set, Air Column, 70mm X 45mm (Also Includes Start Up Air Channel - Model CI2000HT Only)	CI1000HT & CI2000HT
41M3601	Gasket, Flue Outlet	CI1000HT
40M5401	Glass, Replacement, 10.39" X 14.02" (Includes Gasket)	CI1000HT
41M0801	Glass, Replacement, 18.82" X 12.52" (Includes Gasket)	CI2000HT
40M4001 (♦20)	Grate Support Bar, Fuel	CI1000HT
40M1301 (♦21)	Grate, Ash Removal	CI1000HT
40M2901 (♦22)	Grate, Fuel	CI1000HT
40M9601 (♦23)	Grate, Fuel	CI2000HT
40M5301 (♦24)	Hinge Pin Set, Ashpan Door (Includes 2 Hinge Pins, 2 Acorn Nuts & 2 Washers)	CI1000HT & CI2000HT
40M4101 (♦25)	Hinge Pin Set, Firebox Door (Includes 2 Hinge Pins, 2 Acorn Nuts & 4 Washers)	CI1000HT
40M5601 (♦26)	Hinge Pin Set, Firebox Door (Includes 2 Hinge Pins, 2 Acorn Nuts & 4 Washers)	CI2000HT
40M5801 (♦27)	Hinge Pin Set, Side Door (Includes Hinge Pins, 2 Acorn Nuts & 2 Washers)	CI1000HT & CI2000HT
41M0901 (♦28)	Leg, Front Left, Charcoal (Includes Gasket & Hardware)	CI1000HT & CI2000HT
40M9501 (♦28)	Leg, Front Right, Charcoal (Includes Gasket & Hardware)	CI1000HT & CI2000HT
41M3101 (♦28)	Leg, Right & Left Rear, Charcoal (Includes Gasket & Hardware)	CI1000HT & CI2000HT
40M2801 (♦29)	Log Guard (W/ 2 Andirons)	CI1000HT
40M9701 (♦30)	Log Guard (W/ 3 Andirons)	CI2000HT
40M68	Paint, Touch-Up Spray (Spray, Charcoal) 1 Spray Can	CI1000HT & CI2000HT
40M6201 (♦41)	Poker, Fire	CI1000HT & CI2000HT
40M5201 (♦42)	Receiver Assembly, Ashpan Door Handle (Includes Latch)	CI1000HT
40M0301 (♦42)	Receiver Assembly, Ashpan Door Handle (Includes Latch)	CI2000HT
40M1001 (♦42)	Receiver Assembly, Firebox Door Handle (Includes Latch)	CI1000HT & CI2000HT
40M3801 (♦42)	Receiver Assembly, Side Door Handle (Includes Latch)	CI2000HT
40M6101 (♦42)	Receiver Assembly, Side Door Handle (Includes Latch)	CI1000HT
41M5601 (♦49)	Retainer Set, Firebrick (Includes 1 Left, 1 Right & 2 Rear Firebrick Retainers & Hardware)	CI2000HT
41M4201	Retainer, Firebrick Steel	CI1000HT
40M6001 (♦43)	Secondary Air Tube Kit (Includes Screws)	CI1000HT
40M0101 (♦44)	Secondary Air Tube Kit (Includes Screws & Washers)	CI2000HT
41M1001 (♦45)	Tool, Ashpan Removal / Air Control	CI1000HT & CI2000HT
40M5501 (♦46)	Tool, Removable Door Opener	CI1000HT & CI2000HT
41M0601	Tube, Front Air Feed	CI2000HT
♦ The numbers in parenthesis correspond to the following component diagrams:		

REPLACEMENT PARTS - Models: CI1000HT & CI2000HT


(♦1) Front Firebox Door
(CI1000HT & CI2000HT Series)

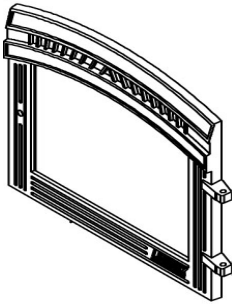


(♦4) Ashpan Door
(CI2000HT Series)

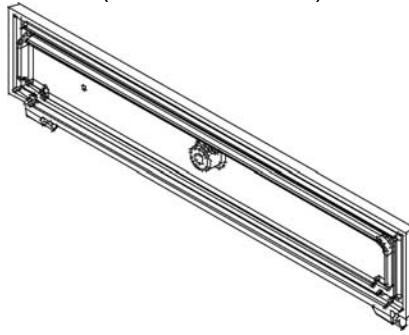


(♦7) Left Lower Firebrick
(CI2000HT Series)
7.87" / 200 mm

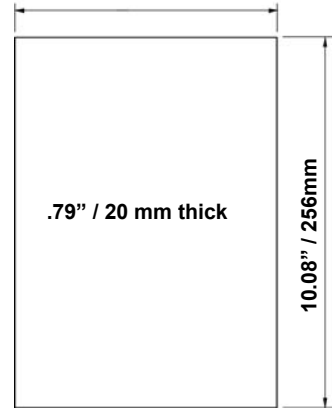


(♦2) Side Loading Door
(CI1000HT Series)

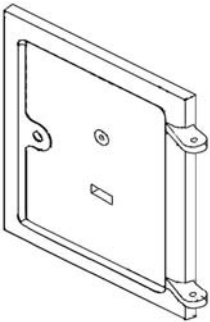


(♦5) Bottom Center Firebrick
(CI2000HT Series)

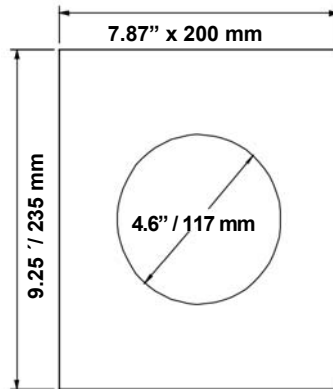


(♦8) Upper Left Firebrick
(CI2000HT Series)
10.43" / 265 mm

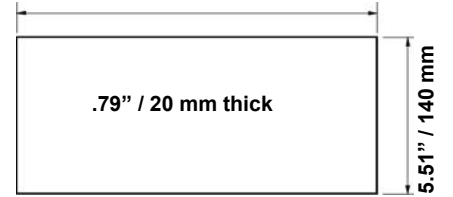


(♦2) Side Loading Door
(CI2000HT Series)

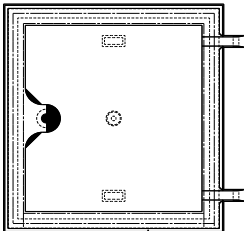


(♦6) Bottom Side Firebrick
(CI2000HT Series)

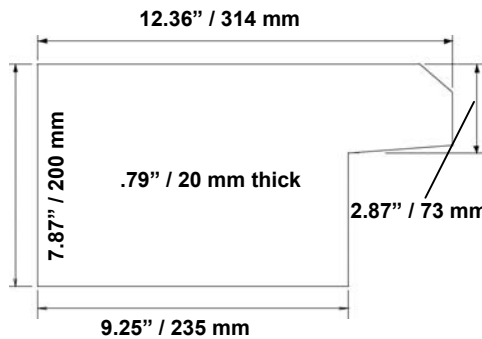

(♦9) Lower Rear Firebrick
(CI2000HT Series)

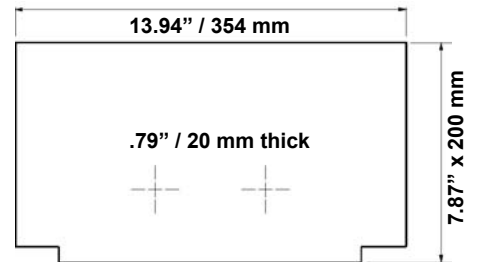


(♦3) Ashpan Door
(CI1000HT Series)

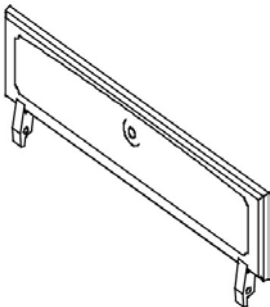

REPLACEMENT PARTS - Models: CI1000HT & CI2000HT

(♦10) Right Lower Firebrick
(CI2000HT Series)

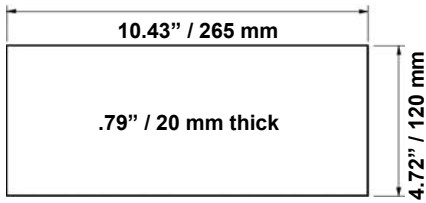


(♦14) Right Firebrick
(CI1000HT Series)


8.47\"/>




(♦17) Fuel Grate Frame
(CI1000HT Series)

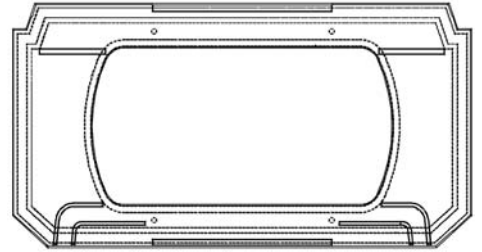


(♦11) Upper Rear Firebrick
(CI2000HT Series)

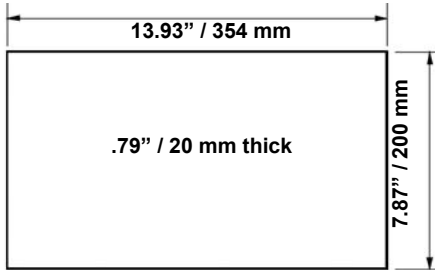


(♦18) Fuel Grate Frame
(CI2000HT Series)

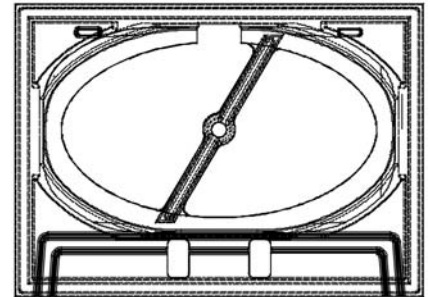


(♦12) Left Firebrick
(CI1000HT Series)

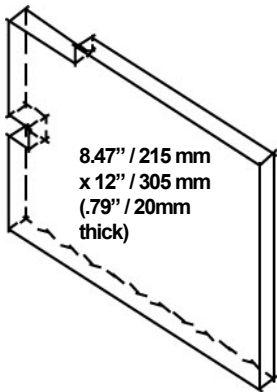


(♦15) Baffle Firebrick
(above tubes on ceiling)
(CI1000HT Series)

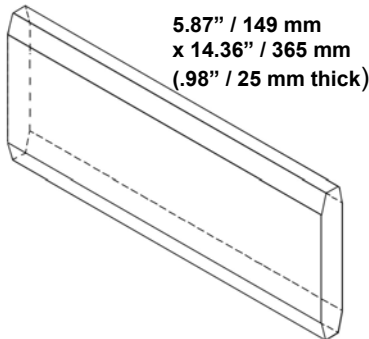


(♦19) Air Column Gasket
(CI1000HT & CI2000HT Series)

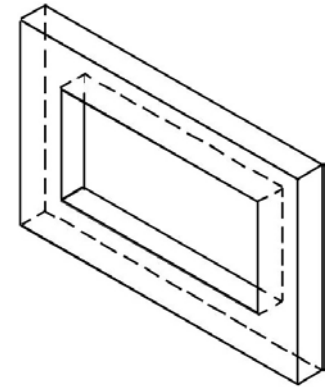


(♦13) Lower Rear Firebrick
(CI1000HT Series)

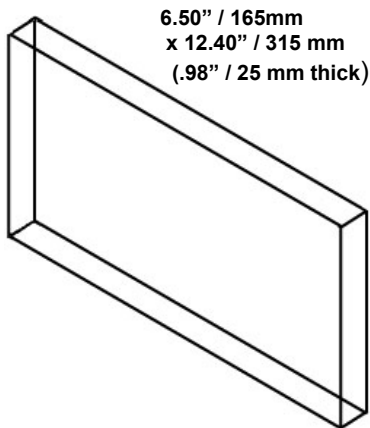

(♦16) Upper Rear Firebrick
(CI1000HT Series)

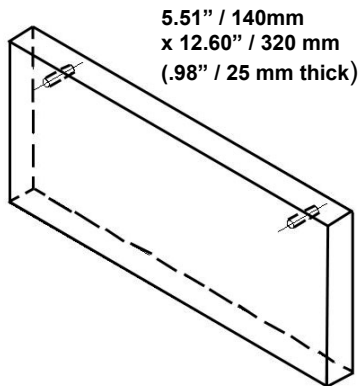

(♦19) Start-up Air Column Gasket
(CI2000HT Series)

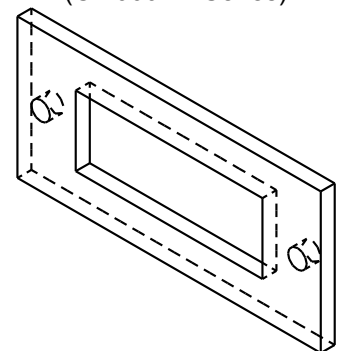


REPLACEMENT PARTS - Models: CI1000HT & CI2000HT


(♦20) Fuel Grate Support Bar
(CI1000HT Series)




(♦21) Ash Removal Grate
(CI1000HT Series)

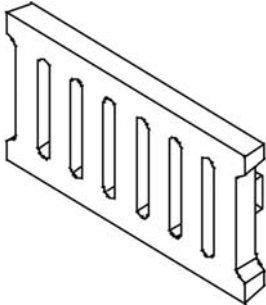

(♦22) Fuel Grate
(CI1000HT Series)

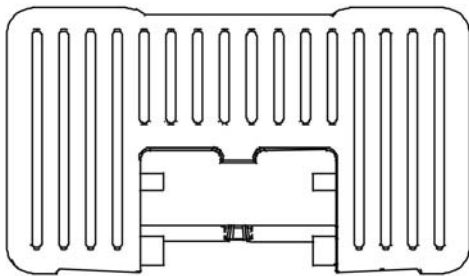


(♦23) Fuel Grate
(CI2000HT Series)

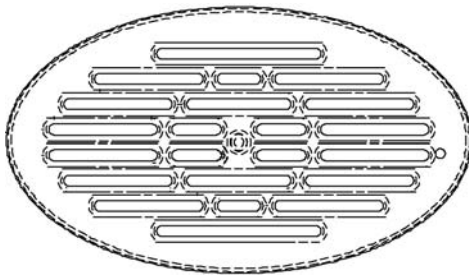


(♦24) Ashpan Door Hinge Pin
(CI1000HT & CI2000HT Series)



 (♦25) Front Firebox Door Hinge Pin
(CI1000HT Series)



 
(♦26) Front Firebox Door Hinge Pin
(CI2000HT Series)




(♦27) Side Door Hinge Pin
(CI1000HT & CI2000HT Series)




(♦28) Stove Leg
(CI1000HT & CI2000HT Series)

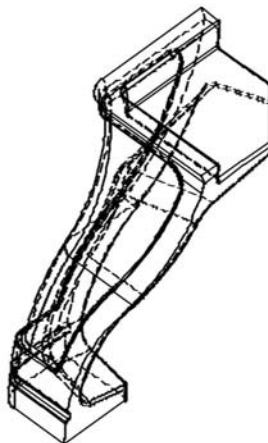


(♦29) Log Guard
(CI1000HT Series)

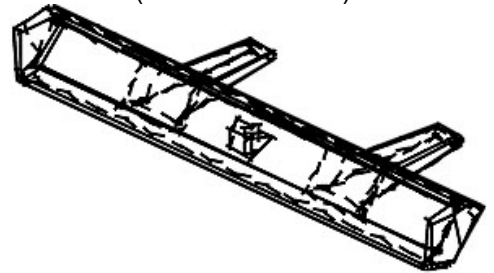


(♦30) Log Guard
(CI2000HT Series)

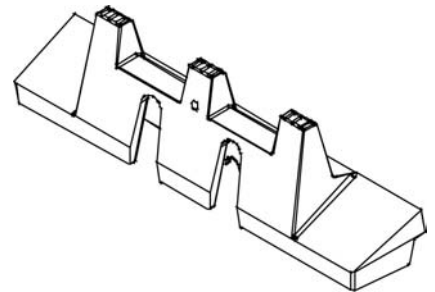

(♦31) Left Air Column Assembly
(CI1000HT Series)

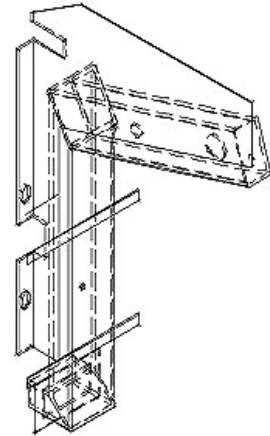


(♦31) Right Air Column Assembly
(CI1000HT Series)

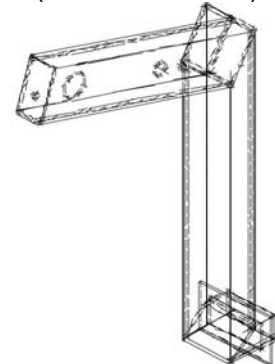


REPLACEMENT PARTS - Models: CI1000HT & CI2000HT


(♦32) Left Air Column Assembly
(CI2000HT Series)

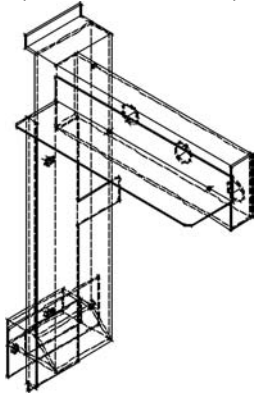


(♦35) Ashlip
(CI1000HT & CI2000HT Series)

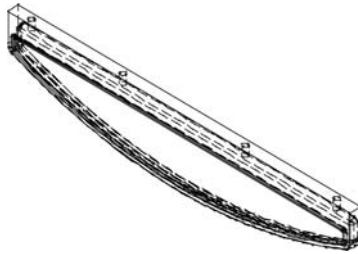


(♦39) Flue Outlet Collar
(CI1000HT Series)

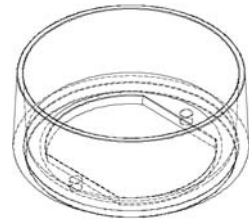



(♦36) Ashpan
(CI1000HT & CI2000HT Series)

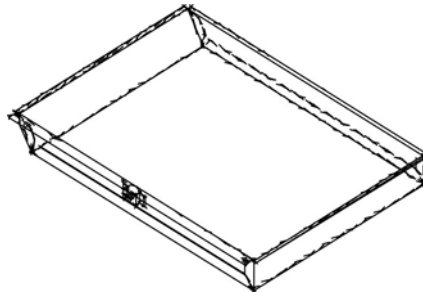

 
(♦40) Flue Outlet Collar
(CI2000HT Series)



(♦32) Right Air Column Assembly
(CI2000HT Series)

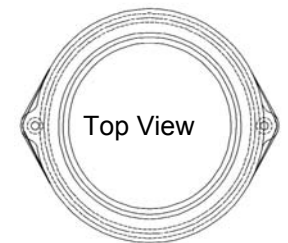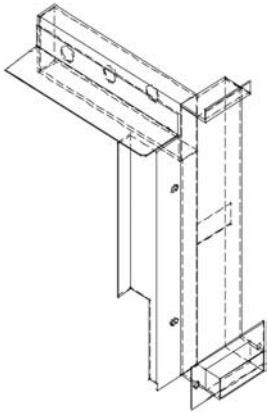


(♦37) Baffle Assembly, Ceramic Fiber Brick (above secondary air tubes)
(CI2000HT Series)

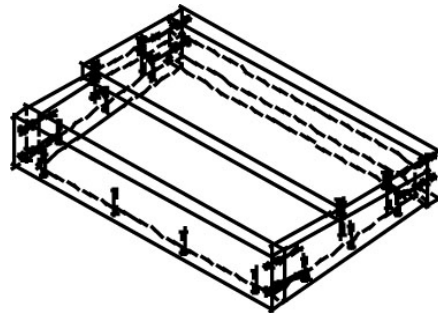


(♦41) Fire Poker
(CI1000HT & CI2000HT Series)




(♦33) Upper Air Deflector
(CI1000HT Series)

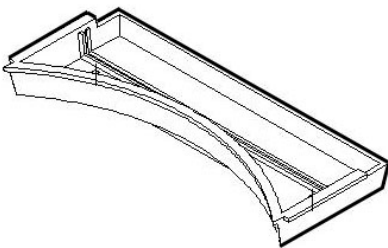


(♦42) Ashpan, Side Door and Firebox Door Handle Receivers
(CI1000HT & CI2000HT Series)

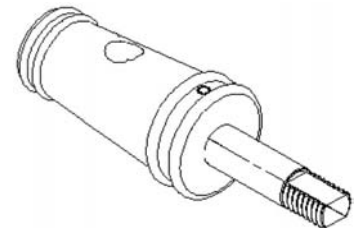

(♦34) Upper Air Deflector
(CI2000HT Series)

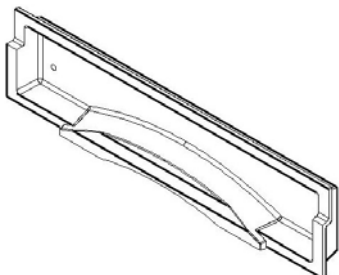


(♦38) Start-up Air Channel Assembly
(CI2000HT Series)

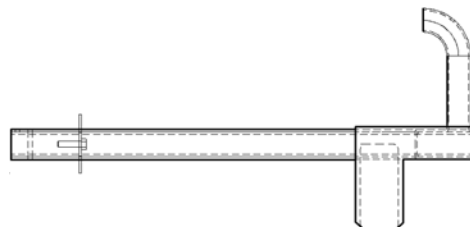


REPLACEMENT PARTS - Models: CI1000HT & CI2000HT


(♦43) Secondary Air Tube Assembly
(CI1000HT Series)

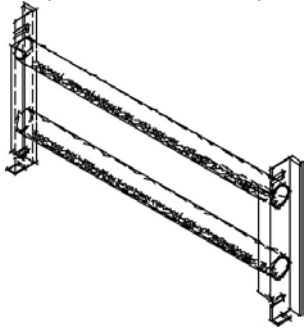


(♦45) Air Control/Ash Pan Removal Tool
(CI1000HT & CI2000HT Series)

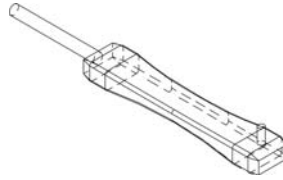

(♦48) Draft Module (Air Intake Slide)
(CI2000HT Series)

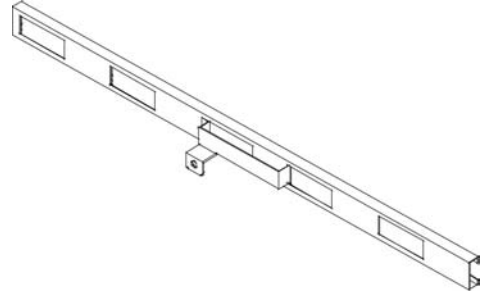


(♦44) Secondary Air Tube Assembly
(CI2000HT Series)

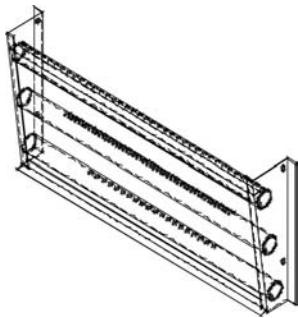


(♦46) Removable Door Opener Tool
(CI1000HT & CI2000HT Series)




(♦49) Rear Firebrick Retainers
(CI2000HT Series)
Side Retainers Not Shown

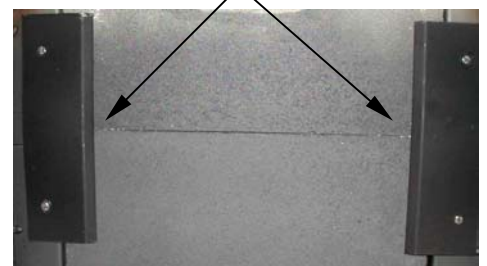

(♦47) Draft Module (Air Intake Slide)
(CI1000HT Series)

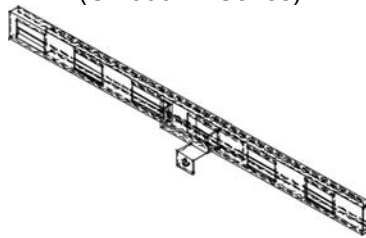


CI1000HT Firebrick Placement Diagram

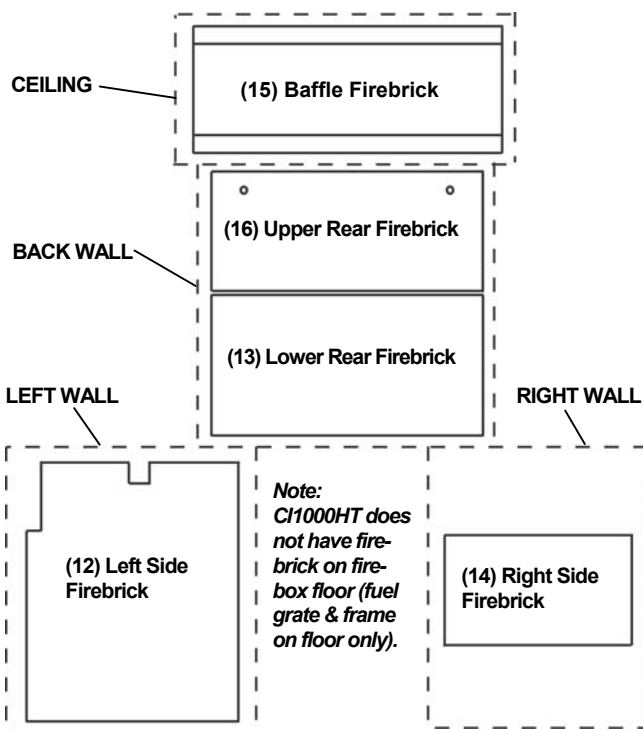

CI2000HT Firebrick Placement Diagram

Note: The refractory baffle assembly (37) on ceiling (above tubes), not shown.

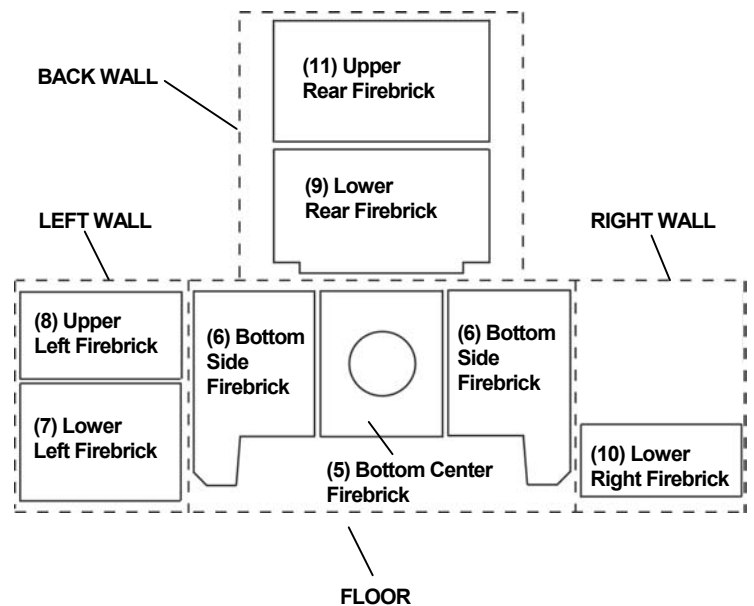

OPTIONAL ACCESSORIES - Models: CI1000HT & CI2000HT

Catalog #	Model	Description	Stove Model
H0459	WTK-CI10	Window Trim Kit, Charcoal	CI1000HT
H0455	WTK-CI20	Window Trim Kit, Charcoal	CI2000HT

Window Trim Kit – CI1000HT & CI2000HT



LABEL, SAFETY / LISTING – Model CI1000HT

CONTACT YOUR LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION IN YOUR AREA
CONTACTEZ LE BUREAU DE LA CONSTRUCTION OU LE BUREAU DES INCENDIES AU SUJET DES RESTRICTIONS ET DES INSPECTIONS D'INSTALLATION DANS VOTRE VOISINAGE

Listed Room Heaters, Solid Fuel Type / Appareil de Chauffage de Pièce, de Combustibles Solides
FOR USE WITH SOLID WOOD FUEL ONLY / POUR USAGE AVEC LE BOIS SEULEMENT



Serial No. / Numéro de Série

Manufactured for / Fabriqué pour:
LENNOX HEARTH PRODUCTS
1110 West Taft Avenue
Orange, CA 92865

Tested & Listed By Beaverton Oregon USA
OMNI-Test Laboratories, Inc.
Report No. / Numéro de Rapport 132-S-03-2

Model / Modèle: CI 1000HT

Tested To / Testé à: UL 1482, ULC-S627

"PREVENT HOUSE FIRES"

Install and use only in accordance with manufacturer's installation instructions and your local building codes.

CAUTION: Special methods are required when passing chimney through a wall or ceiling, refer to installation instructions and local building codes. Do not pass chimney connector through a combustible surface. Do not connect this unit to a chimney flue serving another appliance.

NOTE: Replace glass only with 5mm ceramic. Operate with the doors closed.

"PRÉVENTION DES FEUX DE MAISON"



Installez et utilisez en accord avec les instructions d'installation du fabricant et des codes locaux.

AVIS: Prenez des précautions spéciales lorsque vous faites passer une cheminée à travers un mur ou un plafond, référez-vous aux instructions d'installation et aux codes locaux de la construction. Ne pas faire passer le tuyau de cheminée à travers une surface combustible. Ne pas connecter cet appareil à un tuyau de cheminée servant un autre appareil.

NOTE: Remplacez la vitre avec une céramique de 5mm seulement. Opérez avec les porte fermée.

Floor protector must be a 1/2" minimum thickness, non-combustible material (having an equal or better insulating value (lower k Value) of k=.84 BTU/in Ft² Hr °F. It must extend beneath heater, and to the front/sides/rear as indicated.

*In Canada, required floor protection must be a 1.45" minimum thickness extending 18" (450mm) in front and 8" (200mm) on all other sides of the appliance.

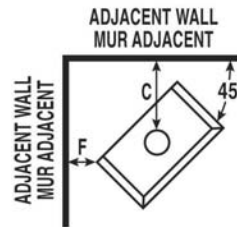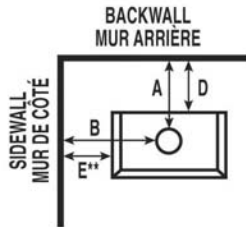

Le protecteur de plancher doit être d'une épaisseur minimum de 1/2", d'un matériel incombustible ayant une valeur d'isolation de k=.84 BTU/in Ft² Hr °F. Il doit s'étendre en dessous de l'appareil et au devant, aux côtés et à l'arrière de l'appareil comme indiqué.

*Au Canada, la protection de sol nécessaire doit avoir une épaisseur de minimum 1.45" et dépasser l'avant de l'appareil de 18" (450mm) et les autres côtés de 8" (200mm).

Installation		Clearance	Chimney & Connector	Dimensions					
				A	B	C	D	E**	F**
U.S. (in inches)	Residential	Standard	Note: 1	27.50	27.00	27.00	24.00	18.00	19.00
	Residential	Reduced	Note: 1, 2	21.50	27.00	19.00	18.00	18.00	11.00
Canada (en mm)	Résidentielle	Standard	Note: 1	698	686	686	610	457	483
	Résidentielle	Réduits	Note: 1, 2	546	686	483	457	457	279

** "E" dimension is measured to side of stove below the projection of outer top.
Note 1: 6 inch diameter, single wall, minimum 24 MSG black or 25 MSG blued steel connector pipe with factory-built chimney listed to either UL 103HT or ULC S629.
Note 2: Pipe shield for 6" connector with 1 inch clearance to pipe.

** Les dimension "E" est mesurées du côté du poêle en dessous de la projection extérieure du haut du poêle.
Note 1: Le tuyau connecteur en acier noir de minimum 24 MSG ou en acier bleu de 25 MSG, de 6" de diamètre, pour mur simple, avec cheminée faite en usine, enregistrée sous ULC S-629.
Note 2: Pour la buse de 6", le protecteur doit être positionné à au minimum 1" de celle-ci.

CAUTION: HOT WHILE IN OPERATION. DO NOT TOUCH. CONTACT MAY CAUSE SKIN BURNS. KEEP CHILDREN, CLOTHING, FURNISHINGS AND COMBUSTIBLE MATERIAL A CONSIDERABLE DISTANCE AWAY. SEE NAMEPLATE AND INSTRUCTIONS. DO NOT OVERFIRE. IF HEATER OR CHIMNEY CONNECTOR GLOWS, YOU ARE OVERFIRING. INSPECT AND CLEAN CHIMNEY AND CONNECTOR FREQUENTLY. UNDER CERTAIN CONDITIONS OF USE, CREOSOTE BUILDUP MAY OCCUR RAPIDLY. DO NOT USE GRATE OR ELEVATE FIRE - BUILD WOOD FIRE DIRECTLY ON HEARTH. DO NOT BURN WITH FEED DOORS OPEN. FEED DOORS MUST BE CLOSED DURING FIRING EXCEPT WHEN ADDING FUEL. OPEN COMBUSTION AIR CONTROL BEFORE OPENING FEED DOORS.



ATTENTION: CHAUD LORS DE L'OPÉRATION. NE PAS TOUCHER. LE CONTACT PEUT CAUSER DES BRÛLURES À LA PEAU. GARDEZ LES ENFANTS, LES VÊTEMENTS, LES MEUBLES ET LES MATÉRIAUX COMBUSTIBLES LOIN DE L'ESPACE DÉSIGNÉ DE L'APPAREIL. VOIR L'ÉTIQUETTE ET LES INSTRUCTIONS. NE PAS SURCHAUFFER. SI L'APPAREIL DE CHAUFFAGE OU LE TUYAU DE CHEMINÉE ROUGISSENT, VOUS SURCHAUFFEZ. INSPECTEZ ET NETTOYEZ LA CHEMINÉE ET LE TUYAU CONNECTEUR FRÉQUEMMENT. SOUS CERTAINES CONDITIONS, IL SE PEUT QUE LA CRÉOSOTE S'ACCUMULE RAPIDEMENT. N'ÉLEVEZ PAS LE FEU. BÂTISSEZ LE FEU DE BOIS DIRECTEMENT SUR L'ÂTRE. NE PAS BRÛLER LORSQUE LES PORTE D'OUVERTURE EST OUVERTE. LES PORTE D'OUVERTURE DOIT ÊTRE FERMÉE PENDANT L'USAGE EXCEPTÉ PENDANT QUE VOUS AJOUTEZ DU FEU. OUVREZ LE TUYAU D'AIR AVANT D'OUVRIR LES PORTE D'OUVERTURE.

U.S. ENVIRONMENTAL PROTECTION AGENCY
Certified to comply with July 1990 particulate emission standards.

Date of Manufacture / Date de Fabrication
2002 2003 2004 Jan. Feb. Mar. Apr. May June July Aug. Sept. Oct. Nov. Dec.

DO NOT REMOVE THIS LABEL / NE PAS ENLEVER CETTE ÉTIQUETTE

Made in Belgium by FDL

IGN P/N 775111M, Rev. A

SAFETY/LISTING LABEL – Model CI2000HT

CONTACT YOUR LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION IN YOUR AREA
CONTACTEZ LE BUREAU DE LA CONSTRUCTION OU LE BUREAU DES INCENDIES AU SUJET DES RESTRICTIONS ET DES INSPECTIONS D'INSTALLATION DANS VOTRE VOISINAGE

Listed Room Heaters, Solid Fuel Type / Appareil de Chauffage de Pièce, de Combustibles Solides
FOR USE WITH SOLID WOOD FUEL ONLY / POUR USAGE AVEC LE BOIS SEULEMENT



Serial No. / Numéro de Série

Model / Modèle: CI 2000HT

Manufactured for / Fabriqué pour:
LENNOX HEARTH PRODUCTS
1110 West Taft Avenue
Orange, CA 92865

Tested & Listed By  Beaverton Oregon USA
OMNI-Test Laboratories, Inc.
Report No. / Numéro de Rapport 132-S-05-2

Tested To / Testé à: UL 1482, ULC-S627

"PREVENT HOUSE FIRES"

Install and use only in accordance with manufacturer's installation instructions and your local building codes.

CAUTION: Special methods are required when passing chimney through a wall or ceiling, refer to installation instructions and local building codes. Do not pass chimney connector through a combustible surface. Do not connect this unit to a chimney flue serving another appliance.

NOTE: Replace glass only with 5mm ceramic. Operate with the doors closed.

"PRÉVENTION DES FEUX DE MAISON"


Installez et utilisez en accord avec les instructions d'installation du fabricant et des codes locaux.

AVIS: Prenez des précautions spéciales lorsque vous faites passer une cheminée à travers un mur ou un plafond, référez-vous aux instructions d'installation et aux codes locaux de la construction. Ne pas faire passer le tuyau de cheminée à travers une surface combustible. Ne pas connecter cet appareil à un tuyau de cheminée servant un autre appareil.

NOTE: Remplacez la vitre avec une céramique de 5mm seulement. Opérez avec les porte fermée.

Floor protector must be a 1/2" minimum thickness, non-combustible material (having an equal or better insulating value (lower k Value) of k=84 BTU/in Ft² Hr °F. It must extend beneath heater, and to the front/sides/rear as indicated.

*In Canada, required floor protection must be 18" (450mm) in front and 8" (200mm) on all other sides of the appliance.

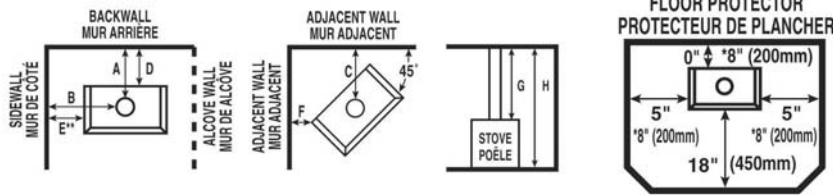

Le protecteur de plancher doit être d'une épaisseur minimum de 1/2", d'un matériel incombustible ayant une valeur d'isolation de k=84 BTU/in Ft² Hr °F. Il doit s'étendre en dessous de l'appareil et au devant, aux côtés et à l'arrière de l'appareil comme indiqué.

*Au Canada, la protection du plancher doit s'étendre de 18" (450mm) en avant et de 8" (200mm) sur tous les autres côtés de l'appareil.

Installation	Clearance	Chimney & Connector	Dimensions							
			A	B	C	D	E**	F**	G	H
U.S. (in inches)	Residential Standard	Note: 1	18.00	32.00	27.00	13.00	20.00	16.00	29.00	60.00
	Residential Reduced	Note: 2	14.50	28.50	18.00	10.00	17.00	7.00	29.00	60.00
	Residential Alcove	Note: 2,3	14.50	28.50	N/A	10.00	17.00	N/A	29.00	60.00
Canada (en mm)	Résidentielle Standard	Note: 1	457	813	686	330	508	406	737	1524
	Résidentielle Réduits	Note: 2	368	724	457	254	864	178	737	1524
	Résidentielle Alcôve	Note: 2,3	368	724	N/A	254	864	N/A	737	1524

** "E" dimension is measured to side of stove below the projection of outer top.
Note 1: 6 inch diameter, single wall, minimum 24 MSG black or 25 MSG blue steel connector pipe with factory-built chimney listed to either UL 103HT or ULC S629.
Note 2: 6 inch diameter listed double wall chimney connector or Type L vent pipe between the stove and chimney.
Note 3: Maximum alcove depth must be no more than 48" (1220mm).

** Les dimension "E" est mesurées du côté du poêle en dessous de la projection extérieure du haut du poêle.
Note 1: Le tuyau connecteur en acier noir de minimum 24 MSG ou en acier bleu de 25 MSG, de 6" de diamètre, pour mur simple, avec cheminée faite en usine, enregistrée sous ULC S-629.
Note 2: Le tuyau connecteur de 6" de diamètre, pour mur double ou un connecteur de cheminée de type L entre le poêle et la cheminée.
Note 3: La profondeur maximum de l'alcove ne peut dépasser 48" (1220mm).

CAUTION: HOT WHILE IN OPERATION. DO NOT TOUCH. CONTACT MAY CAUSE SKIN BURNS. KEEP CHILDREN, CLOTHING, FURNISHINGS AND COMBUSTIBLE MATERIAL A CONSIDERABLE DISTANCE AWAY. SEE NAMEPLATE AND INSTRUCTIONS. DO NOT OVERFIRE. IF HEATER OR CHIMNEY CONNECTOR GLOWS, YOU ARE OVERFIRING. INSPECT AND CLEAN CHIMNEY AND CONNECTOR FREQUENTLY. UNDER CERTAIN CONDITIONS OF USE, CREOSOTE BUILDUP MAY OCCUR RAPIDLY. DO NOT USE GRATE OR ELEVATE FIRE - BUILD WOOD FIRE DIRECTLY ON HEARTH. DO NOT BURN WITH FEED DOORS OPEN. FEED DOORS MUST BE CLOSED DURING FIRING EXCEPT WHEN ADDING FUEL. OPEN COMBUSTION AIR CONTROL BEFORE OPENING FEED DOORS.



ATTENTION: CHAUD LORS DE L'OPÉRATION. NE PAS TOUCHER. LE CONTACT PEUT CAUSER DES BRÛLURES À LA PEAU. GARDEZ LES ENFANTS, LES VÊTEMENTS, LES MEUBLES ET LES MATÉRIAUX COMBUSTIBLES LOIN DE L'ESPACE DÉSIGNÉ DE L'APPAREIL. VOIR L'ÉTIQUETTE ET LES INSTRUCTIONS. NE PAS SURCHAUFFER. SI L'APPAREIL DE CHAUFFAGE OU LE TUYAU DE CHEMINÉE ROUGISSENT, VOUS SURCHAUFFEZ. INSPECTEZ ET NETTOYEZ LA CHEMINÉE ET LE TUYAU CONNECTEUR FRÉQUEMMENT. SOUS CERTAINES CONDITIONS, IL SE PEUT QUE LA CRÉOSOTE S'ACCUMULE RAPIDEMENT. N'ÉLEVEZ PAS LE FEU. BÂTISSEZ LE FEU DE BOIS DIRECTEMENT SUR L'ÂTRE. NE PAS BRÛLER LORSQUE LES PORTE D'OUVRETTURE EST OUVERTE. LES PORTE D'OUVRETTURE DOIT ÊTRE FERMÉE PENDANT L'USAGE EXCEPTÉ PENDANT QUE VOUS AJOUTEZ DU FEU. OUVREZ LE TUYAU D'AIR AVANT D'OUVRIR LES PORTE D'OUVRETTURE.

U.S. ENVIRONMENTAL PROTECTION AGENCY
Certified to comply with July 1990 particulate emission standards.

Date of Manufacture / Date de Fabrication

2002	2003	2004	Jan.	Feb.	Mar.	Apr.	May	June	July	Aug.	Sept.	Oct.	Nov.	Dec.
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

DO NOT REMOVE THIS LABEL / NE PAS ENLEVER CETTE ÉTIQUETTE

Made in Belgium by FDL

IGN P/N 775112M, Rev. A

EPA LABELS – CI1000HT and CI2000HT

Manufactured in Belgium for LENNOX HEARTH PRODUCTS
 1110 West Taft Avenue Orange, CA 92865

Model : CI 1000 HT

US ENVIRONMENTAL PROTECTION AGENCY

MEETS EPA PARTICULATE MATTER (SMOKE) CONTROL REQUIREMENTS FOR NONCATALYTIC WOOD HEATERS BUILT ON OR AFTER JULY 1, 1990.

SMOKE

THIS MODEL

EFFICIENCY*

Wood heaters with higher efficiencies cost less to operate
 *(NOT TESTED FOR EFFICIENCY. THE VALUE INDICATED IS FOR SIMILAR NONCATALYTIC WOOD HEATERS.)

HEAT OUTPUT
 11,800 to 55,000 Btu/h

Use this to choose the right size appliance for your needs.
 ASK DEALER FOR HELP

This wood heater will achieve low smoke output and high efficiency only if properly operated and maintained. See owner's manual.

CAUTION:
 Remove this label before you light the fire in the stove

775113M, Rev. NC

Manufactured in Belgium for LENNOX HEARTH PRODUCTS
 1110 West Taft Avenue Orange, CA 92865

Model : CI 2000 HT

US ENVIRONMENTAL PROTECTION AGENCY

MEETS EPA PARTICULATE MATTER (SMOKE) CONTROL REQUIREMENTS FOR NONCATALYTIC WOOD HEATERS BUILT ON OR AFTER JULY 1, 1990.

SMOKE

THIS MODEL

EFFICIENCY*

Wood heaters with higher efficiencies cost less to operate
 *(NOT TESTED FOR EFFICIENCY. THE VALUE INDICATED IS FOR SIMILAR NONCATALYTIC WOOD HEATERS.)

HEAT OUTPUT
 11,923 to 60,897 Btu/h

Use this to choose the right size appliance for your needs.
 ASK DEALER FOR HELP

This wood heater will achieve low smoke output and high efficiency only if properly operated and maintained. See owner's manual.

CAUTION:
 Remove this label before you light the fire in the stove

775110M, Rev. NC

OWNERSHIP RECORDS

Dealer's Name:

Dealer's Address:

City:

State:

Zip Code:

Serial Number:

Date of Purchase:

Date Installed:

Notes:

SERVICE AND MAINTENANCE LOG

Service Date	Service Technician	Service Description
-----------------	-----------------------	------------------------

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

LENNOX reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinued colors, styles and products.
Consult your local distributor for fireplace code information.



HEARTH PRODUCTS

Printed in U.S.A © LENNOX HEARTH PRODUCTS 2002
P/N 775,080M Rev. F, 3/2005

1110 West Taft Avenue • Orange, CA 92865