

For the complete PDF manual
please visit www.LaserPros.com.



Service Manual

Optra Color 1200™

5050-001

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***

LEXMARK™

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Edition: July 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22/035-3, 740 New Circle Road N.W., Lexington, Kentucky 40550, U.S.A. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark,FontVision, MarkVision, and Optra are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Other trademarks are the property of their respective owners.

© Copyright Lexmark International, Inc. 1998.

All rights reserved.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

Contents

Safety Information	ix
Safety Notice	ix
General Information	1-1
Maintenance Approach	1-1
Tools	1-1
Serial Number	1-2
Abbreviations	1-3
Standard Features	1-4
Options	1-5
Printer Supplies	1-6
Cross Section of Printer	1-6
Operational Theory	1-8
Electrophotographic Process	1-8
Photoconductor Drum	1-10
Electrical Charge Unit	1-10
Exposure Assembly	1-11
Developer Assembly	1-11
Transfer Assembly	1-12
Cleaning Assembly	1-13
Paper Feed, Transfer, and Fusing	1-14
Print Modes	1-26
Clearing Paper Jams	1-27
Printing From the Multipurpose Feeder	1-28
Diagnostic Information	2-1
Part Numbers	2-1
Adjustments and Procedures Following Parts Replacement	2-1
Start	2-2
Initial Check	2-2
Printer Messages	2-3
Service Error Message Table	2-4
Status Messages	2-11
Attendance Messages	2-14
Symptom Table	2-24
Service Checks	2-28
Fuser Service Check	2-28
Color Print Unit Missing Service Check	2-29
Drive 1 DC Motor Service Check	2-29
Drive 2 Stepper Motor Service Check	2-30

Transport Belt/BUD Service Check	2-30
Optional Paper Feed Service Check	2-31
Paper Jam Service Check	2-31
Paper Carrying Service Check	2-33
Paper Exit FU/FD Service Check	2-35
Paper Low/Empty Tray 1, 2, 3 Service Check	2-36
Paper Tray Missing/Size Service Check	2-36
Remove Paper Sensor Service Check	2-37
Power Supply Service Check	2-37
Marks on Paper Service Check	2-38
Image Quality Troubleshooting	2-39
Print Quality Problems	2-39
Sensor Service Check	2-46
Diagnostic Aids	3-1
Power-On Self Test Sequence	3-1
Using the Operator Panel	3-2
Operator Panel Buttons	3-3
Printing the Menu Settings	3-4
Operator Menu Disabled	3-4
Menu Overview	3-4
Diagnostic Mode	3-6
Diagnostic Menu Group	3-6
Setting Printer top Margin	3-10
Color Calibration of Printer	3-13
Print Tests	3-15
Input/Output Source Print Tests	3-15
Print Quality Pages	3-16
LCD Hardware Test	3-17
Button Test	3-17
DRAM Memory Test	3-17
Std Parallel Wrap Test and Parallel X Wrap Test	3-18
Serial Wrap Tests	3-19
Quick Disk Test	3-20
Disk Test/Clean	3-21
Setting the Page Count	3-23
Viewing the Permanent Page Count	3-23
Viewing and Resetting the Drum Counters	3-24
Calibrating the Transparency Sensor	3-24
Viewing the Error Log	3-25
Clearing the Error Log	3-26
US / Non-US	3-27
Exiting Diagnostics Mode	3-27

Test Print 1	3-28
Test Print 2	3-29
Repair Information	4-1
Precautions for Disassembly and Cleaning	4-1
Handling the Printed Circuit Boards with MOS ICs	4-1
Precautions for Handling the Drum Cartridge	4-2
Parts not to be touched	4-3
Adjustment Procedures	4-3
Transfer Belt Tracking Adjustment	4-3
Thermistor Rank Adjustment	4-5
LED Head Light Quantity Adjustment	4-5
Top Margin for Color Mode	4-5
Top Margin for Black and White Mode	4-6
Overhead Projection Sheet Detection Sensor Adjustment	4-6
Printhead Adjustments (X, Y, and Theta)	4-6
Removal Procedures	4-10
LED Head Removal	4-10
Transfer Belt Unit Removal	4-11
Paper Remaining Sensor Removal	4-12
Belt Unit Drive Frame, BUD Motor, BUD Sensor Removal	4-12
Engine Board (PG14 ENG BB) Removal	4-14
Cover Removals	4-15
Head Controller Board (P614 HDCONT) Removal	4-21
Operator Panel Removal	4-22
MPF Removal	4-23
Paper Feed Roller Removal	4-24
MPF Roller	4-25
F Pad Removal	4-26
Registration Sensor Removal	4-26
MPF Paper Empty Sensor Removal	4-27
Humidity Sensor Removal	4-27
Printer Controller (614 PRCONT) Removal	4-28
HVU1(U) Removal	4-29
Drive 2 (U) and Face Up/Face Down (FUD) Solenoid Removal	4-29
Fuser Removal	4-30
Fuser Thermostat, Fuse, and Thermistor Removals	4-34
Fuser Press Roller Removal	4-37
Fuser Pawl Removal	4-39
Fuser Heater Removal	4-42
Fuser Heat Roller and Gear H, Gear 30 Removal	4-44
Heater Drive Board, 230 V Only	4-45
HVU 2 Removal	4-46

Power Supply Switch Removal	4-46
Power Supply Board (P614-MPS) Removal	4-47
Size Sensor Board (P611-PSZ) Removal	4-48
Toner Remaining Sensor, Drum Gear Sensor Removal	4-48
Drive 1 Removal	4-50
Drum Drive Gear Sensor (P614-DGS) Removal	4-51
Registration Roller Removal	4-52
OHP Sensor Removal	4-57
Paper Exit Sensor Removal	4-59
Output Bin Full Sensor Removal	4-59
RIP Controller Card Removal	4-61
Paper Face Up/Face Down (FUD) Delivery Sensor Removal ..	4-61
Optional Paper Feeder Removal Procedures	4-62
Outer Cover Removal	4-62
Size Sensor Board (P611-PSZ) Removal	4-63
Drive Board (P614-2/3 DRIV) Removal	4-64
Paper Feed Motor 2 (PM42) Removal	4-64
Paper Feed Roller Removal	4-65
Paper Remaining Sensor Removal	4-66
Paper Feed Clutch, Solenoid, and Transfer Roller Removal ..	4-67
Connector Locations	5-1
Paper Handling	5-1
Cross Section of Printer	5-2
Electronic Board Layout	5-4
Electrical Components	5-5
Sensors	5-6
Power Supply Board (614-MPS-E)	5-7
High Voltage Unit 1 Board (614-HVU1)	5-8
High Voltage Unit 2 Board (P614-HVU2)	5-9
Optional Paper Feed Controller Board (P614-2/3 DRIV)	5-10
Printhead Controller Board (P614-HD CONT)	5-11
Printer Controller Board (P614-PRCONT)	5-12
Size Sensor Board (P611-PSZ)	5-13
RIP Controller Card	5-14
Preventive Maintenance	6-1
Maintenance Kit	6-1
Periodic Maintenance	6-2
Lubricants and Cleaners	6-2
Parts Catalog	7-1
How to Use This Parts Catalog	7-1
Assembly 1: Covers	7-2

Assembly 2: Paper Exit 7-6
Assembly 3: Upper Unit 7-8
Assembly 4: Base 1..... 7-14
Assembly 5: Base 2..... 7-18
Assembly 6: Feeder 7-26
Assembly 7: Electrical 7-30
Assembly 8: I/F Controller..... 7-36
Assembly 9: Fuser..... 7-38
Assembly 10: Cassette 7-42
Assembly 11: Optional Feeder Base..... 7-44
Assembly 12: Optional Feeder Paper Feed 7-50
Assembly 13: Optional Features..... 7-52

For the complete PDF manual
please visit www.LaserPros.com.