

**OPERATION &
MAINTENANCE MANUAL**

**Alpha One
V8 Models**

©1994, Brunswick Corporation

90-821051951 1294

IDENTIFICATION RECORD

Please Record the Following Information

-
1. Engine Model and Horsepower

 2. Engine Serial Number

 3. Transom Assembly Serial Number

 4. Stern Drive Unit Serial Number and Gear Ratio

 5. Propeller Number

 6. Propeller Pitch

 7. Hull Identification Number (HIN) Purchase Date

 8. Boat Manufacturer Boat Model Length

SERIAL NUMBERS

The serial numbers are the manufacturer's keys to numerous engineering details which apply to your MerCruiser® power package. When contacting your Authorized MerCruiser Dealer about service, **always specify model and serial numbers.**

The description and specifications contained herein were in effect at the time this guide was approved for printing. Mercury Marine, whose policy is one of continuous improvement, reserves the right to discontinue models at any time, or to change specifications or designs, without notice and without incurring obligation.

Mercury Marine, Fond du Lac, Wisconsin, U.S.A.

Printed in U.S.A.

©1993, Brunswick Corporation

The following are registered trademarks of Brunswick Corporation: Auto-blend, Jet-Prop, Mariner, Merc, MerCathode, MerCruiser, Mercury, Mercury Marine, Quicksilver, Ride-Guide, and Thruster.

Old P/N: 37-18812-18

**MERCURY MARINE
A BRUNSWICK COMPANY
FOND DU LAC, WI U.S.A.**

MODEL	MCW 5.7 LITRE	ENGINE ROTATION	LH	ENGINE SERIAL NUMBER
DISPLACEMENT	350 CID	MAX WOT RPM	4200-4600	TRANSOM SERIAL NUMBER
RATED HORSEPOWER	306	PLUG GAP	255"	ENGINE MODEL NUMBER
IGNITION TIMING	8° BTDC			
CYL. FIRING ORDER	1-4-3-5-7-2			
SPARK PLUGS	AC 889417			

For fuel and oil requirements refer to Operation & Maintenance Manual


1 71348

2 71352

3 71350

ABC12345Z123

7

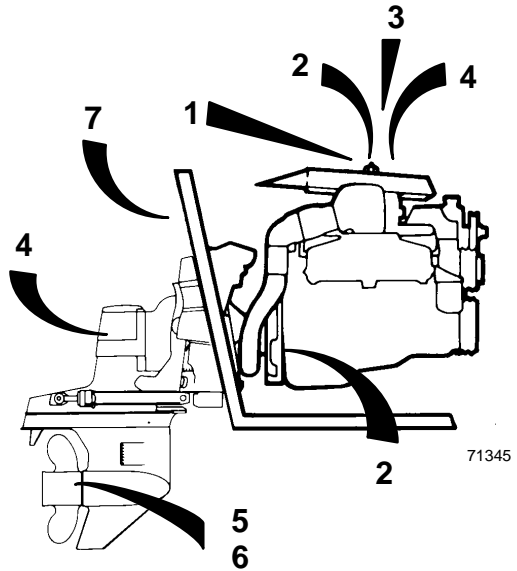

-19

6

48-12345

5

4 71360

TABLE OF CONTENTS

	Page
Welcome!	4
Read This Manual Thoroughly	4
Lanyard Stop Switch	5
Boating Safety And Seamanship	7
Water Wisdom	8
Conditions Affecting Operation	9
Weight Distribution	9
Bottom Of Boat	9
Cavitation	10
Ventilation	10
Propeller Selection	10
How Elevation And Climate Affect Performance	11
Important Information	13
Operation And Maintenance	13
Freezing Temperature Operation	14
Drive Unit Impact Protection	14
Attention Required After Submersion	15
Trailing Boat	15
Launching And Boat Operation Care	16
Stolen Power Package	16
Replacement Service Parts	17
Do-it-yourself Maintenance Suggestions	18
20-hour Break-in Period	20
After Break-in Period	20
20-hour Checkup	21
Operation	23
Instrumentation	23
Audio Warning System	25
Electrical System Overload Protection	27
Models With Mercathode System	27
Remote Controls	29
Power Trim	35
Starting, Shifting And Stopping	42
Operation Chart	44
Specifications	45
Fuel Recommendations	45
Crankcase Oil	47
Engine	48
Tune-up	49
Capacities	50

	Page
Maintenance	52
Maintenance Aids	52
Maintenance Chart	54
Checking Fluid Levels	61
Changing Fluids	65
Water Separating Fuel Filter (If So Equipped)	69
Fuel Pump Sight Tube Inspection	69
Lubrication	71
Propeller	75
Flushing Cooling System	79
Seawater Pump Impeller	83
Drive Belts	85
Corrosion And Corrosion Protection	87
Miscellaneous Maintenance	92
Battery	92
Bottom Of Boat	93
Inspection And Maintenance	93
Cold Weather Or Extended Storage	94
Power Package Lay Up	94
Draining Instructions	97
Battery Winter Storage	104
Power Package Recommissioning	104
Troubleshooting	105
Warranty Information	112
Owner Warranty Registration	112
International Owner Registration	113
Warranty Policies	114
3 Year Limited Warranty Against Corrosion Failure	118
Warranty Coverage	120
Transferable Warranty	123
Q-Guard Product Protection Plan	124
Owner Service Assistance	124
Service Centers	127
Customer Service Literature	129
General Maintenance Parts	130
Literature Order Form	133

WELCOME!

You have selected one of the finest marine power packages available. It incorporates numerous design features to assure operating ease and durability.

With proper care and maintenance, you will thoroughly enjoy using this product for many boating seasons. To ensure maximum performance and carefree use, we ask that you thoroughly read this manual.

The Operation and Maintenance Manual contains specific instructions for using and maintaining your product. We suggest that this manual remain with the product for ready reference whenever you are on the water.


Thank you for purchasing one of our MerCruiser products. We sincerely hope your boating will be pleasant!

Consumer Affairs Department

READ THIS MANUAL THOROUGHLY

IF YOU DON'T UNDERSTAND ANY PORTION, CONTACT YOUR DEALER FOR A DEMONSTRATION OF ACTUAL STARTING AND OPERATING PROCEDURES.

NOTICE

Throughout this publication, and on your power package, **WARNINGS** and **CAUTIONS**, accompanied by the International Hazard Symbol , may be used to alert the installer/user to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. **Observe them carefully.**

These "Safety Alerts" alone cannot eliminate the hazards that they signal. Strict compliance with these special instructions while performing the service, plus "common sense" operation, are major accident prevention measures.

WARNING

WARNING-Hazards or unsafe practices which could result in severe personal injury or death.

CAUTION

CAUTION-Hazards or unsafe practices which could result in minor personal injury or product or property damage.

IMPORTANT: - Indicates information or instructions that are necessary for proper operation and /or maintenance.

WARNING

The operator (driver) is responsible for the correct and safe operation of the boat, the equipment aboard and the safety of all occupants aboard. We strongly recommend that the operator read this Operation and Maintenance Manual and thoroughly understand the operational instructions for the power package and all related accessories before the boat is used.

CA167

LANYARD STOP SWITCH

WARNING

The following advantages and disadvantages of a Lanyard Stop Switch should be considered before electing to use, or not to use, such a switch.

ADVANTAGES: The purpose of a Lanyard Stop Switch is to stop the engine when the operator leaves the control station, either accidentally by falling into the boat, or by falling or being ejected overboard. This is most likely in certain types of boats such as low-sided bass boats and high-performance boats. It is also likely as a result of poor operating practices such as sitting on the back of the seat at planing speeds, standing at planing speeds, operating at high speeds in shallow or obstacle-infested waters, drinking and driving, or daring, high-speed boat maneuvers.

DISADVANTAGES: Inadvertent activation of the switch is also a possibility. This could cause any or all of the following potentially hazardous situations:

- Loss of balance and falling forward of unstable boat passengers - a particular concern in bow rider type boats.
- Loss of power and directional control in heavy seas, strong current or high winds.
- Loss of control when docking.

As we cannot possibly know of and advise the boating public of all conceivable boat/ power package types and/or poor operating practices, the final decision of whether or not to use a Lanyard Stop Switch rests with you, the owner/ driver.

We strongly recommend that other occupants be instructed on proper starting and operating procedures so they will be prepared should they be required to operate the power package and boat in an emergency.

 WARNING

It is difficult for persons standing or floating in the water to move clear if they see a powerboat heading toward them, even at slow speed. Shift the unit to neutral and shut off engine when your boat is near people in the water. Serious Injury is likely if a person in the water is struck by a moving boat, gear housing, propeller or accessory rigidly attached to your boat or motor.

 WARNING

The use of accessories not manufactured or sold by Mercury Marine are not recommended for use with your MerCruiser unit. If your MerCruiser unit is equipped with an accessory not manufactured by Mercury Marine. Be sure to read the Operation and Maintenance Manual for that accessory before operation. If you haven't been supplied with such a manual, contact your dealer or the manufacturer of the accessory to secure the applicable manual.

BOATING SAFETY AND SEAMANSHIP

Boating safety and seamanship courses are periodically offered by the following national, state and provincial organizations:

- Coast Guard Auxiliary.
- Power Squadrons.
- Red Cross.
- State or provincial agencies, charged with water safety enforcement.

In the United States:

To help locate the course nearest you, contact Boat/U.S. Foundation's toll-free national boating safety education hot line at 1-800-336-BOAT.

You should also review the NMMA Sources of Waterway Information booklet. It lists regional sources of safety, cruising and local navigation and is available at no charge by writing to:

Sources of Waterway Information
National Marine Manufacturers Association
410 N. Michigan Avenue
Chicago. IL 60611 U.S.A.

We strongly recommend that all power boat operators attend one of these courses.

WATER WISDOM

- Do not overload! Know your boat's operating and loading limitations.
- Check safety equipment on board.
- Know your boating area and avoid hazardous locations.
- Know signs of weather change and avoid foul weather and rough-sea boating.
- Tell someone where you are going and when you expect to return.
- Know boating's "Rules of the Road" (signals and navigation).
- Be on the alert! Watch "the other guy", the water and your wake.
- Do not drink alcoholic beverages and drive a boat. Some state laws apply to boats as well as motor vehicles.

In order to safely enjoy the waterways, there are a few precautions that should be observed. Check with authorities in regard to local and other governmental boating regulations and restrictions. In addition, here are suggestions of safety equipment to carry when boating:

- Approved life jackets for each person on board.
- Approved throwable personal flotation device.
- Approved fire extinguisher(s), paddle or oar.
- Signal devices: flashlight, rockets or flares, flag, and whistle or horn.
- Spare propeller.
- Tools for necessary minor repairs, first aid kit and book.
- Anchor and extra anchor line; waterproof storage containers.
- Manual bilge pump and extra drain plugs, compass and map or chart of area.
- Spare operating equipment; batteries, bulbs, fuses, etc.
- Transistor radio and drinking water.

CONDITIONS AFFECTING OPERATION

WEIGHT DISTRIBUTION

Positioning of weight (passengers and gear) inside the boat has the following effects:

Shifting weight to rear (stern) will:

- Generally increases speed and engine RPM.
- At extremes can cause boat to porpoise.
- Causes bow to bounce in choppy water.
- Increases danger of following wave splashing into boat when coming off plane.

Shifting weight to front (bow) will:

- Improve ease of planing.
- Improve rough water ride.
- At extremes, can cause boat to veer back and forth (bow steer).

BOTTOM OF BOAT

To maintain maximum speed, the following conditions of the boat bottom should be observed.

- A. Clean, free of barnacles and marine growth.
- B. Free of distortion; nearly flat where it contacts the water.
- C. Straight and smooth, fore and aft.

Marine vegetation may accumulate when boat is docked. This growth must be removed before operation; it may clog water inlets and cause engine to overheat.

CA9

CAVITATION

Cavitation occurs when water flow cannot follow the contour of a fast-moving underwater object, such as a gear housing or propeller. Cavitation permits the propeller to speed up, but the boat speed to reduce. Cavitation can seriously erode the surface of the gear housing or propeller. Common causes of cavitation are:

- A. Weeds or other debris snagged on propeller or gear housing.
- B. Bent propeller blade or damaged gear housing skeg.
- C. Raised burrs or sharp edges on propeller or gear housing.

CA10

VENTILATION

Ventilation is caused by surface air or exhaust gases which are introduced around the propeller resulting in propeller speedup and a reduction in boat speed. Excessive ventilation is annoying and usually caused by:

- A. Drive unit trimmed out too far.
- B. A missing propeller diffuser ring.
- C. A damaged propeller or gear housing, which allows exhaust gases to escape between propeller and gear housing.
- D. Drive unit installed too high on transom.

CA250

PROPELLER SELECTION

Select a propeller that will allow the power package to operate at or near the top of the recommender full throttle RPM range with a normal load. Maximum engine speed (RPM) for propeller selection exists when boat speed is maximum, and trim is minimum for the speed. (High RPM, caused by an excessive trim angle, should not be used in determining correct propeller.) Normally, there is a 300 to 500 RPM change between propeller pitches. Full throttle RPM range is listed in SPECIFICATIONS.

If full throttle operation is below the recommended range shown in SPECIFICATIONS, the propeller must be changed to prevent loss of performance and possible engine damage.

IMPORTANT: The 350 Magnum engine is equipped with an RPM rev-limiter that is set at 4900 RPM. This limiter is designed to help prevent damage from engine over-speed. When the engine reaches 4900 RPM, ignition spark is turned off. Once the RPM drops below 4600, complete ignition spark resumes.

After initial propeller installation, the following common problems may require that the propeller be changed to a lower pitch:

- Warmer weather and greater humidity cause an RPM loss.
- Operating in a higher elevation causes an RPM loss.
- Operating with a damaged propeller or dirty boat bottom or gear housing causes an RPM loss.
- Operating with an increased load (additional passengers, pulling skiers, etc.).

For better acceleration, such as is needed for water skiing, use next lower pitch propeller; however, do not operate at full throttle when using ski propeller but not pulling skiers.

Propellers are available for specific boating requirements. Consult your Authorized MerCruiser Dealer for recommendations.

CA12

HOW ELEVATION AND CLIMATE AFFECT PERFORMANCE

Elevation has a very noticeable effect on the wide-open-throttle power of an engine. Since air (containing oxygen) gets thinner as elevation increases, the engine begins to starve for air. Humidity, barometric pressure and temperature do have a noticeable effect on the density of air. Heat and humidity thin the air. This condition can become particularly annoying when the propeller testing was done on a cool, dry day. Then later; on a hot, sultry day, the boat doesn't seem to have the same performance.

Although some performance can be regained by dropping to a lower pitch propeller, the basic problem still exists. In some cases, a gear ratio change to more reduction is possible and very beneficial.

Summer conditions of high temperature, low barometric pressure and high humidity all combine to reduce the engine power. This, in turn, is reflected in decreased boat speeds, as much as 2 or 3 miles per hour in some cases. Nothing will regain this speed for the boater, but the coming of cool, dry weather.

In pointing out the practical consequences of weather effects, an engine running on a hot, humid, summer day, may encounter a loss of as much as 14% of the horsepower it would produce on a dry, brisk spring or fall day. With the drop in available horsepower, this propeller will, in effect, become too large. Consequently, the engine operates at less than its recommended RPM. This will result in further loss of horsepower at the propeller with another decrease in boat speed. This secondary loss, however, can be somewhat regained by switching to a lower-pitch propeller that allows the engine to again run at recommended RPM.

For boaters to realize optimum engine performance under changing weather conditions, it is essential that the engine be propped to allow it to operate at or near the top end of the recommended maximum RPM range at wide-open-throttle with a normal boat load.

Not only does this allow the engine to develop full power, but equally important is the fact that the engine also will be operating in an RPM range that discourages damaging detonation. This, of course, enhances overall reliability and durability of the engine.

IMPORTANT INFORMATION

OPERATION AND MAINTENANCE

Owner/Operator Responsibilities

It is the operator's responsibility to perform all safety checks; to ensure that all lubrication and maintenance instructions are complied with for safe operation and to return the unit to an Authorized MerCruiser Dealer for a periodic checkup.

Normal maintenance service and replacement parts are the responsibility of the owner/operator and as such, are not considered defects in workmanship or material within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of your power package will assure optimum performance and dependability, and will keep your overall operating expenses at a minimum. See your Authorized MerCruiser Dealer for service aids.

Dealer Responsibilities

In general, a dealer's responsibilities to the customer include predelivery inspection and preparation such as:

- Make sure that the boat is properly equipped.
- Prior to delivery, make certain that the MerCruiser power package and other equipment are in proper operating condition.
- Make all necessary adjustments for maximum efficiency.
- Familiarize the customer with the on-board equipment.
- Explain and demonstrate the operation of the power package and boat.
- At the time of delivery, the dealer should provide you with a copy of a Predelivery Inspection Checklist.
- Your selling dealer should fill out the Warranty Registration Card completely and mail it to the factory immediately upon sale of the new product.

CA15

FREEZING TEMPERATURE OPERATION

IMPORTANT: If boat is operated during periods of freezing temperature, precautions must be taken to prevent freezing damage to power package. Refer to “COLD WEATHER or EXTENDED STORAGE” for draining instructions.

CA17

DRIVE UNIT IMPACT PROTECTION

The Power Trim hydraulic system is designed to provide impact protection for drive unit. If a submerged object is struck while boat is moving forward, the hydraulic system will cushion the kickup of drive unit as it clears the object, reducing damage to unit. After drive unit has cleared object, the hydraulic system allows drive unit to return to original operating position, preventing loss of steering control and engine overspeed.

Use extreme caution when operating in shallow water or where underwater objects are known to be present. Use extreme care to prevent striking submerged object while operating in REVERSE. No impact protection is provided in REVERSE.

If drive unit should strike a submerged object, stop engine as soon as possible and inspect drive unit for damage. If damage is present or suspected, boat should be taken to an Authorized MerCruiser Dealer for thorough inspection and necessary repair. Operating a damaged drive unit could cause additional damage to other parts of drive unit, or could affect control of boat. If continued running is necessary, do so at greatly reduced speeds.

IMPORTANT: Impact protection system cannot be designed to ensure total protection from impact damage under all conditions.

CA18

ATTENTION REQUIRED AFTER SUBMERSION

- Before recovery, contact a MerCruiser Dealer.
- After recovery, immediate service by an Authorized MerCruiser Dealer is required to prevent serious damage to power package.

CA19

TRAILERING BOAT

Boat can be trailered with drive unit in “up” or “down” position. Adequate road clearance is required between road and gear housing skeg when trailering with drive unit in “down” position.

If adequate road clearance is a problem, place drive unit in full trailer position and support with an optional trailer kit which is available from your Authorized MerCruiser Dealer.

CA20

LAUNCHING AND BOAT OPERATION CARE

CAUTION

During launching from a trailer, if the unloading ramp is steep or the trailer bed must be tilted, the boat may enter the water rapidly and at a steep angle. This may force water through the exhaust system into the cylinders. The more weight on the transom, the more likely this is to occur.

Slowing down rapidly or stopping suddenly may cause a following wave to “swamp” the transom. In this instance, water may enter the cylinders through the exhaust system.

When backing up rapidly, the same situation may occur as stated in the preceding paragraph.

In any of these situations, water entering the engine could cause severe damage to internal parts. Refer to “Attention Required After Submersion”.

CA21

STOLEN POWER PACKAGE

If your power package is stolen, immediately advise the local authorities and Mercury Marine of the model and serial number(s) and to whom the recovery is to be reported. This “Stolen Motor” information is placed into a file at Mercury Marine to aid authorities and dealers in recovery of stolen motors.

REPLACEMENT SERVICE PARTS

WARNING

Electrical, ignition and fuel system components on MerCruiser gasoline power packages are designed and manufactured to comply with U.S. Coast Guard rules and regulations to minimize risks of fire or explosion.

Use of replacement electrical, ignition or fuel system components, which do not comply to these rules and regulations, could result in a fire or explosion hazard and should be avoided.

When servicing the electrical, ignition and fuel systems, it is extremely important that all components are properly installed and tightened. If not, any electrical or ignition component would permit sparks to ignite fuel vapors from fuel system leaks, if they existed.

Marine engines are expected to operate at or near full-throttle for most of their life. They are also expected to operate in both fresh and saltwater environments. These conditions require numerous special parts. Care should be exercised when replacing marine engine parts as specifications are quite different from those of the standard automotive engine.

For example, one of the most important, and probably the least suspected special replacement part, is the cylinder head gasket. Since saltwater is highly corrosive, the steel-type automotive head gasket cannot be used. A marine engine head gasket uses special materials to resist corrosive action.

Since marine engines must be capable of running at or near maximum RPM much of the time, special valve springs, valve lifters, pistons, bearings, camshafts and other heavy-duty moving parts are required for long life and peak performance.

These are but a few of the many special modifications that are required in MerCruiser marine engines to provide long life and dependable performance.

DO-IT-YOURSELF MAINTENANCE SUGGESTIONS

If you are one of those persons who likes to do-it-yourself, here are some suggestions for you.

- Present-day marine equipment, such as your MerCruiser power package, are highly technical pieces of machinery. Electronic ignition and special carburetion provide greater fuel economies, but also are more complex for the untrained mechanic.
- Do not attempt any repairs which are not covered in this manual unless you are aware of the precautions (“Cautions” and “Warnings”) and procedures required. Your safety is of our concern.
- If you attempt to service the product yourself, we suggest you order the service manual for that model. The service manual outlines the correct procedures to follow. It is written for the trained mechanic, so there may be procedures you don’t understand. Do not attempt repairs if you do not understand the procedures.
- There are special tools and equipment that are required to perform some repairs. Do not attempt these repairs unless you have these special tools and/or equipment. You can cause damage to the product in excess of the cost a dealer would charge you.

- Also, if you partially disassemble an engine or drive assembly and are unable to repair it, the dealer's mechanic must reassemble the components and test to determine the problem. This will cost you more than taking it to the dealer immediately upon having a problem. It may be a very simple adjustment to correct the problem.
- Do not telephone the dealer, service office or the factory to attempt for them to diagnose a problem or request the repair procedure. It is difficult for them to diagnose a problem over the telephone. A doctor can't and won't diagnose your illness by telephone; he must examine you personally, just as a mechanic must examine your power package.
- Your Authorized Dealer is there to service your power package. He has qualified factory-trained mechanics.

It is recommended you have the dealer do periodic maintenance checks on your power package. Have him winterize it in the fall and service it before the boating season. This will reduce the possibility of any problems occurring during your boating season when you want trouble-free boating pleasure.

20-HOUR BREAK-IN PERIOD

IMPORTANT: The first 20 hours of operation is the engine break-in period. Correct break-in is essential to obtain minimum oil consumption and maximum engine performance. During this break-in period, the following rules must be observed:

- Do not operate below 1500 RPM for extended periods of time for first 10 hours. Shift into gear as soon as possible after starting and advance throttle above 1500 RPM if **conditions permit safe operation**.
- Do not operate at one speed consistently for extended periods.
- Do not exceed 3/4 throttle during first 10 hours. During next 10 hours, occasional operation at full throttle is permissible (5 minutes at a time maximum).
- Avoid full throttle acceleration from IDLE speed.
- Do not operate at full throttle until engine reaches normal operating temperature.
- Frequently check crankcase oil level. Add oil if needed. It is normal for oil consumption to be high during break-in period.
- After 20-hour break-in period, drain crankcase oil and replace oil filter (see MAINTENANCE). Fill crankcase with correct oil (see SPECIFICATIONS).

AFTER BREAK-IN PERIOD











To help extend the life of your MerCruiser power package, the following recommendations should be considered;

- Use a propeller that allows the engine to operate at or near the top of the maximum RPM range (See “Specifications” section) when at full throttle with a normal boat load.
- Operation at 3/4 throttle setting or lower is recommended. Refrain from prolonged operation at maximum (full throttle) RPM.

20-HOUR CHECKUP

After first 20 hours of operation, an Authorized MerCruiser Dealer should be contacted for the following maintenance. The boat owner is responsible for any charges.

- Change crankcase oil and filter.
- Check all fluid levels.
- Cooling System: Inspect all hoses for damage and deterioration; check all hose clamps for adequate tightness.
- Check carburetor adjustment.
- Inspect ignition system and timing.
- Check for loose, missing or damaged parts.
- Check shift and throttle cable adjustments. Lubricate and inspect for loose, damaged or missing parts.
- Steering System: Lubricate and inspect for loose, damaged or missing parts.
- Inspect all drive belts.
- Check engine alignment. Include proper lubrication of U-joint and splined shaft.
- Complete Engine Exhaust System: Inspect externally for damage and deterioration; check all hose clamps for adequate tightness.
- Retorque gimbal ring clamping screws to 50-55 lb. ft. (67-74 N·m).
- Check that both front engine mount locknuts are tightened securely. Then, check to ensure that tab washers are bent down over adjusting nuts.
- Check that rear engine mounts are torqued to 35-40 lb.ft. (47-54 N·m).

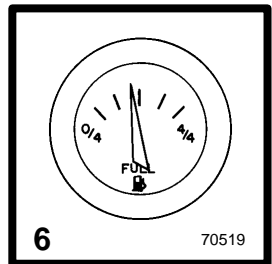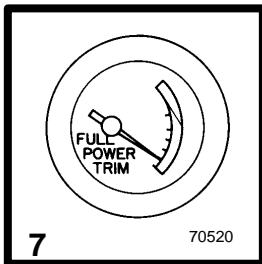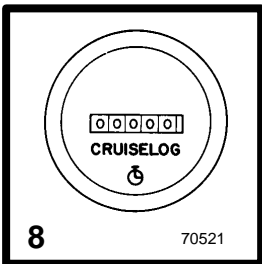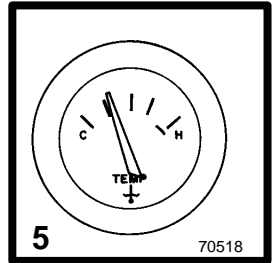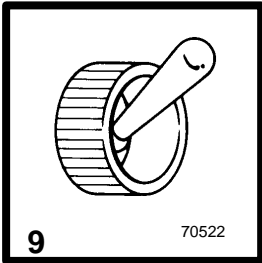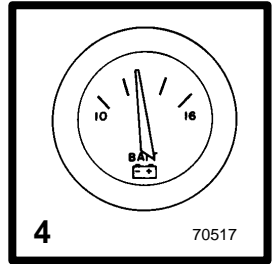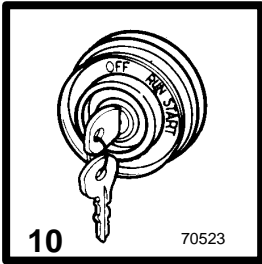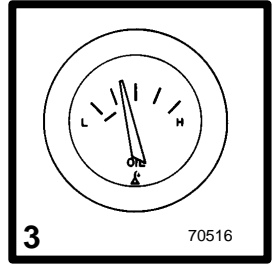
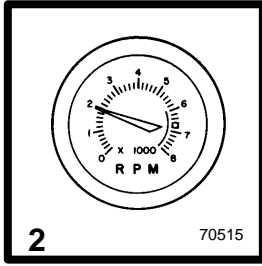
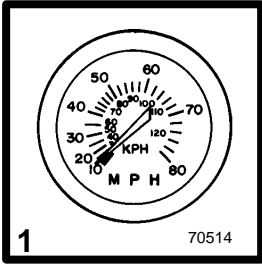


OPERATION

INSTRUMENTATION

The following is a brief explanation of instrumentation typically found on some boats. The owner/operator should be familiar with all instruments and their functions on the boat. Because of the large variety of instrumentation and manufacturers, you should have your boat dealer explain the particular gauges and normal readings that will appear on your style gauges.

- 1** Speedometer: Indicates boat speed.
- 2** Tachometer: Indicates engine RPM.
- 3** Oil Pressure Gauge: Indicates engine oil pressure.
- 4** Battery Meter: Indicates battery voltage.
- 5** Water Temperature Gauge: Indicates engine operating temperature.
- 6** Fuel Gauge: Indicates fuel tank volume.
- 7** Power Trim Gauge: Indicates drive unit angle (trim up/out and down/in).
- 8** Hour Meter: Records engine running time.
- 9** Bilge Blower Switch: Must be operated for five minutes before starting engine, to ventilate bilge.
- 10** Ignition Switch: Allows operator to start and stop engine.

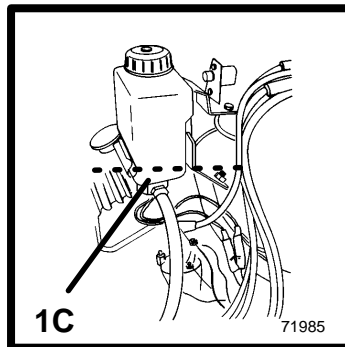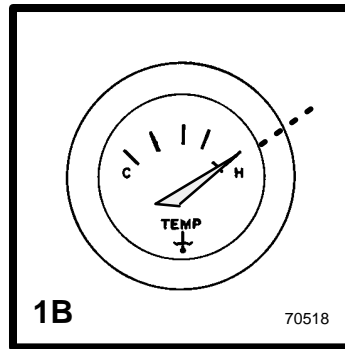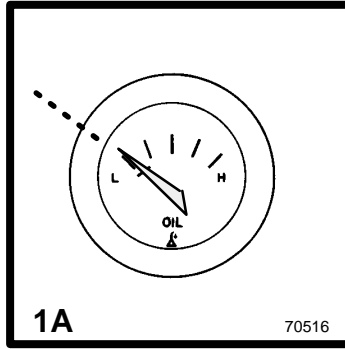

AUDIO WARNING SYSTEM

Your MerCruiser power package may be equipped with an Audio Warning System.

1 The audio warning system buzzer will sound if one of the following occur:







- A** Insufficient Oil Pressure
- B** Excessive Engine Temperature
- C** Insufficient Drive Lubricant

NOTE: To provide a test of the system, the audio warning buzzer will sound when the ignition switch is first turned to the run position, prior to cranking the engine. Once the engine starts, the buzzer should stop.

CAUTION

Avoid engine damage. Do not operate engine once the buzzer has sounded EXCEPT TO AVOID A HAZARDOUS SITUATION. The Audio Warning System will not protect the engine from damage. It is designed to warn the operator that a problem has occurred.

When the buzzer sounds with the engine running, stop engine immediately. Investigate cause and correct it, if possible. If cause cannot be determined, consult your Authorized MerCruiser Dealer.

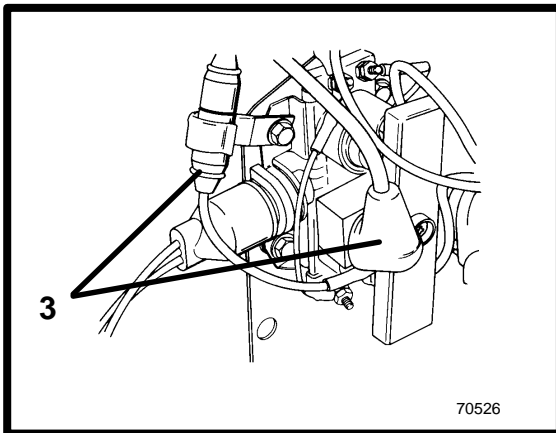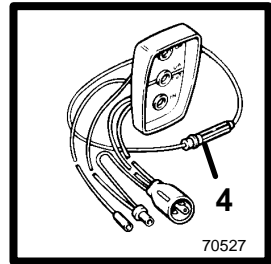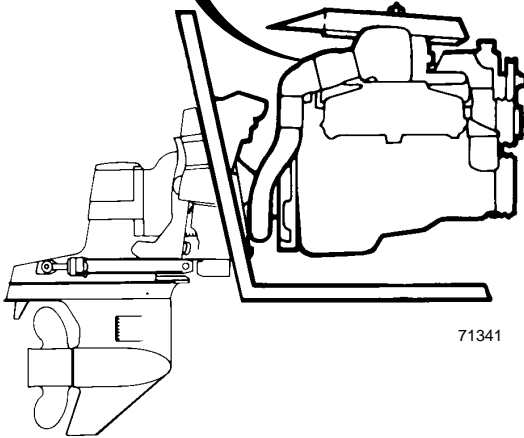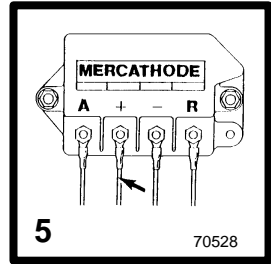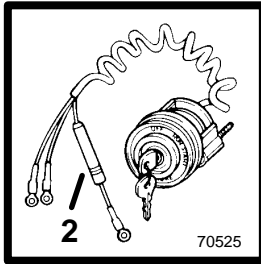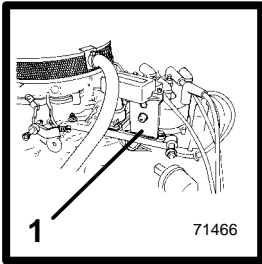

CA30

ELECTRICAL SYSTEM OVERLOAD PROTECTION

If an electrical overload occurs, a fuse will blow or the circuit breaker will trip open. The cause must be found and corrected before replacing fuse or resetting circuit breaker.

1 A circuit breaker provides protection for engine wiring harness and instrumentation power lead. Reset by pushing RESET button.

In an emergency, when engine must be operated and cause for high current draw cannot be located and corrected, turn OFF or disconnect all accessories connected to engine and instrumentation wiring.

Reset circuit breaker. If breaker will not reset, electrical overload has not been eliminated. Further checks must be made on electrical system.

2 A 20 amp fuse may be located in ignition switch “I” terminal lead to protect electrical system. Check for blown fuse if key is turned to START and nothing happens (and circuit breaker is not tripped).


3 The Power Trim System is protected from overload by 110 amp fuse and a 20 amp in-line fuse on Power Trim pump.

4 Quicksilver Three-Button Power Trim Control Panel is further protected by a 20 amp in-line fuse.

CA31

MODELS WITH MERCATHODE SYSTEM

5 A 20 amp in-line fuse is in wire which connects to positive (+) terminal on controller. If fuse is blown, system will not operate. (For additional information see “Corrosion and Corrosion Protection” section.)

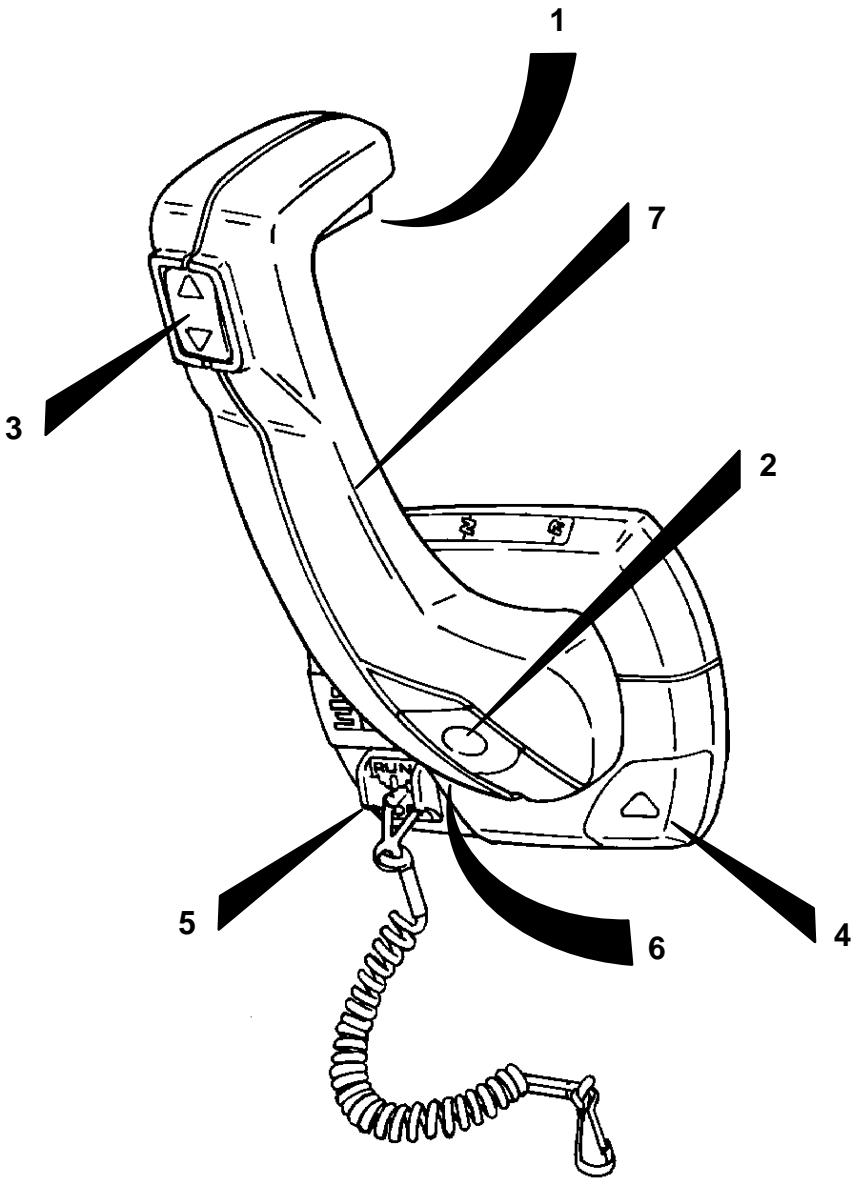

REMOTE CONTROLS (PANEL MOUNTED)

Your boat may be equipped with one of many Quicksilver® remote controls available. All controls feature an integral safety switch that allows starting engine in NEUTRAL only. Also, all controls may not have all features shown. If boat is equipped with a remote control other than shown, consult your dealer for a description and/or demonstration of the control.

1 Neutral Lock Bar - Prevents accidental shift and throttle engagement. Neutral lock bar must be pulled “Up” to move the control handle out of neutral.

2 Throttle Only Button - Allows engine throttle advancement without shifting the engine. This is done by disengaging the shift mechanism from the control handle. The throttle only button can be depressed only when the remote control handle is in the “Neutral” position, and should only be used to assist in starting the engine.



3 Power Trim Switch - See “Power Trim” for detailed power trim operating procedures.

4 Trailer Switch - Used to raise drive unit for trailering, launching, breaching or shallow water operation. See “Power Trim” for detailed trailer switch operation.

5 Lanyard Stop Switch - Turns ignition “Off” whenever the operator (when attached to the lanyard) moves far enough away from the operator’s position to activate the switch. See “Lanyard Stop Switch” at the front of this manual for safety warning on the use of this switch.

6 Control Handle Tension Adjustment Screw - This screw can be adjusted to “Increase” or “Decrease” the tension on the control handle. This will help prevent “Creep” of the remote control handle. Turn screw “Clockwise” to increase tension and “Counterclockwise” to decrease tension. Adjust to tension desired.

7 Control Handle - Operation of the shift and throttle are controlled by the movement of the control handle. “Push” the control handle forward from “Neutral” with a quick firm motion to the first detent for “Forward” gear. Continue pushing forward to increase speed. Pull the control handle back from “Neutral” with a quick firm motion to the first detent for “Reverse” gear. Continue pushing back to increase speed.

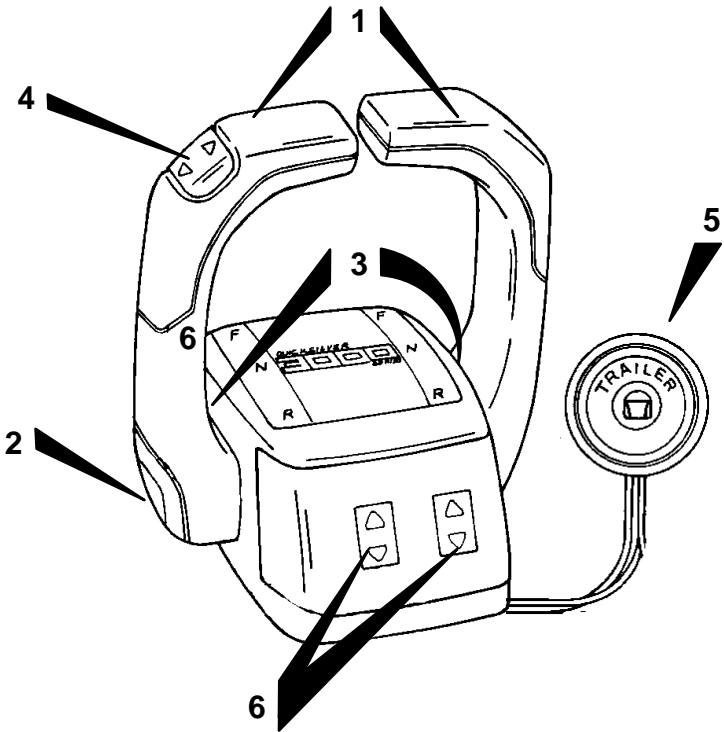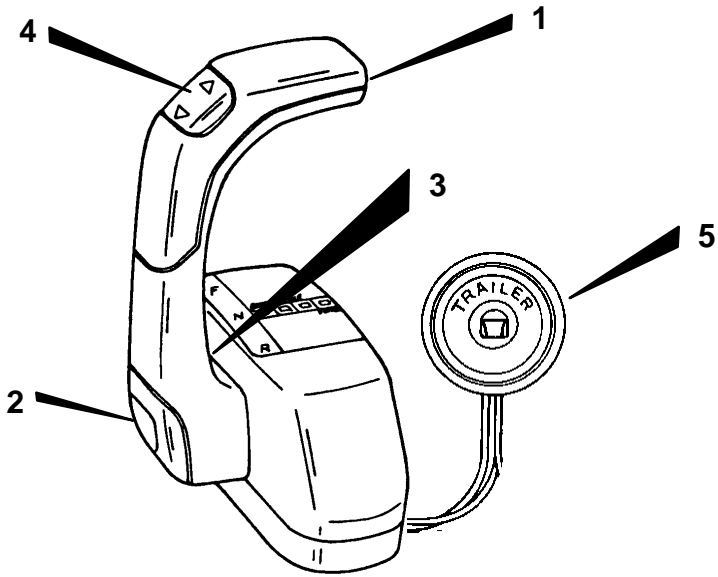

REMOTE CONTROLS (CONSOLE MOUNTED)

1 Control Handle(s) - Operation of the the shift and throttle are controlled by the movement of the control handle. “Push” the control handle forward from “Neutral” with a quick firm motion to the first detent for “Forward” gear. Continue pushing forward to increase speed. Pull the control handle back from “Neutral” with a quick firm motion to the first detent for “Reverse” gear. Continue pushing back to increase speed.


2 Throttle Only Button - Allows engine throttle advancement without shifting the engine. This is done by disengaging the shift mechanism from the control handle. The throttle only button can be depressed only when the remote control handle is in the “Neutral” position, and should only be used to assist in starting the engine.

3 Control Handle Tension Adjustment Screw - This screw can be adjusted to “Increase” or “Decrease” the tension on the control handle (cover must be removed to adjust). This will help prevent “Creep” of the remote control handle. Turn screw “Clockwise” to increase tension and “Counterclockwise” to decrease tension. Adjust to tension desired.


4 Power Trim Switch - See “Power Trim” section for detailed power trim operating procedures.

5 Trailer Switch - Used to raise drive unit for trailering, launching, breaching or shallow water operation. See “Power Trim” for detailed trailer switch operation.

6 Power Trim Adjustment Switch’s (Used on Three Button Trim Control Only) - See “Power Trim” section for detailed power trim operating procedures.

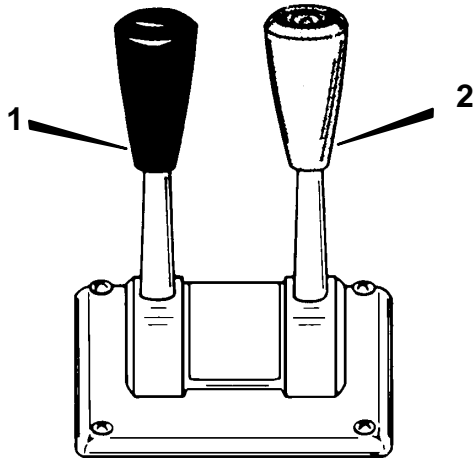

71339

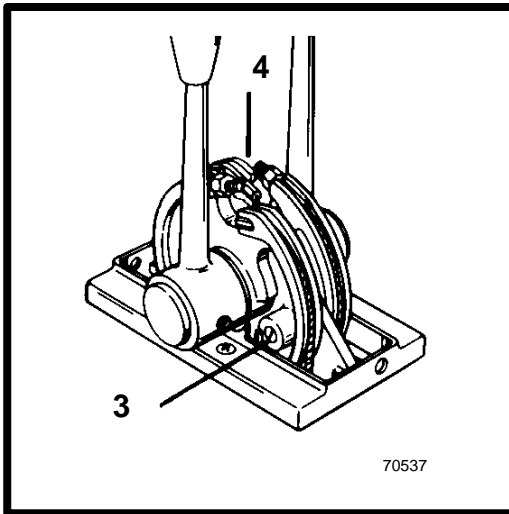

70537

REMOTE CONTROLS (TWO LEVER)

1 Shift Lever - shifts unit into gear with full lever movement. Move lever forward to shift to FORWARD gear. Move lever backward to shift to REVERSE gear. Lever in full vertical position shifts to NEUTRAL.

CAUTION

Never shift unit into or out of gear unless throttle lever is a idle RPM.


2 Throttle Lever - allows engine RPM to be increased or decreased.

3 FRICTION Screw - adjusts control handle friction so motor speed can be set and driver does not have to hold handle.

Turn screw clockwise to increase friction. Do not thread screw all the way out.

4 DETENT Screw - controls the effort needed to move control handle out of NEUTRAL. To increase tension, turn screw clockwise; to decrease, turn screw counterclockwise. Do not thread screw all the way out.

IMPORTANT: Boats equipped with dual power packages may have both shift levers on one control and both throttle levers on the other control.

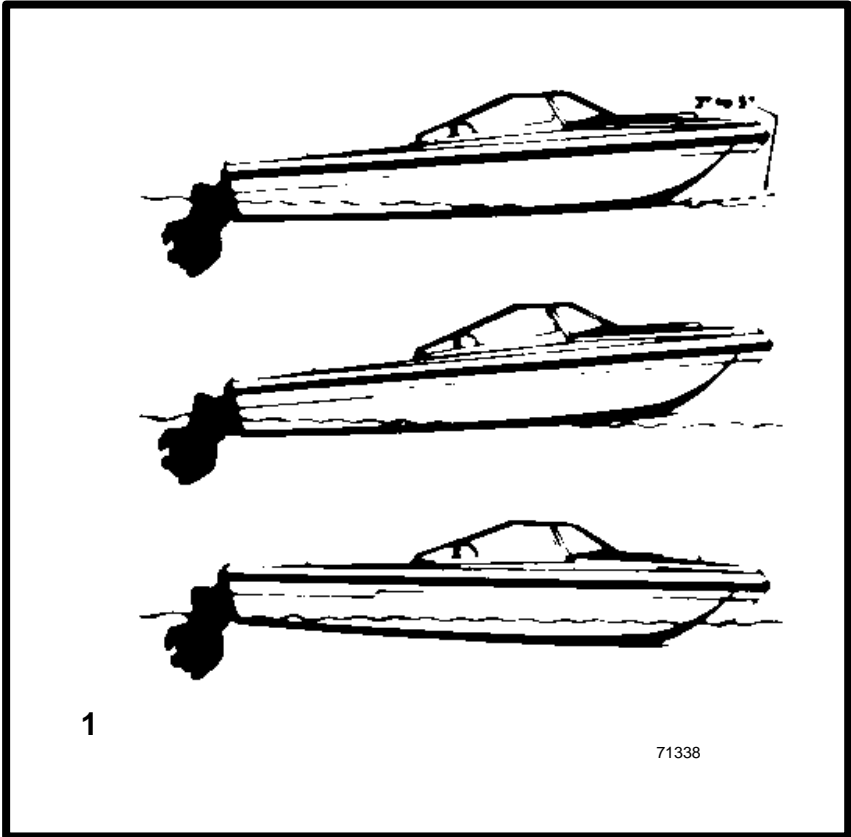

CA35

POWER TRIM

The Power Trim system allows operator to raise and lower drive unit for trailering, beaching, launching and shallow water operation. Power Trim also allows operator to adjust drive unit angle, while underway, to provide ideal boat angle for varying load and water conditions.

1 In most cases, best overall performance is obtained with drive unit adjusted so boat will run at a 3° to 5° angle to water.

CA36

Trimming Drive Unit Up/Out Will:

- Lift bow of boat.
- Generally increase top speed.
- Increase clearance over submerged objects.
- Cause boat to accelerate and plane off slower.
- In excess, cause porpoising and/or propeller ventilation.
- Cause overheating if trimmed up/out beyond gimbal ring support flanges.


CAUTION

Never trim drive unit up/out using TRAILER switch while boat is underway. Use extreme caution when operating with drive unit raised, Severe damage to drive unit may result if unit is raised beyond the gimbal ring support flanges at engine speeds above 1200 RPM.


CA37

Trimming Drive Unit Down/In Will:

- Help boat accelerate and plane off quicker.
- Generally improve ride in choppy water.
- In most cases, reduce boat speed.

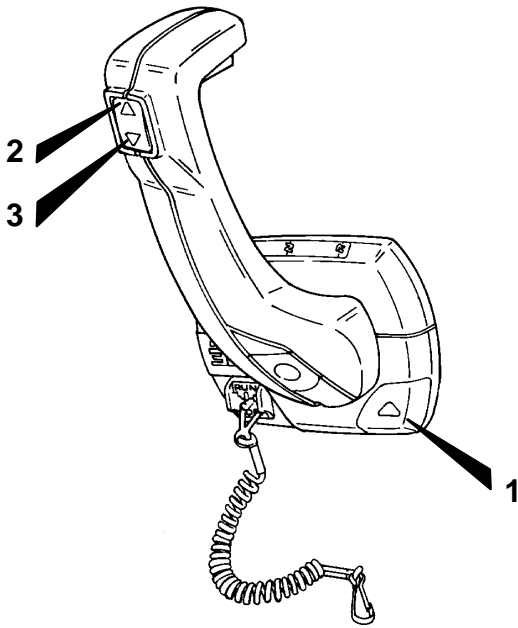

73976

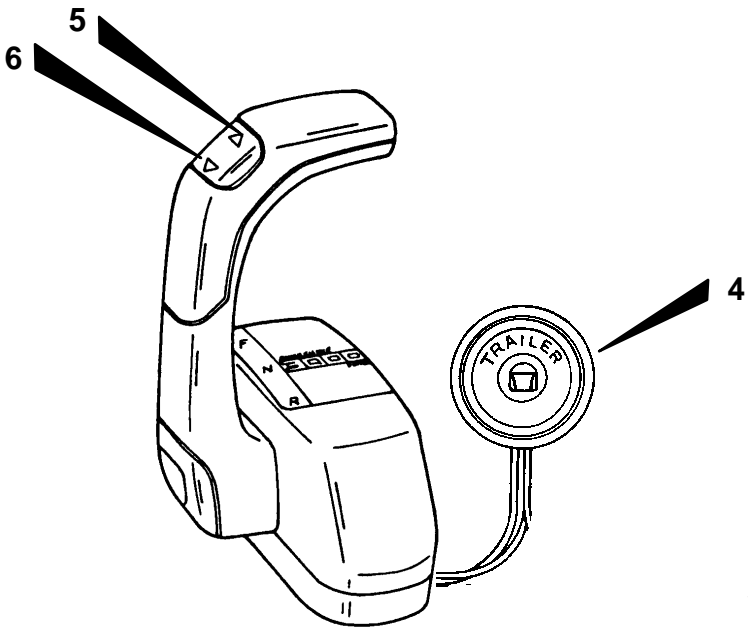

73977

CB188

Power Trim Operation - Panel Mount Remote Control

IMPORTANT: If TRAILER button is held depressed after drive unit reaches end of upward travel, an internal circuit breaker will open and pump will stop. Should this happen, release button and allow motor to cool for about one minute. Circuit breaker will reset and Power Trim operation may be resumed.


- 1** Trailer Position: Press button until drive unit reaches desired height.
- 2** Trim Up/Out: Press UP on Trim switch until drive unit reaches desired trim position.
- 3** Lower Drive Unit: Press DOWN on Trim switch until drive unit reaches desired position.

CB189


Power Trim Operation - Console Mount Remote Control (Single Engine Version)

- 4** Trailer Position: Press button until drive unit reaches desired height.
- 5** Trim Up/Out: Press UP on Trim switch until drive unit reaches desired trim position.
- 6** Lower Drive Unit: Press DOWN on Trim switch until drive unit reaches desired position.

CB190

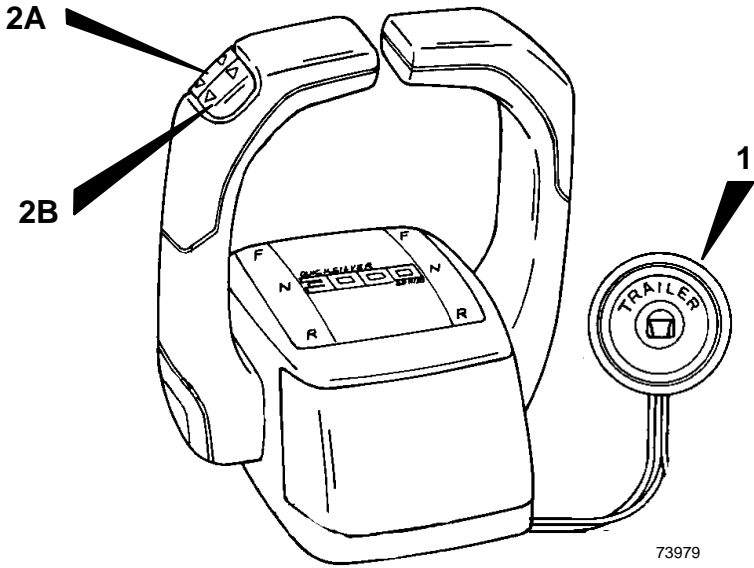

73979

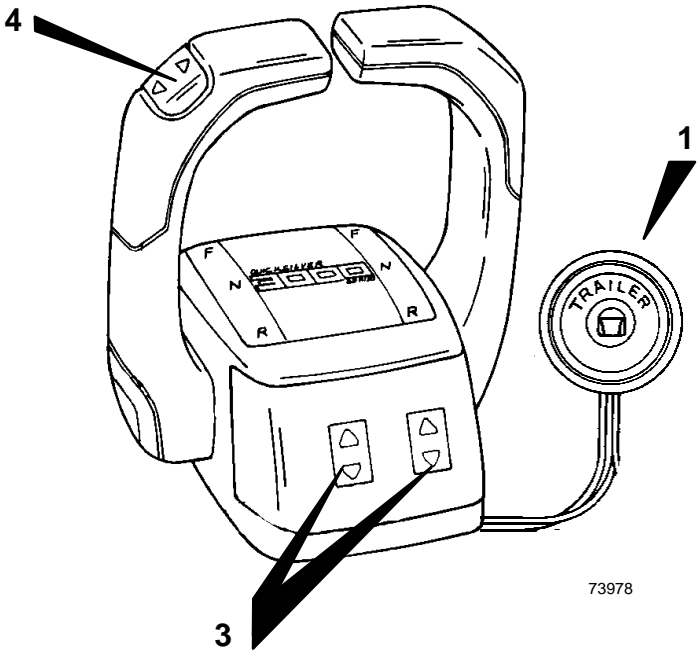

73978

Power Trim Operation - Dual Engine Console Mount Remote Control (Two Button and Three Button Versions)

IMPORTANT: If TRAILER button is held depressed after drive unit reaches end of upward travel, an internal circuit breaker will open and pump will stop. Should this happen, release button and allow motor to cool for about one minute. Circuit breaker will reset and Power Trim operation may be resumed.

CAUTION

When lowering or raising stern drives equipped with a dual engine tie bar kit; in the trailering position, stern drives must be lowered evenly to prevent tie bar from becoming twisted. Failure to lower stern drives evenly may result in tie bar or stern drive(s) damage.

1 Trailer Button (Both Versions) - Press button until drive unit reaches desired height for trailering drive units.




2 Two Button Trim Control (Dual Buttons in Handle) - used to control both drive units from the handle. Press UP on button(s) to trim drive unit UP/OUT. Press down on button(s) to trim drive unit DOWN/IN.

A Forward Trim Button - Used to trim the port drive unit.

B Rear Trim Button - Used to trim the starboard drive unit.

3 Three Button Trim Control (Trim Adjustment Switch's) - With a single integral trim button in the handle to control two engines simultaneously, these two switches control the "Fine Tune" adjustment of each engine. Using these "Fine Tune Switches", set each engine to the desired trim angle. Then use the single trim switch in the handle to control the trim of both engines simultaneously.

4 Three Button Trim Control (Single Trim Switch in Handle) - used to trim both drives simultaneously after drives have been fine-tuned as described above.

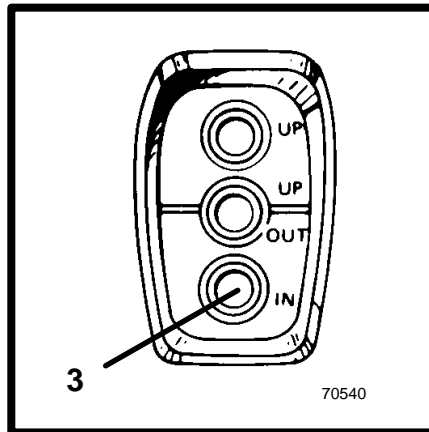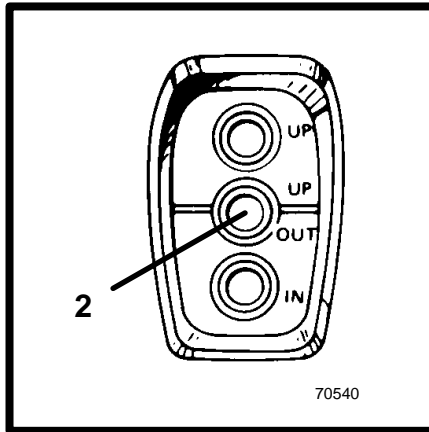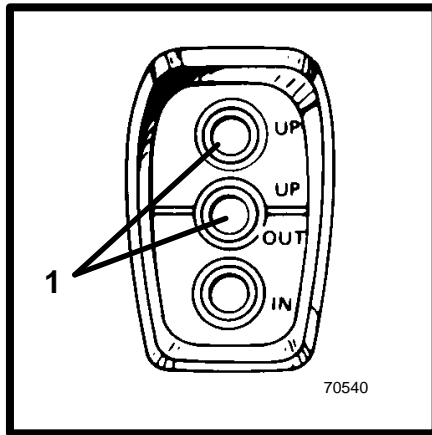

Power Trim Operation - Three Button Trim Panel (Used on Models with Two-Lever Control)

IMPORTANT: If TRAILER button is held depressed after drive unit reaches end of upward travel, an internal circuit breaker will open and pump will stop. Should this happen, release button(s) and allow motor to cool for about one minute. Circuit breaker will reset and Power Trim operation may be resumed.

- 1** Trailer Position: Simultaneously press the UP button (top) along with the UP/OUT button (center) until drive unit reaches desired trailer position.
- 2** Trim Drive Unit UP/OUT: Press center UP/OUT button until drive unit reaches desired trim position.
- 3** Trim Drive Unit IN/DOWN: Press IN button until drive unit reaches desired trim position.

STARTING, SHIFTING AND STOPPING

WARNING

Before starting engine, operate bilge blower for at least five minutes to remove any explosive fumes from engine compartment. If boat is not equipped with a bilge blower, open engine hatch and leave open while starting engine.

IMPORTANT: Observe the following:

- Do not start engine without water being supplied to seawater pickup pump (to prevent pump or engine damage).
- Do not operate starter motor continuously for more than 30 seconds.
- When engine starts, quickly reduce throttle setting to avoid exceeding 1500 RPM.
- Never shift drive unit unless engine is at Idle RPM.

1 Perform the following as appropriate:

A Check all items listed in OPERATION CHART.

B Perform any other necessary checks, as indicated by your dealer, or specified in your boat owner's manual.

C Place drive unit in full down/in position.

D Place control handle in NEUTRAL.

E Position throttle setting as follows: **COLD ENGINE** - Move control/throttle lever to full throttle, then return to about 1/4 throttle. In extreme cold it may be necessary to pump lever more than once.

WARM ENGINE - Move control/throttle lever to 1/4 throttle position.

FLOODED ENGINE - Move control/throttle lever to full throttle. Be prepared to decrease engine speed to 1000-1500 RPM as soon as engine starts.

F Turn ignition key to START Release key when engine starts and allow switch to return to RUN position. Move control/ throttle lever back to decrease engine RPM to 1000-1500 RPM if necessary.

G Check oil pressure gauge immediately after engine starts If oil pressure is not within specified range (see SPECIFICATIONS), stop engine immediately and determine cause.

H If engine is cold, run engine for 1 or 2 minutes at fast idle (1000-1500 RPM).

I After engine has warmed up, check water temperature gauge to ensure that engine temperature is not abnormally high. If it is, stop engine immediately and determine cause.

J Be sure charging system is functioning correctly.

K Observe power package for fuel, oil, water and exhaust leaks.

L To shift drive unit, return control/throttle lever to NEUTRAL. Move control/shift lever with a firm, quick motion forward to shift to FORWARD gear, or backward to shift to REVERSE. After shifting drive unit, advance throttle to desired setting.

M Move control/shift lever to NEUTRAL and allow engine to drop to IDLE speed. If engine has been run at high speed for a long period of time, allow engine to cool by running at IDLE speed for 3 to 5 minutes.

N Turn ignition key to OFF.

OPERATION CHART

BEFORE STARTING	AFTER STARTING	WHILE UNDERWAY	AFTER STOPPING
Open engine hatch.	Observe all gauges to check condition of engine. If not normal, stop engine.	Observe all gauges to monitor engine condition.	Turn ignition key OFF.
Turn battery switch ON, if so equipped.	Check for fuel, oil, water, fluid and exhaust leaks, etc.		Turn battery switch OFF, if so equipped.
Operate bilge blowers, if so equipped.	Check shift and throttle control operation.		Close fuel valve.
Open fuel shutoff valve.	Check steering operation		Close sea-cock, if so equipped.
Open seacock, if so equipped.			Flush cooling system if in saltwater area.
Place drive unit in full down/in position.			
Perform all other checks specified by your dealer and/or boat builder.			

SPECIFICATIONS

FUEL RECOMMENDATIONS

IMPORTANT: Use of improper gasoline can damage your engine seriously. Engine damage resulting from use of improper gasoline is considered misuse of engine, and damage caused thereby will not be covered under the limited warranty.

Fuel Ratings

MerCruiser engines will operate satisfactorily when using a major brand of unleaded gasoline as follows:

USA and Canada - having a posted pump Octane Rating of 87 (R+M)/2 minimum. Premium gasoline [92 (R+M)/2 Octane] is also acceptable. DO NOT use leaded gasoline.

Outside USA and Canada - having a posted pump Octane Rating of 90 RON minimum. Premium gasoline (98 RON) is also acceptable. If unleaded gasoline is not available, use a major brand of leaded gasoline.

CA214

Gasolines Containing Alcohol

Gasolines containing alcohol, either methyl alcohol (methanol) or ethyl alcohol (ethanol) may cause increased:

- Corrosion of metal parts.
- Deterioration of elastomer and plastic parts.
- Fuel permeation through flexible fuel lines.
- Wear and damage of internal engine parts.
- Starting and operating difficulties.

Some of these adverse effects are due to the tendency of gasolines containing alcohol to absorb moisture from the air, resulting in a phase of water and alcohol separating from the gasoline in the fuel tank.

The adverse effects of alcohol are more severe with methyl alcohol (methanol) and are worse with increasing alcohol content.

 **WARNING**

FIRE AND EXPLOSION HAZARD: Fuel leakage from any part of fuel system can be a fire and explosion hazard which can cause serious bodily injury or death. Careful periodic inspection of entire fuel system is mandatory, particularly after storage. All fuel components including fuel tanks, whether plastic metal or fiberglass, fuel lines, fittings, fuel filters and carburetors/fuel injection components should be inspected for leakage, softening, hardening, swelling or corrosion. Any sign of leakage or deterioration requires replacement before further engine operation.

Because of possible adverse effects of alcohol in gasoline, it is recommended that only alcohol-free gasoline be used where possible. If only fuel containing alcohol is available, or if the presence of alcohol is unknown, increased inspection frequency for leaks and abnormalities is required.

IMPORTANT: When operating a MerCruiser engine on gasoline containing alcohol, storage of gasoline in the fuel tank for long periods should be avoided. Long periods of storage, common to boats, create unique problems. In cars alcohol-blend fuels normally are consumed before they can absorb enough moisture to cause trouble, but boats often sit idle long enough for phase separation to take place. In addition, internal corrosion may take place during storage if alcohol has washed protective oil films from internal components.

Quicksilver Fuel System Treatment and Stabilizer (92-78383A12) and Gasoline Stabilizer (92-817529A12) is highly recommended for addition during storage periods. See "Cold Weather or Extended Storage" later in this manual.


CRANKCASE OIL

To help obtain optimum engine performance and to provide maximum protection, we strongly recommend the use of Quicksilver 4-Cycle Marine Engine Oil. If not available, a good grade, straight weight, detergent automotive oil of correct viscosity, with an API classification of CD or SG, may be used.

The chart below is a guide to crankcase oil selection. Oil filter should always be changed with oil.

In those areas where recommended straight weight oil is not available, a multiviscosity 20W-40 (SG or CD) or, as a second but less preferable choice, 20W-50 (SG or CD) may be used.

IMPORTANT: The use of non-detergent oils, multi-viscosity oils (other than 20W-40 or 20W-50), low quality oils or oils which contain solid additives, are specifically not recommended.

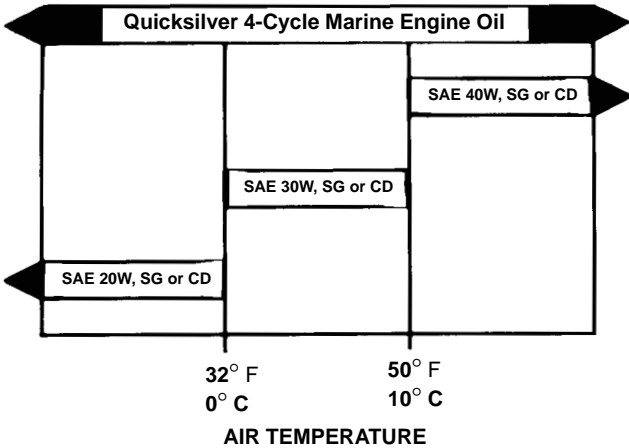

70534

ENGINE SPECIFICATIONS

MODEL	5.0 L	5.0 LX
Propshaft Horsepower ¹	190	205
Propshaft Kilowatts ¹	141	152
Displacement	305 C.I.D. (5 L)	
Engine Type	V8	
Bore	3.74 in. (94.99mm)	
Stroke	3.48 in. (88.39 mm)	
Compression Ratio	9.3:1	
Compression Pressure	180 psi (1241 kPa)	
Maximum RPM @ W.O.T.	4200-4600 RPM	
Idle RPM in Forward Gear	650-700 RPM	
Fuel Pump Pressure	3-7 psi (21-48 kPa)	
Oil Pressure @ 2000 RPM	30-55 psi (207-379 kPa)	
Min. Oil Pressure @ Idle	4 psi (28 kPa)	
Thermostat	160° F (71° C)	

¹ Power Rated in Accordance with NMMA procedure using Marine Engine Rating Code SAE J1228 (Technically Identical to ISO 3046 and ICOMIA 28-83).

ENGINE SPECIFICATIONS

MODEL	5.7 L	350 MAGNUM
Propshaft Horsepower ¹	235	250
Propshaft Kilowatts ¹	175	186
Displacement	350 C.I.D. (5.7 L)	
Engine Type	V8	
Bore	4.00 in. (101.6mm)	
Stroke	3.48 in. (88.39 mm)	
Compression Ratio	9.3:1	
Compression Pressure	180 psi (1241 kPa)	
Maximum RPM @ W.O.T.	4200-4600 RPM	4400-4800 RPM
Idle RPM in Forward Gear	650-700 RPM	/
Idle RPM in Neutral ²		
Fuel Pump Pressure	3-7 psi (21-48 kPa)	
Oil Pressure @ 2000 RPM	30-55 psi (207-379 kPa)	
Min. Oil Pressure @ Idle	4 psi (28 kPa)	
Thermostat	160° F (71° C)	

¹ Power Rated in Accordance with NMMA procedure using Marine Engine Rating Code SAE J1228 (Technically Identical to ISO 3046 and ICOMIA 28-83).

² A special procedure must be followed for adjusting Idle RPM in Forward Gear. Consult your Authorized MerCruiser Dealer before adjusting Idle Speed.

TUNE-UP SPECIFICATIONS

MODEL	5.0L	5.0LX
Spark Plug Type	AC-MR43T or Champion RV15YC4 or NGK BR6FS	
Spark Plug Gap	.035 in. (.9mm)	
Timing @ Idle RPM	8° BTDC	
Firing Order	1-8-4-3-6-5-7-2	
Electrical System	12-Volt Negative (-) Ground	
Alternator Rating	55 Amps	
Recommended Battery Rating	Minimum 375 cca, 475 mca or 90 Ah	

MODEL	5.7L	350 MAGNUM
Spark Plug Type	AC-MR43T or Champion RV15YC4 or NGK BR6FS	
Spark Plug Gap	.035 in. (.9mm)	
Timing @ Idle RPM	8° BTDC	10° BTDC ¹
Firing Order	1-8-4-3-6-5-7-2	
Electrical System	12-Volt Negative (-) Ground	
Alternator Rating	55 Amps	
Recommended Battery Rating	Minimum 375 cca, 475 mca or 90 Ah	

¹ A special procedure must be followed to check or adjust Timing. Consult your Authorized MerCruiser Dealer before attempting this procedure.

CAPACITIES

MODEL	5.0L	5.0LX
Crankcase Oil Capacity w/New Filter ¹	Approx. 5 U.S. Quarts. (4.7 L)	Approx. 5.5 U.S. Quarts. (5.2 L)
Drive Unit Oil Capacity ¹	Approximately 39.2 fl. oz. (1160ml)	
Drive Unit Oil Capacity (w/Reservoir)	Approximately 64 fl. oz. (1892ml)	
Seawater Cooling System ²	15 U.S. Quarts (14.1 L)	
Closed Cooling System	20 U.S. Quarts (19.3 L)	

¹ Always use dipstick to determine exact quantity of oil required.

² Seawater Cooling System capacity information is for winterization use only.

MODEL	5.7L	350 MAGNUM
Crankcase Oil Capacity w/New Filter ¹	Approx. 5.5 U.S. Quarts. (5.2 L)	
Drive Unit Oil Capacity ¹	Approximately 39.2 fl. oz. (1160ml)	
Drive Unit Oil Capacity (w/Reservoir)	Approximately 64 fl. oz. (1892ml)	
Seawater Cooling System ²	15 U.S. Quarts (14.1L)	
Closed Cooling System	20 U.S. Quarts (19.3L)	

¹ Always use dipstick to determine exact quantity of oil required.

² Seawater Cooling System capacity information is for winterization use only.

MAINTENANCE

WARNING

Always disconnect battery cables from battery before working around electrical system components to prevent injury to yourself or damage to electrical system.

IMPORTANT: Refer to **MAINTENANCE CHART** for complete listing of all scheduled maintenance to be performed. Some listings can be done by owner/operator, while others should be performed by an Authorized MerCruiser Dealer. Before attempting maintenance or repair procedures not covered in this manual, it is recommended that a MerCruiser Service Manual(s) be purchased and read thoroughly.

NOTE: Maintenance points are color coded for ease of identification. See the decal on engine for identification.

MAINTENANCE AIDS

- 1** Power Steering System - QuickSilver Power Trim and Steering Fluid or Dexron II automatic transmission fluid (ATF).
- 2** All Pivot Points - SAE 30W motor oil.
- 3** Fogging (Winterizing) Engine - Quicksilver Storage Seal or SAE 20W motor oil.
- 4** Exposed portion of Steering Cable and Propeller Shaft - Quicksilver Special Lubricant 101.
- 5** Stern Drive Unit - Quicksilver High Performance Gear Lube.
- 6** All Grease Fittings and Universal Joints - Quicksilver 2-4-C Marine Lubricant.
- 7** All Exterior Surfaces - Quicksilver Primer and Spray Paint and Quicksilver Corrosion Guard.
- 8** Power Trim System - Quicksilver Power Trim and Steering Fluid, or SAE 10W-30 motor oil.

(Continued on next page)

9 Crankcase Oil - Quicksilver 4-Cycle Marine Engine Oil (Refer to SPECIFICATIONS for alternatives and oil recommendations for varying ambient temperatures.)

10 Closed Cooling System Coolant - 50/50 mixture of ethylene glycol antifreeze (must meet GM specification 1825 M) and tap water. Areas where temperatures generally do not go below 32° F (0° C), rust inhibitor and tap water is acceptable.

11 Gasoline Stabilizer - Quicksilver Marine Fuel System Treatment and Stabilizer.

12 Grease Fittings on Drive Shaft Extension Models - Quicksilver 2-4-C Marine Lubricant.

MAINTENANCE CHART

Only perform maintenance which applies to your particular power package.

Scheduled Maintenance to be Performed by Owner/Operator

TASK	INTERVAL
Engine Crankcase Oil - Check level	Weekly
Closed Cooling Coolant - Check level	
Power Steering Fluid - Check level	
Stern Drive Unit Oil - Check level	
Battery - Check level and inspect for damage	
Fuel Pump Sight Tube - Check that no fuel is present	
Power Trim Pump Oil - Check level	
Anodes - Inspect for erosion	
Gear Housing Water Pickups - Check for ma- rine growth or debris	

Only perform maintenance which applies to your particular power package.

Scheduled Maintenance to be Performed by Owner/Operator

TASK	INTERVAL
Drive Belts (All) - Inspect condition and check tension	Every 100 Hours of Operation or 120 Days, Whichever Occurs First.
Propeller Shaft - Lubricate	Saltwater use: Every 50 Hours of Operation or 60 Days, Whichever Occurs First. Freshwater use: Every 100 Hours of Operation or 120 Days, Whichever Occurs First.
Power Package Exte- rior Surfaces - Spray with rust preventative	
Power Package Exterior Surfaces - Clean and paint	Once a Year
Cooling System - Flush seawater section	Saltwater use: After Each Use

Only perform maintenance which applies to your particular power package.

Scheduled Maintenance to be Performed by Dealer

TASK	INTERVAL
20-Hour Checkup (See NOTE 1)	At First 20 Hours of Operation
Seawater Pickup Pump -Disassemble and Inspect	Whenever Insufficient Seawater Flow is Suspected. (If Operating Temperature Exceeds Normal Range)
Crankcase Oil and Filter - Change	Every 100 Hours of Operation or Once Yearly, Whichever Occurs First.
Ignition System - Clean and inspect condition	
Flame Arrestor and Crankcase Ventilation Hose - Clean and inspect	
Stern Drive unit Oil - Change	
Gimbal Ring Clamping Screws - Retorque to 50-55 lb.ft. (67-74 N·m)	
Rear Engine Mounts - Check torque to 35-40 lb.ft. (47-54 N·m)	
Gimbal Bearing - Lubricate	
Cooling System - Clean, inspect	

NOTE 1: See "IMPORTANT INFORMATION" for a list of 20-Hour Checkup maintenance.

Only perform maintenance which applies to your particular power package.

Scheduled Maintenance to be Performed by Dealer

TASK	INTERVAL
Engine Alignment - Check (See Note 2)	<p>Saltwater use: Every 300 Hours of Operation or Once Yearly, Whichever Occurs First.</p> <p>Freshwater use: Every 300 Hours of Operation or Once Every Two Years, Whichever Occurs First.</p>
Engine Coupling, Universal Joint Shaft Splines - Lubricate (See Note 2)	
Universal Joint Cross Bearings - Inspect (See Note 2)	
Steering System - Lubricate and inspect for loose, damaged or missing parts	<p>Saltwater use: Every 50 Hours of Operation or 60 Days, Whichever Occurs First</p> <p>Freshwater use: Every 100 Hours of Operation or 120 Days, Whichever Occurs First.</p>
Electrical System - Check for loose or damaged wiring	
Cooling System Hoses and Clamps - Inspect for damage and deterioration. Check clamps for tightness	
Continuity Circuit - Check components for loose connections, broken or frayed wires	
Shift and Throttle Cable and Linkage - Lubricate and inspect for loose, damaged or missing parts	









NOTE 2: Refer to "Lubrication" for engine coupler lubrication and/or related information.

Only perform maintenance which applies to your particular power package.

Scheduled Maintenance to be Performed by Dealer

TASK	INTERVAL
Engine Exhaust System -Inspect externally for damage, deterioration and restrictions. Check clamps for tightness .	Saltwater use: Every 50 Hours of Operation or 60 Days, Whichever Occurs First Freshwater use: Every 100 Hours of Operation or 120 Days, Whichever Occurs First.
Ignition System - Check timing and adjust if needed	Once a Year
Fuel filters - Replace	
Steering Head and Remote Control - Inspect and lubricate	
Quicksilver MerCathode System - Test output	
Closed Cooling Coolant - Test for alkalinity	
Heat Exchanger - Clean seawater section	
Carburetor - Inspect and adjust	
Drive Unit Bellows and Clamps - Inspect	
Closed Cooling Coolant - Replace	

(THIS PAGE IS BLANK)

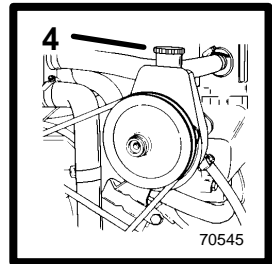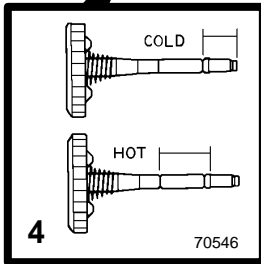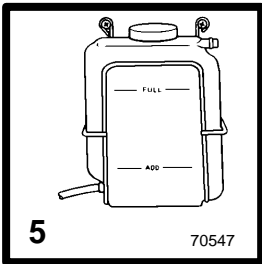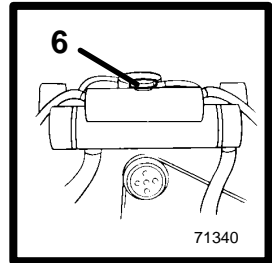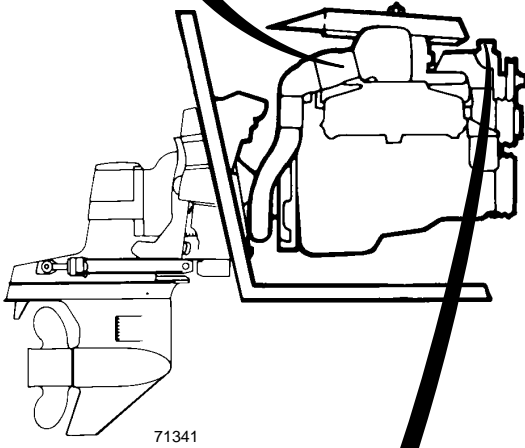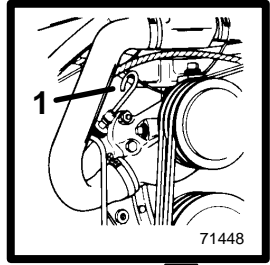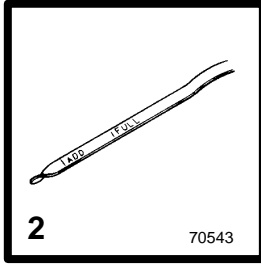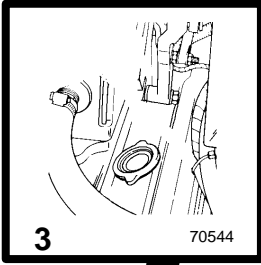

CA54

CHECKING FLUID LEVELS

Checking Crankcase Oil

Stop engine. Allow approximately five minutes for oil to drain into oil pan. Boat must be at rest in water.

- 1 Remove dipstick. Wipe clean and reinstall fully into dipstick tube.
- 2 Remove dipstick and observe oil level. Oil level must be between FULL and ADD. If oil level is below ADD:
- 3 Remove oil filler cap. Add specified oil to bring level up to, but not over, FULL mark on dipstick.

IMPORTANT: Do not overfill crankcase oil.

CA55

Checking Power Steering Pump Fluid

Stop engine and position drive unit Straight back.

- 4 Remove FILLCAP/DIPSTICK and observe level. Add specified fluid if required. Reinstall FILLCAP/DIPSTICK.

IMPORTANT: If fluid is not visible in pump, contact your Authorized MerCruiser Dealer.





CA56

Checking Engine Coolant - Closed Cooled Models Only

WARNING

Do not remove coolant cap when engine is hot. Coolant may discharge violently.

- 5 Check coolant level in coolant recovery bottle. Add specified coolant as required.
- 6 Periodically remove cap from coolant reservoir to ensure that coolant recovery system is functioning properly. Coolant level must be at top of reservoir filler neck. If coolant is low, inspect gasket in cap for damage and replace if necessary. To have cap tested, contact your Authorized MerCruiser Dealer. Inspect coolant recovery system for leaks.

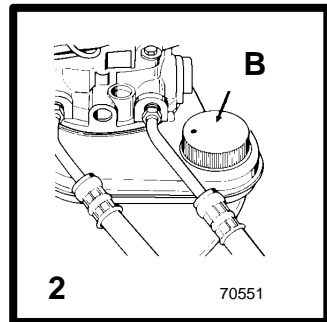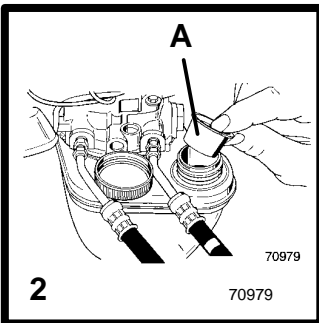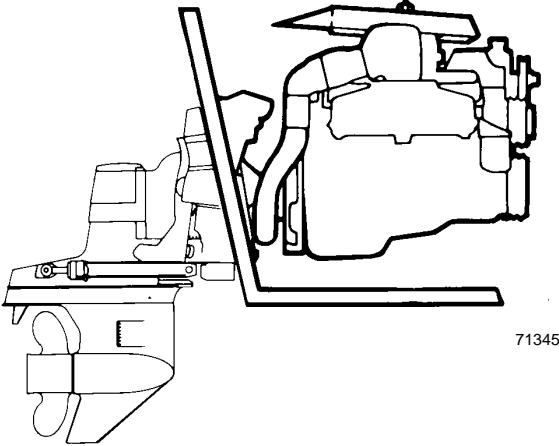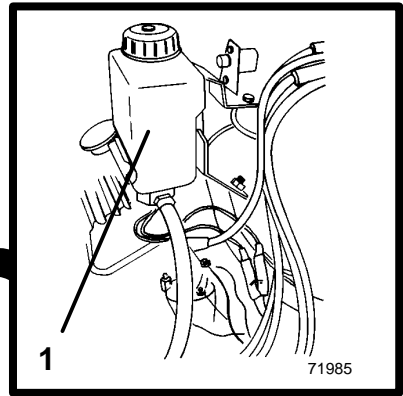

CB40

Checking Drive Unit Oil

1 Check gear lube monitor oil level; keep oil level at or near “Fill” line. Check for water at bottom of monitor and/or if oil appears a milk-tan, contact your Authorized MerCruiser Dealer immediately; both conditions indicate a water leak somewhere in the drive unit. See “Filling Reservoir.”

IMPORTANT: If more than 2 fl. oz. (59ml) of Quicksilver High Performance Gear Lube is required to fill monitor, a seal may be leaking. Damage to drive unit may occur due to lack of lubrication. Contact your Authorized MerCruiser Dealer for service.

CB41






Checking Power Trim Pump Fluid

Place drive unit in full down/in position.

2 Remove fill cap from reservoir and observe oil level. Level must be up to, but not over bottom of filler neck. Add Quicksilver Power Trim and Steering Fluid or SAE 10W-30 motor oil, if required, to bring level to bottom of filler neck. Replace cap.

A Check that “Cap plug” has been **removed** and **discarded** from filler neck.

B Fill cap is vented; frequently check that vent is open and unrestricted.

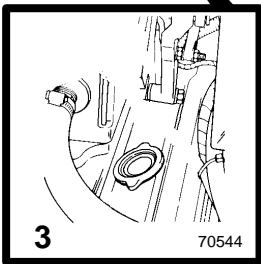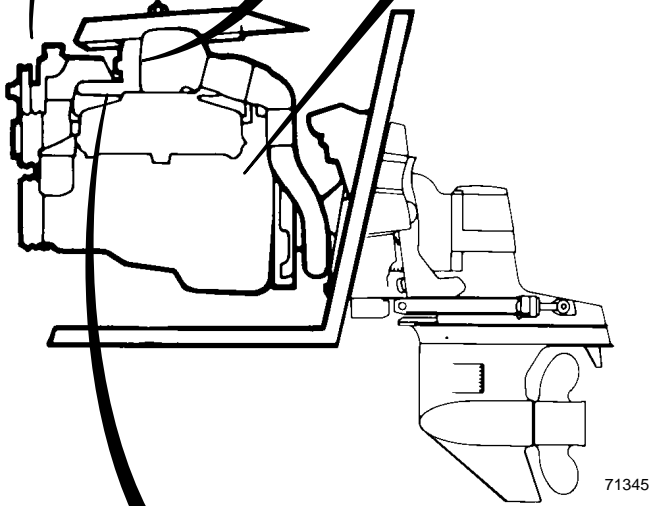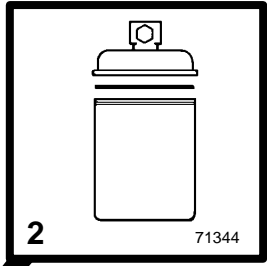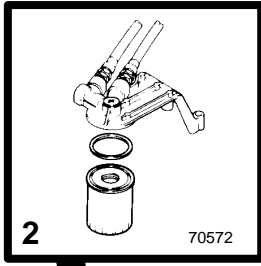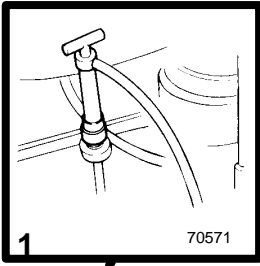

CHANGING FLUIDS

See MAINTENANCE CHART for lubricant change frequency. Lubricant should be changed before placing boat in storage.

Power Trim or Power Steering fluids do not require changing.

Coolant in closed cooling system should be changed at specified intervals by your Authorized MerCruiser Dealer.

Changing Crankcase Oil and Filter

IMPORTANT: Change oil when engine is warm from operation. Warm oil flows more freely, carrying away more impurities. Use only recommended motor oil (see SPECIFICATIONS).

1 With engine at normal operating temperature, remove dipstick. Install Quicksilver Crankcase Oil Pump onto dipstick tube.





Insert hose end of crankcase oil pump into an appropriate container and using pump handle, pump until crankcase is empty. Remove crankcase oil pump.

2 Turn oil filter counterclockwise (to left); remove and discard old oil filter and old sealing ring.

Coat sealing ring on new filter with motor oil. Install new sealing ring and filter by turning clockwise (to right). Tighten filter securely. Do not overtighten.

3 Remove oil filler cap. Add correct type oil (see SPECIFICATIONS) to bring level up to, but not over FULL mark on dipstick.

IMPORTANT: Always use dipstick to determine exactly how much oil is required.

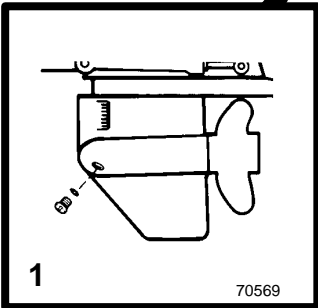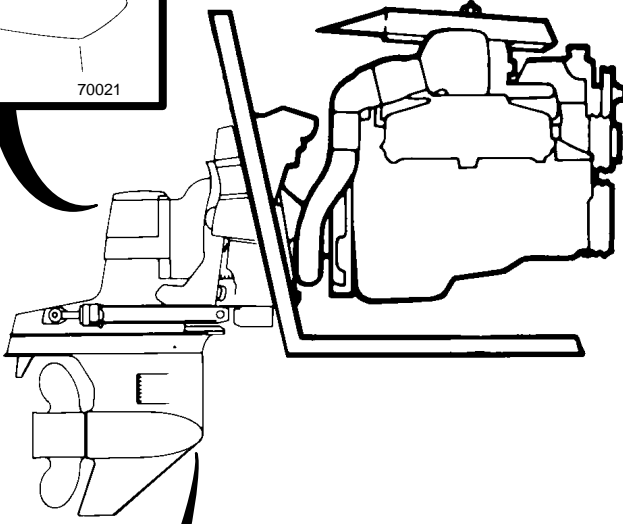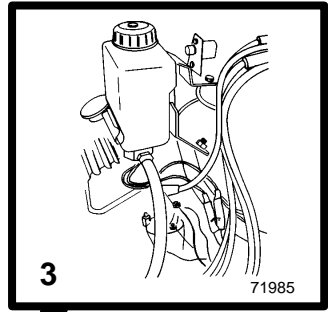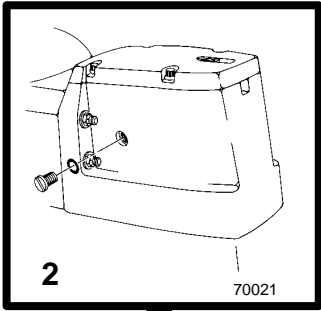

Changing Drive Unit Oil - Models With Gear Lube Monitor (if So Equipped)

IMPORTANT: Use only specified gear lubricant in drive unit. (See SPECIFICATIONS.)

Place drive unit in trim-out position (Do Not Raise to TRAILER Position).

- 1** Remove OIL FILL/DRAIN screw and sealing washer.
- 2** Remove OIL VENT screw and sealing washer. Allow oil to drain completely.


IMPORTANT: If any water drained from OIL FILL/DRAIN hole, or it oil appears milky brown, drive unit is leaking and should be checked immediately by your Authorized MerCruiser Dealer.

Lower drive unit so anti-ventilation plate is level. Fill drive unit through OIL FILL/ DRAIN hole with Specified Gear Lube, until an air-free stream of lubricant flows from OIL VENT hole.

Remove tube from OIL FILL/DRAIN hole. Quickly install sealing washer and OIL FILL/DRAIN screw. Tighten securely.

- 3** Fill gear lube monitor with Specified Gear Lube. When oil starts to run out the OIL VENT hole, reinstall sealing washer and OIL VENT screw. Tighten securely.

Continue to fill monitor to "FILL" mark on monitor. Lubricate O-ring on monitor neck with stern drive oil, to ensure ease of installation and removal of cap. Install monitor cap, do not overtighten.

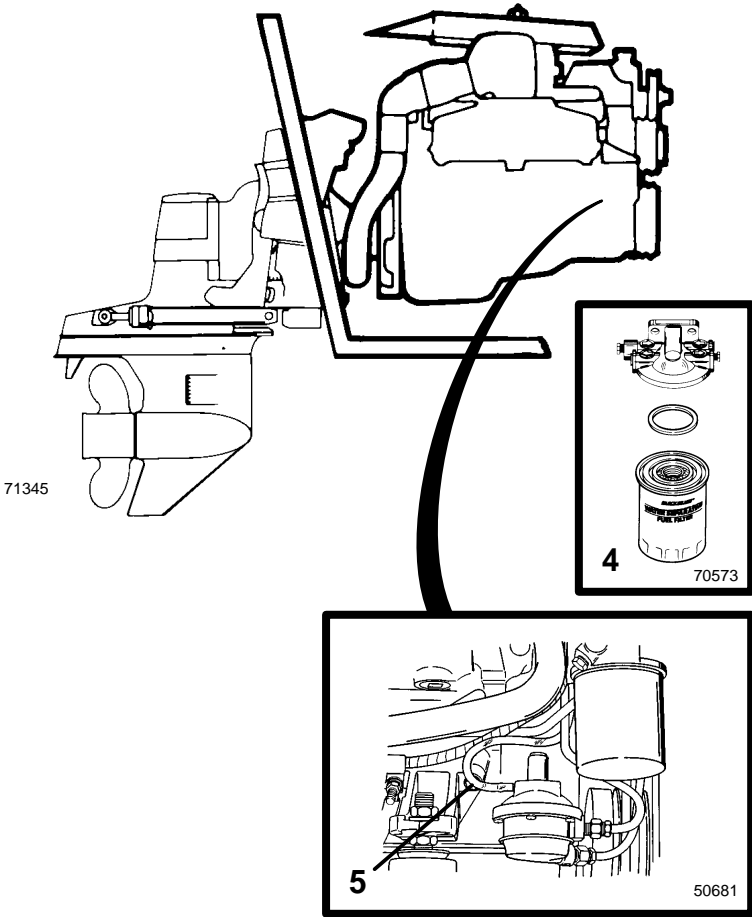

CA143

WATER SEPARATING FUEL FILTER (IF SO EQUIPPED)

WARNING

Be careful when changing water separating fuel filter. Gasoline is extremely flammable and highly explosive under certain conditions. Be sure ignition key is OFF. Do not smoke or allow spark or open flame in area when changing fuel filter. Wipe up any spilled fuel immediately.

4 Remove water separating fuel filter (by turning counterclockwise) and sealing ring(s) from mounting bracket and discard.

Coat sealing rings on new filter with motor oil. Thread filter clockwise onto bracket and tighten securely by hand Do not use a filter wrench.

Start and run engine. Check filter connection for gasoline leaks. If leaks exist recheck filter installation. If leaks continue stop engine immediately and contact your Authorized MerCruiser Dealer.

WARNING






Make sure no leaks exist before closing engine hatch.

CA145

FUEL PUMP SIGHT TUBE INSPECTION

5 The engine fuel pump is equipped with a sight tube which gives visible evidence of a ruptured fuel pump diaphragm.

If fuel is visible in tube, fuel pump should be replaced by your Authorized MerCruiser Dealer immediately.

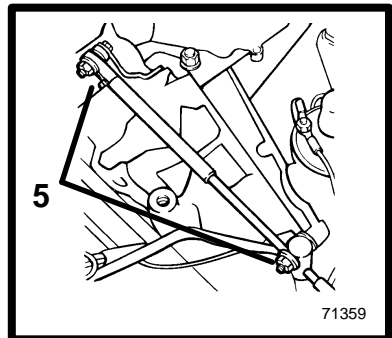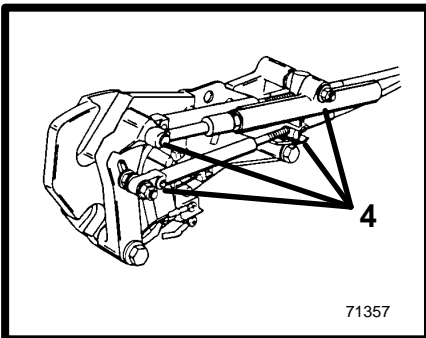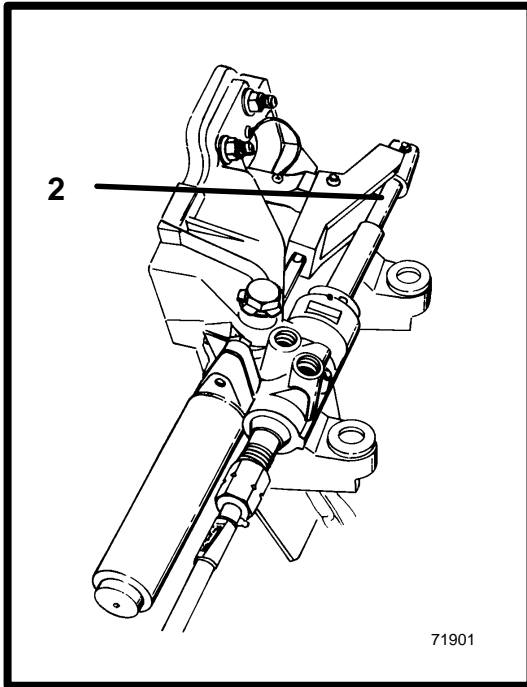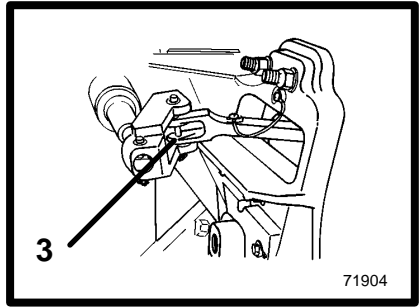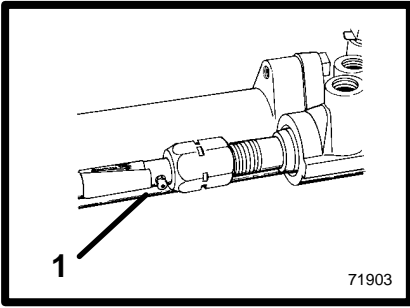

CA174

LUBRICATION

Steering System

1 If Steering Cable Has Grease Fittings: With cable fully retracted into cable housing, lubricate fitting with 2-4-C Marine Lubricant.

WARNING

Do not grease steering cable while extended. Hydraulic lock could occur and cause loss of steering control.

NOTE: If steering cable does not have grease fitting, inner wire of cable cannot be greased.

2 With steering cable fully extended lubricate exposed part of cable with Special Lubricant 101..

3 Lubricate steering system pivot points with SAE 30W motor oil.

On dual engine boats, lubricate all pivot points, including tie bar pivot points, with SAE 30W motor oil.

CA72



Shift Cable

4 Lubricate pivot points with SAE 30W motor oil.

CA73

Throttle Cable

5 Lubricate pivot points with SAE 30W motor oil.

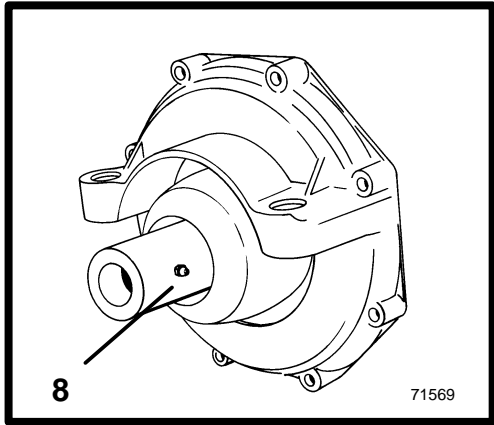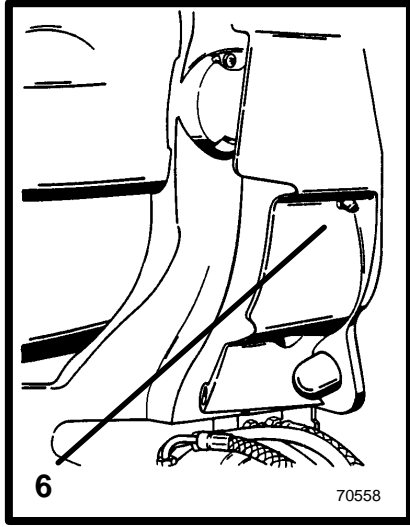


Drive Unit and Transom Assembly

- 6 Lubricate gimbal bearing with 2-4-C Marine Lubricant.
- 7 For propeller shaft lubrication, see PROPELLER.
- 8 Lubricate engine coupler splines thru grease fitting on coupler.

NOTE: Later engines are equipped with a sealed engine coupler and Perm-a-Lube U-joints. The sealed coupler and shaft splines can be lubricated without removing the drive unit. The Perm-a-Lube U-joints do not require lubrication. The engine coupler is lubricated with Quicksilver Engine Coupler Spline Grease. Contact your Authorized MerCruiser Dealer for this service.

CAUTION

Speedometer water hose must be disconnected from drive unit BEFORE removing drive unit. Failure to do this will result in a broken fitting if drive unit is removed.

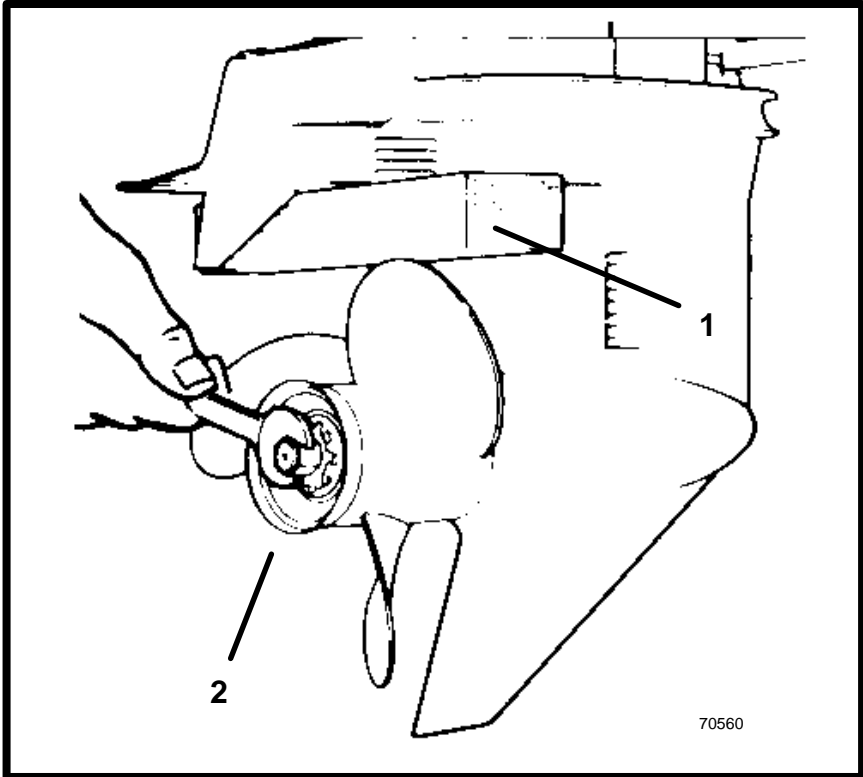

70560

CA77

PROPELLER

WARNING

Remote Control must be in NEUTRAL and ignition key removed from switch before removing and/or installing propeller.

WARNING

Place a block of wood between anti-ventilation plate and propeller to protect hands from propeller blades and to prevent propeller from rotating when removing propeller nut.

CAUTION

Periodically check propeller nut for tightness during boating season. A minimum of 55 lbs. ft. (75 N.m) torque is required.

CA78


Removal

- 1 Place wood block between propeller blade and anti-ventilation plate to prevent rotation. Straighten bent tabs on tab washer.
- 2 Turn propeller shaft nut counterclockwise to remove nut.
- 3 Slide tab washer, spline washer, continuity washer, propeller and thrust hub off propeller shaft.

CA79

Repair

Some damaged propellers can be repaired. See your dealer.



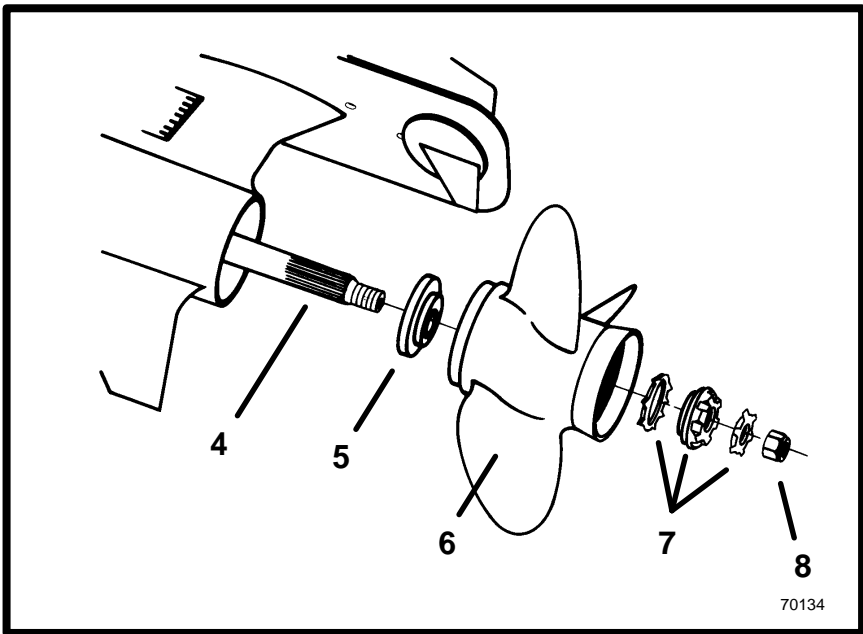


Installation

IMPORTANT: If reusing tab washer, carefully inspect tabs for cracks or other damage. Replace tab washer if condition is questionable.

- 4** Apply a liberal coat of one of the following Quicksilver lubricants to propeller shaft: Anti-Corrosion Grease, Special Lubricant 101, or 2-4-C Marine Lubricant.
- 5** Slide thrust hub into propeller hub, with stepped side toward propeller hub.
- 6** Align splines and place propeller and thrust hub on propeller shaft.
- 7** Place continuity washer, spline washer and tab washer onto shaft.
- 8** Install propeller nut. Tighten nut securely. A minimum of 55 lbs. ft. (75 N.m) torque is required. Bend three tabs on tab washer down into grooves in spline washer. After first use, bend the three tabs straight, retighten propeller nut to minimum 55 lbs. ft. torque (75 N.m). Bend tabs back down into spline washer. Check propeller at least after 20 hours of operation. Do not operate with loose propeller.

CA195

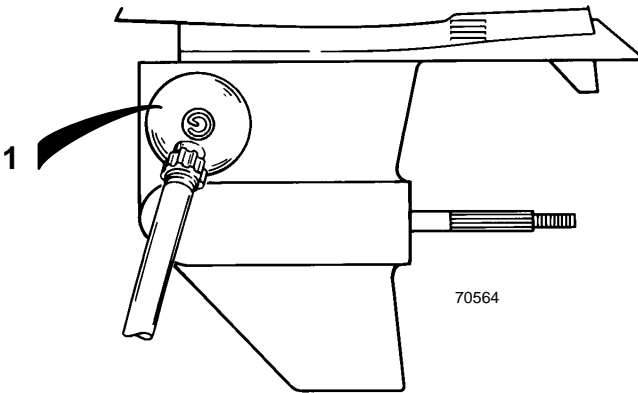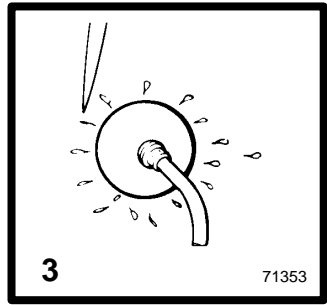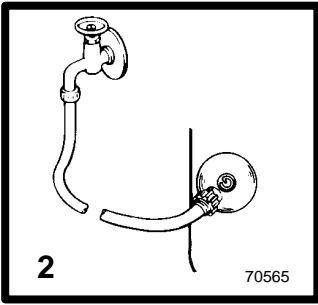

FLUSHING COOLING SYSTEM

WARNING

When flushing, be certain the area around propeller is clear, and no one is standing nearby. To avoid possible injury, remove propeller.

CAUTION

Do not run engine above 1500 RPM when flushing. Suction created by seawater pickup pump may collapse flushing hose, causing engine and/or drive unit to overheat.

CAUTION

Watch temperature gauge on dash to ensure that engine does not overheat.





To prevent silt and/or salt buildup in cooling system, flush with fresh-water at specified intervals.

Seawater (Raw-Water) Cooled Models

If flushing cooling system with boat in water, raise drive unit to TRAIL-ER position, install flushing attachment and lower drive unit to full down/in position.

- 1** Install Quicksilver flushing attachment (or equivalent) over water intake openings in gear housing.
- 2** Connect hose between flushing attachment and water tap.
- 3** With drive unit in normal operating position, partially open water tap (about 1/2 maximum). Place remote control in NEUTRAL, idle speed position and start engine. Operate engine at idle speed, in NEUTRAL, for about 10 minutes, or until discharge water is clear. Stop engine, shut off water and remove flushing attachment.

CA177

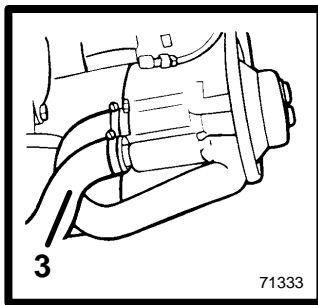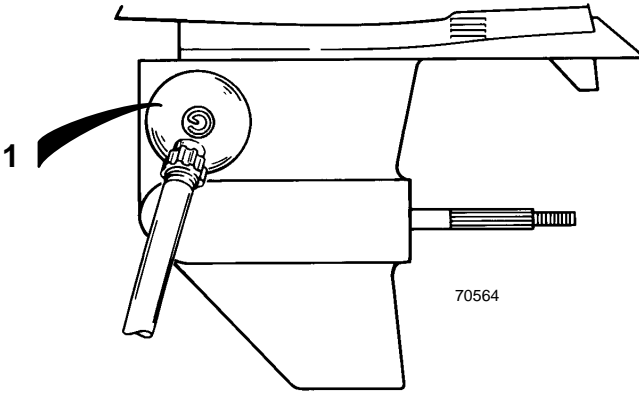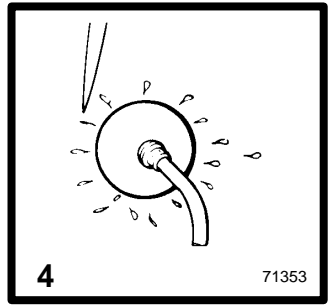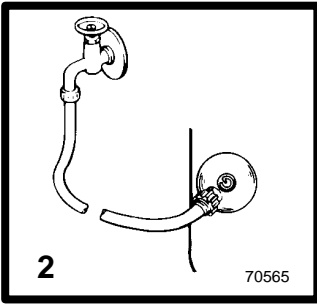

Closed Cooling (Coolant) Models

WARNING

When flushing, be certain the area around propeller is clear, and no one is standing nearby. To avoid possible injury, remove propeller.

CAUTION

Do not run engine above 1500 RPM when flushing. Suction created by seawater pickup pump may collapse flushing hose, causing engine and/or drive unit to overheat.

CAUTION

Watch temperature gauge on dash to ensure that engine does not overheat.





To prevent silt and/or salt buildup in cooling system, flush with fresh-water at specified intervals.

If flushing cooling system with boat in water, raise drive unit to TRAILER position, install flushing attachment and lower drive unit to full down/in position.

IMPORTANT: Water must be supplied to both the drive unit and engine during flushing procedure. This ensures that drive unit does not overheat while flushing engine.

- 1 Install Quicksilver flushing attachment (or equivalent) over water intake openings in gear housing.
- 2 Connect hose between flushing attachment and water tap.
- 3 Disconnect water inlet hose from aft end of seawater pickup pump. Using appropriate connector, connect another hose between connector and water tap.
- 4 With drive unit in normal operating position, start water flow to both flush devices.

Place remote control in NEUTRAL, idle speed position and start engine. Operate engine at idle speed, in NEUTRAL, for about 10 minutes, or until discharge water is clear. Stop engine. Shut off water, remove flushing connector from pump inlet and reconnect water inlet hose. Tighten hose clamp securely.

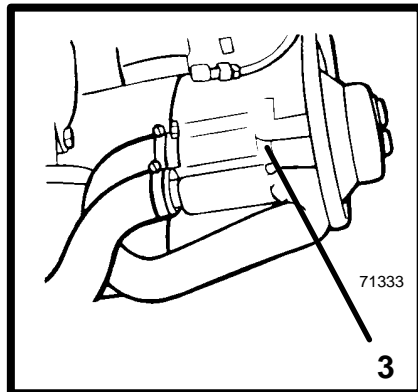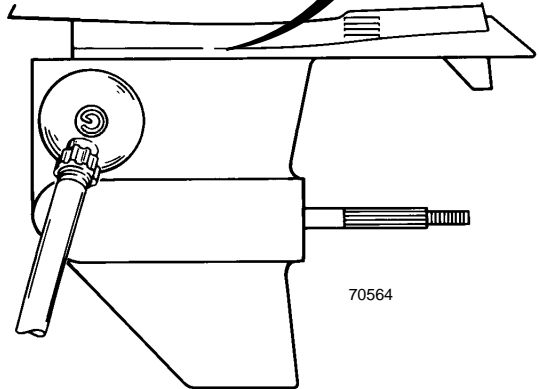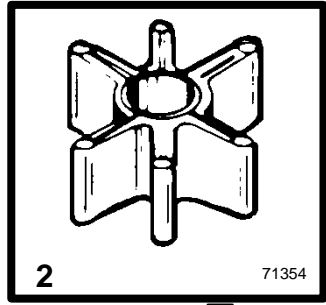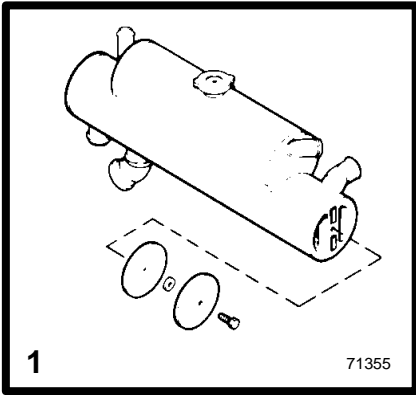

CLEANING SEAWATER SECTION OF HEAT EXCHANGER - CLOSED COOLING (COOLANT) MODELS ONLY

Seawater section of heat exchanger should be cleaned at least once a year or whenever decreased cooling efficiency is noticed.

1 Remove bolts securing end plates to each end of heat exchanger. Remove end plates, sealing washers and gaskets. Discard sealing washers and gaskets and clean gasket material from end plates and heat exchanger.

Clean water passages in heat exchanger by inserting a suitable size wire brush into each passage. Use compressed air to blow loose particles out. Apply Quicksilver Perfect Seal to both sides of new end plate gaskets. Assemble new gaskets, new sealing washers and end plates onto heat exchanger. Install bolts and tighten securely. Start engine and inspect cooling system for leaks.

CA88





SEAWATER PUMP IMPELLER

This maintenance should be performed by an Authorized MerCruiser Dealer.

2 Seawater Cooled Models

3 Closed Cooling Models

Seawater pump impeller should be inspected whenever insufficient seawater flow is suspected (if operating temperature exceeds normal range).

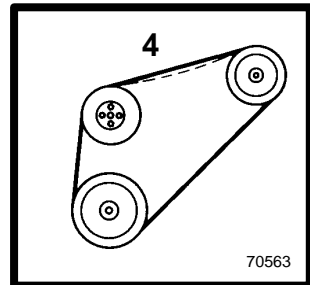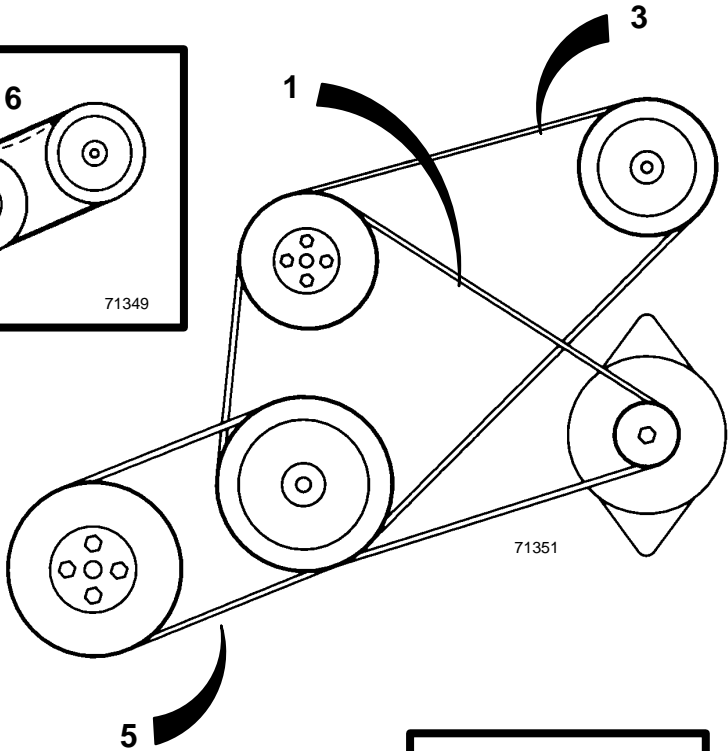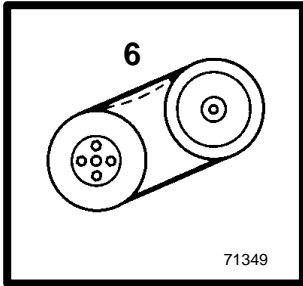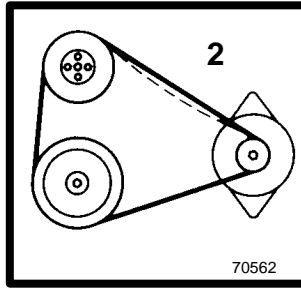

DRIVE BELTS

WARNING







Make sure engine is shut off and ignition key is removed before inspecting belts.

All drive belts must be periodically inspected for condition and tension.

Perform the following inspections of alternator drive belt, power steering pump drive belt (if so equipped) and seawater pickup pump drive belt (closed cooling).

If any drive belts need replacement or tension needs adjustment, see your Authorized MerCruiser Dealer.

- 1** Alternator Drive Belt - Inspect drive belt for excessive wear or damage.
- 2** Check belt tension by depressing upper strand of belt at point shown. Belt should depress 1/2 in. (13mm).
- 3** Power Steering Pump Drive Belt - Inspect drive belt for excessive wear or damage.
- 4** Check belt tension by depressing upper strand of belt at point shown. Belt should depress 1/4 in. (6mm).
- 5** Seawater Pickup Pump Drive Belt - Inspect drive belt for excessive wear or damage.
- 6** Check belt tension by depressing upper strand of belt at point shown. Belt should depress 1/4 in. (6mm).

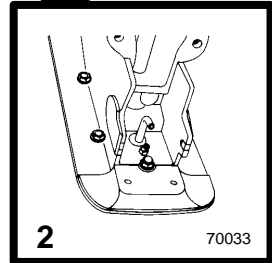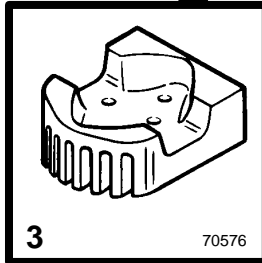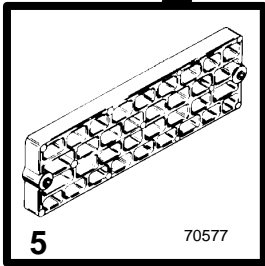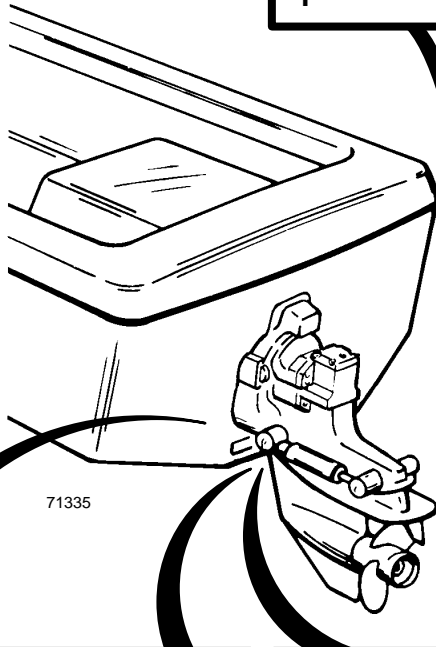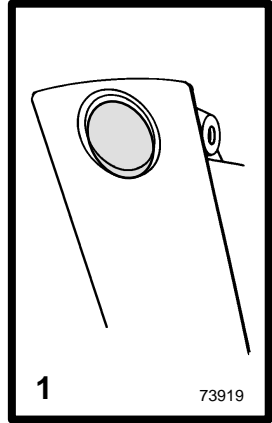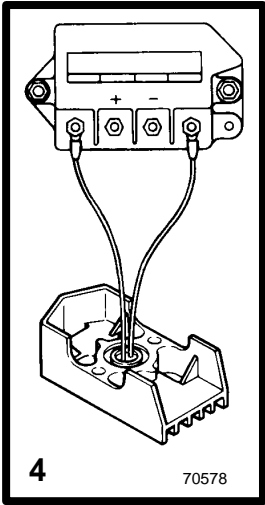

CORROSION AND CORROSION PROTECTION

Whenever two or more dissimilar metals (like those found on the stern drive) are submerged in a conductive solution, such as saltwater, polluted water, or water with a high mineral content, a chemical reaction takes place causing electrical current to flow between metals. The electrical current flow causes the metal that is most chemically active, or anodic, to erode. This is known as galvanic corrosion and, if not controlled, it will in time cause the need for replacement of power package components exposed to water.

IMPORTANT: Replace sacrificial anodes if eroded 50% or more.

1 Universal Anodic Plate - serves as a sacrificial anode.

Remove plug from drive shaft housing to access attaching screw and insert 1/2 inch socket. Unthread attaching screw and remove universal anodic plate. **Do not remove screw.** Install new anodic plate and tighten screw securely. Install plug.

2 Anodic Plate - serves as a sacrificial anode. Unscrew both attaching screws and remove. Install a new anodic plate and tighten securely.



3 Block - Is mounted to underside of gimbal housing and serves as a sacrificial anode. Remove two bolts to change block.

4 MerCathode System (if so equipped) - Electrode assembly replaces Anodic block.

System should be tested to ensure adequate output.

Test should be made where boat is moored, using Quicksilver Reference Electrode and Test Meter. Contact your Authorized MerCruiser Dealer to arrange for this test.

5 Anode Kit (if so equipped) - Mounted to boat transom. Acts as a sacrificial anode. Replace as required.

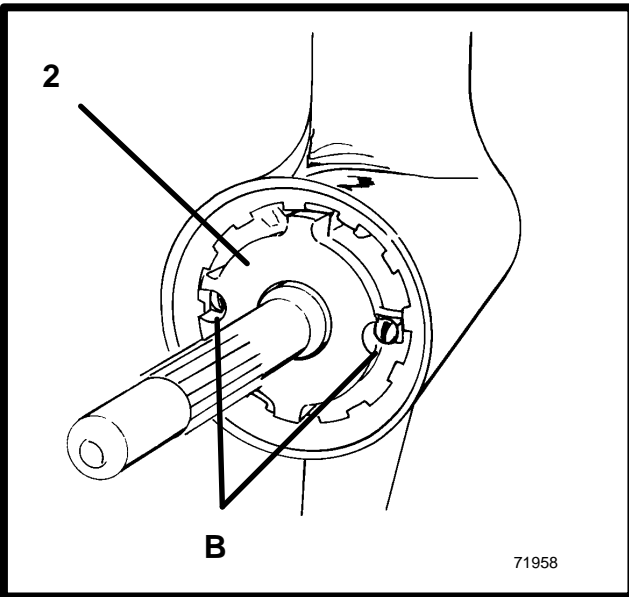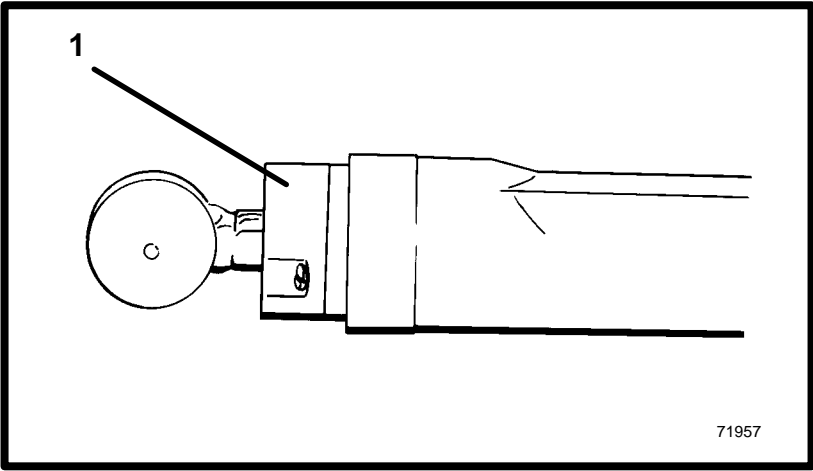

CA163


1 Trim Cylinder Anodes - are mounted on each trim cylinder. To replace the trim cylinder anodes:

- A** Remove two screws from each anode.
- B** Install new anodes and tighten securely.

CA164

2 Propeller Anode - is located in front of the propeller, between the front side of the propeller and the gear housing. Refer to "Propeller" section in this manual for propeller removal and installation. To replace the propeller anode:

- A** Remove propeller.
- B** Remove two screws from anode.
- C** Install new anode and tighten securely.
- D** Reinstall propeller.

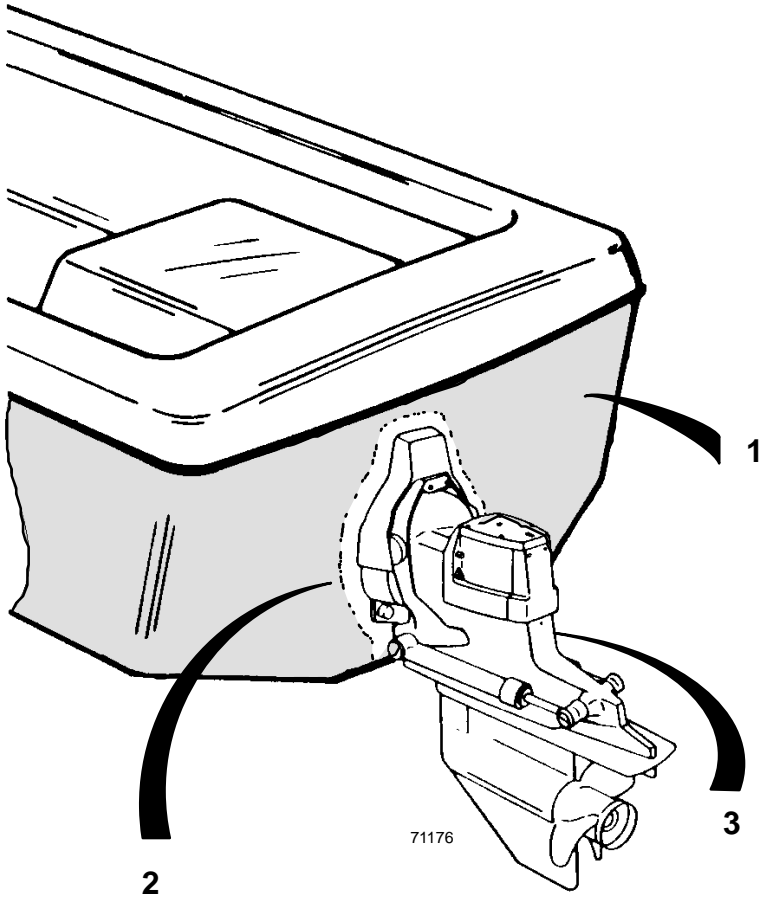

In addition to the corrosion protection devices, the following steps should be taken to inhibit corrosion:

IMPORTANT: Corrosion damage that results from the improper application of anti-fouling paint will not be covered by the limited warranty.

1 Painting Boat Hull or Boat Transom: Antifouling paint may be applied to boat hull and boat transom but you must observe the following precautions:

IMPORTANT: DO NOT paint anodes or MerCathode System reference electrode and anode, as this will render them ineffective as galvanic corrosion inhibitors.

IMPORTANT: If anti-fouling protection is required for boat hull or boat transom, copper or tin base paints, if not prohibited by law, can be used. If using copper or tin based anti-fouling paints, observe the following:

2 Avoid any electrical interconnection between the MerCruiser Product, Anodic Blocks, or MerCathode System and the paint by allowing a minimum of 1-1/2 in. (40mm) UNPAINTED area on transom of the boat around these items.

3 Painting Drive Unit or Transom Assembly: Drive unit and transom assembly should be painted with a good quality marine paint or an anti-fouling paint that DOES NOT contain copper, tin, or any other material that could conduct electrical current. Do not paint drain holes, anodes, MerCathode system, and items specified by boat manufacturer.

4 Spray power package components on inside of boat every 2-3 weeks with Quicksilver Corrosion Guard to protect finish from dulling and corrosion. External power package components may also be sprayed.

5 All lubrication points, especially steering system, shift and throttle linkages, should be kept well lubricated.

6 Flush cooling system periodically, preferably after each use.

MISCELLANEOUS MAINTENANCE

BATTERY

All lead acid batteries discharge when not in use. Recharge every 30 to 45 days, or when specific gravity drops below battery manufacturer's specifications.

Refer to specific instructions and warnings accompanying your battery. If this information is not available, observe the following precautions when handling a battery.

WARNING

Do not use jumper cables and a booster battery to start engine. Do not recharge a weak battery in the boat. Remove battery and recharge in a ventilated area away from fuel vapors, sparks or flames.

WARNING

Batteries contain acid which can cause severe burns-Avoid contact with skin, eyes and clothing. Batteries also produce hydrogen and oxygen gases when being charged. This explosive gas escapes fill/vent cell caps and may form an explosive atmosphere around the battery for several hours after it has been charged. Sparks or flames can ignite the gas and cause an explosion which may shatter the battery and could cause blindness or other serious injury.

Safety glasses and rubber gloves are recommended when handling batteries or filling with electrolyte. Hydrogen gases that escape from the battery during charging are explosive. When charging batteries, be sure battery compartment or area where batteries are located, is well-vented. Battery electrolyte is a corrosive acid and should be handled with care. If electrolyte is spilled or splashed on any part of the body, immediately flush the exposed area with liberal amounts of water and obtain medical aid as soon as possible.

BOTTOM OF BOAT

To maintain maximum speed, the following conditions of the boat bottom should be observed:

- Clean, free of barnacles and marine growth.
- Free of distortion, nearly flat where it contacts water.
- Straight and smooth, fore and aft.

Antifouling Paints

See Antifouling Paint recommendations and related information on previous pages.

IMPORTANT: Refer to CORROSION AND CORROSION PROTECTION for additional information.

INSPECTION AND MAINTENANCE

Inspect power package often, and at regular intervals, to help maintain its top operating performance, and correct potential problems before they occur. The entire power package should be checked carefully, including all accessible engine parts.

Check for loose, damaged or missing parts, hoses and clamps; tighten or replace as required.

Check plug leads and electrical leads for damage.

Remove and inspect propeller. If badly nicked, bent or cracked, see your dealer.

Repair nicks and corrosion damage on power package exterior finish. Use Quicksilver spray paints - see your Authorized MerCruiser Dealer.

COLD WEATHER OR EXTENDED STORAGE

POWER PACKAGE LAY UP

IMPORTANT: This service should be performed by an Authorized MerCruiser Dealer.

CAUTION

DO NOT operate engine without water flowing thru seawater pickup pump, as pump impeller may be damaged and subsequent overheating damage to engine or stern drive unit may result.

IMPORTANT: Before starting engine, a water source must be attached to the seawater intake openings in gear housing. Follow all warnings, and flushing attachments procedures stated, in “FLUSHING COOLING SYSTEM.”

- 1 Run engine sufficiently to bring it up to normal operating temperature. Shut off engine and change oil and oil filter.
- 2 Flush cooling system.

WARNING

Be sure engine compartment is well ventilated and no gasoline vapors are present during the following operation - to prevent a potential fire hazard.

3 Remove flame arrestor and restart engine. While operating engine at fast idle (1000-1500 RPM), fog internal surfaces of engine by squirting approximately 8 ounces (227 g) of Quicksilver Storage Seal (or if not available, SAE 20W motor oil) into carburetor bores. Stall engine by squirting last 2 ounces (57 g) of Storage Seal (or oil) rapidly into carburetor. Turn ignition key to OFF position.



4 Fill fuel tank(s) with fresh gasoline (that does not contain alcohol) and a sufficient amount of Quicksilver Gasoline Stabilizer and Conditioner to treat gasoline. Follow instructions on container.

5 If boat is to be placed in storage (with fuel containing alcohol in fuel tanks), carburetors must be run dry at idle RPM. Fuel tanks should be drained completely and Quicksilver Gasoline Stabilizer and Conditioner added to any fuel remaining in the tank. Also, refer to FUEL REQUIREMENTS.

6 Close fuel shutoff valve, if so equipped.

 CAUTION

Stern drive unit should be stored in full “down” position. Universal Joint bellows may develop a “set” if unit is stored in raised position and may fail when unit is returned to service.

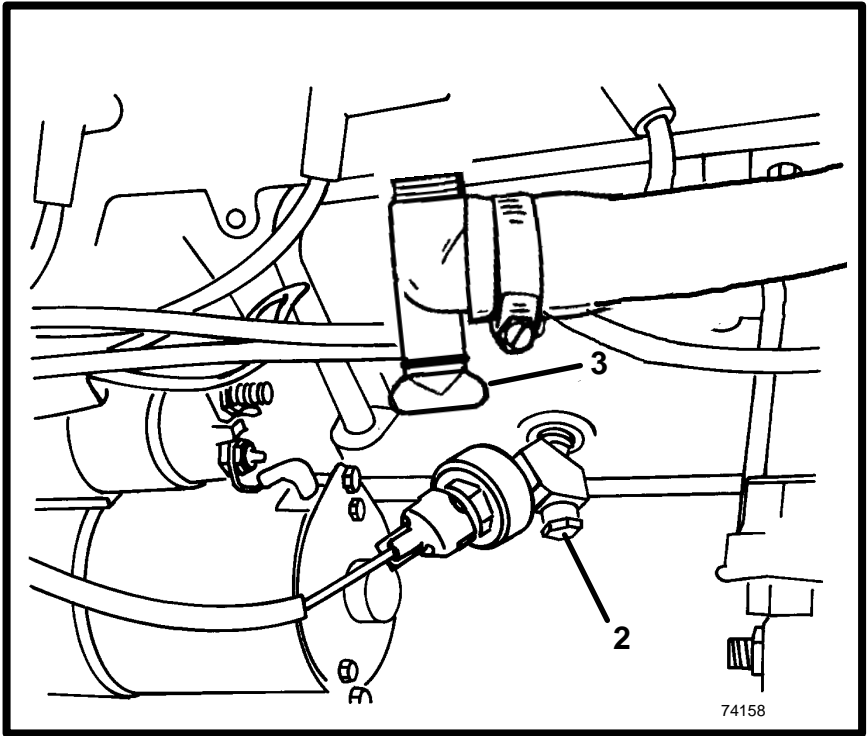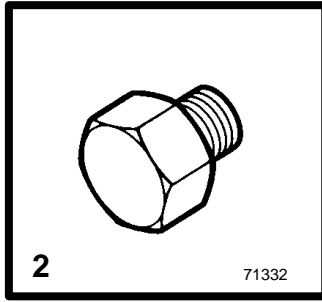

DRAINING INSTRUCTIONS

Draining Seawater (Raw-water) Cooled Models





CAUTION

If boat is to remain in water after draining, seawater inlet hose must be removed and plugged to prevent a siphoning action that may occur, allowing seawater to flow from the drain holes or removed hoses.

CAUTION

Seawater section of cooling system **MUST BE COMPLETELY** drained for winter storage, or immediately after cold weather use, if the possibility of freezing temperatures exist. Failure to comply may result in trapped water causing freeze and/or corrosion damage to engine.

- 1** Ensure engine is as level as possible to ensure complete draining of cooling system.
- 2** Remove drain plugs from cylinder block as follows:
 - A 5.0L/5.7L Models (Port & Starboard)** - from cylinder block.
 - B 350 Magnum Model (Port Side)** -from cylinder block.
 - C 350 Magnum Model (Starboard Side)** - from Y-fitting. Do not disturb the Y-fitting when removing the drain plug. There is an ignition control “Knock Sensor” in the upper hole of the fitting. This sensor must not be loosened or removed. It is tightened to a critical specification at the factory.
- 3** Remove drain plugs from bottom of exhaust manifolds (port and stbd).
- 4** Repeatedly clean out drain holes using a stiff piece of wire. Do this until entire system is drained.

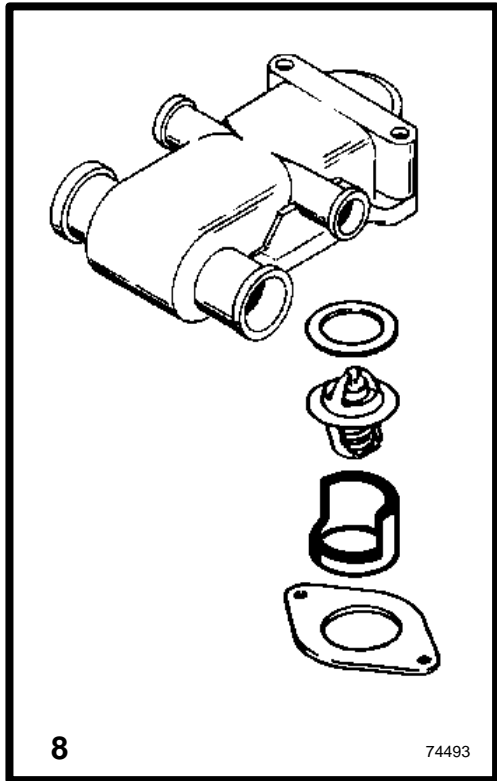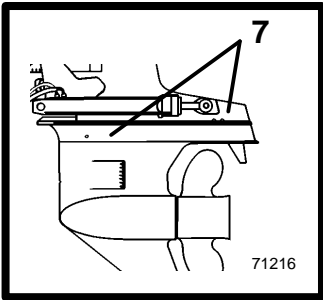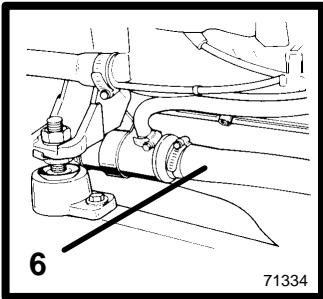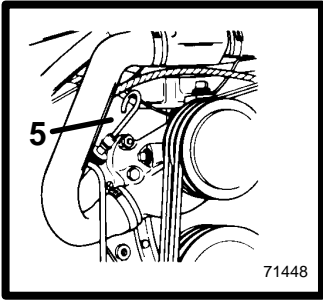

Loosen hose clamps and remove the following hoses:




- 5 From engine circulating pump.
- 6 From oil/power steering fluid cooler.
- 7 Make sure gear housing water drain holes are open.

Crank engine over, slightly, with starter motor, to purge any water trapped in seawater pickup pump. Do not allow engine to start.

After cooling system has been drained completely, install petcocks, reconnect hoses and tighten all hose clamps securely.

IMPORTANT: MerCruiser recommends that propylene glycol (a nontoxic and environmentally safe) antifreeze be used in the seawater section of the cooling system for cold weather or extended storage. Make sure that the propylene glycol antifreeze contains a rust inhibitor and is recommended for use in marine engines. Be certain to follow the propylene glycol manufacturer's recommendations.

8 For additional assurance against freezing and rust, remove the thermostat cover and thermostat. Fill the engine seawater cooling system with a mixture of antifreeze and tap water mixed to manufacturer's recommendation to protect engine to the lowest temperature to which it will be exposed during cold weather or extended storage. Using a new gasket, reinstall thermostat and cover. Tighten cover bolts securely.

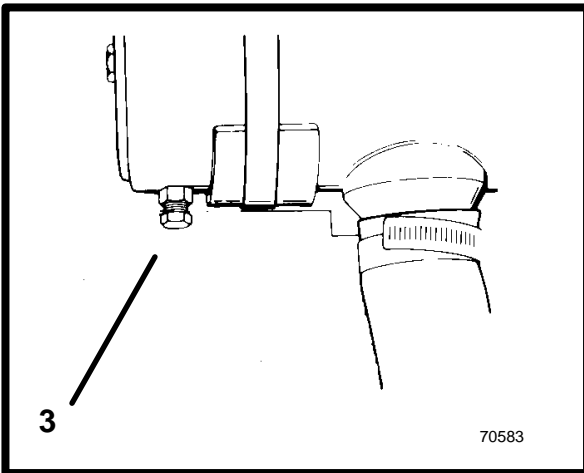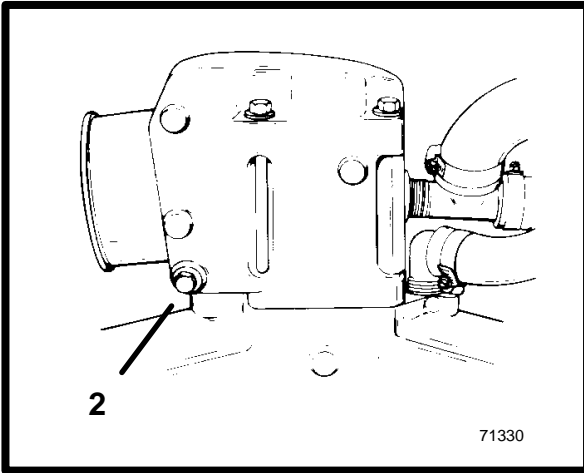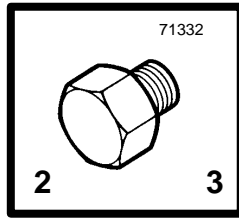

Draining Closed Cooling (Coolant) Models

IMPORTANT: Drain seawater section of closed cooling system only.

CAUTION

If boat is to remain in water after draining seawater inlet hose must be removed and plugged to prevent a siphoning action that may occur allowing seawater to tow from the drain holes or removed hoses.

IMPORTANT: Boat must be as level as possible to ensure complete draining of cooling system.




CAUTION

Seawater section of cooling system **MUST BE COMPLETELY** drained for winter storage or immediately after cold weather use if the possibility of freezing temperatures exist. Failure to comply may result in trapped water causing freeze and/or corrosion damage to engine.

IMPORTANT: Closed cooling section must be kept filled year-round with recommended coolant. If engine will be exposed to freezing temperatures, make sure closed cooling section is filled with an ethylene glycol antifreeze and water Solution properly mixed to protect engine to lowest temperature to which it will be exposed.

IMPORTANT: Do not use Propylene Glycol Antifreeze in the closed cooling section of the engine.

- 1 Ensure engine is as level as possible to ensure complete draining of cooling system.
- 2 **Remove** drain plugs from both exhaust elbows.
- 3 **Remove** drain plug from heat exchanger.
- 4 **Repeatedly** clean out drain holes using a stiff piece of wire. Do this until entire system is drained.

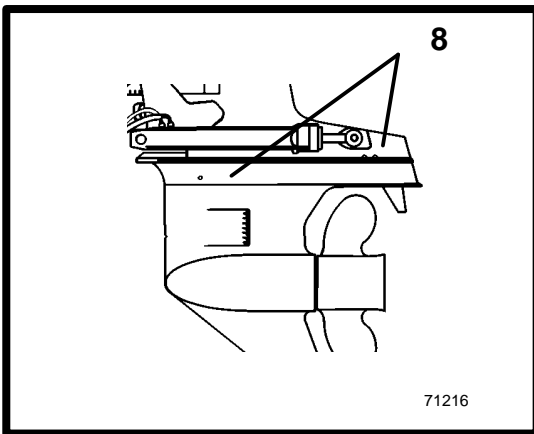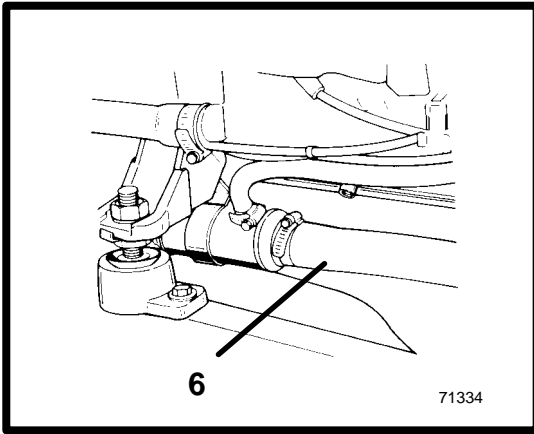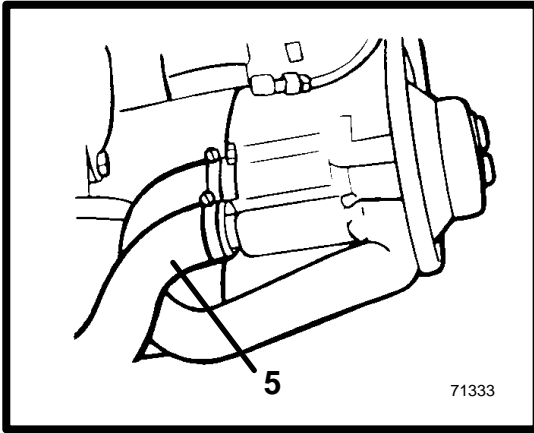

CA114

Loosen hose clamps and remove the following hoses:

5 From seawater pickup pump inlet.

6 From power steering fluid cooler.

7 Crank engine over slightly with starter motor to purge any water trapped in seawater pickup pump. **DO NOT** allow engine to start.

8 Make sure gear housing water drain holes and speedometer pitot hole are open and unobstructed.

After seawater section of cooling system has been drained completely, coat threads of drain plugs with Quicksilver Perfect Seal and reinstall. Reconnect hoses and tighten all hose clamps securely.

After draining perform all checks inspections, lubrication and fluid changes outlined in MAINTENANCE CHART under **AT LEAST ONCE A YEAR**.

Store boat with drive unit in full “down” position.

CA115

BATTERY WINTER STORAGE

Follow battery manufacturer's instructions for storage.

CA116

POWER PACKAGE RECOMMISSIONING

WARNING

To prevent possible injury or damage to equipment, do not install battery until all maintenance has been performed on engine.

1 Check that all cooling system hoses are connected properly and hose clamps are tight.

CAUTION

When installing battery, be sure to connect **NEGATIVE (-)** battery cable to **NEGATIVE (-)** battery terminal and **POSITIVE (+)** battery cable to **POSITIVE (+)** battery terminal. If battery cables are reversed, electrical system damage will result.

2 Install fully-charged battery. Clean battery cable clamps and terminals and reconnect cables (see CAUTION listed above). Tighten each cable clamp securely when connecting.

3 Coat terminal connections with a battery terminal anti-corrosion agent.

4 Perform all checks in OPERATION CHART in the BEFORE STARTING column.

CAUTION

Refer to **FLUSHING COOLING SYSTEM** before starting engine.

5 Start engine and closely observe instrumentation to make sure that all systems are functioning correctly.

6 Carefully inspect engine for fuel, oil, fluid, water and exhaust leaks.

7 Check steering system, shift and throttle control for proper operation.

8 Check fuel pump sight tube for evidence of fuel (indicating a ruptured fuel pump diaphragm).

TROUBLESHOOTING

STARTER MOTOR WILL NOT CRANK ENGINE, OR CRANKS SLOW

Possible Cause	Remedy
<ul style="list-style-type: none">• Battery switch turned off.	<ul style="list-style-type: none">• Turn switch on.
<ul style="list-style-type: none">• Remote control not in neutral position.	<ul style="list-style-type: none">• Position control lever in neutral.
<ul style="list-style-type: none">• Open circuit breaker or blown fuse.	<ul style="list-style-type: none">• Check and reset circuit breaker or replace fuse.
<ul style="list-style-type: none">• Loose or dirty electrical connections or damaged wiring.	<ul style="list-style-type: none">• Check all electrical connections and wires (especially battery cables). Clean and tighten faulty connection.
<ul style="list-style-type: none">• Bad battery.	<ul style="list-style-type: none">• Test and replace if bad.

ENGINE WILL NOT START, OR IS HARD TO START

Possible Cause	Remedy
<ul style="list-style-type: none">• Improper starting procedure.	<ul style="list-style-type: none">• Read starting procedure.
<ul style="list-style-type: none">• Empty fuel tank or fuel shutoff valve closed.	<ul style="list-style-type: none">• Fill tank or open valve.
<ul style="list-style-type: none">• Faulty fuel pump.	<ul style="list-style-type: none">• Check sight tube for fuel. Have Authorized Mer-Cruiser Dealer replace pump, if fuel is present.
<ul style="list-style-type: none">• Choke not operating properly.	<ul style="list-style-type: none">• Check that choke is closed when engine is cold. Check that it opens when engine warms up.
<ul style="list-style-type: none">• Engine flooded.	<ul style="list-style-type: none">• Do not attempt to start engine for at least 5 minutes. Refer to STARTING PROCEDURES.
<ul style="list-style-type: none">• Faulty ignition system component.	<ul style="list-style-type: none">• Service ignition system.
<ul style="list-style-type: none">• Clogged fuel filters.	<ul style="list-style-type: none">• Replace filters.
<ul style="list-style-type: none">• Stale or contaminated fuel.	<ul style="list-style-type: none">• If contaminated, drain tank. Fill with fresh fuel.
<ul style="list-style-type: none">• Fuel line or tank vent line kinked or clogged.	<ul style="list-style-type: none">• Replace kinked lines or blow out lines with compressed air to remove obstruction.

ENGINE RUNS ROUGH, MISSES AND/OR BACKFIRES

Possible Cause	Remedy
<ul style="list-style-type: none">• Choke not operating properly.	<ul style="list-style-type: none">• Check that choke is closed when engine is cold. Check that it opens when engine warms up.
<ul style="list-style-type: none">• Idle speed too low.	<ul style="list-style-type: none">• Check idle speed and adjust, if necessary.
<ul style="list-style-type: none">• Faulty ignition system component.	<ul style="list-style-type: none">• Service ignition system.
<ul style="list-style-type: none">• Clogged fuel filters.	<ul style="list-style-type: none">• Replace filters.
<ul style="list-style-type: none">• Stale or contaminated fuel.	<ul style="list-style-type: none">• If contaminated, drain tank. Fill with fresh fuel.
<ul style="list-style-type: none">• Kinked or clogged fuel line or fuel tank vent line.	<ul style="list-style-type: none">• Replace kinked line or blow out line with compressed air to remove obstruction.
<ul style="list-style-type: none">• Flame arrestor plugged with foreign material.	<ul style="list-style-type: none">• Clean flame arrestor.

POOR PERFORMANCE

Possible Cause	Remedy
<ul style="list-style-type: none">• Throttle not fully open.	<ul style="list-style-type: none">• Inspect throttle cable and linkages for proper operation.
<ul style="list-style-type: none">• Damaged or improper propeller.	<ul style="list-style-type: none">• Replace.
<ul style="list-style-type: none">• Excessive bilge water.	<ul style="list-style-type: none">• Drain and check for cause of entry.
<ul style="list-style-type: none">• Boat overloaded or load improperly distributed.	<ul style="list-style-type: none">• Reduce load or redistribute load more evenly.
<ul style="list-style-type: none">• Boat bottom fouled or damaged.	<ul style="list-style-type: none">• Clean or repair as necessary.
<ul style="list-style-type: none">• Flame arrestor dirty.	<ul style="list-style-type: none">• Clean flame arrestor .

EXCESSIVE ENGINE TEMPERATURE

Possible Cause	Remedy
<ul style="list-style-type: none">• Seacock closed.	<ul style="list-style-type: none">• Open.
<ul style="list-style-type: none">• Drive belt loose or in poor condition.	<ul style="list-style-type: none">• Replace and/or adjust belt.
<ul style="list-style-type: none">• Seawater pickups obstructed.	<ul style="list-style-type: none">• Remove obstruction.
<ul style="list-style-type: none">• Faulty thermostat.	<ul style="list-style-type: none">• Replace.
<ul style="list-style-type: none">• Coolant level low in closed cooling section (If Equipped).	<ul style="list-style-type: none">• Check for cause of low coolant level and repair. Fill system with proper coolant solution.
<ul style="list-style-type: none">• Heat exchanger cores plugged with foreign material (If Equipped).	<ul style="list-style-type: none">• Clean heat exchanger.
<ul style="list-style-type: none">• Loss of pressure in closed cooling section (If Equipped).	<ul style="list-style-type: none">• Check for leaks. Clean, inspect and test pressure cap.
<ul style="list-style-type: none">• Closed cooling section dirty (If Equipped).	<ul style="list-style-type: none">• Clean.
<ul style="list-style-type: none">• Faulty seawater pickup pump.	<ul style="list-style-type: none">• Repair.
<ul style="list-style-type: none">• Seawater discharge restricted or plugged.	<ul style="list-style-type: none">• Clean exhaust elbows.

INSUFFICIENT ENGINE TEMPERATURE

Possible Cause	Remedy
<ul style="list-style-type: none">• Faulty Thermostat.	<ul style="list-style-type: none">• Replace.

LOW ENGINE OIL PRESSURE

Possible Cause	Remedy
<ul style="list-style-type: none">• Insufficient oil in crankcase.• Excessive oil in crankcase (causing it to become aerated).• Diluted or improper viscosity oil.	<ul style="list-style-type: none">• Check and add oil.• Check and remove required amount of oil. Check for cause of excessive oil (improper filling, bad fuel pump, etc.).• Change oil and oil filter, using correct grade and viscosity oil. Determine cause for dilution (excessive idling, faulty fuel pump, etc.).

BATTERY WILL NOT COME UP ON CHARGE

Possible Cause	Remedy
<ul style="list-style-type: none">• Excessive current draw from battery.• Loose or dirty electrical connections or damaged wiring.• Alternator drive belt loose or in poor condition.• Unacceptable battery condition.	<ul style="list-style-type: none">• Turn off non-essential accessories.• Check all associated electrical connections and wires (especially battery cables). Clean and tighten faulty connections. Repair or replace damaged wiring.• Replace and/or adjust.• Test battery.

REMOTE CONTROL OPERATES HARD, BINDS, HAS EXCESSIVE FREE-PLAY OR MAKES UNUSUAL SOUNDS

Possible Cause	Remedy
<ul style="list-style-type: none">• Insufficient lubrication on shift and throttle linkage fasteners.	<ul style="list-style-type: none">• Lubricate.
<ul style="list-style-type: none">• Loose or missing shift and throttle linkage fasteners.	<ul style="list-style-type: none">• Check all linkages. If any are loose or missing, see Authorized MerCruiser Dealer immediately.
<ul style="list-style-type: none">• Obstruction in shift or throttle linkages.	<ul style="list-style-type: none">• Remove obstruction.
<ul style="list-style-type: none">• Shift or throttle cable kinked.	<ul style="list-style-type: none">• Straighten cable, or have dealer replace cable if damaged beyond repair.

STEERING WHEEL TURNS HARD OR JERKY

Possible Cause	Remedy
<ul style="list-style-type: none">• Low power steering pump fluid level.	<ul style="list-style-type: none">• Refill system with fluid.
<ul style="list-style-type: none">• Drive belt loose or in poor condition.	<ul style="list-style-type: none">• Replace and/or adjust.
<ul style="list-style-type: none">• Insufficient lubrication on steering system components.	<ul style="list-style-type: none">• Lubricate.
<ul style="list-style-type: none">• Loose or missing steering fasteners or parts.	<ul style="list-style-type: none">• Check all parts and fasteners. If any are loose or missing, see Authorized MerCruiser Dealer immediately.
<ul style="list-style-type: none">• Contaminated power steering fluid.	<ul style="list-style-type: none">• Drain and replace.

POWER TRIM DOES NOT OPERATE (MOTOR DOESN'T RUN)

Possible Cause	Remedy
<ul style="list-style-type: none">• Blown fuse.• Loose or dirty electrical connections or damaged wiring.	<ul style="list-style-type: none">• Replace fuse.• Check all associated electrical connections and wires (especially battery cables). Clean and tighten faulty connection. Repair or replace wiring.

POWER TRIM DOES NOT OPERATE (MOTOR RUNS BUT DRIVE UNIT DOES NOT MOVE)

Possible Cause	Remedy
<ul style="list-style-type: none">• Trim pump oil level low.• Drive unit binding in gimbal ring.	<ul style="list-style-type: none">• Fill pump with oil.• Check for obstruction.

WARRANTY INFORMATION

OWNER WARRANTY REGISTRATION

UNITED STATES AND CANADA ONLY

- It is important that your selling dealer fills out the Warranty Registration Card completely and mails it to the factory immediately upon sale of the new product.
- It identifies name and address of the original purchaser, product model and serial number(s), date of sale, type of use and selling dealer's code, name and address. The dealer also certifies that you are the original purchaser and user of the product.
- Upon receipt of the Warranty Registration Card at the factory, you will be issued a plastic Owner Warranty Registration Card which is your only valid registration identification. It must be presented to the servicing dealer should warranty service be required. Warranty claims will not be accepted without presentation of this card.
- A temporary Owner Warranty Registration Card will be presented to you when you purchase the product. It is valid only for 30 days from date of sale while your plastic Owner Warranty Registration Card is being processed. Should your product need service during this period, present the temporary registration card to the dealer. He will attach it to your warranty claim form.
- Because of your selling dealer's continuing personal interest in your satisfaction, the product should be returned to him for warranty service.
- If your plastic card is not received within 30 days from date of new product sale, please contact your selling dealer.
- The product warranty is not effective until the product is registered at the factory.
- **NOTICE:** Registration lists must be maintained by factory and dealer on marine products sold in the United States, should notification under the Federal Boat Safety Act be required.

INTERNATIONAL OWNER REGISTRATION

OUTSIDE THE UNITED STATES AND CANADA

- It is important that your selling dealer fills out the Warranty Registration Card completely and mails it to the distributor or Marine Power Service Center responsible for administering the warranty registration/claim program for your area.
- The Warranty Registration Card identifies your name and address, product model and serial number(s), date of sale, type of use and the selling distributor's/dealer's code number, name and address. The distributor/dealer also certifies that you are the original purchaser and user of the product.
- A copy of the Warranty Registration Card, designated as the "Purchaser's Copy", MUST be given to you immediately after the card has been completely filled out by the selling distributor/dealer. This card represents your factory registration identification, and should be retained by you for future use when required. Should you ever require warranty service on this product, your dealer may ask you for the Warranty Registration Card to verify date of purchase and to use the information on the card to prepare the warranty claim form (s).
- In some countries, the Marine Power Service Center will issue you a permanent (plastic) Warranty Registration Card within 30 days after receiving the "Factory Copy" of the Warranty Registration Card from your distributor/dealer. If you receive a plastic Warranty Registration Card, you may discard the "Purchaser's Copy" that you received from the distributor/dealer when you purchased the product. Ask your distributor/dealer if this plastic card program applies to you.
- For further information concerning the Warranty Registration Card and its relationship to Warranty Claim processing, refer to the "International Warranty". Refer to "Table of Contents".

IMPORTANT: Registration lists must be maintained by the factory and dealer in some countries by law. It is our desire to have ALL products registered at the factory should it ever be necessary to contact you. Make sure your dealer/distributor fills out the warranty registration card immediately and sends the factory copy to the Marine Power International Service Center for your area.

WARRANTY POLICIES

MERCUISER LIMITED WARRANTY - GASOLINE ENGINES

UNITED STATES AND CANADA ONLY

- I. We warrant each new production (not those made for high performance purposes) MerCruiser Stern Drive Power Package, Inboard Engine and accessories attached thereto, (hereafter referred to as "Product") to be free from defects in material and workmanship, but only when the consumer sale is made in the country to which distribution is authorized by us.
- II. This warranty shall become effective only upon our receipt of a completed Warranty Registration Card, which shall identify the Product so registered by serial number. This warranty shall remain in effect for a period of one (1) year from date of purchase.
- III. Since this warranty applies to defects in material and workmanship, it does not apply to normal worn parts, adjustments, tune-ups or to damage caused by: 1) Neglect, lack of maintenance, accident, abnormal operation or improper installation or service; 2) Use of an accessory or part not manufactured or sold by us; 3) Operation with fuels, oils or lubricants which are not suitable for use with the Product; 4) Participating in or preparing for racing or other competitive activity or operating with a racing type lower unit; 5) Alteration or removal of parts; or 6) Water entering engine cylinder/s through the exhaust system or carburetor/s.
- IV. Reasonable access must be provided to the product for warranty service. This warranty will not apply to: 1) Haul-out, launch, towing and storage charges; telephone or rental charges of any type, inconvenience, or loss of time or income; or other consequential damages; or 2) Removal and/or replacement of boat partitions or material because of boat design for necessary access to the Product.

- V.** Claim shall be made under this warranty by delivering the Product for inspection to a MerCruiser dealer authorized to service the Purchaser's product. If purchaser cannot deliver Product to such authorized dealer, he may give notice in writing to the Company. We shall then arrange for the inspection and repair, provided such service is covered under this warranty. Purchaser shall pay for all related transportation charges and/or travel time. If the service is not covered by this warranty purchaser shall pay for all related labor and material and any other expenses associated with that service. Any Product or parts shipped by purchaser for inspection or repair must be shipped with transportation charges prepaid. The Warranty Registration Card is the only valid registration identification and must be presented at the time warranty service is required. Warranty claims will not be accepted without presentation of the Warranty Registration Card.
- VI.** Our obligation under this Warranty shall be limited to repairing a defective part, or at our option, refunding the purchase price or replacing such part or parts as shall be necessary to remedy any malfunction resulting from defects in material or workmanship as covered by this Warranty. We reserve the right to improve the design of any Product without assuming any obligation to modify any Product previously manufactured.
- VII.** ALL INCIDENTAL AND/OR CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM THIS WARRANTY. WARRANTIES OF MERCHANTABILITY AND FITNESS ARE EXCLUDED FROM THIS WARRANTY. IMPLIED WARRANTIES ARE LIMITED TO THE LIFE OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY TO YOU.
- VIII.** This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

MERCUISER INTERNATIONAL WARRANTY - GASOLINE ENGINES

OUTSIDE THE UNITED STATES AND CANADA

- I.** We warrant each new production (not those made for high performance purposes) MerCruiser Stern Drive Power Package, Inboard Engine and accessories attached thereto, (hereafter referred to as "Product") to be free from defects in material and workmanship, but only when the consumer sale is made in the country to which distribution is authorized by us. This warranty shall remain in effect for a period of one (1) year from date of purchase.
- II.** Since this warranty applies to defects in material and workmanship, it does not apply to normal worn parts, adjustments, tune-ups or to damage caused by: 1) Neglect, lack of maintenance, accident, abnormal operation or improper installation or service; 2) Use of an accessory or part not manufactured or sold by us; 3) Operation with fuels, oils or lubricants which are not suitable for use with the Product; 4) Participating in or preparing for racing or other competitive activity or operating with a racing type lower unit; or 5) Alteration or removal of parts or 6) Water entering engine cylinder/s through exhaust system or carburetor/s.
- III.** Reasonable access must be provided to the Product for warranty service. This warranty will not apply to: 1) Haul-out, launch, towing and storage charges telephone or rental charges of any type, inconvenience, or loss of time or income or other consequential damages or 2) Removal and/or replacement of boat partitions or material because of boat design for necessary access to the Product.
- IV.** Claim shall be made under this warranty by delivering the Product for inspection to a MerCruiser dealer authorized to service the Product. If purchaser cannot deliver Product to such authorized dealer, he may give notice in writing to the Marine Power Service Center or distributor. The Marine Power Service Center or distributor shall then arrange for the inspection and repair, provided such service is covered under this warranty. Purchaser shall pay for all related transportation charges and/or travel time. If the service is not covered by this warranty purchaser shall pay for all related labor and material, and any other expenses associated with that service. Any Product or parts shipped by purchaser for inspection or repair must be shipped with transportation charges prepaid.

- V.** Purchaser must provide “proof of purchase” and substantiate “date of purchase” by presenting the “Purchaser’s Copy” of the “Warranty Registration Card” or the plastic “Warranty Registration Card” to the dealer authorized to service the Product. If either of these items is not available purchaser must provide a copy of the original “Bill of Sale” (Sales Contract) for the Product to be serviced. Warranty claims will not be accepted until adequate “proof of purchase” is presented by purchaser and “date of purchase” has been substantiated.
- VI.** Our obligation under this Warranty shall be limited to repairing a defective part or AT OUR OPTION, refunding the purchase price or replacing such part or parts as shall be necessary to remedy any malfunction resulting from defects in material or workmanship as covered by this Warranty. We reserve the right to improve the design of any Product without assuming any obligation to modify any Product previously manufactured.
- VII.** ALL INCIDENTAL AND/OR CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM THIS WARRANTY WARRANTIES OF MERCHANTABILITY AND FITNESS ARE EXCLUDED FROM THIS WARRANTY IMPLIED WARRANTIES ARE LIMITED TO THE LIFE OF THIS WARRANTY SOME COUNTRIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY TO YOU.
- VIII.** This warranty gives you specific legal rights, and you may also have other legal rights which vary from country to country.

MARINE POWER INTERNATIONAL

Division of Brunswick Corporation
Fond du Lac, Wisconsin 54935 U.S.A.

3 Year Limited Warranty Against Corrosion Failure

(APPLICABLE IN THE UNITED STATES, CANADA AND AUSTRALIA)

- I.** We warrant parts and assemblies of each 1988 and newer production MerCruiser (Product) sold with a one year limited Product warranty or the Bravo and TRS Drive Units on performance Products that have a 90 day limited warranty rendered inoperative as a direct result of corrosion, provided the following simple precautionary steps which are specified in Owner's Manuals have been taken:
 1. Specified maintenance procedures (such as replacement of sacrificial anodes, specified lubrication and touch-up of nicks and scratches) have been implemented on a timely basis.
 2. Recommended corrosion prevention devices have been employed (details below).
- II.** This warranty shall become effective upon receipt of a completed standard Product warranty registration card and shall remain effective for a period of three years from the date of purchase.
- III.** This warranty does not cover: (1) electrical system corrosion; (2) corrosion resulting from damage, abuse or improper service; (3) corrosion to accessories, instruments, steering systems; (4) damage due to marine growth; (5) Product sold with less than a one year limited Product warranty except for Bravo and TRS Drive Units; nor (6) Product used in commercial application.
- IV.** ALL INCIDENTAL AND/OR CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM THIS WARRANTY. WARRANTIES OF MERCHANTABILITY AND FITNESS ARE EXCLUDED FROM THIS WARRANTY. IMPLIED WARRANTIES ARE LIMITED TO THE LIFE OF THIS WARRANTY. SOME STATES (OR COUNTRIES) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
- V.** This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state (or country to country).

VI. Other details of this warranty are contained in paragraphs IV, V and VI of the (United States and Canada) Product Warranty, and paragraphs III, IV, V and VI of the (International) Product Warranty, contained in this manual, which paragraphs are incorporated herein by reference.

Mercury Marine products are built using the most advanced corrosion protection process available. This manufacturing system, complemented by dealer and customer participation in an anti-corrosion preventive maintenance program, provides protection against repair costs incurred by the effects of marine corrosion.

Owner's Responsibility

Protection against certain types of corrosion damage must be provided by using such systems as the Quicksilver MerCathode System and/or Galvanic Isolator. These certain types of corrosion damage are: damage due to stray electrical currents (on-shore power connections, nearby boats, submerged metal), or improper application of copper base anti-fouling paint.

If anti-fouling protection is required, Tri-Butyl-Tin-Adipate (TBTA) base antifouling paints are recommended on MerCruiser boating applications. In areas where Tri-Butyl-Tin-Adipate base paints are prohibited by law, copper base paints can be used on the boat hull and transom. Do not apply paint to the MerCruiser drive unit or transom assembly. In addition, care must be taken to avoid an electrical interconnection between the MerCruiser Product and the paint. Corrosion damage that results from the improper application of copper base paint will not be covered by this limited warranty.

Transfer of Warranty

This Limited Warranty is transferable to subsequent purchasers for the remainder of the unused portion of the 3-year limited warranty.

Warranty Coverage

The purpose of this section is to help eliminate some of the more common misunderstandings regarding warranty coverage. The table explains some of the types of services that are not covered by warranty.

Keep in mind that warranty covers repairs that are needed within the warranty period because of defects in material and workmanship. Installation errors, accidents, normal wear, and a variety of other causes that affect the product are not covered.

Warranty is limited to defects in material or workmanship, but only when the consumer sale is made in the country to which distribution is authorized by us.

Should you have any questions concerning warranty coverage, contact your authorized dealer. They will be pleased to answer any questions that you may have.

WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Minor adjustments and tune-ups, including checking, cleaning or adjusting spark plugs, ignition components, carburetor settings, filters, belts, controls, and checking lubrication made in connection with normal services.
- Damage caused by neglect, lack of maintenance, accident, abnormal operation or improper installation or service.
- Haul-out, launch, towing charges; removal and/or replacement of boat partitions or material because of boat design for necessary access to the product; all related transportation charges and/or travel time, etc. Reasonable access must be provided to the product for warranty service. Customer must deliver product to an Authorized Dealer.
- Additional service work requested by customer other than that necessary to satisfy the warranty obligation.

- Labor performed by other than an Authorized Dealer may be covered only under following circumstances: When performed on emergency basis (providing there are no Authorized Dealers in area who can perform the work required or have no facilities to haul out, etc., and prior factory approval has been given to have the work performed at this facility).
- All incidental and/or consequential damages (storage charges, telephone or rental charges of any type, inconvenience or loss of time or income) are the owner's responsibility.
- Use of other than Quicksilver replacement parts when making warranty repairs.
- Oils, lubricants or fluids changed as a matter of normal maintenance is customer's responsibility unless loss or contamination of same is caused by product failure that would be eligible for warranty consideration.
- Participating in or preparing for racing or other competitive activity.
- Engine noise does not necessarily indicate a serious engine problem. If diagnosis indicates a serious internal engine condition which could result in a failure, condition responsible for noise should be corrected under the warranty.
- Lower unit and/or propeller damage caused by striking a submerged object is considered a marine hazard.
- Water entering the engine via the carburetor or exhaust system or submersion. Also water in the starter motor.
- Starter motors and/or armatures or field coil assembly, which are burned, or where lead is thrown out of commutator because of excess cranking.

- Valve or valve seat grinding required because of wear.
- Failure of any parts caused by lack of cooling water, which results from starting power package out of water, foreign material blocking inlets or power package being mounted too high.
- Use of fuels and lubricants which are not suitable for use with or on the product.
- Our limited warranty does not apply to any damage to our products caused by the installation or use of parts and accessories which are not manufactured or sold by us. Failures which are not related to the use of those parts or accessories, are covered under warranty, if they otherwise meet the terms of the limited warranty for that product.

TRANSFERABLE WARRANTY

The product warranty is transferable to a subsequent purchaser, but only for the remainder of the unused portion of the limited warranty. This will not apply to products used for commercial applications.

DIRECT SALE BY OWNER

- The second owner can be registered as the new owner and retain the unused portion of the limited warranty by sending the former owner's plastic Owner Warranty Registration Card and a copy of the bill of sale to show proof of ownership. In the United States and Canada, mail to:

Mercury Marine

Attn: Warranty Registration Department

W6250 West Pioneer Road

P.O. Box 1939

Fond du Lac, WI 54936-1939

- A new Owner Warranty Registration Card will be issued with the new owner's name and address. Registration records will be changed on the factory computer registration file.
- There is no charge for this service.

Outside the United States and Canada, please contact the distributor in your country, or the Marine Power International Service Center closest to you, for the transferable warranty procedure that would apply to you.

Q-GUARD PRODUCT PROTECTION PLAN

UNITED STATES and CANADA ONLY

(Certain performance products, triple engine installations, and commercial applications are excluded)

The Mercury Marine Q-Guard Product Protection Plan provides coverage against unexpected mechanical and electrical breakdowns that may occur beyond the standard limited warranty.

The optional Q-Guard Product Protection Plan is the only Factory Plan available for your engine.

Two, three or four - year term plans can be purchased up to 180 days after the original engine purchase date.

See your participating MerCruiser dealer for complete program details.

OWNER SERVICE ASSISTANCE

LOCAL REPAIR SERVICE

Always return your MerCruiser powered boat to your local Authorized Dealer, should the need for service arise. Only he has the factory trained mechanics, knowledge, special tools and equipment and the genuine Quicksilver parts and accessories* to properly service your engine should the need occur. He knows your engine best.

* Quicksilver parts and accessories are engineered and built by Mercury Marine, specifically for MerCruiser® stern drives and inboards.

SERVICE AWAY FROM HOME

If you are away from your local dealer and the need arises for service, contact the nearest Authorized Dealer. Refer to the Yellow Pages of the telephone directory. If, for any reason, you cannot obtain service, contact the nearest Regional Service Center. Outside the United States and Canada, contact the nearest Marine Power International Service Center.

PARTS AND ACCESSORIES INQUIRIES

All inquiries concerning Quicksilver replacement parts and accessories should be directed to your local Authorized Dealer. The dealer has the necessary information to order parts and accessories for you should he not have them in stock. Only Authorized Dealers can purchase genuine Quicksilver parts and accessories from the factory. Mercury Marine does not sell to unauthorized dealers or retail customers. When inquiring on parts and accessories, the dealer requires the **motor model** and **serial number(s)** to order the correct parts.

RESOLVING A PROBLEM

Your satisfaction and goodwill are of primary importance to your dealer and to MerCruiser. Any problems with service, sales, warranty or operation of your MerCruiser power package will be resolved by your dealer. He also is your primary source of information on your boat, power package and trailer. Should there be a misunderstanding, or if your problem has not been resolved to your satisfaction, please follow these steps:

STEP ONE - DISCUSS YOUR PROBLEM WITH ONE OF THE DEALERSHIP MANAGEMENT PERSONNEL.

Misunderstandings or complaints can be quickly resolved by the dealer. If you are unable to obtain satisfaction, contact the dealership's owner.

STEP TWO - IF YOU REQUIRE ADDITIONAL ASSISTANCE TO RESOLVE YOUR CONCERN, CONTACT YOUR NEAREST MERCUISER SERVICE CENTER.

Provide the following important information:

- Your name, address and telephone number.
- The model and serial number(s).
- Your dealer's name and location.
- Date of purchase.
- Present hours of operation.
- Details of problem or complaint.
- Boat make and size.

- Propeller pitch and/or part number.
- Normal use and approximate gross load.

Please bear in mind that Service Centers **resolve all problems through the dealership using the dealer's facilities, equipment and personnel.** This is the reason we request you use the preceding steps in sequence when you have a problem or complaint. Our experience has shown that this is the most expedient and successful procedure to follow to ensure satisfaction to our customers.

FOLLOW STEP THREE ONLY AFTER COMPLETING STEPS ONE AND TWO AND YOUR COMPLAINT HAS NOT BEEN RESOLVED.

STEP THREE -CONTACT CONSUMER AFFAIRS DEPARTMENT

United States:

**MERCUISER
3003 N. Perkins Road
Stillwater, OK 74075-2299
Telephone (405) 743-6515**

Canada:

Contact Nearest Regional Service Center

Other Countries:

**Contact the Nearest
Marine Power International Service Center**

The customer service representatives will review all the facts involved. If they feel some further action can be taken, they will advise the Service Center. They will contact your dealer to bring the problem to a satisfactory conclusion.

ALL SERVICE WORK IS DONE BY THE AUTHORIZED DEALER USING THE DEALER'S FACILITIES. OUR SERVICE CENTERS AND FACTORY DO NOT HAVE FACILITIES TO SERVICE OR REPAIR YOUR PRODUCT.

SERVICE CENTERS

UNITED STATES

MerCruiser
3003 N. Perkins Road
Stillwater, OK 74075-2299
Telephone (405) 743-6566
Fax (405) 743-6570

CANADA

Mercury Marine
1156 Dundas Highway East
Mississauga, Ontario
L4Y 2C2 Canada
Telephone (905) 270-4481
Fax (905) 270-4510

MEXICO, CENTRAL AMERICA, SOUTH AMERICA, CARIBBEAN

Marine Power International
9350 SW 72nd St. (Sunset Dr.)
Suite 100
Miami, FL 33173
U.S.A.
Telephone (305) 596-9606
Fax (305) 596-3869

EUROPE, MIDDLE EAST, AFRICA

Marine Power Europe, Inc.
Parc Industriel de Petit-Rechain
B-4800 Verviers
Belgium
Telephone (0) (87) 32 • 32 • 11
Fax (32) (87) 31 • 19 • 65

AUSTRALIA, PACIFIC

Marine Power International Pty. Ltd.

P. B. 1420

132-140 Frankston Road

Dandenong, Victoria 3164

Australia

Telephone (61) (3) 791-5822

Fax (61) (3) 791-5880

ASIA

Marine Power International Ltd.

Block 1002 Jalan Bukit Merah #07-08

Redhill Industrial Estate

JTC Flatted Factories

Singapore 0315

Telephone (65) 270-7680

Fax (65) 270-7898

JAPAN

Marine Power International - Japan

No.27-2 Muramatsu Chisaki-Shinden

Shimizu City

Shizuoka Prefecture

Japan 424

Telephone (81) 543/34-2500

Fax (81) 543/34-2022

CUSTOMER SERVICE LITERATURE

English language publications are available from:

**Mercury Marine
Attn: Publications Department
W6250 West Pioneer Road
P.O. Box 1939
Fond du Lac, WI 54936-1939**

Outside the United States and Canada, contact the nearest Marine Power International Service Center for further information.

When ordering be sure to:

1. List your product, model, year and serial number(s).
2. Check the literature and quantities you want.
3. Enclose full remittance in check or money order (NO C.O.D.'s).

GENERAL MAINTENANCE PARTS

ENGINE PARTS

Part	5.0L	5.0LX
1. Oil Filter	14957	14957
2. Spark Plug	33-59571	33-59571
3. Distributor Cap	805759A2	805759A2
4. Ignition Coil	392-805570A2	392-805570A2
5. Spark Plug Wire Set	84-816761A17	84-816761A17
6. Thermostat (160° F)	807252--2	807252--2
7. Thermostat Gaskets	27-33179--2, 27-53045--1	27-33179--2, 27-53045--1
8. Alternator Belt	57-49213A1	57-49213A1
9. Power Steering Belt	57-816295T	57-816295T
10. Sea Water Pump Belt	57-49213A1	57-49213A1
11. Water Separating Filter	55-805269--1	55-805269--1
12. Quicksilver Motor Oil	92-816096A12	92-816096A12
13. Storage Seal	92-86145A12	92-86145A12
14. Valvtane Plus	92-17955A12	92-17955A12
15. Fuel Treatment and Stabilizer	92-817529A12	92-817529A12
16. Fuel System Cleaner	92-17885A12	92-17885A12
17. Corrosion Guard Spray	92-815869A12	92-815869A12

ENGINE PARTS

5.7L	350 Magnum
1. 14957	14957
2. 33-59571	33-59571
3. 805759A2	805759A2
4. 392-805570A2	392-805570A2
5. 84-816761A17	84-816761A17
6. 807252--2	807252--2
7. 27-33179--2, 27-53045--1	27-33179--2, 27-53045--1
8. 57-48120A1	57-48120A1
9. 57-816295T	57-816295T
10. 57-74271T	57-13457T
11. 55-805269--1	55-805269--1
12. 92-816096A12	92-816096A12
13. 92-86145A12	92-86145A12
14. 92-17955A12	92-17955A12
15. 92-817529A12	92-817529A12
16. 92-17885A12	92-17885A12
17. 92-815869A12	92-815869A12

DRIVE PARTS

Part	Alpha I Gen. II
Propeller Nut	11-52707A1
Rear Propeller Washer	12-31211A2
Tab Washer	14-816629
Grounding Washer	13-42351--1
Thrust Hub	13171
Decal Set	37-13722A13
D.S.H. Anodic Plate	76214A2
Trim Tab	31640--4
Trim Cylinder Anodes	806189A1
Gimbal Housing Anode	821631A1
Bearing Carrier Anode	806105A1
Drain Screw	10-14834
Drain Screw O-Ring	19183
Vent Screw	10-79953
Vent Screw O-ring	12-19183
Drive Mounting Gasket	27-64818A3
Drive Mounting O-ring	27-35982
Trim Pump 20 Amp Fuse	88-79091
Trim Pump 10 Amp Fuse	88-79023A10
Water Pump Impeller	47-43026--2
Water Pump Cover Gasket	27-817227
Water Pump Base Gasket	27-43033--1
2-4-C Marine Lubricant	92-825407A2
Engine Coupler Spline Grease	92-816391A4
High Performance Gear Lube	92-816026A1
Touch Up Spray Paint	92-78373-12

LITERATURE ORDER FORM

Model _____ Horsepower _____

Serial Number _____ Year _____

Service Manual - shows the complete assembly and disassembly of the engine or stern drive.

Parts Manual - shows the exploded view of the engine or stern drive with corresponding part number.

Operation and maintenance manual (Owner's Guide) - explains basic operation and maintenance.

Manual	Part Number (Official Use Only)	Qty.	Price Each	Total Price
Service Manual: Engine <input type="checkbox"/>	90-		\$30.00	
Service Manual: Drive <input type="checkbox"/>	90-		\$30.00	
Service Manual: Remote Control <input type="checkbox"/>	90-		\$30.00	
Parts Manual: Engine Only <input type="checkbox"/>	90-		\$4.95	
Parts Manual: Drive Only <input type="checkbox"/>	90-		\$4.95	
Operation and Main- tenance Manual <input type="checkbox"/>	90-		\$5.00	
			Sub- Total	
			Sales Tax *	
			Ship/ Hand**	
			Grand Total	

* must be collected from customers in all states except:
AK, AZ, DE, HI, ID, IA, ME, MI, MT, NV, NH, NY, OR, VT,
WV, WY

** Orders Totaling: up to \$20.00, add \$3.00
20.01 - \$50.00, add \$4.00
50.01 - up, Free

Please Return with Payment to:

Mercury Marine
Attn: Publications Dept.
P.O. Box 1939
Fond du Lac, WI 54936-1939

Ship To: (Please Print or Type - This is your Shipping Label)

Name _____

Address _____

City _____ State _____ Zip _____

Method of Payment: (No Cash or C.O.D.)

Personal Check Cashiers Check Money Order

Visa MasterCard

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Card Number

Month/Year

--	--

Expiration Date

Signature

()

Telephone Number

Date