



Service Manual

For the complete PDF manual
please visit www.LaserPros.com.

Lexmark™ C520, C522, and C524

5022-xxx

- ***Table of contents***
- ***Start diagnostics***
- ***Safety and notices***
- ***Trademarks***
- ***Index***



Lexmark and Lexmark with diamond design are
trademarks of Lexmark International, Inc., registered
in the United States and/or other countries.

Edition: September 28, 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law:

LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark, Lexmark with diamond design, MarkNet, and MarkVision are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

ImageQuick and PrintCryption are trademarks of Lexmark International, Inc.

Other trademarks are the property of their respective owners.

© 9/28/05 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Table of contents

Laser notices	ix
Safety information	xv
Preface	xviii
Definitions	ii-xviii
General information	1-1
Maintenance approach	1-1
Options and features	1-1
Specifications	1-2
Resolution	1-2
Data streams	1-2
Print speed and performance print speed	1-2
Performance	1-2
Memory configuration	1-2
Dimensions	1-3
Power requirements	1-3
Electrical specifications	1-4
Environment	1-4
Acoustics	1-5
Media specifications	1-6
Paper and specialty media guidelines	1-6
Supported print media	1-6
Input and output capacities	1-10
Additional guidelines	1-10
Paper	1-10
Envelopes	1-11
Transparencies	1-11
Labels	1-11
Avoiding jams	1-11
Print area	1-11
Tools required for service	1-12
Serial number, TLI and machine type	1-12
Acronyms	1-13
Printer theory of operation	1-14
Paper path	1-14
Main Components	1-15
Print media transport	1-16
Mechanical drive	1-21
Paper sensing	1-25
Paper Jams	1-27
Electrophotographic (EP) process	1-28
Main components	1-28
Charging	1-29
Exposing	1-34
Developing	1-35
Transferring	1-36
Fusing	1-37
Cleaning	1-38
Electrical interlock	1-39
5V interlock switch	1-39
24V interlock switch	1-40

Diagnostic information	2-1
Start	2-1
Symptom tables	2-1
Service errors (1xx.xx's/9xx.xx's)	2-1
User status and attendance messages	2-1
Understanding the operator panel	2-2
Indicator light	2-2
Buttons	2-3
Power-on self test (POST) sequence	2-4
Symptom tables	2-5
Printer symptom table	2-5
Print quality symptom table	2-5
	2-5
Service error codes	2-6
User attendance messages	2-11
User attendance messages—paper jams and paper handling errors (2xx.xx)	2-19
Printer service checks	2-27
110.xx—Mirror motor service check	2-27
111.xx—Printhead error service check	2-27
112.xx—Printhead error service check	2-28
113.xx—Printhead error service check	2-29
114.xx—Printhead error service check	2-30
120.01/02/08-10/13-15—Fuser error service check	2-31
120.03—Fuser error service check	2-33
120.04-07—Fuser error service check	2-33
140.01/03-08—Autocomp (tray 1) motor error service check	2-35
140.02—Autocomp (tray 1) motor error service check	2-35
142.xx—Motor (fuser) error service check	2-35
143.09-11/15/17-18/20-25—Motor (EP drive asm top cartridge) error service check	2-36
143.12-14/16—Motor (EP drive asm top cartridge) error service check	2-37
144.09-11/15/17-18/20-25—Motor (EP drive asm bottom cartridge) error service check	2-37
144.12-14/16—Motor (EP drive asm bottom cartridge) error service check	2-38
145.xx—Motor (bump aligner) error service check	2-38
146.xx—Motor (duplex) error service check	2-39
147.xx/149.xx—Motor (500-sheet option tray2 motor) error service check	2-40
148.xx—MPF motor error service check	2-41
910.01—Engine error service check	2-41
920.01—POST (power on self test) error service check	2-42
920.02—POST (power on self test) error service check	2-42
920.03—POST (power on self test) error service check	2-43
920.04—POST (power on self test) error service check	2-43
920.05—POST (power on self test) error service check	2-44
920.06—POST (power on self test) error service check	2-45
920.07—POST (power on self test) error service check	2-45
920.08—POST (power on self test) error service check	2-46
920.09-12—POST (power on self test) error service check	2-47
920.13—POST (power on self test) error service check	2-49
920.14—POST (power on self test) error service check	2-50
920.15—POST (power on self test) error service check	2-51
920.16—POST (power on self test) error service check	2-51
920.17—POST (power on self test) error service check	2-52
920.18—POST (power on self test) error service check	2-52
920.19—POST (power on self test) error service check	2-53
925.01—Fan error service check	2-53
945.00, 946.00, 947.01—Transfer roll (yellow) error service check	2-54
945.01, 946.01, 947.02—Transfer roll (cyan) error service check	2-56
945.02, 946.02, 947.03—Transfer roll (magenta) error service check	2-58
945.03, 946.03, 947.04—Transfer roll (black) error service check	2-60
950.00 through 950.29 EPROM mismatch failure	2-62

950.30 through 950.60 EPROM mismatch failure	2-63
Input sensor service check	2-64
Exit sensor service check	2-64
Dead machine service check	2-65
Operator panel service check	2-66
One or more operator panel buttons fail	2-66
Operator panel display	2-67
Print quality service check	2-68
Print quality—background	2-69
Print quality—blank page	2-70
Print quality—blurred or fuzzy print	2-71
Print quality—half-color page	2-71
Print quality—horizontal banding	2-71
Print quality—horizontal line	2-72
Print quality—insufficient fusing	2-72
Print quality—missing image at edge	2-72
Print quality—mottle (2 - 5mm speckles)	2-72
Print quality—narrow vertical line	2-72
Print quality—random marks	2-72
Print quality—residual image	2-73
Print quality—solid color page	2-73
Print quality—vertical banding	2-74
Diagnostic aids	3-1
Accessing service menus	3-1
Diagnostic mode	3-2
Diagnostics menu structure	3-2
Available tests	3-2
Registration	3-5
Quick Test	3-6
Alignment	3-7
Motor tests	3-7
General motor test	3-7
Mirror motor test	3-8
Servo laser test	3-8
Motor calibration	3-8
Print tests	3-9
Input source tests	3-9
Print quality pages (Prt Quality Pgs)	3-9
Duplex tests	3-10
Quick Test (duplex)	3-10
Print Test (duplex)	3-10
Top Margin (duplex)	3-10
Motor Test (duplex)	3-11
Base sensor test	3-12
Bin Full Test	3-12
Sensor Test	3-12
Printer setup	3-13
Defaults	3-13
Page Counts	3-13
Serial Number	3-13
Engine Setting 1 through 4	3-13
Model Name	3-13
Configuration ID	3-14
Edge to Edge	3-14
EP setup	3-14
EP Defaults	3-14
Fuser Temperature (Fuser Temp)	3-15
DC Charge Adjust, Dev Bias Adj, Transfer Adjust	3-15

Event log	3-16
Display Log	3-16
Print Log	3-16
Clear Log	3-16
Configuration menu (CONFIG MENU)	3-17
.....	3-22

Repair information 4-1

Removal and cleaning precautions	4-1
Handling ESD-sensitive parts	4-1
Photoconductor unit	4-2
During transportation/storage	4-2
Handling	4-2
Parts not to be touched	4-2
Printer adjustments	4-3
Printhead alignment	4-3
Overview	4-3
Printer removal procedures	4-11
Precautions to take before maintenance work	4-11
CRU/FRU and supplies removals	4-12
Fuser removal	4-13
Photoconductor unit removal	4-14
Transfer belt removal	4-15
Waste toner assembly removal	4-15
Cover removals	4-16
Exit tray cover removal	4-16
Rear cover removal	4-17
Right cover removal	4-18
Front access cover assembly removal	4-19
Left cover removal	4-20
Operator panel outer bezel removal	4-21
Operator panel inner bezel removal	4-21
Operator panel assembly removal	4-22
Top access cover assembly removal	4-23
Front removals	4-26
Fuser cable cover removal	4-27
Machine pad removal	4-27
Multipurpose feeder (MPF) swing arm assembly removal	4-28
Paper pick mechanism assembly removal	4-30
Bump aligner gear removal	4-31
Front door assembly removal	4-32
Duplex front door assembly removal	4-34
Front door assembly restraint cable removal	4-36
Right side removals	4-37
Low volt power supply (LVPS) removal	4-38
Electrophotographic Process (EP) drive assembly removal	4-40
Front access door 5V interlock switch removal	4-43
Bump aligner motor removal	4-45
Rear removals	4-46
System card removal	4-47
System card support shield removal	4-49
Smart chip card removal	4-51
Printhead removal	4-52
Left side removals	4-54
High volt power supply (HVPS) removal	4-55
Contact springs removal	4-56
Transfer contact assembly removal	4-57
Toner level sensor removal	4-58

Top removals	4-59
Top access door 24V interlock switch removal	4-60
Top cover camshaft assembly removal	4-61
Top cover camshaft assembly installation	4-62
Locations and connectors	5-1
Locations	5-1
Sensors	5-1
Motors	5-3
Printer cards	5-4
Connectors	5-5
Network system card	5-5
Parallel system card	5-6
Wiring diagrams	5-7
Preventive maintenance	6-1
Parts catalog	7-1
How to use this parts catalog	7-1
Assembly 1: CRUs	7-2
Assembly 2: Covers	7-4
Assembly 3: Front	7-6
Assembly 4: Right	7-8
Assembly 5: Rear	7-10
Assembly 6: Left	7-12
Assembly 7: Top	7-14
Assembly 8: Contact Springs Packet	7-16
Assembly 9: Cable Parts Packet	7-18
Assembly 10: Miscellaneous	7-20
Index	I-1
Part number index	I-5

For the complete PDF manual
please visit www.LaserPros.com.