

INTERNATIONAL[®]
HYDRAULICABS
Software
User's Manual

International Truck and Engine Corporation[®]

Copyright

Please read through the License agreement accompanying the software.

The International Hydraulic ABS (ABS) software is written for International Truck and Engine Corporation and is protected by United States copyright laws and international treaty provisions. Therefore, you must treat the SOFTWARE like any other copyrighted material. You may, however, either (a) make one copy of the SOFTWARE solely for backup or archival purposes, or (b) transfer the SOFTWARE to a single hard disk, provided you keep the original solely for backup or archival purposes. You cannot copy the written materials accompanying the SOFTWARE.

This manual is written for International Truck and Engine Corporation by *SU Enterprise, Inc.* and is protected by United States copyright laws and international treaty provision.

Third-party brands and names are the property of their respective owners.

The authors assume no responsibility for any errors or omissions which may appear in this document nor do they make any commitment to update the information contained herein.

Copyright 1999, 2000, 2001, Rev. 2.0

TABLE OF CONTENTS

I. INTRODUCTION

- 1. Software Overview I.1.1
- 2. System Requirements I.2.1
- 3. Nomenclature I.3.1

II. INSTALLATION

- 1. System Setup and Software Installation II.1.1

III. HOW TO USE HYDRAULICABS SOFTWARE

- 1. Basics III.1.1
- 2. Data in Textual Format III.2.1
- 3. Data in Graphical Format III.3.1
- 4. Trouble Codes III.4.1
- 5. ABS Electronic Module Software ID Information III.5.1
- 6. Diagnostic Tests III.6.1
- 7. Capture Snapshot Data III.7.1
- 8. Snapshot Data Recording Replay III.8.1
- 9. Sessions III.9.1
- 10. System and Software Trouble Shooting III.10.1

IV. FACTORY FEATURES

- 1. Factory Features IV.1.1

I. Introduction

1. SOFTWARE OVERVIEW

The International Hydraulic ABS system has a wide range of failsafe diagnostic capabilities. To properly diagnosis these failures please follow the instructions outlined in this and other International manuals. The International Hydraulic ABS diagnostic software provides the capabilities to

- 1) Read and display numerous ABS parameters in both graphical and textual format.
- 2) Read and display International Hydraulic ABS system trouble codes.
- 3) Provide generic diagnostic information on specific trouble code service.
- 4) Read and display ABS Module ID information.
- 5) Provide snapshot capability.
- 6) Provide a mechanism to play back snapshot recordings.

2. SYSTEM REQUIREMENTS

The International Hydraulic ABS diagnostic software is designed and developed to provide diagnosis to the International Hydraulic ABS system.

System requirements are as follow:

- 1) PC with Pentium® or Pentium® equivalent or replacement CPU.
32MB of system RAM.
10MB of free system HD.
CD-ROM drive and/or 3½" Floppy drive.
- 2) Microsoft Windows® Operating System. Depends on the version of the International Hydraulic ABS software.
- 3) International Hydraulic ABS diagnostic software (on CD or 3½" Floppies)
- 4) International approved ALDL (Hydraulic ABS) EZ-Tech Interface cable.

3. NOMENCLATURE

The following are the nomenclatures used within this manual. Please read this section carefully and understand the meaning of the actions required.

Click or Clicking For EZ-Tech users this indicates tapping on the lower left-hand area of the touch pad once. For PC users this indicates tapping on the left mouse button.


Double click or Double clicking For EZ-Tech users this indicates tapping on the lower left-hand area of the touch pad twice in succession. For PC users this indicates tapping on the left mouse button twice in succession.

Right Click For EZ-Tech users this indicates tapping on the upper left-hand area of the touch pad once. For PC users this indicates tapping on the right mouse button.

Click and drag For EZ-Tech users this indicates tapping on the lower left-hand area of the touch pad marked by a lock symbol and then using the main area of the touch pad to move the mouse pointer.

Hit Indicates depressing and then releasing a key on the keyboard.

ALT Indicates the action whereby the “Alt” key on the keyboard is depressed while another key on the keyboard is hit.

Scroll bar The horizontal-scroll bar  is normally at the bottom of the window. Click on the left arrow button to scroll left. Click on the right arrow button to scroll right. Click on the area to the left of the slider to page left. Click on the area to the right of the slider to page right. Or simply use the slider by clicking and dragging.

The vertical-scroll bar is normally at the right of the window. Click on the up arrow button to scroll up. Click on the down arrow button to scroll down. Click on the area to the top of the slider to page up. Click on the area to the bottom of the slider to page down. Or simply use the slider by clicking and dragging.



II. Installation


1. SYSTEM SETUP AND SOFTWARE INSTALLATION

It is easy to set up International Hydraulic ABS (ABS) diagnostic software. Simply follow the steps on your PC screen.

Following are some of the frequent asked questions during the software installation.

- 1) **Using CD.** Insert CD into CD-ROM drive. If Windows® does not automatically start to setup the software, then refer to Section III-10 System and Software Trouble Shooting.

Using 3 1/2" floppy. Insert Setup Disk#1 into floppy drive and type in "A:\Setup.exe".

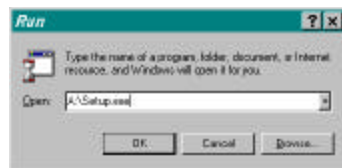


- 2) Always follow the setup instruction on the screen. If you are unsure of the proper responses to any questions during the install process, please select the default values assigned by the install process.
- 3) When the setup installation has been successfully installed, the Hydraulic ABS diagnostics icon should be embedded in the **VEHICLE DIAGNOSTIC** folder. Double click on the **VEHICLE DIAGNOSTIC** Folder to bring up the Hydraulic ABS diagnostics software shortcut icon.

III. How to Use International Hydraulic ABS software


1. BASICS

To begin using the International Hydraulic ABS diagnostic software, please spend a few minutes reading through this section to gain the basics behind the software.

After launching the International Hydraulic ABS diagnostic software, your computer should display the following main window.

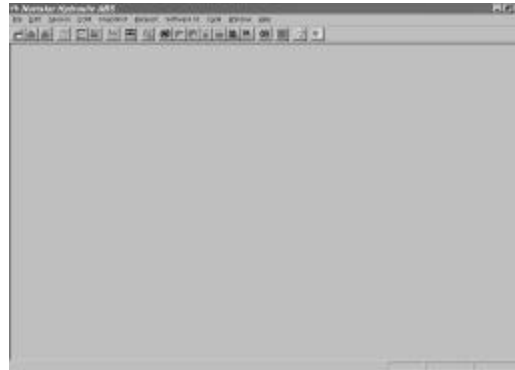

The software provides a menu bar that is right below the window's title bar. All available features of the software can be accessed via the menu bar.

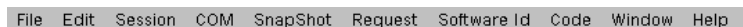

For some frequently used actions, a tool bar is provided. The tool bar provides a quick and easy way to access the important features of this software. Each tool bar button will be described briefly below.



File => Open



Opens a new or existing graphical or textual display file. Using this option allows the user to recall and view a previously saved configuration. Two display formats are available: *.ptv, which indicates a text display, and *.pgv, which indicates a graphical display.

File => Save



Saves the configuration of the highlighted window.

File => Save As

Saves the configuration of the highlighted window and prompts the user for a file name.



File => Print

Prints the highlighted window to the printer or a file. Not all windows may be printed.



File => New

Opens a new graphical display window.



File => New

Opens a new textual display window.



Edit => Add/Delete/Edit

Adds, deletes or edits parameters from the highlighted window.



Session => Open

Retrieves a previously setup International Hydraulic ABS desktop workspace.



COM => Open



Begins the ALDL communications via the PC's COM port.

Snapshot => Setup



Sets up the snapshot recording options: the trigger source, pre-trigger recording time, post-trigger recording time, which parameters to record, how often to take snapshot, etc.

Snapshot => Arm



Arms the trigger for the snapshot.

Snapshot => Disarm



Disarms the trigger for the snapshot.

Snapshot => Start



Manually starts the snapshot recording. The F2 key has the same function.

Snapshot => Stop



Manually stops the snapshot recording. The F3 key has the same function.

Snapshot => Replay



Replays a snapshot recording file in a graphical format.

Snapshot => Replay



Replays a snapshot recording file in a textual format.

Software ID => View



Opens the International Hydraulic ABS module identification window.

Code => View



Opens the trouble code window.

Help => Contents




Opens the International Hydraulic ABS software on-line help.

File => Exit




Exits and terminates the International Hydraulic ABS software.

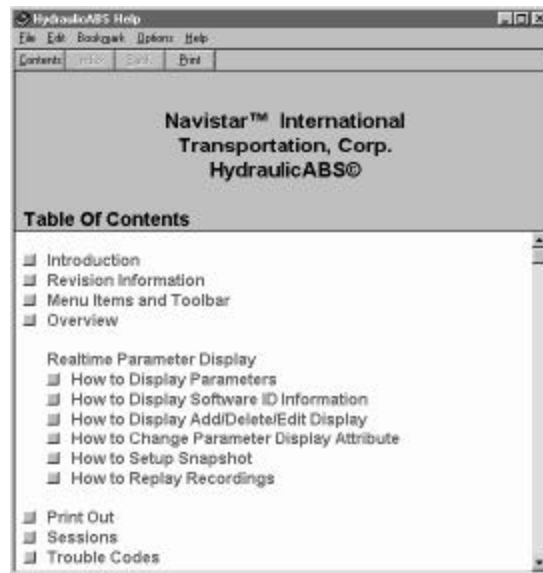


All features of the International Hydraulic ABS diagnostic software are described in the on-line help. Click on **Help** in the menu bar and then **Contents** or click on to access it.

Prior to starting the configuration, the software must be set properly. Click on **File** in the menu bar and then **Hydraulic ABS Settings**. There are three settings available: **Comm**, **Simulator**, and **Password**

The **Comm** selection configures which communication port the interface cable is connected to. This is determined by looking at the back of computer.

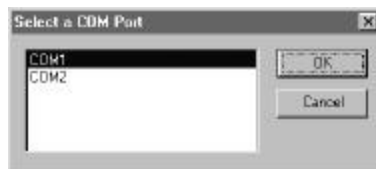

The **Simulator** selection configures the speed the ALDL simulator. Select the speed at which the simulator appears to run the best on your computer.

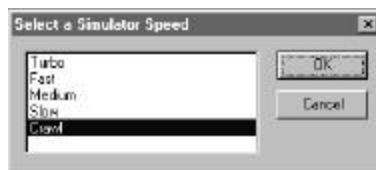


The **Password** selection allows the access to the factory features. For more information regarding the factory features please refer to the Factory Features section.

2. DATA IN TEXTUAL FORMAT

To monitor the Hydraulic ABS parameter data in textual format you must first create a text window.

Selecting **File** and then **New** in the menu bar or press ALT “F” and then “N” will open the **Select a File Type** dialog box.

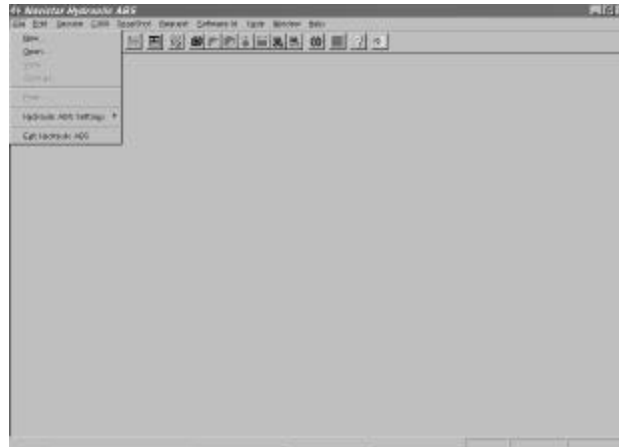

Select **Text View (.ptv)** as the desired type and click on


OK




HINT: Toolbar shortcut is by clicking on



A generic text view display window will appear. This window will have no parameters in it.

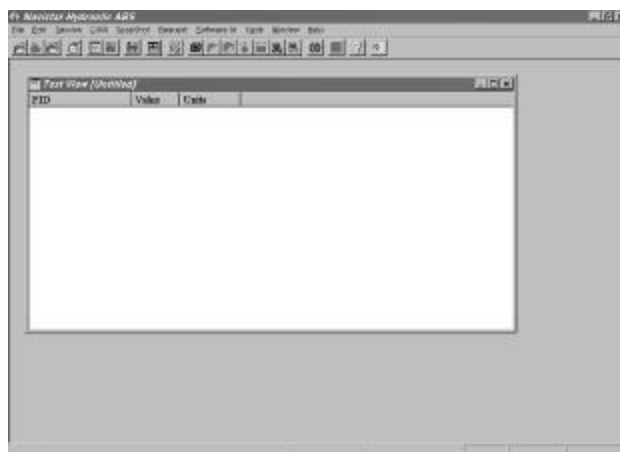

Add parameters to this window to display any data. Select **Edit** and then **Add/Delete/Edit Parameters** on the menu bar.

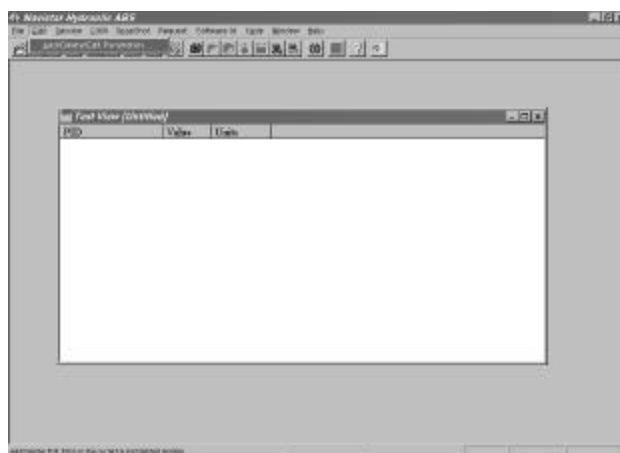

HINT: Toolbar shortcut is by clicking on



Another method to add parameters is via the pop up menu. Place the mouse pointer inside the text view window and right click once to bring up a pop up menu associated with this window type. In this pop up menu there are three options: **Change Font**, **Add/Delete Parameters**, and **Pause**. Click on the **Add/Delete Parameter** option.



Any of the three methods will cause the **ADD/DELETE PARAMETERS** dialog box to appear.




Double clicking on the parameter or clicking on all the desired parameters in the **Available Parameter** list box and then click on **OK** to add parameters.

 



At this point, the selected parameters should appear in the right **Selected Parameter** list box.




The default display unit for the parameter is in English unit. To change to Metric display unit, select the parameter in the **Selected Parameter** list box by clicking it and then click on  which opens the associated attribute dialog box.




Change the displayed units by clicking on the down arrow next to the **Display Type** edit box. When complete, click on .

 If you need to recall the original settings you may click on  to restore the attributes to the factory defaults.

When complete with adding or deleting parameters and modifying the attributes, click on  in the **Add/Delete Parameters** dialog box.


Placing the mouse pointer within the window and right click once will bring up advanced features. Click on **Change Font** option to modify the display font type and size.

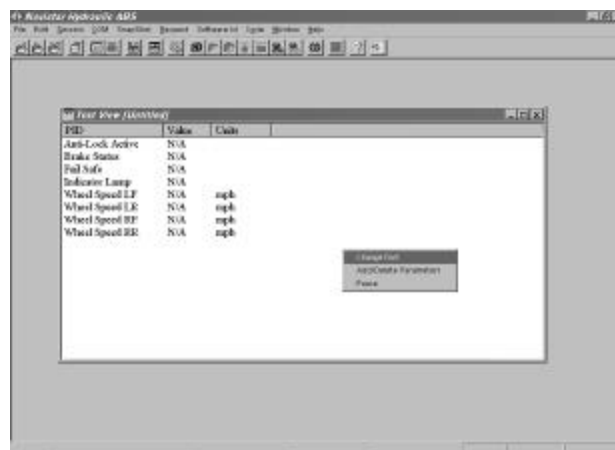


Select the desired options in the FONT dialog box and click on .



Now the text window should change to the selected font type and size.

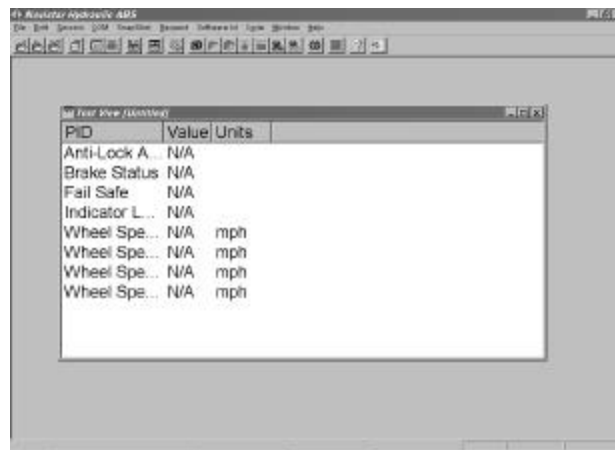

Often, it is necessary to re-size some of the columns in the text window. Move the mouse pointer to the line between the columns in the heading bar. The mouse pointer will change from an arrow to a bar with arrows on left and right side. Click and drag to resize the width of the column or double clicking at this point will cause the column to be automatically re-sized to fit the widest entry in the column.

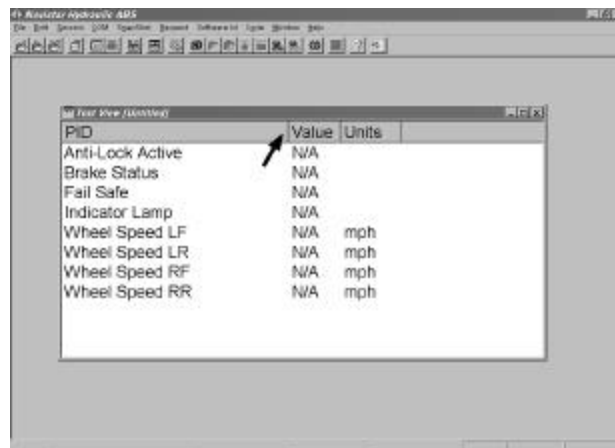


This text view window is configured and ready to be used. This text window may be saved for later retrieval. Click on **File** in the menu bar and then **Save As**

HINT: Toolbar shortcut is by clicking on



The information in the window may be displayed in different formats by clicking on the title of the column. By clicking on **PID**, the descriptions are toggled to acronyms. By clicking on **Units**, the units of the parameters are toggled to Metric or English.

The test view window will begin to display the current data. Click on **COM** in the menu bar and then **Open** to start to monitor the ALDL bus.

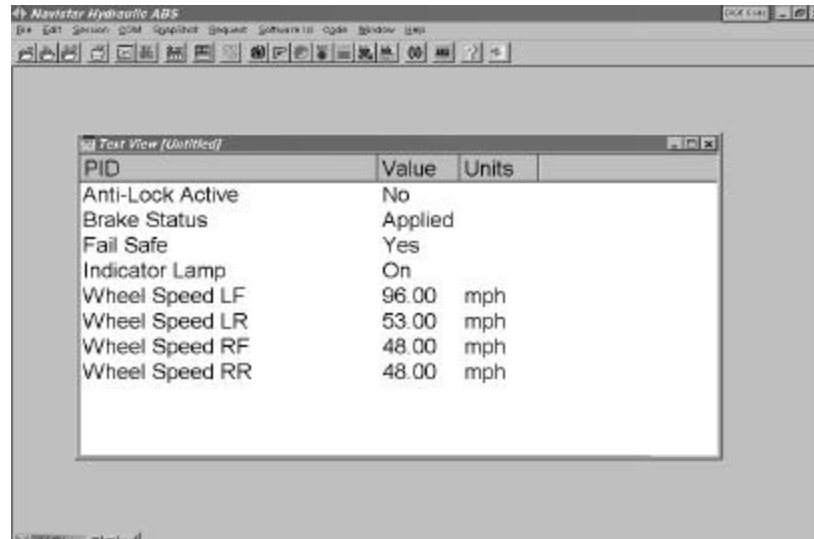

The screenshot shows the Navistar Hydramatic ABS software interface. The main window is titled "Test View (Untitled)". It contains a table with the following data:

PID	Value	Units
Anti-Lock Active	No	
Brake Status	Applied	
Fail Safe	Yes	
Indicator Lamp	On	
Wheel Speed LF	96.00	mph
Wheel Speed LR	53.00	mph
Wheel Speed RF	48.00	mph
Wheel Speed RR	48.00	mph

HINT: Toolbar shortcut is by clicking on



3. DATA IN GRAPHICAL FORMAT

To monitor the ABS parameter data in graphical format, you must first create a graphical window. This is done similar to the creation of a text view window. Click on **File** in the menu bar and then **New** or press ALT “F” and then “N”.

Select **Parameter Graphical View (.pgv)** and click on


OK



HINT: Toolbar shortcut is by clicking on




A generic graphical display window will appear.

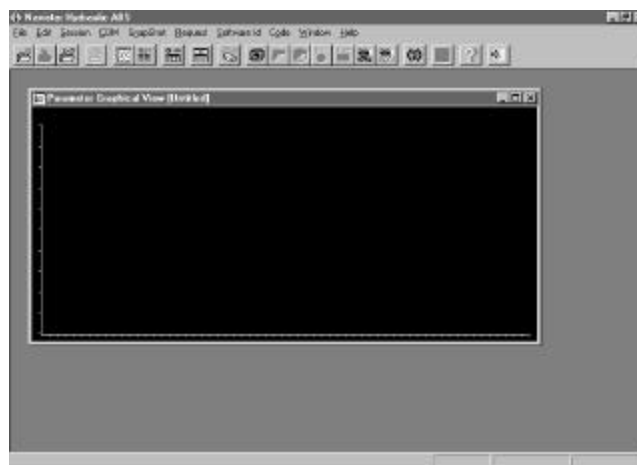


To add parameters in it, select **Edit** and then **Add/Delete/Edit Parameters** on the menu bar.


HINT: Toolbar shortcut is by clicking on

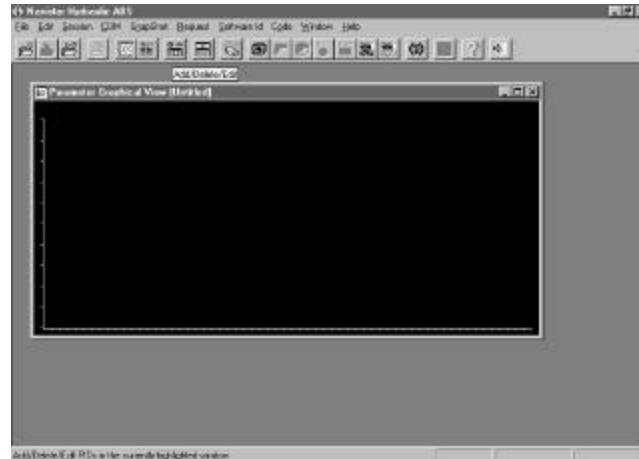


Placing the mouse pointer inside the graphical view display window and right click once will bring up a pop up menu. In the pop up menu there are three options: **Change Above/Below Color**, **Change Background White**, and **Add/Delete Parameters**. Click on the **Add/Delete Parameter** option

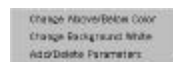

This will cause the ADD/DELETE PARAMETERS dialog box to appear.

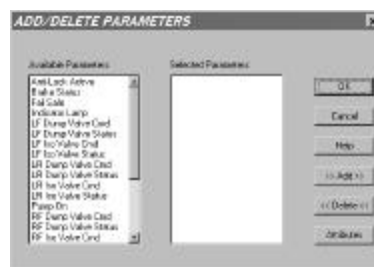

Double clicking on the parameter or click on all the desired parameters in the **Available Parameter** list box and then click on **>> Add >>** to add the parameters.

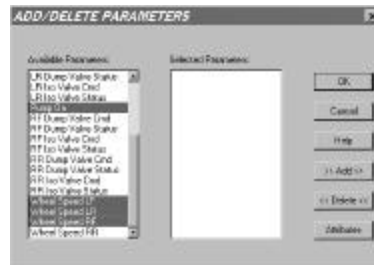

At this point the selected parameters should appear in the right Selected Parameter list box.

The displayed units and ranges for the parameter may be changed. Select the parameter in the right Selected Parameter list box and click on **Attributes**



The attribute dialog box will appear.



Change the displayed units by clicking on the down arrow next to the Display Type edit box.




Change the Minimum and Maximum display range by replacing the values in the respective edit boxes. The Below and Above values causes the color of the graph for that parameter to change color when the parameter falls below or exceeds them.

Click  on  to restore the attribute to the factory set default.




The graphical window will now display the selected parameters.

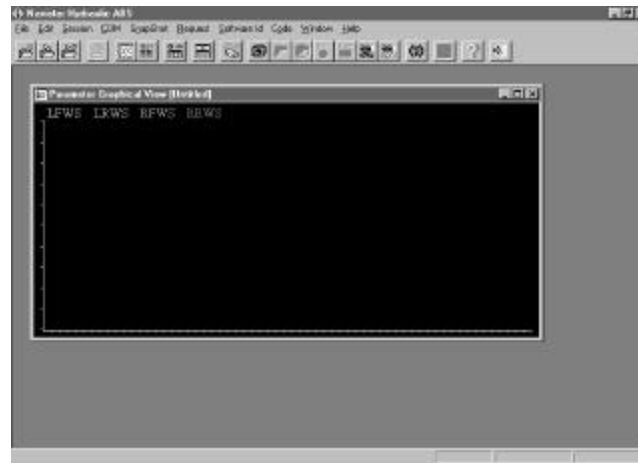


Clicking on the parameter acronyms at the top of the graph will cause the graph to display the minimum and the maximum display range values on the left scale.




Right clicking on an acronym will cause a drop down menu to appear. Several options are available in this drop down menu: **Hide Min/Max Values** (available only when the values are displayed), **Show Min/Max Values**, **Edit Attributes**, and **Change Color**. All these options are associated with the selected parameter only.

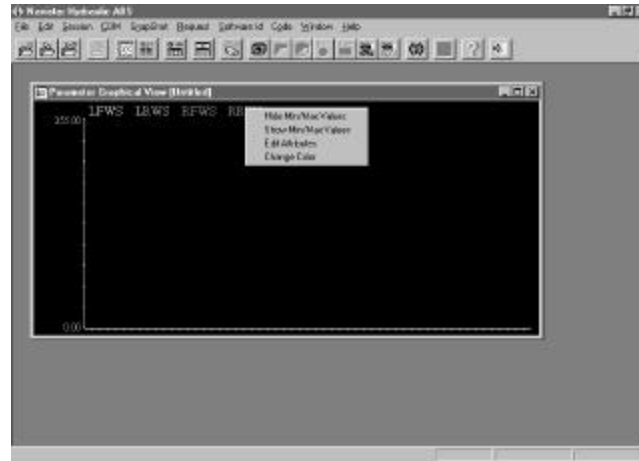


Right clicking anywhere else inside the graphical window will cause another drop down menu to appear. Several options are available in this drop down menu: **Hide Min/Max Values** (available only when the values are displayed), **Show Min/Max Values**, **Edit Attributes**, **Change Color**, **Change Above/Below Color**, **Change Background White** (or **Change Background Black** depending which is the current background color), **Add/Delete Parameters**, and **Pause**. All these options are associated with the entire graphical window. The **Pause** option will freeze the display.

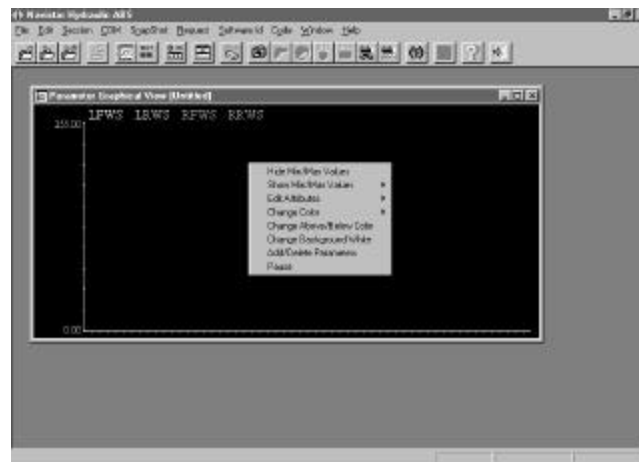

A list of all the selected parameter acronyms will appear by clicking on an option that has a right arrow. This will allow the change to be effective on the selected parameter.

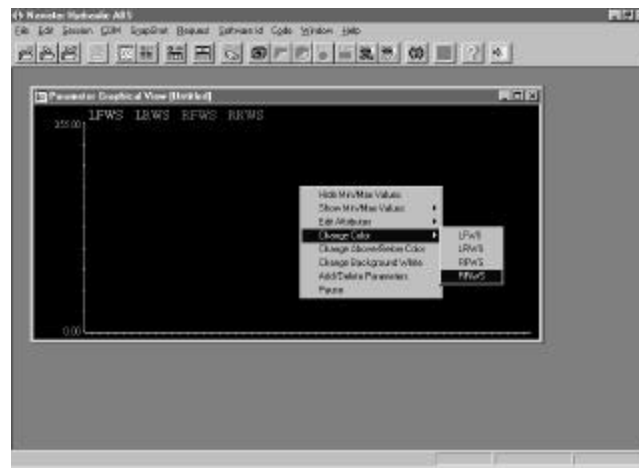

It is often necessary to change the background color when viewing the graph to get the best contrast. Click on **Change Background Color White** to change the background color. When the background color is white, the option will automatically change to **Change Background Color Black**.

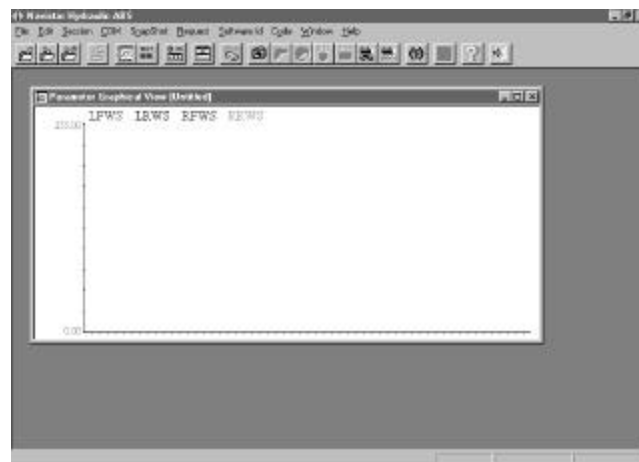

The graphical window will begin to display the current data. Click on **COM** in the menu bar and then **Open**.

HINT: Toolbar shortcut is by clicking on



4. TROUBLE CODES

The trouble codes can be displayed only when the ALDL bus is open and active. After the ALDL bus is opened, then the **Code** and **View** option will become available.


HINT: Toolbar shortcut is by clicking on



The Diagnostic Trouble Codes window will appear.




Placing the mouse pointer within the window and right click will bring up advanced features. Click on the **Change Font** option to modify the display font type and size.

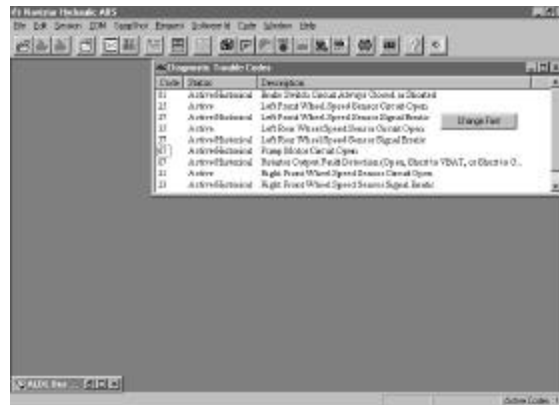

The FONT dialog box will appear. Select the desired options and click on

Double click on a trouble code will bring up more information regarding that trouble code. This is to assist the technician with quick information as to what the trouble code means. Click on the “X” in the upper right hand corner of the window to remove and close it.

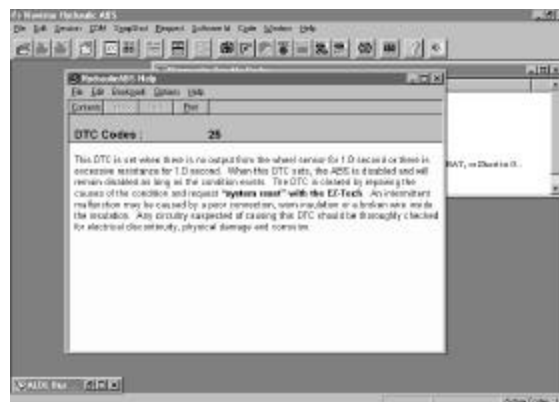


5. ABS ELECTRONIC MODULE SOFTWARE ID INFORMATION

The ABS module ID information can be displayed only when the ALDL bus is open and active. After the ALDL bus is opened, then the **Software Id** and **View Information** option will become available.

HINT: Toolbar shortcut is by clicking on



Placing the mouse pointer within the window and right clicking will bring up advanced features. Click on the **Change Font** option to modify the display font type and size.

The FONT dialog box will appear. Select the desired options and click on 




6. DIAGNOSTIC TESTS

To execute diagnostic tests select **Request** in the menu bar and then the on-demand diagnostic test. Only one test is available: **Dealer's Bleed Test (Zero Speed Test** in Lucas Varsity Hydraulic ABS Service Manual). Please refer to the Lucas Varsity Hydraulic ABS Service Manual for information regarding when to perform this test.



The other request, **System Reset**, will clear the historical codes from the ABS module's memory. Please refer to the Lucas Varsity Hydraulic ABS Service Manual for information regarding when to perform the clear code request.

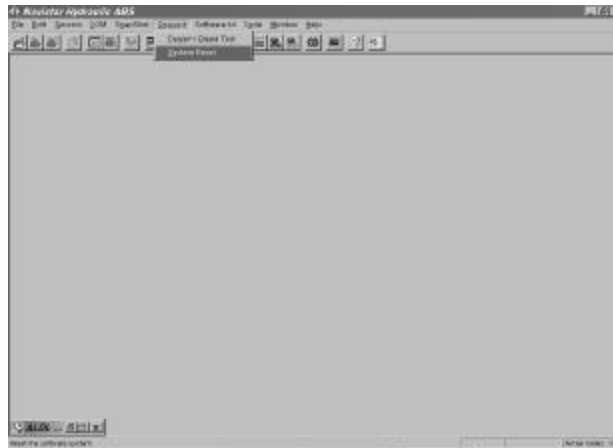

7. CAPTURE SNAPSHOT DATA

The snapshot feature is used to control when and what data will be recorded. This helps to locate ABS system problems by focusing on when the symptom occurs. Snapshot setup controls recording of data by allowing the user to specify a set of conditions that will start recording. Snapshot can also record data before the trigger event.

To begin, select the **SnapShot** and then **Setup** in the menu bar

HINT: Toolbar shortcut is by clicking on



The SNAPSHOT SETUP dialog box will appear.



Here are the steps for using Snapshot:

Select a trigger to begin snapshot recording: use either automatic triggers or manual trigger.

The trigger is used by International Hydraulic ABS diagnostic software to determine when to begin the data recording. The International Hydraulic ABS diagnostic software allows for two automatic triggers, which can be used together or separately.

(A) Hydraulic ABS Parameter Trigger

- First, select a Hydraulic ABS Trigger PID for the trigger by clicking on it.



- Second, for numeric PIDs, select the desired unit for the trigger value.
- Third, change the Trigger Value.



- Fourth, select a rising or falling edge.



(B) Trouble Code Trigger

- Simply change the trouble code count to a non-zero value.
- An example: if "Wheel Speed - LF" is selected as the trigger parameter, "10" mph is set as the trigger value, and "rising" edge is selected, International Hydraulic ABS diagnostic software will begin the data recording when Left Front Wheel Speed rises above 10 mph.

To use the manual trigger, simply use



For the keyboard inclined individuals, F2 and F3 keys will function as start and stop recording, respectively.

1) Set the Sample Rate.

This setting tells International Hydraulic ABS diagnostic software how often to record data. Setup a shorter time if desired amount of data to collect is small. Setup a longer time if the desired amount of data to collect is large.

1) Set the Pre Trigger Time to record.


Setting this option allows International Hydraulic ABS diagnostic software to record data just before the trigger event.

2) Set the Post Trigger Time to record.

Setting this option tells International Hydraulic ABS diagnostic software the amount of data to record. It should be noted that only 2000 time frames might be recorded at one time. International Hydraulic ABS diagnostic software will warn you if this is exceeded. Simply reduce the Post Trigger time or the Pre Trigger time when this error message is displayed.

3) Select the ABS parameters to record.


The SELECT PARAMETERS TO RECORD dialog box will appear. The list on the left contains all the available parameter for recording. The list on the right contains the parameters already selected to be recorded.

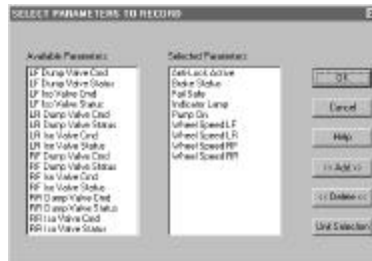


Individual parameters may be recorded using different units. However, only the numeric parameters will have this option available. By default all parameters uses the English units for recording. Click on the parameter and then [Unit Selection](#)




To change the recording unit click on the down arrow button.

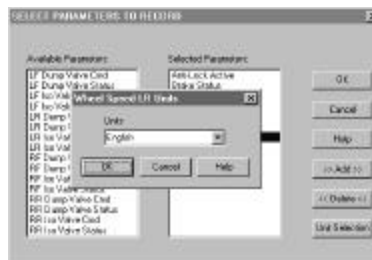

- 4) Set the file name.

Set the file name that will be used to record the data. The recording files will have a .REC as the extension. To replace, double click the text in the File name edit box. Type in the desired recording file name and click on 



- 5) You may save this trigger setting to a file for later retrieval. The trigger setting files will have a .TRG as the extension. To replace double click the text in the File name edit box. Type in the desired trigger-setting file name and click on 



- 6) Begin watching for the indicated trigger by checking Arm Trigger

HINT: Toolbar shortcut is by clicking on



8. SNAPSHOT DATA RECORDING REPLAY

The replay feature will only play back recording files that were created by International Hydraulic ABS diagnostic software. The replay feature allows two different display types: graphical and textual.

REPLAY VIA GRAPHICAL WINDOWS

 
Select **SnapShot** in the menu bar, then **Replay** and lastly **Graphical**

HINT: Toolbar shortcut is by clicking on




The **OPEN SNAPSHOT RECORDING FILE** dialog box will appear.



Select the desired file by clicking on the filename  and then click on




The display will be automatically adjusted to display the entire recording in the window. The color and the scaling for each recorded PID will also be automatically selected.

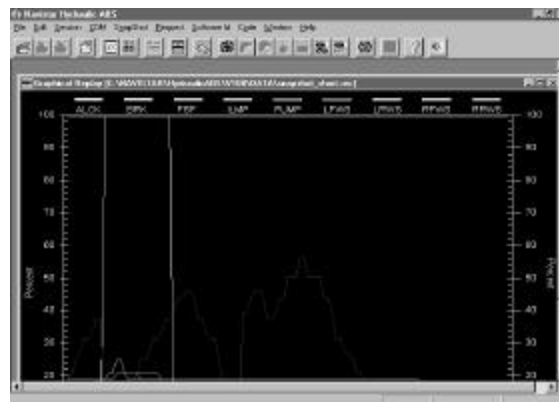


HOW TO USE THE REPLAY GRAPHICAL WINDOWS FEATURE

Repeat the file opening process again so that the same recording is replayed in two separate windows. By opening the same recording file again, one window may be used to display the entire recording, and the other window may be used to display a zoomed-in portion of the recording.


To display both graphical replay windows on the computer screen, select **Window** in the menu bar and click on **Tile horizontal**.

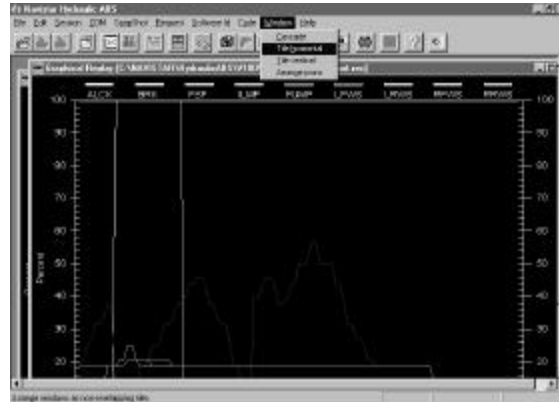

The two graphical replay windows will now be tiled on top of each other.

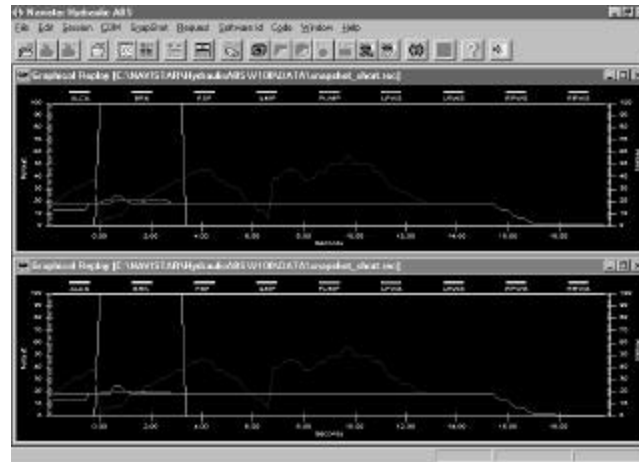


To zoom in simply click and drag to cover the zoom in area. Use the scroll bar on the bottom of the window to move left or right.

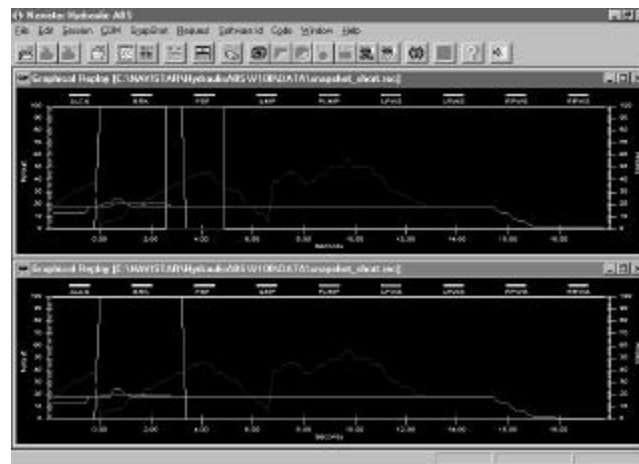


Notice that a horizontal scroll bar will appear in the zoomed-in window.

Scrolls left or right to see the other portions of the recording in the zoomed-in window.

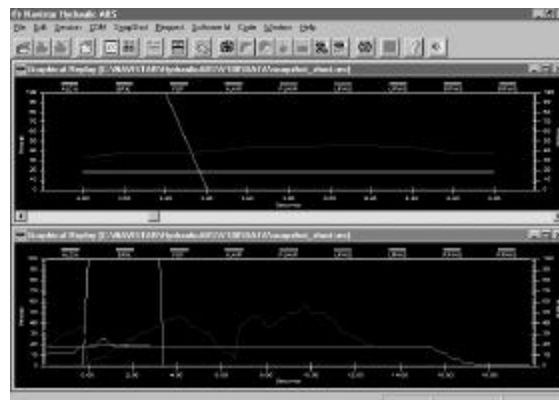

Right mouse clicking will bring up advanced features: **Show Min/Max Values**, **Change Color**, **Change Background White** (or **Change Background Black** depending on current background color), **Zoom Reset**, and **Show Grid**. The **Show Min/Max Values** option will display the selected parameter's minimum and maximum display ranges on the right scale. The **Change Color** option will allow the user to change the parameter's display color. The **Change Background White** will toggle the background color to white for better contrast. Please change the background color to white when printing.

Left mouse clicking on an acronym will cause the left scale to display the minimum and maximum display ranges. The time scale on the bottom is based on the recording file and 0.0 second mark indicates when the automatic or manual trigger occurred.

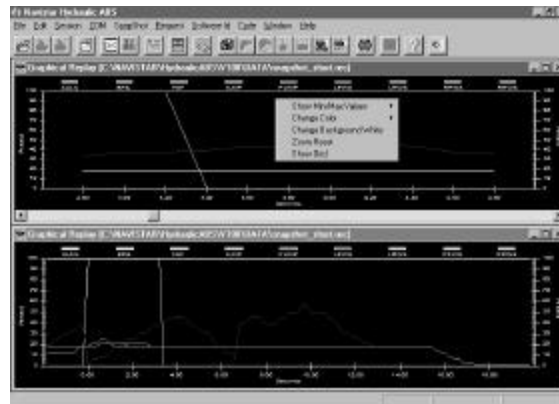

REPLAY VIA TEXTUAL WINDOWS

Select **SnapShot** from the menu bar, then **Replay** and lastly **Text**

HINT: Toolbar shortcut is by clicking on



The OPEN SNAP SHOT RECORDING FILE dialog box will appear.



Select the desired file by clicking on the filename and then click on

Open



The display will be automatically adjusted to display the entire recording in the window. The left most column indicates time. The next column is the active trouble code count, labeled as TCC.

TIME	TCC	ALCK	BRK	PSF	ILMP	PUMP	LFWS
-1.80	10	No	Released	Yes	On	No	48.00
-1.60	10	No	Released	Yes	On	No	53.00
-1.40	10	No	Released	Yes	On	No	64.00
-1.20	10	No	Released	Yes	On	No	69.00
-1.00	10	No	Released	Yes	On	No	80.00
-0.80	10	No	Released	Yes	On	No	80.00
-0.60	10	No	Released	Yes	On	No	85.00
-0.40	10	No	Released	Yes	On	No	96.00
-0.20	10	No	Released	Yes	On	No	96.00
0.00	10	No	Applied	Yes	On	No	5.00
0.20	10	No	Applied	Yes	On	No	16.00
0.40	10	No	Applied	Yes	On	No	16.00
0.60	10	No	Applied	Yes	On	No	21.00
0.80	10	No	Applied	Yes	On	No	21.00
1.00	10	No	Applied	Yes	On	No	32.00
1.20	10	No	Applied	Yes	On	No	48.00
1.40	10	No	Applied	Yes	On	No	48.00
1.60	10	No	Applied	Yes	On	No	53.00
1.80	10	No	Applied	Yes	On	No	64.00

Right mouse clicking will bring up advanced features: **Change Fonts**. The time scale on the left most column is based on the recording file and 0.0 indicates when the automatic or manual trigger occurred. To resize the width of individual columns, simply click and drag at the border marking. Double clicking the border marking will automatically resize the column width to the widest entry, which does not include the heading itself.

TIME	TCC	ALCK	BRK	PSF	ILMP	PUMP	LFWS
-1.80	10	No	Released	Yes	On	No	48.00
-1.60	10	No	Released	Yes	On	No	53.00
-1.40	10	No	Released	Yes	On	No	64.00
-1.20	10	No	Released	Yes	On	No	69.00
-1.00	10	No	Released	Yes	On	No	80.00
-0.80	10	No	Released	Yes	On	No	80.00
-0.60	10	No	Released	Yes	On	No	85.00
-0.40	10	No	Released	Yes	On	No	96.00
-0.20	10	No	Released	Yes	On	No	96.00
0.00	10	No	Applied	Yes	On	No	5.00
0.20	10	No	Applied	Yes	On	No	16.00
0.40	10	No	Applied	Yes	On	No	16.00
0.60	10	No	Applied	Yes	On	No	21.00
0.80	10	No	Applied	Yes	On	No	21.00
1.00	10	No	Applied	Yes	On	No	32.00
1.20	10	No	Applied	Yes	On	No	48.00
1.40	10	No	Applied	Yes	On	No	48.00
1.60	10	No	Applied	Yes	On	No	53.00
1.80	10	No	Applied	Yes	On	No	64.00
2.00	10	No	Applied	Yes	On	No	64.00
2.20	10	No	Applied	Yes	On	No	69.00

The FONT dialog box will appear. Select the desired options and click on the “OK” button.



Now the text window should change to the selected font type and size.


TIME	TCC	ALLOC	ERK	PSP	LMP	BURP	LPWS
-1.00	10	No	Released	Yes	On	No	40.00
-1.00	10	No	Released	Yes	On	No	80.00
-1.40	10	No	Released	Yes	On	No	64.00
-1.20	10	No	Released	Yes	On	No	60.00
-1.00	10	No	Released	Yes	On	No	80.00
-0.80	10	No	Released	Yes	On	No	80.00
-0.60	10	No	Released	Yes	On	No	80.00
-0.40	10	No	Released	Yes	On	No	96.00
-0.20	10	No	Released	Yes	On	No	96.00
0.00	10	No	Applied	Yes	On	No	5.00
0.20	10	No	Applied	Yes	On	No	16.00
0.40	10	No	Applied	Yes	On	No	16.00
0.60	10	No	Applied	Yes	On	No	21.00
0.80	10	No	Applied	Yes	On	No	21.00
1.00	10	No	Applied	Yes	On	No	32.00
1.20	10	No	Applied	Yes	On	No	40.00
1.40	10	No	Applied	Yes	On	No	40.00
1.60	10	No	Applied	Yes	On	No	80.00
1.80	10	No	Applied	Yes	On	No	84.00
2.00	10	No	Applied	Yes	On	No	64.00
2.20	10	No	Applied	Yes	On	No	60.00
2.40	10	No	Applied	Yes	On	No	80.00
2.60	10	No	Applied	Yes	On	No	80.00
2.80	10	No	Applied	Yes	On	No	96.00
3.00	10	No	Applied	Yes	On	No	96.00
3.20	10	No	Applied	Yes	On	No	96.00

Multiple graphical play back windows and/or textual play back windows may be displayed at anytime. Resize the windows like any window by clicking and dragging at the corners or sides of the window. Reposition the window like any window by clicking and dragging the window's title bar. When all windows have been positioned and sized properly, the desktop may be saved as a session for later retrieval.

9. SESSIONS

Session opens/retrieves a previously setup desktop workspace. A previously setup diagnostic session may be opened with this option. The desktop workspace will have all the needed text view windows, trouble code windows, ALDL bus, etc. already pre-configured for your use. Click on **Session** in the menu bar and then **Open**

HINT: Toolbar shortcut is by clicking on

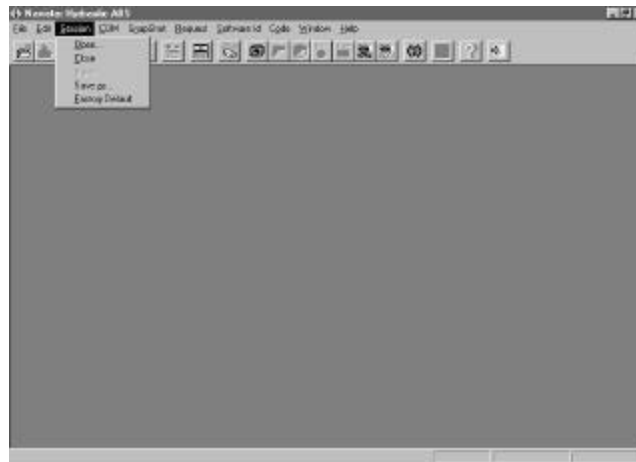

The OPEN SESSION FILE dialog box will appear. Select the desired file by clicking on the filename and then click on

Open



10. SYSTEM AND SOFTWARE TROUBLE SHOOTING

1. If you have lost the sessions that were provided by the install disk and you do not have the install disks any more, please use Windows copy function to retrieve the lost file. The back up copy of the session files is located in the **Factory** folder.
2. If the communication link has failed, the following message box should be displayed.



Note: The following steps are recommended only for Navistar EZ-Tech Interface cable, or International EZ-Tech Interface cable.


- A) The interface cable must be connected prior to executing the Hydraulic ABS diagnostic software. Exit the software, connect the cable, run the software again. Make certain that the correct communication port is selected in the software, please go to step 2 if still unable to communicate on the ALDL data link.
- B) Disconnect and reconnect the interface cable from the truck's diagnostic connector (Deutsch connector). Make sure the interface cable is secure on both the truck's diagnostic connector and the PC communication (COM) port. Attempt to run the software again.
- C) If the "Power ON/OFF" indicator is not lit, the truck battery may be low or the truck wiring harness may be faulty. For 6 pin Deutsch connector, check voltage between pin C (VBAT) and pin E (GND) on the truck's diagnostic connector. For 9-pin Deutsch connector, check voltage between pin B (VBAT) and pin A (GND) on the truck's diagnostic connector. If the voltage is 9V DC or greater, please replace the interface cable.


If the "Power ON/OFF" indicator is lit, then go to step 4 if "ALDL" indicator is flashing red; if neither indicators on the interface cable are flashing, then go to step 5.
- D) Try connecting to another PC communication port and/or use another serial cable. Change the settings in the software to open the new selected communication port. Replace the interface cable if still unable to communicate on the ALDL data link.
- E) Check if the key switch is turned on. Replace the interface cable if key switch was turned on.

3. Software installation problem using CD-ROM

Use the Windows control panel to install the software. Click on the Start button in the lower left-hand corner of the screen. Click on the option labeled Settings. Click on the Control Panel folder. Locate and double click on the icon




Click on the  button to have Windows automatically locate the CD-ROM to initiate the install process.

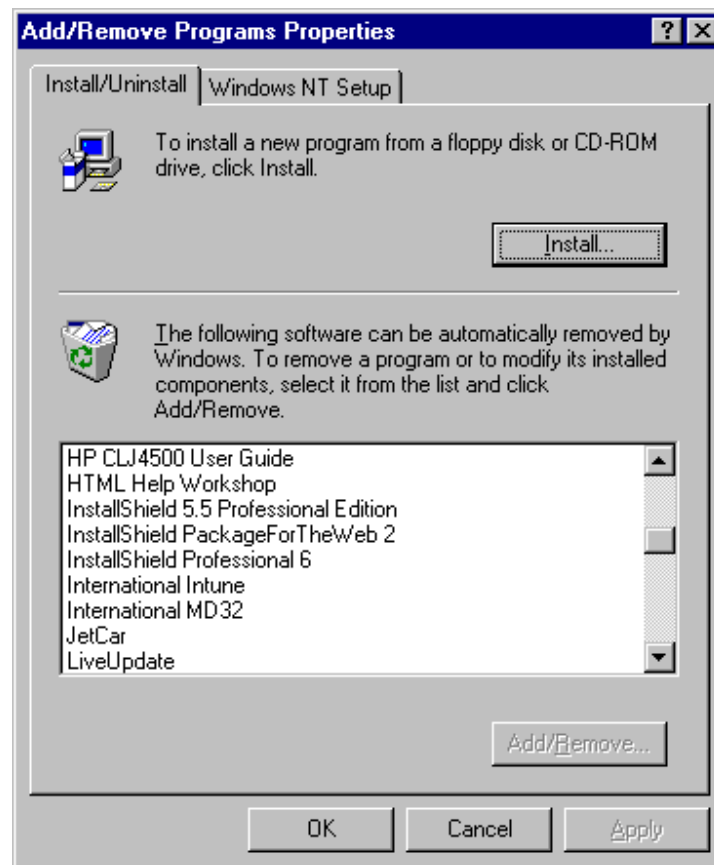


4. To Un-Install the software

Use the Windows control panel to un-install the software. Click on the Start button in the lower left-hand corner of the screen. Click on the option labeled Settings. Click on the Control Panel folder. Locate and double click on the icon

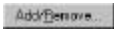

Click on the application to be removed in the list and click on the button  to have Windows remove the software.

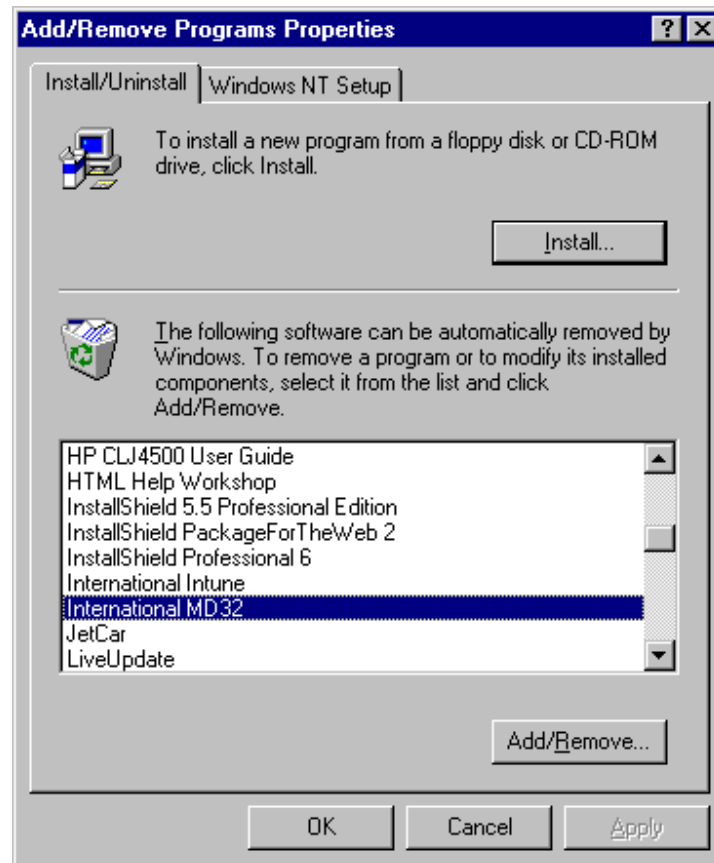

Factory Features

For details regarding the operation of the factory features please refer to the factory testing procedure and manual.