

# YFM7FGPW

# **SERVICE MANUAL**

LIT-11616-20-11 3B4-28197-10

# YFM7FGPW SERVICE MANUAL ©2006 by Yamaha Motor Corporation, U.S.A. First Edition, May 2006

All rights reserved.

Any reproduction or unauthorized use without the written permission of Yamaha Motor Corporation, U.S.A. is expressly prohibited.

Printed in U.S.A.

LIT-11616-20-11

### NOTICE

This manual was produced by the Yamaha Motor Company primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual, so it is assumed that anyone who uses this book to perform maintenance and repairs on Yamaha vehicle has a basic understanding of the mechanical ideas and the procedures of vehicle repair. Repairs attempted by anyone without this knowledge are likely to render the vehicle unsafe and unfit for use.

This model has been designed and manufactured to perform within certain specifications in regard to performance and emissions. Proper service with the correct tools is necessary to ensure that the vehicle will operate as designed. If there is any question about a service procedure, it is imperative that you contact a Yamaha dealer for any service information changes that apply to this model. This policy is intended to provide the customer with the most satisfaction from his vehicle and to conform to federal environmental quality objectives.

Yamaha Motor Company, Ltd. is continually striving to improve all its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

#### NOTE:

- This Service Manual contains information regarding periodic maintenance to the emission control system. Please read this material carefully.
- Designs and specifications are subject to change without notice.

#### FBS00003

### IMPORTANT INFORMATION

Particularly important information is distinguished in this manual by the following notations.

<u>/!\</u>

The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

**WARNING** 

Failure to follow WARNING instructions <u>could result in severe injury or death</u> to the vehicle operator, a bystander or a person checking or repairing the vehicle.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the vehicle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

# **HOW TO USE THIS MANUAL**

### MANUAL ORGANIZATION

This manual consists of chapters for the main categories of subjects. (See "symbols")

1st title ①: This is the title of the chapter with its symbol in the upper right corner of each page.


2nd title ②: This title indicates the section of the chapter and only appears on the first page of each section. It is located in the upper left corner of the page.


3rd title ③: This title indicates a sub-section that is followed by step-by-step procedures accompanied by corresponding illustrations.

### **EXPLODED DIAGRAMS**

To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.

- 1. An easy-to-see exploded diagram 4 is provided for removal and disassembly jobs.
- 2. Numbers ⑤ are given in the order of the jobs in the exploded diagram. A number that is enclosed by a circle indicates a disassembly step.
- 3. An explanation of jobs and notes is presented in an easy-to-read way by the use of symbol marks⑥. The meanings of the symbol marks are given on the next page.
- 4. A job instruction chart ⑦ accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- 5. For jobs requiring more information, the step-by-step format supplements ® are given in addition to the exploded diagram and the job instruction chart.

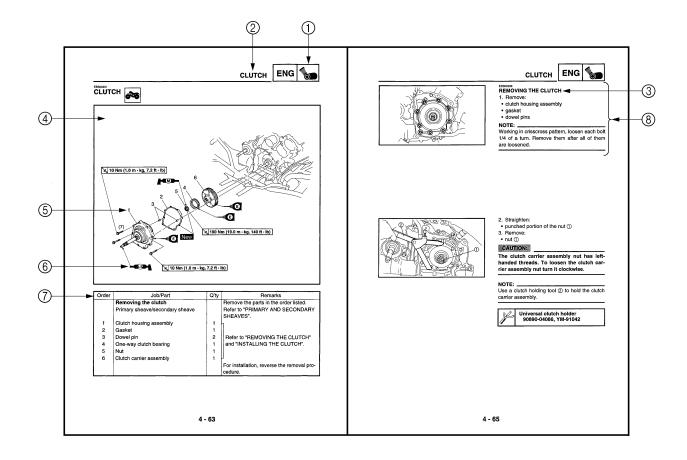

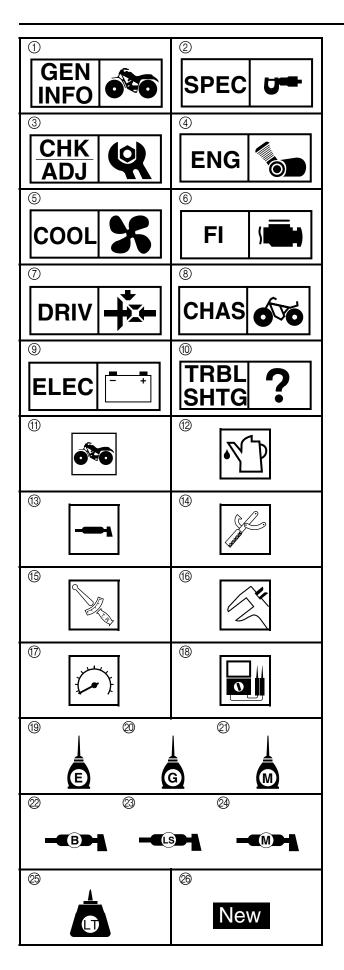

## **SYMBOLS**

The following symbols are not relevant to every vehicle.

Symbols ① to ⑩ indicate the subject of each chapter.

- 1) General information
- ② Specifications
- 3 Periodic checks and adjustments
- (4) Engine
- (5) Cooling system
- 6 Fuel injection system
- (7) Drive train
- (8) Chassis
- 10 Troubleshooting

Symbols (1) to (8) indicate the following

- (1) Can be serviced with engine mounted
- 12 Filling fluid
- (3) Lubricant
- (4) Special tool
- (15) Torque
- (6) Wear limit, clearance
- ① Engine speed
- <sup>(8)</sup> Electrical data (Ω, V, A)

Symbols (9) to (24) in the exploded diagrams indicate the types of lubricants and lubrication points.

- (19) Apply engine oil
- 20 Apply gear oil
- ② Apply molybdenum disulfide oil
- 2 Apply wheel bearing grease
- Apply lithium-soap-based grease
- Apply molybdenum disulfide grease

Symbols 3 to 3 in the exploded diagrams indicate where to apply a locking agent 3 and when to install a new part 3.

- Apply the locking agent (LOCTITE®)
- Replace

# **TABLE OF CONTENTS**

GENERAL INFORMATION	GEN INFO
SPECIFICATIONS	SPEC 2
PERIODIC CHECKS AND ADJUSTMENTS	CHK ADJ 3
ENGINE	ENG 4
COOLING SYSTEM	COOL 5
FUEL INJECTION SYSTEM	FI 6
DRIVE TRAIN	DRIV 7
CHASSIS	CHAS 8
ELECTRICAL	ELEC 9
TROUBLESHOOTING	? TRBL 10

# **CONTENTS**

# CHAPTER 1 GENERAL INFORMATION

VEHICLE IDENTIFICATION	1-1
OUTLINE OF THE FI SYSTEM	1-2 1-3 1-4 1-5
IMPORTANT INFORMATION  PREPARATION FOR REMOVAL AND DISASSEMBLY  REPLACEMENT PARTS  GASKETS, OIL SEALS AND O-RINGS  LOCK WASHERS/PLATES AND COTTER PINS  BEARINGS AND OIL SEALS  CIRCLIPS  CHECKING THE CONNECTIONS	1-9 1-9 1-10 1-10 1-10
SPECIAL TOOLS	.1-12
CHAPTER 2 SPECIFICATIONS	
GENERAL SPECIFICATIONS	2-1
ENGINE SPECIFICATIONS	2-5
CHASSIS SPECIFICATIONS	.2-12
ELECTRICAL SPECIFICATIONS	.2-14
TIGHTENING TORQUES  ENGINE TIGHTENING TORQUES  CHASSIS TIGHTENING TORQUES	.2-16
HOW TO USE THE CONVERSION TABLE	.2-22

GENERAL TIGHTENING TORQUE SPECIFICATIONS2-22
LUBRICATION POINTS AND LUBRICANT TYPES2-23 ENGINE2-23
COOLANT FLOW DIAGRAMS2-25
OIL FLOW DIAGRAMS2-26
CABLE ROUTING2-28
CHAPTER 3 PERIODIC CHECKS AND ADJUSTMENTS
INTRODUCTION3-1
PERIODIC MAINTENANCE CHART FOR THE EMISSION CONTROL SYSTEM
GENERAL MAINTENANCE AND LUBRICATION CHART3-2
ENGINE SKID PLATES, SEAT, CARRIERS AND FENDERS3-4ENGINE SKID PLATES3-4SEAT AND SIDE PANELS3-5FRONT CARRIER AND FRONT GUARD3-6FRONT FENDERS AND FRONT GRILL3-8REAR CARRIER AND REAR FENDER3-9
ELECTRICAL COMPONENTS TRAY3-10ELECTRICAL COMPONENTS TRAY 1/23-10ELECTRICAL COMPONENTS TRAY 2/23-12
FOOTREST BOARDS3-14
AIR FILTER CASE

ENGINE	3-16
ADJUSTING THE VALVE CLEARANCE	3-16
ADJUSTING THE ENGINE IDLING SPEED	3-19
ADJUSTING THE THROTTLE LEVER FREE PLAY	3-20
ADJUSTING THE SPEED LIMITER	
CHECKING THE SPARK PLUG	
CHECKING THE IGNITION TIMING	
MEASURING THE COMPRESSION PRESSURE	
CHECKING THE ENGINE OIL LEVEL	
CHANGING THE ENGINE OIL	
CLEANING THE AIR FILTER ELEMENT	
CHECKING THE THROTTLE BODY JOINT	
CHECKING THE THINGTTEE BODT SOINT	
CHECKING THE POEL HOSE	
CHECKING THE BREATHER HOSES	
CHANGING THE COOLANT	
CHECKING THE COOLING SYSTEMCHECKING THE COOLANT TEMPERATURE WARNING LIGHT	
CHECKING THE V-BELT	
CHECKING THE EXHAUST SYSTEM	
CLEANING THE SPARK ARRESTER	3-43
CHASSIS	3-44
ADJUSTING THE FRONT BRAKE	3-44
ADJUSTING THE REAR BRAKE	3-44
CHECKING THE BRAKE FLUID LEVEL	3-46
CHECKING THE FRONT BRAKE PADS	3-47
CHECKING THE REAR BRAKE PADS	3-48
CHECKING THE REAR BRAKE HOSE PROTECTORS	
CHECKING THE BRAKE HOSES	
BLEEDING THE HYDRAULIC BRAKE SYSTEM	
ADJUSTING THE SELECT LEVER CONTROL CABLE AND	
SHIFT ROD	3-51
CHECKING THE FINAL GEAR OIL LEVEL	
CHANGING THE FINAL GEAR OIL	
CHECKING THE DIFFERENTIAL GEAR OIL LEVEL	
CHANGING THE DIFFERENTIAL GEAR OIL	
CHECKING THE CONSTANT VELOCITY JOINT DUST BOOTS	
CHECKING THE CONSTANT VELOCITY JOINT DOST BOOTS CHECKING THE STEERING SYSTEM	
ADJUSTING THE TOE-IN	
CHECKING THE FRONT AND REAR SHOCK ABSORBERS	
ADJUSTING THE FRONT SHOCK ABSORBERS	
ADJUSTING THE REAR SHOCK ABSORBERS	
CHECKING THE TIRES	
CHECKING THE WHEELS	
CHECKING AND LUBRICATING THE CABLES	
LUBRICATING THE LEVERS AND PEDALS	3-66

ELECTRICAL SYSTEMCHECKING AND CHARGING THE BATTERYCHECKING THE FUSESADJUSTING THE HEADLIGHT BEAMS	3-67 3-73	
REPLACING THE HEADLIGHT BULBS	3-76	
CHAPTER 4		
ENGINE		
ENGINE REMOVAL		
AIR DUCTS, MUFFLER AND EXHAUST PIPESELECT LEVER UNIT		
LEADS, CABLES AND HOSES	4-4	
ENGINE MOUNTING BOLTSINSTALLING THE ENGINE	4-8	
INSTALLING THE SELECT LEVER UNIT	4-9	
CYLINDER HEAD	4-10	
REMOVING THE CYLINDER HEAD	4-12	
CHECKING THE CAMSHAFT SPROCKET		
CHECKING THE TAPPET COVERS		
CHECKING THE TIMING CHAIN TENSIONER		
CHECKING THE CYLINDER HEAD		
INSTALLING THE CYLINDER HEAD	4-15	
ROCKER ARMS AND CAMSHAFT	4-18	
REMOVING THE ROCKER ARMS AND CAMSHAFT	4-20	
CHECKING THE CAMSHAFT		
CHECKING THE DECOMPRESSION SYSTEM		
CHECKING THE ROCKER ARMS AND ROCKER ARM SHAFTS		
INSTALLING THE CAMSHAFT AND ROCKER ARMS	4-22	
VALVES AND VALVE SPRINGS		
REMOVING THE VALVES AND VALVE SPRINGS		
CHECKING THE VALVES AND VALVE SPRINGS		
INSTALLING THE VALVES AND VALVE SPRINGS	4-31	
CYLINDER AND PISTON		
REMOVING THE PISTON		
CHECKING THE CYLINDER AND PISTON		
CHECKING THE PISTON RINGS	_	
CHECKING THE PISTON PININSTALLING THE PISTON AND CYLINDER		
INGTALLING THE FIGTON AND CTLINDER	<del>4-</del> 39	