

SSH10C2Y

Fusion Corrosion Resistant Indoor / Outdoor Camera Enclosures

SSH10C2Y..... Stainless steel tubular housing, 24Vac input, heater, blower and sunshield

SSH10CY..... Stainless steel tubular housing, no electronics, sunshield



IMPORTANT SAFEGUARDS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with damp cloth.
- 7 Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
- 8 Cable Runs- All cable runs must be within permissible distance.
- 9 Mounting - This unit must be properly and securely mounted to a supporting structure capable of sustaining the weight of the unit.

Accordingly:

- a. This installation should be made by a qualified service person and should conform to all local codes.
 - b. Care should be exercised to select suitable hardware to install the unit, taking into account both the composition of the mounting surface and the weight of the unit.
- 10 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 11 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 12 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 13 Only use attachment/ accessories specified by the manufacturer.
 - 14 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
 - 15 Unplug this apparatus during lightning storms or when unused for long periods of time.
 - 16 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Be sure to periodically examine the unit and the supporting structure to make sure that the integrity of the installation is intact. Failure to comply with the foregoing could result in the unit separating from the support structure and falling, with resultant damages or injury to anyone or anything struck by the falling unit.

UNPACKING

Unpack carefully. Electronic components can be damaged if improperly handled or dropped. If an item appears to have been damaged in shipment, replace it properly in its carton and notify the shipper.

Be sure to save:

 
- 1 **The shipping carton and packaging material.**
They are the safest material in which to make future shipments of the equipment.
- 2 **These Installation and Operating Instructions.**

SERVICE

If technical support or service is needed, contact us at the following number:

TECHNICAL SUPPORT
AVAILABLE 24 HOURS
1 - 800 - 554 - 1124

SAFETY PRECAUTIONS

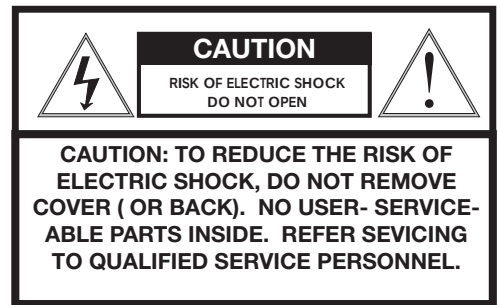

The lightning flash with an arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk to persons.

Este símbolo se piensa para alertar al usuario a la presencia del “voltaje peligroso no-aislado” dentro del recinto de los productos que puede ser un riesgo de choque eléctrico.

Ce symbole est prévu pour alerter l'utilisateur à la présence “de la tension dangereuse” non-isolée dans la clôture de produits qui peut être un risque de choc électrique.

Dieses Symbol soll den Benutzer zum Vorhandensein der nicht-Isolier “Gefährdungsspannung” innerhalb der Produkteinschließung alarmieren die eine Gefahr des elektrischen Schlages sein kann.

Este símbolo é pretendido alertar o usuário à presença “di tensão perigosa non-isolada” dentro do cerco dos produtos que pode ser um risco de choque elétrico.

Questo simbolo è inteso per avvertire l'utente alla presenza “di tensione pericolosa” non-isolata all'interno della recinzione dei prodotti che può essere un rischio di scossa elettrica.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Este símbolo del punto del exclamation se piensa para alertar al usuario a la presencia de instrucciones importantes en la literatura que acompaña la aplicación.

Ce symbole de point d'exclamation est prévu pour alerter l'utilisateur à la présence des instructions importantes dans la littérature accompagnant l'appareil.

Dieses Ausruf Punktsymbol soll den Benutzer zum Vorhandensein de wichtigen Anweisungen in der Literatur alarmieren, die das Gerät begleitet.

Este símbolo do ponto do exclamation é pretendido alertar o usuário à presença de instruções importantes na literatura que acompanha o dispositivo.

Questo simbolo del punto del exclamation è inteso per avvertire l'utente alla presenza delle istruzioni importanti nella letteratura che accompagna l'apparecchio.

Product Warranty Registration

Register Your Products Online

www.moogS3.com/technical-support/product-registration

Moog values your patronage. We are solely committed to providing you with the highest quality products and superior customer service. With 3-Year and 5-Year warranties (depending on the product purchased) we stand behind every product we sell.

See full warranty details at www.moogS3.com/technical-support/warranty-plan/

Register your products today to receive the following benefits:

- Simple and Trouble-Free RMA process
- Product / software updates
- Special promotions
- Eliminate the need to archive purchase documents such as receipts, purchase orders, etc.

Limited Warranty for Moog Products

Moog - Decatur Operations, subsequently referred to as "Manufacturer," warrants these products to be free from defects in material or workmanship as follows:

PRODUCT CATEGORY	PARTS \ LABOR
All Enclosures and Electronics	Five (5) Years
Accessory Brackets	Five (5) Years
Controllers	Three (3) Years
Power Supplies / IR Illuminators	Three (3) Years
Poles / PolEvators™ / CamEvator	Three (3) Years
Warrior Series™ / Q-View™	Three (3) Years
SView Series™	Three (3) Years 6 months if used in auto scan / tour operation
DeputyDome™, NiteTrac™, Igloo Dome, PurgeDome™	Three (3) Years 6 months if used in auto scan / tour operation
EXO Series™ Dome and Fixed Camera Systems*	Three (3) Years 6 months if used in auto scan / tour operation
EXO Series™ GeminEye Visible and Thermal Camera Systems	One (1) Year

During the labor warranty period, to repair the Product, Purchaser will either return the defective product, freight prepaid, or deliver it to Manufacturer at Moog Decatur Operations, 2525 Park Central Boulevard, Decatur, Georgia, 30035. The Product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection with a RMA # (Return Materials Authorization number) displayed on the outer box or packing slip. To obtain a RMA# you must contact our Technical Support Team at 800.554.1124, extension 101. Manufacturer will return the repaired product freight prepaid to Purchaser. Manufacturer is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time. After the applicable warranty period, Purchaser must pay all labor and/or parts charges. The limited warranty stated in these product instructions is subject to all of the following terms and conditions.

TERMS AND CONDITIONS

1. NOTIFICATION OF CLAIMS: WARRANTY SERVICE: If Purchaser believes that the Product is defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to Manufacturer. All claims for warranty service must be made within the warranty period. If after investigation, Manufacturer determines the reported problem was not covered by the warranty, Purchaser shall pay Manufacturer for the cost of investigating the problem at its then prevailing per incident billable rate. No repair or replacement of any Product or part thereof shall extend the warranty period of the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product parts warranty, whichever is greater.

2. EXCLUSIVE REMEDY: ACCEPTANCE: Purchaser's exclusive remedy and Manufacturer's sole obligation is to supply (or pay for) all labor necessary to repair any Product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts.

3. EXCEPTIONS TO LIMITED WARRANTY: Manufacturer shall have no liability or obligation to Purchaser with respect to any Product requiring service during the warranty period which is subjected to any of the following: abuse, improper use, negligence, accident, or acts of God (i.e., hurricanes, earthquakes), modification, failure of the end-user to follow the directions outlined in the product instructions, failure of the end-user to follow the maintenance procedures recommended by the International Security Industry Organization, written in product instructions, or recommended in the service manual for the Product. Furthermore, Manufacturer shall have no liability where a schedule is specified for regular replacement or maintenance or cleaning of certain parts (based on usage) and the end-user has failed to follow such schedule; attempted repair by non-qualified personnel; operation of the Product outside of the published environmental and electrical parameters, or if such Product's original identification (trademark, serial number) markings have been defaced, altered, or removed. Manufacturer excludes from warranty coverage Products sold AS IS and/or WITH ALL FAULTS and excludes used Products which have not been sold by Manufacturer to the Purchaser. All software and accompanying documentation furnished with, or as part of the Product is furnished "AS IS" (i.e., without any warranty of any kind), except where expressly provided otherwise in any documentation or license agreement furnished with the Product. ANY COST ASSOCIATED WITH REMOVAL OF DEFECTIVE PRODUCT AND INSTALLATION OF REPLACEMENT PRODUCT IS NOT INCLUDED IN THIS WARRANTY.

4. PROOF OF PURCHASE: The Purchaser's dated bill of sale must be retained as evidence of the date of purchase and to establish warranty eligibility.

DISCLAIMER OF WARRANTY

EXCEPT FOR THE FOREGOING WARRANTIES, MANUFACTURER HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY AND/OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY OTHER COMPARABLE STATE STATUTE. MANUFACTURER HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-MANUFACTURER PRODUCTS OR NON-MANUFACTURER RECOMMENDED PRODUCTS PURCHASER MAY CHOOSE TO CONNECT TO THE PRODUCT.

LIMITATION OF LIABILITY

THE LIABILITY OF Manufacturer, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL MANUFACTURER BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REPLACEMENT LABOR COSTS, REIMBURSEMENT, OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR FOR ANY OTHER REASON WHATSOEVER.



Electrical Specifications

SSH10C2Y



English

Input Power: 24VAC.
Power: 30W heater and blower.
Frequency: 50 to 60Hz.



Español

Potencia de entrada: 24 V CA.
Potencia: 30W calentador y un ventilador.
Frecuencia: 50 a 60Hz.



Français

Puissance d'entrée: 24VAC.
Puissance: 30W chauffe et le ventilateur.
Fréquence: 50 à 60Hz.



Deutsch

Eingangsleistung: 24 V AC.
Leistung: 30W Heizung und Gebläse.
Frequenz: 50 bis 60Hz.



Portuguese

 
Alimentação: 24VAC.
Potência: 30W aquecedor e ventilador.
Frequência: 50 a 60Hz.



Italiano

Alimentazione: 24VAC.
Potenza: 30W riscaldatore e ventola.
Frequenza: 50 a 60Hz.


1

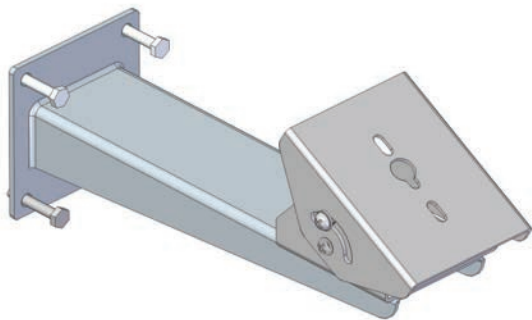

Mount wall mount in desired location. (mounting hardware not included)

- Montaje de pared en el lugar deseado.
(accesorios de montaje no incluido)
- Mont mural à l'endroit désiré. (matériel de montage non inclus)
- Berg Wandhalterung an der gewünschten Stelle.
(Montagematerial nicht im Lieferumfang enthalten)
- Monte de parede no local desejado.
(hardware de montagem não incluídos)
- Montaggio a parete nella posizione desiderata.
(hardware di montaggio non inclusa)

 
2

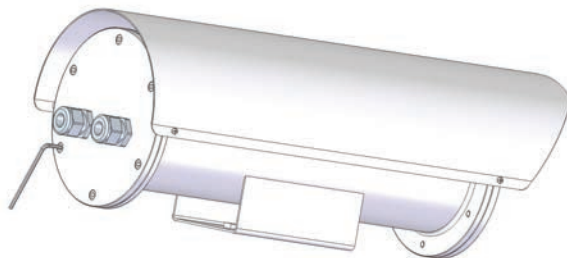

Remove end cap and slide out tray.

- Retire la tapa y bandeja deslizable.
- Enlever le capuchon d'extrémité et coulissant plateau.
- Entfernen Sie die Endkappe und ziehen Sie Fach.
- Remova a tampa da extremidade e slide out bandeja.
- Togliere il tappo fine e sfilare vassoio.

 
3

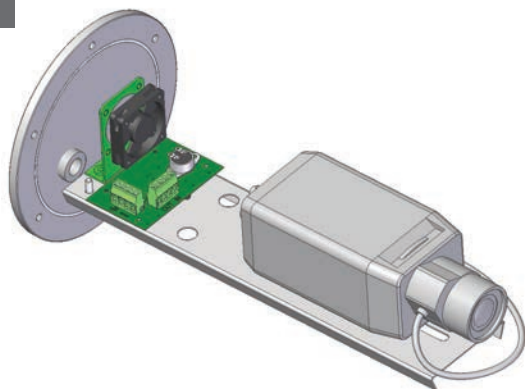

Install camera.

- Instale la cámara.
- Installez la caméra.
- Installieren Kamera.
- Instale câmera.
- Installazione della fotocamera.

 
4

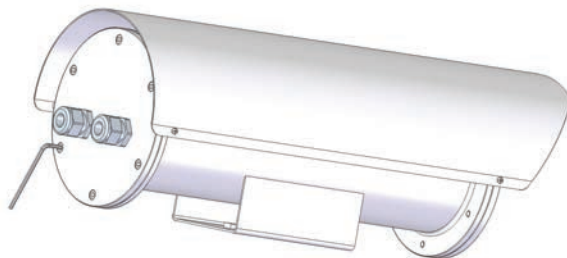

Reinstall camera sled and secure with at least 1 end cap screw.

- Vuelva a instalar el riel de cámara y asegurar al menos un tornillo de la tapa.
- Réinstaller le traîneau de caméra et le fixer avec au moins 1 vis bouchon.
- Installieren Sie Kameraschlitten und sichern mit mindestens 1 Endkappe Schraube.
- Reinstale o suporte para câmera e prenda com pelo menos 1 parafuso tampa.
- Reinstallare slitta telecamera e fissarla con almeno 1 vite tappo.

 
5

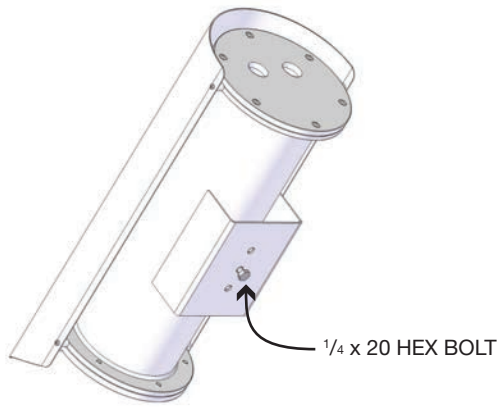

Attach (1) 1/4 x 20 hex bolt to bottom of housing.

- Conecte (1) perno de 1/4 x 20 hexadecimal a fondo de la caja.
- Fixez (1) boulon de 1/4 x 20 hexagonale pour le fond du boîtier.
- Bringen Sie (1) 4.1 x 20 Sechskant-Schraube an der Gehäuseunterseite.
- Anexar (1) parafuso 1/4 x 20 hex para baixo da habitação.
- Allega (1) bullone di 1/4 x 20 hex al fondo del contenitore.

 
6

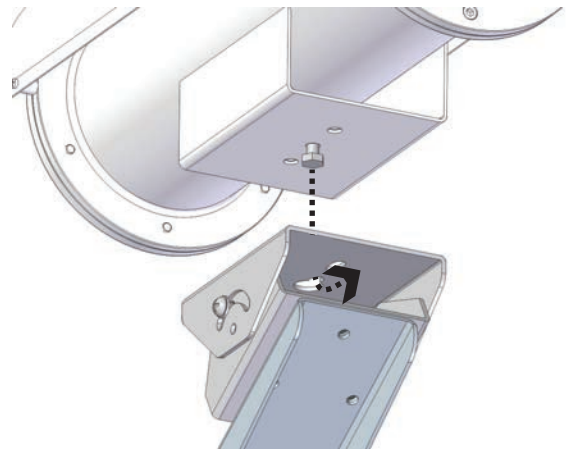

Slide hex head bolt into key slot - slide forward. To assist in holding the camera in position.

- Deslice el perno de cabeza hexagonal en ranura de la llave - se desliza hacia adelante. Para ayudar a sostener la cámara en su posición.
- Faites glisser boulon à tête hexagonale dans la fente clé - glissez vers l'avant. Pour aider à tenir la caméra en position.
- Schieben Sie Sechskantschraube in Keilnut - nach vorne schieben. Um in die Kamera halten in Position zu unterstützen.
- Deslize o parafuso de cabeça hexagonal no slot chave - slide para a frente. Para ajudar a segurar a câmera na posição.
- Far scorrere viti a testa esagonale nello slot key - slitta in avanti. Per aiutare a tenere la fotocamera in posizione.

 
7

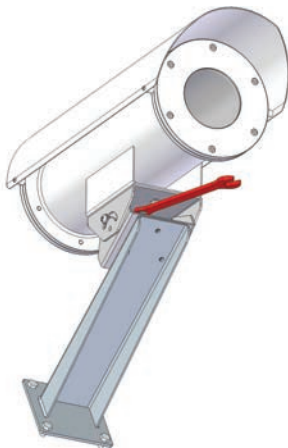

Secure hex head bolt.

- Asegure el perno de cabeza hexagonal.
- Fixez boulon à tête hexagonale.
- Sichern Sie Sechskantschraube.
- Fixe o parafuso de cabeça sextavada.
- Fissare viti a testa esagonale.

 
8

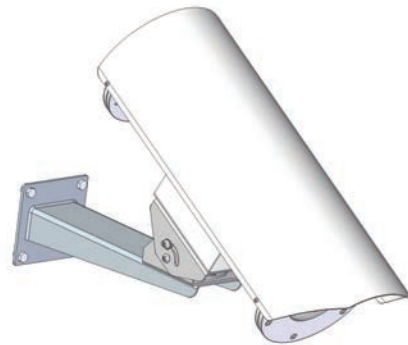

Tilt housing forward slightly.

- Incline la vivienda un poco hacia adelante.
- Inclinez légèrement vers l'avant du logement.
- Kippgehäuses leicht nach vorne.
- Incline levemente para a frente da habitação.
- Inclinare corpo leggermente in avanti.

 
9

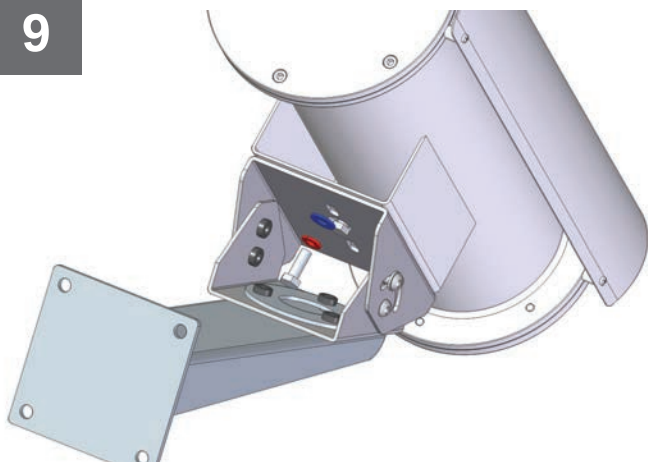

Add washer, lock washer and bolt to back hole, tilt up and repeat in front.

- Añadir lavar, arandela de seguridad y el perno de agujero negro, se inclinan hacia arriba y repita en el frente.
- Ajouter laver, rondelle frein et le boulon dans le trou arrière, inclinez et répéter devant.
- Fügen Sie waschen, Federring und Schraube wieder Loch, kippen nach oben und wiederholen Sie vor.
- Adicionar lavar, máquina de lavar e bloquear o parafuso a furo para trás, inclinar para cima e repita na frente.
- Aggiungi lavare, bloccare rondella e il bullone al foro indietro, inclinare verso l'alto e ripetere davanti.

 
10

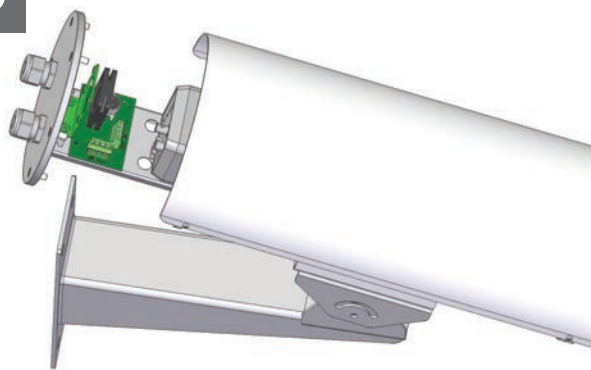

Slide out camera tray and complete wiring.

- Deslice la bandeja de la cámara y cableado completo.
- Faites glisser le bac photo et le câblage complet.
- Ziehen Sie Fach Kamera und komplette Verkabelung.
- Deslize a bandeja da câmera e fiação completa.
- Far scorrere il vassoio della fotocamera e il cablaggio completo.

 
11

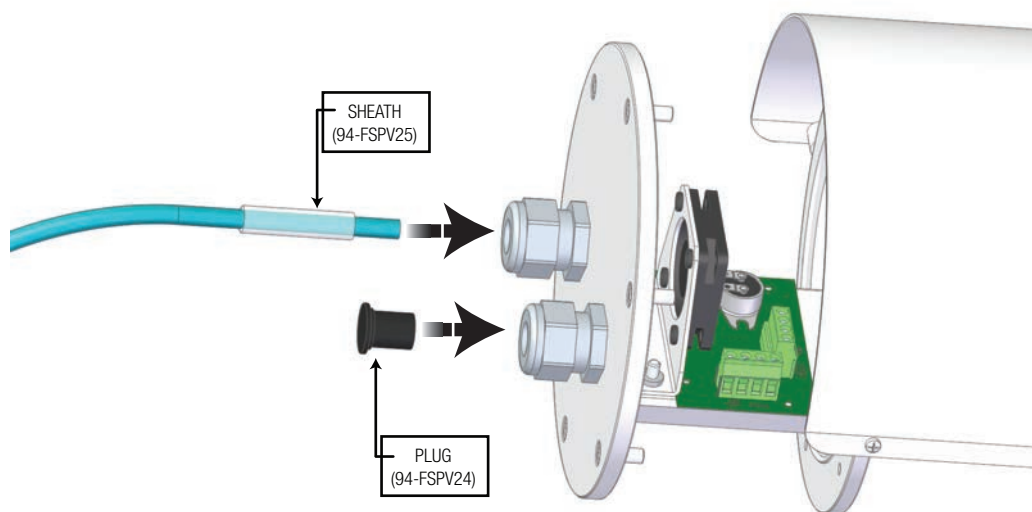

Use the supplied sheathing on small cables or the supplied plug if only (1) cable is needed.

- Utilice el. Suministra revestimientos de los cables pequeños para el enchufe de si sólo (1) se necesita un cable.
- Utilisez le. Fourni gainage des câbles pour les petits de la fiche fournie si ce n'est que (1) câble est nécessaire.
- Verwenden Sie das mitgelieferte Ummantelung auf kleine Kabel für den mitgelieferten Stecker nur, wenn (1) Kabel benötigt wird.
- Use o. Fornecido revestimento em cabos de pequeno porte para a ficha fornecida apenas se (1) cabo é necessário.
- Utilizzare il cavo guaina sui cavi di piccole dimensioni per la spina in dotazione se solo (1) cavo è necessario.

 
12

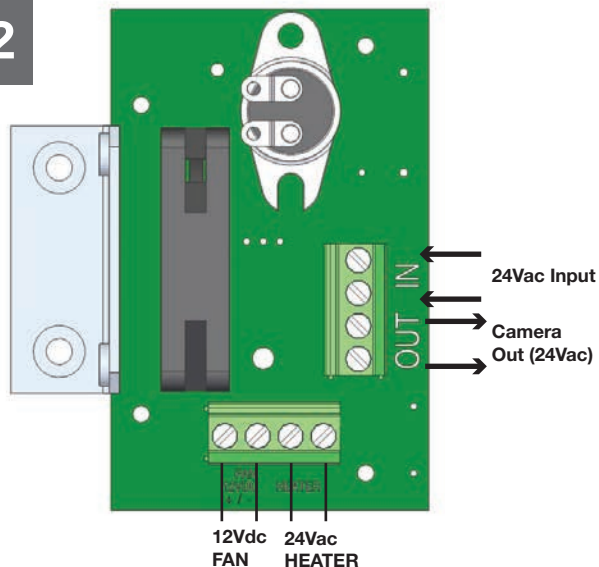

Wiring connections. (SSH10C2Y)

- Las conexiones del cableado. (SSH10C2Y)
- Les connexions de câblage. (SSH10C2Y)
- Kabelverbindungen. (SSH10C2Y)
- As conexões da fiação. (SSH10C2Y)
- Collegamenti del cablaggio. (SSH10C2Y)

 13

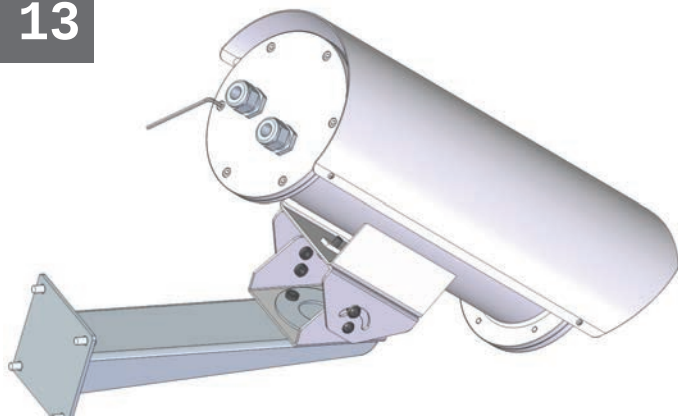

Secure back and position housing as required. Then tighten all fasteners.

- Asegure carcasa trasera y la posición según sea necesario. A continuación, apretar todos los tornillos.
- Fixez le dos du boîtier et la position au besoin. Ensuite, serrer toutes les fixations.
- Sichern Sie sich zurück und Position Gehäuse nach Bedarf. Dann ziehen Sie alle Schrauben.
- Seguro habitacional de volta e posição conforme necessário. Em seguida, aperte todos os parafusos.
- Fissare retro del contenitore e la posizione come richiesto. Quindi stringere tutte le viti.