

For the complete PDF manual
please visit www.LaserPros.com.



Service Manual

Lexmark C91x
5055-xxx

- ***Table of Contents***
- ***Start Diagnostics***
- ***Safety and Notices***
- ***Trademarks***
- ***Index***

LEXMARK™

*Lexmark and Lexmark with diamond
design are trademarks of Lexmark
International, Inc., registered in the
United States and/or other countries.*

Edition: October 2004

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or electronically mailed (e-mail) to ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

ImageQuick, Optra Forms, and PrintCryption are trademarks of Lexmark International, Inc.

PCL® is a registered trademark of the Hewlett-Packard Company.

PostScript® is a registered trademark of Adobe Systems Incorporated.

Other trademarks are the property of their respective owners.

© 2003, 2004 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Contents

Safety information	xi
Preface	xvi
Definitions	1-xvi
General information	1-1
Overview	1-1
Resolution	1-1
Model differences	1-1
Technical specifications	1-2
Toner darkness	1-2
Color correction settings	1-2
Physical specifications and weight	1-3
Print speed and performance	1-4
Performance	1-5
Time to first print	1-5
Processor	1-5
Duty cycle	1-5
Printer memory	1-6
Resident fonts	1-7
Paper and media specifications	1-8
Input and output configurations	1-8
Media size supported	1-10
Input media types and weights	1-15
Output media types and weights	1-16
Input capacity by media and source	1-18
Output capacity by media and source	1-19
Media guidelines	1-20
Print area	1-21
Options and features	1-22
Connectivity	1-23
Standard	1-23
Optional internal local connections	1-23
Network connections	1-24
Data streams	1-25
Operating systems	1-25

Power and electrical specifications	1-26
Power requirements	1-26
Electrical specifications	1-26
Operating clearances	1-27
Environment	1-27
Printer temperature and humidity	1-27
Maintenance approach	1-29
Standard inspection and cleaning procedure	1-29
Return parts	1-30
Service recommendations	1-30
Tools	1-31
Serial number, configuration ID, and part number	1-32
Abbreviations	1-33
Diagnostic information	2-1
Adjustments and procedures following parts replacement. . .	2-1
Start	2-3
Initial check	2-3
Printer messages	2-4
Service error message tables	2-4
Attendance messages	2-34
Maintenance analysis procedures (MAPS)	2-54
Symptom table	2-63
Service checks	2-68
Drive 1 DC motor service check	2-68
Drive 2 stepper motor service check	2-68
Duplex unit service check	2-69
Expansion paper feed service check	2-69
Face down stacker full service check	2-70
High-capacity feeder (HCF) service check	2-70
Finisher service check	2-71
Marks on paper service check	2-72
Operator panel service check	2-73
Paper carrying service check	2-74
Paper exit, face up service check	2-82
Paper skew service check	2-83
Paper tray missing service check	2-83
Photodeveloper missing service check	2-84
Power supply service check	2-85
210 Staple jam service check	2-86
Transfer belt up/down service check	2-87

Image quality troubleshooting	2-88
Print quality problems	2-88
Options service check	2-98
Diagnostic aids	3-1
Power-On Self Test sequence	3-1
Using the operator panel	3-2
Operator panel buttons	3-3
Printing the menu settings	3-4
Operator menu disabled	3-4
Menu overview	3-4
Diagnostic Mode	3-6
Adjustment example	3-8
Print tests	3-10
Hardware tests	3-12
High-capacity feeder tests	3-18
Finisher tests	3-20
Device tests	3-23
Diagnostics - printer setup	3-26
Defaults	3-26
Viewing and resetting the drum counters	3-28
Diagnostics - error log	3-31
Theory of operation	3-33
Processes and configuration	3-33
Electrophotography process	3-33
Development unit	3-34
Transfer unit	3-34
Cleaning unit	3-35
Paper feeding / fusing	3-35
Drive system	3-36
Paper feeding	3-37
Cassette paper feeder	3-37
Multipurpose feeding	3-38
Registration unit	3-38
Separation unit	3-39
Fuser unit	3-40
Delivery	3-41
Belt unit	3-42
Belt up/down	3-43
Expansion paper feeder	3-43

Duplex unit	3-44
Paper weight	3-45
Clearing paper jams	3-46
High-capacity feeder (HCF)	3-52
Maintenance Mode.	3-60
Finisher.	3-61
Finisher installation	3-73
Attaching the docking plate and guide rail	3-73
Combining the finisher and stand.	3-75
Attaching the bins.	3-79
Aligning the finisher and printer	3-80
Adjusting the wheels	3-88
Attaching the cables.	3-90
Hole punch adjustment.	3-94
Repair information	4-1
Service precautions	4-1
Handling printed circuit boards.	4-1
Adjustments	4-3
High-capacity paper feed timing belt adjustment	4-3
Removals	4-4
Cover, top removal.	4-4
Cover, front removal.	4-5
Cover, front left removal.	4-5
Cover, rear removal	4-6
Cover, solenoid removal.	4-6
Cover, left side removal	4-7
Cover, right side removal	4-8
Cover, RIP board removal	4-9
Tray, paper exit removal.	4-10
Belt up/down clutch removal	4-10
Belt up/down detection sensor removal	4-11
Cassette guide removal	4-12
Connector, duplex unit removal	4-13
Separation fingers removal	4-14
Sensor cleaner removal	4-14
Drive gear unit sensor assembly removal	4-15
Drive motor assembly removal.	4-16
Electronic box removal.	4-17
Fanning pad removal	4-19

Front cover open switch actuator removal	4-20
Fuser removal	4-21
High voltage power supply board (HVU) removal	4-23
LED printhead removal	4-24
Eraser removal	4-27
Lock handle assembly removal	4-28
Main drive unit removal	4-29
Main unit fan removal	4-32
Motor drive board removal	4-33
Multipurpose feeder paper present sensor removal	4-33
Multipurpose feeder tray removal	4-34
Operator panel removal	4-34
Paper carrying frame removal	4-35
Paper carrying roller removal	4-36
Paper feed frame removal	4-37
Paper feed roller removal	4-38
Paper present sensor removal	4-38
Paper remaining sensor removal	4-39
Paper size sensor board assembly removal	4-39
Power supply 1 removal	4-40
Power supply 2 removal	4-41
Power switch removal	4-42
Printer controller removal	4-43
Printhead controller board removal	4-44
Registration sensor removal	4-48
Right slide rail removal	4-49
RIP box removal	4-49
Sensor board removal	4-50
Stay arm removal	4-51
Sub-frame removal	4-52
Sub frame F1, sub frame F2 removal	4-53
Top unit removal	4-55
Transfer belt removal	4-56
Turn guide cover sensor removal	4-65
Upper fan removal	4-66
Options removals	4-67
Expansion paper feeder removal	4-67

Duplex removals	4-75
Duplex unit separation removal	4-75
Duplex unit removal	4-76
Duplex timing belt removal	4-76
Duplex pressure roller and solenoid removal	4-77
Duplex feed roller and solenoid removal	4-78
Duplex side fence motor assembly/side fence removal	4-79
Duplex paper carrying motor removal	4-80
High-capacity feeder (HCF) removals	4-81
HCF covers removal	4-81
HCF call roller, paper feed roller, reverse roller removal	4-82
HCF pickup solenoid removal	4-83
HCF tray motor removal	4-86
HCF paper level sensor removal	4-87
HCF power supply removal	4-88
Finisher removals	4-89
External covers removals	4-89
Finisher control board removal	4-90
Elevator motor removal	4-91
Feed motor assembly removal	4-91
Hole punch removal	4-92
Inverter paper exit discharge brush removal	4-93
Inverter paper exit roller removal	4-93
Jogging unit removal	4-95
Path select gate removal	4-96
Patting roller removal	4-97
Power supply removal	4-99
Registration roller removal	4-100
Registration roller clutch removal	4-101
Stack area discharge brush removal	4-102
Staple unit removal	4-102
Straight paper exit discharge brush removal	4-103
Straight paper exit roller removal	4-103
Timing belts 1 and 2 removal	4-105
Tractor belt removal	4-106
Tractor drive motor assembly removal	4-108

Locations	5-1
Covers diagram	5-1
Major parts diagram	5-2
Sensor and switch locations	5-4
Component locations	5-6
Printer controller board	5-8
Printer controller board connectors	5-9
Printhead controller board	5-12
RIP board	5-13
Power source unit 1 board	5-14
Power source unit 2 board	5-14
High voltage power supply board	5-15
Sensor board	5-15
Expansion paper feeder controller board	5-16
Duplex unit controller board	5-16
Motor drive board	5-16
Size sensor board	5-17
High-capacity feeder (HCF)	5-18
High-capacity paper feed configuration	5-18
Electrical parts layout	5-19
Driving parts layout	5-20
Finisher locations	5-21
Preventive maintenance	6-1
Maintenance kit	6-1
Periodic maintenance	6-2
Lubricants and cleaners	6-2
Parts catalog	7-1
How to use this parts catalog	7-1
Assembly 1: Covers 1	7-2
Assembly 2: Covers 2	7-4
Assembly 3: Covers 3	7-6
Assembly 4: Covers 4	7-8
Assembly 5: Covers 5	7-10
Assembly 6: Upper unit	7-12
Assembly 7: Base 1	7-16
Assembly 8: Base 2	7-18
Assembly 9: Base 3	7-20

Assembly 10: Electrical	7-22
Assembly 11: Rip board	7-26
Assembly 12: Fuser unit	7-28
Assembly 13: Cassette	7-30
Assembly 14: Expansion feeder 1	7-32
Assembly 15: Expansion feeder 2	7-34
Assembly 16: Duplex unit 1	7-38
Assembly 17: Duplex unit 2	7-40
Assembly 18: High-capacity feeder 1	7-42
Assembly 19: High-capacity feeder 2	7-44
Assembly 20: High-capacity feeder 3	7-46
Assembly 21: High-capacity feeder 4	7-48
Assembly 22: High-capacity feeder 5	7-50
Assembly 23: High-capacity feeder 6	7-52
Assembly 24: Finisher covers	7-54
Assembly 25: Finisher frame	7-56
Assembly 26: Finisher feed 1	7-58
Assembly 27: Finisher feed 2	7-62
Assembly 28: Finisher elevator	7-64
Assembly 29: Finisher electronics	7-66
Assembly 30: Finisher docking 1	7-68
Assembly 31: Finisher docking 2	7-70
Assembly 32: Miscellaneous/options	7-72
Assembly 33: Finisher parts packet P/N 56P9480	7-81
Index	I-1
Part number index	I-9

For the complete PDF manual
please visit www.LaserPros.com.