

**Welcome**  
**2005 KJ Jeep® Liberty**  
**Technical Publications**

**Click on the icon for the desired manual**



# SERVICE MANUAL

## 2005 LIBERTY

To order the special service tools used and illustrated, please refer to the instructions on inside back cover.

NO PART OF THIS PUBLICATION MAY BE REPRODUCED, STORED IN A RETRIEVAL SYSTEM, OR TRANSMITTED, IN ANY FORM OR BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING, OR OTHERWISE, WITHOUT THE PRIOR WRITTEN PERMISSION OF DAIMLERCHRYSLER CORPORATION.

DaimlerChrysler Corporation reserves the right to make changes in design or to make additions to or improvements in its products without imposing any obligations upon itself to install them on its products previously manufactured.

Litho in U.S.A. Copyright © 2004 DaimlerChrysler Corporation

**81-370-05060**

# FOREWORD

The information contained in this service manual has been prepared for the professional automotive technician involved in daily repair operations. Information describing the operation and use of standard and optional equipment is included in the Owner's Manual provided with the vehicle.

Information in this manual is divided into groups. These groups contain description, operation, diagnosis, testing, adjustments, removal, installation, disassembly, and assembly procedures for the systems and components. To assist in locating a group title page, use the Group Tab Locator by clicking to the following page. The solid bar after the group title is aligned to a solid tab on the first page of each group. The first page of the group has a contents section that lists major topics within the group. If you are not sure which Group contains the information you need, look up the Component/System in the alphabetical index located in the rear of this manual.

A Service Manual Comment form is included at the rear of this manual. Use the form to provide DaimlerChrysler Corporation with your comments and suggestions.

Tightening torques are provided as a specific value throughout this manual. This value represents the midpoint of the acceptable engineering torque range for a given fastener application. These torque values are intended for use in service assembly and installation procedures using the correct OEM fasteners. When replacing fasteners, always use the same type (part number) fastener as removed.

DaimlerChrysler Corporation reserves the right to change testing procedures, specifications, diagnosis, repair methods, or vehicle wiring at any time without prior notice or incurring obligation.

# TABLE OF CONTENTS

<b>1.0</b>	<b>INTRODUCTION</b>	<b>1</b>
1.1	SYSTEM COVERAGE	1
1.2	SIX STEP TROUBLESHOOTING PROCEDURE	1
<b>2.0</b>	<b>IDENTIFICATION OF SYSTEM</b>	<b>1</b>
<b>3.0</b>	<b>SYSTEM DESCRIPTION AND FUNCTIONAL OPERATION</b>	<b>1</b>
3.1	AIRBAG SYSTEM/OCCUPANT RESTRAINT CONTROLLER SYSTEM	1
3.1.1	DRIVER AIRBAG	2
3.1.2	CLOCKSPRING	4
3.1.3	PASSENGER AIRBAG	4
3.1.4	SEAT BELT TENSIONER (SBT)	5
3.1.5	SEAT BELT SWITCH (SBS)	5
3.1.6	CURTAIN AIRBAGS	5
3.1.7	FRONT AND SIDE IMPACT SENSOR	6
3.1.8	OCCUPANT CLASSIFICATION SYSTEM	6
3.1.9	SPECIAL TOOLS	9
3.1.10	DIAGNOSTIC TROUBLE CODES	10
3.1.10.1	ACTIVE CODES	10
3.1.10.2	STORED CODES	10
3.2	AUDIO SYSTEM	10
3.2.1	REMOTE RADIO CONTROLS	11
3.3	BODY CONTROL MODULE	11
3.3.1	DOOR AJAR SYSTEM	11
3.3.2	EXTERIOR LIGHTING	12
3.3.3	INTERIOR LIGHTING	12
3.3.4	POWER DOOR LOCKS	12
3.3.4.1	REMOTE KEYLESS ENTRY (RKE)	13
3.3.4.1.1	PANIC FUNCTION	13
3.3.4.1.2	ROLLING CODE	14
3.3.4.1.3	PROGRAMMABLE DOOR LOCK FEATURES	14
3.3.5	REAR WINDOW DEFOGGER	14
3.3.5.1	VEHICLE THEFT SECURITY SYSTEM (VTSS)	14
3.3.5.2	VEHICLE THEFT SECURITY SYSTEM (VTSS) (EXPORT ONLY)	14
3.3.6	WINDSHIELD WIPER SYSTEM (FRONT)	15
3.3.7	THE BCM IS ALSO INVOLVED IN THE FOLLOWING FUNCTIONS:	15
3.3.7.1	VEHICLE SPEED SENSING	15
3.3.7.2	DETECTION / ANALYSIS OF MISCELLANEOUS BODY SWITCHES	15
3.3.7.3	DRIVER INFORMATION WARNINGS (CHIME)	15
3.4	OVERHEAD CONSOLE	16
3.3.4.1	ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)	16
3.5	COMMUNICATION	19
3.6	INSTRUMENT CLUSTER	20
3.6.1	DIAGNOSTIC SELF TEST	21
3.7	TELECOMMUNICATIONS	21
3.7.1	HANDS FREE PHONE	21
3.8	TIRE PRESSURE MONITORING SYSTEM (TPMS)	21
3.8.1	TRAINING THE SKREEM	21
3.8.2	PRESSURE THRESHOLDS	22

## TABLE OF CONTENTS - Continued

<b>3.8.3</b>	ACTIVE FAULT AND SYSTEM ALERTS .....	.22
<b>3.9</b>	USING THE DRBIII® .....	.22
<b>3.10</b>	DRBIII® ERROR MESSAGES AND BLANK SCREEN .....	.22
<b>3.10.1</b>	DRBIII® DOES NOT POWER UP .....	.22
<b>3.10.2</b>	DISPLAY IS NOT VISIBLE .....	.22
<b>4.0</b>	<b>DISCLAIMERS, SAFETY, WARNINGS .....</b>	<b>.23</b>
<b>4.1</b>	DISCLAIMERS .....	.23
<b>4.2</b>	SAFETY .....	.23
<b>4.2.1</b>	TECHNICIAN SAFETY INFORMATION .....	.23
<b>4.2.2</b>	VEHICLE PREPARATION FOR TESTING .....	.23
<b>4.2.3</b>	SERVICING SUB-ASSEMBLIES .....	.23
<b>4.2.4</b>	DRBIII® SAFETY INFORMATION .....	.23
<b>4.3</b>	WARNINGS .....	.24
<b>4.3.1</b>	VEHICLE DAMAGE WARNINGS .....	.24
<b>4.3.2</b>	ROAD TESTING A COMPLAINT VEHICLE .....	.24
<b>5.0</b>	<b>REQUIRED TOOLS AND EQUIPMENT .....</b>	<b>.24</b>
<b>6.0</b>	<b>GLOSSARY OF TERMS .....</b>	<b>.24</b>
<b>7.0</b>	<b>DIAGNOSTIC INFORMATION AND PROCEDURES .....</b>	<b>.27</b>
	<b>AIRBAG</b>	
	ACCELEROMETER 1 .....	.28
	ACCELEROMETER 2 .....	.28
	DEPLOYMENT DATA RECORD FULL .....	.28
	INTERNAL 2 .....	.28
	MODULE NOT CONFIGURED FOR OCS .....	.28
	OUTPUT DRIVER 1 .....	.28
	STORED ENERGY FIRING 1 .....	.28
	AIRBAG WARNING INDICATOR OPEN .....	.30
	AIRBAG WARNING INDICATOR SHORT .....	.30
	CLUSTER MESSAGE MISMATCH .....	.33
	DRIVER SEAT BELT SWITCH CIRCUIT OPEN .....	.35
	DRIVER SEAT BELT SWITCH SHORT TO BATTERY .....	.35
	DRIVER SEAT BELT SWITCH CIRCUITS SHORT TOGETHER .....	.38
	DRIVER SEAT BELT SWITCH SHORT TO GROUND .....	.38
	DRIVER SEAT BELT TENSIONER CIRCUIT OPEN .....	.41
	DRIVER SEAT BELT TENSIONER CIRCUIT SHORT .....	.44
	DRIVER SEAT BELT TENSIONER SHORT TO BATTERY .....	.47
	DRIVER SEAT BELT TENSIONER SHORT TO GROUND .....	.50
	DRIVER SQUIB 1 CIRCUIT OPEN .....	.53
	DRIVER SQUIB 1 CIRCUIT SHORT .....	.56
	DRIVER SQUIB 1 SHORT TO BATTERY .....	.59
	DRIVER SQUIB 1 SHORT TO GROUND .....	.62
	DRIVER SQUIB 2 CIRCUIT OPEN .....	.65
	DRIVER SQUIB 2 CIRCUIT SHORT .....	.68
	DRIVER SQUIB 2 SHORT TO BATTERY .....	.71
	DRIVER SQUIB 2 SHORT TO GROUND .....	.74
	INTERNAL 1 .....	.77
	INTERROGATE OCM .....	.79
	LEFT CURTAIN SQUIB 1 CIRCUIT OPEN .....	.81

## TABLE OF CONTENTS - Continued

LEFT CURTAIN SQUIB 1 CIRCUIT SHORT .....	84
LEFT CURTAIN SQUIB 1 SHORT TO BATTERY .....	87
LEFT CURTAIN SQUIB 1 SHORT TO GROUND .....	90
LEFT FRONT IMPACT SENSOR INTERNAL 1 .....	93
LEFT SIDE IMPACT SENSOR 1 INTERNAL 1 .....	95
LOSS OF IGNITION RUN - START .....	97
LOSS OF IGNITION RUN ONLY .....	103
NO CLUSTER MESSAGE .....	107
NO LEFT FRONT IMPACT SENSOR COMMUNICATION .....	109
NO LEFT SIDE IMPACT SENSOR 1 COMMUNICATION .....	113
NO OCM MESSAGE .....	117
NO ORC MESSAGE .....	119
NO PCI LOOPBACK .....	122
NO PCI TRANSMISSION .....	122
PCI BUS SHORT TO BATTERY .....	122
PCI BUS SHORT TO GROUND .....	122
NO RIGHT FRONT IMPACT SENSOR COMMUNICATION .....	128
NO RIGHT SIDE IMPACT SENSOR 1 COMMUNICATION .....	132
OCCUPANT CLASSIFICATION MODULE DATA TRANSFER ERROR .....	136
OCCUPANT CLASSIFICATION UNDETERMINED .....	138
RE-ZERO INCOMPLETE .....	138
SEAT NOT CALIBRATED .....	138
SYSTEM VERIFICATION REQUIRED - OCSVR .....	138
OCM CONFIGURATION MISMATCH .....	143
PASSENGER AIRBAG OFF INDICATOR CIRCUIT SHORT TO BATTERY .....	146
PASSENGER AIRBAG OFF INDICATOR CIRCUIT SHORT TO GROUND .....	149
PASSENGER BTS OPEN .....	154
PASSENGER BTS SHORT TO BATTERY .....	154
PASSENGER BTS SHORT TO GROUND .....	154
PASSENGER BTS SHORT TOGETHER .....	154
PASSENGER PRESSURE SENSOR OPEN .....	158
PASSENGER PRESSURE SENSOR SHORT GROUND .....	158
PASSENGER PRESSURE SENSOR SHORT TO BATTERY .....	158
PASSENGER PRESSURE SENSOR SHORT TOGETHER .....	158
PASSENGER SEAT BELT TENSIONER CIRCUIT OPEN .....	161
PASSENGER SEAT BELT TENSIONER CIRCUIT SHORT .....	164
PASSENGER SEAT BELT TENSIONER SHORT TO BATTERY .....	167
PASSENGER SEAT BELT TENSIONER SHORT TO GROUND .....	170
PASSENGER SEAT SENSOR FLUID LEVEL TOO LOW .....	173
PASSENGER SQUIB 1 CIRCUIT OPEN .....	174
PASSENGER SQUIB 1 CIRCUIT SHORT .....	177
PASSENGER SQUIB 1 SHORT TO BATTERY .....	180
PASSENGER SQUIB 1 SHORT TO GROUND .....	183
PASSENGER SQUIB 2 CIRCUIT OPEN .....	186
PASSENGER SQUIB 2 CIRCUIT SHORT .....	189
PASSENGER SQUIB 2 SHORT TO BATTERY .....	192
PASSENGER SQUIB 2 SHORT TO GROUND .....	195
RIGHT CURTAIN SQUIB 1 CIRCUIT OPEN .....	198
RIGHT CURTAIN SQUIB 1 CIRCUIT SHORT .....	201
RIGHT CURTAIN SQUIB 1 SHORT TO BATTERY .....	204
RIGHT CURTAIN SQUIB 1 SHORT TO GROUND .....	207
RIGHT FRONT IMPACT SENSOR INTERNAL 1 .....	210
RIGHT SIDE IMPACT SENSOR 1 INTERNAL 1 .....	212

## TABLE OF CONTENTS - Continued

SQUIB CONFIGURATION .....	214
VEHICLE BODY STYLE MISMATCH.....	216
VIN MISMATCH.....	221
*AIRBAG INDICATOR ON WITHOUT ACTIVE TROUBLE CODES.....	225
<b>AUDIO</b>	
ALL OUTPUTS SHORT - BASE AUDIO SYSTEM .....	226
ALL OUTPUTS SHORT - PREMIUM AUDIO SYSTEM .....	230
CASSETTE PLAYER INOP .....	232
CD MECHANICAL FAILURE .....	232
NO PCI TRANSMISSION .....	232
*AM/FM SWITCH INOPERATIVE.....	232
*ANY STATION PRESET SWITCH INOPERATIVE.....	232
*BALANCE INOPERATIVE.....	232
*CD EJECT SWITCH INOPERATIVE.....	232
*EQUALIZER INOPERATIVE .....	232
*FADER INOPERATIVE .....	232
*FF/RW SWITCH INOPERATIVE .....	232
*HOUR/MINUTE SWITCHES INOPERATIVE .....	232
*PAUSE/PLAY SWITCH INOPERATIVE .....	232
*PWR SWITCH INOPERATIVE .....	232
*SCAN SWITCH INOPERATIVE .....	232
*SEEK SWITCH INOPERATIVE.....	232
*SET SWITCH INOPERATIVE .....	232
*TAPE EJECT SWITCH INOPERATIVE.....	232
*TIME SWITCH INOPERATIVE .....	232
*TUNE SWITCH INOPERATIVE.....	232
CD CHANGER MECHANICAL FAILURE.....	234
CD CHANGER READ FAILURE.....	235
CD CHANGER TEMPERATURE HIGH .....	236
CD PLAY FAILURE .....	237
CD READ FAILURE .....	238
CD TEMPERATURE HIGH.....	239
LOW VOLTAGE LEVEL .....	240
NO ANTENNA CONNECTION .....	241
POWER AMP SHUTDOWN - BASE AUDIO SYSTEM .....	242
POWER AMP SHUTDOWN - PREMIUM AUDIO SYSTEM .....	246
*POOR SOUND QUALITY .....	248
*REMOTE RADIO SWITCHES INOPERATIVE (IF EQUIPPED) .....	249
<b>CHIME</b>	
*CHIME INOPERATIVE.....	253
*CHIME SOUNDS WITH DRIVER DOOR OPEN KEY REMOVED .....	254
*KEY IN IGNITION AND DRIVER'S DOOR OPEN CHIME INOPERATIVE.....	255
*VEHICLE SPEED WARNING CHIME PROBLEM .....	257
<b>COMMUNICATION</b>	
BATTERY IOD DISCONNECT AT BCM.....	258
EEPROM CHECKSUM FAILURE.....	260
FLASH CHECKSUM FAILURE.....	261
ITM MESSAGES NOT RECEIVED .....	262
PCM MESSAGE NOT RECEIVED.....	263
*NO RESPONSE FROM AIRBAG CONTROL MODULE .....	265

## TABLE OF CONTENTS - Continued

*NO RESPONSE FROM ANTILOCK BRAKE MODULE.....	267
*NO RESPONSE FROM BODY CONTROL MODULE.....	269
*NO RESPONSE FROM COMPASS MINI-TRIP COMPUTER.....	271
*NO RESPONSE FROM HANDS FREE MODULE.....	273
*NO RESPONSE FROM INSTRUMENT CLUSTER.....	275
*NO RESPONSE FROM INTRUSION TRANSCIEVER MODULE.....	277
*NO RESPONSE FROM OCCUPANT CLASSIFICATION MODULE.....	279
*NO RESPONSE FROM PCM (PCI BUS) - NGC.....	281
*NO RESPONSE FROM PCM (PCM SCI ONLY) - NGC.....	282
*NO RESPONSE FROM RADIO.....	285
*NO RESPONSE FROM SATELLITE RADIO RECEIVER.....	287
*NO RESPONSE FROM SENTRY KEY IMMOBILIZER MODULE.....	289
*NO RESPONSE FROM TRANSMISSION CONTROL MODULE - DIESEL ONLY.....	291
*NO RESPONSE FROM TRANSMISSION CONTROL MODULE - NGC.....	294
*PCI BUS COMMUNICATION FAILURE.....	297

### **DOOR AJAR**

*FLIP-UP GLASS AJAR CIRCUIT OPEN.....	299
*FLIP-UP GLASS AJAR CIRCUIT SHORTED TO GROUND.....	300
*HOOD AJAR CIRCUIT OPEN.....	301
*HOOD AJAR CIRCUIT SHORTED TO GROUND- EXPORT ONLY.....	302
*LEFT FRONT DOOR AJAR CIRCUIT OPEN.....	303
*LEFT FRONT DOOR AJAR CIRCUIT SHORTED TO GROUND.....	304
*LEFT REAR DOOR AJAR CIRCUIT OPEN.....	305
*LEFT REAR DOOR AJAR CIRCUIT SHORTED TO GROUND.....	306
*RIGHT FRONT DOOR AJAR CIRCUIT OPEN.....	307
*RIGHT FRONT DOOR AJAR CIRCUIT SHORTED TO GROUND.....	308
*RIGHT REAR DOOR AJAR CIRCUIT OPEN.....	309
*RIGHT REAR DOOR AJAR CIRCUIT SHORTED TO GROUND.....	310
*TAILGATE AJAR CIRCUIT OPEN.....	311
*TAILGATE AJAR CIRCUIT SHORTED TO GROUND.....	312

### **ELECTRICALLY HEATED SYSTEMS**

REAR DEFOGGER RELAY CONTROL CIRCUIT OPEN/SHORT TO GROUND....	313
REAR DEFOGGER RELAY CONTROL CIRCUIT SHORT TO VOLTAGE.....	315
*REAR WINDOW DEFOGGER INOPERATIVE.....	317

### **EXTERIOR LIGHTING**

FRONT FOG RELAY CIRCUIT HIGH.....	320
FRONT FOG RELAY CIRCUIT LOW.....	322
HEADLAMP SWITCH INPUT CIRCUIT HIGH.....	323
HEADLAMP SWITCH INPUT CIRCUIT LOW.....	325
HIGH BEAM RELAY CIRCUIT HIGH.....	327
LOW BEAM RELAY CIRCUIT HIGH.....	329
LOW BEAM RELAY CIRCUIT LOW.....	331
PARK LAMP RELAY CIRCUIT HIGH.....	332
PARK LAMP RELAY CIRCUIT LOW.....	334
REAR FOG RELAY CIRCUIT HIGH.....	335
REAR FOG RELAY CIRCUIT LOW.....	337
*LOW BEAM HEADLAMPS INOPERATIVE.....	338

### **INSTRUMENT CLUSTER**

ABS LAMP CIRCUIT SHORT.....	340
-----------------------------	-----



## TABLE OF CONTENTS - Continued

ABS LAMP OPEN .....	340
AIRBAG LAMP CIRCUIT SHORT .....	340
AIRBAG LAMP OPEN .....	340
BRAKE LAMP CIRCUIT OPEN .....	340
BRAKE LAMP CIRCUIT SHORT .....	340
MIL LAMP CIRCUIT OPEN .....	340
MIL LAMP CIRCUIT SHORT .....	340
SEATBELT LAMP CIRCUIT OPEN .....	340
SEATBELT LAMP CIRCUIT SHORT .....	340
BRAKE FLUID SWITCH CIRCUIT OPEN .....	342
CLUSTER BUS TRANSMIT SHUTDOWN .....	344
CLUSTER WAKE UP OUTPUT HIGH .....	345
CLUSTER WAKE UP OUTPUT LOW .....	347
INTERNAL MODULE FAILURE .....	349
NO ABS BUS MESSAGES RECEIVED .....	350
NO BCM BUS MESSAGES RECEIVED .....	351
NO EVIC/TPM BUS MESSAGES RECEIVED .....	352
NO ORC BUS MESSAGES RECEIVED .....	353
NO PCI BUS MESSAGES RECEIVED .....	354
NO PCM BUS MESSAGES RECEIVED .....	356
NO SKIM BUS MESSAGES RECEIVED .....	357
TIRE SIZE NOT PROGRAMMED .....	358
VEHICLE SPEED SENSOR FAILURE .....	359
*4WD INDICATOR INACCURATE .....	363
*4WD INDICATOR INACCURATE - DIESEL ONLY .....	364
*ALL GAUGES INOPERATIVE .....	365
*ANY PCI BUS INDICATOR INOPERATIVE .....	367
*BRAKE INDICATOR ALWAYS ON .....	368
*BRAKE INDICATOR INOPERATIVE .....	370
*FUEL GAUGE INACCURATE .....	371
*INSTRUMENT CLUSTER INOPERATIVE .....	373
*LOW COOLANT INDICATOR ALWAYS ON - DIESEL ONLY .....	374
*LOW COOLANT INDICATOR INOPERATIVE - DIESEL ONLY .....	375
*LOW WASH MESSAGE NOT OPERATING PROPERLY .....	376
*ONE GAUGE INOPERATIVE .....	378
*PANEL DIMMING INOPERATIVE .....	379
*SEAT BELT INDICATOR ALWAYS ON .....	382
*VTSS INDICATOR INOPERATIVE .....	383
<b>INTERIOR LIGHTING</b>	
DIMMING LEVEL SWITCH INPUT CIRCUIT HIGH .....	384
DIMMING LEVEL SWITCH INPUT CIRCUIT LOW .....	386
*COURTESY LAMPS INOPERATIVE-ALL LAMPS .....	388
*COURTESY LAMPS INOPERATIVE-OVERHEAD LAMPS .....	389
*COURTESY LAMPS STAY ON AT ALL TIMES .....	390
<b>OVERHEAD CONSOLE</b>	
BUS MESSAGES MISSING .....	392
COMPASS TEST FAILURE .....	393
EVIC INTERNAL FAILURE .....	393
NO BCM MESSAGES RECEIVED .....	394
NO PCM MESSAGES RECEIVED .....	395
*ANY SWITCH ON EVIC INOPERATIVE .....	396

## TABLE OF CONTENTS - Continued

*AVERAGE MILES/GAL INOPERATIVE OR WRONG .....	396
*BLANK SCREEN INOPERATIVE OR WRONG .....	396
*EVIC FAILS TO RESPOND TO INSTRUMENT PANEL DIMMING .....	396
*MILES TO EMPTY INOPERATIVE OR WRONG .....	396
*MILES TO SERVICE INOPERATIVE OR WRONG .....	396
*TIME ELAPSED INOPERATIVE OR WRONG .....	396
*TIRE PSI SCREEN INOPERATIVE OR WRONG .....	396
*TRIP MILES INOPERATIVE OR WRONG .....	396
*UNIVERSAL GARAGE DOOR OPENER (UGDO) INOPERATIVE .....	396
*EVIC INOPERATIVE .....	397
*TEMP DISPLAY INOPERATIVE OR WRONG .....	398

### **POWER DOOR LOCKS/RKE**

DOOR LOCK RELAY CONTROL CIRCUIT OPEN OR SHORT TO GROUND .....	399
DOOR LOCK RELAY CONTROL SHORT TO VOLTAGE .....	401
DOOR LOCK SWITCH OPEN OR SHORT TO VOLTAGE .....	403
DOOR LOCK SWITCH SHORT TO GROUND .....	407
DOOR UNLOCK RELAY CONTROL CIRCUIT OPEN OR SHORT TO GROUND ..	409
DOOR UNLOCK RELAY CONTROL SHORT TO VOLTAGE .....	411
DRIVER DOOR UNLOCK RELAY CONTROL CIRCUIT OPEN OR SHORT TO GROUND .....	413
DRIVER DOOR UNLOCK RELAY CONTROL CIRCUIT SHORT TO VOLTAGE .....	415
LEFT CYLINDER LOCK SWITCH SHORT TO GROUND .....	417
TAILGATE CYLINDER LOCK SWITCH SHORT TO GROUND .....	419
TAILGATE LOCK MOTOR SHORT TO VOLTAGE .....	421
*ALL DOORS FAIL TO LOCK .....	423
*ALL PASSENGER DOORS FAIL TO LOCK AND UNLOCK .....	424
*ALL PASSENGER DOORS FAIL TO UNLOCK .....	425
*AUTO DOOR LOCKS INOPERATIVE .....	426
*DRIVER DOOR FAILS TO LOCK AND UNLOCK .....	427
*DRIVER DOOR FAILS TO UNLOCK .....	428
*FLIP-UP GLASS RELEASE INOPERATIVE .....	429
*ONE PASSENGER DOOR FAILS TO LOCK AND UNLOCK .....	432
*REMOTE KEYLESS ENTRY INOPERATIVE .....	433
*TAILGATE CYLINDER LOCK SWITCH INOPERATIVE .....	435
*TAILGATE LOCK INOPERATIVE .....	436

### **TELECOMMUNICATION**

AUDIO HARDWARE MESSAGE NOT RECEIVED .....	438
BLUETOOTH ERROR .....	439
FLASH CHECKSUM ERROR .....	439
FLASH WRITE ERROR .....	439
PCI BUS INTERNAL ERROR .....	439
RAM WRITE ERROR .....	439
ROM CHECKSUM ERROR .....	439
BODY STYLE MESSAGE NOT RECEIVED .....	441
INVALID BODY STYLE .....	441
GENERAL MICROPHONE FAULT .....	442
IGNITION POWER MESSAGE NOT RECEIVED .....	444
LEFT AUDIO INPUT SHORT TO GROUND .....	445
LEFT AUDIO INPUT SHORT TO VOLTAGE .....	445
LEFT AUDIO OUTPUT 1 SHORT TO GROUND .....	445
LEFT AUDIO OUTPUT 1 SHORT TO VOLTAGE .....	445