

'Click' to download complete Manual



Service Manual

Lexmark™ E360d, E360dn

4513-420

4513-430

- ***Table of contents***
- ***Start diagnostics***
- ***Safety and notices***
- ***Trademarks***
- ***Index***

LEXMARK™

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Edition: May 7, 2009

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22X/002-1, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark, Lexmark with diamond design and MarkVision are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

PCL® is a registered trademark of the Hewlett-Packard Company.

All other trademarks are the property of their respective owners.

© 2008 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Table of Contents

Table of Contents	iii
Notices and safety information	vii
Laser notice	vii
Safety information	xiii
Preface	xvi
Conventions	xvi
General information	1-1
Maintenance approach	1-1
Overview of the operator panel	1-2
Specifications	1-3
Memory	1-3
Print quality settings	1-3
Connectivity and compatibility	1-4
Media trays and supply capacity	1-5
Types of print media	1-6
Tips on preventing jams	1-7
Paper path	1-7
Tools	1-8
Acronyms	1-9
Diagnostics information	2-1
Start	2-1
Overview of the operator panel and menus	2-2
Indicator light	2-2
Buttons	2-3
Diagram of the printer menus	2-5
Messages and error codes	2-6
User attendance messages	2-6
Cartridge error messages	2-9
Paper jam error codes (200-series)	2-9
Service error codes	2-15
Symptom tables	2-20
POST symptom table	2-20
Printer symptom table	2-21
Service checks	2-22
Controller board service check	2-22
Cooling fan service check	2-23
Cover interlock switch service check	2-23
Dead machine service check	2-24
Fuser service check	2-25
LVPS/HVPS service check	2-25
Main motor service check	2-26
Operator panel service check	2-27
Paper feed service checks	2-27
Parallel or USB port service check	2-29
Print quality service checks	2-30
Printhead service check	2-37
Transfer roll service check	2-37
Tray 2 service check	2-38

Diagnostic aids	3-1
Accessing service menus	3-1
Printing menus	3-1
Configuration menu (CONFIG MENU)	3-2
Entering Configuration Menu	3-2
Available menus	3-2
Reset photoconductor maintenance counter (Reset PC Cnt)	3-3
Print quality pages (Prt Quality Pgs)	3-3
Reports	3-3
Panel Menus	3-3
PPDS Emulation	3-3
Demo Mode	3-4
Factory Defaults	3-4
Energy Conserve	3-4
Font Sharpening	3-4
Exit Configuration Menu (Exit Config Menu)	3-4
Diagnostics menu	3-5
Entering Diagnostics menu	3-5
Available tests	3-5
Registration	3-6
Print tests	3-7
Hardware tests	3-8
Duplex tests	3-9
Input tray tests	3-10
Output bin tests	3-11
Base sensor test (B. sensor test)	3-11
Printer setup	3-12
EP setup	3-13
Event log	3-14
Exit Diagnostics	3-15
Printhead assembly electronic adjustment	3-16
Printhead assembly mechanical adjustment	3-17
Repair information	4-1
Handling ESD-sensitive parts	4-1
Removal procedures	4-2
ACM pick tire roller removal	4-3
Bezel removal	4-5
Controller board removal	4-6
Cover open sensor	4-8
Door mount removal	4-9
Duplex removal	4-11
Duplex/main motor gear drive interface removal	4-13
Fan removal	4-16
Front access door removal	4-17
Fuser removal	4-20
Left side cover removal	4-23
Lower front cover removal	4-25
LVPS/HVPS removal	4-27
Main motor gear drive removal	4-30
Manual feed clutch removal	4-32
Manual feed solenoid removal	4-34
Media ACM ASM feeder removal	4-37
Media feed clutch with cable removal	4-40
Media manual input sensor	4-42
Multipurpose feeder (MPF) removal	4-45

Multipurpose feeder (MPF) feed clutch removal	4-48
Nameplate removal	4-50
Operator panel removal	4-51
Paper input and duplex sensor assembly removal	4-52
Printhead removal	4-53
Rear door and rear cover removal	4-54
Rear exit guide assembly with sensor and reversing solenoid removal	4-56
Right side cover assembly removal	4-58
Toner level sensor removal	4-60
Top cover assembly removal	4-61
Transfer roll removal	4-63
Upper front guide assembly removal	4-64
Wear strip (tray 1 and 250-sheet tray 2) removal	4-65
Wear strip (550-sheet tray 2) removal	4-66
Locations and connections	5-1
Locations	5-1
Front view	5-1
Rear view	5-1
Controller board connector pin values	5-2
Preventive maintenance	6-1
Safety inspection guide	6-1
Lubrication specifications	6-1
Parts catalog	7-1
How to use this parts catalog	7-1
Index	I-1
Part number index	I-3

service-repairmanual.com

service-repairmanual.com