



HP COLOR LASERJET CP5220

SERIES PRINTER

Service Manual

For the complete service manual,
please visit www.LaserPros.com



HP Color LaserJet CP5220 Series Printer Service Manual



Copyright and License

© 2009 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CE710-90910

Edition 1, 9/2009

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Microsoft®, Windows®, Windows® XP, and Windows Vista® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Table of contents

1 Theory of operation

Basic operation	2
Major product systems	2
Product block diagram	2
Sequence of operation	3
Normal sequence of operation	3
Formatter-control system	5
Sleep mode	5
Input/output	5
CPU	6
Memory	6
Firmware	6
Nonvolatile memory	6
PML overview	6
PJL	6
Control panel	6
Engine-control system	7
DC controller	8
Motors	11
Fans	13
Fuser-control circuit	14
Fuser temperature control	15
Fuser protective function	16
Fuser failure detection	17
Low-voltage power supply	18
Overcurrent/overvoltage protection	20
High-voltage power supply	21
Laser scanner system	23
Laser failure detection	24
Image-formation system	25
Electrophotographic process	25
Image formation process	27
Latent-image formation block	28
Pre-exposure	28

Primary charging	28
Laser beam exposure	29
Developing block	30
Transfer block	31
Primary transfer	31
Secondary transfer	31
Separation	32
Fusing block	32
ITB cleaning block	33
Drum cleaning block	33
Print cartridges	34
Memory tag	35
Cartridge presence detection	35
Toner level detection	35
Cartridge life detection	35
Developing unit engagement and disengagement control	35
ITB unit	37
Primary transfer roller engagement and disengagement control	38
ITB unit presence detection	39
ITB cleaning mechanism	39
Calibration	40
Color-misregistration control	40
Environment change control	41
Image stabilization control	41
Image density control (DMAX)	42
Image halftone control (DHALF)	42
Pickup, feed, and delivery system	43
Photo sensors	44
Motors and solenoids	45
Pickup and feed block	45
Cassette pickup	45
Cassette multiple-feed prevention	46
Tray 1 (MP tray) paper pickup	47
Tray 1 (MP tray) last-paper detection	48
Paper feed	49
Skew-feed prevention	50
Feed-speed control	51
Fusing and delivery block	52
Loop control	52
Pressure roller pressurization and depressurization control	53
Output bin full detection	55
Duplex block (duplex models only)	56
Jam detection	57
Paper feeder	59

Paper-feeder motors	60
Paper-feeder paper pickup and feed	61
Paper-feeder cassette lift operation	61
Paper-feeder jam detection	62
2 Removal and replacement	
Introduction	64
Removal and replacement strategy	65
Electrostatic discharge	66
Required tools	67
Service approach	68
Before performing service	68
After performing service	68
Post-service test	68
Print-quality test	68
Removal and replacement procedures	69
Customer self repair (CSR) components	69
Print cartridges	69
Toner-collection unit	72
Memory DIMM	74
Product memory	74
Install memory and font DIMMs	74
Enable memory	78
Check DIMM installation	78
Fuser	79
Pickup roller (Tray 1)	80
Separation pad (Tray 1)	81
Separation roller assembly (Tray 2)	82
Pickup roller (Tray 2)	84
Pickup roller, separation roller, and feed roller (Tray 3)	85
Secondary transfer roller	86
Intermediate transfer belt (ITB)	87
External panels, covers, and doors	89
Identification and location	89
Right-front cover and control-panel assembly	90
Left cover	92
Rear cover	93
Remove the rear cover	93
Toner collection unit access door	93
Right-rear cover	95
Top cover	96
Remove the top cover	96
Front-door assembly	98

Right-door assembly	102
Internal assemblies	104
Laser scanner assembly	105
Remove the laser scanner assembly	105
Cassette pickup drive assembly	108
Remove the cassette pickup drive assembly	108
Registration sensor assembly	112
Remove the registration sensor assembly	112
Lifter-drive assembly	115
Remove the lifter-drive assembly	115
ITB front guide assembly	117
ITB rear guide assembly	119
Residual toner full sensor	120
Remove the residual toner full sensor	121
Formatter case	123
Delivery assembly	124
Remove the delivery assembly	124
Duplex drive assembly (duplex models)	127
Remove the duplex-drive assembly	127
Delivery drive assembly (simplex models)	129
Remove the delivery drive assembly	129
Residual-toner-feed assembly	130
Remove the residual-toner-feed assembly	130
ITB motor	132
Remove the ITB motor	132
Drum motor	134
Remove the drum motor	134
Developing motor	135
Remove the developing motor	135
Fuser motor	136
Remove the fuser motor	136
Developing-disengagement motor	137
Remove the developing-disengagement motor	137
Power-supply fan	139
Remove the power-supply fan	139
Fuser fan	142
Remove the fuser fan	142
Formatter PCA	144
Formatter resets	144
DC controller PCA	146
Remove the DC controller PCA	146
Low-voltage power supply	148
Remove the low-voltage power supply	148
Imaging (developing) high-voltage power supply	152

Remove the imaging (developing) high-voltage power supply	152
First transfer high-voltage power supply	153
Remove the first transfer high-voltage power supply	153
Second transfer high-voltage power supply	155
Remove the second transfer high-voltage power supply	155
Driver PCA	157
Remove the driver PCA	157
Power switch PCA	159
Remove the power switch PCA	159
Environmental sensor	160
Remove the environmental sensor	160
Optional paper feeder assembly (Tray 3)	161
Tray 3 rear cover	161
Tray 3 left cover	161
Tray 3 right-front cover	163
Tray 3 front-upper cover	164
Tray 3 right door	164
Tray 3 right-lower cover	166
Tray 3 pickup assembly	167
Tray 3 lifter drive assembly	168
Tray 3 pickup motor	169
Tray 3 driver PCA	170

3 Solve problems

Solve problems checklist	172
Menu map	173
Troubleshooting process	174
Pretroubleshooting checklist	174
Power-on checks	176
Tools for troubleshooting	177
Diagrams	177
Block diagrams	177
Plug/jack locations	179
Location of connectors	180
DC controller connections	180
Product connections	182
Locations of major components	189
General timing charts	196
General circuit diagram	197
HP ToolboxFX	200
Open HP ToolboxFX	200
Status	201
Event log	201

Alerts	202
Set up Status Alerts	202
Set up E-mail Alerts	202
Product information	202
Set password	202
Help	203
System Settings	204
Device Information	204
Paper Setup	205
Print Quality	206
Print Density	206
Paper Types	206
Extended Print Modes	206
System Setup	206
Save/Restore Settings	206
Product Security	207
Print Settings	207
Printing	207
PCL5	207
PostScript	207
Network Settings	207
Shop for Supplies	207
Other Links	207
Internal print quality test pages	208
Use HP ToolboxFX to troubleshoot print-quality problems	208
Configuration page	209
Print quality troubleshooting tools	209
Repetitive image-defect ruler	209
Calibrate the product	210
Control-panel menus	211
Use the menus	211
Reports menu	211
System Setup menu	213
Service menu	216
Network Configuration menu	217
Interpret control-panel and status-alert messages	218
Event-log messages	229
Print an event log	229
Event-log messages	229
Clear jams	230
Common causes of jams	230
Jam locations	231
Change Jam Recovery setting	231
Clear jams in the right door	232

Clear jams in the output bin area	235
Clear jams in Tray 1	235
Clear jams in Tray 2	237
Clear jams in the optional 500-sheet paper and heavy media tray (Tray 3)	238
Clear jams in the lower right door (Tray 3)	239
Solve image-quality problems	240
Image defects table	240
Clean the product	246
Solve performance problems	247
Solve connectivity problems	248
Solve direct-connect problems	248
Solve network problems	248
Service mode functions	249
Secondary service menu	249
Open the secondary service menu	249
Secondary service menu structure	249
Product resets	250
Restore the factory-set defaults	250
Engine test page	250
Cold reset	250
NVRAM initialization	251
Super NVRAM initialization	251
Product updates	252

4 Parts and diagrams

Order parts by authorized service providers	254
Order parts, accessories, and supplies	254
Related documentation and software	254
Supplies part numbers	255
Customer self repair parts	255
Accessories part numbers	257
How to use the parts lists and diagrams	258
Assembly locations	259
External covers, panels, and doors	260
Right door assembly	262
Internal components (1 of 6)	264
Internal components (2 of 6)	266
Internal components (3 of 6)	268
Internal components (4 of 6)	270
Internal components (5 of 6)	272
Internal components (6 of 6)	274
Cassette	276
Paper pickup assembly	278

Paper delivery assembly	280
Printed circuit assemblies	282
Paper feeder external components	284
Paper feeder internal components	286
Paper feeder PCA	288
Alphabetical parts list	290
Numerical parts list	297

Appendix A Service and support

Hewlett-Packard limited warranty statement	306
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	307
HP Color LaserJet Fuser Kit Limited Warranty Statement	308
End User License Agreement	309
Customer self-repair warranty service	311
Customer support	312

Appendix B Product specifications

Physical specifications	314
Performance specifications	314
Electrical specifications	314
Acoustic specifications	314
Environmental specifications	315
Skew specifications	316

Appendix C Regulatory information

FCC regulations	318
Declaration of conformity	319
Safety statements	320
Laser safety	320
Canadian DOC regulations	320
VCCI statement (Japan)	320
Power cord statement (Japan)	320
EMC statement (Korea)	320
Laser statement for Finland	320
Substances Table (China)	321

Index	323
--------------------	------------

For the complete service manual,
please visit www.LaserPros.com