


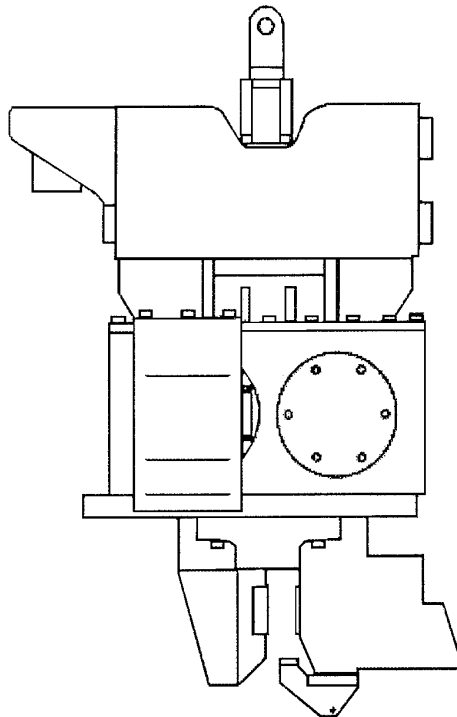

# Pile Driver/Extractor

Parts, Safety, Operation  
& Maintenance





**TABLE OF CONTENTS****PAGE**

1	Safety instructions	5
	1.1 General	5
	1.2 Safety precautions	5
	1.3 Limit conditions	8
	1.3.1 Refusal	8
	1.3.2 Rebound	8
	1.3.3 Max. Bearing temperatures	8
	1.4 Incorporated safety precautions	9
	1.5 Safety signs for use on products with no text	10
2	General description	12
	2.1 Vibration case	13
	2.2 Extraction head	13
	2.3 Hydraulic clamp	13
	2.4 Turning mechanism of SH-version	13
	2.5 Goose neck	15
3	Rigging of vibrator	16
	3.1 Mechanical connection	17
	3.2 Hydraulic connection	17
	3.3 Clamp control Connection	22
4	Hydraulic scheme	23
	4.1 B- and SH-version	23
	4.2 RFB- and RFSH-version	25
5	Operating instructions	27
	5.1 Clamp cylinder	27
	5.2 Vibratory hammer	28
	5.3 RF Vibratory hammer	29
	5.4 Operating under water	30
6	Clamp rotated 90 degrees	31

## TABLE OF CONTENTS

## **GENERAL** PAGE

7	Maintenance	32
	7.1 General	32
	7.2 Daily maintenance	32
	7.3 Weekly maintenance	33
	7.4 Bolt torque information	33
	7.5 Vibrators	33
8	Lubrication instructions	34
	8.1 Vibration case	34
	8.2 Hydraulic clamp	35
	8.3 Rotator	35
	8.4 Hydraulic fluid	35
9	Ordering of parts	36
	9.1 Procedure	35
	9.1.1 Original equipment	36
	9.1.2 Shipment	36
	9.1.3 Shortages	36
	9.1.4 Return of parts	36
	9.2 Screws and bolts	36
	9.3 Hoses	38
	9.4 Fittings	39
10	Diagram	42
11	<b>Parts manual</b>	
12	<b>Clamps and chain assembly</b>	

# 1 SAFETY INSTRUCTIONS

## 1.1 GENERAL

Foundation equipment and especially pile driving hammers including vibratory hammers are designed to transfer extremely high-energy ratings from the pile driver/extractor to a pile and the soil beneath. The forces generated, either through impact or through vibration, are extremely high and therefore this equipment requires proper maintenance and skilful operation. Pay special attention to the safety instructions and the operation and maintenance section.

## 1.2 SAFETY PRECAUTIONS

**TRAMAC** accepts no liability for any damage or physical injury caused by non-compliance with the safety instructions in this manual or by carelessness during the installation, use, adjustment or maintenance of the equipment.

**It is the sole responsibility of the user or operator to ensure that the local health and safety regulations are adhered to prior to using the equipment.**

General safety instructions throughout this manual are marked by:



### **CAUTION**

Indicates a potentially hazardous situation which, if not avoided **MAY** result in minor or moderate injury.



### **WARNING**

Indicates a potentially hazardous situation which, if not avoided **COULD** result in death or serious injury.



### **DANGER**

Indicates an imminently hazardous situation which, if not avoided **WILL** result in death or serious injury.

Pictographs used on the equipment are shown separately (see fig. 1.01). Also, read the following regulations and operating instructions carefully!

### **Operators**

Only trained technicians should be permitted to operate the equipment. Temporary employees and trainees should only be permitted to work at the equipment under the supervision and instruction of trained personnel.

### **Operation and service manual**

Everyone who works at or with the equipment should be familiar with the contents of this manual and should follow the instructions. The management is under obligation to inform the personnel of the contents of this manual and is obliged to observe all of the regulations and directions.

### **Clothing and footwear**

## GENERAL

When working with the equipment, do NOT wear rings, watches, jewellery or any loose clothing, which could become caught in moving or rotating parts.

Always wear protective goggles, safety helmets and protective footwear specially suited for the work.

Keep hands away from moving or rotating parts. Wear working gloves.

Take appropriate measures for the protection of hearing if the sound pressure of 85 dB (A) is exceeded; always use earplugs when working close to a machine in operation.

### Water and moisture

Make sure all protective devices of the electric installation have been installed to guarantee adequate protection from moisture and water. Failure to do so can result in the malfunction of safety circuits and cause harm to personnel and equipment components.

NEVER direct a jet of water at electrical parts.

## OPERATION

- ALWAYS**
- Watch a hammer in operation. Some parts might unexpectedly fail, fall down and injure people. Stop operation **IMMEDIATELY!**
  - Stop the hammer for a check up if there is something wrong with it.
  - Pay attention to irregular or unusual noises and analyse where they come from.
  - Let the hammer cool down before you start maintenance or repairs on the hammers.
  - Remove all tools and electrical cords before starting the hammer.
  - Warn colleagues when you feel uncomfortable with the way the hammer is functioning.

- NEVER**
- Adjust or repair the unit whilst in operation.
  - Run the hammer in horizontal position.
  - Stand in close proximity to a working vibratory hammer.
  - Continue operation when service inspection is due, or when repairs are necessary.
  - Continue operation when it is known that one of the safety provisions is out of order or not working properly.

**Drag hoses as little as possible.**

### Tools

Never use defective (maintenance) tools. Only use a tool for the purpose for which it was designed.

### **Technical specifications**

The specifications contained in the present manual should NOT be infringed.

### **Safeguards**

All safeguards must be correctly installed and may only be removed for maintenance and service purposes by qualified service technicians.

The equipment should never be switched ON when the protective covering is incomplete or when the safeguards have been rendered inoperative.

All safeguards must be checked at regular intervals and repaired immediately in case of malfunction.

### **Safety directions and warnings**

Any safety direction, warning or instruction fitted on the equipment should NOT be removed, rendered illegible or covered. They should be present and legible throughout the entire operating life of the equipment.

Illegible, damaged or covered safety directions, warnings or instructions should immediately be replaced or repaired.

### **Service and maintenance**

The service and maintenance activities should only be carried out by qualified **service** personnel or one of **Tramac's** appointed and certified dealers in full compliance with all safety measures and the service intervals mentioned in the present manual.

### **Electrical system**

Work on the electrical systems or equipment may only be carried out by skilled electricians or by specially instructed personnel under the supervision of such electricians and in accordance with the applicable electrical engineering rules.

### **Hydraulic system**

Work on the hydraulic equipment may only be carried out by persons having special knowledge and experience in hydraulic systems.

### **Use according to purpose**

In order to guarantee correct operations, the equipment should only be used in accordance with the purpose described in EN 292-1.



## 1.3 LIMIT CONDITIONS

As with all machinery there is a limit as to the operational conditions under which the machinery is expected to last longer and operate safely and efficiently.

For vibratory driving, **Tramac** defines these limit conditions for **REFUSAL** and **REBOUND** as follows.

### 1.3.1 Refusal

- Under normal, predictable and reproducible conditions, refusal is defined when the penetration rate (time count) exceeds:  
**5 min per 0,25 m penetration (6 min/12")**
- Under extreme, incidental occurring conditions, refusal is defined when the penetration rate (time count) exceeds:  
**15 min per 0,25 m penetration (18 min/12")**

The penetration distance of 0,25 m (or 12") is absolute; i.e. no conversion is allowed to, for instance, 60 min per meter penetration.

### 1.3.2 Rebound

Rebound occurs when a large portion of the hammer's energy is "bounced" back into the pile as a result of force reflection at the pile tip due to the pile hitting a nearly impenetrable layer or obstruction. The rebound forces will be transferred back into the hammer and the head (suppressor head), as a result of which the head will start "jumping" relative to the vibratory case. In this situation driving should be stopped immediately or the hammer retracted.

### 1.3.3 Max. Bearing temperatures

The maximum bearing temperature, as measured on the bearing covers (some paint removed), must never exceed 90 °C (194 °F).

**Note: Tramac will not accept any warranty claims when equipment has been used beyond above limit conditions.**



## 1.4 INCORPORATED SAFETY PRECAUTIONS

- \* The hammer has a number of built-in safety provisions, which ensure that the risk for failures, human injuries and environmental pollution is reduced to a minimum:
- \* The hammer cannot be put in operation when the clamp is open and has not been attached to "CLOSE".
- \* A running hammer is automatically switched OFF when the "CLAMP OPEN" switch is activated.
- \* A pilot-operated check valve on the clamp ensures that the clamp pressure is maintained in case one of the clamp hoses fails.
- \* Individual pressure relief valves in pressure line, both clamp lines and leak oil line.



### **WARNING**

- Never change the electrical wiring or hydraulic safety setting which change the above safety provisions.
- In most countries the hammer and powerpack are not allowed to operate in explosion risk areas without modifications.  
Always contact **Tramac Corp** when special requirements are compulsory.

1.5 SAFETY SIGNS FOR USE ON PRODUCTS WITH NO TEXT







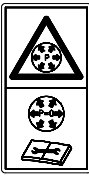


Fig. 1.01

## 1.5 SAFETY SIGNS FOR USE ON PRODUCTS WITH NO TEXT

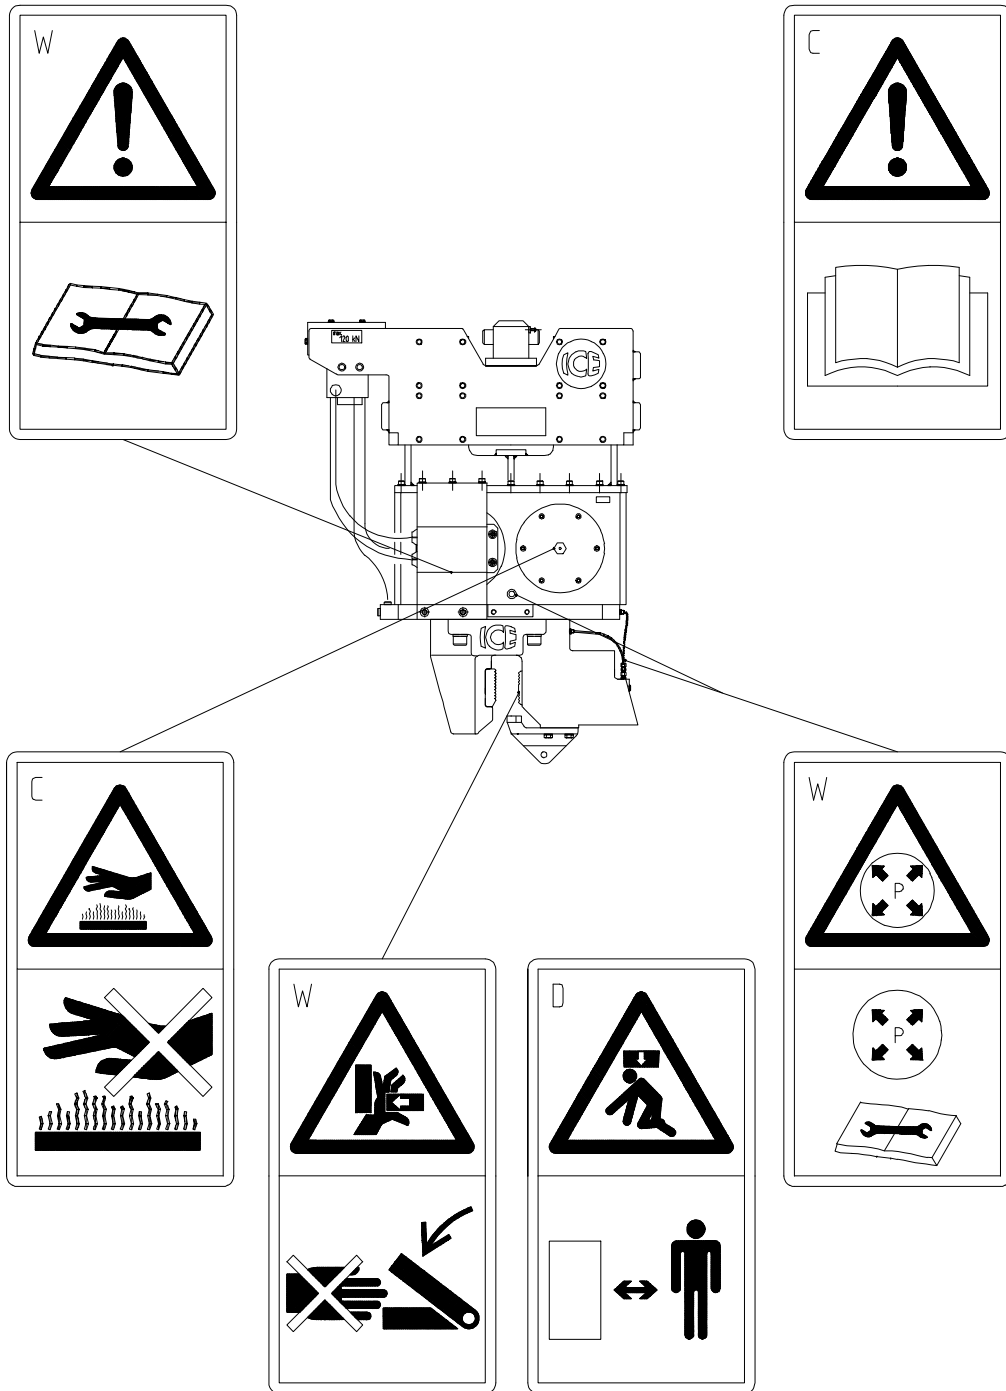	HAZARD DESCRIPTION	HOW TO PREVENT
	SAFETY SIGNS	READ OPERATION MANUAL
	MAKE SURE THAT THE MACHINE IS IN GOOD CONDITION	READ MAINTENANCE INSTRUCTIONS IN OPERATION MANUAL FOR PROPER SERVICE PROCEDURES
	SURFACE CAN BE HOT	DO NOT TOUCH ALLOW SURFACE TO COOL DOWN
	CRUSHING OF FINGER (S) OR HAND (S)	NEVER REACH INTO THE DANGER AREA AS LONG AS PARTS MAY MOVE
	PARTS MAY FALL DOWN	STAY AT A SAFE DISTANCE FROM THE MACHINE
	COMPONENT IS PRESSURISED	DEPRESSURISE BEFORE MAINTENANCE

2 GENERAL DESCRIPTION OF EXCAVATOR MOUNTED VIBRATORY HAMMER

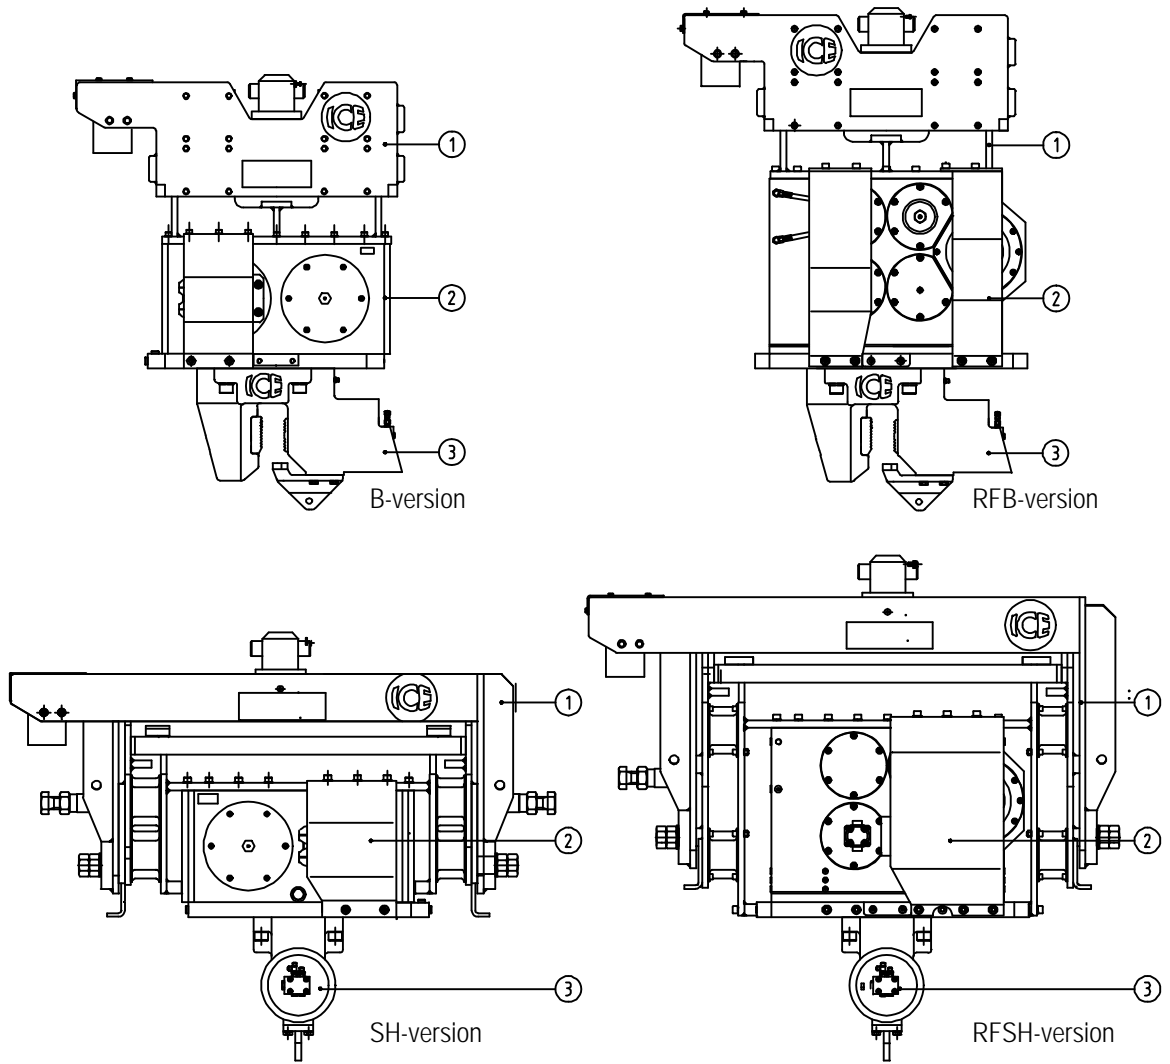


Fig. 2.01

## **2 GENERAL DESCRIPTION OF EXCAVATOR MOUNTED VIBRATORY HAMMER**

The vibrator, both the (RF)B and the (RF)SH-version, consists of three major components:

1. Vibration case
2. Extraction head
3. Hydraulic clamp

### **2.1 VIBRATION CASE**

The vibration case contains two eccentric weights, which rotate in a vertical plane to create vibration. The eccentric weights are driven by one hydraulic motor mounted on the vibration case. The motor and the eccentrics are gear connected to maintain proper synchronisation. The eccentric shafts are mounted in heavy-duty roller bearings.

Lubrication is provided by a splash system, activated by the rotating eccentrics and gears. A flow control valve secures maximum speed of the eccentrics.

### **2.2 EXTRACTION HEAD**

The extraction head contains rubber elements (elastomers) to isolate the vibrations from the vibration case going into the excavator boom. It also contains the rotator, which is connected with an adapter to the boom of the excavator.

### **2.3 HYDRAULIC CLAMP**

The hydraulic clamp contains two gripping jaws, one fixed and one moveable. An in the clamp body integrated cylinder operates the moveable jaw. The clamp cylinder is provided with a pilot operating check valve, which keeps the clamp cylinder under pressure in case of hose damage. The clamp cylinder is operated by a hydraulic remote control or an electrical remote control pendant, which has two push buttons, one to open the clamp and one to close the clamp.

### **2.4 TURNING MECHANISM OF SH-VERSION**

The TRAMAC (RF)SH-version vibratory hammer consists of an excavator mounted vibratory hammer where the vibration case can be tilted 90 degree. relative to the extraction head.

The (RF)SH-version simplifies the handling of the sheetpile while picking them up and laying them down, simplifies the positioning in to the lock of the already placed sheetpiles and makes the use of the chain redundant.

When using a (RF)SH-version vibratory hammer a connector mounted between the excavator boom and the vibratory hammer must be a pipe connection. By doing so, the twisting points between rotator and boom or gooseneck (see fig. 2.03) will be eliminated. This advances the handling of the vibratory hammer.

## GENERAL

Use the (RF)SH-version as follows:

- \* Fasten the vibratory hammer with use of a pipe connection to the excavator boom or gooseneck.
- \* Link the hydraulic hoses and the electrical cables according instructions.
- \* Place the vibratory hammer on the ground with the hydraulic hoses of the clamp facing the excavator.
- \* Drive the excavator forward or let the boom tilt forward so that the vibratory hammer tilts into the hinge pens A (see fig. 2.02). Make sure that the hinge pens fall in the under-most position of the long-holes.
- \* The vibratory hammer can now be raised and slid over the sheetpile, which is in horizontal position.
- \* With the excavator boom the vibratory hammer and clamped sheetpile can be raised. Due to the weight of the sheetpile the vibration case, clamp and sheetpile will be tilted in vertical position. Both spring-loaded lock pins B will make sure that this position will be locked.
- \* Place the sheetpile on the ground or in the lock of the other pile and press the vibratory hammer with the boom downwards. Make sure that the hinge pens are in up-most position in the long-holes.
- \* The side-plates C must be positioned in the extraction head so that the possibility of tilting will be blocked.
- \* The vibratory hammer can now be started. During penetration of the sheetpiles make sure that the extraction heads down force is sufficient. This way the side plates will be at all times in the extraction head and it prevents the vibratory hammer of tilting sideways.

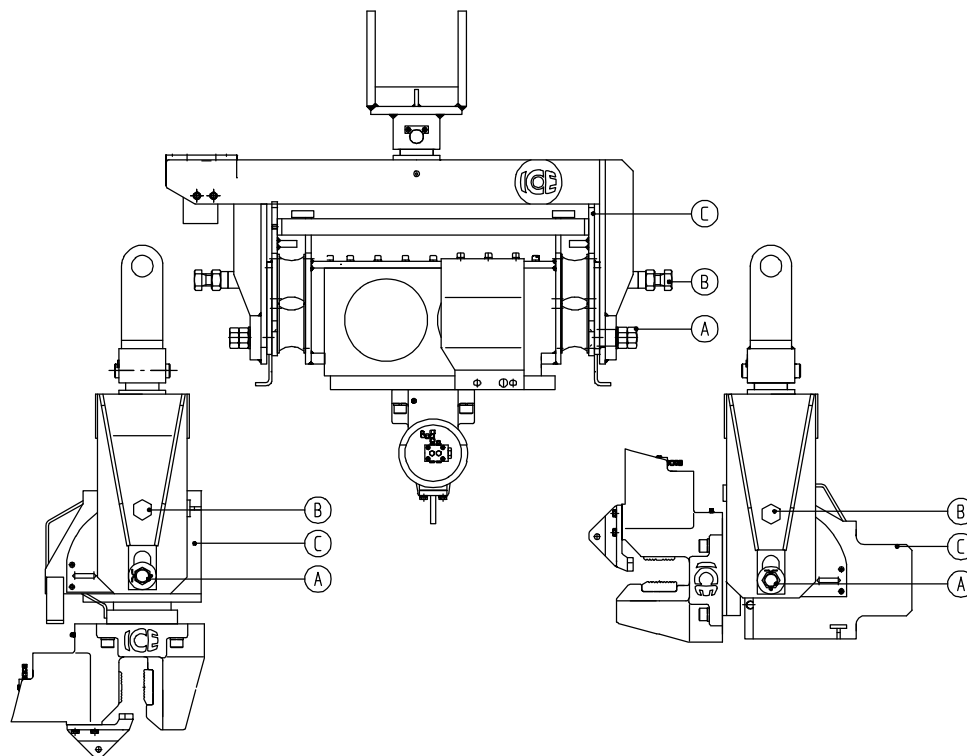


Fig. 2.02

Extract the sheetpiles with a (RF)SH-version as follows:

- \* Place the clamp (thus also the vibratory hammer) over the sheet pile and activate the clamp.
- \* With the use of the excavator extract the sheet piles
- \* Place the end of the pile on the ground so that the hinge pins move to the under-most position in the long-holes.
- \* By moving the excavator boom side-wards, backward or forwards the vibratory hammer will turn over the hinge pins. This way the sheet pile can be placed horizontally.
- \* Open the clamp and remove it from the sheet pile.
- \* If the spring-loaded pins are correctly adjusted, a force of aprox. 50 to 70 kg can be placed on the clamp jaw. This way the vibratory hammer will be placed back into the vertical position.

## 2.5 GOOSE NECK

The gooseneck is an extension piece of the excavator boom, which can be mounted in different ways, depending on the connection. By using a gooseneck the lifting height and the reach of the excavator will be larger. Working with a gooseneck requires a learning period.



### CAUTION

By using a gooseneck the lifting capacity decreases and the chance is bigger that the excavator may fall over.


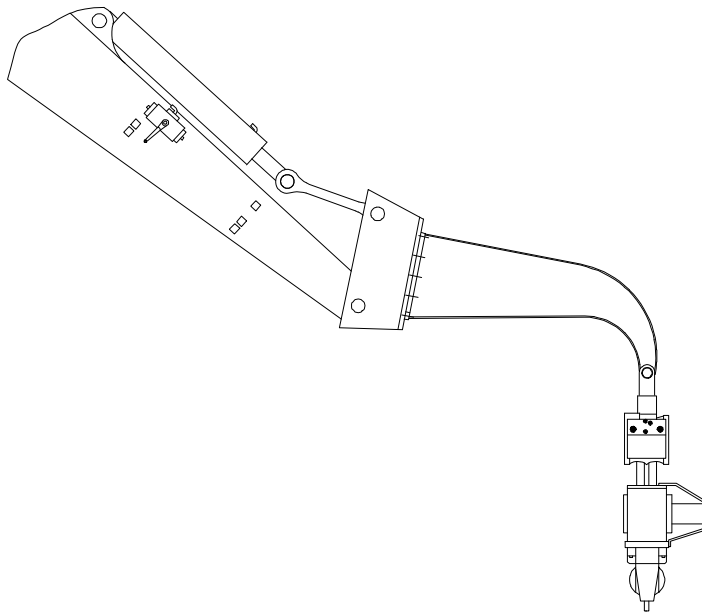


Fig. 2.03

3 RIGGING OF VIBRATOR

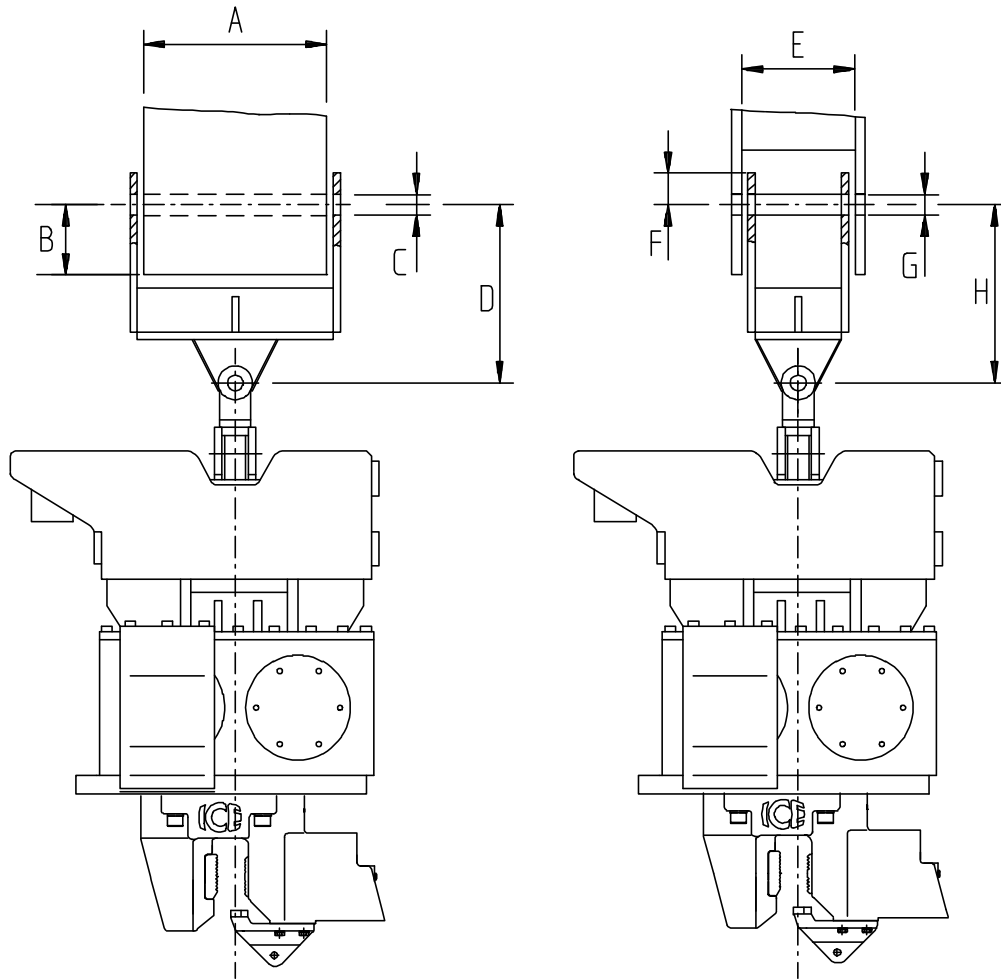

Dimensions adapter in mm.

A = ..... or E = .....

B = ..... or F = .....

C =  $\phi$  ..... or G =  $\phi$  .....

D = ..... or H = .....

Fig. 3.01



### **3 RIGGING OF VIBRATOR**

To operate the small vibratory hammers from an excavator, one needs to make 3 connections between excavator and vibrator:

1. Mechanical connection
2. Hydraulic connections
3. Clamp control connection (electrical or hydraulically)

#### **3.1 MECHANICAL CONNECTION**

The vibrator must mechanically be connected to the excavator using a special pivoting bracket (See Fig. 3.01).

As most excavator manufacturers have different dimensions for the connecting pin and boom layout, each excavator requires its own bracket. A special bracket covering a range of hammers is available upon request.

When either the dimension A, B and C for external rigging or E, F and G for internal rigging are known, a suitable adapter can be manufactured.

When rigging the bracket, make sure that the safety plates on both the upper pin and lower pin are secured properly (see view K).

#### **3.2 HYDRAULIC CONNECTIONS**

There are 3 main hydraulic connections between the excavator and the vibrator (Fig. 3.02):

- Main pressure line (P)
- Main return line (T)
- Drain oil line (D)

As the lay-out of the hydraulic system and hydraulic lines are different, each operator has to judge for himself in co-operation with TRAMAC and/or the excavator manufacturer how to connect the vibratory hammer for functioning correctly.

One of the most common adjustments is a 3-way valve connection, installed on the hydraulic lines on the bucket cylinder (see as an example Fig. 3.03 with details on Fig. 3.04 and 3.05).

The drain line must always be connected with the hydraulic tank of the excavator; this means that the drain line is always at a low pressure.

Never connect the hydraulic lines to "demolishing hammer connection "

## GENERAL

### INSTALLATION WARNING:

1. Always remember that both (P) and (T) can be used as pressure lines.
2. For clamp operations port T must be pressurised to close and open the clamp.

The fittings on the 2.9-m hoses, delivered standard with the hammer are:

	<b>Excavator side</b>	<b>Vibratory hammer side</b>
- Pressure (P) and return (T) line	: M36 * 2 (25S)	M36 * 2 (25S)
- Drain line (D)	: M22 * 1.5 (15L)	M22 * 1.5 (16S)

RIGGING OF VIBRATOR

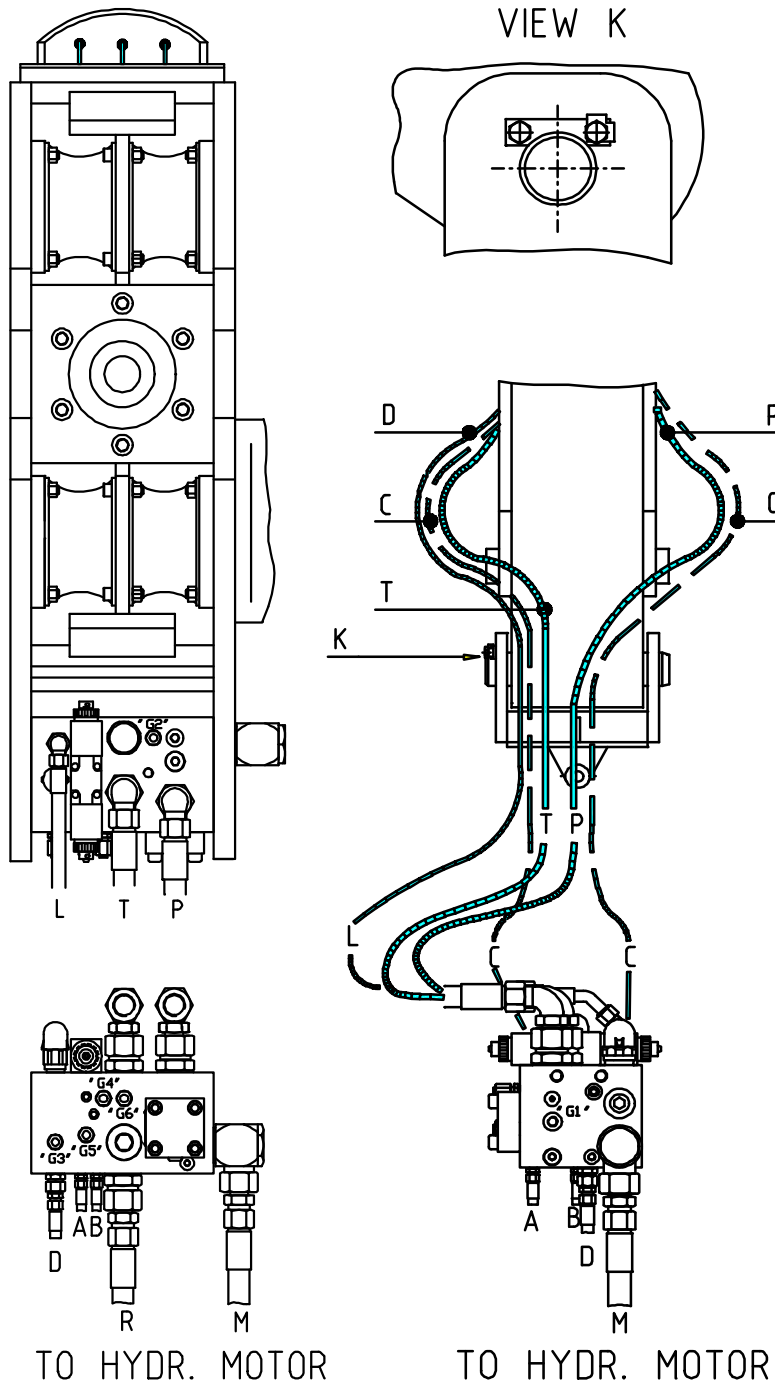


Fig. 3.02

RIGGING OF VIBRATOR

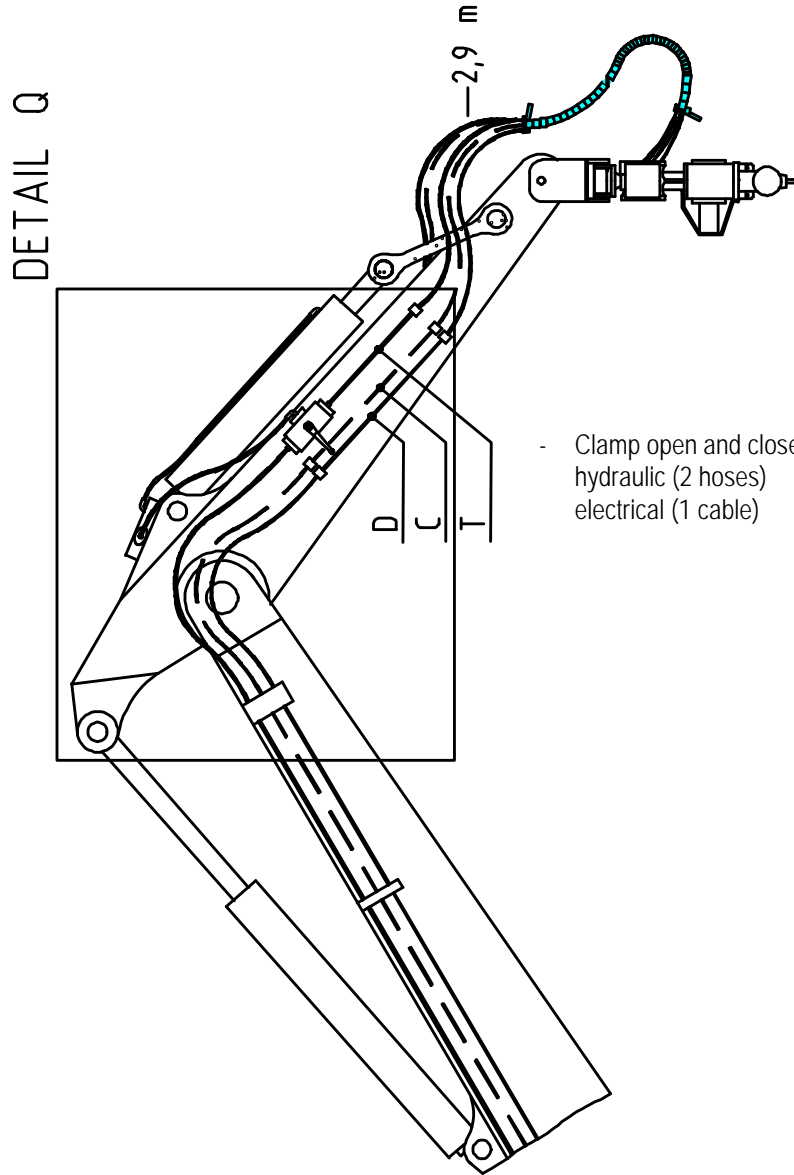
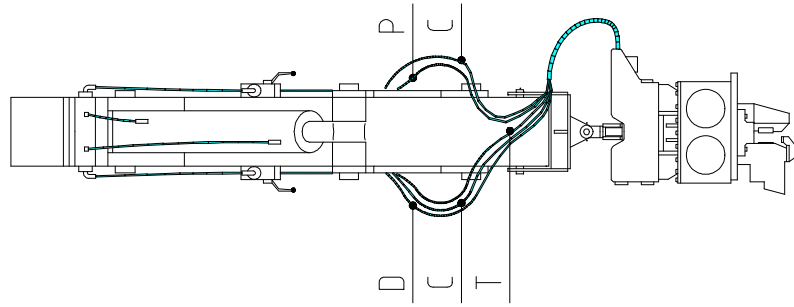


Fig. 3.03

RIGGING OF VIBRATOR

DETAIL Q

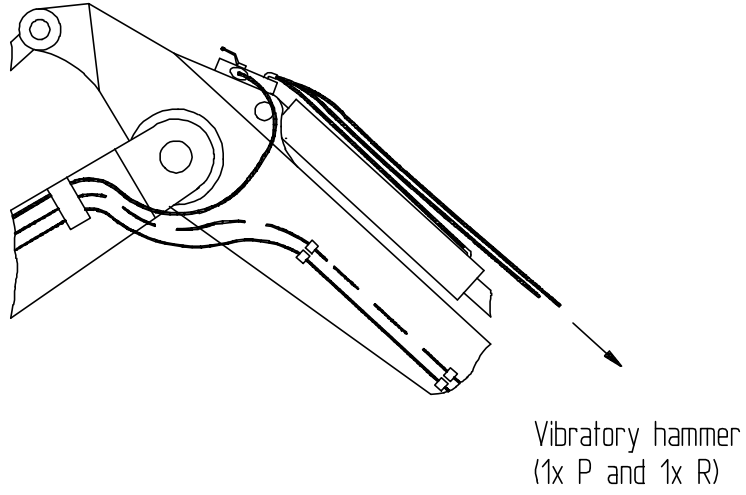


Fig. 3.04

DETAIL Q

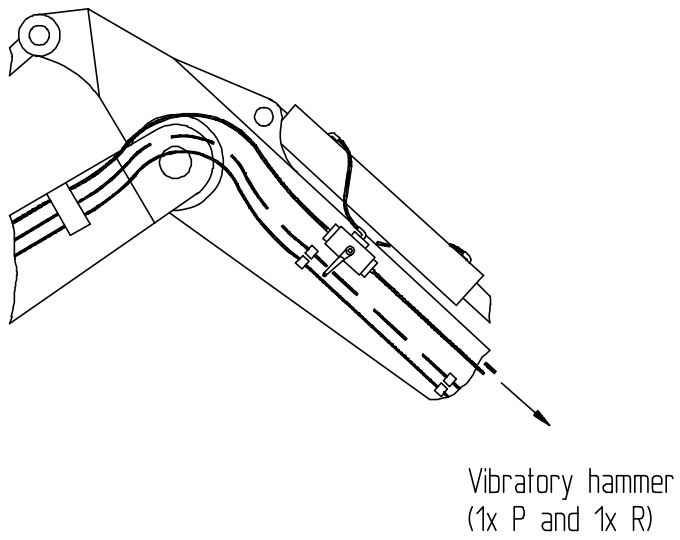


Fig. 3.05

### 3.3 CLAMP CONTROL CONNECTIONS

The clamp can be activated (CLAMP CLOSE) or de-activated (CLAMP OPEN) by an electric or hydraulic operated valve mounted on top of the main manifold (see Fig. 3.02, connections), installed on the extraction head of the vibratory hammer.

In case the hammer is equipped with an electrical valve, a 2,9-m electric cable and a remote control will be delivered standard with the vibratory hammer. This cable is in connection with another 20-m electric cable, which is connected to the vibratory hammer.

There is also a 10-m cable, which connects the remote control with the battery of the excavator or the cigarette lighter (make sure this has 24V).

In case the hammer is equipped with a hydraulic valve, one needs to install two extra hydraulic hoses from the excavator to the hammer (lines C in drawing Fig. 3.03) or use 2 other existing lines to the front end of the boom. Delivered with the hammer are 2 hydraulic hoses, 2.9 m long and with a M16 \* 1.5 female connection.

For further details we refer to hydraulic scheme (see 4.01) and the remote control connections in the parts manual.

When using a hydraulic valve it is useful to contact TRAMAC for the correct use of this valve.

## 4 HYDRAULIC SCHEME

### 4.1 B- AND SH-VERSION

ITEM	DESCRIPTION
1	Manifold block
2	Cartridge (P)
3	Orifice
4	Relief valve
5	Relief valve
6	Check-valve
7	Check-valve
8	Check-valve
9	Control valve
10	Gauge coupling
11	Control cover
13	Orifice
14	Check-valve
15	Orifice

4.1 HYDRAULIC SCHEME

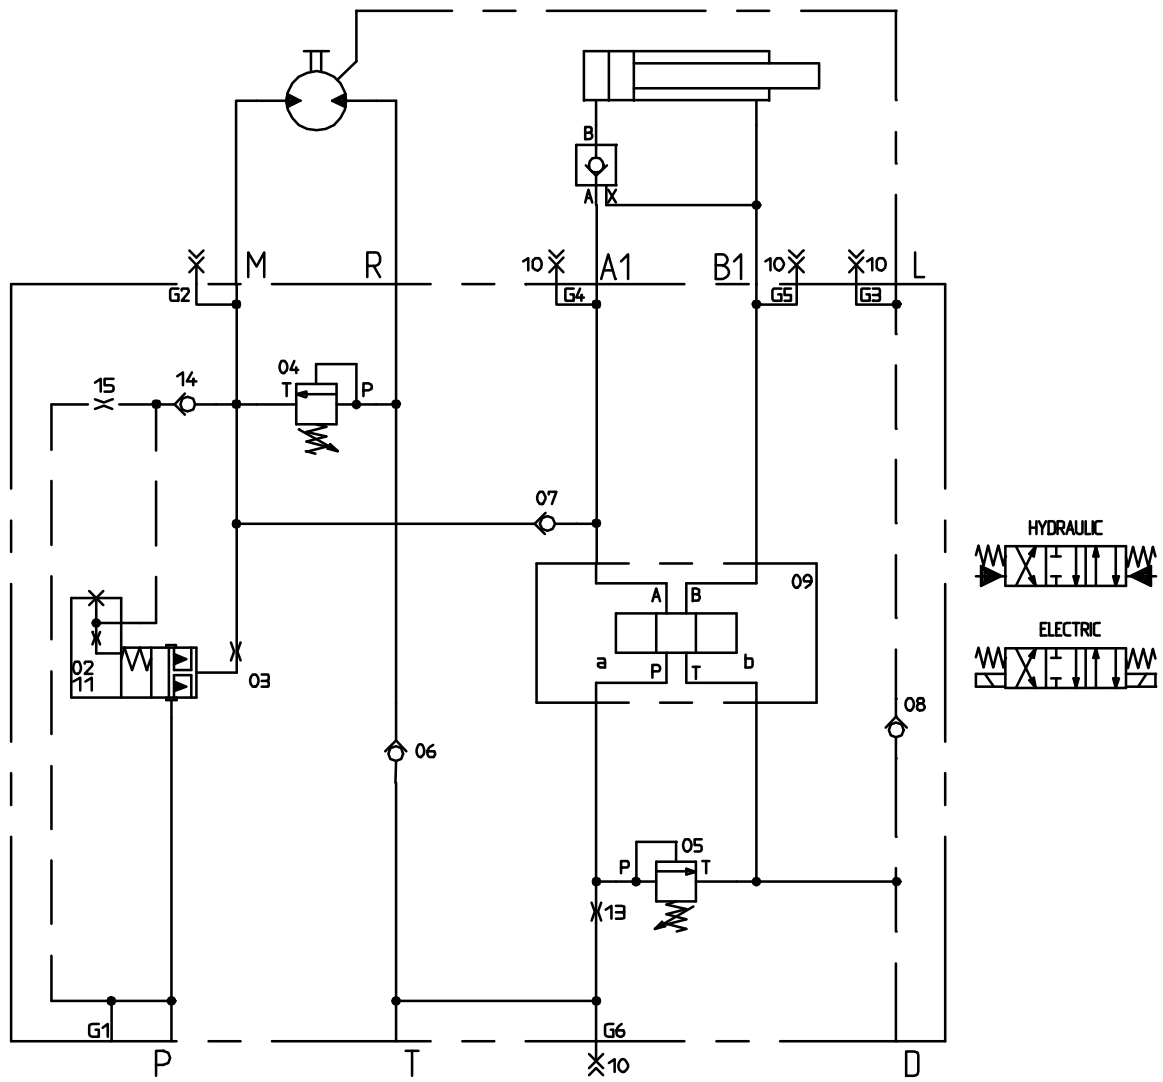


Fig. 4.01



## 4.2 RFB- AND RFSH-VERSION

ITEM	DESCRIPTION
1	Manifold block
3	Orifice
4	Relief valve
5	Relief valve
6	Check-valve
7	Check-valve
8	Check-valve
9	Control valve
10	Gauge coupling
11	Control cover
12	Orifice
13	Orifice
14	Check-valve
15	Orifice
16	Orifice
17	Check-valve
18	Control valve
19	Relief valve
20	Checkvalve

4.2 RFB- AND RFSH-VERSION

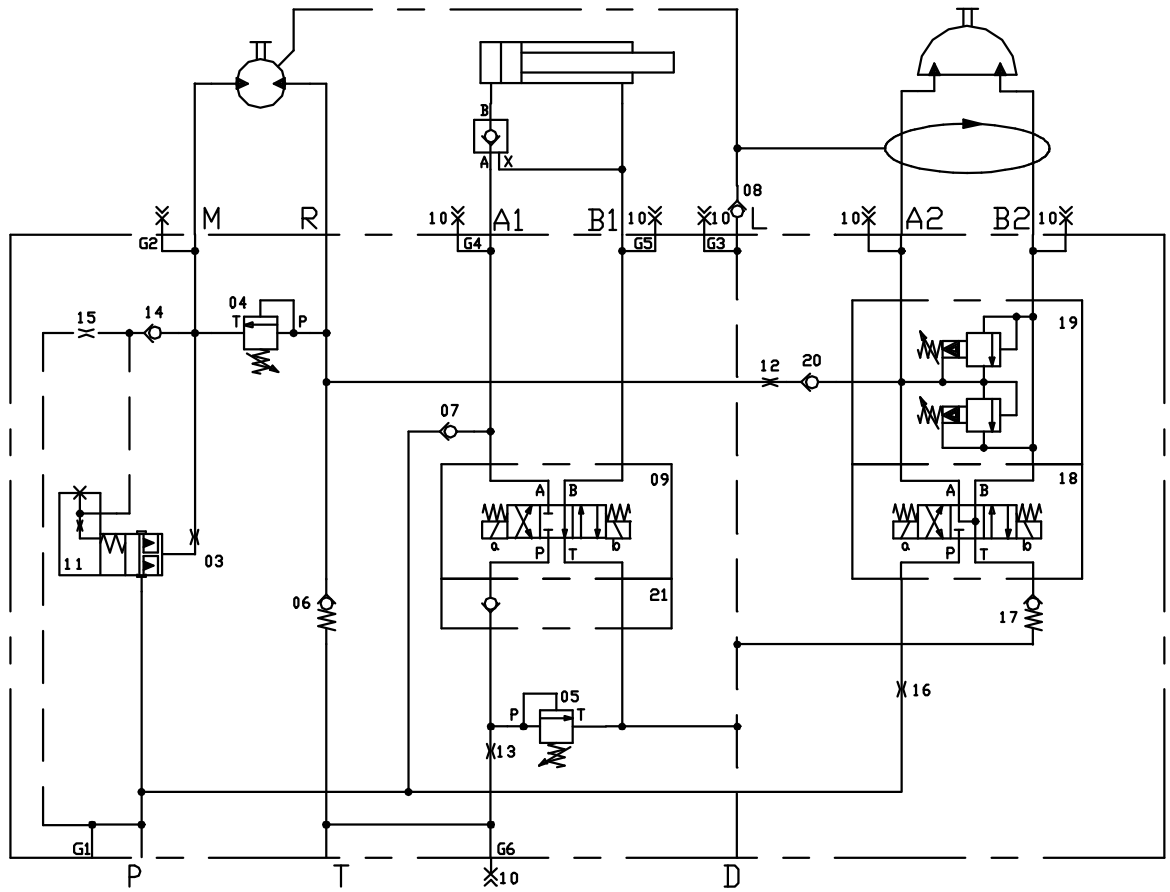


Fig. 4.01

## 5 **OPERATING INSTRUCTIONS**

### 5.1 **CLAMP CYLINDER**

The clamp cylinder operates as follows:

1. First of all make sure the vibrator is not vibrating.
2. A pressure between 200 and 280 bar is required in the return line. To get this pressure in the return line, the excavator operator has to push the control lever to the return side.  
An integrated check valve in the hydraulic manifold makes sure the vibrator is not starting.
3. After this pressure is available, the excavator operator can close or open the clamp cylinder with the remote control.
4. After the clamp cylinder is closed, the operator can start vibrating.  
During vibrating, the close line of the clamp cylinder is connected with the pressure line of the hydraulic motor, so automatically extra oil will be supplied to the clamp cylinder, if required.

#### **Note**

- All clamp bolts must be tight.
- Never start vibrating if the clamp cylinder is not completely closed.
- Do not change the adjustment of the relief valve on the hydraulic manifold. This results in clamp failure. The right adjustment is 280 bar.
- Make sure that the jaws are clean.  
Worn jaws will result in slipping of the sheet pile and overheating of the clamp body which will damage the seals.
- Due to vibration, the connection between the chain and the clamp body will wear.  
Replace the shackle and bolt in time.

### 5.2 VIBRATORY HAMMER

The vibratory hammer operates as follows:

1. Make sure the clamp cylinder is closed.
2. The vibrator starts vibrating after the excavator operator pushes the control lever to the pressure side.
3. Overspeeding the vibrator is secured by a flow control valve. This valve must be adjusted properly by a representative of the qualified Dealer.  
The proper adjustment depends on the hydraulic power of the excavator.

#### Note

- Make sure that the oil level in the vibration case is correct, check the level with the unit in a vertical position.
- All bolt connections, especially on the vibrating part of the unit, must be tight.
- Avoid contact between the elastomers and hydraulic oil.  
Especially the combination of oil and sunshine will shorten the lifetime of the elastomers.
- Never exceed the maximum line pull on the extraction head.  
**Models 230 and 328 : 100kN and Models 428 and 625 : 120 kN,  
Models 5RF and 7RF : 120 kN**
- Always pull as vertical as possible.  
Pulling under a certain angle always results in elastomer failure.
- Do not remove the orifice in the flow control. This can result in overspeeding the hammer and bearing failure.
- Never exceed a bearing temperature of 90 °C.  
The temperature can be measured on the outside of the bearing cover, using a normal contact temperature gage.
- Take special care of the hydraulic hoses. Make sure the connections are clean before connecting.

### 5.3 RF VIBRATORY HAMMER

On excavator mounted vibratory hammer provided with the RF system, the remote control has two rotating knobs. One to operate the clamp, the other to operate the adjustment (see fig. 5.01).

Adjustment of the eccentric torque is only possible when the hydraulic motor of the vibratory hammer is rotating.

The oil required to operate the actuator motor via the valve and the swivel coupler comes from the P-gate of the manifold (see fig. 4.02).

The safety valves for the maximum en minimum values (vibrations maximal or minimal) are set at 150 bar.

The connections between the manifold and the swivel coupler must be joined correctly.

A2 is the maximum adjustment (P1)

B2 is the minimum adjustment (P2)

**ATTENTION!** At stopping the vibratory hammer first set the adjustment to minimum. If disregarded each new start will instantly trigger a vibration. This vibration will be quite noticeable on the excavator as well as on the ground.

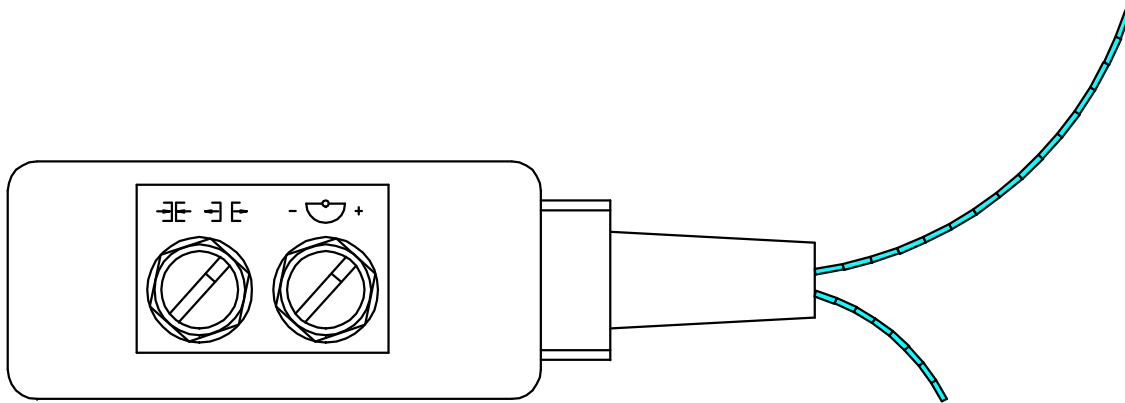


Fig. 5.01

## 5.4 OPERATING UNDER WATER

The following should be adhered to when operating vibratory hammers under water:

- \* Check the transmission case proceeding as follows:
- \* Check the seals and gaskets (O-rings, gasket between vibration case and vibration case adapter).
- \* Check all bolt connections.
- \* Check for possible leakage by bringing the pressure in the transmission case to approx. 0.2 bar excess pressure and by checking with a mixture of water and soap.
- \* Check all hydraulic hoses on leakage.
- \* Check the oil level in the transmission case.
- \* Remove the breather and replace it by a plug.

Should the water depth be less than 10 m, the following should suffice:

- \* Join the transmission case to a compressor and bring the transmission case to 0.5 excess pressure.
- \* Increase the air pressure to 1.0 bar overpressure when the hammer is at 5 m below the water line.
- \* In this way there is a constant excess pressure of min. 0.2 bar and max. 0.5 bar present.
- \* After completing under water working check lubrication oil and when required change it.



### CAUTION

Watch carefully that hammer is not "hot" when lowered or driving through the water surface. This may cause a thermo-shock and damage the bearings.



### CAUTION

Excess pressure of more than 0.5 bar may damage the transmission case.

In case of water depths of over 10 m, always use the air regulation system for under water operation. During these operations regularly check the oil level. If the oil becomes white/grey check immediately for leakage and replace the oil.



### CAUTION

Check lubrication oil regularly during and in any case after completion on water content. Water can also enter the case as condensed from non-dried compressed air.

**Contact TRAMAC for such operations.**

## 6 CLAMP ROTATED 90 DEGREES

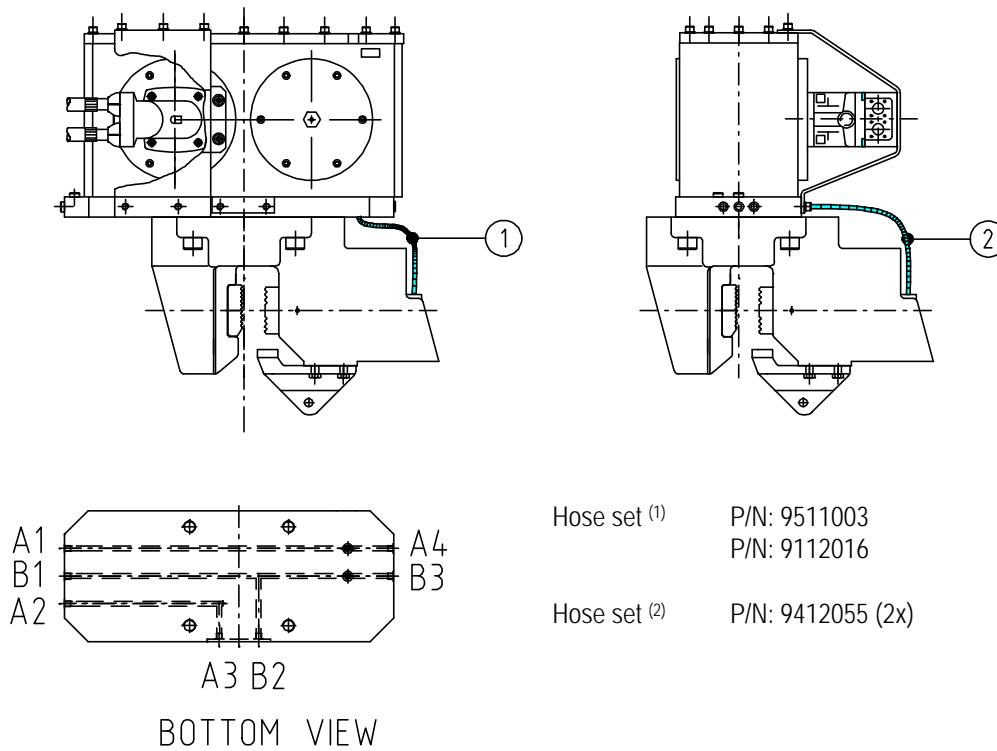


Fig. 6.01

1. Disconnect clamp hose set <sup>(1)</sup> at A4 and B3
2. Remove plugs at B2 and A3 and use them again to close ports at A4 and B3
3. Disconnect clamp hose set <sup>(1)</sup> at clamp and replace with hose set <sup>(2)</sup>
4. Change main clamp hose at A1 with plug at A2
5. Unscrew the 4 bolts M30 (P/N 520.208) which connect the clamp to the hammer, turn clamp 90° and fix clamp again using the same 4 bolts
6. Connect hose set <sup>(2)</sup> to ports A3 and B2

## 7 MAINTENANCE

### 7.1 GENERAL

Preventive maintenance includes normal servicing that will keep the vibrator in good operating condition and will prevent unnecessary trouble.

This servicing consists of periodic lubrication and inspection of the moving parts of the unit.

Lubrication is an essential part of protective maintenance, therefore it is important that the instructions regarding type of lubricants and frequency be closely adhered to.

Clean all lubrication fittings, fillers and level plug and their surrounding surfaces thoroughly, before servicing. Prevent dirt from entering with lubricants.

### 7.2 DAILY MAINTENANCE

1. Check all seals and gaskets on the hydraulic motor, manifold and between the vibration case and the vibration case adapter visually.
2. Check all bolt connections visually.
3. Check all the hoses for leakage and damages.
4. Check the oil level in the vibration case.
5. Grease the plunger in the clamp.
6. Check the condition of the clamp jaws.
7. Visually check all the elastomers.
8. Check the electrical cable between the remote control and the vibrator.
9. Check the connection between the excavator and the rotator.  
Make sure all bolts are locked.
10. Check the chain for handling the sheet piles on wear (especially the connection with the clamp body). In case of wear, change the chain immediately.



### 7.3 WEEKLY MAINTENANCE

- 1 Tighten all bolts on the vibrator and hydraulic clamp (see torque information chart).
- 2 Grease the rotator bearing.
- 3 Check the air breather located in one of the bearing covers, if necessary clean the breather with diesel fuel.

### 7.4 BOLT TORQUE INFORMATION

Torque (in kNm) is determined by the length of the wrench handle (in meters) multiplied by the force (in kN) applied at the end of the handle. For example, if the wrench is 1 meter long and 50 N (5 kgm) of force is applied at the end of the handle, the total torque applied would be 50 Nm (5 kgm).

Proper use of the torque wrench is important. To obtain the listed torque, a steady pull should be exerted to the handle until the desired torque is reached.

### 7.5 VIBRATORS

The following torque specifications apply to the bolts from the component assemblies listed. Whenever any of these bolts are replaced, the given torque specifications should be adhered to. Refer to the table below.

**TORQUE INFORMATION FOR BOLTS SHCS 12.9**

THREAD DIAMETER		TORQUE	
(inches)	(mm)	(Nm)	(lbs.ft)
5/16" - 18	7.94	42	31
3/8" - 16	9.53	70	32
7/16" - 14	11.11	112	83
1/2" - 13	12.70	171	126
5/8" - 11	15.88	324	239
3/4" - 10	19.05	576	425
1" - 8	25.40	1479	1092
1 1/4" - 7	31.75	2028	1497
1 1/2" - 6	38.10	3482	2570
	M8	46	34
	M10	89	66
	M12	150	111
	M16	373	275
	M20	727	536
	M24	1250	922
	M30	1753	1294

8 LUBRICATION INSTRUCTIONS

8.1 VIBRATION CASE

The oil level is easily read through the sight glass, located at the lower centre of the vibration case, opposite of the hydraulic motor.

Lubrication oil may be added when necessary.

Through the vibration case top plate and the oil may be drained by removing the plug at the side of the vibration case base plate.

The most preferred lubrication oil is a synthetic lubricant, since synthetics were designed for applications where service conditions are more severe due to high operating temperatures and they have good oxidation stability.

Synthetics also provide much longer service life than natural mineral lubricants, resulting in fewer maintenance hours spent on the mechanic service of the unit.

**ATTENTION!** Check the grease pump after each 100 operating hours  
Check the filter each year or after each 100 operating hours

The vibration case lubricant installed at the factory is:

**MOBIL SHC 630**

**Oil capacity** : 4 litre

**Oil change interval** : 100 hours

**Minimal oil change** : yearly

	<b>MOBIL SHC-630</b>
Viscosity index	150
Viscosity (mm <sup>2</sup> /s)	218 @ 40°C
	137.6 @ 50°C
	25.9 @ 100°C

Whenever this oil is not available it is allowed to use mineral oil with the following specifications:

MOBIL GEAR 627 or 629 (ISO VG is 100 or 150)

Oil change interval : every **50** hours

Minimal oil change : yearly

## 8.2 CLAMP SYSTEM

In order to protect the plunger of the clamp, the hydraulic clamp has one lubrication point located on the side of the clamp.



**Note :** Grease this plunger daily

Use grease according to NLGI 1.

## 8.3 THE ROTATOR SYSTEM

The rotator is located in the extraction head. The bearing of the rotator needs to be greased weekly.

Use multi-service grease according to NLGI 1.

The grease fitting is located on the front side of the extraction head.

## 8.4 HYDRAULIC FLUID

Rating and performance data of the Volvo hydraulic motor are based on operating with good quality, contamination free petroleum based fluids.

Hydraulic fluids type HLP (DIN 51524) automatic transmission fluids type A can be used.

At operating temperature, the viscosity should normally be kept above 8 mm<sup>2</sup>/S. At start up, the viscosity should not exceed 1000 mm<sup>2</sup>/S. The ideal operating range is 15 - 30 mm<sup>2</sup>/S.

## 9 ORDERING OF PARTS

### 9.1 PROCEDURE

When ordering parts, be sure to include the model and serial number of the unit or component. Confirm all telephone orders immediately to avoid duplicating shipment.

#### 9.1.1 Original equipment

Where serial numbers are given, these numbers only apply to equipment and components originally furnished with the unit. Where equipment has been changed or added to, these numbers may not necessarily apply.

#### 9.1.2 Shipment

State to whom shipment is to be made and method of shipment desired, otherwise our own judgement will be made.

#### 9.1.3 Shortages

Claims for shortages or errors should be made immediately on receipt of parts. No responsibility will be assumed for delay, damage or loss of material while in transit. Broken, damaged or loss of material should be refused or a full description made of damage or loss to the carrier agent on the freight or express bill.

#### 9.1.4 Return of parts

If for any reason you desire to return parts to the factory or to any distributor from whom these parts were obtained, first secure permission to return the parts. Shipping instructions will be given along with this permission.

### 9.2 SCREWS AND BOLTS

Almost all connections on the units are made with socket-head cap (Allen) screws. These high-strength screws are available at most industrial supply houses. Screws and bolts are designated in the PARTS LIST in abbreviated form (see below). The information, in parenthesis, immediately following the bolt or screw designation shows the size as follows:

1/2 - 13 x 1 1/2 → 1/2" Diameter, 13 Threads Per Inch, 1 1/2" Length



**Note:** Some screws or bolts require a specific torque when replacing. For identification of these bolts and a more thorough understanding of torque, refer to section 7.5.

#### **ABBREVIATIONS USED**

BHCS	Button Head Cap Screw
FHCS	Flat Head Screw Cap
FLCS	Flanged Head Screw Cap
HC	High Collar
HHCS	Hex. Head Cap Screw
HHP	Hex. Head Pipe Plug
HSSS	Hex. Socket Set Screw
PHMS	Phillips Head Machine Screw
RHMS	Round Head Machine Screw
SHCS	Socket Head Cap Screw
SHPP	Socket Head Pipe Plug
SHSS	Socket Head Shoulder Screw

9.3 HOSES

EXAMPLE OF HOSE DESIGNATION

	a	b	c	d	e	f	g	h	i	j
HOSE	125	R01	F	9	24	P	O	20	L0395	S

- a. HOSE I.D. (*3 digits*) (125=1 1/4") (050=1/2"), etc.  
In inches; 2 place decimal
- b. SAE or MANUFACTURER RATING (*3 digits*)  
(PT4 = Power Track)  
(R01 = SAE Rating 100R1), etc.
- c. FIRST END - TYPE OF FITTING (*1 digit*)  
(F = 3000 PSI Flange) (P = NPT-male)  
(H = 6000 PSI Flange) (M = JIC-male)  
(J = JIC-female swivel), etc.
- d. FIRST END - BEND ANGLE (*1 digit*)  
(0) = None) (3 = 30°) (9 = 90°), etc.
- e. FIRST END - SIZE (in 1/16TH) (*2 digits*)
- f. SECOND END - TYPE OF FITTING (*1 digit*)  
(See codes for first end)
- g. SECOND END - BEND ANGLE (*1 digit*)  
(See codes for first end)
- h. SECOND END - SIZE (in 1/16th) (*2 digits*)
- i. LENGTH  
In inches; 1 place decimal  
(0395 = 39 1/2") (1240 = 124"), etc.
- j. SPECIAL CODES  
(0 = None)  
(S = Spring Guard)  
(L = S.S.Braid)  
(D = Offset)

## 9.4 FITTINGS

EXAMPLE OF FITTING DESIGNATION

	a	b c	d	e	f	g	h i	j	k	l	m
FITT	2	L - 16	M	12	J	00	0 - 00L	0	0	0	1

- a. SELECTOR INDEX  
2: inch fittings  
9: metric fittings
- b. CONFIGURATION OR SHADE OF FITTING  
S: straight fitting                      C: Cap  
L: 90° elbow                                P: Plug  
V: 45° elbow                                U: Union, pipe  
T: Tee                                         X: Cross (fourth end fitting required)
- c. FIRST END SIZE  
in sixteenth of an inch (index 2)\*\*  
in millimetres (index 9)
- \*\* Exceptions:    90 = 10"                      94 = 14"                      98 = 8"  
                          92 = 12"                      96 = 6"                      99 = non code size
- See general specification sheet for sequence of order.
- d. FIRST END FITTING STYLE  
See fitting style selector chart.
- e. SECOND END SIZE  
If applicable. See first end size.
- f. SECOND END FITTING STYLE  
If applicable. See first end fitting style.
- g. THIRD END SIZE  
If applicable. See first end size.
- h. THIRD END FITTING STYLE  
If applicable. See first end fitting style.
- i. LENGTH CODE  
(pipe nipples (long) only, in decimal inches for index 2)  
050 = 5.0 inches  
105 = 10.5 inches  
in millimetres for index 9  
120 = 12.0 inches  
084 = 8.4 inches

FITTINGS CHART

 
 

 



 
 



 
 
 
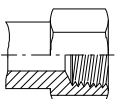
 
 
 
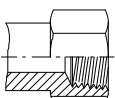
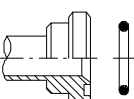
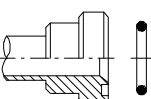
M		JIC MALE 37° FLARE	J		JIC FEMALE SWIVEL 37° FLARE
B		JIC MALE BULKHEAD 37° FLARE	T		BSP FEMALE SWIVEL
S		BSP MALE	G		BSP FEMALE
D		NPTF MALE SWIVEL	N		NPTF FEMALE SWIVEL
P		NPTF MALE	Q		NPTF FEMALE
R		UNF MALE (SAE)	K		UNF FEMALE SWIVEL (SAE)
A		METRISCH MALE (L)	V		METRISCH FEMALE SWIVEL (L)
U		METRISCH MALE (O-RING) (L)	W		METRISCH FEMALE (L)
C		METRISCH MALE (S)	Y		METRISCH FEMALE SWIVEL (S)
X		METRISCH MALE (O-RING) (S)	Z		METRISCH FEMALE (S)
F		FLANGE COUPLING (standaard)	H		FLANGE COUPLING (high pressure)

Fig. 9.01

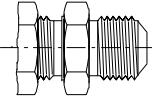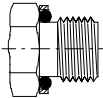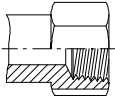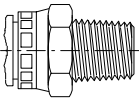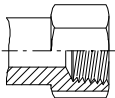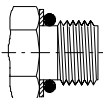

LENGTH CODE

(elbows/nipples)

OOL - long (elbow)                      OOC - close (nipple)

OOX - extra long (elbow)              OOS - short (nipple)

FOURTH END SIZE and FOURTH END FITTING STYLE

(crosses only)

See first end fitting size or end style.

j. INSTALLATION AID OR STYLE OF HEAD

O : not applicable

H : regular hex.

W : wide or large hex.

Q : square head (ext.)

R : square head (int.)

S : hex. head (int. socket)

T : hex. head (ext.)

k. PRESSURE RATING

0: not applicable

1: 125 lb

3: standard weight (40)

4: extra heavy (80)

l. SPECIAL NOTATIONS

0 : none

A : tapped hole in fitting

B : orifice

F : special fab., non-stock item

G : galvanised

M : magnetic

m. MATERIAL

1 : carbon steel

2 : brass

3 : cast brass

4 : stainless steel

5 : A.A.R. mal. iron

6 : malleable iron

7 : cast iron

8 : forged steel

9 : aluminium

Also refer fittings chart (see fig. 9.01)

10 DIAGRAM

