



AURA



AURA™ R1 by Motorola
Quick Start Guide

W E L C O M E

AURA™ R1 by Motorola was born out of a desire to question everything about what a mobile phone could be. Quality materials and exquisite engineering give **AURA** a substantial heft and rock-solid feel. Its form takes inspiration from the enduring beauty of classic watch faces. As the phone wakes, witness the interplay of millions of colors wreathed by a halo of sapphire crystal.

- Getting started with your phone easily is important. So this guide covers the basics of what you need to know, including how to quickly transfer your contacts to the phone (page 16), personalizing your home screen (page 18), and using text messaging features (page 24).
- With an exclusive and dedicated owner's Web portal, you have access to online materials, just for you. Register your phone for instant access to: view tutorials, download User's Guides, watch videos, and more. Just visit www.motorola.com/myAURA
- Want to talk to someone? We have a number of dedicated priority support lines around the world. See page 31 to find the support number for your region.
- Caring for your phone is much like that treasured piece of jewelry, so we've designed a care guide to help you keep your phone beautiful and functioning properly (page 6).

For mobile help information, use Help found directly on your phone. Press **Menu**
> Office Tools > Help.

Note: Before using the phone for the first time, review the *Important Safety and Legal Information* guide included in the box. Periodically review this information so you remember how to safely use your phone.



Tip: Press the **Menu** right soft key from the home screen to open the main menu.

CONTENTS

MENU MAP	4	PERSONALIZE	18
Cleaning	6	Clock Style	18
Shock	6	Wallpaper	18
Temperature	7	Screensaver	18
Avoid Contact	7	Home Screen Shortcuts	19
GET STARTED	8	CAMERA	20
Insert Your SIM Card	8	Take a Photo	20
Insert the Battery	9	Apply Photo to Contact	21
Charge the Battery	9	Camera Settings	21
Extend Battery Life	10	View & Use Photos	23
Open & Close the Blade	10	TEXT MESSAGES	24
Turn Phone On & Off	11	Send a Message	24
Make a Call	11	Receive a Message	25
Answer a Call	11	MUSIC	26
End a Call	11	Introduction	26
Store a Phone Number	11	Set Up Music	26
Call a Stored Number	11	Play Music	27
Your Phone Number	12	Use Bluetooth® Stereo Headphones ..	28
Display	13	Close the Music Player	29
Shortcuts	15	ACCESSORIES	30
VUFONE SERVICE	16	SUPPORT	31
Introduction	16	SAR Data	33
Register for vufone Service	16	EU Conformance	34
Move Files from Your		OSS Information	35
Old Phone to Your AURA	16		

Main Menu

Contacts

Recent Calls

Camera

Settings

- (see next page)

Web Access

- Browser
- My Bookmarks
- My Web Pages
- History
- Go to URL
- Browser Setup

Calendar

Office Tools

- World Clock
- Help
- vufone
- Motorola SETUP
- Alarm Clock
- Calculator
- Sync
- Download Manager
- File Manager
 - Extended Memory
 - Music and Sounds
 - Pictures
 - Videos
 - Voice Notes
- Application Downloads
- Unrecognizable Files
 - My Documents
- Dialing Services
- Task List
- Notes

Multimedia



- Media Finder
- Games
- Camera
- Video Camera
- Voice Recorder
- Pictures
- Videos

Messages

- Create Message
- Inbox
- My Folders
- Templates
- Drafts
- Outbox
- Email
- Call Voicemail

This is the standard main menu layout.

Your phone's menu may be different.

Tip: Press  to back out of the current menu, or press  to exit menus.

Settings Menu

- **Profiles**
- **Themes**
- **Home Screen**
 - NavKey Shortcuts
 - Change Wallpaper
 - External Clock Style
- **Connections**
 - Bluetooth®
 - USB Setting
 - Media Synchronization
 - Extended Memory
 - Modem
 - USB Printing
 - Voice Networks *
 - Data Connections
 - Add a Connection
 - Edit a Connection
 - Remove a Connection
- **Call Settings**
 - Speed Dial
 - Call Forward
 - In-Call Setup
 - Hearing Aid
 - In-Call Timer
 - Answer Options
 - In-Call Message Alert
 - Roam Alert
 - Call Waiting
 - Auto-Redial
 - Call Drop Tone
 - Dialing Setup
 - My Caller ID
 - DTMF
 - Dialing Prefix
 - Call Barring *
 - Fixed Dialing
 - My SIM Number
 - Active Line *
- **Phone Settings**
 - Display Settings
 - Display Timeout
 - Screensaver
 - Brightness
 - Airplane Mode
 - Battery Meter
 - Time & Date
 - Language
 - **(continued next column)**
- **Phone Settings (continued)**
 - Talking Phone
 - Text Entry
 - Reset
 - Reset All Settings
 - Delete All Data
 - Delete Memory Device
 - View Memory
 - Properties
 - Legal Notices
 - Java™ System
 - OTA Updates
 - Headset Settings
 - Auto-Answer
 - Voice Dial
 - TTY Settings *
- **Security**
 - Phone Lock
 - Application Lock
 - SIM Lock
 - Change Passwords
 - Certificates
- **Network**
 - Current Network
 - Scan Available Networks
 - Find New Network
 - My Network List
 - Search Setup
 - Service Tone

* optional features

C A R E G U I D E

Your **AURA** is a highly valuable mobile device with a superior design, and should be treated with care. This section provides some basic recommendations to protect it. Proper maintenance of your phone will ensure an extended life.

Cleaning

Use the provided soft micro-fiber cleaning cloth to clean your phone. Wrap the cloth around the device, and apply light pressure in a circular motion to clean the sapphire crystal lens, the main stainless steel housing and battery door, and the polished edges. This will remove dust, grease, oil, make-up, and any other residue that may have been deposited as a result of the normal use of your phone. Repeat as needed.

Use pressurized air or a soft toothbrush to gently clean the speaker and earpiece gaps. **AURA's** rotator mechanism is sealed and has been carefully designed. There is no need to clean the rotator mechanism. Do not attempt to open the device other than as instructed in this guide, as this could damage the phone's operation. Please contact an **AURA** service representative should you need further information or assistance.

Important Note: Never use liquid cleaners, as they can damage the phone's electronic circuits and protective coatings. **AURA** is not water resistant, and you should avoid contact with liquids.

Shock

We recommend you use the provided leather carrying case to protect your phone at all times. The sapphire crystal lens and stainless steel components are highly scratch resistant, but take care not to expose the phone to hard or abrasive materials and high impact activities or sports.

Temperature

Try to avoid exposing your **AURA** to severe temperatures for extended periods of time. Extreme heat tends to shorten the battery life, while extreme cold can cause the electronic circuits to stop working accurately.

Avoid Contact

Do not expose **AURA** to any liquids. Avoid contact with chemicals, solvents, or gases as these may cause discoloration, deterioration, or other forms of damage to your phone. **AURA** is not made to withstand extreme electric fields or static electricity. However, common household appliances do not pose a threat to your phone.

 
Remember that your **AURA** will last longer if you take proper care of it.

Insert Your SIM Card


Your *Subscriber Identity Module* (SIM) card stores your phone number and other information.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


1

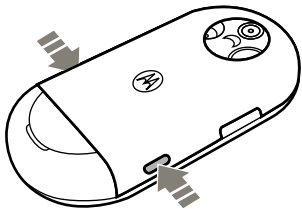

2

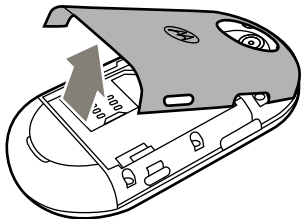 


3

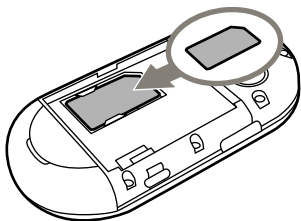 


Insert the Battery

 1

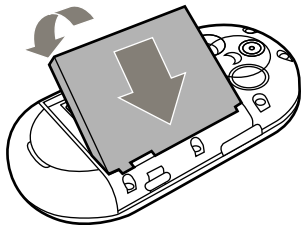


2

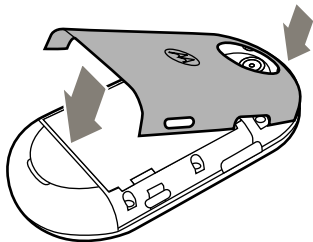 

Charge the Battery

Note: For battery use and battery safety information, see your phone's *User's Guide* at www.motorola.com/myAURA.

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. The battery charge indicator light on your phone shows when the battery is charging. The display shows **Charge Complete** when finished.

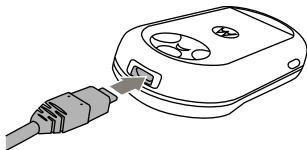


Extend Battery Life

- Avoid excessive and unnecessary opening and closing of the blade, as each rotation activates the display.
- Turn off **Bluetooth®** power when you're not using it: Press **Menu** > **Settings** > **Connections** > **Bluetooth**, press **Options** > **Setup Bluetooth** > **Bluetooth Power** > **Off**.
- Set your **display** to turn off sooner: Press **Menu** > **Settings** > **Phone Settings** > **Display Settings** > **Display Timeout** > **5 Seconds**.
- Turn off your **screensaver**: Press **Menu** > **Settings** > **Phone Settings** > **Display Settings** > **Screensaver** > **Off**.
- Reduce the display **brightness**: Press **Menu** > **Settings** > **Phone Settings** > **Display Settings** > **Brightness**, and select a lower number setting.

Open & Close the Blade

 
Slide the blade left or right to open. Slide the blade in the opposite direction to close.

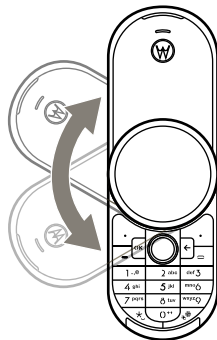


Close the blade on the same side you opened it. For example, if you slide the blade clockwise to open, slide it counter-clockwise to close.


Note: Repeatedly opening and closing the blade can inadvertently answer and end an incoming call, resulting in a missed call.

Turn Phone On & Off

 Open the blade, then press and hold the **power/end key**  until the display turns on or off.

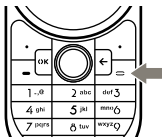


Make a Call

Open the blade, then enter a phone number and press the **send key** .

Tip: To **voice dial** a call, see your phone's *User's Guide* at www.motorola.com/myAURA.

Answer a Call

When your phone rings and/or vibrates, open the blade or press  to answer.

End a Call

To hang up, close the blade or press .

Store a Phone Number

You can store a phone number in your **Contacts** list.

- 1 Enter a phone number in the home screen.
- 2 Press **Save**.
- 3 Enter a name for the phone number.
- 4 Press **Save** to store the contact.

Tip: To learn more about storing phone numbers and email addresses on your phone, see your phone's *User's Guide* at www.motorola.com/myAURA.

 
Call a Stored Number

To call a phone number stored in your **Contacts** list:

From the home screen, press keypad keys to enter the first letters of the contact name (one keypress per letter). The phone shows the contact name(s) that match your

keypresses. For example, if you press the letters d-a-n, your display might show:

Press the letters d-a-n
(keypad keys **3**-**2**-**6**).

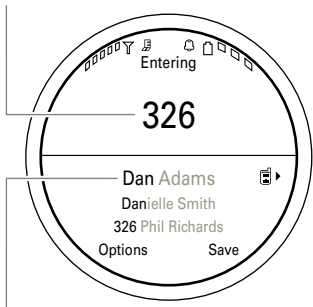

Press **⬆** up/down to scroll to the contact you want. Press **☎** to call.

Note: If you've got contacts stored on your SIM card, but the contacts aren't visible when you open the contact list, you need to copy the contacts into phone memory. Press **Menu** > **☰** **Contacts**, press **Options** > **Import Contacts** > **SIM Card**, press **Options** > **Select All**, then press **Import**.

Your Phone Number

To see your phone number:

 
Find it: **Menu** > **⚙** **Settings** > **Call Settings** > **My SIM Number**

To see your phone number while you're on a call, press **Options** > **My Telephone Number**.


To store or edit your name and phone number on your SIM card, select the field you want to edit. If you don't know your phone number, contact your service provider.


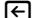 

Display

The *home screen* appears when you turn on the phone.

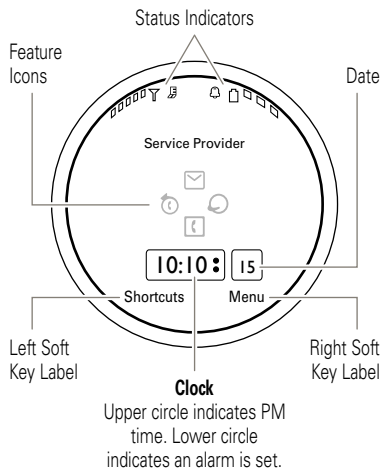



Note: Your home screen may look different, depending on your service provider.

To dial a number from the home screen, press number keys and .

 
From the home screen, press the **Menu** soft key or  to open the main menu. When a menu is open, press  to go back one menu. Press  to exit all menus and return to the home screen.


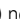 
Press **Shortcuts** to access some frequently-used phone features.

Press the *navigation key*  up, down, left, or right in the home screen to open basic features. To show, hide, or change feature icons in the home screen, see page 19.

Tip: Want some help? Press **Menu** >  **Office Tools** > **Help**. Select a **Help** topic to find information about phone features.

Status indicators appear at the top of the home screen:

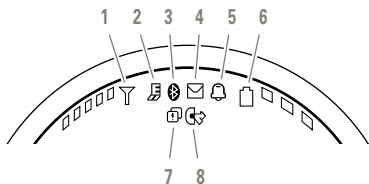


- 1 Signal Strength Indicator** – Vertical bars (one to five) show the strength of the wireless network connection.
- 2 EDGE/GPRS Indicator (Network/subscription-dependent feature)** – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) network connection , or *General Packet Radio Service* (GPRS) network connection .






- 3 Bluetooth® Indicator** – Shows Bluetooth status:



blue = power on
green = connected
flashing blue = discoverable





- 4 Message Indicator (Network/subscription-dependent feature)** – Shows when you receive a new text message. Other indicators can include:


 = voicemail message  = email message

- 5 Alert Style Indicator** – Shows the alert style setting:

 = ring only  = ring and vibrate
 = vibrate only  = vibrate then ring
 = silent


- 6 Battery Level Indicator** – Vertical bars (one to three) show the battery charge level. Recharge the battery when your phone shows **Low Battery**.
- 7 Missed Event Indicator (Network/subscription-dependent feature)** – Shows when you have missed calls or unread messages.
- 8 Active Line Indicator (Network/subscription-dependent feature)** – Shows  to indicate an active call, or  to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:

 = line 1 active  = line 2 active
 = line 1 call forward on  = line 2 call forward on

When you set an alarm, the alarm indicator  appears in place of the active line indicator.

Shortcuts

Your phone provides shortcuts to some frequently-used features. You can use the following shortcuts from the home screen.

To...	Do this...
view missed call and message notifications	Press Shortcuts > View Notifications.
take a picture	Press Shortcuts > Take Picture.
set an alarm	Press Shortcuts > Set Alarm.
change clock style (blade closed)	Press Shortcuts > Clock Style.
go to the dialed calls list	Press  .

Note: The **Shortcuts** list on your phone may include additional shortcuts or different shortcuts, depending on your service provider.

Introduction

Note: Network/subscription-dependent feature

You can use the vufone service to easily transfer contacts from your previous phone to your new **AURA**, while maintaining a safe copy of the information on a personal and protected Web portal.

Register for vufone Service

Find it: Menu >  Office Tools > vufone

vufone prompts you to accept the service terms and conditions. You'll need to accept the terms and conditions to register your phone. When you register, vufone sends you a text message with your service password.

To complete the registration process, use your computer browser to go to the vufone website at www.vufone.com. Your account **username** for logging on to the service is your international country code and phone number.

Move Files from Your Old Phone to Your AURA

Use vufone to move contacts, calendar, photos, videos, and music from your old phone to your new phone.

- 1 Insert your SIM card into your old phone.
- 2 On your computer, log onto the vufone Web site at www.vufone.com.
- 3 Select Download Mobile Application to send the vufone application to the old phone in a text message.
- 4 When you receive the text message on the old phone, select the link in the message to download, and install the vufone application on the phone.
- 5 Open the vufone application on the old phone, then press **Options > Settings** to select the types of content you want to back up.
- 6 Select **Backup** to upload the selected files to your vufone Web portal.


- 7 Remove the SIM card from the old phone and insert it in your new **AURA**.
- 8 Open the vufone application on your new phone, and select **Restore** to transfer the files to the new phone.

For a complete list of supported mobile devices, please see www.vufone.com.

For more information about using vufone features, see your phone's *User's Guide* at www.motorola.com/myAURA.

Clock Style


Change the clock style that appears in the display when the blade is closed:

Find it: Menu >  Settings > Home Screen > External Clock Style > *clock style*


Shortcut: From the home screen, press Shortcuts > Clock Style.

Wallpaper

Change the background *wallpaper* image that appears in the home screen when the blade is open:


Find it: Menu >  Settings > Home Screen > Change Wallpaper > Wallpapers & Graphics > Preloaded Wallpaper, scroll to an image, press Select

To apply a **photo** as a wallpaper image:

Find it: Menu >  Multimedia > Pictures > Captured Pictures, scroll to the photo, press Options > Apply to > Wallpaper

Screensaver


Change the screensaver image that appears in the display when the blade is open, after a period of inactivity:

Find it: Menu >  Office Tools > File Manager > Pictures > Graphics and Wallpapers > Preloaded Wallpaper, scroll to an image, press Options > Apply to > Screensaver


Tip: To extend battery life, turn off the screensaver.

Home Screen Shortcuts

Note: Network/subscription-dependent feature


From the home screen, you can press the *navigation key*  up, down, left, or right as shortcuts to your favorite features. You can change the shortcuts to suit your needs.


To **change** navigation key shortcut icons in the home screen:

Find it: Menu >  Settings > Home Screen > NaviKey Shortcuts > Left, Right, Up, or Down


Select a direction, then choose the feature you want to open when you press the navigation key in that direction.

To **show or hide** navigation key shortcut icons in the home screen:

Find it: Menu >  Settings > Home Screen > NaviKey Shortcuts > Icon Display > Show or Hide

 
Note: You can press  to select the features in the home screen even when the icons are hidden.

Take a Photo


Find it: Menu >  Camera

Shortcut: From the home screen, press Shortcuts > Take Picture.


The phone display acts as the camera *viewfinder*.

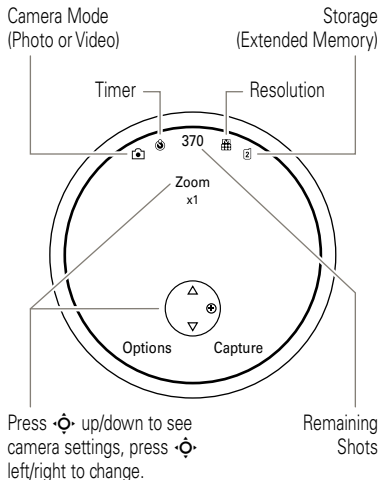


 
Note: Because of your phone's round display, the viewfinder doesn't show the edges of the rectangular image that is captured when you take a photo.

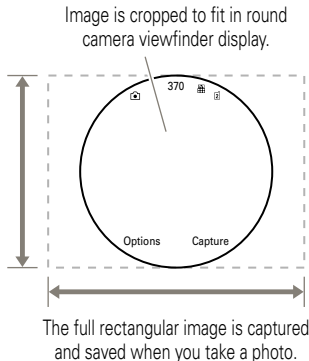


Use the viewfinder to compose your scene, then press **Capture** to take the photo.

 - To store the photo, press .
- Network/subscription-dependent feature:** To send the photo in a message, press **Send**.

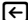
- To discard the photo, press .
- To select other photo options, press **Options**. You can choose to **Save Only**, **Discard**, **Send to** (message, email, or Bluetooth connection), **Apply to** (wallpaper, screensaver, new or existing contact), **Edit**, or **Print via** (Bluetooth connection or USB connection).

Note: If the auto-save feature is activated, your phone automatically saves the photos you take. In this case, you'll need to manually navigate to the stored photo to view, use, or delete it. To go to the photo, press **Menu** >  **Multimedia** > **Pictures** > **Captured Pictures** > *photo*.



 
Tip: To send your photo in a message, set the picture resolution to **Thumbnail**, **Small**, or **Medium**. To set resolution, press **Menu** >  **Camera**, press **Options** > **Camera Settings** > **Picture Settings** > **Resolution**.


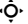 
Apply Photo to Contact


Assign a photo to a contact stored in your contact list. The photo appears as a background image for the contact, and shows in the display when you receive a call from the contact.

Find it: **Menu** >  **Multimedia** > **Pictures** > **Captured Pictures**, scroll to the photo, press **Options** > **Apply to** > **Existing Contact** > *contact*, press **Save**

Camera Settings

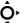When the camera viewfinder is active, you can use the navigation key  to adjust the following camera settings. Press  up or down to scroll to a setting, then press  left or right to change it:

settings	
Zoom	Press  right to zoom in, press left to zoom out.
Styles	Press  left/right to select Color , Black & White , Antique , Negative , Reddish , Greenish , or Bluish .

settings	
Scene	Press  left/right to select Automatic , Night , or Manual .
Tag	Select a predefined text tag to apply to the photo(s) you take. (To create a tag, press Options > Camera Settings > Tag > Create New Tag).

When the camera viewfinder is active, press **Options** to select these camera options:




options	
Capture	Take a photo.
Go To My Media	See, edit, and delete stored pictures and photos.
Video Mode	Switch to the video camera.
Auto-Timer	Set a timer for the camera to take a photo.
Multi-Shot	Set the camera to take multiple photos in sequence.

options	
Camera Settings	Customize camera settings: <ul style="list-style-type: none"> • Review Time • Tag • Default Name • Storage Location • Auto Save • Auto Send • Message Recipients • Picture Settings <ul style="list-style-type: none"> • Resolution • Shutter Tone • Quality • Video Settings <ul style="list-style-type: none"> • Resolution • Capture Tone • Quality • Video Length

View & Use Photos

Find it: Menu >  Multimedia > Pictures
> Captured Pictures > *photo*

Note: Because of your phone's round display, you won't see the edges of the rectangular photo when you view the photo in full screen mode.


To **rotate** the photo clockwise/counter-clockwise, press  up/down. To go to the **previous/next** photo, press  left/right. To toggle between **complete/cropped** (full screen) photo views, press  or Full Scrn.

Press **Options** to edit, print, send, apply, or delete the photo.

Send a Message

Note: Network/subscription-dependent feature



A message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message and put text and media objects on each page. You can send a message to other compatible phones or to email addresses.



Find it: Menu >  Messages
> Create Message


- 1 Press keypad keys to enter text on the page (to enter text, see your phone's *User's Guide* at www.motorola.com/myAURA).

To insert a **picture, sound, or other media object** on the page, press **Options > Insert**. Select the file type and the file. (**Note:** File size restrictions may apply to pictures and videos sent in a message.)

To insert **another page**, press **Options > Insert > Page**. You can enter more text and objects on the new page.


- 2 When you finish the message, press **Options > Sending Options** to set message options (such as **Subject** and **Priority**).
- 3 When you finish setting message options, press **Done**.
- 4 Press **Send To** to select message recipients. You can:
 - Select one or more entries from your contact list (press  to scroll to an entry, and press  to select it).
 - Enter a new number or email address (press **Options > Enter Number** or **Enter Email**).
- 5 Press **Send** to send the message.
To save or cancel the message, press **Options > Save to Drafts** or **Cancel Message**.

Messages that you send are stored in the **Outbox**. Icons next to each message show if the message was **sent** , if the send attempt was **successful** , or if the send

attempt **failed** . Press **Options** to perform various operations on a message.

Receive a Message

Note: Network/subscription-dependent feature

When you receive a message, your phone plays an alert and shows **New Message**. The text message indicator  appears at the top of the home screen.

To **read** the message, press **View**. If the message contains media objects:

- Pictures and animations show as you read the message.
- Sound files play as you read the message. Press the volume key on the side of your phone to change the sound volume.
- Attached files are added to the end of the message. To open an attachment, select the file indicator or file name.

To **answer** the message, press **Options**
> **Reply**.

Introduction

Copying and syncing music between your phone and computer is easy, with Microsoft™ Windows™ Media Player 11.

Note: The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Set Up Music

To **load song files from a music CD** onto your computer:

- 1 Insert the music CD in your computer's CD drive.
- 2 Open Windows Media Player 11.
- 3 Copy the music CD to the media player library (also called *ripping* the CD).

If your computer is connected to the Internet, the media player may retrieve CD information, such as song titles, album name, artist name, and album artwork. This information will display in your phone's music player.

Tip: You can also purchase Microsoft™ Windows Media DRM-protected music files from supported on-line music stores (such as Urge, Yahoo!, and Napster).

For more information about creating a music library on your computer, see your phone's *User's Guide* at www.motorola.com/myAURA.

Get Music

Note: You'll need Windows Media Player 11 to synchronize music files as described in this section. Using previous versions of Windows Media Player may compromise your music experience. You can download Windows Media Player 11 at www.microsoft.com/windowsmedia.


Note: Windows Media Player 11 requires Windows XP™ or later to run. If you are using an earlier version of Windows OS on your computer, see your phone's

User's Guide at www.motorola.com/myAURA for instructions on how to manually transfer music to your phone.

Note: You cannot use Windows Media Player 11 to copy pictures or videos to the phone.

On Your Phone

Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **Media Synchronization**

Attach a Motorola Original USB cable to the micro USB port on your phone and to an available USB port on your computer. A  Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.


Note: Some phone functions are temporarily unavailable when a USB connection is active.

On Your Computer

Open Windows Media Player 11. Your phone appears in the upper right corner of the Windows Media Player 11 screen. The phone's music files are listed on the left side of the screen.

- 1 Select the Sync tab in Windows Media Player 11.
- 2 Drag and drop songs or playlists onto the Sync List on the right side of the Windows Media Player 11 screen.
- 3 Click Start Sync to copy the songs onto the phone.
- 4 When you finish, disconnect your phone from the computer.

 
Play Music

Find it: **Menu** >  **Multimedia** > **Media Finder** > **Music Library** > *category* > *song name*

You can select a song or playlist from these categories: **Recently Played**, **Shuffle Songs** (play all songs in random order), **All Songs**, **Playlists**, **Artists**, **Albums**, **Genres**, or **Composers**.

Tip: Use the phone's built-in speaker to play your music out loud. Use wireless stereo headphones or a wired headset to enjoy your music in private.

When a song or playlist starts to play, use the following keys to control song playback:

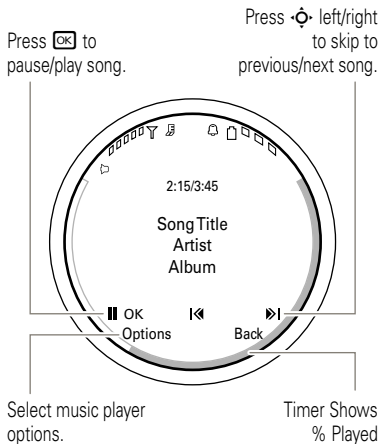


During a song, the music player shows the song title, artist, album, and artwork, if available.

For more information about playing music on your phone, see your phone's *User's Guide* at www.motorola.com/myAURA.

Use Bluetooth® Stereo Headphones

Optional accessory required: Connect your phone with optional Bluetooth stereo headphones to listen to music stored on your phone.


To connect your phone to a set of Bluetooth stereo headphones for the first time, make sure the headphones are **on** and **ready** in *pairing* or *bonding* mode (to put the headphones in *pairing/bonding* mode, see the user's guide for the device).

Find it: Menu >  Settings > Connections > Bluetooth, press Options > Search For Device > Headset

 
Your phone lists the Bluetooth audio devices it finds within range.

- 1 Scroll to the stereo headphones in the list.
- 2 Press **OK** to connect with the stereo headphones.

Close the Music Player

From the music player screen or home screen, press  to close the music player.

ACCESSORIES

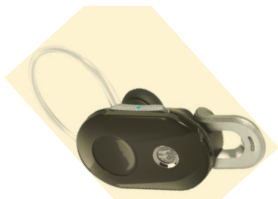

H15 Bluetooth® Headset



EQ7 Bluetooth® Stereo Speaker



**T505 Bluetooth®
Handsfree Car Kit/Speakerphone**



S9 Bluetooth® Stereo Headphones

To see more accessories, visit www.motorola.com/myAURA

S U P P O R T

Please contact the nearest **AURA** service representative if you need any information or assistance with your **AURA** phone. We're here to help.

Argentina: 0800 666 86 76

Brazil: 4002 1244 / 0800 773 12 44

Chile: 0800 201 442

Columbia: 1 800 700 15 04

France: 0800 50 8679

Greece: 00 800 4412 8148

India: 18002001112

Italy: 800 905 662

Mexico: 01 800 021 00 00

Paraguay: 009 800 542 00 30

Philippines: 1800 1651 0415

Russia: 800 200 5051

Singapore: 1800 2266226

Switzerland: 0800553110

Thailand: 02 3518666

Australia: 1300 652545

Canada: 888-223-5933

China: (86) 400818 6699

Ecuador: 1 800 10 20 20

Germany: 0800 664 8249

Hong Kong: (852) 2506-3888

Indonesia: 021 5754533

Malaysia: 1800 806 008

New Zealand: 0508 668 676

Peru: 0800 52470

Puerto Rico: 866 433 16 20

Saudi Arabia: 920029466

Spain: 900 900 624

Taiwan: 886-2-8512 6222

Ukraine: 800 50 404 50

S U P P O R T

United Arab Emirates: 04-3938877

United States of America: 888-223-5933

Venezuela: 0 0800 100 42 89

Vietnam (Ho Chi Minh): 08 9144146

United Kingdom: 0800 678 3698

Uruguay: 00 04 01 78 70 11

Vietnam (Hanoi): 04 9331080

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests

are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.43 W/kg, and when worn on the body, as described in this user guide, is 0.76 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.76 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

 
1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

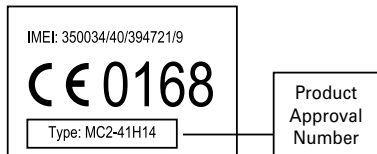

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at


www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

OPEN SOURCE SOFTWARE INFORMATION

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA, INC.
OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source. Motorola has created the opensource.motorola.com to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please select **Menu >  Settings > Phone Settings > Legal Notices**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc. iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved. All other product or service names are the property of their respective owners.

© 2008 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68000201745-A

www.motorola.com

