




OUTDOOR STORAGE

OUTDOOR STORAGE BUILDING

OWNER'S MANUAL

MODEL 6424

30" OUTDOOR STORAGE EXTENSION KIT

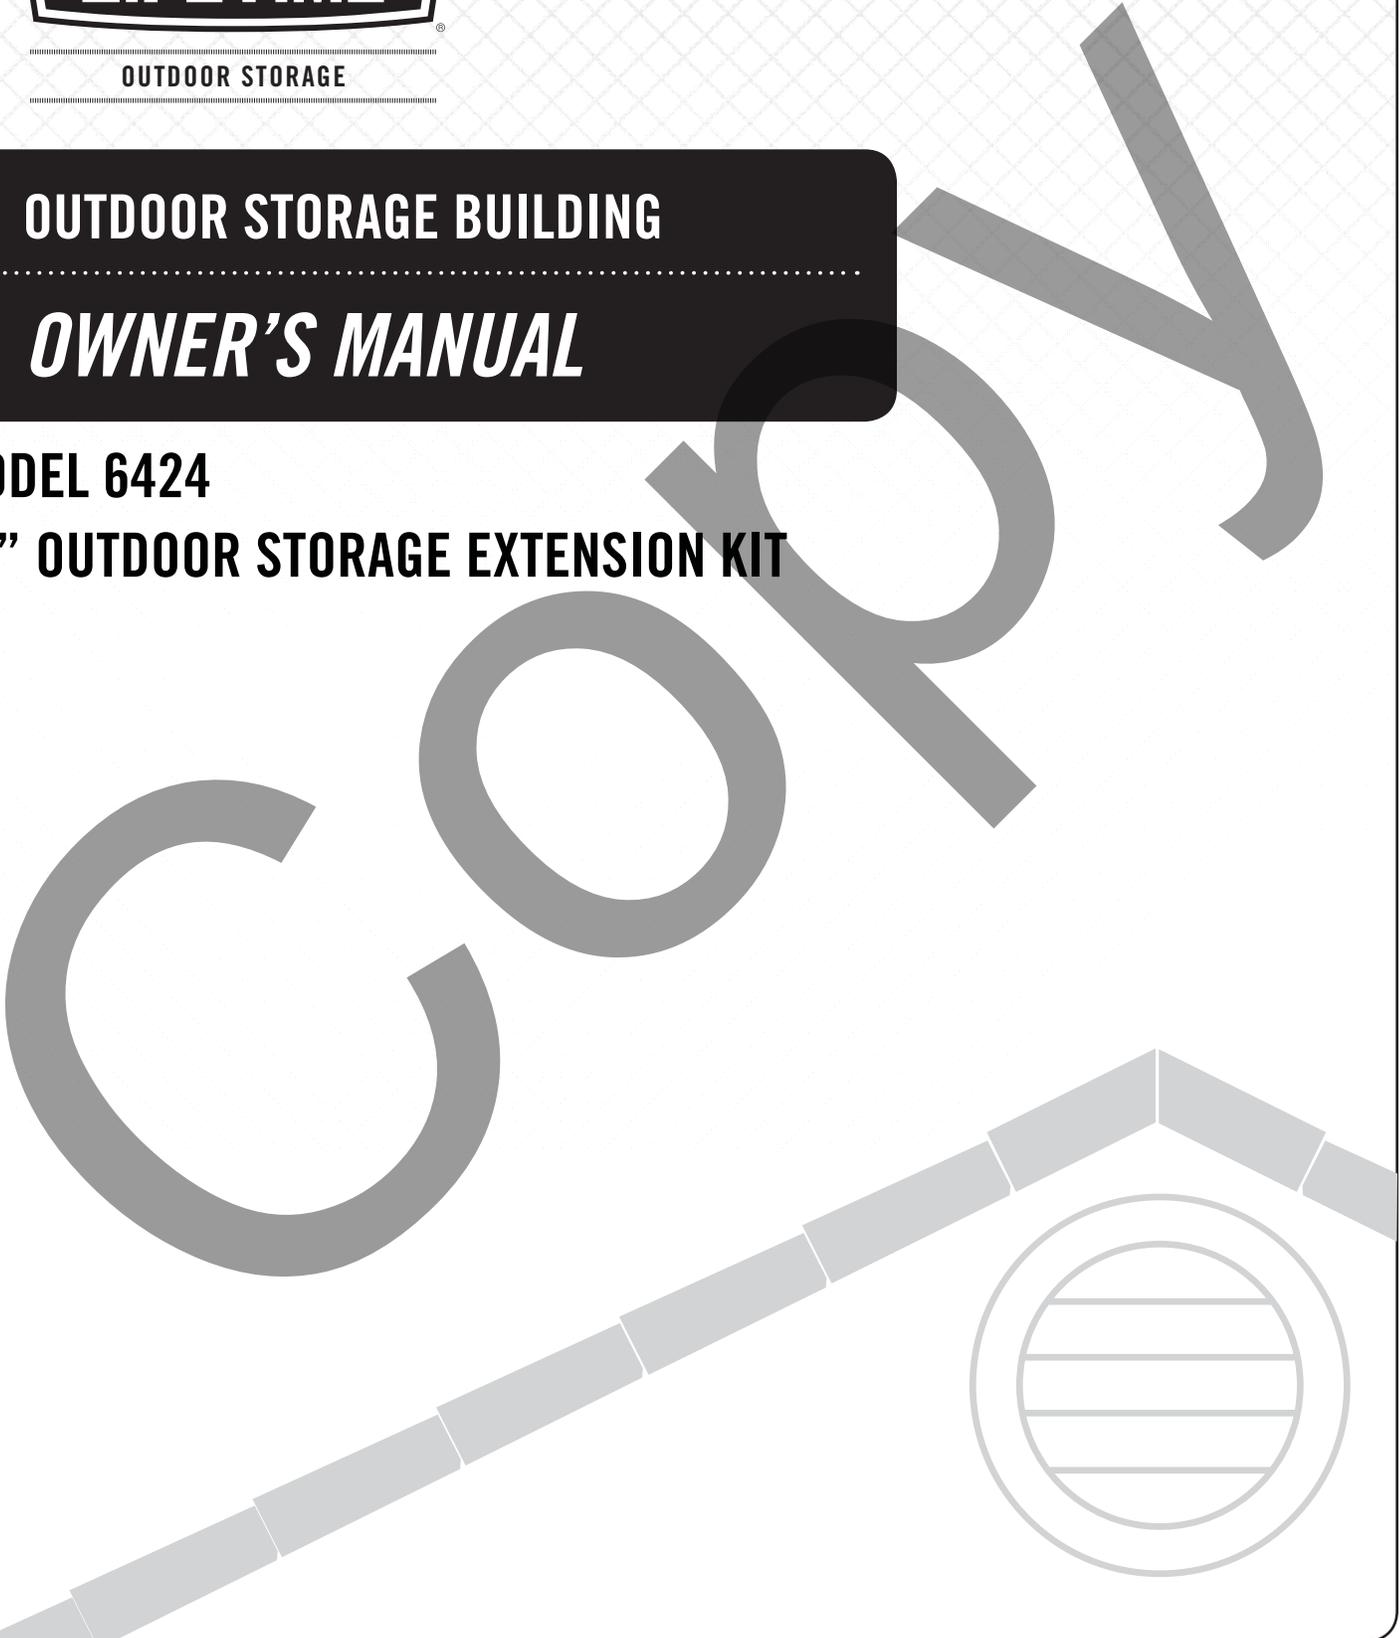

****A MINIMUM OF TWO ADULTS ARE REQUIRED FOR ASSEMBLY****



BEFORE BEGINNING ASSEMBLY



Identify and inventory all parts using the checklist boxes on the Parts List. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.



SAFETY INSTRUCTIONS



Failure to follow these safety instructions may result in serious injury or property damage. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this display is not installed, maintained, or operated properly. • If using a ladder during assembly, use extreme caution. Follow all warnings and cautions on the ladder carefully. • 2 people are required for assembly. • Misuse could result in system failure. • If technical assistance is required, contact the manufacturer.
Most injuries are caused by misuse and/or failure to follow instructions.

Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

**** Do Not Contact the Store ****
For Assistance, including missing or broken parts,
Call Customer Service at:
1 (800) 225-3865

Hours: Monday - Friday 9:00 a.m. to 5:00 p.m. (MST).
Call, or visit our Web site for Saturday hours.

PARTS LIST

ID	Reorder#	Part # *	Description	Qty
108	ZS10882	1013592	Wall Panel	1
125	ZS12582	CB12500	Window Wall Panel	1
110	1029724	CB11000	Center Floor Panel	1
114	1009262	1009258	Lower Roof Panel	2
117	CB11780C	CB11700	Center Roof Cap	1
AA	1009232	-----	Skylight	1
AB	1021645	-----	Roof Truss Channels	2
AC	1021644	-----	Roof Truss Brace	1
AD	1021649	-----	Roof Support	2
AE	ZS01200	-----	Window	1
Hardware Bag [1026292]				
TA	1021654		Truss Connector	1
TB	BB04500		Threaded Rod	1
TD	BN00300		1/4" Cap Nut	2
TE	BN01600		#10 Cap Nut	6
TF	BS06100		#10 x 3/8" Pan-Head Screw	8
TH	BS07500		.25" x .625" Screw	45
TI	BS05900		#10 x .5" Pan-Head Screw	6
TJ	BW01200		#10-1" Fender Washer	6
TK	1007360		Window Latch	2


Tools and Materials Required for Assembly (Not Included)

1. 7/16" Wrenches (2)
2. 3/8" Wrenches (2)
3. #2 Phillips screwdriver or Electric drill with Phillips head

* Part Numbers are listed when different from the Reorder Number.
The Part Number will appear on most of the plastic parts.

HARDWARE IS ACTUAL SIZE

(Unless otherwise indicated)

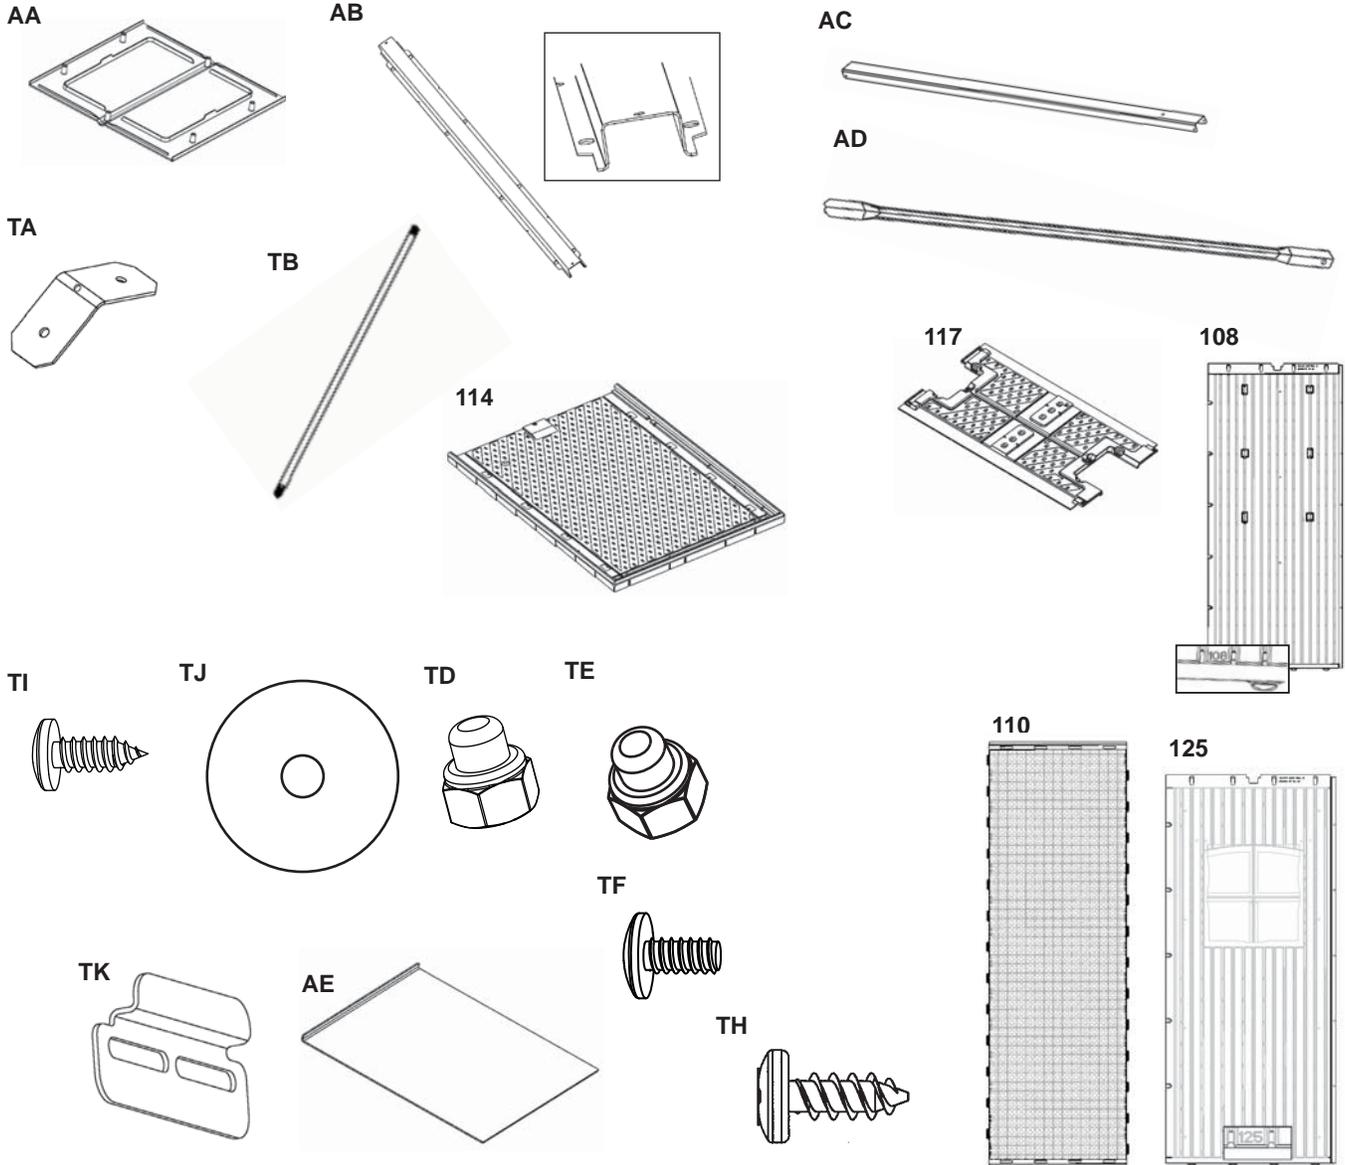

If you are Installing a New Shed

1. Check contents of boxes and compare to parts listed on the Parts List.
2. Follow instructions that came with your shed, but add extra floor panel, wall panels, Roof Cap and Skylight at appropriate points in the assembly.

If you are Extending an Existing Shed

1. Remove any bolts or screws being used to anchor the shed to the ground.
2. Remove any objects from back shelves.
3. Remove any shelves, pegboards, or other objects hanging on the last two Side Wall Panels on either side.
4. Check contents of boxes and compare to parts listed on the Parts List.
5. Follow the steps in this manual.
6. If you are extending an 8' x 5' shed you will need to modify the following instructions by not removing as many parts as shown in the illustrations.

****Save all hardware for re-assembly!****


1

a. Remove last three skylights.




2

a. Remove the back 3 roof caps.

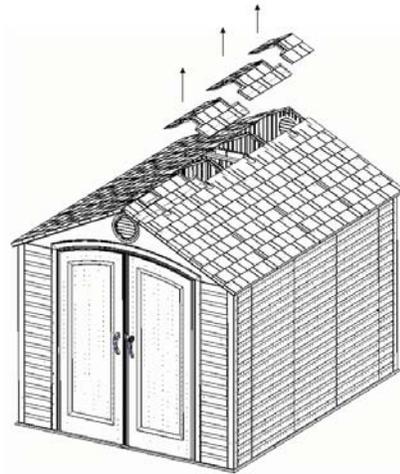


3

a. Remove the back Roof panels and Roof support bars.

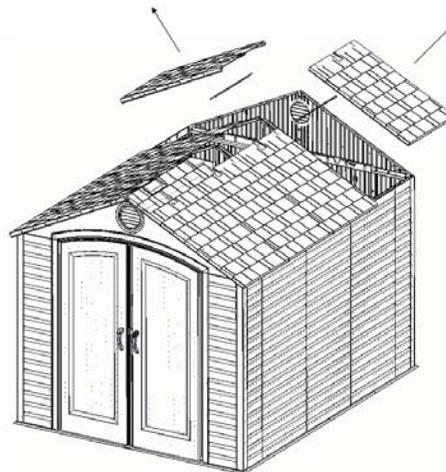

4

a. Remove the next Roof panels and Roof support bars.

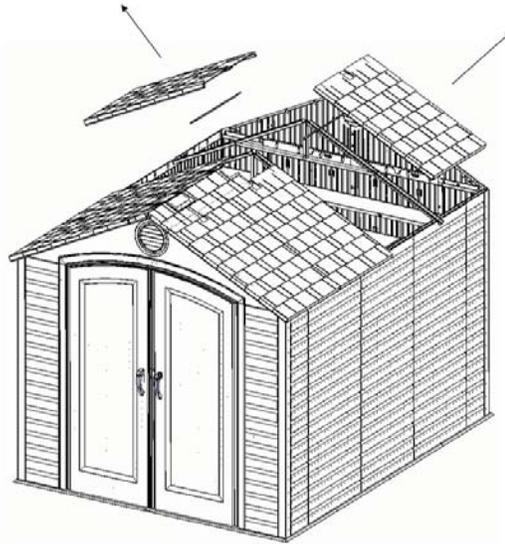

5

a. Remove the Roof Truss.



6

a. Remove the last two Side Wall Panels.




Note: If you're adding onto a side entry shed, remove the panels (in gray) from the side of the shed rather than removing the back of the shed. If you're adding on to both sides, remove the panels (in gray) from both sides of the shed (as illustrated), and follow the remaining steps.



7

a. Slide the back section of the shed away from the front. You will need to tip the back section forward slightly in order to disconnect the floor panels



Be sure that there is nothing on the back shelves before moving the back section.

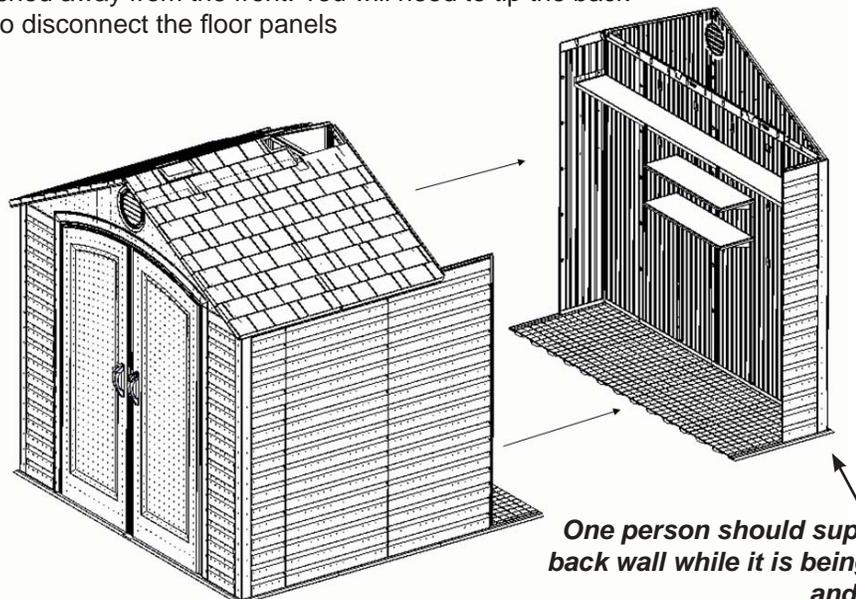




One person should support the back wall while it is being tipped and moved.

8 Assemble Window

 a. Remove plastic sheeting from Window (AE) and slide Window into slot on the Window Wall Panel (125). Attach a Window Latch (TK) above each corner of the Window as shown. When tightening screws (TH), be sure that Window Latches will slide freely. Do not overtighten. Insert screw (TF) into the hole in the window. Set panel aside.

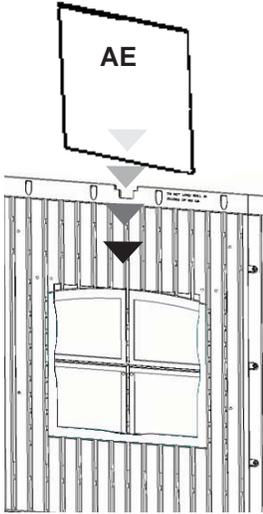


Insert window with bent edge at top and pointing away from the wall.

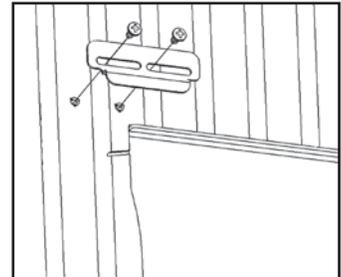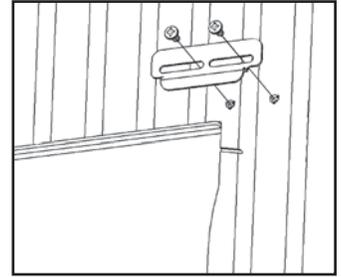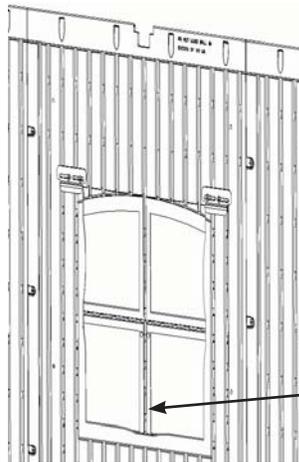

Place Screw (TF) in this hole to keep window from sliding up too far. Insert until flush with the window


9

a. Add new Floor Panel (110). Then, slide the back section into place and connect the floor panels (you will need to tip the panels forward slightly to connect the panels).

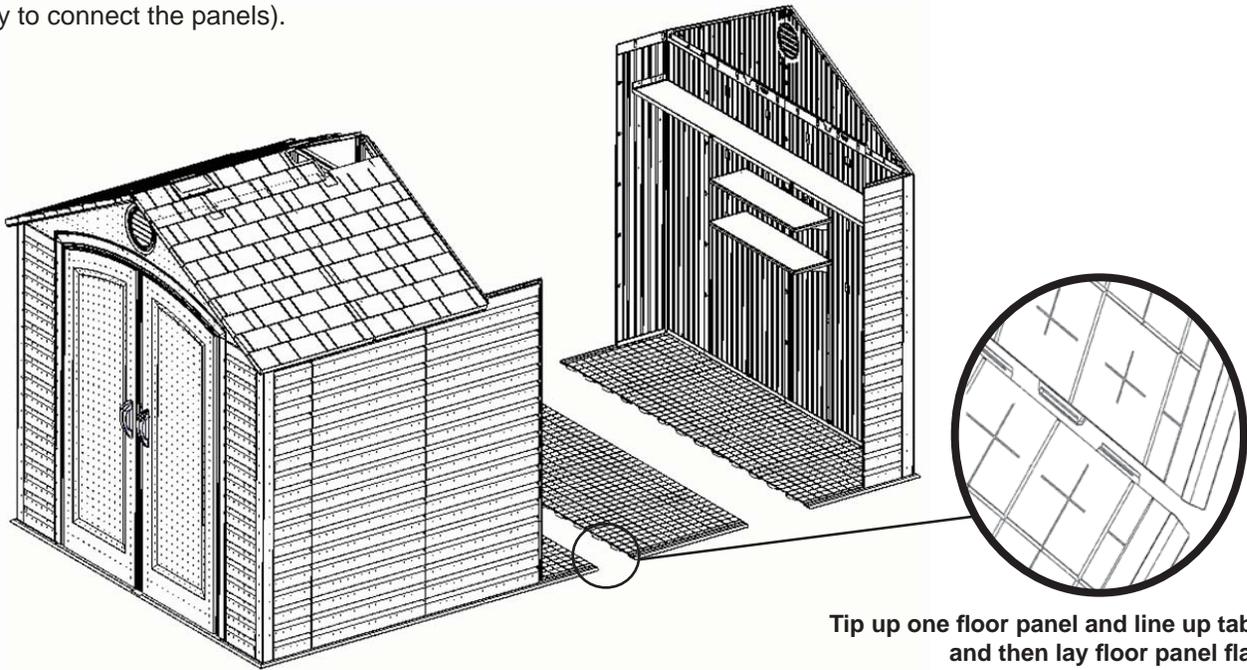

10

a. Add Wall Panels (108).



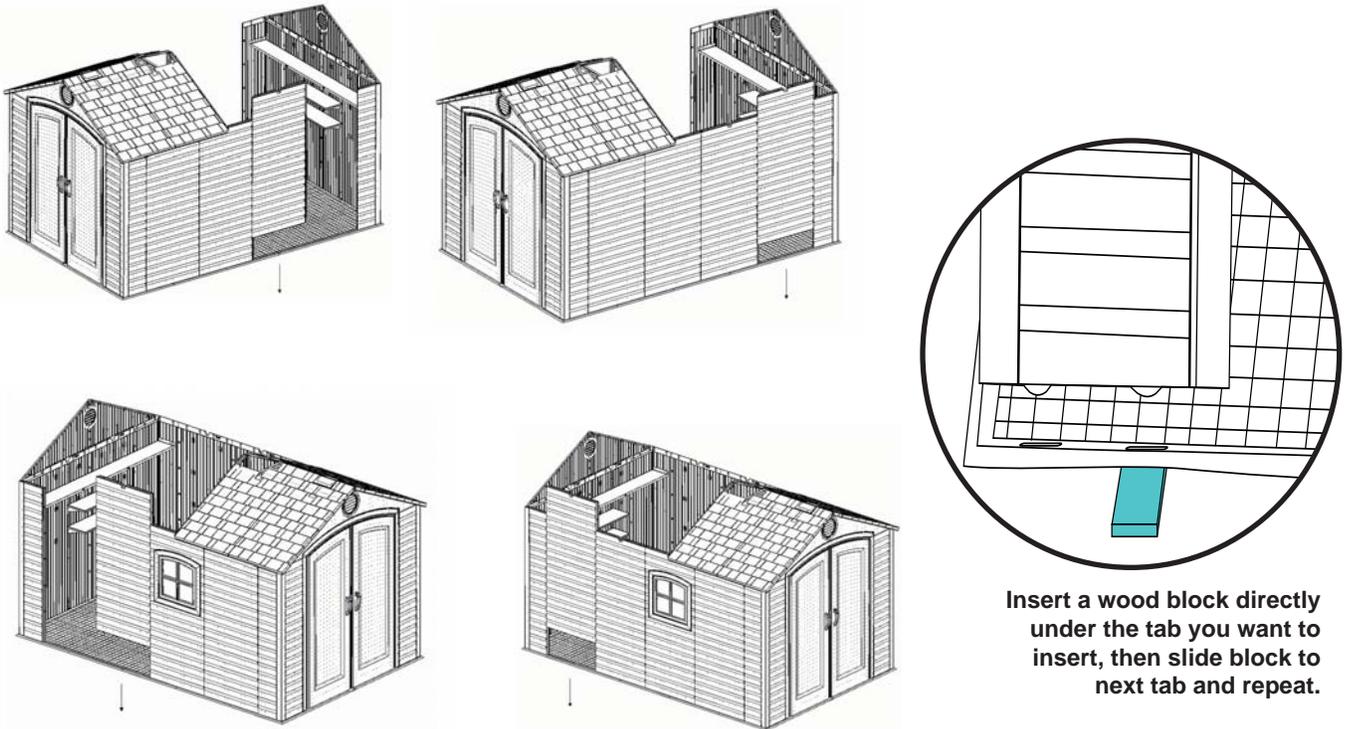


11 Assemble Truss

a. Attach Brace (AC) to two Roof Truss Channels (AB) (one on each side of Brace). Secure Brace with Screws (TF) and Nuts (TE).





Follow picture above to connect Brace to a Truss Channel at each end of the Brace.

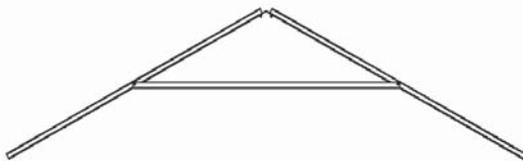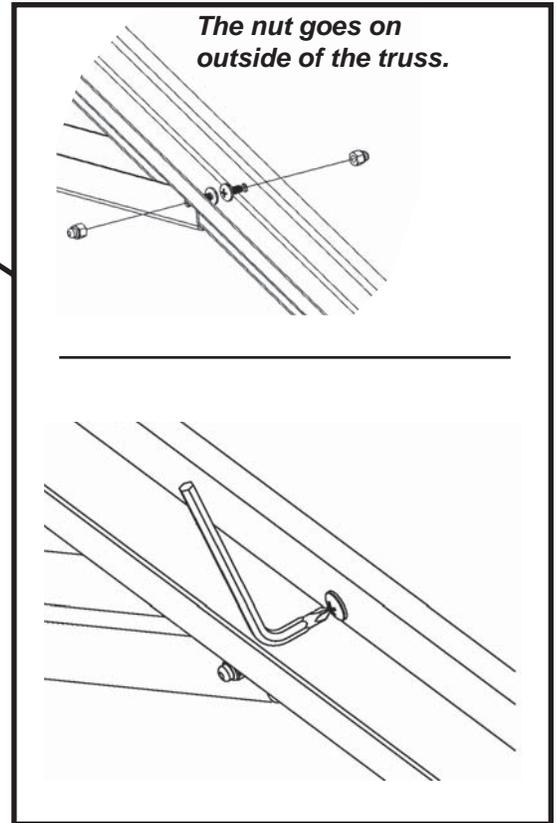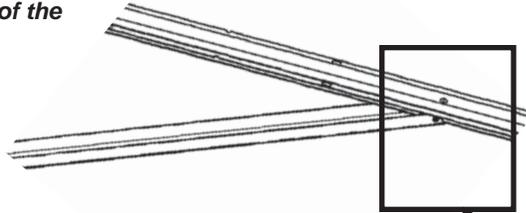


b. Use Truss Connector (TA) to attach Roof Truss Channels at top. Secure with Screws (TF) and Nuts (TE). Before completely tightening, lay assembly on its side to be sure Channels and Brace are parallel. Completely tighten all hardware.

WARNING



Do not overtighten the Cap Nut. If the end of the Bolt breaks through the plastic cap, call our Customer Service Department.

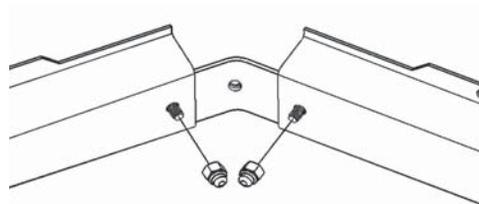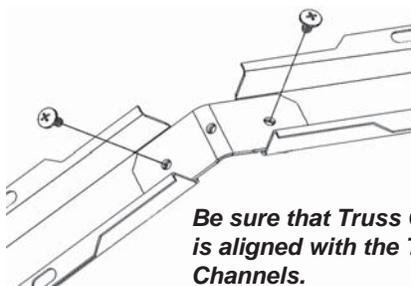

c. Slide a Threaded Rod through the Truss Support Brace and the top of the Truss Connector.

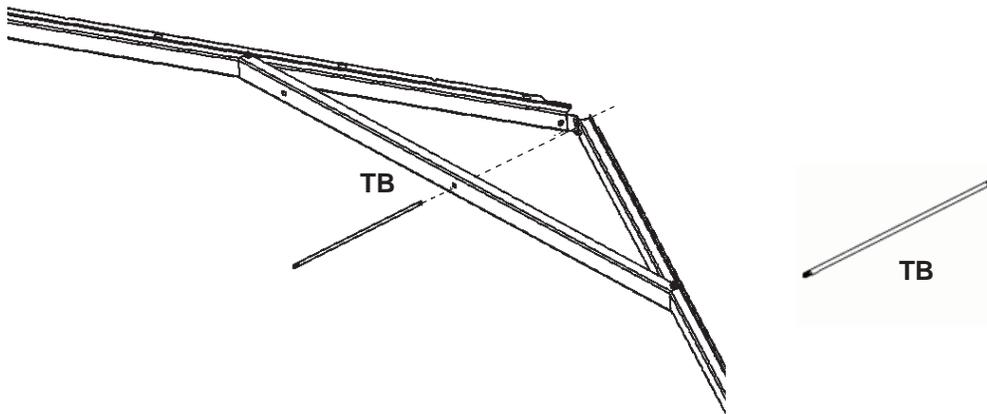


d. Secure the top and bottom of the Threaded Rod with a 1/4" Cap Nut (TD).

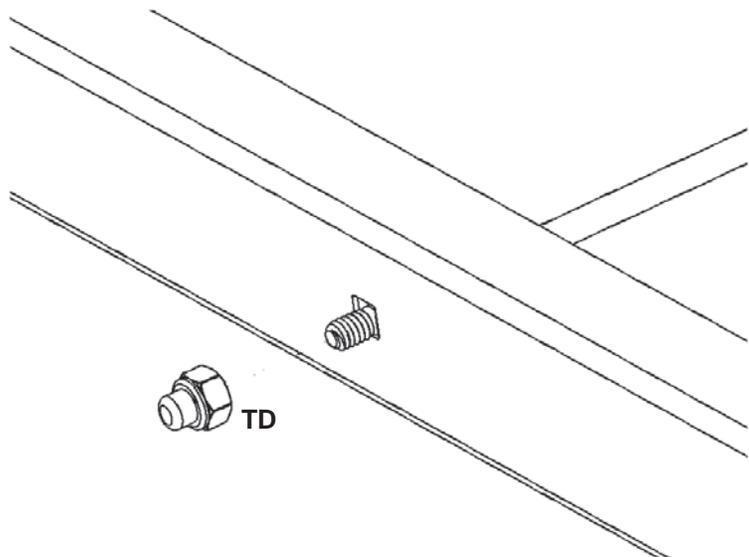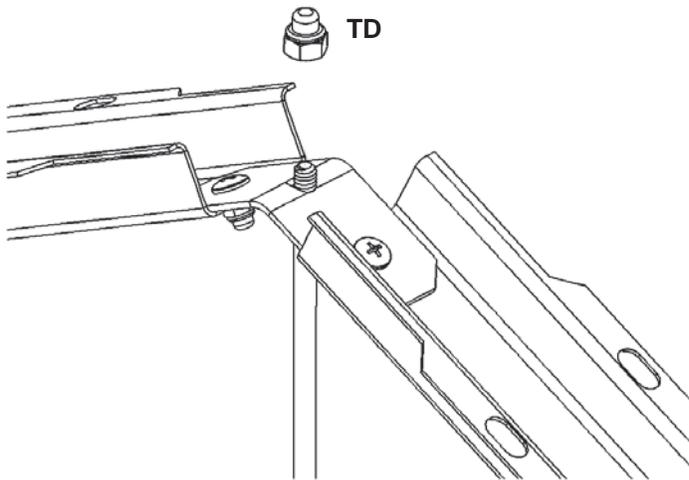

 **WARNING** 
Do not overtighten the Cap Nut.




12

a. Add Truss.


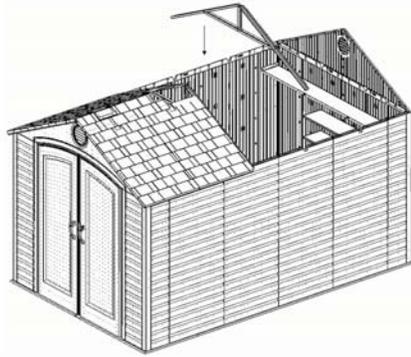


13

a. Add Roof Panels (114) and Roof Supports (AD).

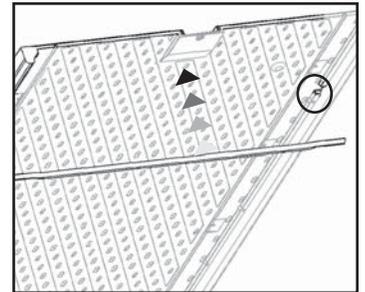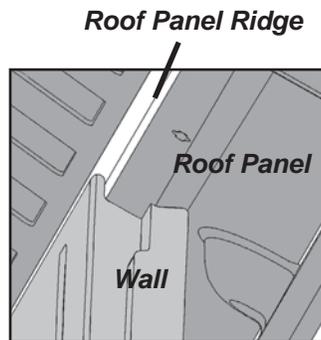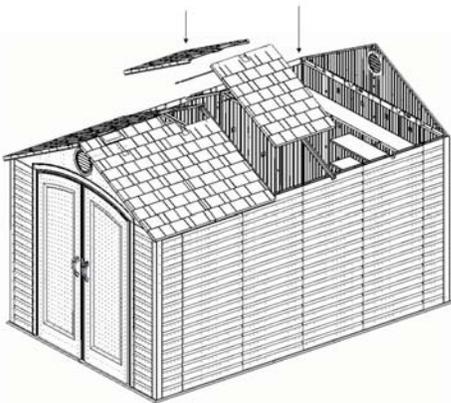


b. Add a center Roof Cap (117).

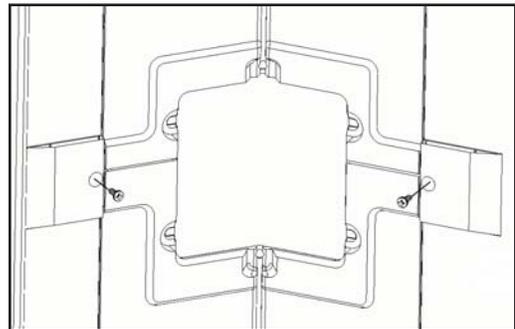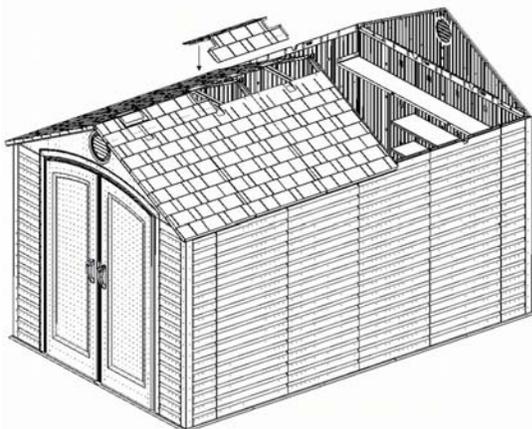


14

a. Add next Truss.

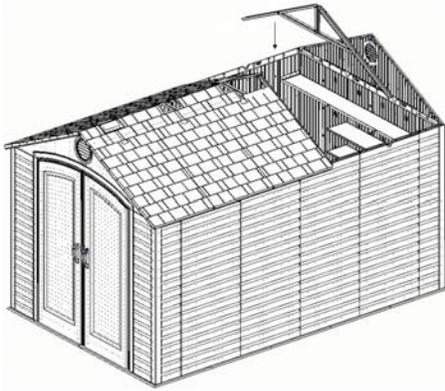


15

a. Add Roof Panels (114) and Roof Supports (AD).

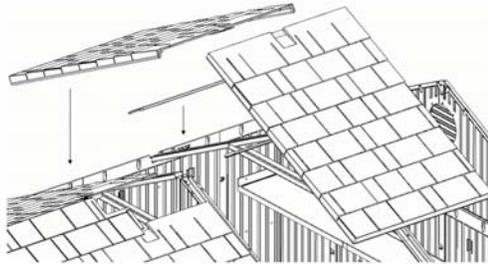


b. Add a center Roof Cap (117).

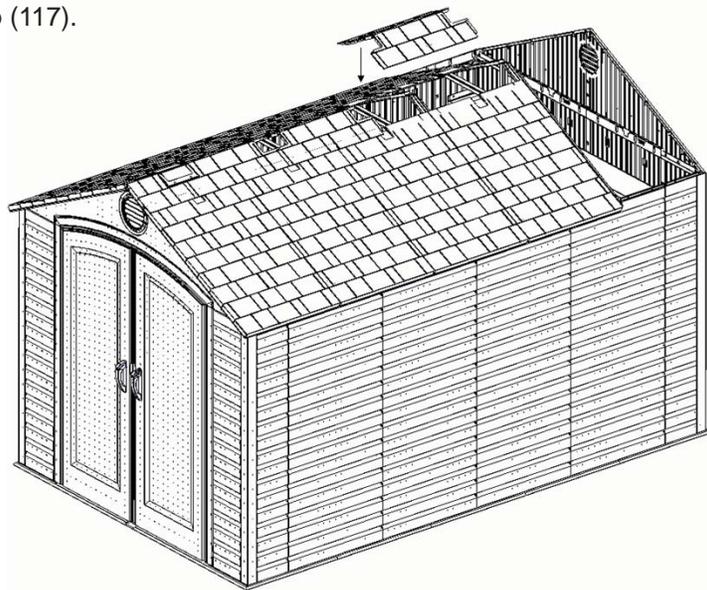


16

a. Add Roof Panels (114) and Roof Supports (AD).


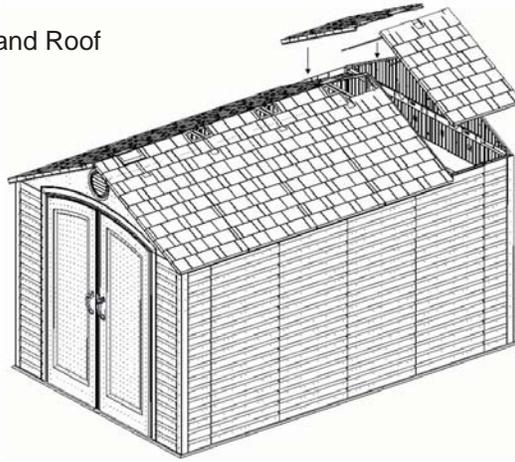


b. Add the last Center Roof Cap (117) and the End Roof Cap.

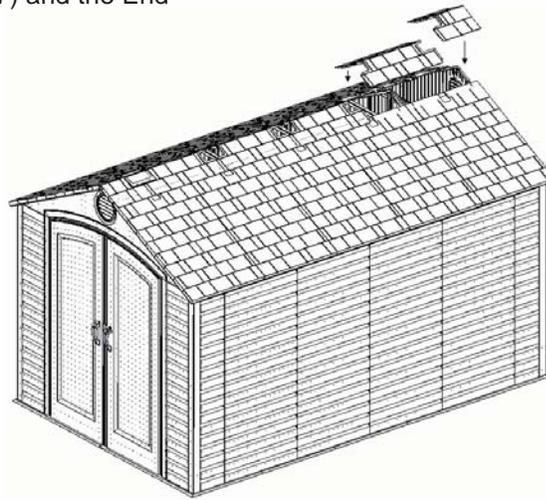

17

a. Add Skylights

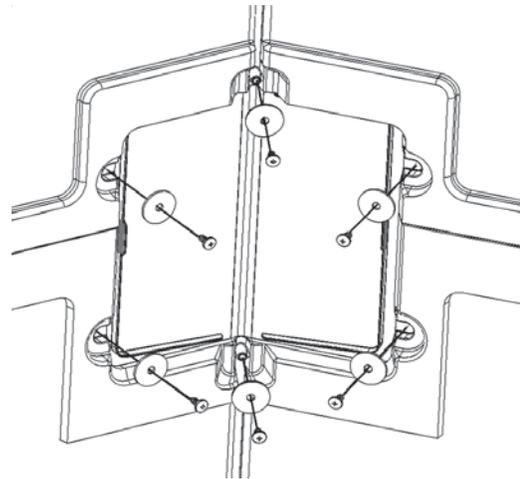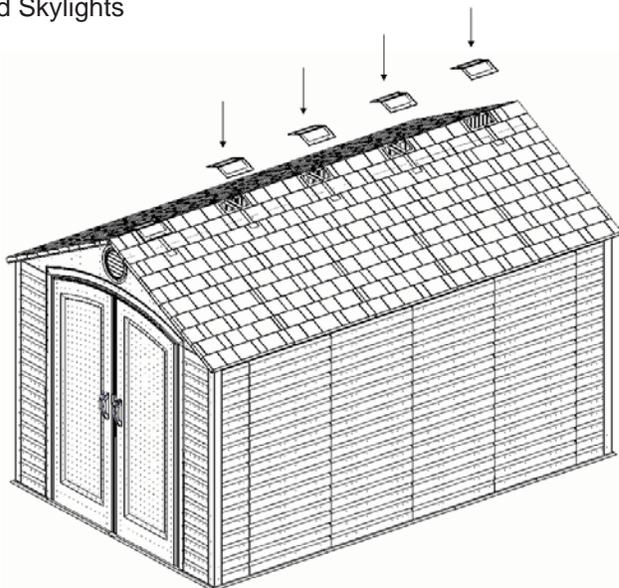

Enhance your Lifetime® Outdoor Shed by purchasing the following Shed Accessories:

Model #

0110 **Corner Shelf (2 pack)**

Two 10" radius shelves with hardware.

0130 **30" Shelf Kit w/ hardware (3 pack)**

Three 30" x 10" Steel-Reinforced Shelves with shelf brackets and hardware.

0150 **90" Shelf Kit w/ hardware**

One 90" x 9" Steel-Reinforced Shelf with shelf bracket and hardware.

0113 **16" Pegboard Strips w/ hardware**

Two sixteen inch Pegboard Strips with hooks. Great for hanging large items such as: rakes, shovels, or other tools.

0190 **Shelf Support Channel**

Two Shelf Support Channels that allow the 30" shelves on either of the side walls of your shed.

***To purchase shed accessories,
visit us at:***

www.buylifetime.com

Or call:

1 (800) 424-3865

Congratulations on your Lifetime® Outdoor Shed purchase. By following the instructions below, your new Lifetime shed should provide you with years of service and enjoyment.

Cleaning and Care

The polyethylene walls and shelves are stain- and solvent resistant. To clean, use a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by Sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat barrier.

**For warranty details or to register your product, visit
www.lifetime.com or call 801-776-1532**