

HP Color LaserJet
Service Manual


'Click' to download complete Manual



Theory of operation
Removal and replacement
Solve problems
Parts list



www.hp.com/support/cljcp3525

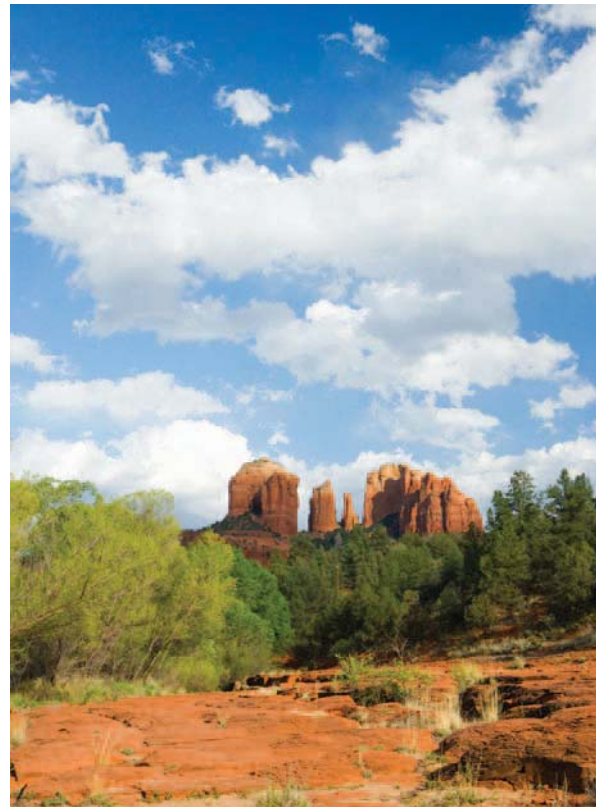

service-repairmanual.com

HP Color LaserJet CP3525 Series Printers Service Manual



Copyright and License

© 2008 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CC468-90963

Edition 1, 10/2008

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Intel® Core™ is a trademark of Intel Corporation in the U.S. and other countries.

Java™ is a US trademark of Sun Microsystems, Inc.

Microsoft®, Windows®, and Windows®XP are U.S. registered trademarks of Microsoft Corporation.

Windows Vista® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

PANTONE® is Pantone, Inc's check-standard trademark for color.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Table of contents

1 Product basics

Product comparison	2
Product features	3
Product view	6
Front view	6
Back view	7
Interface ports	8
Serial number and model number location	8

2 Control panel

Use the control panel	10
Control-panel layout	10
Interpreting control panel indicator lights	11
Control panel menus	12
Use the menus	12
Menu hierarchy	13
Show Me How menu	14
Retrieve job menu	15
Information menu	17
Paper handling menu	18
Configure device menu	19
Printing menu	19
PCL sub-menu	20
Print Quality menu	22
System setup menu	25
I/O menu	32
Resets menu	39
Diagnostics menu	40
Service menu	42

3 Paper and print media

Supported paper and print media sizes	44
Custom paper sizes	46
Supported paper and print media types	47

Tray and bin capacity	48
Special paper or print media guidelines	49
Load trays	50
Paper orientation for loading trays	50
Tray 1	50
Tray 2 or optional Tray 3	52
Load Tray 1	53
Print envelopes	55
Load Tray 2	55
Load the optional 500-sheet paper and heavy media tray (Tray 3)	57
Load standard-sized paper into Tray 3	57
Load custom-size paper into Tray 3	59
Load 4 x 6 inch (10 x 15 cm) size paper into Tray 3	61
Configure trays	65
Configure a tray when loading paper	65
Configure a tray to match print job settings	65
Configure a tray by using the Paper Handling menu	66
Automatic overhead transparency sensing (auto sense mode)	66
Auto-sense settings	66
Select the media by source, type, or size	67
Source	67
Type and Size	67

4 Manage and maintain the product

Information pages	70
HP Easy Printer Care	71
Open the HP Easy Printer Care software	71
HP Easy Printer Care software sections	71
Embedded Web server	74
Open the embedded Web server by using a network connection	74
Embedded Web server sections	75
Use HP Web Jetadmin software	77
Security features	78
Secure the embedded Web server	78
Secure Disk Erase (optional EIO hard drive)	78
Data affected	78
Additional Information	79
Job storage	79
HP Encrypted High Performance Hard Disks	79
Lock the control-panel menus	79
Lock the formatter cage	80
Manage supplies	81
Print-cartridge storage	81

HP policy on non-HP print cartridges	81
HP fraud hotline and Web site	81
Replace supplies	81
Supplies life	81
Locate supplies	81
Supply replacement guidelines	82
Change print cartridges	83
Change the toner collection unit	86
Install memory	89
Install DDR2 memory DIMMs	89
Enable memory for Windows	92
Install an HP Jetdirect or EIO print server card or EIO hard disk	92
Clean the product	96
Clean the exterior	96
Clean spilled toner	96
Clean the fuser	96
Product updates	97
Determine the current firmware version	97
Download new firmware from the HP Web site	97
Transfer the new firmware to the product	97
Use the HP Easy Firmware Upgrade utility to update the firmware	97
Use FTP to upload the firmware through a browser	98
Use FTP to upgrade the firmware on a network connection	99
Use HP Web Jetadmin to upgrade the firmware	99
Use Microsoft Windows commands to upgrade the firmware	100
Upgrade the HP Jetdirect firmware	100

5 Theory of operation

Basic operation	104
Sequence of operation	104
Engine-control system	106
DC controller	107
Solenoids	107
Clutches	108
Switches	108
Sensors	109
Motors and fans	109
High-voltage power supply	111
Low-voltage power supply	113
Overcurrent/overvoltage protection	114
Safety	114
Voltage detection	114
Sleep (powersave) mode	114

Low-voltage power supply failure	114
Fuser (fixing) control	115
Fuser (fixing) temperature-control circuit	116
Fuser (fixing) over-temperature protection	116
Fuser (fixing)-failure detection	117
Laser/scanner system	119
Image-formation system	121
Image-formation process	122
Step 1: Pre-exposure	123
Step 2: Primary charging	123
Step 3: Laser-beam exposure	124
Step 4: Development	124
Step 5: Primary transfer	124
Step 6: Secondary transfer	125
Step 7: Separation	126
Step 8: Fusing	126
Step 9: ITB cleaning	127
Step 10: Drum cleaning	127
Print cartridge	127
Developing-roller engagement and disengagement	129
Intermediate transfer belt (ITB) unit	130
Primary-transfer-roller engagement and disengagement	131
ITB cleaning	132
Calibration	133
Color-misregistration control	134
Image-stabilization control	135
Pickup, feed, and delivery system	136
Pickup-and-feed unit	139
Cassette pickup	139
Cassette-presence detection	141
Cassette lift operation	141
Cassette paper-presence detection	142
Multifeed prevention	143
Multipurpose tray pickup	144
Paper feed	145
Skew-feed prevention	146
OHT detection	146
Fusing and delivery unit	147
Loop control	147
Pressure-roller pressurization control	148
Duplexing unit (HP Color LaserJet CP3525dn and HP Color LaserJet CP3525x only)	150
Duplexing reverse and feed control	151
Duplex pickup operation	151

Jam detection	152
Optional paper feeder	154
Paper-feeder pickup and feed operation	156
Paper-size detection and cassette-presence detection	156
Paper-feeder cassette lift operation	158
Paper-feeder presence detection	159
Paper-feeder multiple feed prevention	160
Paper feeder jam detection	161

6 Removal and replacement

Introduction	164
Removal and replacement strategy	164
Electrostatic discharge	164
Required tools	165
Before performing service	165
After performing service	166
Post-service test	166
Print-quality test	166
DC controller connector locations	167
Parts removal order	168
Customer self repair (CSR) components	170
Print cartridges	170
Duplex-reverse guide	172
Toner-collection unit	173
Formatter PCA	175
Memory DIMM	176
Remove the memory DIMM	176
Enable memory for Windows	177
Tray cassette	178
Fuser	179
Pickup roller (Tray 2)	180
Pickup and feed rollers (Tray 3)	182
Separation roller (Tray 2)	183
Secondary transfer roller	184
Reinstall the transfer roller	185
Secondary transfer assembly	186
Reinstall the secondary transfer assembly	187
Intermediate transfer belt (ITB)	188
Right door (optional paper feeder)	190
External panels, covers, and doors	192
Identification and location	192
Front-door assembly	193
Right-door assembly	194

Right-rear cover	198
Left cover	200
Control-panel assembly	203
Right-front cover	205
Remove the right-front cover	205
Reinstall the power button	207
Front-top cover	208
Remove the front-top cover	208
Rear cover and upper-rear cover	209
Remove the rear cover and upper-rear cover	209
Rear-top cover	211
Remove the rear-top cover	211
Internal assemblies	213
Pickup roller (Tray 1)	213
Delivery fan, cartridge fan, and environmental sensor	215
Remove the delivery fan, cartridge fan, and environmental sensor	215
Toner-collection sensor	220
Remove the toner-collection sensor	220
Residual-toner-feed motor	222
Remove the residual-toner-feed motor	222
Reinstall the residual-toner collection door	226
Registration density (RD) sensor assembly	227
Remove the RD sensor assembly	227
Power-supply fan and fan duct	230
Remove the power-supply fan and fan duct	230
Registration assembly	233
Remove the registration assembly	233
Interconnect board (ICB)	238
Remove the ICB	238
DC controller PCA and tray	240
Remove the DC controller PCA	240
Low-voltage power supply	243
Remove the low-voltage power supply	243
High-voltage power supply lower (HVPS-D)	248
Remove the high-voltage power supply lower	248
Reinstall the high-voltage power supply lower	250
Developing-disengagement motor	251
Remove the developing-disengagement motor	251
Pickup motor	253
Remove the pickup motor	253
Lifter-drive assembly	254
Remove the lifter-drive assembly	254
Cassette-pickup drive assembly	256
Remove the cassette-pickup drive assembly	256

Reinstall the cassette-pickup drive assembly	261
Cassette-pickup assembly	263
Remove the cassette-pickup assembly	263
Laser/scanner assembly (Y/M)	265
Remove the laser/scanner assembly (Y/M)	265
Laser/scanner assembly (C/Bk)	272
Remove the laser/scanner assembly (C/Bk)	273
Reinstall the protective glass cleaner (PGC) actuators	276
High-voltage power supply upper (HVPS-T)	279
Remove the high-voltage power supply upper	279
Reinstall the high-voltage power supply upper	282
Drum motor 1	283
Remove the drum motor 1	283
Drum motor 2 or drum motor 3	284
Remove the drum motor 2 or drum motor 3	284
Fuser motor	285
Remove the fuser motor	286
Main-drive assembly	287
Remove the main-drive assembly	288
Reinstall the main-drive assembly	292
Fuser-drive assembly	298
Remove the fuser-drive assembly	299
Reinstall the fuser-drive assembly	302
Delivery assembly	303
Remove the delivery assembly	304
Reinstall the delivery assembly	307
Duplex-drive assembly	308
Remove the duplex-drive assembly	309
Optional paper feeder assembly (Tray 3)	310
Drawer connector	310

7 Solve problems

Solve problems checklist	312
Menu map	314
Troubleshooting process	315
Determine the problem source	315
Pre-troubleshooting checklist	315
Troubleshooting flowchart	316
Power subsystem	317
Power-on checks	317
Power-on troubleshooting overview	317
Tools for troubleshooting	319
Individual component diagnostics	319

LED diagnostics	319
Understand lights on the formatter	319
Engine diagnostics	320
Diagnostics menu	320
Diagnostics mode	321
Diagnostics that put the engine into the special diagnostics mode	321
Defeating interlocks	321
Disable cartridge check	323
Engine-test button	323
Paper-path test	324
Manual sensor test (special-mode test)	325
A TOP (top of page) sensor	325
B and C loop sensors	326
D fuser (fixing) delivery sensor	327
E duplex re-pickup sensor	328
F output bin full sensor	328
H fuser (fixing) pressure-release sensor	329
I primary transfer-roller disengagement sensor	330
K right and front door interlock switches	332
Manual sensor test 2 (special-mode test)	334
L Tray 1 media present sensor	334
M Tray 2 paper out sensor	335
N Tray 2 closed sensor	336
O Tray 2 stack-surface sensor	336
P optional Tray 3-empty sensor	337
Q optional Tray 3 media-feed sensor (Q)	338
R optional Tray 3 stack-surface sensor (R)	338
S, T, and U optional Tray 3 media-size sensors	339
Paper-path sensors test	340
Print/stop test	340
Component tests	341
Component test (special-mode test)	341
Diagrams	343
Formatter PCA	343
Location of connectors	344
DC controller PCA	344
Paper feeder driver PCA	345
PCAs, motors, fans, switches, solenoids, and clutches	345
Base product	346
1 x 500 paper feeder	352
Sensors	353
General timing chart	355
Circuit diagrams	355

Print-quality troubleshooting tools	358
Repetitive defects ruler	358
Calibrate the product	359
Internal print-quality test pages	359
Print-quality-troubleshooting pages	359
Diagnostics page	362
Cleaning page	363
Configuration page	364
Configuration page	364
HP embedded Jetdirect page	366
Embedded protocol page	367
Finding important information on the configuration pages	368
Color-band test	368
Control-panel messages table	369
Event log messages	395
Print an event log	395
Show an event log	395
Sample event log	396
Clear the event log	396
Event log message table	397
Clear paper jams	404
Common causes of jams	404
Jam locations	405
Clear jams	405
Clear jams in the right door	406
Clear jams in the output bin area	410
Clear jams in Tray 1	411
Clear jams in Tray 2	413
Clear jams in the optional 500-sheet paper and heavy media tray (Tray 3)	414
Clear jams in the lower right door (Tray 3)	414
Jam causes and solutions	415
Jams in the output bin	415
Jams in the fuser and transfer area	416
Jams in the duplex area (HP Color LaserJet CP3525dn and HP Color LaserJet CP3525x only)	419
Jams in Tray 1, Tray 2 and internal paper path	421
Jams in Tray 3	423
Change jam recovery	424
Solve paper-handling problems	425
Product feeds multiple sheets	425
Product feeds incorrect page size	425
Product pulls from incorrect tray	425
Paper does not feed automatically	426

Paper does not feed from Tray 2 or 3	426
Transparencies or glossy paper will not feed	427
Envelopes jam or will not feed in the product	427
Output is curled or wrinkled	428
Product will not duplex or duplexes incorrectly	428
Use manual print modes	430
Solve image-quality problems	432
Image defects table	432
Solve performance problems	438
Solve connectivity problems	439
Solve direct-connect problems	439
Solve network problems	439
Service mode functions	441
Service menu	441
Product resets	442
Restore factory-set defaults	442
Hard disk initialization (optional)	443
NVRAM initialization	443
Product cold reset	443

8 Parts and diagrams

Order parts, accessories, and supplies	446
Part numbers	447
Accessories	447
Print cartridges and toner collection unit	447
Memory	447
Cables and interfaces	448
Customer self repair (CSR) parts	448
Maintenance kits	450
Screws	451
How to use the parts lists and diagrams	452
External covers, panels, and doors	454
.....	454
Right door assembly	456
Internal components	458
Internal components (1 of 5)	458
Internal components (2 of 5)	460
Internal components (3 of 5)	462
Internal components (4 of 5)	464
Internal components (5 of 5)	466
Cassette	468
Cassette paper pickup assembly	470
MP paper pickup assembly	472

Registration assembly	474
Secondary transfer assembly	476
Delivery assembly	478
Fusing (fixing) assembly	480
PCAs	484
Assessoris	486
1 x 500 paper feeder	486
1 x 500 paper feeder	487
Paper feeder main body	489
Cassette	491
Alphabetical parts list	493
Numerical parts list	500

Appendix A Service and support

Hewlett-Packard limited warranty statement	508
HP's Premium Protection Warranty: LaserJet print cartridge limited warranty statement	509
HP Color LaserJet Fuser Kit Limited Warranty Statement	510
End User License Agreement	511
Customer self-repair warranty service	513
Customer support	514

Appendix B Product specifications





Physical specifications	516
Performance specifications	516
Electrical specifications	516
Acoustic specifications	517
Environmental specifications	517
Paper and print media specifications	517
Skew specifications	517

Appendix C Regulatory information

FCC regulations	520
Declaration of Conformity	521
Certificate of volatility	522
Safety statements	523
Laser safety	523
Canadian DOC regulations	523
VCCI statement (Japan)	523
Power cord statement (Japan)	523
EMC statement (Korea)	523
Laser statement for Finland	523
Substances Table (China)	524

service-repairmanual.com

Product comparison

Model	Features
<p>HP Color LaserJet CP3525</p> 	<ul style="list-style-type: none"> • 100-sheet multipurpose input tray (Tray 1) • 250-sheet input tray (Tray 2) • 250-sheet, face-down output bin • Hi-speed USB 2.0 port • 256 megabytes (MB) of random access memory (RAM)
<p>HP Color LaserJet CP3525n</p> 	<ul style="list-style-type: none"> • 100-sheet multipurpose input tray (Tray 1) • 250-sheet input tray (Tray 2) • 250-sheet, face-down output bin • Hi-speed USB 2.0 port • HP Jetdirect embedded print server for connecting to a 10/100Base-TX network • 256 megabytes (MB) of random access memory (RAM)
<p>HP Color LaserJet CP3525dn</p> 	<ul style="list-style-type: none"> • 100-sheet multipurpose input tray (Tray 1) • 250-sheet input tray (Tray 2) • 250-sheet, face-down output bin • Hi-speed USB 2.0 port • HP Jetdirect embedded print server for connecting to a 10/100Base-TX network • 384 megabytes (MB) of random access memory (RAM) • Automatic two-sided printing
<p>HP Color LaserJet CP3525x</p> 	<ul style="list-style-type: none"> • 100-sheet multipurpose input tray (Tray 1) • 250-sheet input tray (Tray 2) • 250-sheet, face-down output bin • 500-sheet paper and heavy media tray (Tray 3), including HP postcard media insert for 101.6 x 152.4 mm (4 x 6 in) paper • Hi-speed USB 2.0 port • HP Jetdirect embedded print server for connecting to a 10/100Base-TX network • 512 megabytes (MB) of random access memory (RAM) • Automatic two-sided printing