 


Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C380 GSM wireless phone.

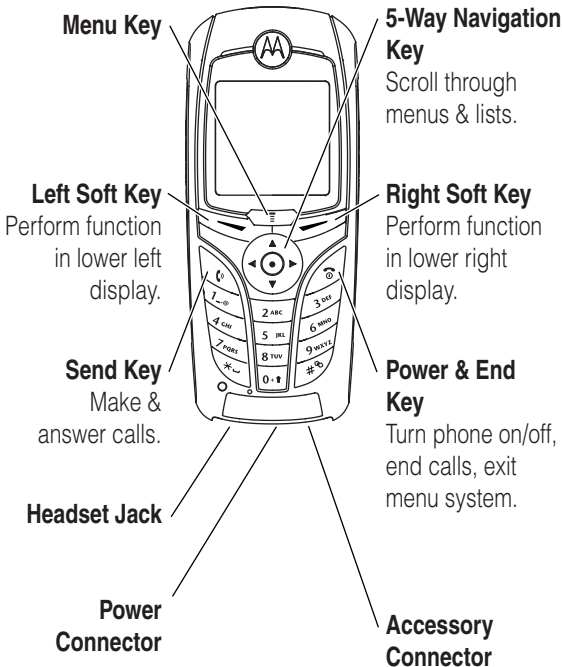

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)
www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners.

© Motorola, Inc., 2003.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Contents

Safety and General Information	6
Getting Started	12
About This Guide	12
Installing the SIM Card	13
Battery Use	13
Installing the Battery	14
Charging the Battery	15
Turning Your Phone On	17
Adjusting Volume	17
Making a Call	18
Answering a Call	18
Viewing Your Phone Number	18
Highlight Features	19
Sending a Multimedia Message	19
Receiving a Multimedia Message	21
Learning to Use Your Phone	23
Using the Display	23
Using the 5-Way Navigation Key	28
Using Menus	29
Entering Text	31
Using the Handsfree Speaker	41
Changing a Code, PIN, or Password	42
Locking and Unlocking Your Phone	42
If You Forget a Code, PIN, or Password	44
Locking and Unlocking the Keypad	45
Using the Phonebook	45
Setting Up Your Phone	48
Storing Your Name and Phone Number	48


Setting the Time and Date	48
Setting a Ring Style	49
Setting a Wallpaper Image	49
Setting a Screen Saver Image	50
Setting Display Color	51
Adjusting the Backlight	52
Setting Display Timeout	52
Calling Features	53
Changing the Active Line	53
Redialing a Number	53
Using Automatic Redial.	53
Using Caller ID	54
Canceling an Incoming Call	55
Calling an Emergency Number.	55
Dialing International Numbers	56
Viewing Recent Calls	56
Returning an Unanswered Call.	58
Using the Notepad	58
Attaching a Number	59
Calling With Speed Dial	59
Calling With 1-Touch Dial	60
Using Voicemail	60
Using Call Waiting.	61
Putting a Call On Hold	62
Transferring a Call.	62
Phone Features.	64
Menu Map.	64
Feature Quick Reference	66
Specific Absorption Rate Data	84
Index	87
Wireless Phone Safety Tips.	95

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

 - The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

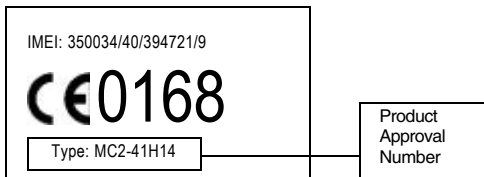

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website: www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

Getting Started



Getting Started

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Note: A More Here reference guide is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)

<http://motorola.ca/consumer> (Canada)

or contact the Motorola Customer Call Center at 1-800-331-6456 (U.S.A.) or 1-800-461-4575 (Canada).

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

 
Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.

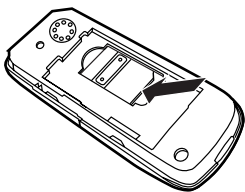

Caution: Do not bend or scratch your SIM card.

Avoid exposing your SIM card to static electricity, water, or dirt.

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to your phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.



- Maintain the battery at or near room temperature when charging.
 - Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
 - When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

 
Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery


Note: If necessary, remove the battery from its protective clear plastic case.




Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

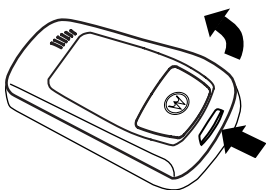

1

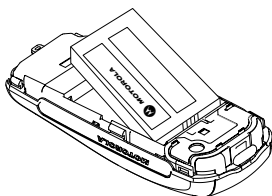 

2

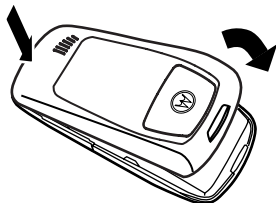 

3

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

 


Getting Started



Action

- 1 Plug the travel charger into the bottom of your phone.

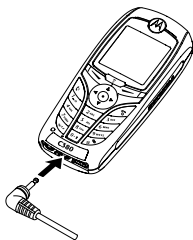


 
-
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
 - 3 When your phone indicates **Charge Complete**, remove the travel charger.
-

Tip: You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.


Turning Your Phone On

Action


- 1 Press and hold  for 2 seconds to turn on the phone.



 
Getting Started

- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.


Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.

- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

Adjusting Volume

Press the 5-way Navigation key () left or right to increase or decrease volume.

 5-way
Navigation
Key



- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible



Tip: At the lowest volume setting, press the key left once to switch to vibrate alert. Press it again to switch to silent alert. Press the key right to switch



back to vibrate alert, then ring alert.




- turn off an incoming call alert

Making a Call

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and “hang up” the phone when you are finished

Answering a Call


When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1  or ANSWER ()	answer the call
2 	end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press



While you are on a call, press  > **My Tel. Numbers**.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 48. If you do not know your phone number, contact your service provider.

Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.



Sending a Multimedia Message



A **Multimedia Messaging Service (MMS)** message contains one or more slides with text and embedded media objects (including pictures, animations, sounds, or voice records). You can send the multimedia message to other wireless phone users, and to email addresses.

Find the Feature




- > **Messages**
- > **Create Message**
- > **New Multimedia Msg**

Press

1 keypad keys

To











enter slide text

Tip: You can press  to open the **MMS Menu** and insert a **Picture, Voice Record, Sound, Soundtrack, New Page, Quick Note, or Contact Info.**

2 **OK** ()

store the message



Press	To
<p>3 </p>	<p>scroll to a Send To option:</p> <ul style="list-style-type: none"> • Highlight [One Time Entry] to enter one or more phone numbers and/or email addresses. • Highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook. • Or highlight an existing phonebook entry.
<p>4 SELECT </p> <p>or</p> <p>ADD </p>	<p>select [One Time Entry] or [New Phonebook Entry] and enter a number/address. Press OK  or DONE  when you are finished.</p> <p>add a phonebook entry to the list of recipients. Press DONE  when you are finished.</p>
<p>5 </p>	<p>scroll to Subject</p>
<p>6 CHANGE </p>	<p>select Subject</p>
<p>7 keypad keys</p>	<p>enter the subject</p>
<p>8 OK </p>	<p>store the subject</p>
<p>9 CHANGE </p>	<p>select Attachments</p>





Press	To
10	scroll to Picture or Sounds
11 SELECT	select the file type
12	highlight the file you want
13 SELECT	attach the file
14 BACK	return to the message editor
15	scroll to Receipt
16 CHANGE	select Receipt
17 ADD or REMOVE	activate/deactivate the delivery report
18 DONE	return to the message editor
19 SEND	send the message
or 	send the message, view message details, save the message in the drafts folder, or cancel the message

Receiving a Multimedia Message



When you receive an MMS message, your phone displays the (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press	To
READ	open the message

MMS messages that you receive can contain the following media objects:




- Pictures, and animations are displayed as you read the message.
 - A sound file or video clip begins playing when its slide is displayed.
 - Attached files are added to the end of the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (👉) (image file type), **PLAY** (👉) (sound file), or **OPEN** (👉) (object such as phonebook or datebook entry, or unknown file type).

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

 The *home screen* displays when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

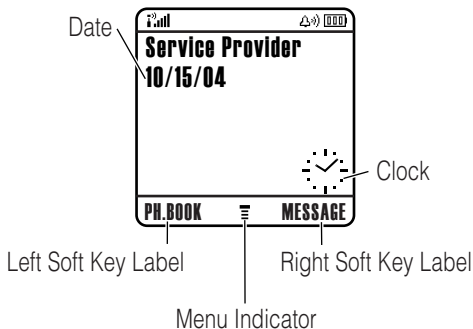


The ☰ (menu) indicator indicates that you can press the menu key (☰) to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (☰) or right soft key (☰) to perform the function indicated by the left or right soft key label.



Your phone can display an analog or digital clock in the home screen (see page 72).

 The following status indicators can display:

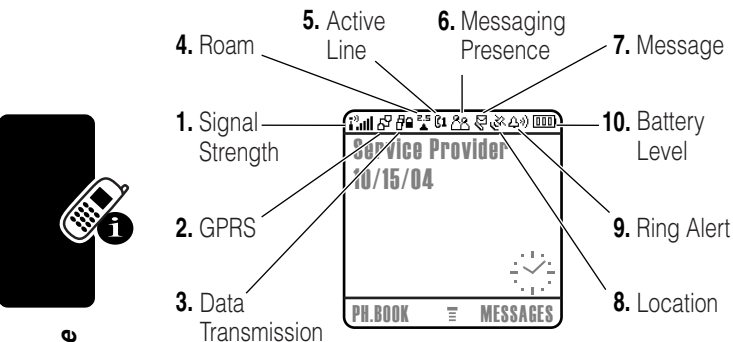

1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator displays.

2. GPRS Indicator




Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:


= GPRS PDP context active


= GPRS packet data available


3. Data Transmission Indicator

 
Shows connection and data transmission status. Indicators can include:

 = secure packet data transfer

 = insecure packet data transfer

 = secure application connection

 = insecure application connection

 = secure Circuit Switch Data (CSD) call

 = insecure CSD call



4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:

 = 2.5G home

 
 
 = 2.5G roam


 = 2G home


 = 2G roam

5. Active Line Indicator



Shows  or  to indicate the current active phone line. Other indicators can include:

 = line 1 active, call forward on

 = line 2 active, call forward on

 = alarm activated

6. Messaging Presence Indicator



Shows when Instant Messaging (IM) is active. Indicators can include:

= IM active

= available for IM

= busy

= invisible to IM

= available for phone calls

= offline

When a Java application is active, the (Java midlet) indicator can display in this location.

7. Message Indicator



Displays when you receive a new message. Indicators can include:

= text message

= voicemail message

= IM message

= active chat session

= voicemail and text message

When you enter a message, a number in this location shows the number of characters left on the current page

(text message), or the message size (multimedia message).

8. Location Indicator




Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

 = location on

 = location off

9. Ring Style Indicator

 
Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

 = silent

10. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.




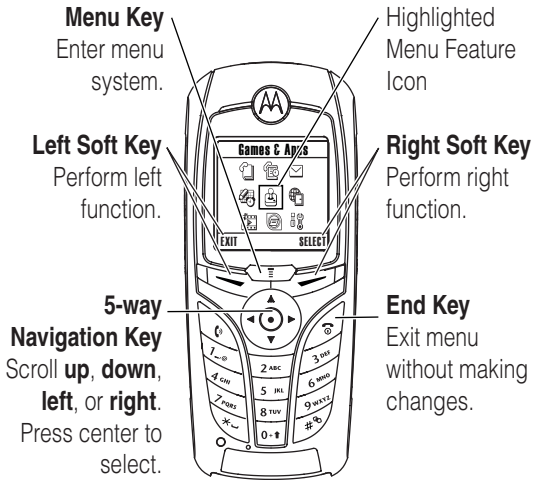 
Using the 5-Way Navigation Key


Use the 5-way navigation key (⊙) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the center select button to select a highlighted menu item.












Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.



Icon	Feature	Icon	Feature
	Games & Apps		Multimedia
	Office Tools		Settings
	IM		Web Access


Icon	Feature	Icon	Feature
	Phonebook		Recent Calls
	Messages		

Selecting a Menu Feature

To select a menu feature, starting from the home screen:

 
Find the Feature  > **Recent Calls** > **Dialed Calls**


This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**.

Press  to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.


Selecting a Feature Option

Some features require you to select an option from a list:

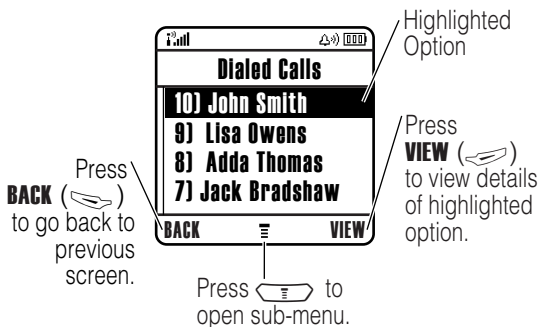

Press  to scroll up or down to highlight the option you want.

- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.


When an option displays a list of possible values, press  left or right to scroll through and select a value.


When an option displays a list of possible numeric values, press a number key to set the value.




Entering Text


Some features require you to enter information.



Press  to scroll down to other options.

Highlighted Option

 
Press **CANCEL** () to go back to previous screen.

Press **CHANGE** () to view details of highlighted option.

Entry Details
Name: John Smith
Category: General
No.: 2125551212
Type: Work

CANCEL **CHANGE**

The message center lets you compose and send text messages. A *Character Counter* indicates how many more characters will fit in a message.

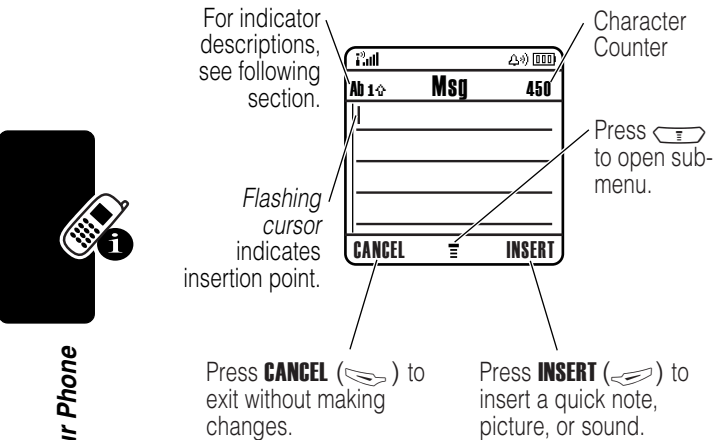


Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.


Press in any text entry screen to select one of the following entry modes:

- | | |
|----------------|---|
| Primary | The primary text entry mode (see below to set). |
| Numeric | Enter numbers only (see page 39). |

Symbol	Enter symbols only (see page 39).
Secondary	The secondary text entry mode (see below to set).


Alternatively, you can select a text entry mode in any text entry screen by pressing  > **Entry Mode**.

Setting Up a Text Entry Mode

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

ITAP	Let the phone predict each word as you press keys (see page 37).
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting (available only for Secondary Setup).

Using Capitalization

Press  in any text entry screen to change text case. The following indicators show capitalization status:

abc = no capital letters

Abc = capitalize next letter only

ABC = all capital letters



Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

Primary	Secondary	Description
1	2	Tap, no capital letters
1†	2†	Tap, capitalize next letter only
1††	2††	Tap, all capital letters
123	123	iTAP, no capital letters
123†	123†	iTAP, capitalize next letter only
123††	123††	iTAP, all capital letters




The following indicators identify **Numeric** or **Symbol** entry mode:


123 = numeric method @ = symbol method

Using Tap Method

This is the standard method for entering text on your phone.


Tap method cycles through the letters and number of the key you press. Tap Extended method also cycles through additional symbols as shown in the chart on page 36.

Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters Tip: Press  right to accept a word completion, or  to insert a space.
3 OK 	store the text

In a text entry screen, you can press  to switch entry modes. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 33.

When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

 Character displays at insertion point.

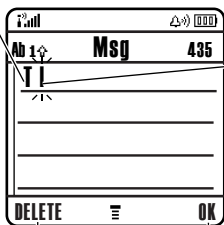

After 2 seconds, character is accepted and cursor moves to next position.

Press **DELETE**  to delete character to left of insertion point.

Press **OK**  to accept and store text.



When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

Character displays at insertion point.





 
 






Press  to accept **program**, or press  to reject it and enter a space after **prog**.






If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart




Use this chart as a guide for entering characters with **Tap Extended** method.

	.?! , @ ' - _ : ; () & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
	a b c 2 á á à â ã ç æ
	d e f 3 é è ê ë
	g h i 4 í î ï
	j k l 5
	m n o 6 ñ ó ó ò ô õ ø
	p q r s 7
	t u v 8 ú ù û ü
	w x y z 9
	change text case, for capital letters

 	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

Tap Method Text Entry Rules

 
- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

Using iTAP™ Method

iTAP™ software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than **Tap** method, because your phone combines the keypresses into common words.



For example, if you press    , letter combinations that match your keypresses display:

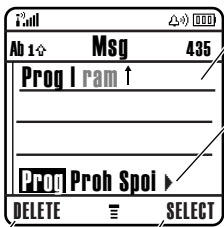

Press  to delete last letter.


Press **SELECT** () to lock highlighted combination.


Press  ▲ to accept **Program**.

Press  ► to highlight another combination. Press  to enter **Prog** and a space.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press  to switch entry modes. An indicator shows which method is active (see page 34). If **ITAP** method is not available as the **Primary** or **Secondary** entry mode, see page 33.

Press	To
1 keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want

Press**To****3 SELECT** 

lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

or


enter the highlighted combination when it spells a word

A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Using Numeric Method

In a text entry screen, press  to switch entry modes until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.

Using Symbol Method

In a text entry screen, press  to switch entry modes until the @ (symbol) indicator displays.










Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2 left or right	highlight the combination you want
3 SELECT	lock a highlighted combination You can press keypad keys to add more symbols to the end of the combination.
or 	enter the highlighted combination

 Symbol Chart

Use this chart as a guide for entering characters with symbol method.

	.?! , @ ' - _ : ; () & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
	@ _ \ ß
	/ : ;
	" & '
	() [] { }
	¿ ¡ ~
	< > =
	\$ £ ¥ ¢


	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry mode (hold for default)


Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:


Action


Press **DELETE** () to delete one letter at a time.

Hold **DELETE** () to delete the entire message.

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** () to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** () again or turn the phone off.



Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature



> **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.


You can make emergency calls on your phone even when it is locked (see page 55).

Locking Your Phone Manually

Find the Feature




> **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 OK ()	lock the phone

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK ()	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:



Find the Feature



- > Settings > Security
- > Phone Lock
- > Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK (↵)	activate automatic lock

If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

 
If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK (↵)	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Locking and Unlocking the Keypad

You can lock the keypad to prevent accidental key presses (for example, when carrying your phone in a purse or pocket).


Press	To
	lock or unlock the keypad

Note: Incoming calls and messages unlock the keypad.




Using the Phonebook

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 69.

Shortcut: To open your phonebook from the home screen, press  up or down.

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** () to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

 
Note: This option is not available for entries stored on the SIM card.

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (📞). When you are ready, press **RECORD** (📞) again and say the entry's name (within 2 seconds). When prompted, press **RECORD** (📞) and repeat the name. Press **DONE** (📞) to store the voice name.

Storing a Picture for Caller ID


 
 
 
Note: This option is not available for entries stored on the SIM card.

You can store a picture for a phonebook entry. The picture displays when you receive calls from the entry.

When creating a phonebook entry, scroll to **Picture** and press **CHANGE** (📞). Press  to select a picture, and press **SELECT** (📞) to store it for the entry.

Dialing a Number



Press  > **Phonebook** > *entry to call* .

Tip: To quickly highlight entries in your **Phonebook** list: If your entries are sorted by **Speed No.**, press an entry's speed number to highlight it. For example, press   for entry number 15. If your entries are sorted by **Name**, **Voice Name**, or **Email**, enter the first letter of the entry's name to highlight it. For example, press   for the first entry that starts with "K".



Voice Dialing a Number

Press  > **Office Tools**, press **Dialing Services** > **Voice Dial**, and say the entry's name (within 2 seconds).

Tip: To create a shortcut to **Voice Dial**, press  > **Office Tools** > **Dialing Services**, scroll to **Voice Dial**, and hold



the . Your phone prompts you to save the shortcut. To use a shortcut, press  and the shortcut key number.

Sorting Phonebook Entries

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 71.

Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 71.



Setting Up Your Phone

Storing Your Name and Phone Number





To store or edit your name and phone number information on your SIM card:

Find the Feature



> **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

Setting the Time and Date

Your phone uses the time and date for the **Datebook**. Your phone can synchronize its time and date with the network:

Find the Feature



> **Settings** > **Initial Setup**
> **Time and Date** > **Autoupdate**
> **On**

To set the time and date manually, set **Autoupdate** to **Off** and then set the **Time** and **Date** options:

Find the Feature



> **Settings** > **Initial Setup**
> **Time and Date**
> **Time** or **Date**

Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an **alert**.

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 27).

To set a ring style:

Find the Feature



> **Settings** > **Ring Styles**
> **Style**

Press	To
1	scroll to the ring style
2 SELECT	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press > **Settings** > **Ring Styles** > style **Detail**.

Shortcut: To change your ring volume from the home screen, press left or right.

Setting a Wallpaper Image

You can set a picture or animation as a wallpaper (background) image in your phone's home screen. The



wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature



> **Settings** > **Personalize**
> **Wallpaper**

Press	To
1	scroll to Picture
2 CHANGE	open the picture viewer
3 up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4 SELECT	select the image
5	scroll to Layout
6 CHANGE	change the image layout
7	scroll to Center , Tile , or Fit-to-screen Center places the image in the center of the display. Tile fills the display with multiple copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT	confirm the layout setting
9 BACK	save wallpaper settings

Setting a Screen Saver Image

Set a picture or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Turn off the screen saver to extend battery life.

Find the Feature



> **Settings** > **Personalize**
> **Screen Saver**

Press	To
1	scroll to Picture
2 CHANGE (open the picture viewer
3 up or down	scroll to a picture/animation
	Scroll to (None) to turn off the screen saver image.
4 SELECT (select the image
5	scroll to Delay
6 CHANGE (set the delay interval
7	scroll to the inactivity interval that starts the screen saver
8 SELECT (confirm the delay setting
9 BACK (save screen saver settings

Setting Display Color

Select the color palette that your phone uses to display indicators, highlights, and soft key labels.



Find the Feature



> **Settings** > **Personalize**
> **Color Style**

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature



> **Settings** > **Initial Setup**
> **Backlight**

Setting Display Timeout

Set the display to turn itself off when no activity is detected for a specified time.



Find the Feature



> **Settings** > **Initial Setup**
> **Display Timeout**

Calling Features

For basic instructions on how to make and answer calls, see page 18.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.




Find the Feature



> **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the currently active phone line (see page 25).

Redialing a Number

Press	To
1 	view the dialed calls list
2 	scroll to the entry you want to call
3 	redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.



To redial the phone number:

Press	To
 or RETRY ()	activate automatic redial

Your phone redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

Using Caller ID

Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name (and picture, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your phonebook. For more information, see page 70.

Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

Find the Feature



> **Settings** > **In-Call Setup**
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialing (with digits visible in the display):

Press

To



> **Hide ID/Show ID**

hide or show your caller ID for the next call

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press

To

IGNORE (👉)

cancel the incoming call




Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Calling an Emergency Number


Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.




Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

Dialing International Numbers




Press and hold  to insert the local international access code (+) for the country from which you are calling.

Viewing Recent Calls





Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the dialed calls list.

Find the Feature  > **Recent Calls**

Press	To
1 	scroll to Received Calls or Dialed Calls
2 SELECT ()	select the list
3 	scroll to an entry

✓ means the call connected.

Press	To
4 	call the entry's number
or	Press and hold  for 2 seconds to send the number as DTMF tones during a call.
VIEW 	view entry details
or	
	open the Last Calls Menu to view the options available for the entry

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.






Option	Description
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 79).

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW 	see the received calls list
2 	select a call to return
3 	make the call




Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature




> **Recent Calls** > **Notepad**

Press	To
	call the number
or	
	open the Dialing Menu to attach a number or insert a special character
or	
STORE ()	create a phonebook entry with the number in the No. field



Attaching a Number

While dialing (with digits visible in the display):

Press	To
 > Attach Number	attach a number from the phonebook or recent calls lists

Calling With Speed Dial



Each entry you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, press **VIEW** ()

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call



Press	To
2 	submit the number
3 	call the entry

Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

Tip: You must specify which phone number list you want to use with this feature: phone memory phonebook or SIM card phonebook (see page 71).

Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature  > Messages > Voicemail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a New Voicemail notification.

Press**To****CALL** 

listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature> **Messages**> **Voicemail Setup****Press****To****1** keypad keys

enter your voicemail number

2 **OK** 

store the number

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.





For more about these characters, see the *More Here* guide.

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received another call.



Press	To
1 	answer the new call
2 SWITCH ()	switch between calls
or	
LINK ()	connect the 2 calls
or	
	end the call on hold
> End Call On Hold	



You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature



> **Settings** > **In-Call Setup**
> **Call Waiting**

Putting a Call On Hold

Press	To
HOLD () (if available)	put the call on hold
or	
	> Hold

Transferring a Call



You can announce that you are transferring an active call to another party, or you can transfer the call without announcing the transfer.

Announce the Call Transfer

Find the Feature



> **Hold**

Press	To
1 keypad keys	dial the number where you are transferring the call
2	call the number and speak to the person who answers
3	open the menu
4	scroll to Transfer
5 SELECT ()	select Transfer
6 OK ()	confirm the transfer

Do Not Announce the Call Transfer

Find the Feature



> **Transfer**

Press	To
1 keypad keys	dial the number where you are transferring the call
2	transfer the call



Phone Features

Menu Map

Main Menu



Phonebook

Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes



Messages

- Create Message
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates



Office Tools

- SIM Tool Kit Apps *
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Chat
- Dialing Services
 - Voice Dial
 - Fixed Dial
 - Quick Dial
 - Service Dial *



Games & Apps



Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions



Multimedia

- Themes
- Pictures
- Sounds
- MotoMixer



IM

- Log In
- Offline Convs.
- Offline Settings
- Help



Settings

- (see next page)

* optional features

This is the standard main menu layout. Menu organization and feature names may vary on your phone. Not all features may be available on your phone.

Settings Menu



Personalize

- Home Screen
- Main Menu
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- style Detail



Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup
- Scroll
- Language
- Contrast
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Keypad
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords



Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP







* optional features



Feature Quick Reference











This section helps you locate features on your phone that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 12).

Calling Features

Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press LINK ()
Call Forwarding	Set up or cancel call forwarding:  > Settings > Call Forward
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring
TTY Setup	Set up your phone for use with an optional TTY device:  > Settings > Initial Setup > TTY Setup

 




 




Messages






Feature	Description
Send Text Message	Send a text message:  > Messages > Create Message > New Short Message 
Send Multimedia Message	Send a multimedia message:  > Messages > Create Message > New Multimedia Msg 
Use MMS Template	Open an MMS template with preloaded media:  > Messages > Create Message > MMS Templates 
Read Message	Read a new text or multimedia message that you have received: Press READ (). 
Store Message Objects	Go to a multimedia message slide, then:  > Store 







Instant Messaging

Feature	Description
Log In	Log in to instant messaging:  > IM > Log In 
Find Others Online	After you log in: Select Contact List to see a list of other users. 
Start Conversation	Start a conversation: From your Contact List , highlight a name in Online Contacts , press SEND IM ().
Open Active Conversation	Open a conversation in progress: From your Contact List , highlight a name in Conversations , press VIEW ().
End Conversation	From the conversation display:  > End Conversation 
Log Out	Log out of instant messaging: Select Log Out from the IM Online menu. 




 

 
Chat


 







Feature	Description
Start Chat	Start a new chat session:  > Office Tools > Chat  > New Chat
Receive Chat Request	When you receive a chat request: Press ACCEPT () or IGNORE () .
End Chat	During a chat session:  > End Chat

Phonebook

Feature	Description
Create Entry	Create a new phonebook entry:  > Phonebook  > New > Phone Number or Email Address
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List










Feature	Description
Dial Number	<p>Call a number stored in the phonebook:</p> <p> > Phonebook, highlight the phonebook entry, press  to call</p>
Voice Dial Number	<p>Voice dial a number stored in the phonebook:</p> <p>> Office Tools > Dialing Services > Voice Dial</p> <p>When prompted, say the entry's name (within 2 seconds).</p>
Set Ringer ID for Entry	<p>Assign a distinctive ringer alert to a phonebook entry:</p> <p> > Phonebook > <i>entry</i></p> <p> > Edit > Ringer ID > <i>ringer name</i></p> <p>Note: The Ringer ID option is not available for entries stored on the SIM card.</p>
Set Picture ID for Entry	<p>Assign a picture to display when you receive calls from an entry:</p> <p> > Phonebook > <i>entry</i></p> <p> > Edit > Picture > <i>picture</i></p> <p>Note: The Picture option is not available for entries stored on the SIM card.</p>





Feature	Description
Set Category for Entry	Set the category for a phonebook entry:  > Phonebook > entry  > Edit > Category > category name Note: The Category option is not available for entries stored on the SIM card.
Set Category View	Set a phonebook category view:  > Phonebook  > Categories > category view
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > sort order
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook , scroll to entry, press  > Set Primary > phone number
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > Settings > Initial Setup > 1-Touch Dial



Personalizing Features

Feature	Description
Ring Style	Change the ring alert for an event:  > Settings > Ring Styles > style Detail > event name
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > style Detail > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > style Detail > Ring Volume Shortcut: Press  right or left in the home screen.
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > style Detail > Key Volume
Clock View	Display an analog clock or digital time readout in the home screen:  > Settings > Personalize > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View





Feature	Description
Main Menu	Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder
Change Soft Key Labels	Change soft key labels in the home screen  > Settings > Personalize > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Office Tools > Shortcuts > shortcut name

Menu Features






Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language

 


 



Feature	Description
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > Settings > Initial Setup > Master Clear

Dialing Features


Feature	Description
Fixed Dial	<p>When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.</p> <p>Turn fixed dialing on or off:</p> <p> > Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p> <p> > Office Tools > Dialing Services > Fixed Dial</p> 
Service Dial	<p>Dial service phone numbers:</p> <p> > Office Tools > Dialing Services > Service Dial</p> 



Feature	Description
Quick Dial	<p>Your service provider may program your phone with one or more quick dial numbers, such as the customer service number.</p> <p>Dial preprogrammed phone numbers:</p> <p> > Office Tools > Dialing Services > Quick Dial</p>
DTMF Tones	<p>Activate DTMF tones:</p> <p> > Settings > Initial Setup > DTMF</p> <p>Send DTMF tones during a call: Press number keys.</p> <p>Send stored numbers as DTMF tones during a call:</p> <p>Highlight a number in the phonebook or recent calls lists, then press  > Send Tones.</p>









Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service










provider. For billing information, contact your service provider.





Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 
Call Cost	View call cost information:  > Recent Calls > Call Cost 

Handsfree Features






Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.



Feature	Description
Speaker- phone	Activate a connected external speakerphone during a call:  Press SPEAKER () (if available) or  > Spkrphone On
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:   > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key:   > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:   > Settings > Car Settings > Auto Handsfree


Feature	Description
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:   > Settings > Car Settings > Power-Off Delay
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:   > Settings > Car Settings > Charger Time

Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application. 
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application. 
Talk Then Fax	Connect your phone to the device, enter the number, press  > Talk Then Fax , then press  to make the call. 



 






Network Features





Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network





Personal Organizer Features

Feature	Description
Create Datebook Event	Create a new datebook event:  > Office Tools > Datebook , highlight the day, press the center select button, press  > New
View or Edit Datebook Event	View or edit event details:  > Office Tools > Datebook , highlight the day, press the center select button, press VIEW ()
Event Reminder	View event reminder: VIEW () Close event reminder: BACK ()
Set Alarm	Set an alarm:  > Office Tools > Alarm Clock



 







 



Feature	Description
Turn Off Alarm	Turn off alarm: Press DISABLE (👉) or  . Set 8-minute delay: Press SNOOZE (👉).
Calculator	Calculate numbers:  > Office Tools > Calculator
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK (👉), enter amount, and select \$ in the bottom of the display.








 

Security

Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application



News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > Web Access > Browser 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT () , press STORE ().
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > Multimedia > Themes > theme 
Download Game or Application (micro-browser)	Download a Java game or application with the micro-browser:  > Web Access > Browser , highlight the application, press SELECT () , press DOWNLOAD () 

Feature	Description
Download Game or Application (computer)	Download a Java game or application from a computer:  Connect your phone to the computer, press  > Settings > Java Settings > Java App Loader .
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT ()
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded:  > Multimedia > Sounds
Edit Sounds With MotoMixer	Edit MIDI-based sound files that you can use with your phone:  > Multimedia > MotoMixer > [New Mix] or mix file name
Create Ring Tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]



Specific Absorption Rate Data

This model phone meets the international standards for exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is 0.73 W/kg.³

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this

product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

1. The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
2. CENELEC is a European Union standards body.
3. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

ITC03-182

Index

A

- accessories 12, 66
- accessory connector port 1
- active line indicator 25
- active line, changing 53
- alarm clock 80
- alert
 - creating 83
 - defined 49
 - setting 17, 49, 72
 - turning off 18
- animation
 - downloading 82
 - screen saver 50
 - viewing 83
 - wallpaper 49
- answering a call 18
- application, locking and
 - unlocking 81
- automatic redial 53

B

- backlight 52
- barring calls 66
- battery
 - charging 15
 - extending battery life 13, 52

- installing 14
- level indicator 27
- browser. *See* micro-browser

C

- calculator 81
- call
 - alert, turning off 18
 - answering 18
 - barring 66
 - barring password,
 - changing 42
 - call waiting 61
 - costs 77
 - dialed calls list 56
 - dialing 18
 - emergency number 55
 - ending 18
 - forwarding 66
 - handsfree speaker 41
 - hold 62
 - international access code
 - 56
 - making 18
 - received calls list 56
 - receiving 18
 - ring style 17, 49, 72
 - speakerphone 78

- timers 77
- transferring 62
- unanswered call 58
- Call Failed, Number Busy
 - message 53
- call waiting 61
- caller ID 54
- calling line identification.
 - See caller ID
- category
 - phonebook entry 71
 - view 71
- center select button 28
- character chart 36
- chat 69
- clock
 - selecting analog or digital 72
 - setting 48
- codes
 - changing 42
 - default 42, 44
 - forgetting 44
- color, setting 51
- conference call 66
- customizing the menu 72

D

- data call 79
- date, setting 48
- datebook 80
- dialed calls list 56

- dialing a number 18, 75, 76
- display
 - backlight 52
 - color 51
 - description 23
 - home screen 23
 - language 73
 - personalizing 73
 - timeout 52
- distinctive ringer alert 72
- DTMF tones
 - activating 76
 - sending 76

E

- earpiece volume 17
- emergency number 55
- end key 1
- ending a call 18
- Enter Unlock Code
 - message 43

F

- fax call 79
- 5-way navigation key 1, 28
- fixed dial 75
- forwarding calls 66

G

- games 82, 83
- GPRS indicator 24

groove tunes 83

H

handsfree speaker 41

headset jack 1

hold a call 62

home keys, personalizing
73

home screen

defined 23

selecting clock view 72

I

IM 68

incoming call

answering 18

forwarding 66

Incoming Call message 54

indicators

active line 25

battery level 27

GPRS 24

Java midlet 26

location 27

message 26

message waiting 21

messaging presence 26

ring style 27

roam 25

signal strength 24

text case 34

text entry method 26, 34

transmission 25

voicemail message 26,
60

instant messaging. *See* IM

international access code
56

iTAP software 37

J

Java applications 82, 83

Java midlet indicator 26

joystick 1

K

key

center select button 28
end 1

5-way navigation 1, 28

left soft key 1, 23, 73

menu 1

power 1

right soft key 1, 23, 73

send 1

voice 1

volume control 1, 17

keypad

volume, setting 72

L

language, setting 73

left soft key

- functions 1, 23
- personalizing 73
- line, changing 53
- location indicator 27
- lock
 - application 81
 - phone 42
 - SIM card 81
- Low Battery message 27

M

- making a call 18
- master clear 74
- master reset 74
- menu
 - entering text 31
 - icons, changing in home screen 73
 - icons, converting to text 72
 - language, setting 73
 - personalizing 73
 - rearranging features 73
 - using 29
 - view, changing 72
- menu key 1
- message
 - chat 69
 - MMS template 67
 - MMS, defined 19
 - multimedia message 67
 - reading 67

- text 67
- message indicator 26
- message waiting indicator 21
- messaging presence indicator 26
- micro-browser
 - browser setup 82
 - Java applications 82, 83
 - using 82
 - Web sessions 82
- MMS template 67
- MMS. *See* message
- More Here* guide 12
- MotoMixer 83
- multimedia message
 - receiving 21
 - sending 19, 67
- multimedia messaging service. *See* message
- my telephone number 18, 48

N

- network settings 80
- notepad 58
- number
 - storing your number 48
 - viewing your number 18
- numbers, entering 39

O

- 1-touch dial
 - setting preference 71
 - using 60
- optional accessory, defined 12
- optional feature, defined 12

P

- passwords. *See* codes
- phone
 - active line indicator 25
 - active line, changing 53
 - alert, turning off 18
 - clear stored information 74
 - codes 42
 - date, setting 48
 - language, setting 73
 - locking 42
 - network settings 80
 - open to answer 18
 - reset all options 74
 - ring style 17, 49, 72
 - security code 42
 - time, setting 48
 - turning on/off 17
 - unlock code 42
 - unlocking 17, 42
- phone number
 - active line indicator 25

- active line, changing 53
 - attaching 2 numbers 59
 - international access code 56
 - redialing 53
 - storing in phonebook 69
 - storing your number 48
 - viewing your number 18
- phone theme 82
 - phonebook
 - attaching 2 numbers 59
 - category for entry 71
 - category view 71
 - dialing a number 70
 - group mailing list 69
 - 1-touch dial 60
 - picture ID 46, 54, 70
 - primary number, setting 71
 - ringer ID 70, 72
 - sorting entries 47, 71
 - speed dial number 59
 - storing an entry 69
 - voice dialing 70
 - photo
 - downloading 82
 - picture ID 54
 - picture
 - downloading 82
 - screen saver 50
 - viewing 83
 - wallpaper 49

- picture ID
 - caller ID 54
 - setting 46, 70
- PIN code
 - changing 42
 - entering 81
- PIN2 code, changing 42
- power key 1
- predictive text entry 37
- primary text entry method 32

Q

- quick dial 76

R

- received calls list 56
- recent calls 56
- redial
 - automatic redial 53
 - busy number 53
- reference guide 12
- right soft key
 - functions 1, 23
 - personalizing 73
- ring style indicators 27
- ring style, setting 17, 49, 72
- ring tone
 - creating 83
 - downloading 82
 - editing with MotoMixer 83
 - managing 83

- ringer ID
 - setting 70
 - turning on/off 72
- ringer volume, setting 17, 72
- roam indicator 25

S

- Safety
 - introduction 6
 - use while driving 8
- screen saver 50
- secondary text entry
 - method 32
- security code
 - changing 42
 - default 42
- send key 1
- service dial 75
- shortcuts 73
- signal strength indicator 24
- silent alert, setting 17, 49, 72
- SIM Blocked message 17, 81
- SIM card
 - defined 13
 - installing 13
 - locking 81
 - PIN code entry 17
 - PIN code, changing 42
 - PIN2 code, changing 42

- precautions 13
- SIM Blocked message
 - 17, 81
- SIM PIN code
 - changing 42
 - entering 81
- SIM PIN2 code, changing
 - 42
- soft keys
 - functions 23
 - illustration 1
 - personalizing 73
- sound
 - creating 83
 - downloading 82
 - managing 83
- Speaker On message 41
- speakerphone
 - activating 78
 - automatic answer 78
- speed dial 59
- standby time, increasing 52
- symbol chart 40
- symbols, entering 39

T

- tap method text entry 34
- telephone number
 - storing your number 48
 - viewing your number 18
- text

- capitalization, changing
 - 33
- character chart 36
- entering 31
- entry method, selecting
 - 32
- entry method, setup 33
- iTAP software predictive
 - text entry 37
- numeric method 39
- symbol chart 40
- symbol method 39
- tap method 34
- text case indicator 34
- text entry method
 - selecting 32
 - setup 33
- text entry method indicator
 - 26, 34
- theme 82
- time, setting 48
- timers 77
- transfer a call 62
- transmission indicator 25
- travel charger 16
- TTY device 66

U

- unlock
 - application 81
 - phone 42
- unlock code

- bypassing 44
- changing 42
- default 42, 44
- entering 17

V

- vibrate alert
 - setting 17, 49, 72
 - turning off 18
- voice dial 70, 78
- voice key
 - dialing a number 70
 - illustration 1
- voicemail 60
- voicemail message indicator
 - 26, 60
- volume
 - earpiece 17
 - keypad 72
 - ringer 17, 72
- volume keys 1, 17

W

- wallpaper 49
- Web pages 82
- Web sessions 82
- Welcome 1

U.S. patent Re. 34,976



MOTOROLA

Wireless Phone Safety Tips

Safety is Your Most Important Call!

Your Motorola Wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a handsfree device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ handsfree accessories available today.
- 3 Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call

at an inconvenient time, if possible, let your voice mail answer it for you.

- 4 Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.¹
- 9 Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.¹

10 Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

For more information, please call 1-888-901-SAFE or visit the
CTIA Web site at www.wow-com.comTM

1. Wherever wireless phone service is available.

