

FK-502 Fax Kit






INSTALLATION MANUAL

Applied Machines: C650/C550/C451

COLOR MFP (Color/B&W): 50 ppm/65 ppm, 45 ppm/55 ppm, 45 ppm/45 ppm

Product Code: A00H/A00J/A00K

 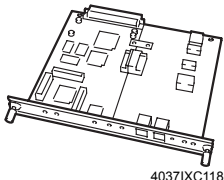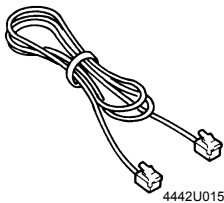I. Accessory parts

No.	Name	Shape	Q'ty
1.	FAX kit	 4037IXC118DA	1
2.	Modular cable*	 4442U015AA	1
3.	Label A*		1
4.	Label B*	 4037IXC226DA	1
5.	Installation precautions		1

* Varies depending on the applicable marketing area

WARNING




After unpacking, be sure to get rid of the packaging materials and keep them out of the reach of children.


Putting the head in the plastic bag involves danger of suffocation.

II. Installation procedures


1. Turn off the machine and unplug the power cord from the power outlet.
2. Remove the right rear cover.

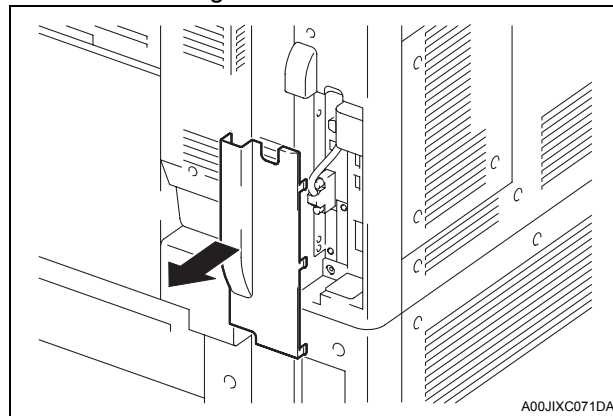


3. Remove the right rear cover (three screws).

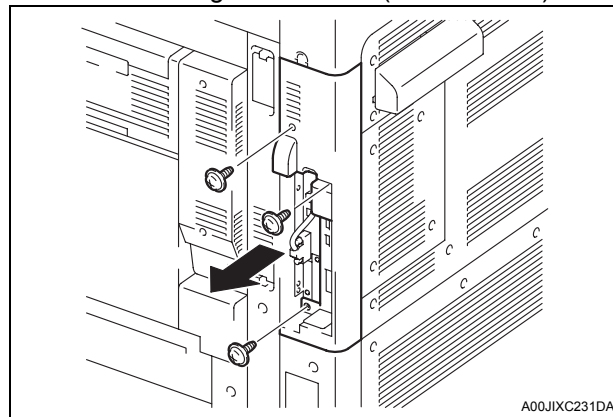

4. Remove the shield cover (two screws).

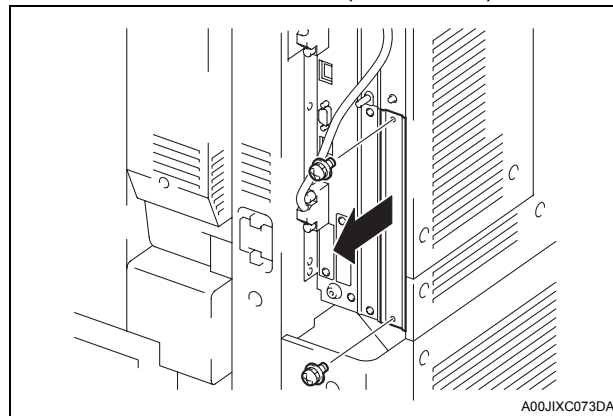


5. Check to make sure that SW2 on the FAX control board is set to "LINE-1."

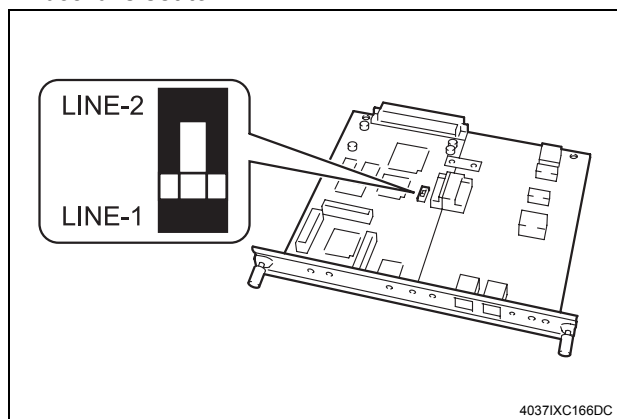

6. Insert the FAX kit and tighten the two shoulder screws.

Note:

When inserting the board, align it with the slits.

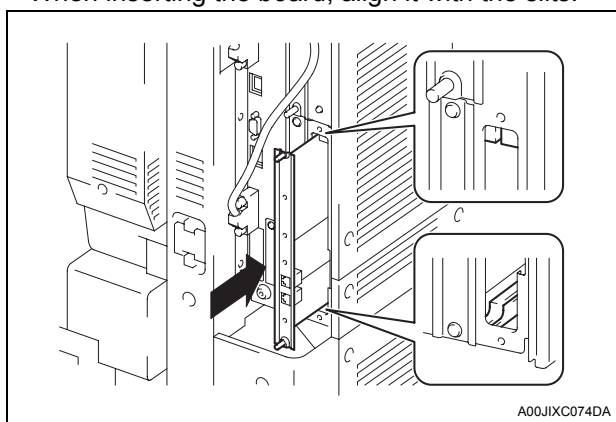


7. Reinstall the right rear cover that has been removed in step 3 (three screws).


8. Connect the modular cable.

Note:

Plug the modular connector into the modular jack (LINE) on the right side of the main unit.

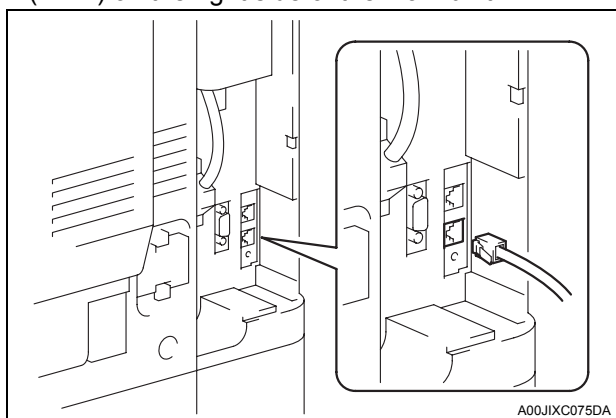


9. When reinstalling the right rear cover that has been removed in step 2, make sure that the modular cable goes through the opening below the cover.

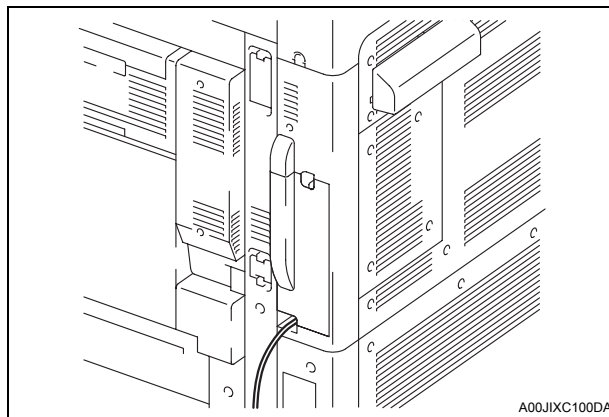


III. Setting the FAX


1. Plug the power cord into the power outlet and turn on the machine.
2. Display the Service Mode screen.
(For details of how to display the Service Mode screen, see the service manual.)
3. Touch "System 2."

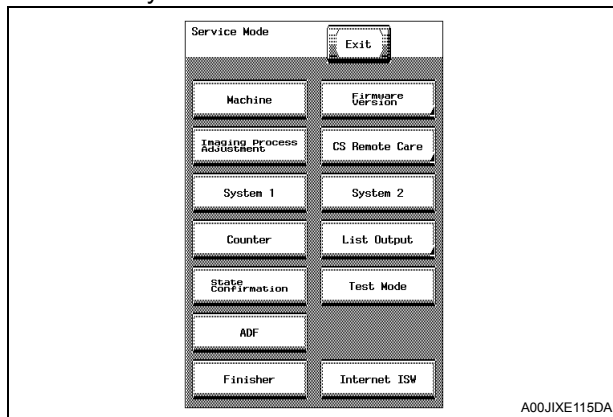


4. Touch "Option Board Status."

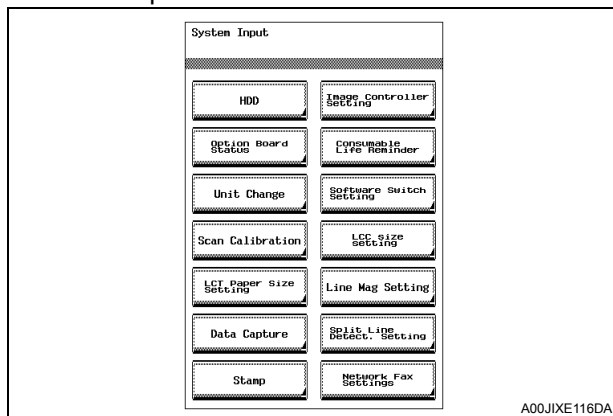


5. Touch "Set" of Fax (circuit 1).
6. Touch "END."

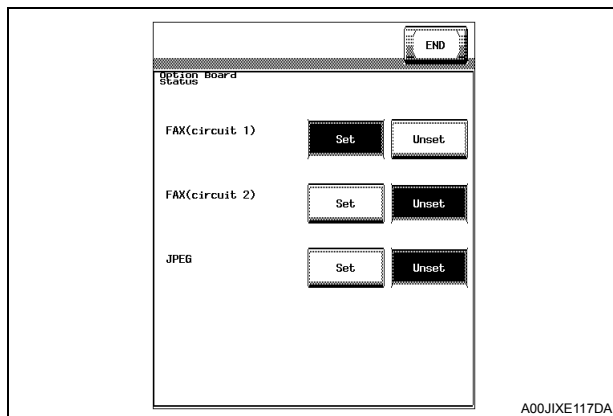


7. Touch "System 1."

 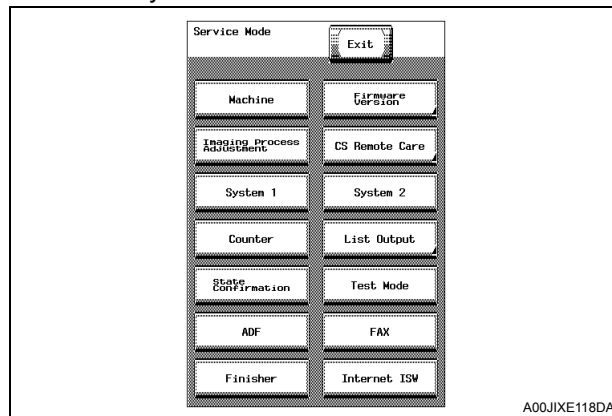



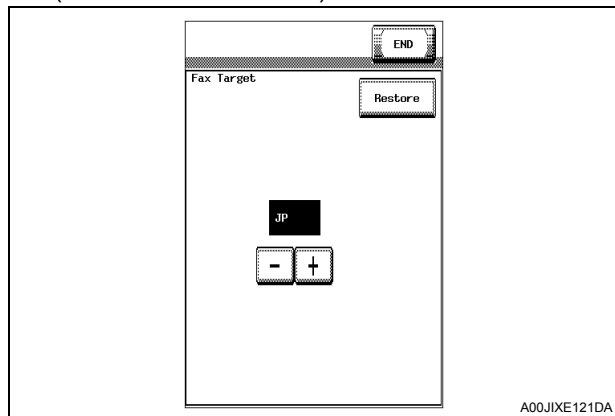
8. Touch "Marketing Area."

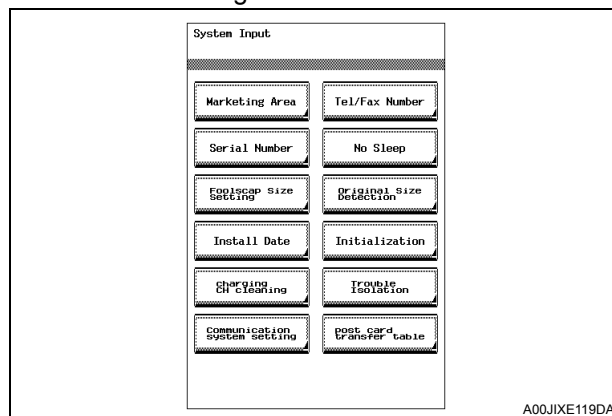

9. Touch "Fax Target."

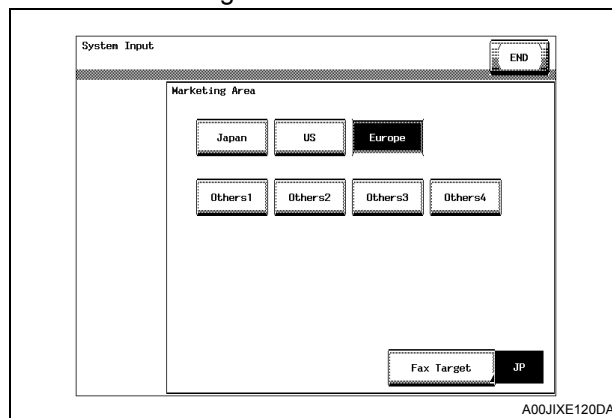

10. Use the  or  key to select the Target Area (Refer to the list below).



Country code setting for FAX			
U.S.	US	Portugal	EU* (PT)
Canada	CA	Italy	EU* (IT)
Germany	DE	Poland	EU* (PL)
U.K.	EU* (GB)	Taiwan	TW
France	EU* (FR)	Australia	AU
Switzerland	EU* (CH)	New Zealand	NZ
Netherlands	EU* (NL)	Hong Kong	HK
Belgium	EU* (BE)	Thailand	US
Austria	EU* (AT)	Malaysia	MY
Norway	EU* (NO)	Singapore	SG
Sweden	EU* (SE)	South Africa	ZA
Finland	EU* (FI)	China	CN
Ireland	EU* (IE)	Korea	KR
Denmark	EU* (DK)	Argentina	AR
Spain	EU* (ES)		


Note:

Set OT for countries other than the ones listed above.


- * Select the appropriate country code according to the dial system used in the installation place. For DTMF, select "EU," and for dial pulse, select "each destination country code."

11. Touch "END" twice.


12. Touch "FAX."

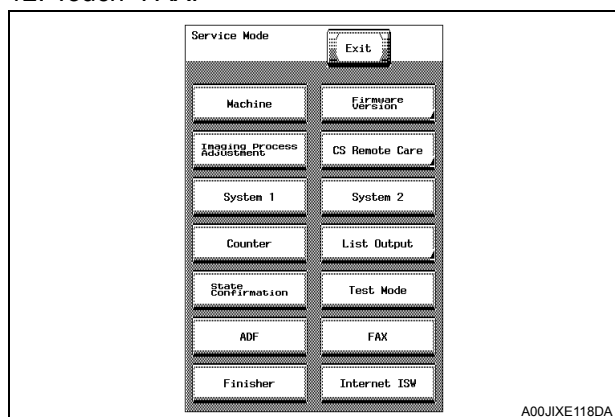


13. Touch "Initialization."

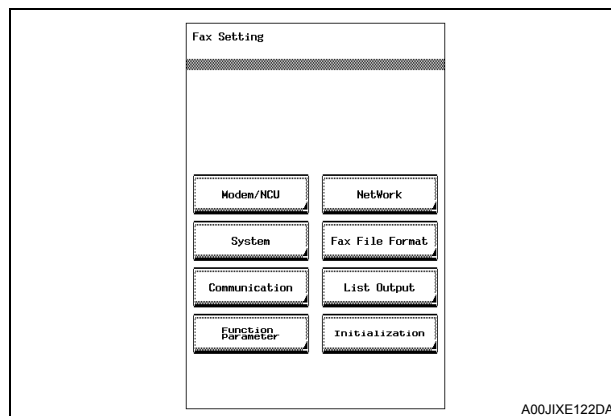


14. Touch "Fax Function Parameter" and "Communication Journal Data."

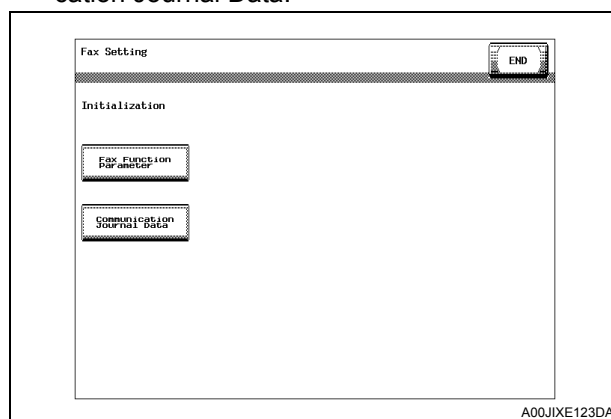

15. Touch "Yes."

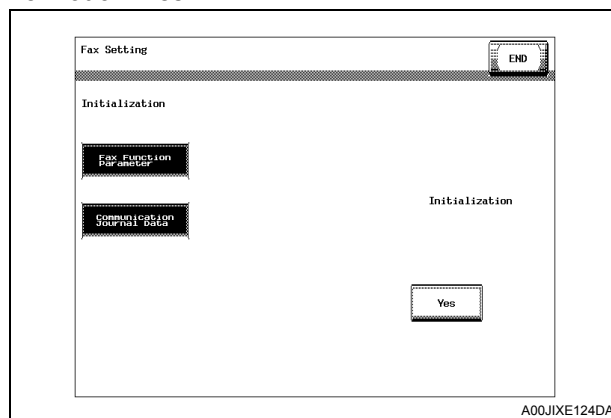

16. Touch "Yes."

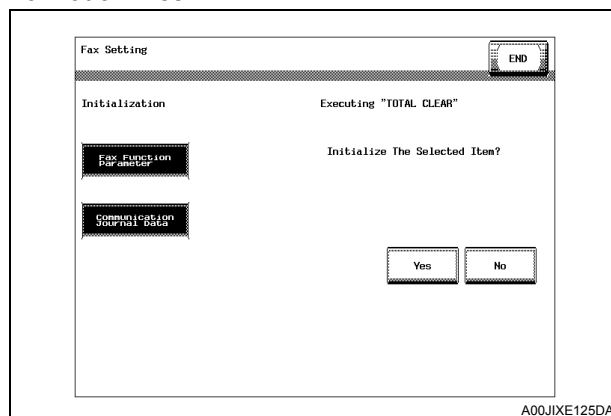

17. Touch "END."
18. Touch "Exit" on the Service Mode screen.
19. Turn OFF and ON the Main Power Switch.

Note:


- When displayed the Service Mode screen, be sure to turn off the main power after exiting the Service Mode screen and wait for 10 seconds or more before turning on.
20. Perform the sending and receiving tests between the Machine and either the store which offers the service or the local retailer, to check that it can be operated normally.

IV. Caution when performing dial transfer


After setting the country code, dialing operations may be selected after the switchboard dial tone is detected depending on the destination. In this case, depending on the switchboard connected to the machine and the type of dial tone received from the switchboard, dialing operations may not be available. If that happens, you may be able to avoid the problem with the following setting.

<Turn the Dial Tone Detection function OFF>


1. Display the Service Mode screen.
(For details of how to display the Service Mode screen, see the service manual.)
2. Touch "FAX."

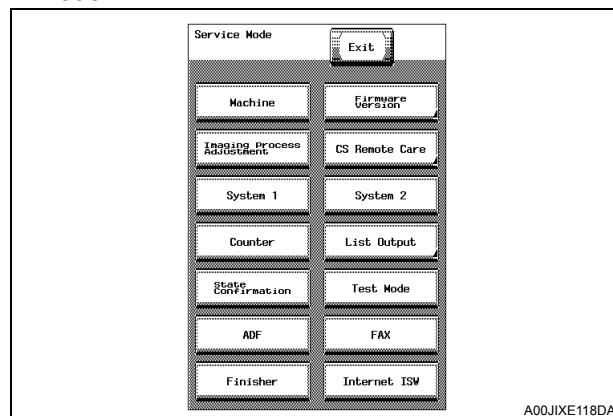


3. Touch "NetWork."

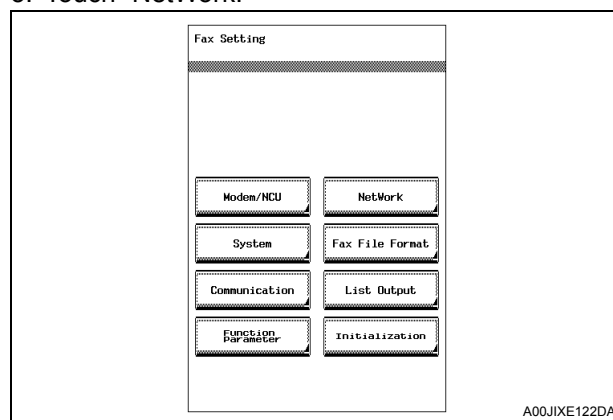

4. Touch "Network Setting 2."

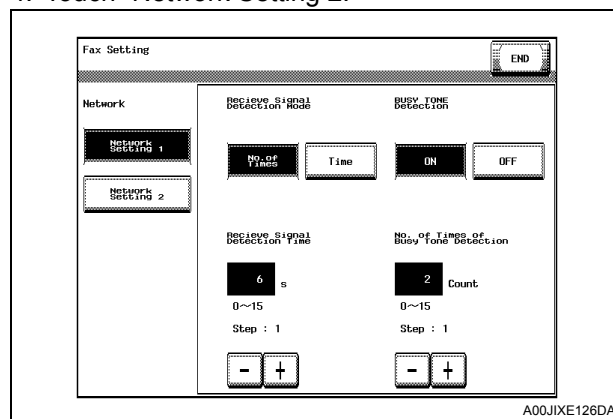

5. Touch "OFF" of Dial Tone Detection.

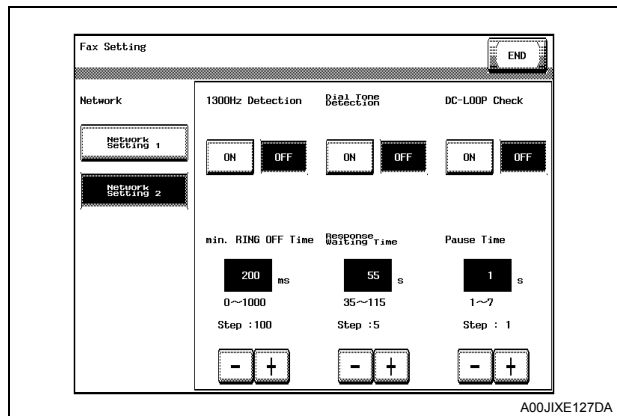

6. Touch "END."

7. Touch "Exit" on the Service Mode screen.

8. Turn OFF and ON the Main Power Switch.

Note:


When displayed the Service Mode screen, be sure to turn off the main power after exiting the Service Mode screen and wait for 10 seconds or more before turning on.

V. Affixing the labels

1. Affix the labels furnished with the kit to the position shown below.

Note:

Affix the Label B only when the country code is set as [DE] during installation.

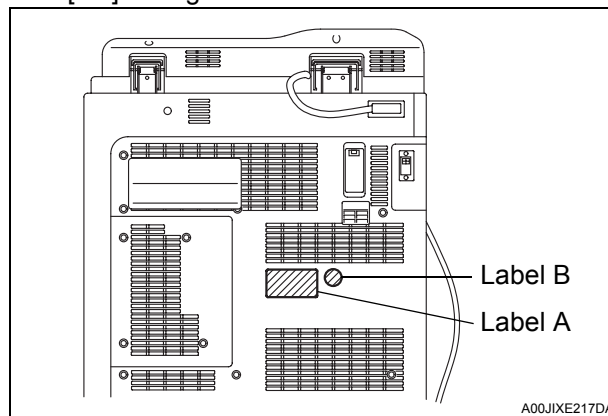

2. Affix the label (Super G3 label) furnished with the machine to the position shown below.

