

DENSO

**For DENSO Authorized
ECD Service Dealer Only**

Diesel Injection Pump

No. E-03-03

SERVICE MANUAL

Common Rail System for HINO J08C/J05C Type Engine

Operation

June, 2003

GENERAL

The ECD-U2 was designed for electronic control of injection quantity, injection timing and injection pressure to obtain optimal operational control.

Features

- Lower exhaust gas and higher output due to high pressure injection in all usage ranges.
- Reduction in noise and exhaust gas due to injection rate control.
- Improved performance due to increased flexibility in the injection timing setting.
- Independent control of injection pressure in response to engine speed and load.

Main Elements

Manufacturer	Vehicle Model	Engine Model	Cylinder Configuration	Total Displacement (cc)	Maximum Output (PS/rpm)
Hino Motor, Ltd.	HR1J	J08C	Straight 6	7,961	J-N: 205/2,900
					J-V: 220/2,900
	RX4JFE	J05C	Straight 4	5,307	175/2,900

Main Components Part Number

No.	Description	HR1J (J08C-UC)		RX4JFE (J05C-TG)	
		DENSO P/N	HINO P/N	DENSO P/N	HINO P/N
1	Supply pump	094000-0183	22730-1042A	094000-0193	22730-1072A
1-1	Cylinder recognition sensor	029600-0580	89411-1290A1	029600-0580	89411-1290A1
2	Injector	095000-0174	23910-10033C	095000-0174	23910-10033C
3	Rail	095440-0243	22760-1100C	095440-0171	22760-1041C
3-1	Rail pressure sensor	499000-4441	—	499000-4441	—
3-2	Pressure limiter	095420-0060	—	095420-0060	—
3-3	Flow damper	095400-0150	—	095400-0150	—

1. Outline

1.1 System Outline

This system also provides the following functions:


- A self-diagnosis and alarm function using computer to diagnose the system's major components and alert the driver in the event of a problem.
- A fail-safe function to stop the engine, depending upon the location of the problem.
- A backup function to change the fuel regulation method, thus enabling the vehicle to continue operation.

1.2 System Configuration

Divided by function, the system can be classified according to the fuel system and the control system.

[1] Fuel System


High-pressure fuel that is generated by the supply pump is distributed to the cylinders using a rail. Electromagnetic valves in the injectors then open and close the nozzle needle valve to control the start and end of fuel injection.

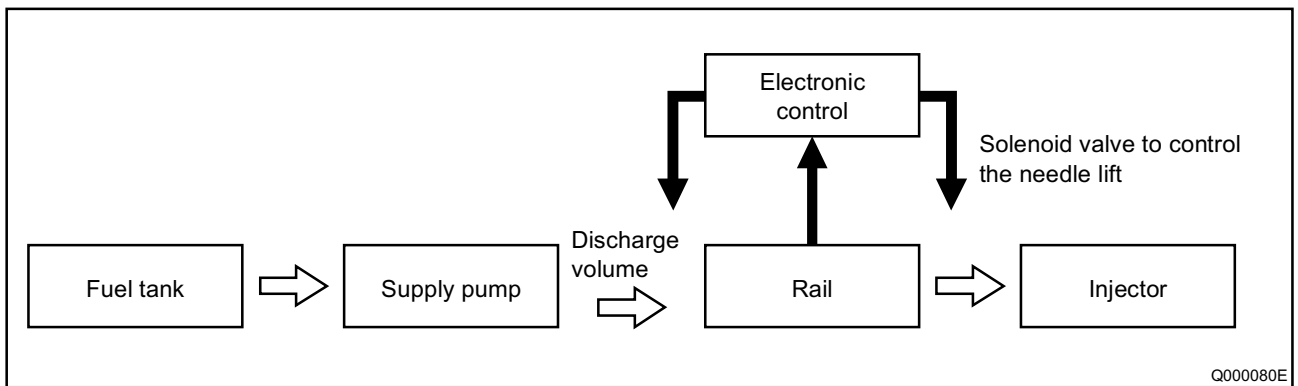


[2] Control System

Based on the signals received from various sensors mounted on the engine and the vehicle, the ECU controls current timing and the duration in which the current is applied to the injectors, thus ensuring an optimal amount of fuel is injected at an optimal time.

The control system can be broadly classified according to the following electronic components: sensors, computers, and actuators.

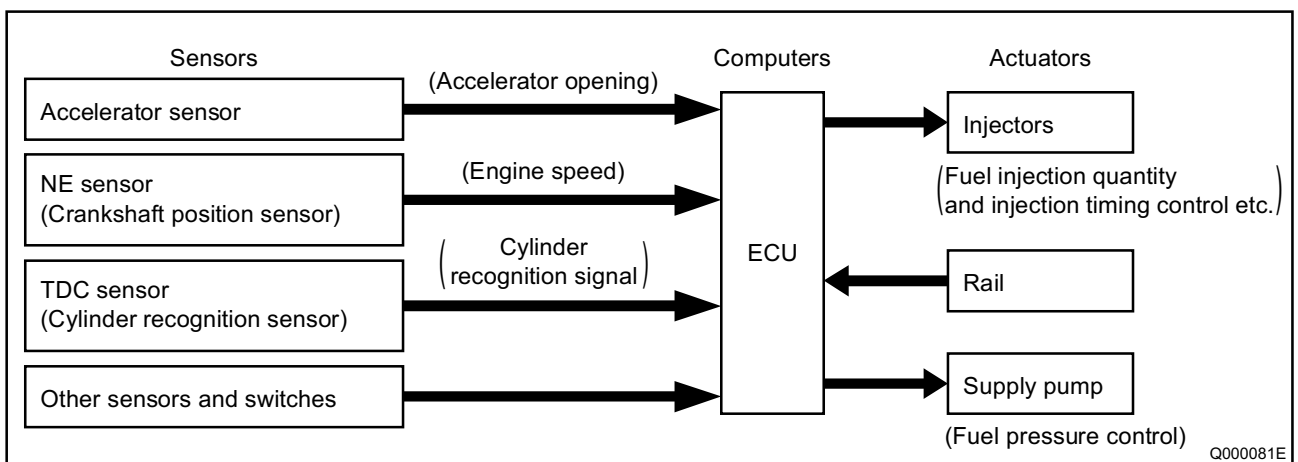


[3] System Configuration (1)

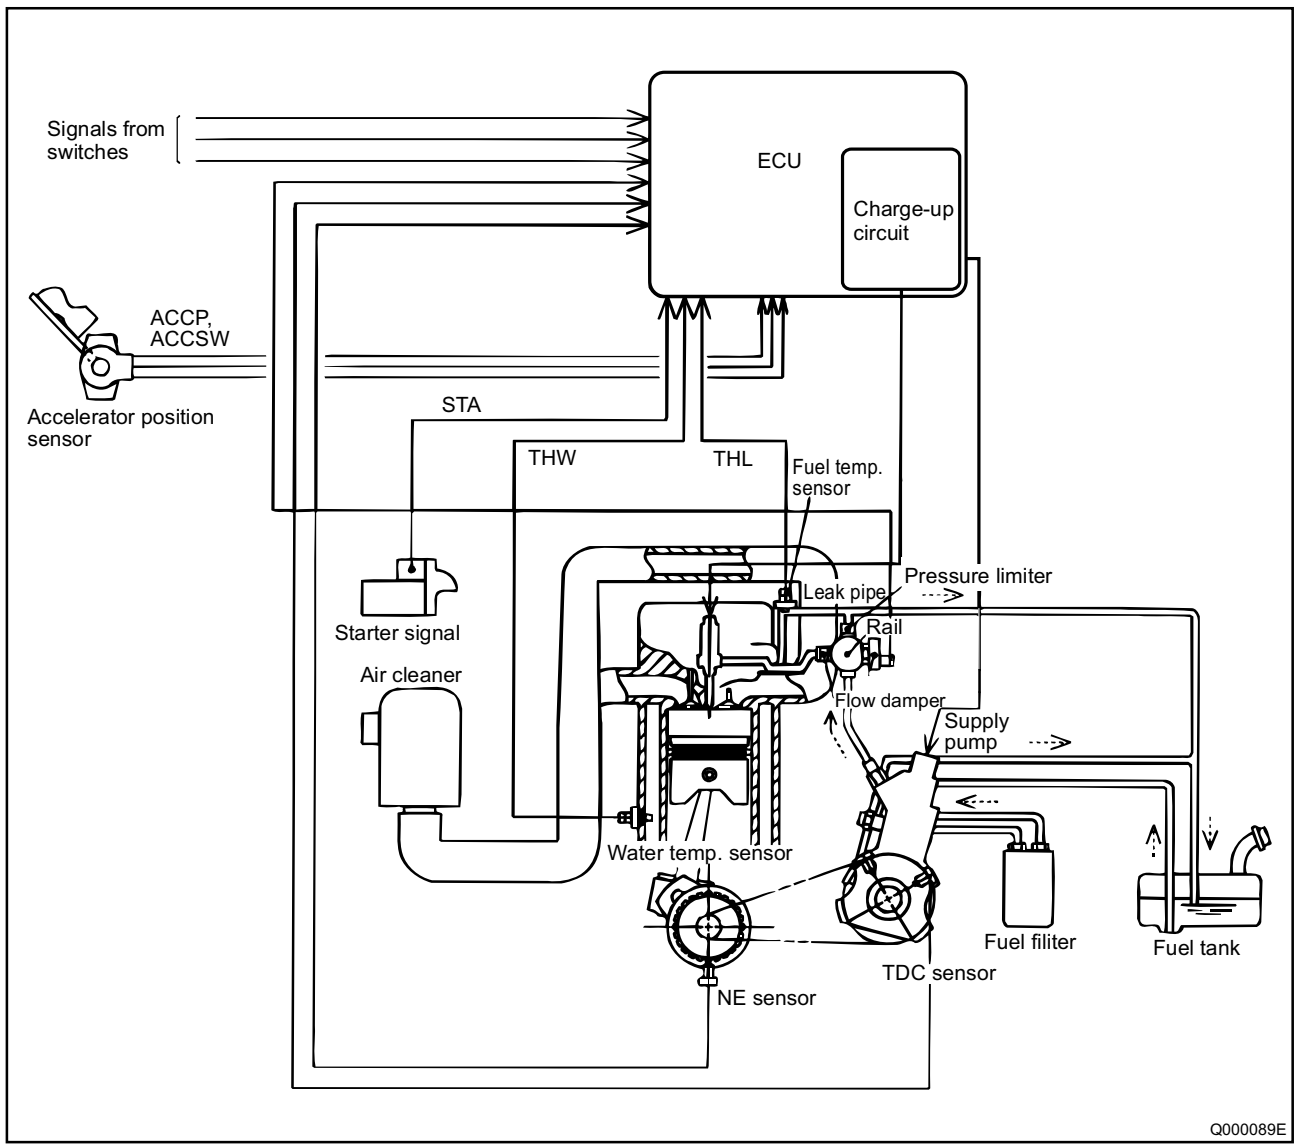

Q000089E

[4] System Configuration (2)

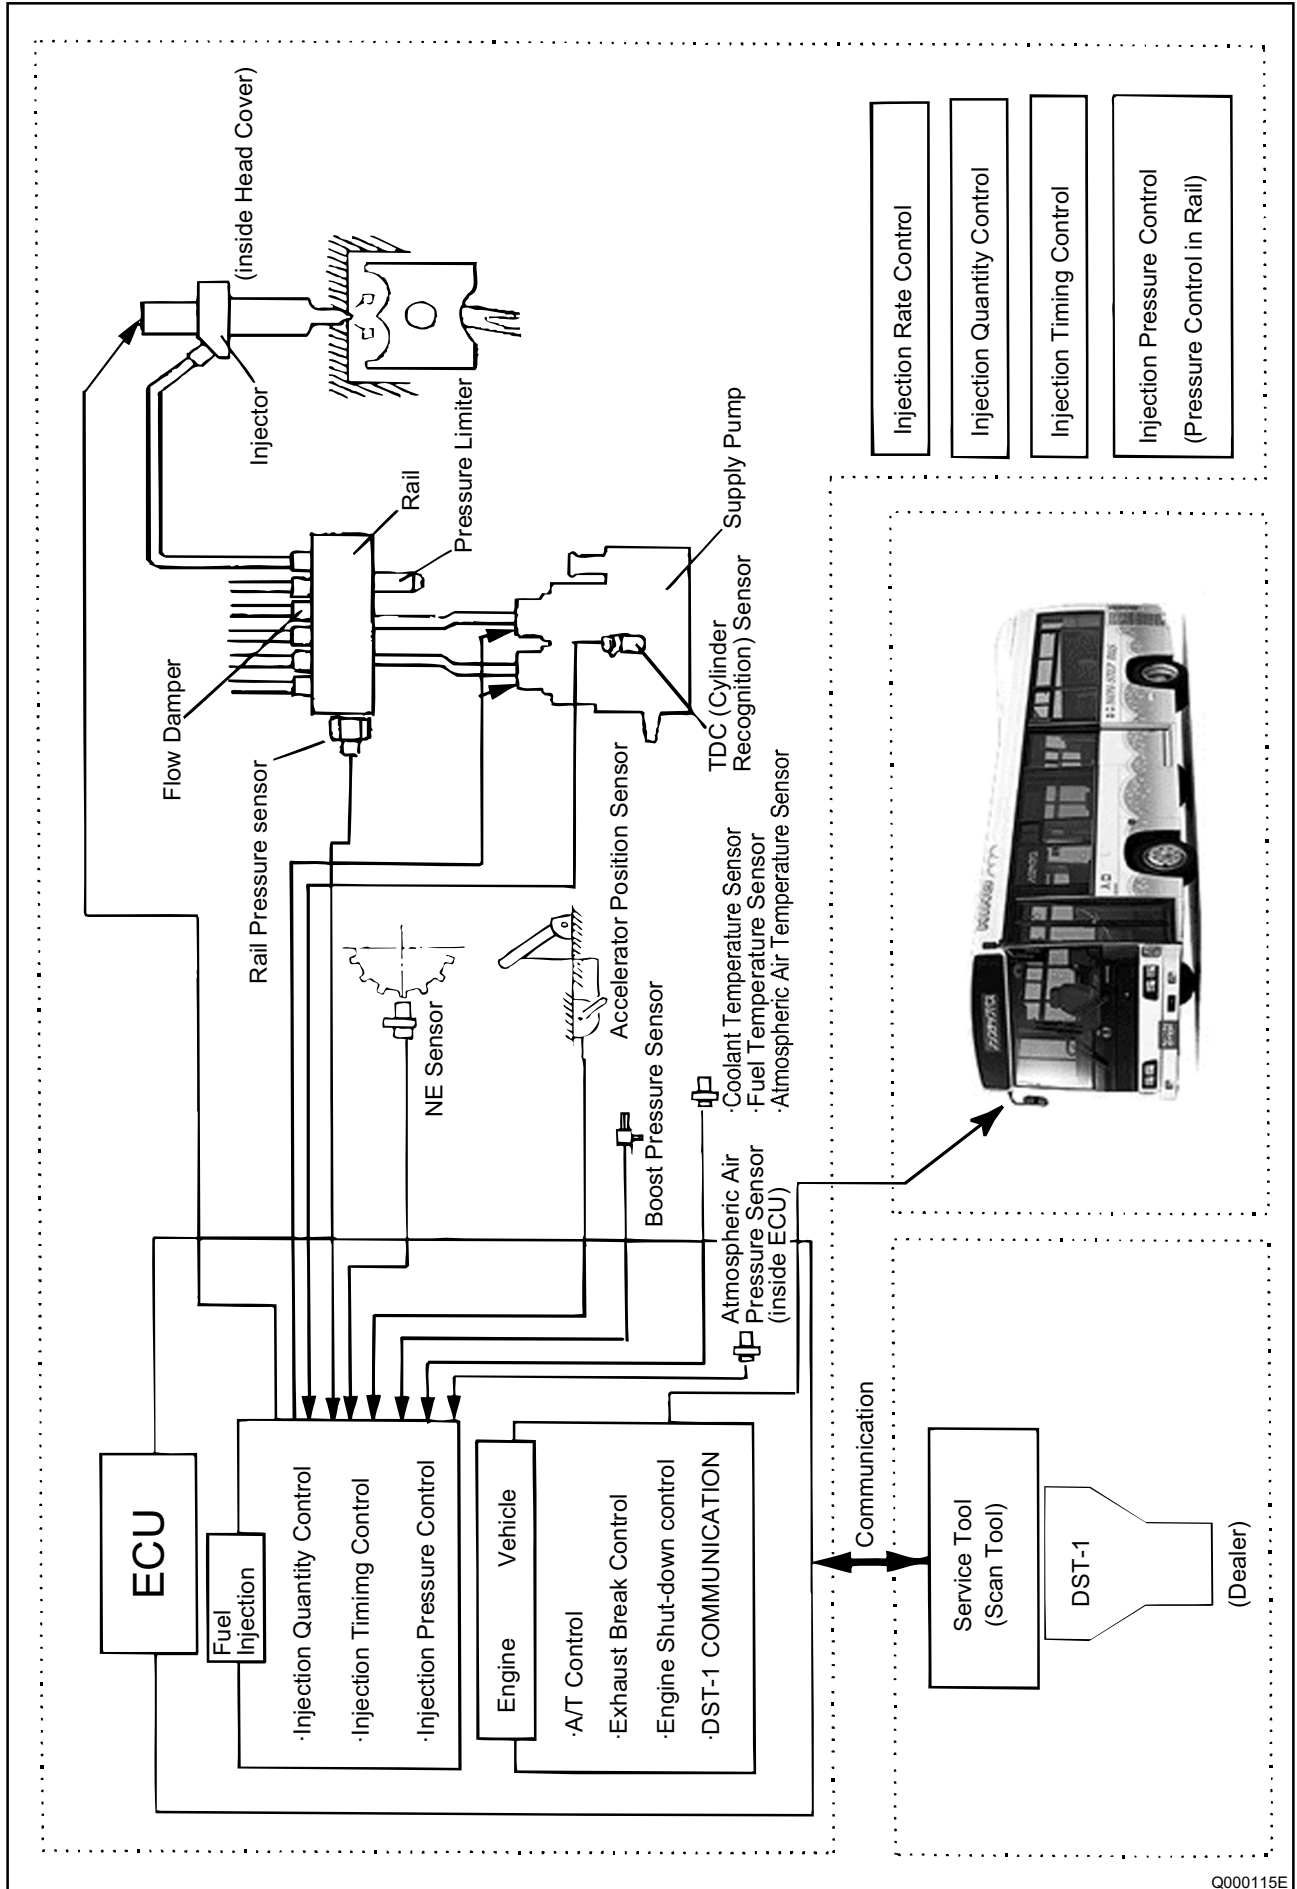

1.3 Construction and Operation of the System

The rail system is comprised of a supply pump, a rail, and injectors, and also includes an ECU and sensors to regulate those components.

The supply pump generates the internal fuel pressure in the rail. Fuel pressure is regulated by the quantity of fuel discharged by the supply pump. In turn, the fuel discharge quantity is regulated by electronic signals from the ECU that turn the PCVs (pump control valves) ON and OFF.


Upon receiving fuel pressurized by the supply pump, the rail distributes the fuel to the cylinders. The pressurized fuel is detected by the rail pressure sensor (installed in the rail) and undergoes feedback control so that actual pressure will match the command pressure (designated according to the engine speed and load).

Pressurized fuel in the rail passes through the injection pipes that lead to the cylinders, and applies pressure to the injector nozzles and the control chamber.



The injector regulates injection quantity and timing by turning the TWV (two-way valve) ON and OFF.

When the TWV is ON (current applied), the fuel circuit switches over, causing the high-pressure fuel in the control chamber to flow out via the orifice. As a result, the force of the high-pressure fuel at the nozzle valve opening causes the needle valve to lift, thus starting the injection of fuel. When the TWV is turned OFF (current not applied), the fuel circuit switches over so that high-pressure fuel, traveling via the orifice, is introduced to the control chamber. As a result, the needle valve lowers, thus ending the injection of fuel.

Thus, through electronic control, the timing of the current applied to the TWV determines the injection timing, and the duration in which current is applied to the TWV determines the injection quantity.

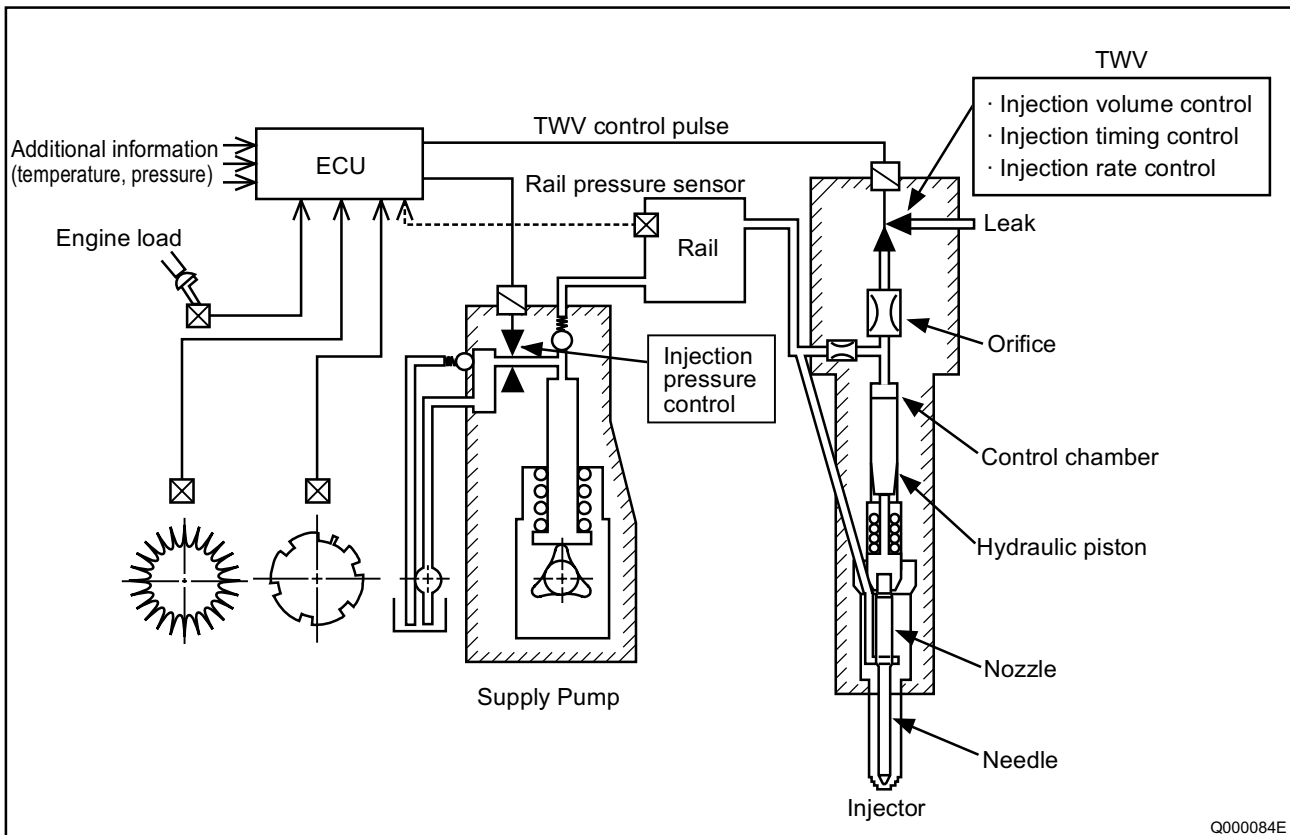

1.4 Comparison to Conventional Pump

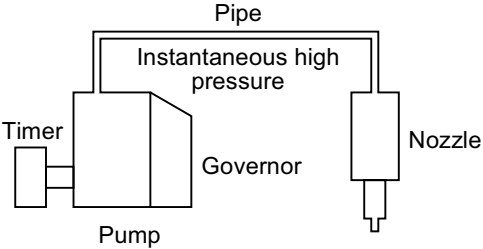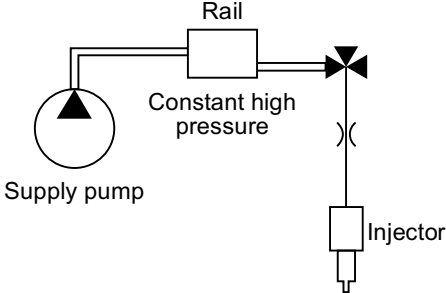System	Inline Type	Common Rail System
		
Injection quantity regulation	Pump (governor)	ECU, injector (TWV)
Injection timing regulation	Pump (timer)	ECU, injector (TWV)
Distribution of generated pressure	Pump	Supply pump
Distribution	Pump	Rail
Injection pressure regulation	(Dependent on engine speed and injection volume)	Supply pump (PCV)

Q000085E

2. Construction and Operation of Components

2.1 Supply Pump


[1] Outline

The function of the supply pump is to regulate the fuel discharge volume, thus generating internal fuel pressure in the rail.

[2] Construction

The supply pump consists of a feed pump, similar to that of the conventional in-line pump, and the PCVs (pump control valves), provided at each cylinder, to regulate the fuel discharge volume.


The supply pump uses a three-lobe cam or two-lobe cam reducing the number of pump cylinders to one-third or one-second of the engine cylinders (e.g. a two-cylinder pump for a six-cylinder engine or for a four-cylinder engine). Furthermore, a smooth and stable rail pressure is obtained because the rate at which fuel is pumped to the rail is the same as the injection rate.

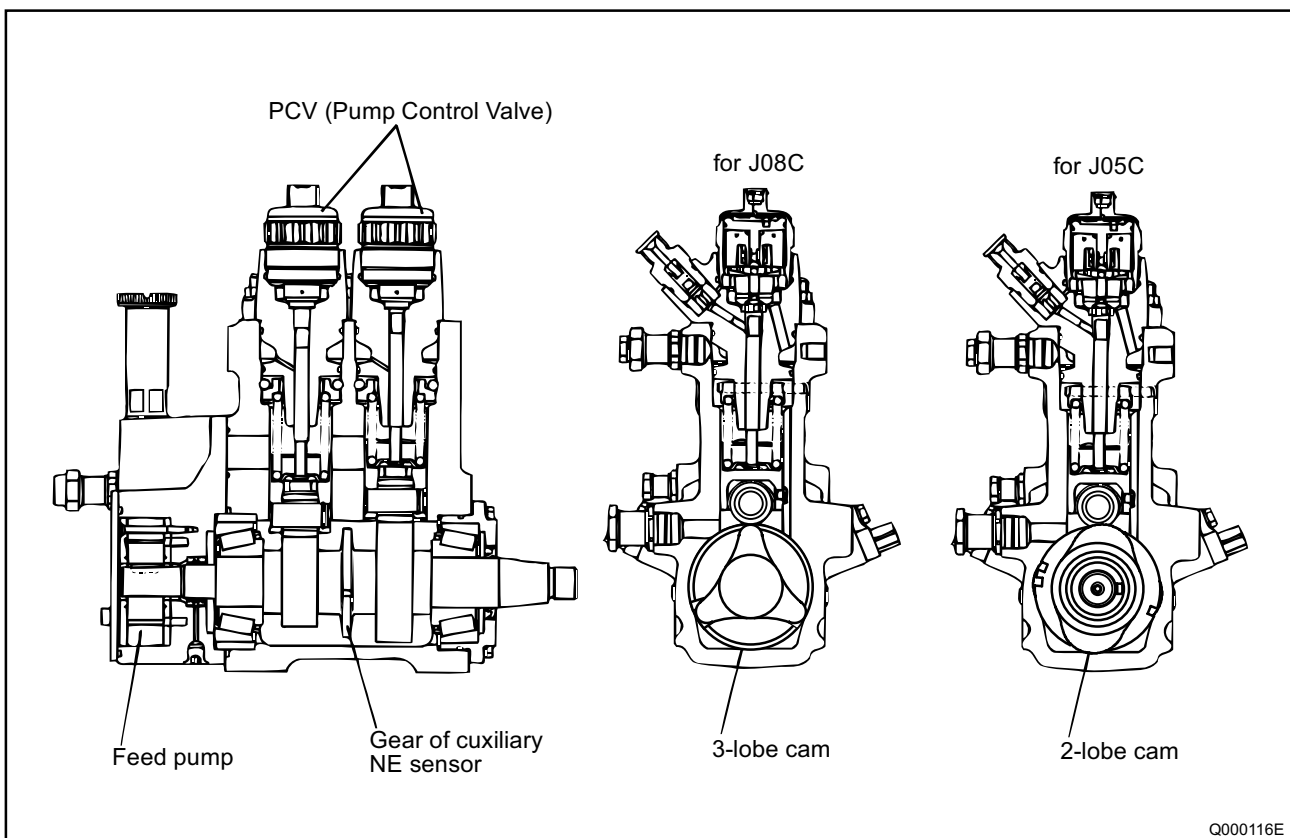

Q000116E


[3] Operation

- A: The PCV remains open during the plunger's downward stroke, allowing low-pressure fuel to be drawn into the plunger chamber by way of the PCV.
- B: If the valve remains open because current is not applied to the PCV, even after the plunger begins its upward stroke, the fuel that was drawn in returns via the PCV, without being pressurized.
- C: When current is applied to the PCV in order to close the valve at the timing that accommodates the required discharge volume, the return passage closes, causing pressure in the plunger chamber to rise. The fuel then passes through the delivery valve (check valve) to the rail. As a result, an amount of fuel that corresponding to the plunger lift after the PCV closes becomes the discharge volume, and varying the timing of the PCV closure (plunger pre-stroke) varies the discharge volume, thus regulating rail pressure.
- A': After surpassing the maximum cam lift, the plunger begins its downward stroke, causing pressure in the plunger chamber to decrease. At this time, the delivery valve closes, thus stopping the pumping of the fuel. In addition, because current to the PCV valve is cut off, the PCV opens, allowing low-pressure fuel to be drawn into the plunger chamber. Thus, the pump assumes condition "A".

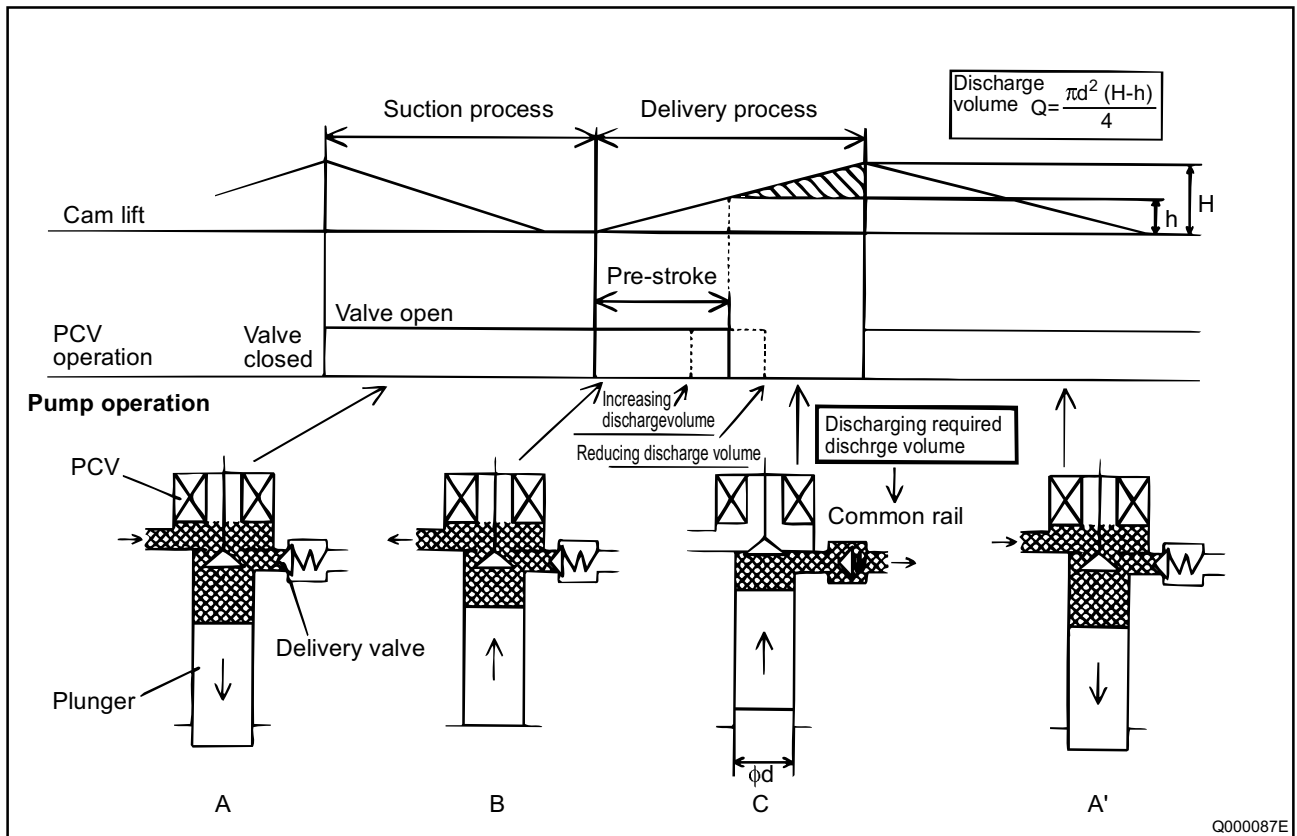

[4] PCV (pump control valve)


The PCV regulates the volume of fuel discharged by the supply pump in order to regulate rail pressure. The volume of fuel discharged by the supply pump to the rail is determined by the time at which current is applied to the PCV.

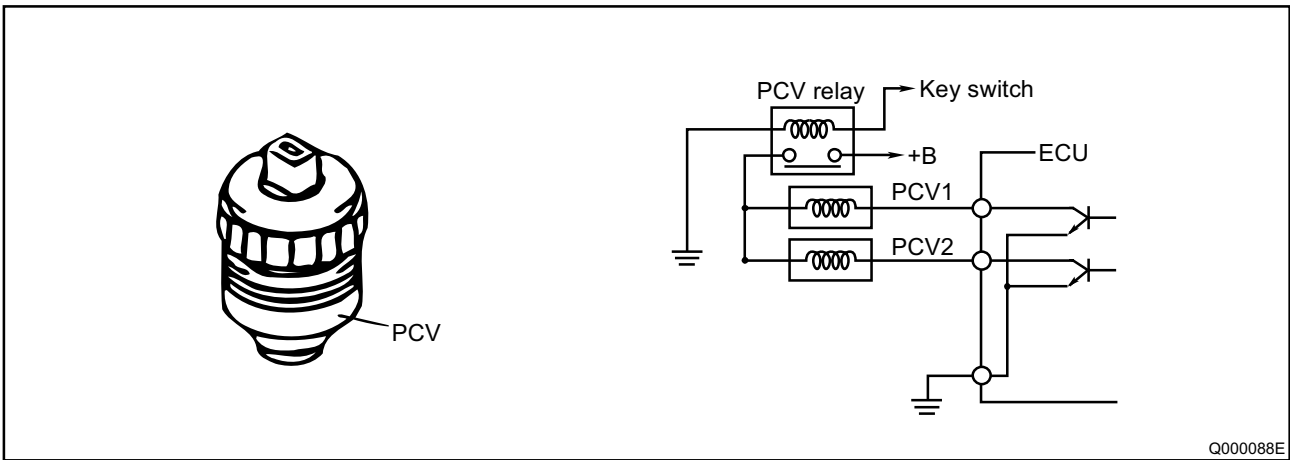

[5] Trochoid Type Feed Pump


The feed pump, which is housed in the supply pump, draws fuel up from the tank and delivers it to the chamber via the fuel filter. The feed pump rotor is driven by the camshaft.

The rotation of the camshaft causes the outer and inner rotors to rotate. At this time, the suction port side pump chamber volume (the space surrounded by the outer and inner rotors) increases gradually, causing the fuel entering from the fuel inlet to be drawn into the pump chamber via the suction port. Along with the rotation of the rotor, the fuel that has been drawn in moves towards the discharge port and is discharged. The discharged fuel travels via the fuel outlet and is fed into the supply pump body.

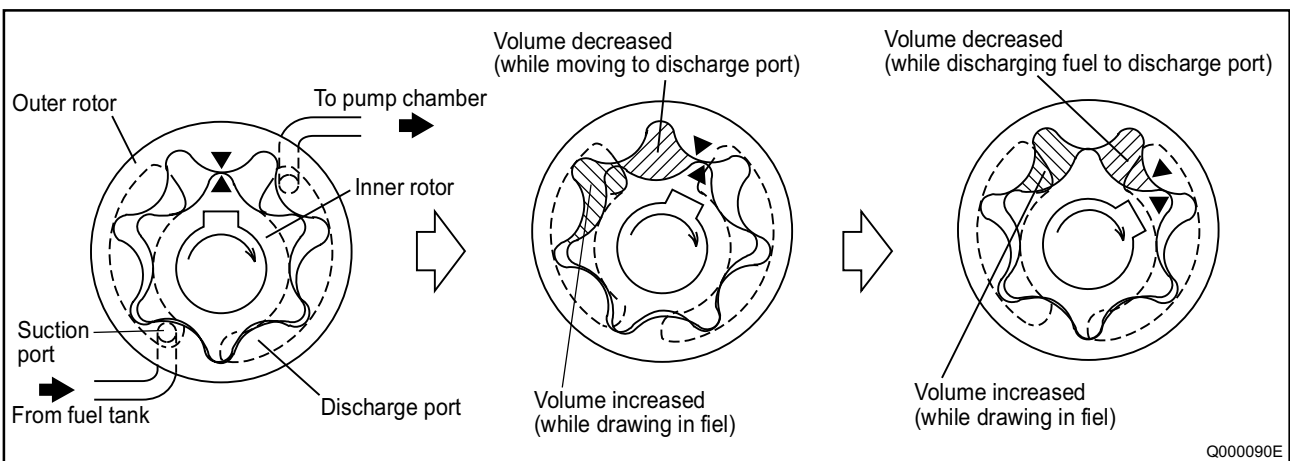

[6] Coupling

The coupling is an intermediary device that transmits the engine driving torque to the supply pump camshaft.

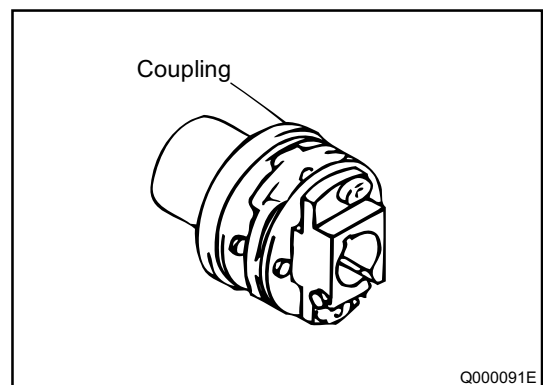

2.2 Rail


[1] Construction

The function of the rail is to distribute the high-pressure fuel pressurized by the supply pump to each cylinder injector.

The rail pressure sensor, flow damper, and pressure limiter are mounted on the rail.

A fuel injection pipe is attached to the flow damper to deliver high-pressure fuel to the injector.


The pressure limiter piping is routed back to the fuel tank.

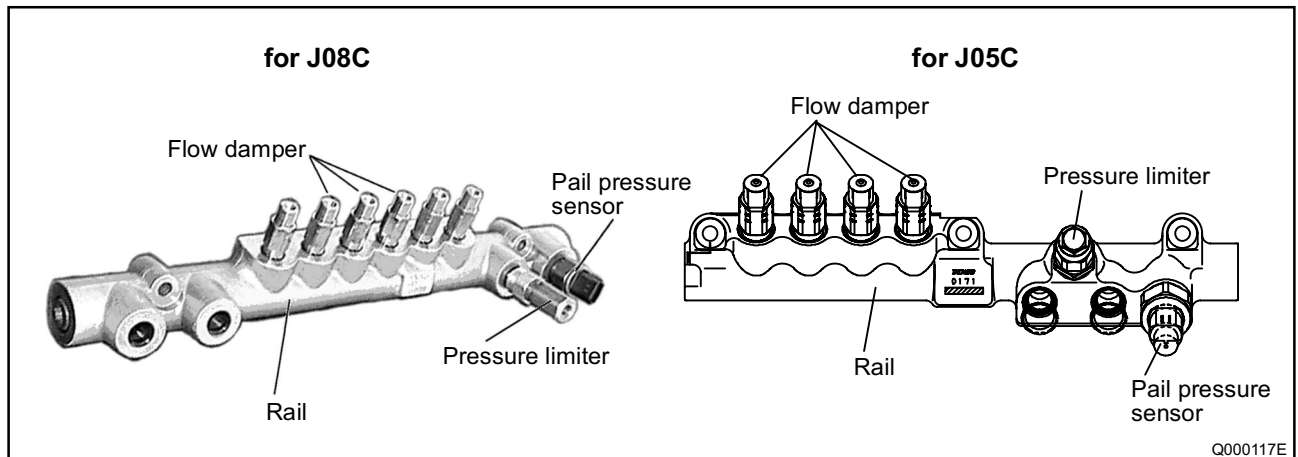

[2] Flow Damper

The flow damper reduces pressure pulsation in the high-pressure pipe, thus delivering fuel to the injectors at a stable pressure. Furthermore, in the event an excessive flow of fuel, the flow damper shuts off the fuel passage, thus preventing the abnormal fuel flow.

When an abnormal amount of fuel flows the high-pressure is applied to the piston. As shown in the illustration, this causes the piston and ball to move right, until the ball reaches the seat and closes the fuel passage.

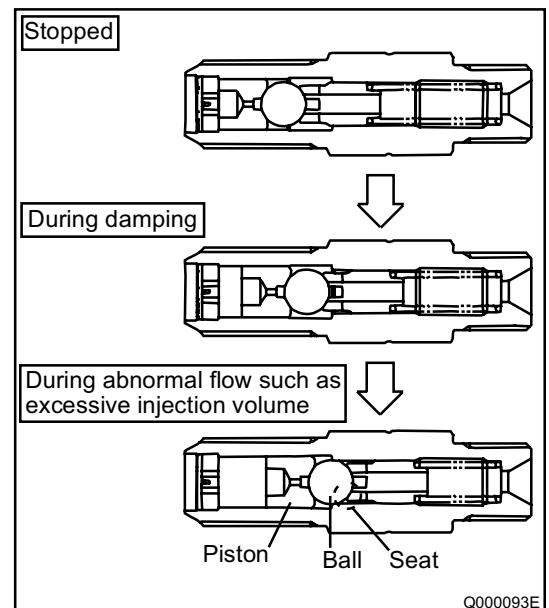


[3] Pressure Limiter

The function of the pressure limiter is to dispel abnormally high pressure by opening its valve to release pressure.

The pressure limiter operates (opens the valve) when rail pressure reaches approximately 140MPa.

Then, when the pressure decreases to approximately 30MPa, the pressure limiter resumes (closes the valve) its function to maintain pressure.

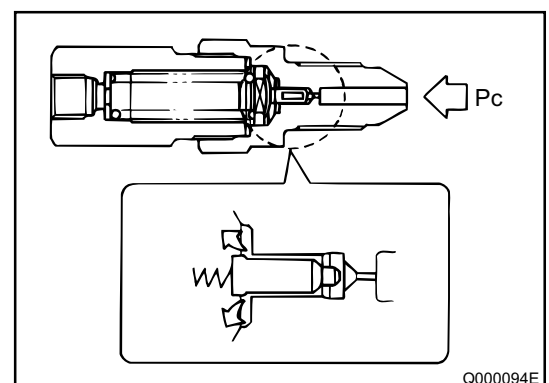


NOTE:

Do not attempt to remove or to reinstall the flow damper, pressure limiter, and the rail pressure sensor.

[4] Rail Pressure Sensor

The rail, the rail pressure sensor is mounted on the rail and detects the fuel pressure. It is a semi-conductor type of pressure sensor that utilizes the properties of silicon to change its electrical resistance when pressure is applied.

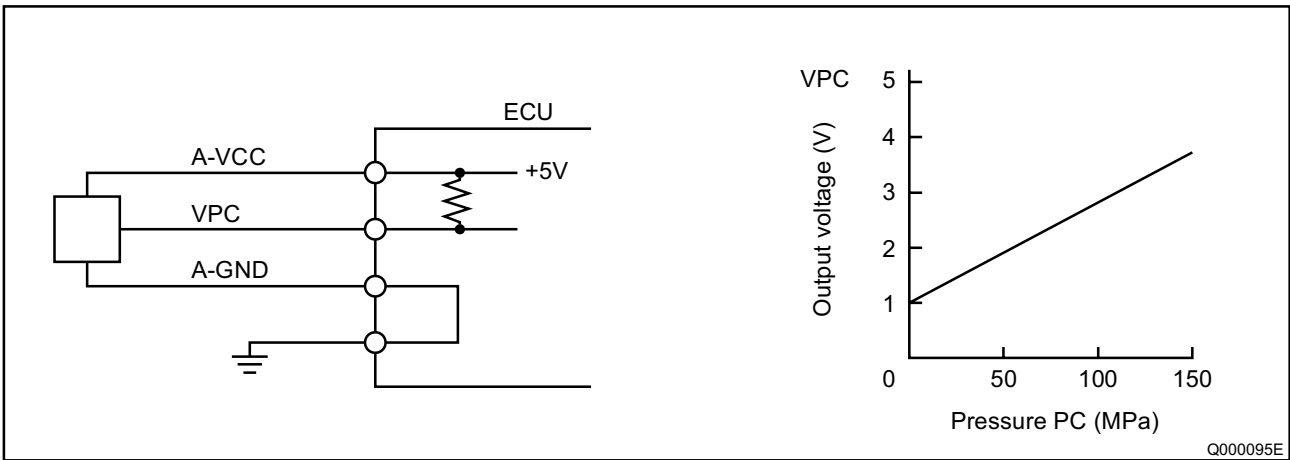

2.3 Injector

[1] Outline


The function of the injector is to inject high-pressure fuel from the rail into the engine combustion chamber at the proper timing, quantity, ratio, and atomization, in accordance with signals from the ECU.

The TWV (two-way solenoid valve) regulates pressure in the control chamber in order to control the beginning and end of injection.

The orifice restrains the opening speed of the nozzle valve to regulate the injection ratio.


The command piston transmits pressure from the control chamber to the nozzle needle valve.

The nozzle atomizes the fuel.

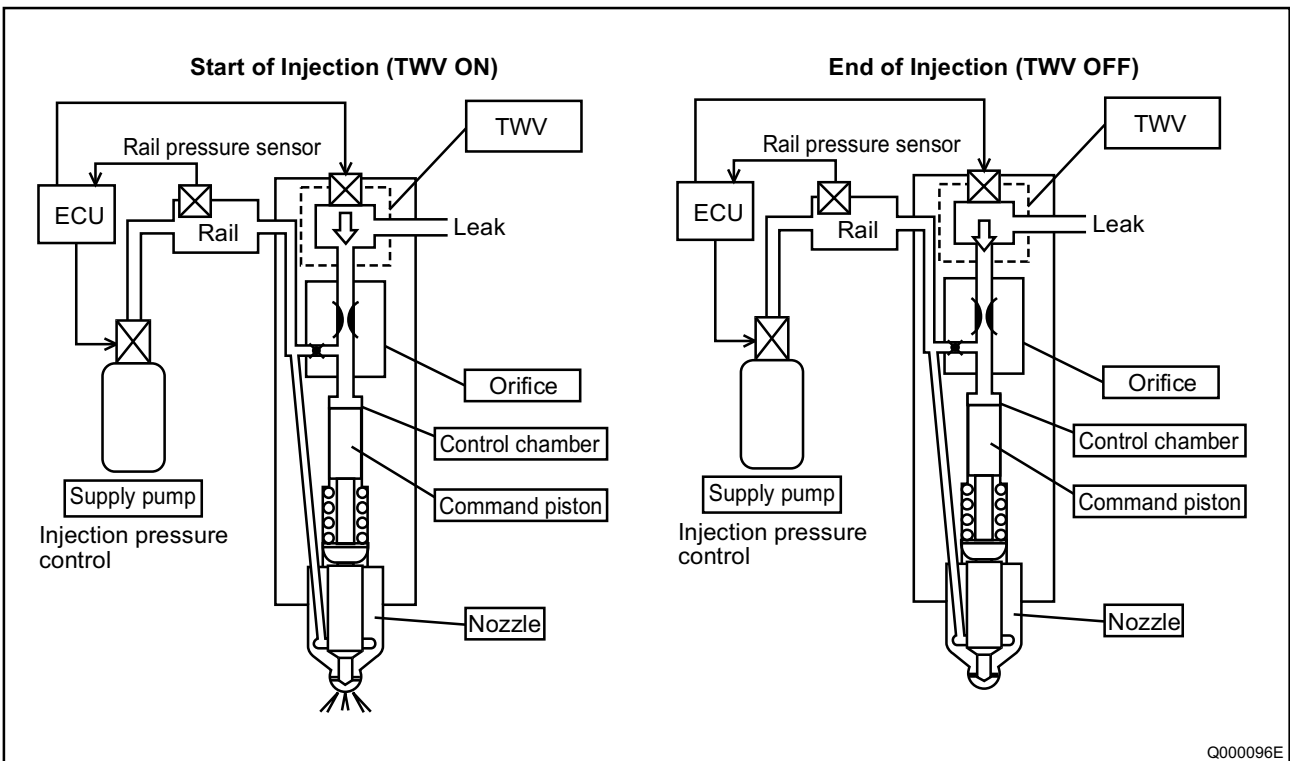

[2] Construction

The injector consists of the nozzle portion (similar to that of the conventional type), the orifice (which regulates the injection ratio), the command piston, and the two-way solenoid valve (TWV).

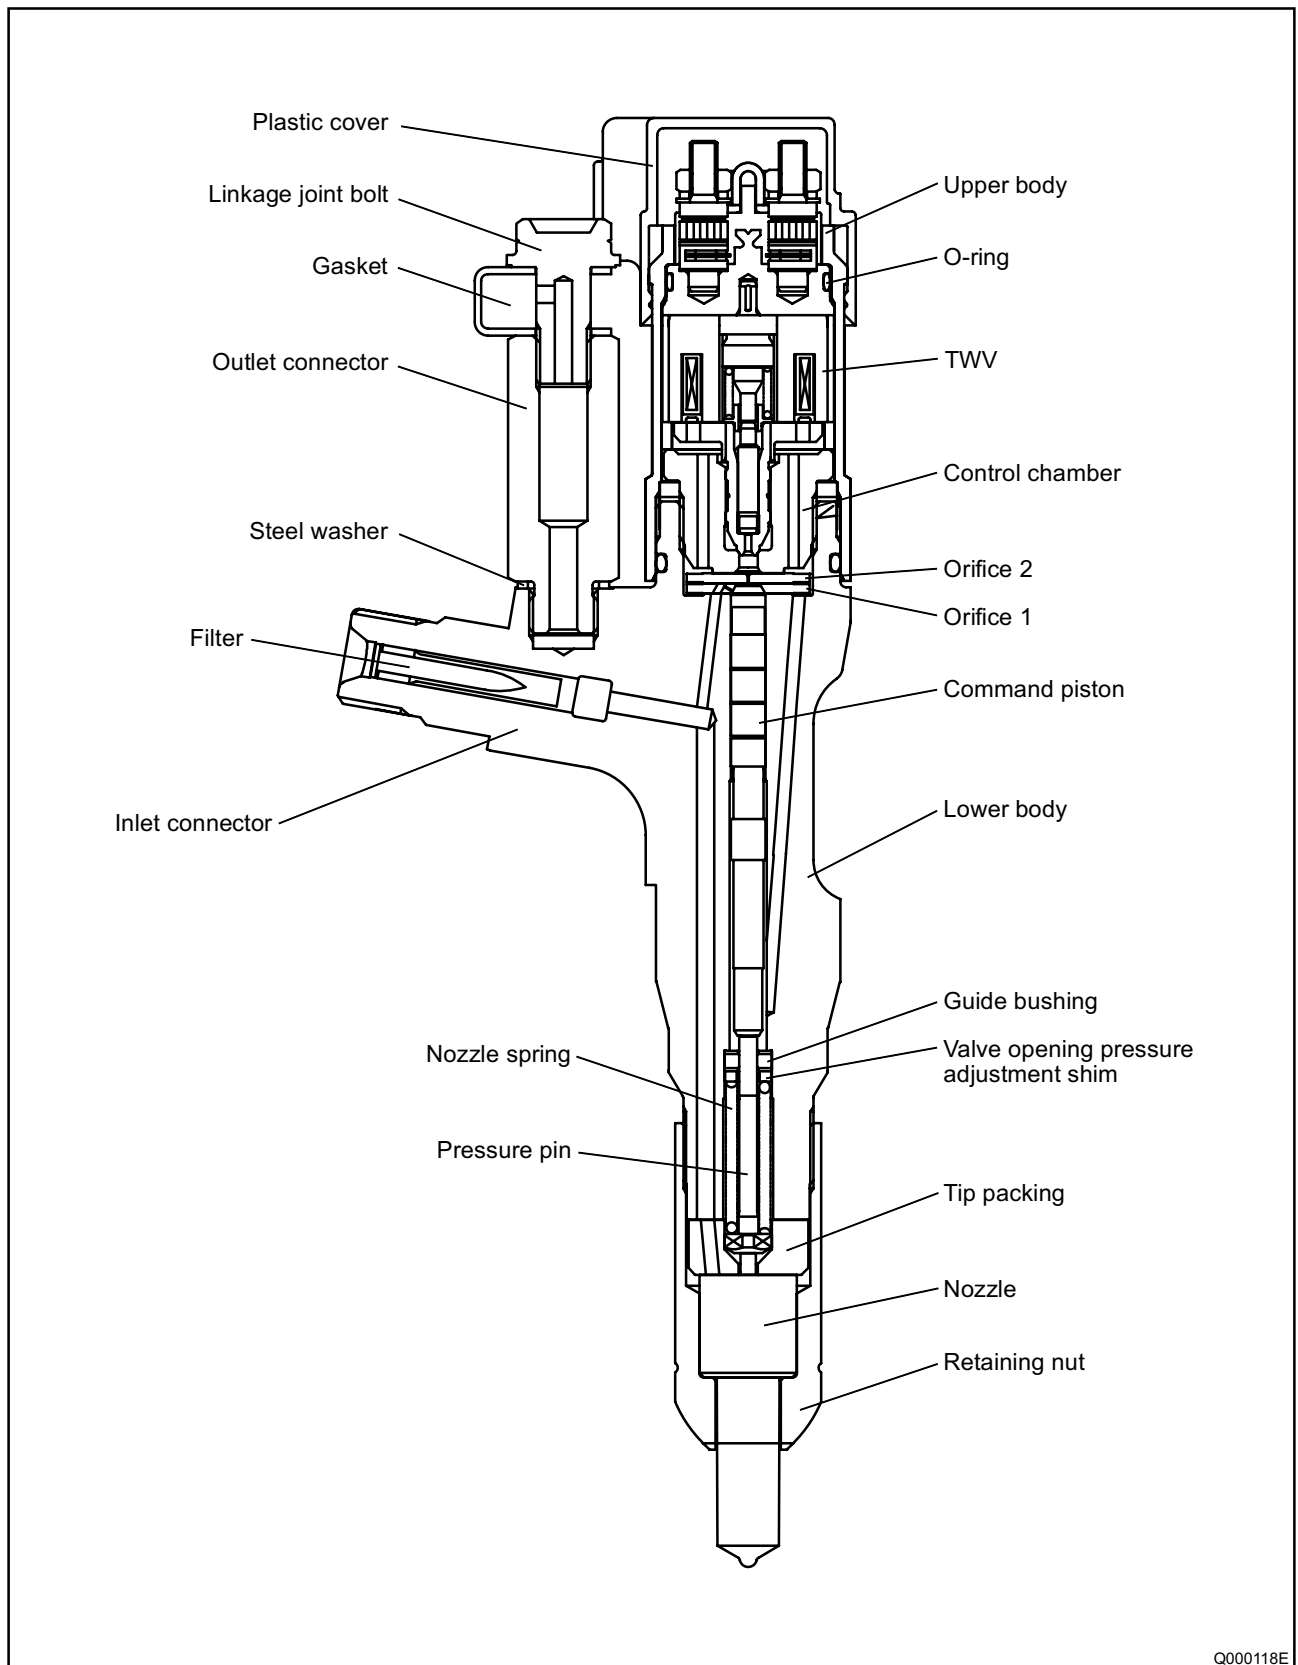

Q000118E

[3] Operation

The TWV portion of the injector consists of two valves, an inner valve (fixed) and an outer valve (movable). Both valves are precision-fitted on the same axis. The valves respectively form inner and outer seats, and either of the seats opens selectively depending upon whether the TWV is ON or OFF.

a. No Injection

When no current is applied to the solenoid, the valve spring and hydraulic pressure forces push the outer valve downward, causing the outer seat to remain closed. Because the rail high pressure is applied to the control chamber via the orifices, the nozzle remains closed without injecting fuel.


b. Begin Injection

When current is applied to the TWV, the solenoid force pulls the outer valve upward, causing the outer seat to open.


As a result, fuel from the control chamber flows out via the orifice, causing the needle to lift and fuel to start injection. Furthermore, the injection ratio increases gradually in accordance with the movement of the orifice. As the application of current continues to apply, the injector reaches its maximum injection ratio.

c. End Injection


When current to the TWV is cut off, the valve spring and hydraulic force (fuel pressure) cause the outer valve to descend and the outer seat closes. At this time, high-pressure fuel from the rail is immediately introduced into the control chamber, causing the nozzle to close suddenly. As a result, injection ends swiftly.

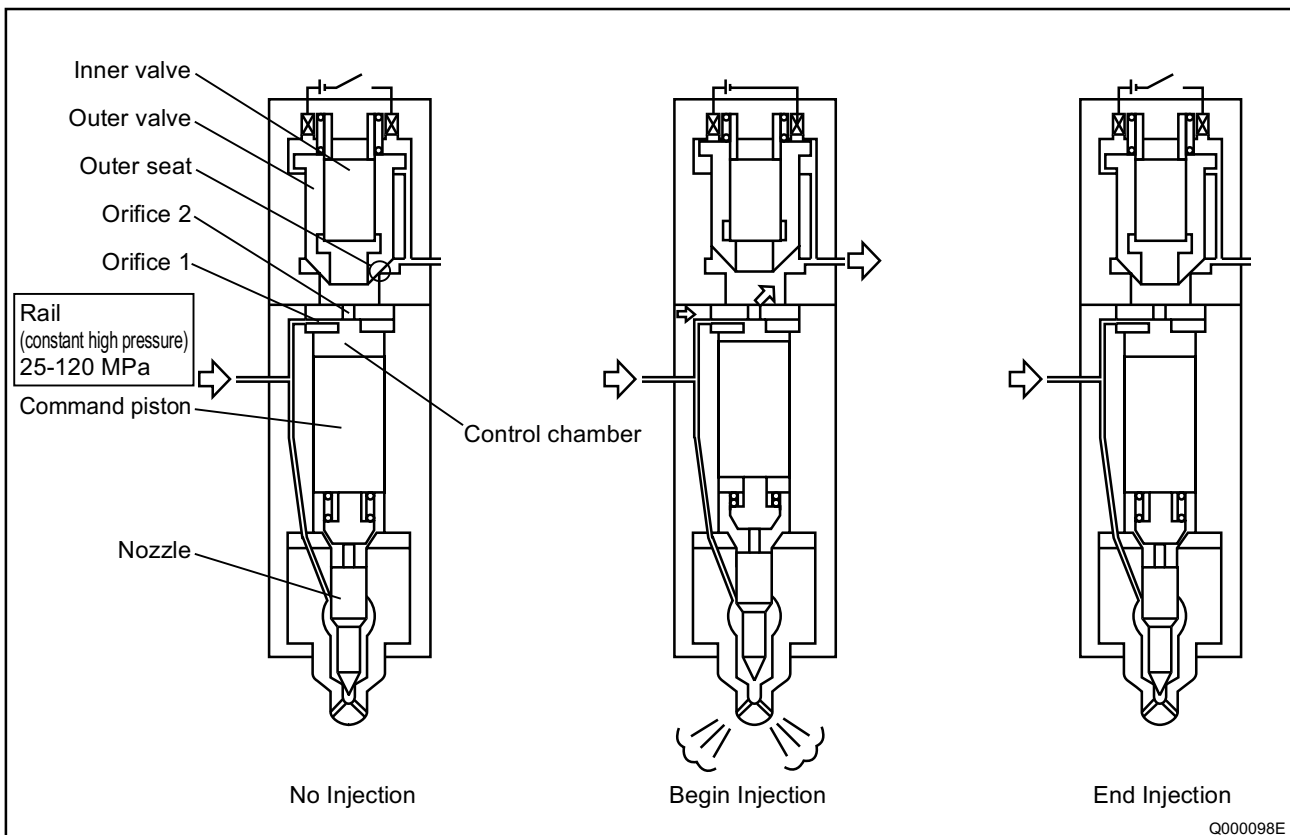

[4] Circuit Diagram

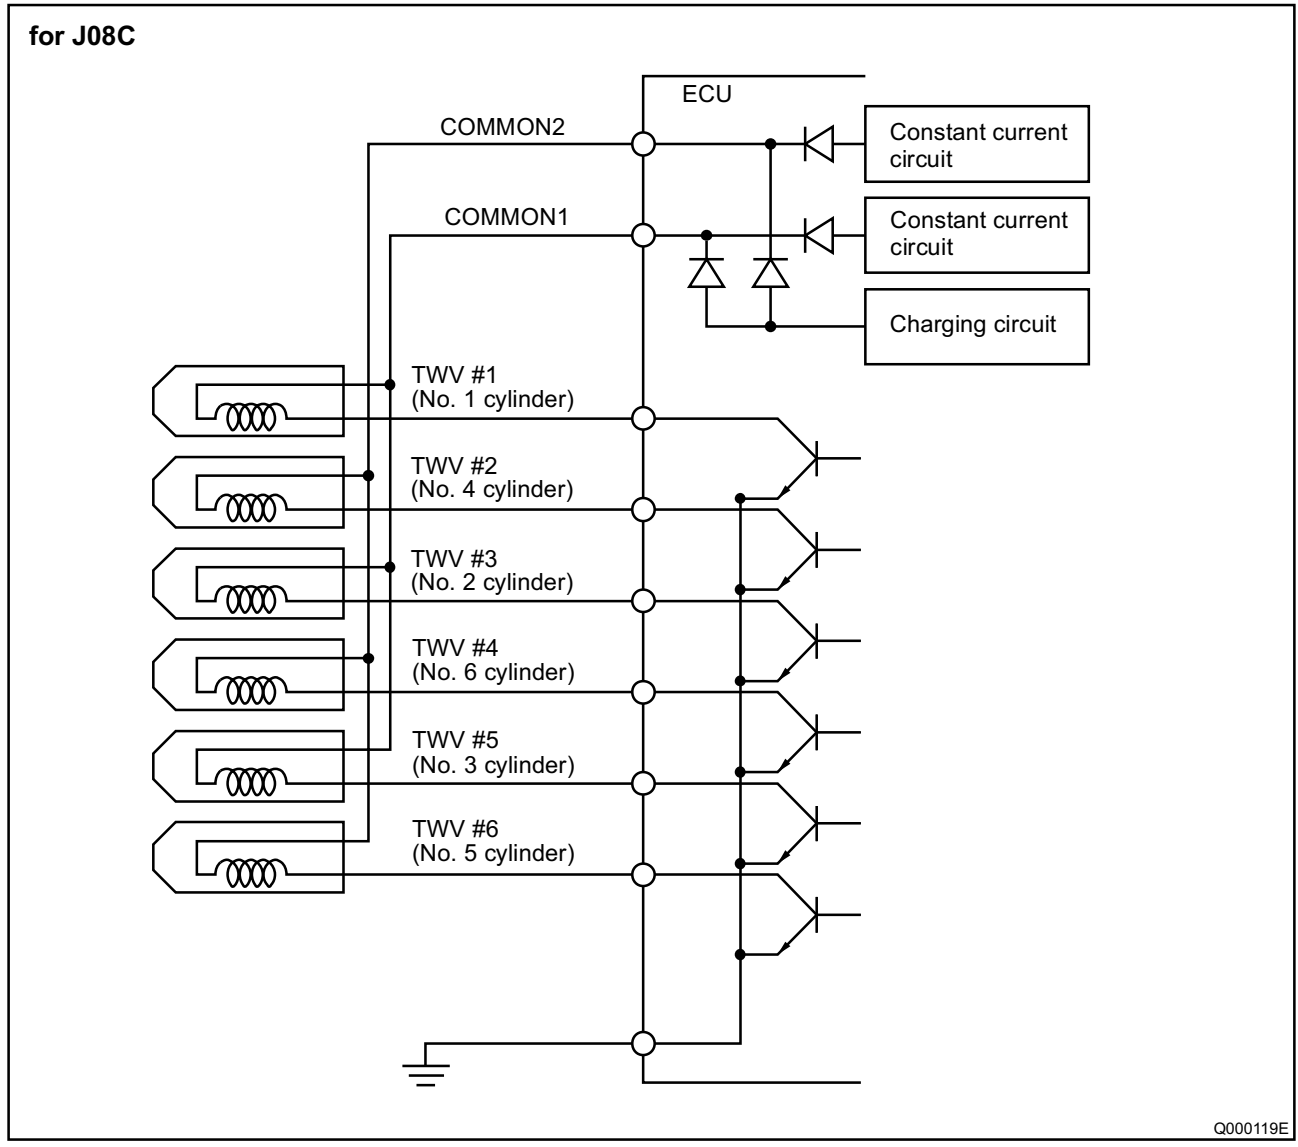

for J05C

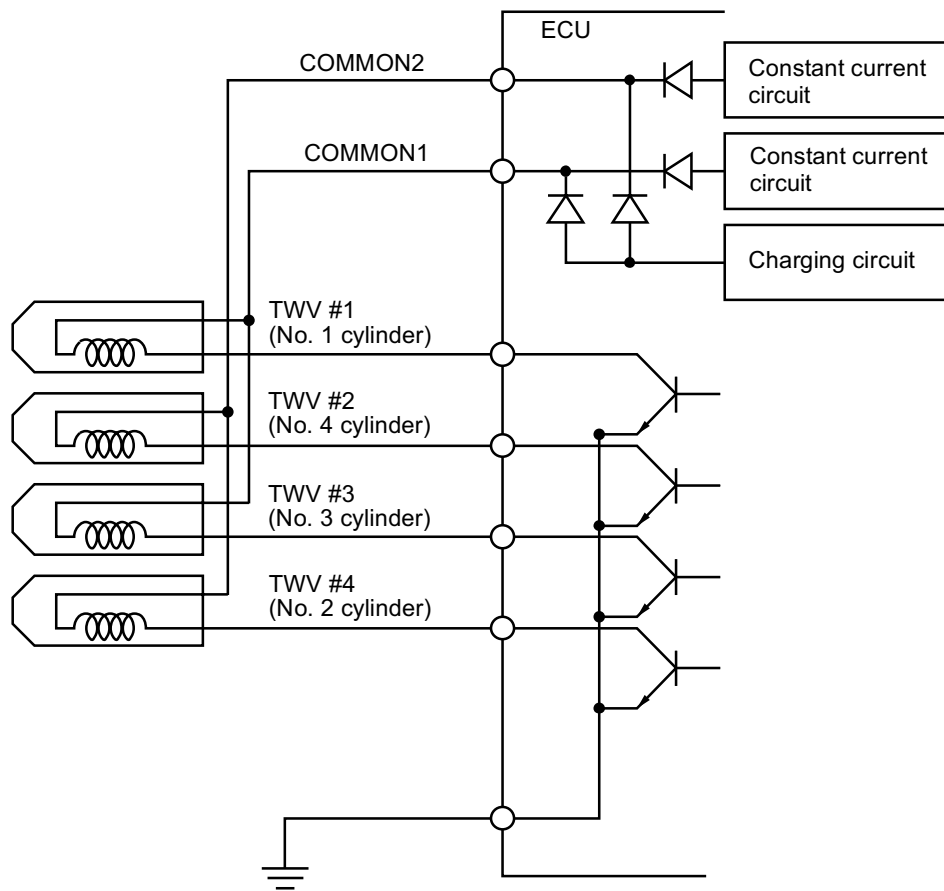

Q000120E

WARNING:

High voltage is applied to the wires connected to COMMON1, COMMON2, and the TWV #1-#6 terminals of the ECU. Exercise extreme caution to prevent electric shock.

2.4 Sensors and Relays

[1] NE Sensor (crankshaft position sensor)

When the signal holes on the flywheel move past the sensor, the magnetic line of force passing through the coil changes, generating alternating voltage.

The signal holes are located on the flywheel at 7.5-degree intervals. There are a total of 45 holes, with holes missing in three places. Therefore, every two revolutions of the engine outputs 90 pulses.





This signal is used to detect the engine speed and the crankshaft position in 7.5-degree intervals.

[2] TDC sensor (cylinder recognition sensor)


Similar to the NE sensor, the sensor utilizes the alternating voltage generated by the changes in the magnetic line of force passing through the coil.

The disc-shaped gear located in the center of the supply pump camshaft has a cog (U-shaped cutout) at 120-degree intervals, plus one tooth in an additional location. Accordingly, every two revolutions of the engine outputs seven pulses. The combination of the NE pulse, auxiliary pulse is recognized as the No. 1 cylinder reference pulse.

A combination of the NE pulse and the TDC pulses are used for the cylinder reference pulse, and the irregular pulse is used to determine the No. 1 cylinder.

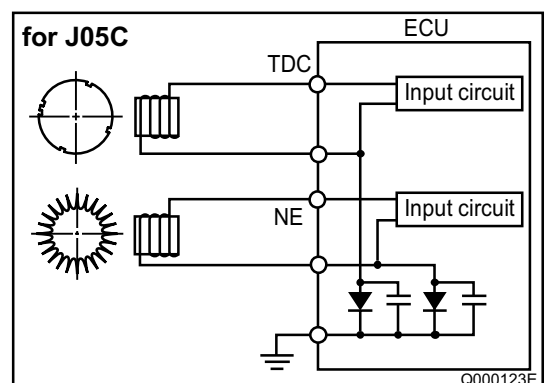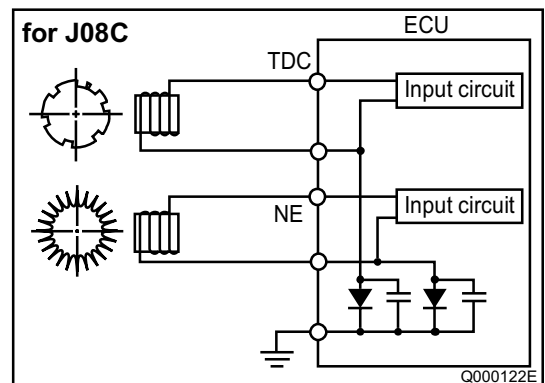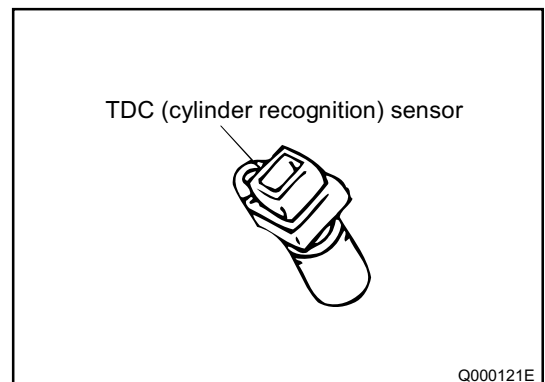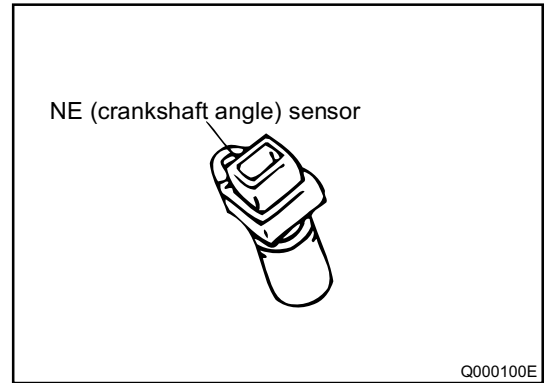


for J08C

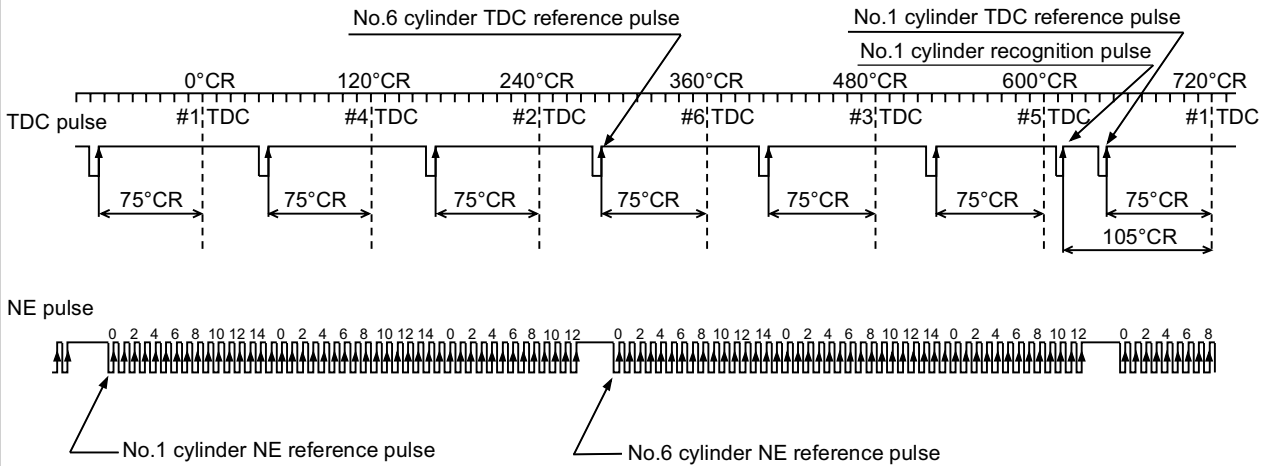

Q000124E



for J05C

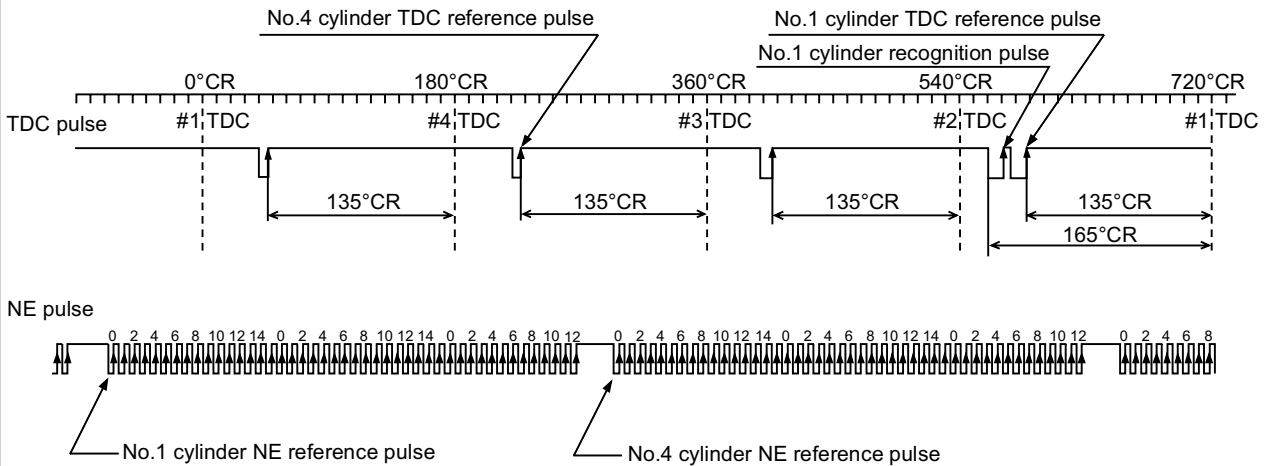

Q000125E


[3] Water Temperature Sensor (THW made another manufacturer)

The water temperature sensor detects the temperature of the engine coolant water and outputs it to the ECU. The sensor uses a thermistor, which varies resistance according to temperature. As the ECU applies voltage to the thermistor, it uses a voltage resulting from the division of the computer internal resistance and the thermistor resistance to detect the temperature.

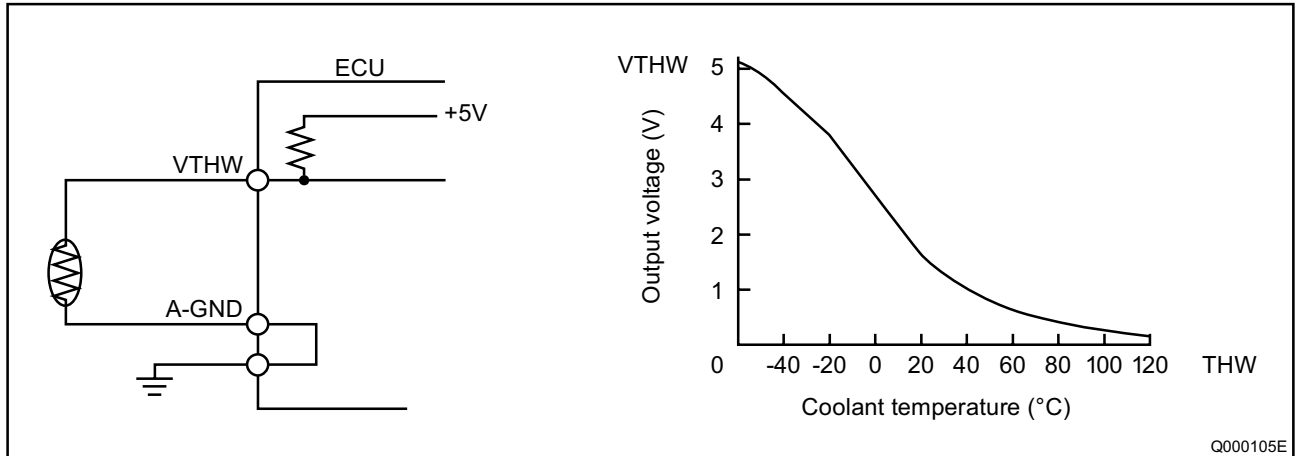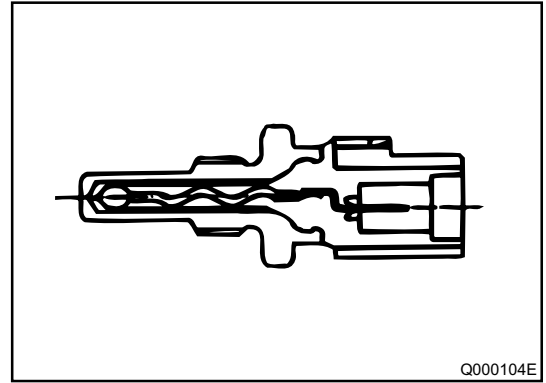


[4] Fuel Temperature Sensor (THL)

The fuel temperature sensor detects the fuel temperature and outputs it to the ECU. The sensor uses a thermistor, which varies resistance according to temperature. As the ECU applies voltage to the thermistor, it uses a voltage resulting from the division of the computer internal resistance and the thermistor resistance to detect the temperature.

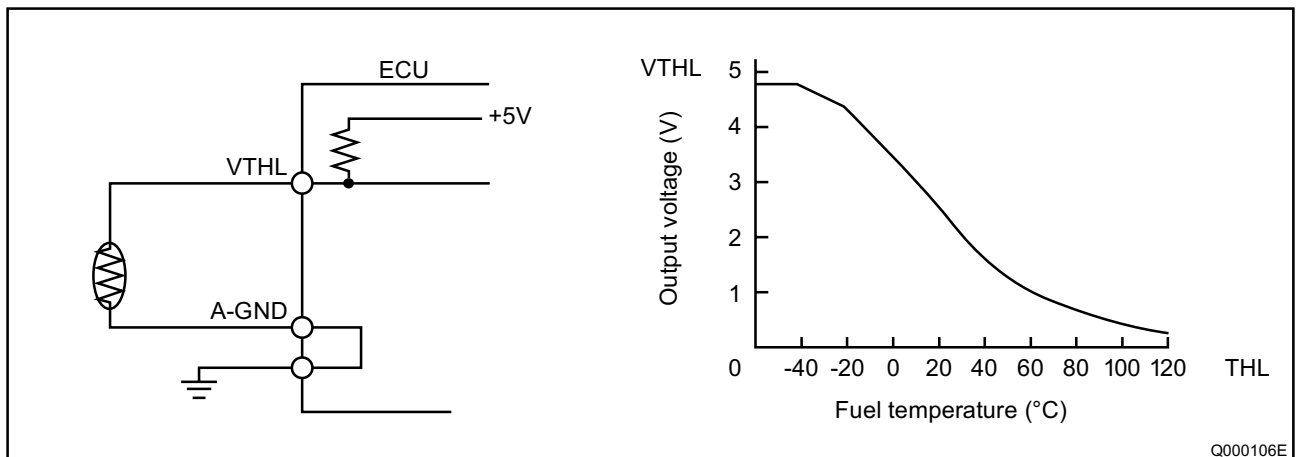


[5] Atmospheric Air Pressure Sensor (Built-in ECU)

This sensor converts the atmospheric air pressure into an electrical signal to correct full-load injection volume.

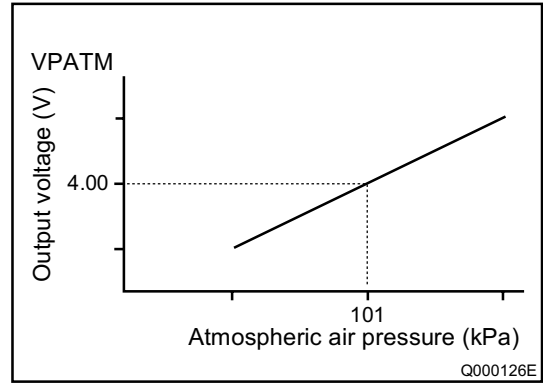


[6] Accelerator Position Sensor

This sensor converts the angle of the pedal effort applied to the accelerator pedal into electrical signals and sends them to the ECU. The accelerator sensor uses hall elements. A magnet is mounted on the shaft that moves in unison with the accelerator pedal, and the magnetic field orientation changes with the rotation of the shaft. The changes in the magnetic field orientation generate voltage.

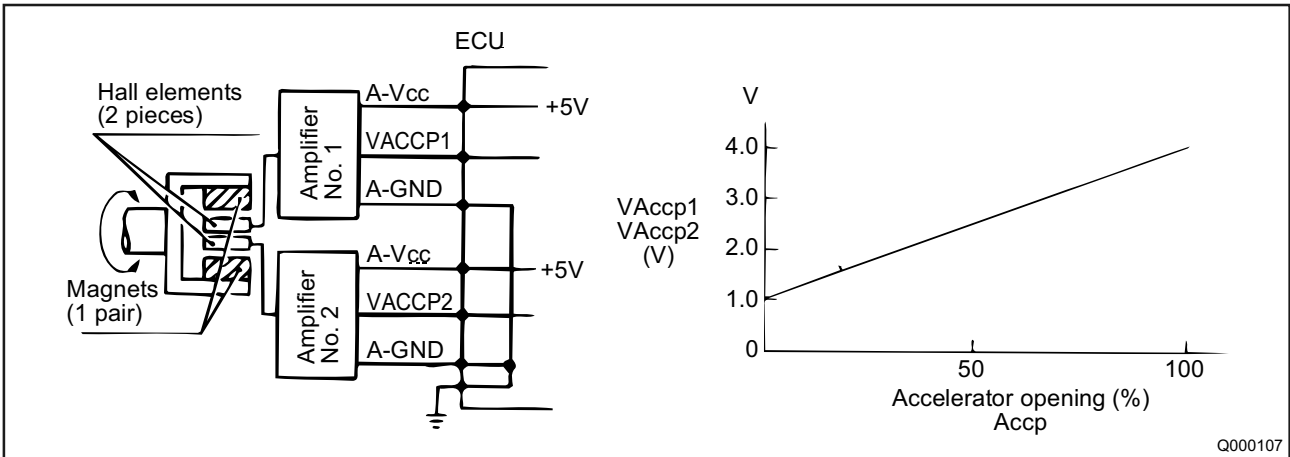


[7] Boost Pressure Sensor

In order to correct the full-load injection volume, this sensor converts the intake air pressure (absolute pressure) into an electrical signal, then amplifies it into a voltage signal to the computer.

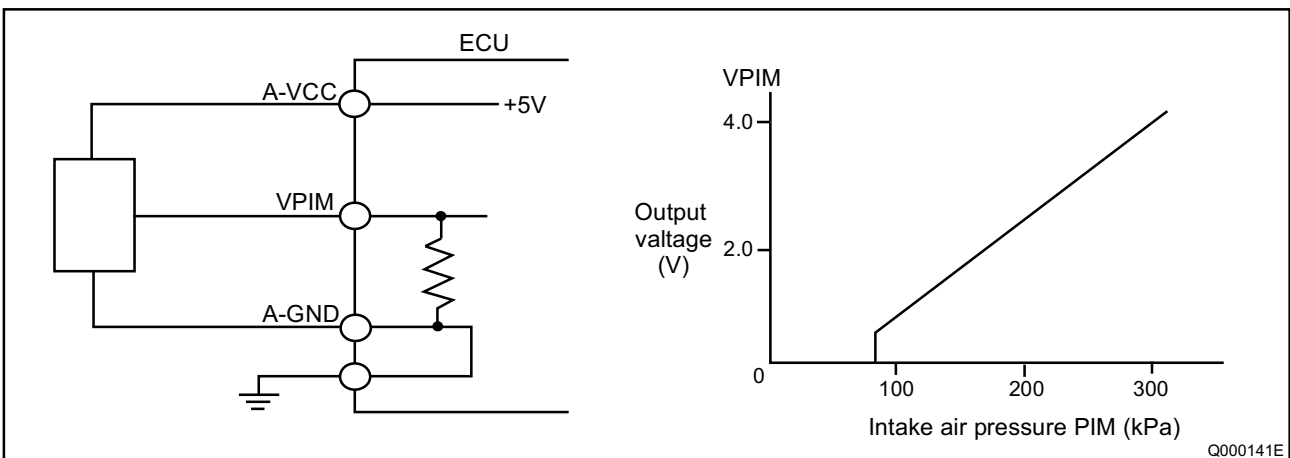

[8] Idle Set Button (made by another manufacturer)

A control knob is provided within the driver's reach, enabling the driver to set the idle speed.

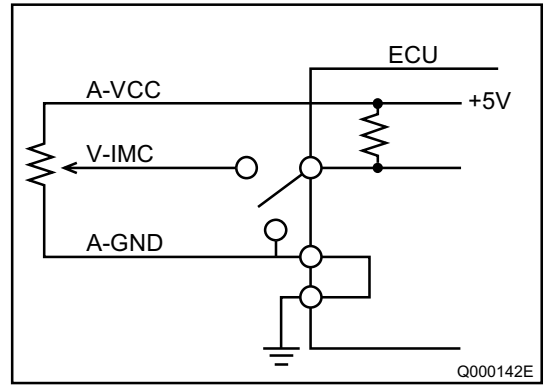

[9] Main Relay

To supply current to the ECU, the main relay points close when current is applied the main relay coil.

[10] PCV Relay

It is a relay that supplies current to the supply pump's PCV (discharge volume control valve).

3. Various Types of Control

This system controls the fuel injection quantity and injection timing more optimally than the mechanical governor or timer used in conventional injection pumps.

For system control, the ECU makes the necessary calculations based on signals received from sensors located in the engine and on the vehicle in order to control the timing and duration in which current is applied to the injectors, thus realizing optimal injection timing.

[1] Fuel Injection Rate Control Function

The fuel injection rate control function controls the ratio of the quantity of fuel that is injected through the nozzle hole during a specified period.

[2] Fuel Injection Quantity Control Function

The fuel injection quantity control function, replaces the conventional governor function, and controls fuel injection to achieve an optimal injection quantity based on the engine speed and the accelerator opening.


[3] Fuel Injection Timing Control Function

The fuel injection timing control function, replaces the conventional timer function, and controls the fuel injection to achieve an optimal injection timing according to the engine speed and the injection quantity.

[4] Fuel Injection Pressure Control Function (Rail Pressure Control Function)

The fuel injection pressure control function (rail pressure control function) uses a rail pressure sensor to measure fuel pressure, and feeds this data to the ECU to control the pump discharge quantity.

Pressure feedback control is implemented to match the optimal quantity (command quantity) set according to the engine speed and the fuel injection quantity.

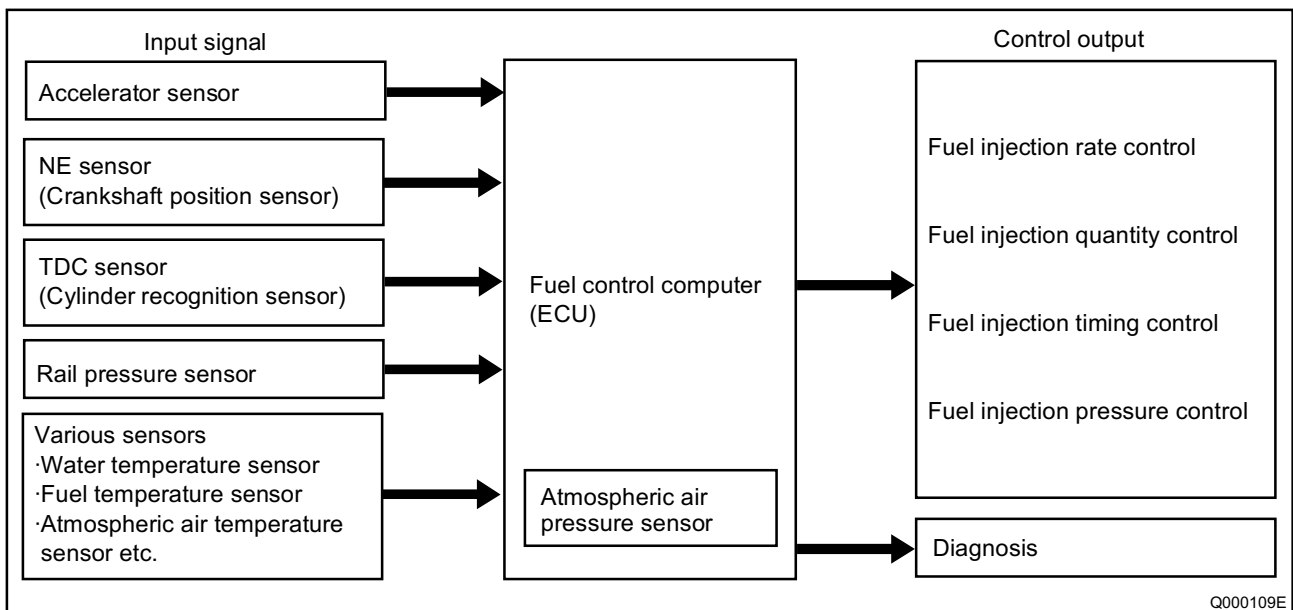

3.1 Fuel Injection Rate Control

[1] Main Injection



Same as conventional fuel injection.

[2] Pilot Injection

Pilot injection is the injection of a small amount of fuel prior to the main injection.


While the adoption of higher pressure fuel injection is associated with an increase in the injection rate, the lag (injection lag) that occurs from the time fuel is injected until combustion starts cannot be reduced below a certain value. As a result, the quantity of fuel injected before ignition increases, resulting in explosive combustion together with ignition, and an increase in the amount of NOx and noise.

Therefore, by providing a pilot injection, the initial injection rate is kept to the minimum required level dampening, the explosive first-period combustion and reducing NOx emissions.

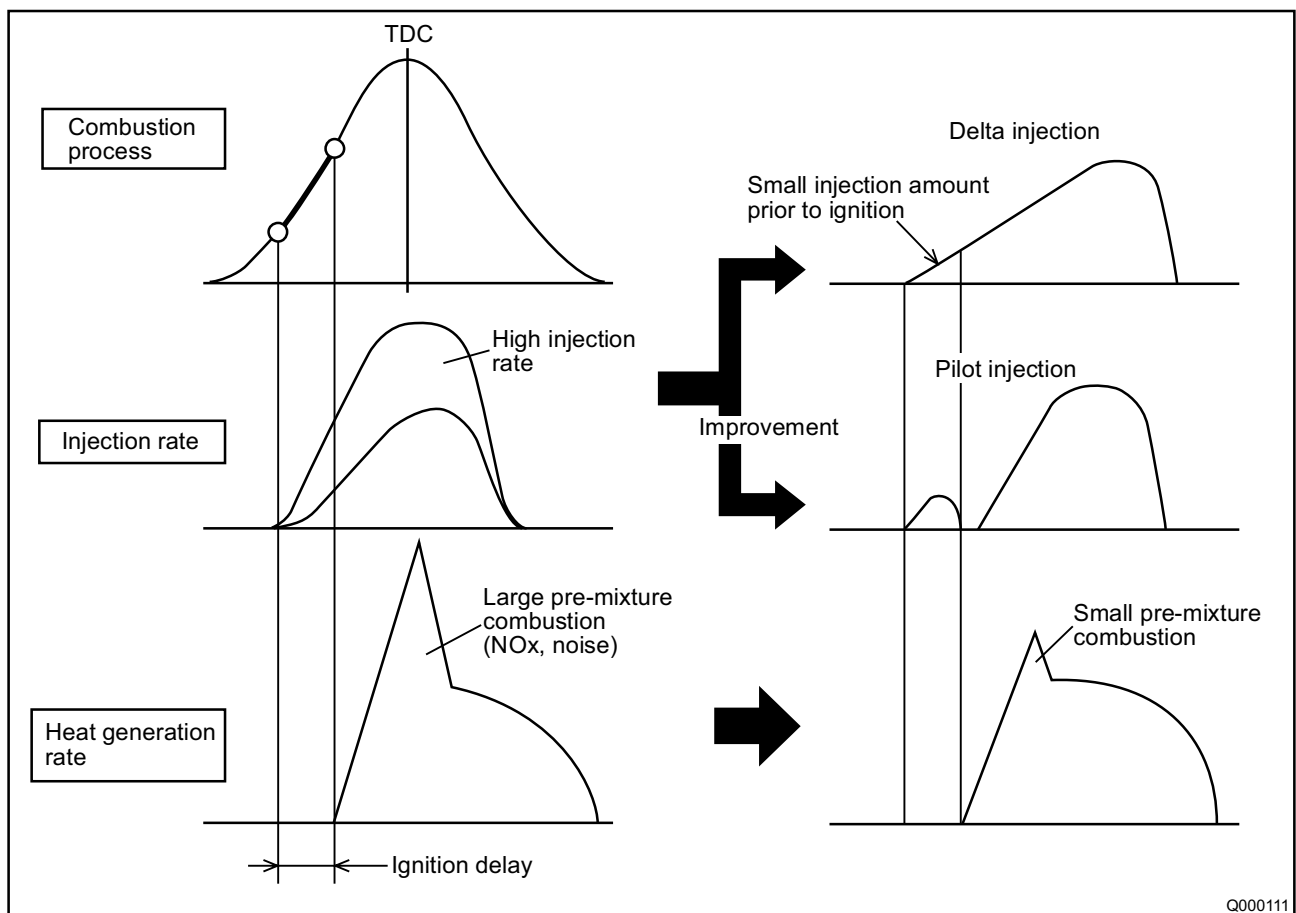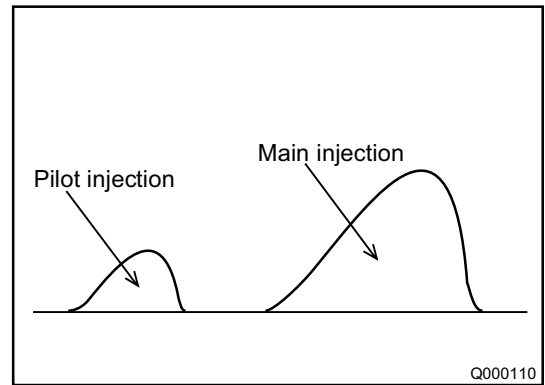

[3] Split Injection


When the rotation is low at starting time, a small amount of fuel is injected several times prior to main injection.

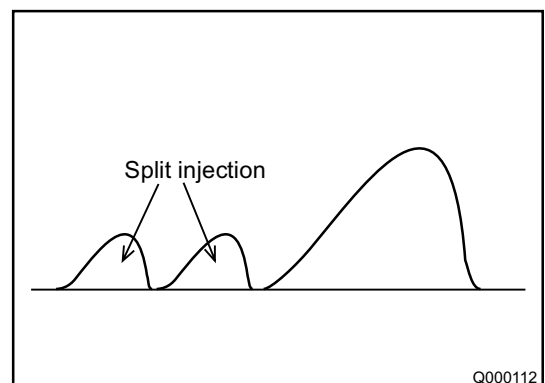

3.2 Fuel Injection Quantity Control


[1] Starting Injection Quantity

The injection quantity is determined based on the engine speed (NE) and water temperature while starting, with the accelerator pressed 50% or more.

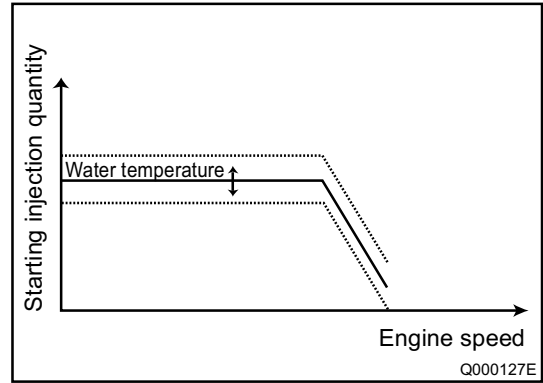

[2] Transient Injection Quantity Correction


When the changes in the accelerator opening are great during acceleration, the increase in fuel volume is delayed to inhibit the discharge of black smoke.

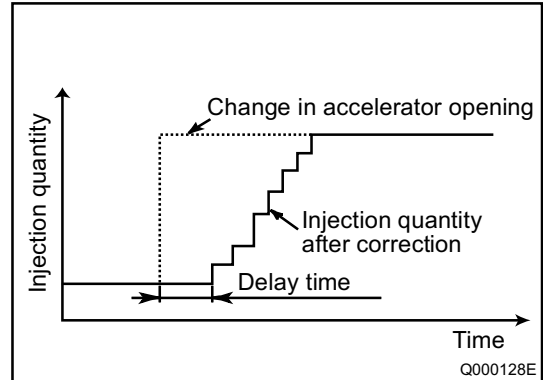

[3] Basic Injection Quantity


This quantity is determined in accordance with the engine speed (NE) and the accelerator opening.

Increasing the accelerator opening while the engine speed remains constant causes the injection quantity to increase.

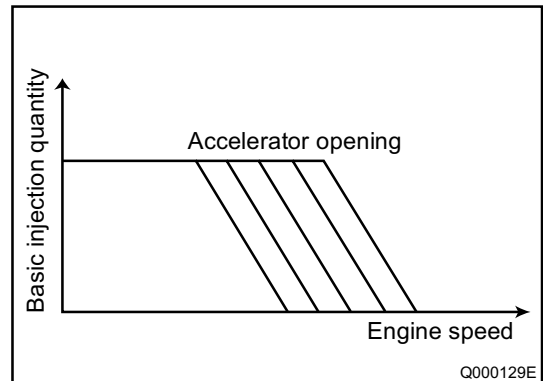


[4] Injection Quantity for Maximum Speed Setting

The injection quantity is regulated by a value that is determined in accordance with the engine speed.

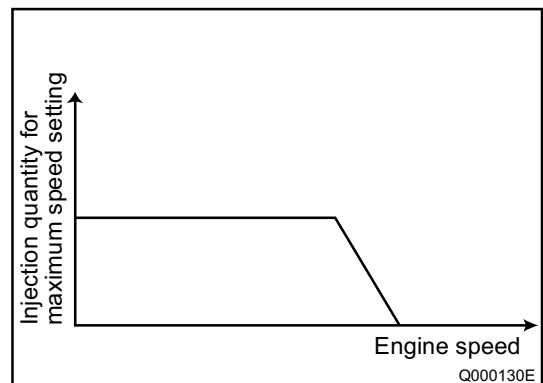

[5] Maximum Injection Quantity


This quantity is calculated by adding the amount of Q-adjustment resistor correction and the amount of injection quantity fuel temperature correction to the basic maximum injection quantity that has been determined in accordance with the engine speed.

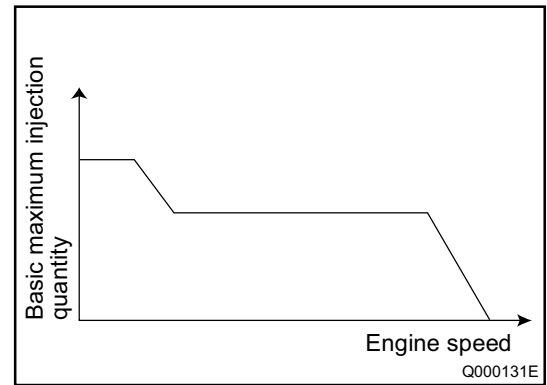

[6] Amount of Q-Adjustment Correction


Selects the one of eight values determined by data in ROM built in ECU.

Characteristic curve is fixed by the value.

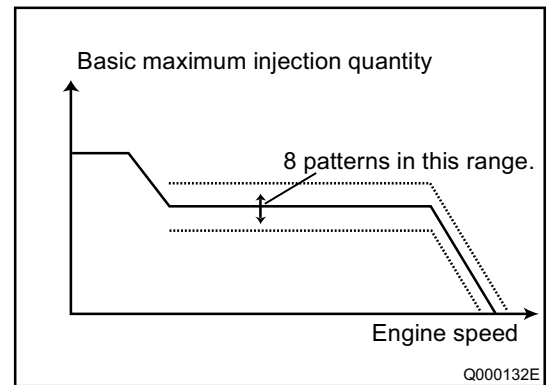


[7] Amount of Injection Quantity Intake Pressure Correction

Limits the maximum injection quantity in accordance with the intake pressure, in order to minimize the discharge of smoke when the intake air pressure is low.

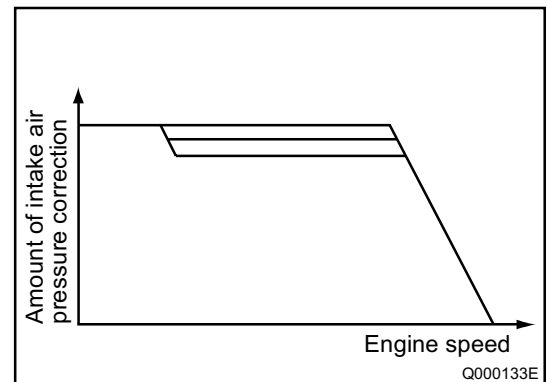

[8] Amount of Injection Quantity by Atmospheric Air Pressure Correction

With using atmospheric air pressure sensor signal, the maximum injection quantity curve is corrected as shown in the right figure.

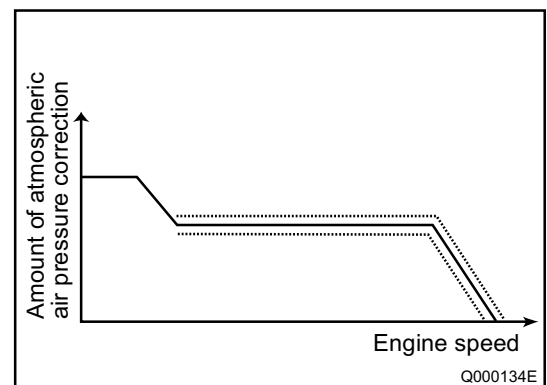




[9] Idle Speed Control System (ISC)

Controls the idle speed by regulating the injection quantity in order to match the target speed, which has been calculated by the computer, with the actual speed. The functions of the ISC can be broadly divided into the following two items:

- Auto ISC
Controls the idle speed in accordance with the water temperature.

- Manual ISC
Controls the idle speed in accordance with the idle speed indicated on the manual idle setting knob provided at the driver's seat.

- Aircon Idle-up Control
When the conditions shown in the chart on the right are realized, bring the idle-up speed to 735 rpm.

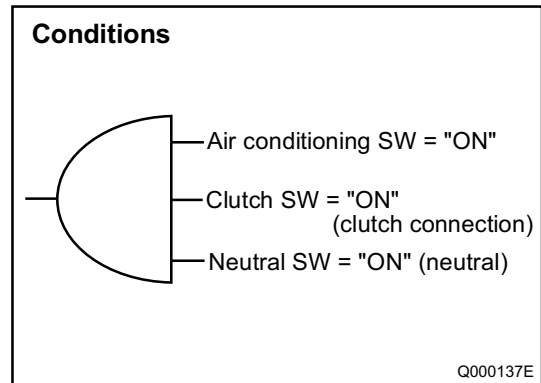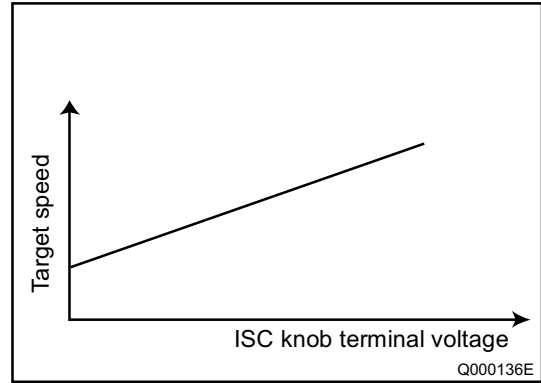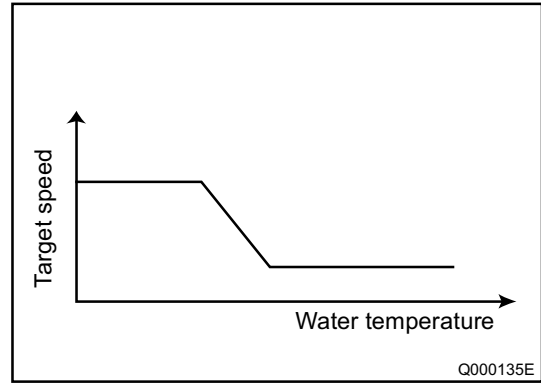

[10] Auto Cruise Control

Controls the actual vehicle speed by regulating the injection quantity in order to match the target speed that has been calculated by the computer with the actual speed.


3.3 Fuel Injection Timing Control

The characteristics of the fuel injection timing vary depending on whether it is the main injection or the pilot injection. Although either the NE sensor or the auxiliary NE sensor is the reference for controlling the injection timing, the NE sensor is ordinarily used for this purpose.

[1] Main Injection Timing

The basic injection timing is calculated in accordance with the final injection quantity, the engine speed, and the water temperature (with map correction).

While starting, it is calculated in accordance with the water temperature and the engine speed.

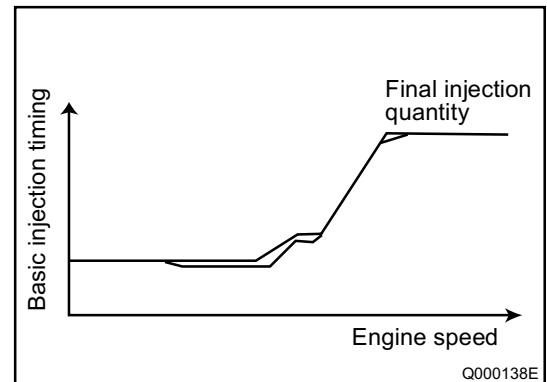


[2] Pilot Injection timing (Pilot Interval)

The pilot injection timing is controlled by adding the pilot interval to the main injection timing.

The pilot interval is calculated in accordance with the final injection quantity, the engine speed, and the water temperature (with map correction).

While starting, it is calculated in accordance with the water temperature and the engine speed.

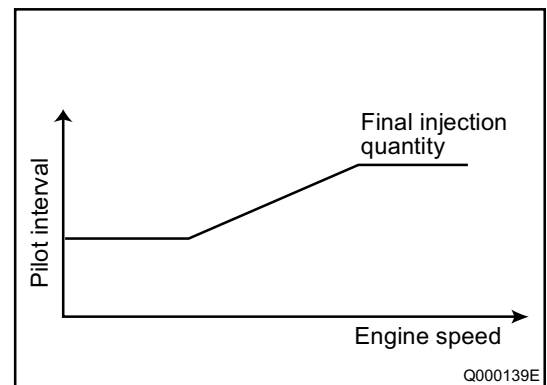


[3] Fuel Injection Pressure Control

(1) Fuel Injection Pressure

A value is calculated as determined in accordance with the final injection quantity and the engine speed.

While starting, it is calculated in accordance with the water temperature and the engine speed.

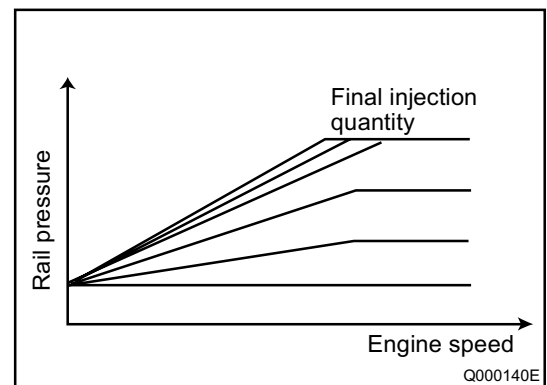

4. Diagnostic Trouble Codes

No.	Exhaust brake light	Meaning of the diagnostic trouble code (DTC) or the diagnosis item	Estimated cause of the malfunction	Warning light [mode]	Multiplex indication	Contents of fail-safe action				
						Fuel injection	Exhaust brake engine retarder	Cruise control	Tachometer	
1	-	Normal	-	-	-	-	-	-	-	-
3	1	NE sensor system abnormal	Wiring harness open circuit, short, or defective sensor	Light ON [2]	-	Control by TDC sensor	Normal control	Stopped	Normal control	Normal control
3	2	TDC sensor system abnormal	Wiring harness open circuit, short, or defective sensor	Light ON [2]	-	Control by NE sensor	Normal control	Stopped	Normal control	Normal control
3	1&2	Both NE and TDC sensors abnormal	Wiring harness open circuit, short, or defective sensor	Blinking	Yes*	Engine stopped	Stopped	Stopped	Stopped	Stopped
4	1	Coolant temperature sensor abnormal	Wiring harness open circuit, short, or defective sensor	-	-	Control continued as 80 °C during normal operation and as -20 °C during starting	Normal control	Stopped	Normal control	Normal control
4	2	Fuel temperature sensor abnormal	Wiring harness open circuit, short, or defective sensor	-	-	Control continued according to the coolant temperature sensor data	Normal control	Stopped	Normal control	Normal control
6	1	Starter switch system abnormal	Switch seized or wiring harness short	-	-	Normal control	Normal control	Normal control	Normal control	Normal control
6	3	Engine stop switch system abnormal	Wiring harness open circuit, short, or defective sensor	-	-	Switch input invalidated	Normal control	Normal control	Normal control	Normal control
7	1	Intake air pressure sensor system abnormal	Wiring harness open circuit, short, or defective sensor	Light ON [2]	-	Control continued as intake air pressure of 100kPa	Normal control	Stopped	Normal control	Normal control
8	1	Accelerator position sensor 1 voltage abnormal	Wiring harness open circuit, short, or defective sensor	Light ON [2]	-	Control continued using accelerator position sensor 2	Normal control	Stopped	Normal control	Normal control
8	2	Accelerator position sensor 2 voltage abnormal	Wiring harness open circuit, short, or defective sensor	Light ON [2]	-	Control continued using accelerator position sensor 1	Normal control	Stopped	Normal control	Normal control
8	1&2	Both accelerator position sensors voltage abnormal	Wiring harness open circuit, short, or defective sensor	Blinking	-	Backup with idle set button	Normal control	Stopped	Normal control	Normal control
8	3	Accelerator position sensor 1 or 2 fixed voltage abnormal	Wiring harness open circuit, short, or defective sensor	Light ON [2]	-	Control continued with the normal accelerator position sensor	Normal control	Stopped	Normal control	Normal control
9	2	Idle set button abnormal	Wiring harness short	-	-	Fixed to voltage of 0.2V when setting manually	Normal control	Normal control	Normal control	Normal control
11	1	Vehicle speed sensor system abnormal	Wiring harness open circuit, short, or defective sensor	-	-	Normal control	Normal control	Stopped	Normal control	Normal control
12	1	FSV solenoid valve system abnormal	Wiring harness open circuit, short, or defective solenoid valve	-	-	Normal control	Normal control	Stopped	Normal control	Normal control
12	2	CBCS1 solenoid valve system abnormal	When an improper ECU is installed on the vehicle	Light ON [2]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
12	3	CBCS2 solenoid valve system abnormal	When an improper ECU is installed on the vehicle	Light ON [2]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
13	1	Exhaust brake solenoid valve system abnormal	Wiring harness open circuit, short, or defective solenoid valve / relay	-	-	Normal control	Stopped	Stopped	Normal control	Normal control
13	2	Engine retarder relay system abnormal	Wiring harness open circuit, short, or defective solenoid valve / relay	-	-	Normal control	Stopped	Stopped	Normal control	Normal control
13	3	Transmission retarder system abnormal	Wiring harness open circuit, short, or defective solenoid valve / relay	-	-	Normal control	Stopped	Stopped	Normal control	Normal control
13	4	Accelerator linked relay system abnormal	Wiring harness open circuit, short, or defective solenoid valve / relay	-	-	Normal control	Stopped	Stopped	Normal control	Normal control
14	1	PCV1 +B short	Wiring harness open circuit, short, or defective relay	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
14	2	PCV1 GND short	Wiring harness open circuit, short, or defective relay	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
14	3	PCV2 +B short	Wiring harness open circuit, short, or defective relay	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
14	4	PCV2 GND short	Wiring harness open circuit, short, or defective relay	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
14	1&3	PCV1 & 2 both +B shortf1	Wiring harness open circuit, short, or defective relay	Blinking	Yes*	Stopped	Normal control	Stopped	Normal control	Normal control
14	2&4	PCV1 & 2 both GND shortf1	Wiring harness open circuit, short, or defective relay	Blinking	Yes*	Stopped	Normal control	Stopped	Normal control	Normal control
14	6	PCV relay system abnormal	Wiring harness open circuit, short, or defective relay	Blinking	Yes*	Normal control	Normal control	Normal control	Normal control	Normal control
16	1	Rail pressure abnormal (sensor system)	Wiring harness open circuit, short, or defective sensor	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
16	2	Rail pressure abnormal (output fixed)	Wiring harness open circuit, short, or defective sensor	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
16	3	Rail pressure abnormal (excessive pumping by pump)	Wiring harness open circuit, short, or defective sensor	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control
16	4	Rail pressure abnormal (control system)	Wiring harness open circuit, short, or defective sensor	Light ON [1]	-	Limit injection quantity	Normal control	Stopped	Normal control	Normal control

* The multiplex display screen indicates "Engine".

No.	Exhaust brake light	Meaning of the diagnostic trouble code (DTC) or the diagnosis item	Estimated cause of the malfunction	Warning light [mode]	Multiplex indication	Contents of fail-safe action			
						Fuel injection	Exhaust brake engine retarder	Cruise control	Tachometer
17	1	Flow damper activated (No. 1 cylinder)	Fuel leak	—	—	Injection stopped to the cylinder in which the flow damper has been activated	Normal control	Normal control	Normal control
17	2	Flow damper activated (No. 2 cylinder)		—	—				
17	3	Flow damper activated (No. 3 cylinder)		—	—				
17	4	Flow damper activated (No. 4 cylinder)		—	—				
17	5	Flow damper activated (No. 5 cylinder) - For J08C only		—	—				
17	6	Flow damper activated (No. 6 cylinder) - For J08C only		—	—				
18	1	Injector solenoid valve drive system open circuit (No. 1 cylinder)	Wiring harness open circuit	Light ON [1]	—	Limit injection quantity	Normal control	Stopped	Normal control
18	2	Injector solenoid valve drive system open circuit (No. 2 cylinder)		Light ON [1]	—				
18	3	Injector solenoid valve drive system open circuit (No. 3 cylinder)		Light ON [1]	—				
18	4	Injector solenoid valve drive system open circuit (No. 4 cylinder)		Light ON [1]	—				
18	5	Injector solenoid valve drive system open circuit (No. 5 cylinder) - For J08C only		Light ON [1]	—				
18	6	Injector solenoid valve drive system open circuit (No. 6 cylinder) - For J08C only		Light ON [1]	—				
19	1	Injector solenoid valve drive system +B short (common 1)	Wiring harness short	Light ON [1]	—	Limit injection quantity	Normal control	Stopped	Normal control
19	2	Injector solenoid valve drive system GND short (common 1)		Light ON [1]	—				
19	3	Injector solenoid valve drive system +B short (common 2)		Light ON [1]	—				
19	4	Injector solenoid valve drive system GND short (common 2)		Light ON [1]	—				
21	1	Pump not pumping (fuel discharged)	Significant misalignment during the assembly of the supply pump	Blinking	Yes*	Injection quantity limited; then, stopped	Normal control	Stopped	Normal control
21	2	Pump not pumping or pressure limiter activated		Blinking	Yes*				
22	1	ECU internally abnormal	ECU defective	Light ON [1]	—	Limit injection quantity	Stopped	Stopped	Stopped
22	2	CBCS solenoid system abnormal	Wiring harness open circuit, short, defective solenoid valve, or improper ECU installation	Light ON [2]	—	Limit injection quantity	Normal control	Stopped	Normal control
22	3	Atmospheric pressure sensor open/short	ECU defective	—	—	Fix atmospheric air pressure to 101.3 kPa	Normal control	Normal control	Normal control
23	1	Overrun abnormal	Engine speed over 3,650 rpm	Light ON [1]	—	Injection stopped during overrun	Normal control	Stopped	Normal control
24	1	Overheating	Coolant temperature over 105 °C	—	—	Limit injection quantity	Normal control	Stopped	Normal control

* The multiplex display screen indicates "Engine".