 


Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C975 3G wireless phone.

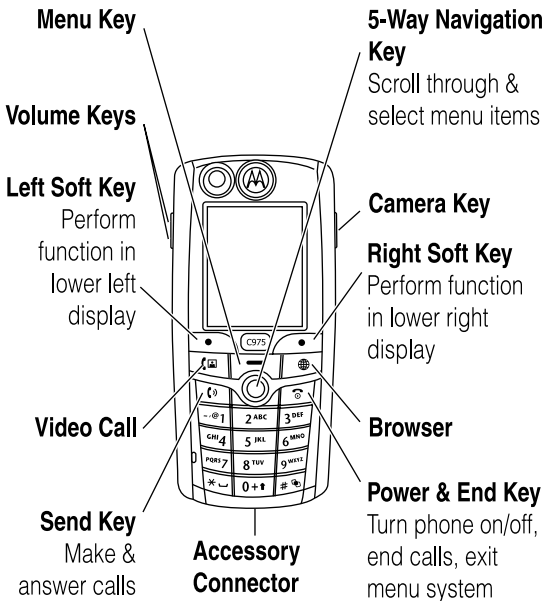

www.motorola.com

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners.

© Motorola, Inc., 2004.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Contents

Safety and General Information	6
Getting Started	13
About This Guide	13
Installing the UICC or SIM Card	13
Battery Tips	15
Installing the Battery	16
Charging the Battery	16
Turning Your Phone On	17
Adjusting Volume	18
Making a Call	19
Answering a Call	19
Changing the Call Alert	19
Viewing Your Phone Number	20
Highlight Features	21
Making Video Calls	21
Taking and Sending a Photo	21
Using Photos and Pictures	23
Recording Video Clips	25
Using Video Clips	27
Micro-Browser	28
Connecting Your Phone to Another Device	31
Learning to Use Your Phone	33
Using the Display	33
Using the 5-Way Navigation Key	37
Using Menus	37
Entering Text	40

Using the Handsfree Speaker	50
Changing a Code, PIN, or Password	50
Locking and Unlocking Your Phone	51
Locking and Unlocking the Keypad	52
If You Forget a Code, PIN, or Password	53
Setting Up Your Phone	54
Storing Your Name and Phone Number	54
Setting the Time and Date	54
Setting a Ring Style	54
Setting a Wallpaper Image	55
Setting a Screen Saver Image	56
Setting Display Skin	56
Setting Display Brightness	56
Adjusting the Backlight	57
Setting Display Timeout	57
Switching Storage Devices	57
Calling Features	58
Changing the Active Line	58
Redialling a Number	58
Using Automatic Redial	58
Using Caller ID	59
Cancelling an Incoming Call	60
Turning Off a Call Alert	60
Calling an Emergency Number	61
Dialling International Numbers	61
Viewing Recent Calls	61
Returning an Unanswered Call	63
Using the Notepad	63
Attaching a Number	64
Calling with Speed Dial	64

Calling With 1-Touch Dial65
Using Voicemail65
Using Call Waiting66
Putting a Call On Hold67
Transferring a Call67
Phone Features69
Menu Map69
Feature Quick Reference.71
Specific Absorption Rate Data86
Index88

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: *Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.*

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: *The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.*






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

 
- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

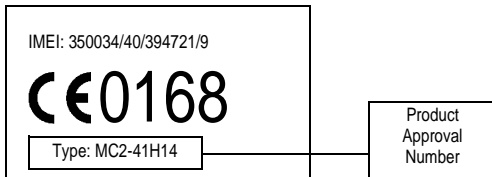

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

Getting Started

About This Guide

This guide describes the basic features of your Motorola wireless phone.

To obtain another copy of this guide, see the Motorola Web site at:

<http://hellomoto.com>

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories

 


This label identifies a feature that requires an optional Motorola Original™ accessory.


Installing the UICC or SIM Card

Your 3G UICC (Universal IC Card) contains your phone number, service details, and phonebook/message memory. Your phone can use GSM SIM (Subscriber Identity Module) cards, but not all features will be available.


Caution: Do not bend or scratch your card. Avoid exposing your card to static electricity, water, or dirt.

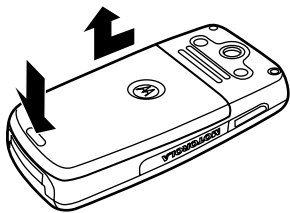


1

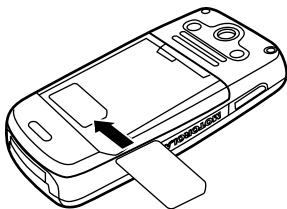 

2

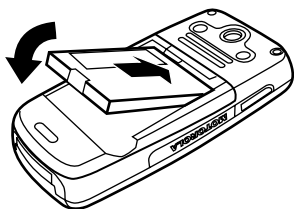 


3

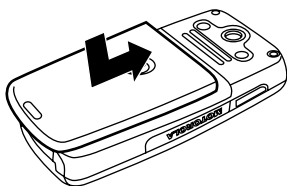 

4



 Note: You can install a memory card in your phone to store more multimedia files such as audio clips, pictures, and video clips. To install a memory card, remove your phone's battery door and battery and insert the card as shown.

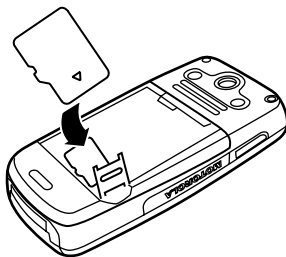

Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and battery chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling centre for proper battery disposal.

 
Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, please read the battery safety information in the *Safety and General Information* section included in this guide.


Installing the Battery




™ Your phone is designed to use only Motorola Original™ batteries and accessories.

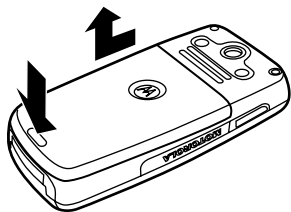

1

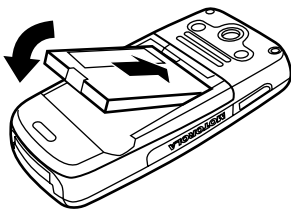 

2

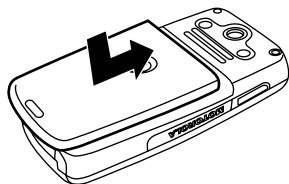 


3

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

 - 1 Plug the travel charger into your phone with the release tab facing up.

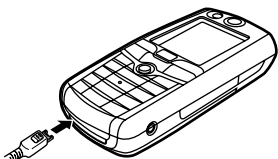


-
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
 - 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.
-


Tip: You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

Turning Your Phone On

Action

- 1 Press and hold  for 2 seconds to turn on the phone.



-
- 2 If necessary, press  to scroll to the User Account you want. Then press the **SELECT** key to select the account from the list (stored on the SIM card).
-

Action

- 3 If necessary, enter your SIM card PIN code and press the **OK** key to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 4 If necessary, enter your four-digit unlock code and press **OK** key to unlock the phone.

 
Tip: The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

Adjusting Volume

Press the up or down volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease speakerphone volume during a call
- turn off an incoming call alert
- increase or decrease the ringer volume setting when the home screen is visible

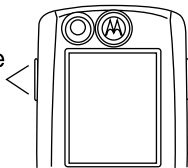

Volume Key



Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

Making a Call




To make video calls, see page 21.

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and “hang up” the phone when you are finished

Note: You can make an emergency call even when the phone is locked, or when a SIM card is not inserted (see page 61).

Answering a Call



When you receive a call, your phone rings and/or vibrates and displays an incoming call message.


Press	To
1 	answer the call
or	
DIVERT or 	divert the call to your voicemail or call divert number, as though your line was busy
2 	end the call and “hang up” the phone when you are finished

Changing the Call Alert

In the home screen, press the down volume key to switch the alert for incoming calls and other events to vibrate alert, then silent alert. Press the up volume key to reset ring alert.

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.




Note: *Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 54. If you do not know your phone number, contact your service provider.*

Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.

Making Video Calls


If you call someone else who has a video phone, you can see each other while you talk.


Press	To
1 keypad keys	dial the phone number
2 	display the video call preview
3 	make the call
4 	end the call and "hang up" the phone when you are finished

Taking and Sending a Photo

To activate your phone's camera, press the camera key on the right side of your phone.

The active viewfinder image displays.

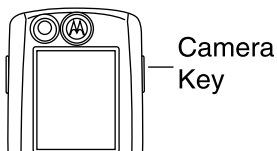 

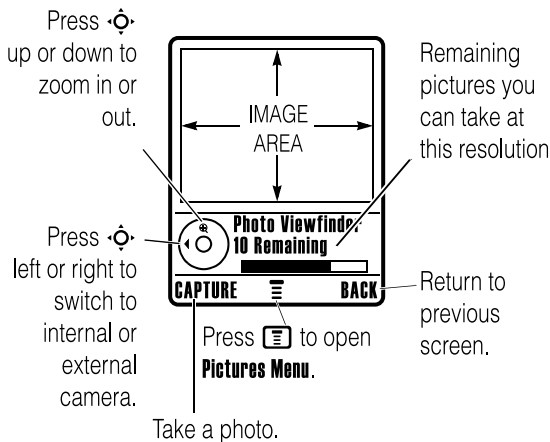 

Point the camera lens at the photo subject, then:

Press	To
1 CAPTURE key	take a photo Tip: Press to turn the light on or off
2 OPTIONS key	view storage options If you choose to store the photo, continue to step 3.
or	
DISCARD key	delete the photo and return to active viewfinder
3 up or down	scroll to an option
4 SELECT key	select the option

Press  to open the **Pictures Menu** when the camera is active. The menu can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Internal / External View	Switch between the internal (self-portrait) and external cameras.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Light	Turn the camera light on or off.
Adjust Brightness	Change the image brightness.
Pictures Setup	Open the setup menu to adjust picture and video settings.
View Free Space	See how much memory remains for storing pictures.

Tip: To assign a stored picture to a phonebook entry, open the entry and press  > **Edit** > **Picture**. You cannot assign pictures to entries stored on your SIM card.

Using Photos and Pictures

You can send your photos to other wireless phone users or email addresses, assign photos to specific phonebook entries, and use them as wallpaper or screen saver images.

Downloading Pictures



Your phone may contain predefined photos, pictures, and animations. You can download and store additional images on your phone.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

Note: The files that you download or receive as attachments might have a lock that keeps you from saving them on external memory, forwarding them, or editing them.

To download a picture with the micro-browser, see page 28. To store a picture from a message, see page 72.

Viewing and Managing Pictures

To view a photo, picture, or animation stored on your phone:

Find the Feature



> **Multimedia** > **Pictures**

Press

1 up or down

To

scroll to the picture

2 **VIEW** key

view the picture

3

view the next/previous picture

or



open the **Pictures Menu** to perform other options

Tip: You can change the way your picture list displays using the **Setup** option in the **Pictures Menu**.

Press to open the **Pictures Menu** from the picture list. The menu can include the following options:

Option	Description
Send in Message	Insert selected picture in a new message.
Apply as	Set the picture as your phone's Wallpaper or Screen Saver image.
New	Capture a new picture or create an album of stored pictures.

Option	Description
Details	View picture information.
Rename	Rename the picture.
Delete	Delete the selected picture or marked picture(s).
Mark	Mark the picture to move, copy, send or delete it.
Mark All	Mark all pictures to move, copy, send, or delete them.
Categories	Create a new category, or view pictures in a selected category.
Assign to Category	Assign the picture to a defined category.
Pictures Setup	Open the setup menu to adjust picture and video settings.
View Free Space	View memory space available for storing pictures.

Recording Video Clips


To record a video on your phone:

Find the Feature



> Multimedia > Record Video

The active viewfinder image displays.

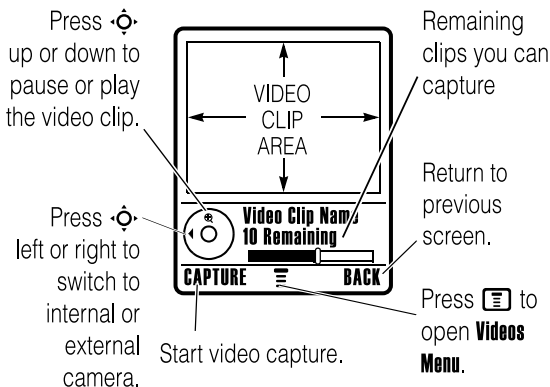 

Point the camera lens at the video subject, then:

Press	To
1 CAPTURE key	start the video
Tip: You can press the PAUSE key to pause video capture.	
2 STOP key	stop the video
3 OPTIONS key	view storage options
If you choose to store the video, continue to step 4.	
or	
DISCARD key	delete the video and return to active viewfinder
4 up or down	scroll to an option
5 SELECT key	select the option

Press  to open the **Videos Menu** when the camera is active. The menu can include the following options:

Option	Description
Go To Videos	View videos stored on your phone.
Internal / External View	Switch between the internal (self-portrait) and external cameras.
Video Setup	Open the setup menu to adjust picture and video settings.
View Free Space	See how much memory remains for storing videos.

Using Video Clips

You can download video clips with the micro-browser, and receive video clips in multimedia messages.

Downloading Video Clips

To download a video clip with the micro-browser, see page 28. To store a video clip from a message, see page 73.

Viewing and Managing Video Clips


To play a video clip stored on your phone:

Find the Feature



> **Multimedia** > **Videos**

Press


1  up or down

To

scroll to the video clip

2 **PLAY** key

start video clip playback


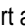
During video clip playback, press  to open the **Videos Menu** to perform various operation on the video:

Option	Description
Play Full Screen	Stretch the video to fill the display.
Send in Message	Insert selected video in a new message.
Zoom	Zoom in or out on the video.
New	Capture a new video.
Details	View video information.
Delete	Delete the selected video.
Mark	Mark the video to move, copy, send or delete it.
Mark All	Mark all video to move, copy, send, or delete them.
Categories	Create a new category, or view videos in a selected category.
Assign to Category	Assign the video to a defined category.
Video Setup	Open the setup menu to adjust video settings.
View Free Space	View memory space available for storing videos.

Micro-Browser





The micro-browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.

Your phone may use a high-speed *General Packet Radio Service* (GPRS) network connection. This type of connection is identified by a  (GPRS) indicator in the home screen that disappears when you start a micro-browser session. If you see an  (in-call) indicator during a micro-browser session, your phone is using a standard voice channel connection. The type of network connection your phone uses depends on your service provider's network. Your network connection charges may vary depending on the type of connection used.

Note: *Some features on your phone might open a browser session automatically.*


Starting a Micro-Browser Session



Press	To
1 	start the micro-browser
2  up or down	scroll to a bookmark, service, or application
3 SELECT key	select the item

If you open a text message with a Web address (URL) embedded in it, you can press  > **Go To** to launch the micro-browser and go directly to the URL.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

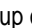
Interacting With Web Pages

Press	To
 up or down	scroll through text, or highlight a selectable item
SELECT key	select the highlighted item

Press	To
keypad keys, followed by the OK key	enter information Tip: Press  to delete one letter at a time if you make a mistake.
BACK key	go back to the previous page
	open the Browser Menu

Downloading Objects From a Web Page

You can download a picture, sound, or other object from a Web page by selecting its link. You can store these media objects and use them as wallpaper images, screen saver images, and event alerts.

- The files that you download or receive as attachments might have a lock that keeps you from saving them on external memory, forwarding them, or editing them.
- If you receive a call during the download, press the **SWAP** key to answer the call without ending the download.
- To end a download in progress, press .

Selecting or Creating a Web Session

Use this feature to select or create a Web session, or network connection profile. You can use different Web sessions to connect to the Internet in different ways.

Find the Feature



> **Web Access** > **Web Sessions**

Contact your service provider to obtain Web session settings, if necessary.

Running the Micro-Browser in the Background

Some phones are set up to run a micro-browser session in the background when the phone registers with a network. This lets your phone display information services messages sent by your service provider (such as stock updates, news headlines, or sports scores). These types of services typically are available through subscription from your service provider.

Setting Up Browser Messages

Find the Feature



> Messages > Browser Msgs



> Brwsr Msg Setup > Service

Option	Description
Off	stops all browser messages
Receive All	allows all browser messages
Restricted	allows only browser messages from your service centre number

Connecting Your Phone to Another Device

You can connect your phone to a computer or hand-held device using a:

- USB cable



Note: *Not all devices are compatible with all types of connections. Check your external device for specifications. The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.*

 
Setting Up a Cable Connection

Attach a Motorola Original™ USB cable to the phone and external device as follows.

Note: Check your computer or hand-held device to determine the type of cable you need.

Action

- 1 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.

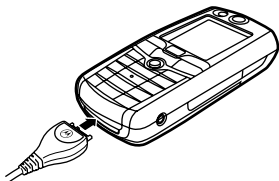


-
- 2 Plug the other end—the USB connection—into the USB port on the device.
-


Learning to Use Your Phone

See page 1 for a basic phone diagram.



 Using the Display

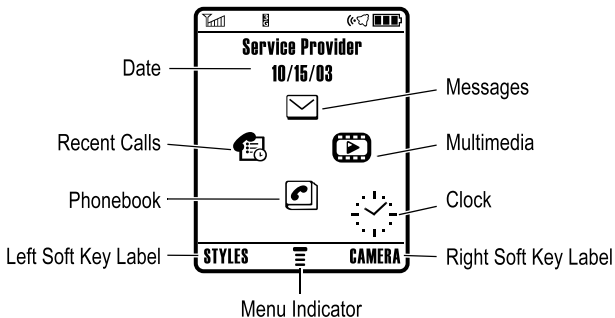The *home screen* is displayed when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number.



Press the 5-way navigation key (⬅️⬆️⬇️⬇️➡️) left, right, up, or down to select one of the menu feature icons. If you select a menu icon by mistake, press  to return to the home screen.

 
Note: Your home screen may look different from the display shown above. For example, your service provider may hide the menu feature icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view.

The  (menu) indicator indicates that you can press the menu key () to enter the main menu.



Labels at the bottom corners of the display show the current soft key functions. Press the left soft key or right soft key to perform the function indicated by the left or right soft key label.

The following status indicators can display:

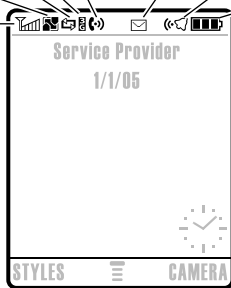- 4. Roam
- 5. Active Line
- 6. Message
- 3. Data
- 2. GPRS
- 7. Ring Style
- 1. Signal Strength
- 8. Battery




1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.


2. GPRS Indicator



Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:


 = GPRS PDP context activate


 = GPRS attach

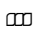
 = GPRS packet data available


3. Data Transmission Indicator


Shows connection and data transmission status. Indicators can include:

 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure Circuit Switch Data (CSD) call

 = unsecure CSD call

4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:

 = 3G home

 = 3G roam

 = 2.5G home



 = 2.5G roam

 = 2G home


 = 2G roam


5. Active Line Indicator




Shows  to indicate an active call, or  to indicate when call diverting is on. Icons for dual-line SIM cards can include:

 = line 1 active

 = line 2 active


 = line 1 active, call divert on

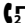 = line 2 active, call divert on


6. Message Indicator



Displays when you receive a new message. Indicators can include:

 = text message

 = voicemail message


 = voice and text message


 = answering machine

 = IM message


7. Ring Style Indicator

Shows the ring style setting.

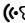
 = loud ring

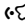 = soft ring

 = vibrate and ring

 = vibrate then ring

 
 = vibrate

 = silent

8. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

 
Using the 5-Way Navigation Key

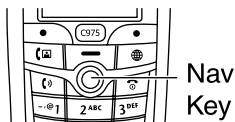







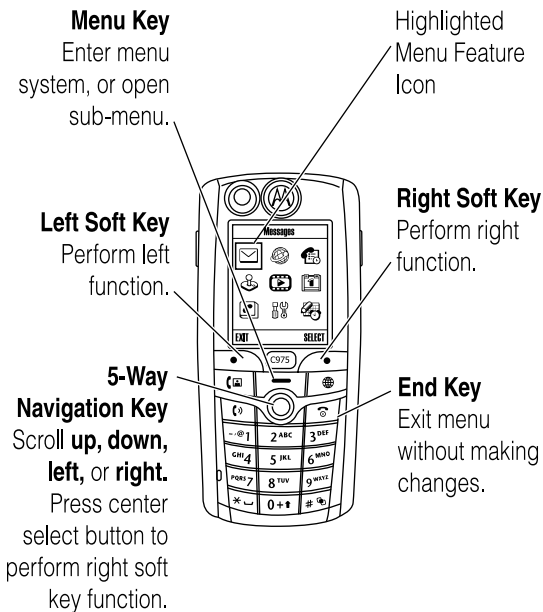






Use the 5-way navigation key (◂◃◅◆) to scroll up, down, left, or right in the menu system. Press the centre of the key (◂◃◅◆) to select a highlighted menu item.

Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons may display in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Messages		Browser
	Recent Calls		Games & Apps
	Multimedia		Datebook
	Phonebook		Settings
	Tools		Web Access
	Ring Styles		Personalise




Selecting a Menu Feature

To select a menu feature, starting from the home screen:

Find the Feature

 


> **Recent Calls** > **Dialled Calls**

This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialled Calls**. Press  to scroll to and select items. Press the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Selecting a Feature Option


Some features require you to select an option from a list:

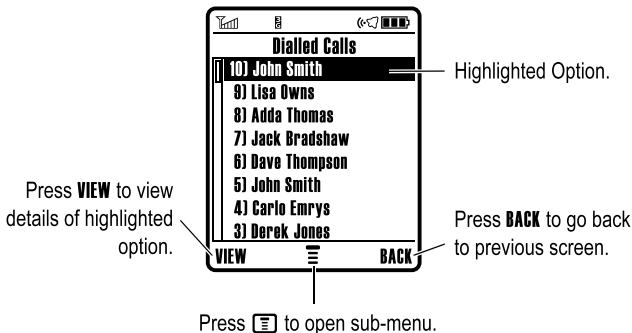


- Press $\cdot\odot\cdot$ to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press $\cdot\odot\cdot$ left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

 Some features require you to enter information.

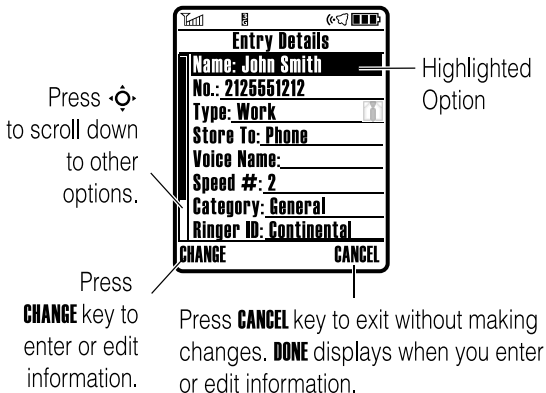

 The message centre lets you compose and send text messages.

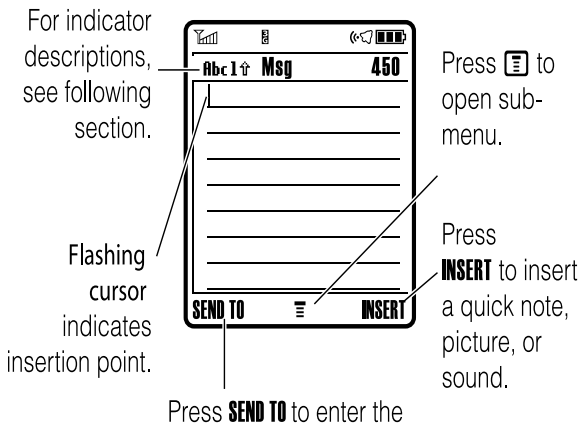

Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press **#** in any text entry screen to select one of the following entry modes:

Primary	The primary text entry mode (see the following section).
Numeric	Enter numbers only (see page 47).
Symbol	Enter symbols only (see page 47).
Secondary	The secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing **≡** > **Entry Mode**.

Setting Up a Text Entry Mode

Press **≡** > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

ITAP	Let the phone predict each word as you press keys (see page 45).
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting (only available for Secondary Setup).

Using Capitalisation

Press **0** in any text entry screen to change text case. The following indicators show capitalisation status:

abc = no capital letters

Abc = capitalise next letter only

ABC = all capital letters

Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:


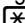
Primary	Second.	
1	2	Tap, no capital letters
1 ↑	2 ↑	Tap, capitalise next letter only
1 ↑	2 ↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalise next letter only
		iTAP, all capital letters


Two other indicators identify **Numeric (123)** or **Symbol (@%)** entry modes.

Using Tap Mode


This is the standard mode for entering text on your phone.

Regular **Tap** mode cycles through the letters and number of the key you press. **Tap Extended** also cycles through additional symbols as shown in the chart on page 44.


Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters
	Tip: Press  right to accept a word completion, or  to insert a space.
3 OK key	store the text

In a text entry screen, you can press  to switch entry modes. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 41.

When you enter text with **Tap** or **Tap Extended**, the soft key functions change.

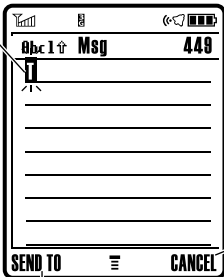

Block cursor indicates highlighted character. After 2 seconds, character is accepted and cursor moves to next position.

 
Press  to delete character to left of insertion point.

Press **SEND TO** to enter the recipient.

Press **CANCEL** to exit without storing changes.

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

Flashing cursor indicates insertion point.

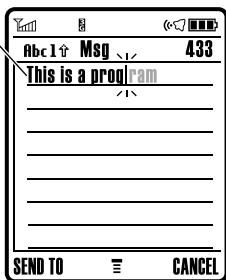




Press **⏪** right to accept **program**, or press **✖** to reject it and enter a space after **prog**.


If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart


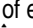

Use this chart as a guide for entering characters with **Tap Extended**.

1	.?! , @ ' - _ : ; () & " ~ 1 0 ¿ j % £ \$ ¥ ¢ € + x * / \ [] = > < # \$
2	a b c 2 á à â ã ç æ
3	d e f 3 é è ê ë
4	g h i 4 í î ï
5	j k l 5
6	m n o 6 ñ ó ò ô õ ø æ
7	p q r s 7
8	t u v 8 ú û ü ü
9	w x y z 9

	change text case, for capital letters
	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.


Tap Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

Using iTAP™ Mode

iTAP™ software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than **Tap**, because your phone combines the keypresses into common words.

For example, if you press **[7][7][6][4]**, letter combinations that match your keypresses display:

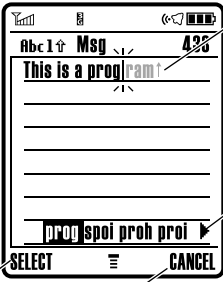

The screenshot shows a text entry screen with the following elements: a status bar at the top with signal strength, battery, and time (4:38); a header with 'Abc 1 ↑ Msg' and a cursor; the main text area containing 'This is a prog|ram'; a list of suggestions at the bottom: 'prog', 'spoi', 'proh', and 'proi', with 'prog' highlighted; and a bottom navigation bar with 'SELECT', a menu icon, and 'CANCEL'.

Press **[C]** to delete character to left of insertion point.

Press **SELECT** to lock highlighted combination.

Press **CANCEL** to exit without storing changes.

Press **⬆** up to accept **Program**.

Press **⬆** right to highlight another combination. Press **[*]** to enter **Prog** and a space.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press **[#]** to switch entry modes. An indicator shows which mode is active (see page 42). If **ITAP** mode is not available as the **Primary** or **Secondary** entry mode, see page 41.

Press

1 keypad keys (one press per letter)

2 **⬆** left or right

To

show possible letter combinations at the bottom of the screen

highlight the combination you want

Press

3 **SELECT** key

To

lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

or




enter the highlighted combination when it spells a word

A space is automatically inserted after the word.


If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words.

Using Numeric Mode

In a text entry screen, press  to switch entry modes until the **123** (**Numeric**) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.

Using Symbol Mode

In a text entry screen, press  to switch entry modes until the **@%** (**Symbol**) indicator displays.

Press

1 keypad keys (one press per symbol)

To

show possible symbols at the bottom of the display

2 $\cdot\hat{\phi}$ left or right

highlight the symbol you want

3 **SELECT** key

enter the highlighted symbol

Symbol Chart

Use this chart as a guide for entering characters with symbol mode.

1	.?! , @ ' - _ : ; () & " ~ 1 0 ÿ ÿ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
2	@ _ \ α β
3	/ : ; δ Δ ε φ Φ
4	" & ' γ Γ η ι
5	() [] { } κ λ Λ
6	ÿ ÿ ~ μ ν ω Ω
7	< > = π Π ρ σ Σ
8	\$ £ ¥ ¢ € θ Θ τ υ
9	# % * ζ ξ Ξ χ ψ Ψ
0	+ - x * / = > < # §
✖	enter a space (hold to enter a return)
#	change text entry method (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, **1** first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action

Press the **DELETE** key to delete one letter at a time.

Press and hold the **DELETE** key to delete the entire message.

Copying, Cutting, and Pasting Text

Press  from a text entry screen to display these options:

Option	Description
Copy Text	Copy the text you are about to highlight (see “Highlighting Text” below).
Copy All Text	Copy all text in the editor.
Cut Text	Cut the text you are about to highlight (see “Highlighting Text” below)
Cut All Text	Cut all text in the editor.
Paste	Paste the text you cut or copied.
Undo	Undo the last copy, cut, or paste in the current text editor.

Note: **Copy All Text** also displays in the menu (press ) when you are viewing details for a **Phonebook** entry, **Datebook** event, **Browser** page, text message, or **Recent Calls** entry.



Highlighting Text

In a text editor, to highlight and copy or cut text:

Find the Feature



> **Copy Text** or **Cut Text**

Press	To
1 	scroll to the beginning of the text you want to copy or cut
2 START key	turn on the highlighting marker
3 	scroll to the end of the text you want to copy or cut
4 COPY key or CUT key	copy or cut the text you selected You can now paste the text in another location or file.

Text remains on your clipboard, available to paste, until you copy or cut other text or until you turn off your phone.

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the **SPEAKER** key to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press the **SPEAKER** key again or turn the phone off.

***Note:** The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.*

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code or PIN2 code, if necessary.

To change a code or password:

Find the Feature



> **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 61).

Locking Your Phone Manually

Find the Feature



> **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press

1 keypad keys

To

enter your unlock code

2 **OK** key

lock the phone

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK key	unlock your phone



Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature	
	 > Settings > Security > Phone Lock > Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK key	activate automatic lock

Locking and Unlocking the Keypad


Press   to lock or unlock the keypad. This feature prevents an accidental keypress from inadvertently dialling an emergency number or one-touch dial number (for example, when carrying your phone in a purse or pocket).

Note: *You can still answer calls when the keypad is locked.*

If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code <i>bypass</i> screen
2 keypad keys	enter your <i>security code</i>
3 OK key	submit your security code

If you forget your security code, SIM card PIN code, or PIN2 code, contact your service provider.

Setting Up Your Phone

Storing Your Name and Phone Number





To store or edit your name and phone number information on your SIM card:

Find the Feature



> **Settings > Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to view or edit your name and phone number.

If you do not know your phone number, contact your service provider.

Setting the Time and Date

Your phone uses the time and date for the **Datebook**.

Find the Feature



> **Settings > Initial Setup**
> **Time and Date**

Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.


You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 36).


To set a ring style:



Find the Feature



> **Ring Styles > Style**

Press	To
1  up or down	scroll to the ring style
2 SELECT key	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Ring Styles** > *style Detail*.

- If you select the **Silent** ring style, your phone will not use **Auto Answer** (see page 80).
- Java™ applications can make your phone vibrate or light up. You can turn off **App Vibration** and **App Backlight** under  > **Settings** > **Java Settings**.
- To turn off alerts for messages that arrive during a call, select  > **Settings** > **In-Call Setup** > **Msg Alert** > **Not in Call**.

Setting a Wallpaper Image

You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image displays as a faint watermark in text and menu displays.

Note: When you set an animation as a wallpaper image, only the first frame of the animation displays.

Find the Feature  > **Personalise** > **Wallpaper**

Setting	Description
Picture	Select the picture or animation for the background image in your home screen.
Layout	Select Centre , Tile , or Fit-to-screen .

Setting a Screen Saver Image

You can set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature



> Personalise > Screen Saver

Setting	Description
Picture	select the picture or animation for your screen saver
Delay	select how long your phone must be inactive before the screen saver picture displays <i>Note: If this setting is longer than your Display Timeout setting, then your display will turn off before you see the screen saver.</i>

Setting Display Skin

Change the look and feel of your phone's display by selecting a different skin setting.

Find the Feature



> Personalise > Skin

Setting Display Brightness

Find the Feature



> Settings > Initial Setup
> Brightness

Adjusting the Backlight

You can set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.

Caution: The **Continuous** setting can decrease battery life.

Find the Feature



> **Settings** > **Initial Setup**
> **Backlight**

Setting Display Timeout

You can set the display to turn itself off when no activity is detected for a specified time period.

Find the Feature



> **Settings** > **Initial Setup**
> **Display Timeout**

Switching Storage Devices



You can choose whether your phone saves multimedia files such as audio clips, pictures, and video clips on your phone or on your memory card.

Find the Feature



> **Settings** > **Phone Status**
> **Storage Devices**

Note: To install a memory card, see page 14.

Calling Features

For basic instructions on how to make and answer calls, see page 19.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature



> Settings > Phone Status
> Active Line

The active line indicator in the display shows the currently active phone line (see page 36).

Redialling a Number

Press

1

To

view the dialled calls list

2 up or down

scroll to the entry you want to call

3

redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Number Busy**.

With automatic redial, your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays the message **Redial Successful**, and then connects the call.

To turn automatic redial on or off

Find the Feature



> **Settings** > **Initial Setup**
> **Auto Redial**

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a busy signal and see **Number Busy**:

Press

 or **RETRY** key

To

activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

Using Caller ID

Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls.

The phone displays the caller's name (and picture, if available) if the name is stored in your phonebook, or


Incoming Call when caller ID information is not available.

You can also set your phone to play a distinctive **Ringer ID** for specific entries stored in your phonebook. For more information, see page 75.

Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

While dialling (with digits visible in the display), press  > **Hide ID/Show ID**.

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press

 or **DIVERT** key

To

divert the call to your voicemail or call divert number, as though your line was busy



Depending on your phone settings and/or service subscription, the call may be diverted to another number, or the caller may hear a busy signal.

Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press

either volume key


To

turn off the alert


Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. Your service provider can program additional emergency numbers into your SIM card. *However, your SIM card must be inserted in your phone in order to use the numbers stored on it.* See your service provider for additional information on this issue.

Note: *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*


Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

Dialling International Numbers

Press and hold  to insert the local international access code (+) for the country from which you are calling.

Viewing Recent Calls







Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the **Dialled Calls** list.

Find the Feature



> Recent Calls

Press	To
1  up or down	scroll to Received Calls or Dialled Calls
2 SELECT key	select the list
3  up or down	scroll to an entry <i>Note: ✓ means the call connected.</i>
4 	call the entry's number Tip: Press and hold  for two seconds to send the number as DTMF tones during a call.
or	
	make a video call to the entry's number
or	
View / Store key	if View displays above the left soft key, this displays entry details if Store displays above the left soft key, this stores the entry in the phonebook
or	
	open the Last Calls Menu to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.


Option	Description
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays **X Missed Calls**, where **X** is the number of missed calls.

Press

1 **VIEW** key

2  up or down

3 

To

see the received calls list

select a call to return

make the call



Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature




> **Recent Calls** > **Notepad**

Press	To
	call the number
or	
	open the Dialing Menu to attach a number or insert a special character
or	
STORE key	create a phonebook entry with the number in the No. field


Attaching a Number

While dialling (with digits visible in the display):



Press	To
 > Attach Number	attach a number from the phonebook or recent calls lists

Calling with Speed Dial

Each entry you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, press the **VIEW** key.

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

Calling With 1-Touch Dial

To call phonebook entries 2 to 9, press and hold the single-digit speed dial number for one second.

Press and hold **1** to dial your voicemail number. To store your voicemail number, see page 66.

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature




> Messages > VoiceMail

Shortcut: Press and hold **1** in the home screen.

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays  (voicemail message indicator) and **New VoiceMail**.

Press

CALL key

To

listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature



> **Messages**



> **VoiceMail Setup**

Press

1 keypad keys

To

enter your voicemail number

2 **OK** key

store the number

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. To store these characters in a number, see page 75.

Using Call Waiting



When you are on a call or downloading a file, an alert tone sounds to indicate that you have received a second call.

Press

1 

To

answer the new call

2 **SWITCH** key

switch between calls

or

LINK key

connect the 2 calls

or



> **End Call On Hold**

end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature



> **Settings** > **In-Call Setup**
> **Call Waiting**

Putting a Call On Hold

Press

> **Hold**

To

put the call on hold

Transferring a Call



You can announce that you are transferring an active call to another party, or you can directly transfer the call.

Announce the Call Transfer

Find the Feature



> **Hold**

Press

1 keypad keys

To

dial the number where you are transferring the call

2

call the number and speak to the person who answers

3

open the menu

4 up or down

scroll to **Transfer**

5 **SELECT** key

select **Transfer**

6 **OK** key

confirm the transfer

Do Not Announce the Call Transfer

Find the Feature



> **Transfer**

Press

1 keypad keys

To

dial the number where you are transferring the call

2 

transfer the call

Phone Features

Menu Map

Main Menu



Messages

- Message Inbox
- Create Message
- Email Msgs
- Voicemail
- Browser Msgs
- Quick Notes
- Outbox
- Drafts
- MMS Templates
- Info Services *



Browser



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost *
- Data Times *
- Data Volumes *



Games & Apps



Multimedia

- Camera
- Record Video
- Pictures
- Videos
- Sounds
- Themes



Datebook



Phonebook



Settings

- (see next page)



Extras

Tools

- Shortcuts
- Calculator
- Alarm Clock
- Dialling Services
- Fast Menu *
- SIM Apps *



Web Access

- Browser
- Bookmarks
- Enter URL
- Browser Settings
- History
- Web Sessions
- Stored Pages



Personalise

- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- Style
- *style* Detail
- My Tones

Menu organisation and features may vary on your phone.

* Indicates network or subscription-dependant features

Settings Menu



Connection

- Sync



Call Divert

- Voice Calls
- Video Calls
- Cancel All
- Divert Status



In-Call Setup

- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Answer Options
- Call Waiting
- Msg Alert



Initial Setup

- Time and Date
- 1-Touch Dial
- Auto Redial
- Display Timeout
- Backlight
- Scroll
- Language
- Battery Save
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line *
- Battery Meter
- Storage Devices
- Other Information



Headset

- Auto Answer
- Ringer Options
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Keypad
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords










Java Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App







* Indicates network or subscription-dependant features













Feature Quick Reference


Calling Features

Feature	Description	
Conference Call	During a call:  > Hold , dial next number, press  , press the LINK key	
Call Diverting	Set up or cancel call diverting:  > Settings > Call Divert	
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring	

Messages






Feature	Description	
Send Text Message	Send a text message:  > Messages > Create Message > New Text Message	
Send Quick Note Text Message	Send a quick note:  > Messages > Quick Notes Scroll to a note and press the SEND key.	
Send Multimedia Message (MMS)	Send a multimedia message:  > Messages > Create Message > New Multimedia Message	

Feature	Description
Use MMS Template	Open an MMS template with preloaded media:  > Messages > Create Message > MMS Templates Tip: To download templates or other objects from a Web page, see page 84. 
Insert Pictures and Other Objects	While editing a message:  > Insert Note: Some files might have a lock that keeps you from forwarding them. 
View Sent Messages	 > Messages > Outbox 
Read Message	Read a new text or multimedia message that you have received: Press the READ key. 
Reply to Message	While reading a message:  > Reply Tip: To change the message type for your replies to MMS messages:  > Messages > Message Setup > MMS Msg Setup > Reply Type 
Store Message Objects	Go to a multimedia message slide, or highlight an object in a message, then:  > Store 





Feature	Description
Set Up Text Message Inbox	Set up or edit the text message inbox settings:  > Messages > Message Setup > Text Msg Setup









Email








Feature	Description
Send Email Message	Send an email message:  > Messages > Create Message > New Email
Insert Quick Notes, Pictures, and Other Objects	While editing a message:  > Insert <i>Note: Some files might have a lock that keeps you from forwarding them.</i>
View Sent Messages	 > Messages > Outbox
Reply to Message	While reading a message:  > Reply
Store Message Objects	While reading a message, highlight an object then:  > Store
Receive New Email Messages	When you receive a message that emails are waiting: Press the PICKUP key.











Feature	Description
Read Email Message	Read a new email message that you have received: Press the READ key. 
Set Up Email Inbox	Set up or edit the email inbox settings:  <ul style="list-style-type: none">  > Messages  > Email Msg Setup



Phonebook



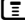





Feature	Description
Create Entry	Create a new phonebook entry:  > Phonebook  > New > Phone Number or Email Address
Dial Entry	Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call
Voice Dial Entry	Voice dial a number stored in the phonebook: Press and hold  , then say the entry's name when prompted.
Edit Entry	Edit an entry stored in the phonebook:  > Phonebook , highlight the phonebook entry, then press the VIEW key and EDIT key

Feature	Description
Store a PIN Code in a Number	<p>While entering the number:  > Insert Pause, Wait, or 'n'</p> <p>Pause waits for the call to connect, then sends the remaining digit(s). If your network does not recognise the first pause character, try two (pp).</p> <p>Wait waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).</p> <p>'n' prompts you for a number before dialling the call. The number you enter is inserted into the dialling sequence in place of the n character</p>
Set Ringer ID for Entry	<p>Assign a distinctive ringer alert to a phonebook entry:</p> <p> > Phonebook > <i>entry</i></p> <p> > Edit > Ringer ID > <i>ringer name</i></p> <p><i>Note: The Ringer ID option is not available for entries stored on the SIM card.</i></p>
Set Category for Entry	<p>Set the category for a phonebook entry:</p> <p> > Phonebook > <i>entry</i></p> <p> > Edit > Category > <i>category name</i></p> <p><i>Note: The Category option is not available for entries stored on the SIM card.</i></p>
Set Category View	<p>Set a phonebook category view:</p> <p> > Phonebook</p> <p> > Categories > <i>category to view</i></p>


Feature	Description
Set Category Ringer ID	Set a distinctive ring for calls from phonebook entries in a specific category:  > Phonebook  > Categories , scroll to entry, press  > Edit > Ringer ID
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > <i>sort order</i>
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook , scroll to entry, press  > Set Primary > <i>phone number</i>
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > Settings > Initial Setup > 1-Touch Dial



Personalising Features

Feature	Description
Ring Style	Change the ring alert for an event:  > Ring Styles > <i>style Detail</i> > <i>event name</i>
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Ring Styles > <i>style Detail</i> > Ringer IDs








Feature	Description
Ring Volume	Set ringer volume:  > Ring Styles > <i>style Detail</i> > Ring Volume
Keypad Volume	Set keypad keypress volume:  > Ring Styles > <i>style Detail</i> > Key Volume
My Tones	Compose your own ring tones:  > Ring Styles > My Tones
Menu View	Display the main menu as graphic icons or as a text-based list:  > Personalise > Main Menu > View
Menu Order	Reorder your phone's main menu:  > Personalise > Main Menu > Reorder
Change Home Screen Nav Key Shortcuts	Change menu feature icons in the home screen  > Personalise > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Tools > Shortcuts > <i>shortcut name</i>



Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language


Feature	Description
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > Settings > Initial Setup > Master Clear

Dialling Features





Feature	Description
Fixed Dial	Turn fixed dialling on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Tools > Dialling Services > Fixed Dial 
Service Dial	Dial service phone numbers:  > Tools > Dialling Services > Service Dial 
Quick Dial	Dial preprogrammed phone numbers:  > Tools > Dialling Services > Quick Dial 



Feature	Description
DTMF Tones	<p>Activate DTMF tones:</p> <p> > Settings > Initial Setup > DTMF</p> <p>To send DTMF tones during a call, just press the number keys.</p> <p>To send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones.</p>

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.









The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.



Feature	Description
Call Times	<p>View call timers:</p> <p> > Recent Calls > Call Times</p> 
In-Call Timer	<p>Display time or cost information during a call:</p> <p> > Settings > In-Call Setup > In-Call Timer</p> 

Feature	Description
Call Cost	View call cost trackers:  > Recent Calls > Call Cost 

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Speaker-phone	Activate the speakerphone during a call: Press the SPEAKER key (if available) or  > Spkrphone On 
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer Note: Your phone will not automatically answer calls if the ring style is set to Silent . 
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial 
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree 

Feature	Description
Power-off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > Settings > Car Settings > Power-off Delay
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  > Settings > Car Settings > Charger Time




Data Calls

Feature	Description
Send Data	Connect your phone to a device, then place a call through the device application.
Receive Data	Connect your phone to a device, then answer a call through the device application.














Network Features

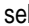Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network





Personal Organiser Features

Feature	Description
Create Datebook Event	Create a new datebook event:  > Datebook , highlight the day, press the centre select button, press  > New
View Datebook Event	View or edit event details:  > Datebook , highlight the day, press the centre select button, scroll to the event, and press the VIEW key
Event Reminder	View event reminder: VIEW key Dismiss event reminder: EXIT key
Copy Datebook Event to Another Device	Copy a datebook event to another phone, computer, or device:  > Datebook , highlight the day, press the centre select button, highlight the event, press  > Send > <i>transfer method</i>
Set Alarm	Set an alarm:  > Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press the DISABLE key or  . Set 8-minute delay: Press the SNOOZE key.
Calculator	Calculate numbers:  > Tools > Calculator



Feature	Description
Currency Converter	Convert currency:  > Tools > Calculator  > Exchange Rate Enter exchange rate, press the OK key, enter amount, press  > Convert Currency .














Security







Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application

News and Entertainment

Note: The files that you download or receive as attachments might have a lock that keeps you from saving them on external memory, forwarding them, or editing them.

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > Web Access > Browser 

Feature	Description
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 
Download Objects from Web Page	Download a picture, sound, or other file from a Web page: Highlight the file, press the SELECT key, then the STORE key. 
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > Multimedia > Themes > <i>theme</i> 
Download Game or Application (Micro-Browser)	Download a Java™ game or application with the micro-browser:  > Web Access > Browser , highlight the application, press the SELECT key, then the DOWNLOAD key 
Launch Game or Application	Launch a Java™ game or application:  > Games & Apps , highlight the application, press the SELECT key 
Change Game or Application Settings	Change the volume, priority, or other settings for Java™ games or applications:  > Settings > Java Settings 
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 

Feature	Description
Manage Sounds	Manage ring tones, sounds that you have composed or downloaded:  > Multimedia > Sounds
Manage Video Clips	Manage video clips:  > Multimedia > Videos
Photo and Video Camera Settings	Adjust light level and other settings for the integrated camera:  > Multimedia > Camera  > Picture Setup or  > Multimedia > Record Video  > Video Setup <i>Note: The photo and video cameras use the same settings.</i>

Specific Absorption Rate Data

This model phone meets international standards for exposure to radio waves

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 1.02 W/kg.³

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

- 1 The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
- 2 CENELEC is a European Union standards body.
- 3 Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

- accessories 13, 31
- accessory connector port 1
- active line indicator 36
- active line, changing 58
- alarm clock 82
- alert
 - creating 77
 - defined 54
 - setting 18, 54, 76
 - turning off 18, 60
- animation
 - downloading 30, 84
 - managing 23
 - screen saver 24, 56
 - viewing 84
 - wallpaper 24, 55
- answering a call 19
- application, locking and
 - unlocking 83
- automatic redial 58

B

- backlight 57
- barring calls 71
- battery

- charging 16
- extending battery life 15, 57
- installing 16
- level indicator 36
- brightness, setting 56
- browser. *See* micro-browser

C

- calculator 82
- call
 - alert, turning off 18, 60
 - answering 19
 - barring 71
 - barring password, changing
 - 50
 - call waiting 66
 - costs 80
 - dialled calls list 61
 - dialling 19
 - diverting 71
 - emergency number 61
 - ending 19, 21
 - handsfree speaker 50
 - hold 67
 - international access code 61
 - making 19
 - received calls list 61

- receiving 19
- ring style 18, 54, 76
- speakerphone 80
- timers 79
- transferring 67
- unanswered call 63

Call Failed, Number Busy message
58

- call waiting 66
- caller ID 22, 24, 59
- calling line identification. *See*
caller ID

- camera
 - settings 85
 - taking a photo 21

- category
 - phonebook entry 75
 - ring ID 76
 - view 75

- centre select button 37

- character chart 44

- clock
 - setting 54

- codes
 - changing 50
 - default 50, 53
 - forgetting 53

- colour, setting 56

- computer
 - connecting to phone 31

- conference call 71
- customising the menu 77

D

- data call 81
 - connecting to external
device 31

- date, setting 54

- datebook 82

- dialled calls list 61

- dialling a number 19, 78

- display
 - backlight 57
 - brightness 56
 - colour 56
 - description 33
 - home screen 33
 - language 77
 - personalising 77
 - skin 56
 - timeout 57

- distinctive ringer alert 76

- diverting calls 71

- DTMF tones
 - activating 79
 - sending 79

E

- earpiece volume 18

- email 73

emergency number 61
end key 1
ending a call 19, 21
Enter Unlock Code message 52
external device
 connecting to phone 31

F

fax call 31
5-way navigation key 1, 37
fixed dial 78

G

games 84
GPRS indicator 29, 35

H

handsfree speaker 50
headset jack 1
hold a call 67
home keys, personalising 77
home screen
 defined 33

I

incoming call
 answering 19
 diverting 71
Incoming Call message 59

indicators

 active line 36
 battery level 36
 GPRS 29, 35
 message 36
 ring style 36
 roam 35
 signal strength 34
 text case 42
 text entry mode 42
 transmission 35
 voicemail message 36, 65
international access code 61
iTAP software 45

J

Java applications 84
joystick 1

K

key
 centre select button 37
 end 1
 5-way navigation 1, 37
 left soft key 1, 34, 77
 menu 1
 power 1
 right soft key 1, 34, 77
 send 1
 voice 1

- volume control 1, 18
- keypad
 - volume, setting 77

L

- language, setting 77
- left soft key
 - functions 1, 34
 - personalising 77
- line, changing 58
- lock
 - application 83
 - phone 51
 - SIM card 83

- Low Battery** message 36

M

- making a call 19
- master clear 78
- master reset 78
- memory card 14
- menu
 - entering text 40
 - icons, changing in home screen 77
 - icons, converting to text 77
 - language, setting 77
 - personalising 77
 - rearranging features 77
 - using 37

- view, changing 77
- menu key 1
- message
 - MMS template 72
 - multimedia message 71
 - quick note 71
 - reading 72
 - text 71, 72
- message indicator 36
- micro-browser
 - animation 30
 - background sessions 31
 - browser setup 30, 84
 - Java applications 84
 - picture 30
 - ring tone 30
 - using 28, 83
 - Web sessions 30, 84
- Missed Calls** message 63
- MMS template 72
- multimedia message
 - sending 71
- my telephone number 20, 54, 70
- my tones 77

N

- network settings 81
- notepad 63
- number

- storing your number 54
- viewing your number 20, 70

numbers, entering 47

O

- 1-touch dial
 - setting preference 76
 - using 65
- optional accessory, defined 13
- optional feature, defined 13

P

passwords. *See* codes

phone

- active line indicator 36
- active line, changing 58
- alert, turning off 18, 60
- clear stored information 78
- codes 50
- connecting to external device 31
- date, setting 54
- language, setting 77
- locking 51
- network settings 81
- open to answer 19
- reset all options 78
- ring style 18, 54, 76
- security code 50
- time, setting 54

- turning on/off 17
- unlock code 50
- unlocking 18, 51

phone number

- active line indicator 36
- active line, changing 58
- attaching 2 numbers 64
- international access code 61
- redialling 58
- storing in phonebook 74
- storing your number 54
- viewing your number 20, 70

phone theme 84

phonebook

- attaching 2 numbers 64
- category for entry 75
- category ring ID 76
- category view 75
- dialling a number 74
- editing an entry 74
- 1-touch dial 65
- picture ID 22, 24, 59
- primary number, setting 76
- ringer ID 75, 76
- sorting entries 76
- speed dial number 64
- storing an entry 74
- voice dialling 74

photo

- downloading 30, 84

- managing 23
- picture ID 22, 24, 59
- screen saver 24
- sending 21
- taking 21
- wallpaper 24
- picture
 - downloading 30, 84
 - managing 23
 - screen saver 24, 56
 - viewing 84
 - wallpaper 24, 55
- picture ID 22, 24, 59
- PIN code
 - changing 50
 - entering 83
- PIN2 code, changing 50
- power key 1
- predictive text entry 45

Q

- quick dial 78

R

- received calls list 61
- recent calls 61
- redial
 - automatic redial 58
 - busy number 58
- right soft key

- functions 1, 34
 - personalising 77
- ring style indicators 36
- ring style, setting 18, 54, 76
- ring tone
 - downloading 30, 84
 - managing 85
- ring tone, creating 77
- ringer ID
 - setting 75
 - turning on/off 76
- ringer volume, setting 18, 77
- roam indicator 35

S

- screen saver 24, 56
- security code
 - changing 50
 - default 50
- send key 1
- service dial 78
- shortcuts 70, 77
- signal strength indicator 34
- silent alert, setting 18, 54, 76
- SIM Blocked** message 18, 83
- SIM card
 - defined 13
 - installing 13
 - locking 83
 - PIN code entry 18

- PIN code, changing 50
- PIN2 code, changing 50
- precautions 13
- SIM Blocked** message 18, 83
- SIM PIN code
 - changing 50
 - entering 83
- SIM PIN2 code, changing 50
- skin, changing 56
- soft keys
 - functions 34
 - illustration 1
 - personalising 77
- sound
 - downloading 30, 84
 - managing 85
- Speaker On** message 50
- speaker volume 18
- speakerphone
 - activating 80
 - automatic answer 80
- speed dial 64
- standby time, increasing 57
- symbol chart 48
- symbols, entering 47

T

- tap text entry 42
- telephone number
 - storing your number 54

- viewing your number 20, 70

text

- capitalisation, changing 42
- character chart 44
- entering 40
- entry mode, setup 41
- iTAP software predictive text
 - entry 45
- numeric mode 47
- symbol chart 48
- symbol mode 47
- tap 42

text case indicator 42

text entry mode

- setup 41

text entry mode indicator 42

theme 84

time, setting 54

timers 79

transfer a call 67

transmission indicator 35

travel charger 17

U

- UICC 13
- Universal IC Card 13
- unlock
 - application 83
 - phone 51
- unlock code

- bypassing 53
- changing 50
- default 50, 53
- entering 18

- Web pages 28, 83
- Web sessions 30, 84
- Welcome 1

V

- vibrate alert
 - setting 18, 54, 76
 - turning off 18, 60
- video clip
 - downloading 30, 72, 73
 - managing 85
 - recording 25, 27
- voice dial 74, 80
- voice key
 - dialling a number 74
 - illustration 1
- voicemail 65
- voicemail message indicator
 - 36, 65
- volume
 - earpiece 18
 - games 84
 - keypad 77
 - ringer 18, 77
 - speaker 18
- volume keys 1, 18

W

- wallpaper 24, 55

6803551C03