

 **MOTOROLA** | E816


HOLLYWOOD User Guide

 


 **amp'd mobile™**

1 | WELCOME

We are pleased that you have chosen the Motorola Hollywood E816 CDMA wireless phone.

- 1 **Left Soft Key** Performs functions defined left display prompt.
- 2 **Camera Key**
- 3 **Volume Keys** Adjust volume.
- 4 **Push-To-Talk Key**
- 5 **Send Key** Make and answer calls.
- 6 **5-Way Navigation Key** Scroll through menus and lists. Press  key to select highlighted items.
- 7 **Accessory Port**
- 8 **Menu Key**
- 9 **Right Soft Key** Performs functions defined right display prompt.
- 10 **CLR Key**
- 11 **Voice Recognition Key** Press once to activate speaker independent voice recognition. Press and hold to record voice records.
- 12 **Power/End Key** Turn phone off and one and end phone calls.

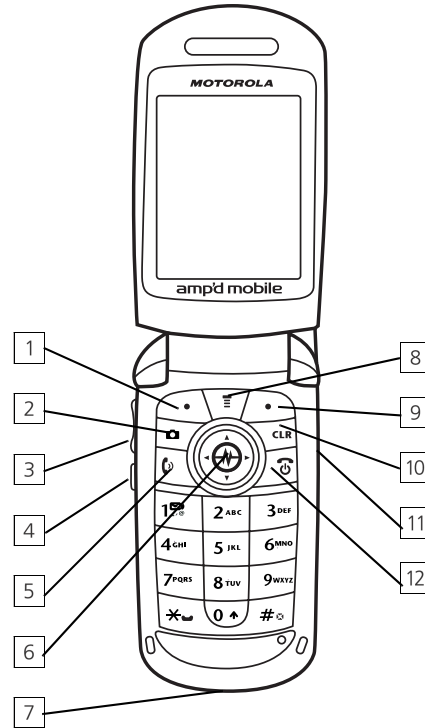

Motorola, Inc.

Consumer Advocacy Office

1307 East Algonquin Road

Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2006.

CAUTION: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809500A83-O



CONTENTS

1 WELCOME	1	Setting a Wallpaper Image	37
2 GETTING STARTED	5	Setting a Screen Saver Image	38
About This Guide	5	Setting Display Contrast	38
Battery Tips	5	Setting Display Brightness	38
Installing the Battery	6	Adjusting the Backlight	38
Charging the Battery	6	Conserving Battery Power	38
Turning Your Phone On	7	6 CALLING FEATURES	39
Making a Call	7	Changing the Active Line	39
Answering a Call	7	Redialing a Number	39
Adjusting Volume	7	Using Automatic Redial	39
Changing the Call Alert	7	Turning Off a Call Alert	39
Viewing Your Phone Number	7	Calling an Emergency Number	39
Installing and Removing the Memory Card	8	Viewing Recent Calls	39
3 HIGHLIGHT FEATURES	9	Returning an Unanswered Call	40
Check It Out!	9	Using the Notepad	40
Taking and Sending a Photo	19	Attaching a Number	40
Recording and Playing Video Clips	21	Calling with Speed Dial	40
Sending a Multimedia Message	24	Calling with 1-Touch Dial	41
Receiving a Multimedia Message	25	Using Voicemail	41
Bluetooth® Connections	25	Muting a Call	41
4 LEARNING TO USE YOUR PHONE	26	Using DTMF Tones	41
Using the Display	26	7 PUSH-TO-TALK (PTT) CALLS	42
Using the 5-Way Navigation Key	27	PTT Basics	42
Using Menus	27	PTT Call Types	42
Entering Text	29	Making a Private PTT Call	43
Using the External Display	34	Making a Group PTT Call	43
Using a Removable Memory Card	34	Sending a Call Me Alert	43
Using the Handsfree Speaker	35	Receiving a PTT Call	43
Turning On Airplane Mode	35	Receiving a Call Me Alert	44
Changing a Code, PIN, or Password	35	Adding a PTT Contact	44
Locking and Unlocking Your Phone	36	Erasing a PTT Contact	44
If You Forget a Code or Password	36	Check Contact Availability	44
5 SETTING UP YOUR PHONE	37	Setting Your Availability	45
Storing Your Name and Phone Number	37	Saving, Editing, and Erasing PTT Groups	46
Setting an Alert Style	37	Creating a PTT Group	46
Setting Answer Options	37	Managing Multiple Calls	48
		Erasing PTT Call History	48

8 PHONE FEATURES	49
Menu Map	49
Calling Features	50
Messaging	50
Contacts	51
Personalizing Features	54
Menu Features	57
Dialing Features	58
Call Monitoring	58
Handsfree Features	59
Data and Fax Calls	59
Bluetooth® Wireless Connections.	60
Network Features	61
Personal Organizer Features	61
Security	63
News and Entertainment	63
9 SERVICE AND REPAIRS	64
10 SPECIFIC ABSORBTION RATE	
DATA	65
INDEX	66

2 | GETTING STARTED

CAUTION: Before using the phone for the first time, read the important safety and legal information in the separate legal information included in the box.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Optional Features

This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories

This label identifies a feature that requires an optional Motorola Original™ accessory.

Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and battery chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.

- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, please read the battery safety information in the *Safety and General Information* section included in the separate legal guide included in the box.

 


Installing the Battery


Your phone is designed to use only Motorola Original batteries and accessories.

Note: The battery door unsnaps more easily if you push it to the left as you remove it.


1. *Step one: Release latch and remove back door.*

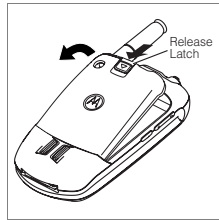

 2. *Step two: Follow arrows to insert battery.*

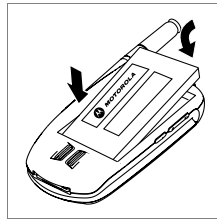

 3. *Step three: Replace the back door.*

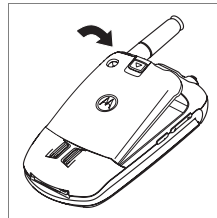


Note: The battery door unsnaps more easily if you push it to the left as you remove it.

Charging the Battery


New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

To charge the battery:

 1. *Plug the charger into the bottom of your phone with the release tab facing up.*

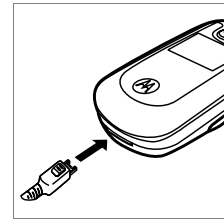

 2. *Plug the other end of the charger into the appropriate electrical outlet.*

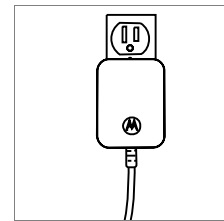


3. *When your phone's interior display shows **Charge Complete**, remove the charger.*

Tip: You can safely leave the charger connected to your phone after charging is complete. This will not damage the battery.

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least 1 segment of the battery level indicator must be visible to ensure full phone functionality while charging.

Turning Your Phone On

 1. Open your phone.
2. Press and hold the power key for 3 seconds.
3. If necessary, enter your 4-digit unlock code (the last 4 digits of your phone number) and press the right soft key to unlock the phone

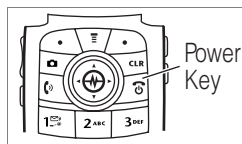

Making a Call

1. Press keypad keys to dial the phone number.
2. Press **[CALL]** to make the call.
3. Press **[END]** to end the call and “hang up” the phone when you are finished.

-or-

4. Close the flip.

Tip: You can set the phone to answer calls when you open the flip.

To activate, press **[MENU]** > **Settings** > **In-Call Setup** > **Answer Options** > **Open To Answer**.

Tip: You can set the phone to answer calls when you open the flip. To activate, press **[MENU]** > **Settings** > **In-Call Setup** > **Answer Options** > **Open To Answer**.

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

- Press the right soft key to answer a call.

-or-

- Press **[CALL]**.

- Press **[END]** to end the call and “hang up” the phone when you are finished.

-or-

 
- Close the flip.

Adjusting Volume

Press up or down on volume keys to:


- increase or decrease earpiece volume during an active call
- temporarily silence an incoming call alert
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

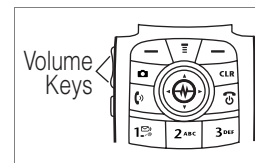

Changing the Call Alert

 In the home screen, press the down volume key to switch to lower call alert volume, then switch to vibrate and, finally, silent alert. Press the up volume key to cycle back from silent alert to vibrate and then to the lowest volume alert volume setting.

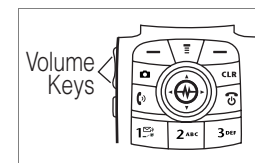

Viewing Your Phone Number

To view your phone number from the home screen, press **[MENU]** **[*06]**.

While you are on a call, press **[MENU]** > **My Tel. Numbers**.

Installing and Removing the Memory Card

You can install a removable memory card in your phone. This card provides additional storage for pictures, animations, sounds, and video clips.

 
CAUTION: Do not bend or scratch your memory card. Avoid exposing your memory card to static electricity, water, or dirt.

Installing the Memory Card


CAUTION: When you are not actively inserting or removing a memory card, keep the cover closed on the card slot to prevent damage.

With your phone powered off:

1. *Lift the cover at the top of your phone to expose the memory card slot.*

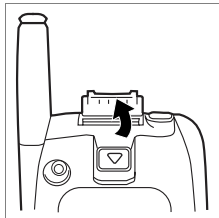

 2. *With the pins on the card facing inward, toward the front of the phone, insert the card as shown. Push down until it clicks into place.*

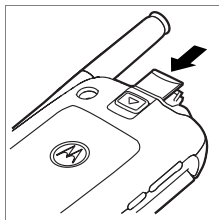


Removing the Memory Card

CAUTION: Do not remove the memory card while reading or writing files. Otherwise, it could be damaged.


CAUTION: When you are not actively inserting or removing a memory card, keep the cover closed on the card slot to prevent damage.

With your phone powered off:

 
1. *Lift the cover at the top of your phone to expose the memory card slot.*

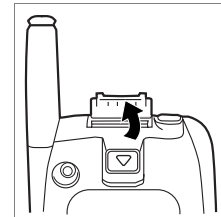

 2. *Press the memory card down. When you release it, it pops up.*

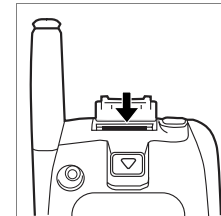

 
3. *Remove the card and close the cover.*

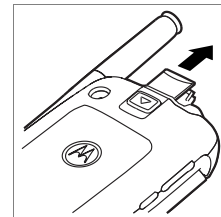

3 | HIGHLIGHT FEATURES

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.

 Check It Out!

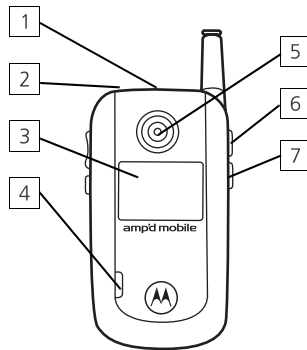


- 1 **Memory Card Slot**
- 2 **Stereo Headset Jack**
- 3 **External Display**
- 4 **Camera Light** User activated shines when taking photos.
- 5 **Camera Lens** Take photos and videoclips.
- 6 **Camera Key**
- 7 **Voice Recognition Key**

Amp'd Live™

Amp'd Live™ is a whole new world of mobile entertainment. In addition to hot phone features like messaging, photo and video camera, and Push To Talk, you can now:

- watch your favorite videos and TV clips
- play your favorite 3D multiplayer games
- download your favorite music, the hottest ringtones, wallpapers, and more

How to Start

Ready to get started? Just press the blue Amp'd Live™ button  on your phone.

What Can You Do?

The Amp'd Live™ menu is set up by topic, so finding the things you like couldn't be easier.

Live Events

Amp'd Live™ brings you live coverage in full of the Amp'd Mobile™ AMA Supercross, Ultimate Fighting Championship, as well as other premiere events. Stream all the action right to your phone.

Phone Stuff

You can do so much more than just change ringtones to make your phone reflect your own personality.

- **Ringtones**—Choose from tons of choices in our huge music library.
- **Wallpaper**—Change the background image on your phone. Choose from massive selection that includes your favorite artists, and more.



- **Screensavers**—Your phone doesn't have to look boring when it goes idle. Keep it animated with an Amp'd Mobile screensaver.
- **Featured Bundles**—Get all of the above in a single convenient package. Bundles have themes, like your favorite football team or entertainer.

Music and Videos

With an Amp'd Mobile™ phone and Amp'd Live™, you have both the music player *and* a music store right in the palm of your hand. Browse the store, then buy and play your favorite downloads anywhere. And, with Amp'd Live, you can check out music videos, news, live broadcasts, and even never-before-seen exclusives.

- **Music, Video, Ringtones**—From old-school classics to today's Top 10 charts, tons of songs, videos, and ringtones are ready to be downloaded, anytime, anywhere.
- **Finding Music**—Search for a song or music video by artist, title, or genre.
- **Performances**—Watch the hottest performances from the best in music television.
- **Live Events**—See what your favorite band does backstage or what the hottest artists are up to in the studio. Check you exclusive behind-the-scenes sneak peeks and concerts—streamed live to your phone.

Sports

Sports fans rejoice! Checking the final score is a snap with an Amp'd Mobile™ phone. Get your sports news from the most reliable sources. Keep up on all your favorites, including football, baseball, basketball, hockey, fighting, and auto racing and don't forget to check out the sports high rollers room.

- **ESPN**—Catch highlights, analysis, breaking news, and more. Get ESPN anytime, anywhere.
- **FOX Sports**—Get news from around the leagues, scores, schedules, standings, and betting odds. *FOX Sports Mobile* is your sports lifeline.
- **Pro Leagues**—Stay on top of your favorite teams with our MLB, NBA, NHL, and NFL channels.
- **Fights**—Watch your favorite brawlers battle it out Live in the *Ultimate Fighting Championship*.
- **Racing**—Keep the adrenaline pumping with Import Tuner, Supercross, Speed and more.
- **Action Sports**—View Wave Watch (Surf Cams), FUEL TV, and mobile versions of *Snowboarding*, *Surfer*, *Surfing*, *Skateboarder*, *Bike*, and *Powder* magazines.
- **Fantasy & Gaming**—Fantasy sports go mobile. Check out player profiles, news, injury reports, LIVE stats, and more—anytime, anywhere.
- **Danny Sheridan Odds**—Get the spread on your favorite games and mock-ups from acclaimed sports analyst and *USA Today* laminator Danny Sheridan.



Entertainment

Turn your phone into your own portable media center! On Amp'd Live™, you'll find videos, the best of network and cable TV, cool Web sites, your favorite entertainment rags, comics, and even live broadcasts. Check out the channels you now have at your fingertips:

- **Viral Videos**—Feed your appetite for humor with Break.com, College Humor, and more.
- **Movies**—Check out the latest movie trailers and film reviews at RottenTomatoes.com.
- **TV**—Get all your favorite TV shows right on your phone. You'll find popular shows from ABC, E!, NBC, Cartoon Network's *Adult Swim*, the WB, MTV, VH1, CMT, Comedy Central, SPIKE TV, LOGO, and more.
- **Internet**—This is your direct connection to the internet. Access AOL, MSN, Yahoo!, The Smoking Gun, eBay Mobile, Impacters, and all your favorite Web portals.
- **Entertainment News**—With access to *MTV News*, *E! News Daily*, *Extra*, *The Daily Show with John Stewart*, *The Onion*, and more, you'll stay up to date on the latest celebrity news, gossip, and satire.
- **Stand Up**—Need a laugh? You'll find *Comedy Time*, *America's Best Mobile Fix*, and *Just For Laughs*.
- **Animation**—Enter the whacky worlds of Scooby Doo, Hanna-Barbera, DC Comics, Looney Tunes and more. Remember, you're never too old to watch cartoons.
- **The Vault**—Find all of your favorite uncensored adult brands in our password-protected Vault.

Games


Down time is now gaming time. From 3D action and sports games to arcade classics and mind-boggling puzzles, you'll find dozens of ways to entertain yourself.

- **Games Connect**—Meet, interact, and compete with other online gaming subscribers worldwide.
- **Action**—Get *Prince of Persia*, *Tom Clancy's Splinter Cell*, *Rainbow Six*, *Brothers in Arms*, *King Kong*, *Independence Day*, and many more—all in 3D.
- **Sports**—When you're not playing Amp'd Mobile™ exclusives like *Snowboarding Travis Rice 3D* and *Asphalt: Urban GT 3D*, you can download *3D Need for Speed: Most Wanted*, *Tony Hawk Underground 3D*, or *3D Madden 2006*, to name just a few.
- **Arcade**—Go old-school with classics like *Snood 2*, *Pitfall: Glacier and Jungle*, *Joust 2*, and *Defender 2*.
- **Strategy**—Strain your brain with *Donald Trump's Real Estate Tycoon*, *3D Pool*, *Backgammon*, *Ethel*, *Chess*, *Cribbage*, *Reverse*, and *Mahjong*.
- **Puzzles**—Play *TV Guide Crosswords*, *Trivia*, *Word Search*, *Cryptogram*, *HangMan*, *Microliters*, and more.
- **Lifestyle**—Enjoy *3D Pet Care (Tam a got chi)*, *Busting Bar Trivia*, *Stack-Sum*, *Diva Dee Dancing*, *Mahjong Puzzle*, *Breakout Bears*, *Message in a Garden*, and *Bubble Ducky*.
- **Casino**—Coming soon... *Blackjack*, *Poker*, *Roulette*, *Video Poker*, *Video Slots*, *Hill*, *Virtual Resurfacing*, *Keno*, and *Bingo*.



News & Lifestyle

Use Amp'd Live™ to keep up to date with daily news, weather, traffic, and more—everything you need to stay in the know.

- **News & Info**—Get the latest breaking headlines from trusted sources like NBC News and *The New York Times*.
 - **Find It**—Need directions? Impacters will get you there. If you're looking for weather and traffic information, there are Accu-Weather and Rand McNally. And for restaurant and movie information, check out *Vindigo City Guide* and *Movie Goer*.
 - **Dating**—Get your heart pounding with *HurryDate*.
 - **Health & Fitness**—Keep in shape with exercise routines and healthy recipes from *Wireless Workouts* and Food Network.
1. Press the Amp'd Live™ button  to enter Amp'd Live™.
 2. Select an item from the menu. Depending on the item, there may be multiple levels of choices.
- **Culture**—Exclusive videos from *FHM*, *Motet*, and *VIBE*, as well as top content from other leading magazines.


How to Find Stuff

You have two ways to find stuff in Amp'd Live™:

- browse by category
- search for a specific item


Browsing

As you explore the Amp'd Live™ universe, you'll notice that it's pretty easy to get around. Here's how it works:

1. Press the Amp'd Live™ button  to enter Amp'd Live™.
2. Select an item from the **Menu**. Depending on the item, there may be multiple levels of choices.

Searching

If you know exactly what you want to find, use **Search**:

1. Press the Amp'd Live™ button  to enter Amp'd Live™.
2. Press **Menu**, then select **Search**.
3. Select the type of item you want to find (for example, wallpaper or Music).
4. If you see a **Select Category** box, choose the category where you would expect to find the item you want.
5. Enter a description of the item.
6. Press **Search**.

If you don't find what you want the first time, don't give up. Try again, using a different item description or category.

Tip: To find items that are similar to other items, go to **MyStuff**, select the item that is like what you want to find, press **Menu**, then select **Get More**.

Decode the Ratings

Whether you're looking for adult content or something less racy, all Amp'd Live™ items have a rating decal to help you choose correctly.

Rating	Description
AA	All Audiences —Grandma won't be offended.
GC	General Content —May contain mild language, violence, comic mischief, and/or suggestive themes.
MC	Mature Content —May contain strong language, depictions of violence, sex, and/or substance abuse.
AO	18+ Adult Only —May contain uncensored depictions of violence, nudity, or sex.
Parental Advisory — Explicit Content	Recordings identified with this warning contain strong language or depictions of violence, sex, or substance abuse. Parental discretion is advised.


Enter Adult Areas

If you're over 18 and your age was verified when you activated your phone, you should have received a PIN that will give you access to the adult Vault in our Internet, Entertainment, and Games areas. If you didn't receive a PIN and you want to access the Vault, contact Amp'd Mobile™ Customer Care at 1-866-811-0091, or by dialing 611 from your Amp'd Mobile™ phone.

Making Purchases

Try Before You Buy

The Amp'd Mobile™ **Preview** feature lets you sample any of our items before you buy. Here is how it works:

1. Press the Amp'd Live™ button  to enter Amp'd Live™.
2. Find an item you want to try.
3. Select **Previewed** to check out the item. If you pick a bundle, you can preview each item in the bundle.
4. If you want to purchase the item, select **Buy**.
-or-
If you don't want to purchase the item, or if you want to check out some other choices before you decide, press **Back** and continue looking.

Buy Stuff



Amp'd Live™ offers a variety of ways for you to load up on entertainment. Mix and match to create your own blend of permanent and temporary ownership.

- **Own It (Download)** puts a copy of the item on your phone so you can view or play it whenever you want, forever. Copy protection laws still apply, so you may not be able to share the item with your friends.
- **Buy Access (Subscription)** gives you unlimited access to the item during your subscription period. Subscriptions are billed monthly and are great for sampling a variety of items. Just remember that the subscription items change all the time (like an e-fine or a premium TV channel), so you find something you *must* have, you should buy that item and download it permanently.
- **On Demand (Streaming)** plays the entire item on your phone, but only one time. It's just like pay-per-view from your cable or satellite TV service.

Note: If a download is interrupted, you can finish it later by pressing **Menu**, selecting **My Account**, then selecting **Pending Download**.

Enjoy Your Stuff

After you download or subscribe to items, go to **MyStuff** to play your music, videos, and games, and to run your applications.

1. Press the **Amp'd Live™** button  to enter **Amp'd Live™**.
2. Press  left to open **MyStuff**.

Enjoy Your Music

After you download a song or start a music subscription, use the Media Player to play your music.

You can select any of the following methods to play your music:

Option	Description
Shuffle	Play all songs on your phone in random sequence.
Artist	Display an alphabetical list of artists whose songs are on your phone. You can select the artist you want to hear. After you select the artist, you can play all songs by that artist, a specific album, or a single song.
Album	Display an alphabetical list of the albums on your phone. Just select the album you want to hear. You can then play all songs on the album or a specific song.
Song	Display an alphabetical list of all songs on your phone. Select the songs you want to play.
Genre	Display a list of music genres for the songs on your phone. Select a genre, then play all songs in that genres or only a specific song.
Playlist	Display all playlists on your phone. Select a playlist, then play all songs on that playlist or only a specific song.

Search for a Song

If you're looking for a specific song, you can use **Search** to find it instead of browsing through the music menu categories.

Pick Songs

1. Go to **MyStuff**.
2. Select **Music**.
3. Select the method you want to use to play your songs (see the table below).










1. Go to **MyStuff**.
2. Select **Music**.
3. Select **Menu**, then **Search Catalog**.

4. Select **Music** from the list of items you can find.
5. To search for a song title, select **Song**.
-or-
To search for songs by a specific performer, select **Artist**.
6. Enter a description of the song or artist you want to find.
7. Select **Search**.

If you don't find it the first time, don't give up. Try again with a different description, or look in a different category.

Using the Media Player

After you select the songs you want to play, use the Media Player to control playback.

Option	Description
Play/Pause	Press  to play a song. While a song is playing, press  to pause it. Press  again to continue playing it.
Stop	Press  up to turn off the song. The next time you play the song, it will start at the beginning.
Next	Press  right to skip ahead to the next song.
Restart	Press  left to restart a song from the beginning.
Previous	Press  left <i>twice</i> to skip back to the previous song.
Fast Forward	Press and hold  right to fast-forward the song.
Rewind	Press and hold  left to scroll backwards in the song.
Volume	Press your phone's volume keys (on the left side of the phone) up and down to adjust volume levels.

Note: When your phone is streaming a song, the **Play/Pause**, **Stop**, and **Volume** controls are available.



Organize Your Music

MyStuff includes a built-in playlist called **MyList**. You can change **MyList** by adding, deleting, or moving songs on your phone. You can create and manage additional playlists on your computer and then copy them to your phone.

To add a song to **MyList**:

1. Go to **MyStuff**.
2. Select **Music**.
3. Find the song you want to add.
4. Select **Menu**.
5. Select **Add2MyList**.


To delete or move a song in **MyList**:

1. Go to **MyStuff**.
2. Select **Music**.
3. Select **Playlist**.
4. Select **MyList**.
5. Select **Menu**.
6. Select the appropriate command to make your changes.
Move Up moves the current song up one slot in **MyList**.
Move Down moves the current song down one slot in **MyList**.
Delete removes the current song from **MyList**.

Play Videos


Use the Media Player to play both your subscription and downloaded videos.

1. Go to **MyStuff**.
2. Select **Video**.

3. Select the category where you expect to find the video you want to play.
4. Select the title or subscription you want to play.
5. Press the Amp'd button  to play the video.
Use the Media Player to control video playback.


Play Games

When you're ready to play a downloaded or subscription game, you'll find it in **MyStuff**.

1. Go to **MyStuff**.
2. Select **Games and Applications**.
3. Select the category where you expect to find the game you want to play.
4. Select the title or subscription you want to play.
5. Press the Amp'd button  to start the game.

Run Applications


To run an application you have installed, downloaded, or subscribed to:

1. Go to **MyStuff**.
2. Select **Games and Applications**.
3. Select the category where you expect to find the application you want to run.
4. Select the title or subscription you want to run.
5. Press the Amp'd button  to run the application.



Change PhoneStuff

PhoneStuff is where you personalize your phone by setting its ringtone, wallpaper, and screen saver:

1. Go to **MyStuff**.
2. Select **PhoneStuff**.
3. Select the type of item you want to change.
4. Select the item you want to use.
5. Press the Amp'd button  to preview the item.
*Tip: To stop a preview before it completes, press **OK/***


Back.

-or-

Press **Assign** to use the selected item.


Access Your Subscriptions

To view or play something to which you've subscribed:

1. Go to **MyStuff**.
2. Select **Subscription**.
3. Select the subscription you want to view or play.
4. Select the item you want to use.
5. Press the Amp'd button  to launch the selected item.

Cancel a Subscription

You can cancel a subscription directly from your phone or by going to www.ampd.com. To cancel from your phone:

1. Go to **MyStuff**.
2. Select **Subscription**.
3. Select the subscription you want to cancel.
4. Select **Menu**.
5. Select **Unsubscribe**.
6. Press  to confirm the cancellation.

See Details for an Item.

1. Go to **MyStuff**.
2. Select the item for which you want to see details.
3. Select **Menu**.
4. Select **Properties**.

MyStuff Menu Commands Quick Reference

Command	Action
Add2MyList	Add the selected item to MyList .
Unsubscribe	Cancel the subscription for the selected item.
Delete	Delete the selected item from MyList or your phone (depending on the item selected).
Get More	Find other items similar to the selected item.
Shuffle	Play songs on current playlist in random order.
Properties	Show details for the selected item such as title, artist, album, genre, rating, and price.
Search Catalog	Search for music by artist or title, or search for videos by category and title.
Home	Go to the MyStuff main menu.
Help	Display helpful hints and explanations for the current screen.
Now Playing	Go to Media Player when music is playing in background.


Need Help for Amp'd Live™?

Commonly Asked Questions

How can I quickly return to the Amp'd Live™ or MyStuff main menu?

1. Select **Menu**.
2. Select **Home**.

How do I complete a download that was interrupted?

1. Press the Amp'd Live™ button  to enter Amp'd Live™.
2. Select **Menu**.
3. Select **My Account**.

4. Select **Pending Download**.

Why can't I get into the Vault?

If you're over 18 and your age was verified when you activated your phone, you should have received a PIN that will give you access to the adult Vault in our Internet, Entertainment, and Games areas. If you didn't receive a PIN and you want to access the adult Vault, contact Amp'd Mobile™ Customer Care at 1-866-811-0091, or by dialing 611 from your Amp'd Mobile™ phone.

I selected On Demand/Streaming. Why can't I restart or replay the item?

You can view or play On Demand/Streaming items only once.

It's like a pay-per-view movie from your cable or satellite TV service. If you want to use an item more than one, select the **Download** option instead.

How do I edit playlists?

You can edit only the built-in **MyList** playlist from your phone. Edit your other playlists using your computer, then place an updated copy on your phone.

Where can I view details about an item?

1. Go to **MyStuff**.
2. Select the item for which you want to see details.
3. Select **Menu**.
4. Select **Details**

How do I cancel a subscription?

1. Go to **MyStuff**.
2. Select **Subscription**.
3. Select the subscription you want to cancel.
4. Select **Menu**.
5. Select **Unsubscribe**.
6. Press **⏹** to confirm the cancellation.


Get Help Online

To get help online, go to www.ampd.com and select **Customer Care** at the bottom of the page.


Customer Care

To reach an Amp'd Mobile™ Customer Care representative, call 1-866-811-0091, or dial 611 from your Amp'd Mobil™ phone. Otherwise, go to www.ampd.com.

Taking and Sending a Photo

From the home screen, press the camera key  to activate your phone's camera.


The active viewfinder image appears on your phone's display.

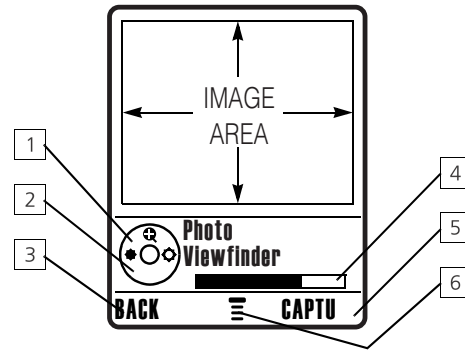 

- 1 Press **⏪** up or down to zoom in or out on image.
- 2 Press **⏩** left or right to decrease or increase the image brightness.
- 3 Return to previous screen.
- 4 Photo storage memory space currently in use.
- 5 Take a photo.
- 6 Access Pictures Menu.

Point the camera lens at the photo subject, then:


1. Press the camera key to take a photo.
-or-
Press **Capture** key
-or-
Press **⏹**.
2. Press **Store** key to view storage options.
If you choose to store the photo, continue to step 3.
-or-
Press **Erase** key to delete the photo and return to the active viewfinder.


3. Press  to scroll to **Send in Message, Store only, Apply as Wallpaper, Apply as Screen Saver, or Apply as Contacts Entry**

*Note: For photos that you intend to use as wallpaper, we recommend that you go to **Pictures Setup** and set **Resolution** to **Low** (see page 20).*


4. Press **Select** key to perform the storage option of your choice.

Pictures Menu Options


When the camera is active, press  to open the **Picture Menu**. The menu can include the following options:


Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Switch Storage Device	Save the photo on optional memory card (TRANS-T-Flash), if installed, or on phone memory (Phone).
Auto-Timed Capture	Set a timer for the camera to take a photo.
Flash On	Set a camera light for photos taken in settings with low light.
Adjust Contrast	Increase or decrease contrast.
Image Style	Press  right and left to select Color, Black & White, Antique, or Negative .
Capture Title	Assign a name to a captured photo.
Pictures Setup	Open the setup menu to adjust picture settings (Lighting Conditions, Resolution, Shutter Tone).
View Free Space	See how much memory remains for storing photos.

Taking a Self Portrait


1. Press , then close the flip.
-or-
With the flip closed, press and hold the camera key on the side of the phone.
2. Hold the camera with the lens aimed at yourself. Use the external display as a viewfinder.
3. Press the camera key on the side of the phone to capture the photo.

 Recording and Playing Video Clips

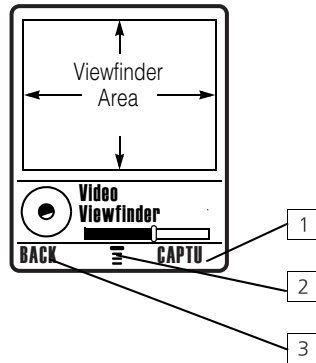

- 1 Begin recording video.
- 2 Press  open **Videos Menu**.
- 3 Return to previous screen.
- 4 Select **New Video**.


To access the video option:

1. Press  **Menu**.
2. Select **Media Gallery**.
3. Select **Videos**.

The **Videos Menu** can include the following options:


Recording a Video

Press  > **Media Gallery** > **Video Camera**

1. Aim the phone at the scene you want to record.
2. Press the **Capture** key to begin recording.
- or-
- Press  to open the **Videos Menu** to select other options as described in the table below.
3. Press the **Stop** key to stop recording.
4. Press the **Store** key to save the captured video clip as a file or message attachment.

Option	Description
Go To Videos	View video clips stored on the phone.
Switch Storage Device	Save the video clip on memory card (TRANS-T-Flash), if installed, or on phone memory (Phone).
Video Setup	Adjust settings for: Auto Repeat, Timer, Video Length, Lighting Conditions, Recording Sound, Status Icons
View Free Space	View how much memory remains for storing multimedia objects.

 Playing Video Clips

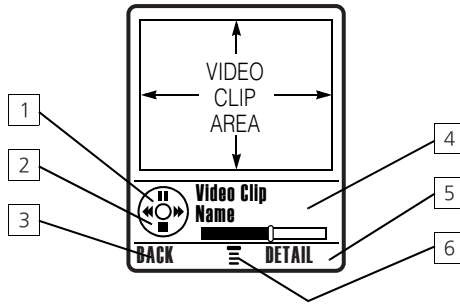

- 1 Press up or down to pause or play the video clip.
- 2 Press left or right to rewind or fast forward through the video clip.
- 3 Return to previous screen.
- 4 Timer indicates minutes and seconds played.
- 5 View video clip information.
- 6 Press to open **Videos Menu**.

You can send and receive video clips in multimedia messages.

Press > **Media Gallery** > **Videos**

To play a video clip stored on your phone:

1. Press to scroll to the video clip.
2. Press **Play** key to start video clip playback.
3. Press to control the video (move up or down).

-or-

Press **Details** key to view video information.

-or-

Press to open the **Videos Menu** to select other options as described in the table below.

Note: When you view a video clip in a multimedia message that does not contain text, pressing right may display a blank screen or restart the video clip.

The **Videos Menu** can include the following options:

Option	Description
Send in Message	Send the clip in a multimedia message.
Switch Storage Device	Save the video clip on optional memory card (TRANS-T-Flash), if installed, or on phone memory (Phone).
New	Capture a new video clip.
Details	View information about the highlighted video clip.
Rename	Assign a different name to the video clip.
Delete	Delete the highlighted video clip.
Move	Move highlighted video.
Copy	Copy highlighted video.
Mark	Mark 1 or more video clips that you want to move, copy, or delete.
Mark All	Mark all video clips to be moved, copied, or deleted.
Categories	Create a new category, or view video clips in a selected category.
Assign to Category	Assign a video clip to a defined category.
Videos Setup	Adjust settings for: Auto Repeat, Timer, Video Length, Lighting Conditions, Recording Sound, Status Icons
View Free Space	View how much memory remains for storing multimedia objects.




Sending a Multimedia Message

A *Multimedia Messaging Service* (MMS) message contains one or more slides with text and media objects (including photos, pictures, animations, sounds, voice memos, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

Press **☰** > **Messaging** > **Create Message** > **New PIX Message**

1. Press keypad keys, then **⊕** key to enter recipient's phone number or email address.
or
Press **Contacts** key, **⊙**, then **Add** key and **Done** key to open **Contacts**, then scroll to and select 1 or more existing **Contacts** entries.
2. Press keypad keys to enter slide text.
3. Press **☰** to open the **PIX Menu**.
4. Press **⊙** to select **Insert**.
5. Press **Select** key to display a list of items you can insert.
6. Press **⊙** to scroll to a type of object to insert.
7. Press **Select** key to select the object type.
8. Press **⊙** highlight the object you want.
9. Press **Select** key to insert the object.
To add another slide to the message, continue.
To send the message, go to step 19.
10. Press **☰** to open the **PIX Menu** to insert a new slide.
11. Press **Select** key to display a list of items you can insert.
12. Press **⊙** to scroll to **Insert New Page**.
13. Press **Select** key to insert a new slide after the current slide.
Repeat steps 2 through 9 to enter contents for the new slide.
14. Press **⊕** key to store the message.
15. Press **⊙** to scroll to **Subject**.
16. Press **Change** key to select **Subject**.
17. Press keypad keys to enter the subject.
-or-
Press **Quick Text** key, then **⊙** and **Select** key to open the Quick Text list, then scroll to and select a Quick Text as a subject.
18. Press **⊕** to store the subject.
19. Press **SEND** key to send the message.
-or-
Press **☰** to send the message later, view message details, save the message in the drafts folder, or cancel the message.

Receiving a Multimedia Message

When you receive a multimedia message or letter, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press **READ** key to open the message.

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file, or video clip begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

Note: In a multimedia letter, you may have to highlight an indicator in the text to play a sound file or video clip.

- Attached files are added to the end of the message. To open the attachment, highlight the file indicator/ filename and press the **View** key (image file type), **Play** key (sound file or video clip), or **Open** key (object such as **Contacts** or datebook entry, or unknown file type).

Note: File names for stored multimedia objects can not exceed 36 characters.

Bluetooth® Connections

Your phone supports Bluetooth® connections. You can connect your phone to a Bluetooth® headset or car kit, or connect to another device to exchange and synchronize files.

Your phone currently supports the following Bluetooth profiles:

- headset (optional Motorola Original™ accessory)
- Handsfree Car Kit (optional Motorola Original accessory)

For more information about Bluetooth® wireless connections supported by this device, go to FAQs www.motorola.com/bluetooth.

Note: The phone does not support Bluetooth (OBEX) profiles or dial-up networking.

Note: All multimedia (video player, audio player, shutter tones) will play from the speakerphone when your phone is connected to another Bluetooth device.

Turn Bluetooth® Power On or Off

Press  > **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**

Note: To extend battery life, use the above procedure and set Bluetooth® power to **Off** when not in use. If you turn Bluetooth® power **Off**, your phone will not connect to accessories until you turn Bluetooth® power **On** and reconnect to the accessories.

Pairing with a Headset, Handsfree Device, or PC

Before you try to connect to another Bluetooth device, make sure your phone's Bluetooth® power is **On** and the device is in *pairing mode* (see the user guide for the device). You cannot perform pairing while your phone is connected to another device.

To pair your phone to a headset accessory, handsfree car kit, or PC that supports Bluetooth® wireless connections:

Press  > **Settings** > **Connection** > **Bluetooth Link** > **Handsfree** > **[Look For Devices]**




4 | LEARNING TO USE YOUR PHONE

See page 1 for a basic phone diagram.



Using the Display

 The *home screen* displays when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number.

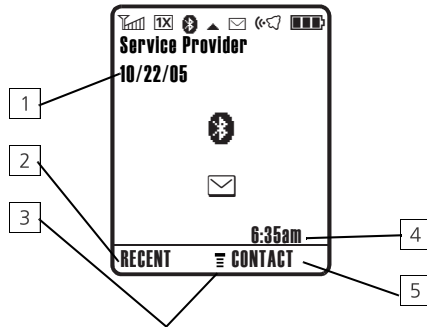


- 1 **Date**
- 2 **Left Soft Key Label**
- 3 **Menu Indicator**
- 4 **Clock**
- 5 **Right Soft Key Label**

Note: Because you can customize the soft key settings, your home screen soft key labels may be different than the ones shown above.

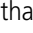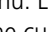
The  (menu) indicator indicates that you can press the menu key () to enter the main menu. Labels at the bottom corners of the display show the current soft key functions. Press the left or right soft key to perform the function indicated by the left or right soft key label.

 
Your phone can display an analog or digital clock in the home screen.

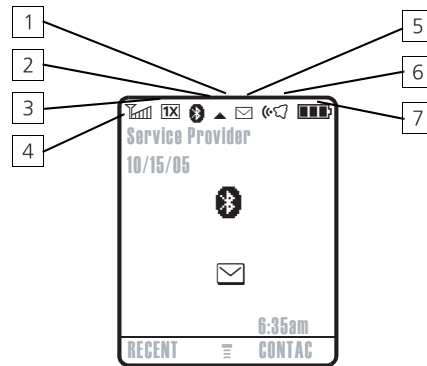

The following status indicators can display:



- 1 **Roam Indicator** Shows when your phone is seeking or using another network outside your home network.
- 2 **Bluetooth® Indicator** Indicates an active Bluetooth connection.
- 3 **Data Coverage Indicator** Shows the type of data signal your phone is using:

 = shows when your phone is in a 1x-RTT coverage area, access to files under 200K

 = shows when your phone is in a 1x-EVDO coverage area. Broadband speeds full access to Amp'd Live™

- 4 **Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator displays.



- 5 **Message Indicator** Displays when you receive a new message. Indicators can include:

✉ = text message	✉ = voicemail message
✉ = voicemail and text message	



When you enter a text or picture message using the messaging feature, a number in the message entry area shows the number of characters remaining on the current page (text message) or the message size (multimedia message or letter).

- 6 **Ring Alert Indicator** Shows alert style setting:


🔊 = loud ring	🔊 = soft ring
🔊 = vibrate	🔊 = vibrate and ring
🔊 = silent	

 
- 7 **Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and you hear an audible battery alert.


Using the 5-Way Navigation Key

Use the 5-way navigation key  to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press  to select a highlighted menu item.

Using Menus

From the home screen, press  to enter the main menu.

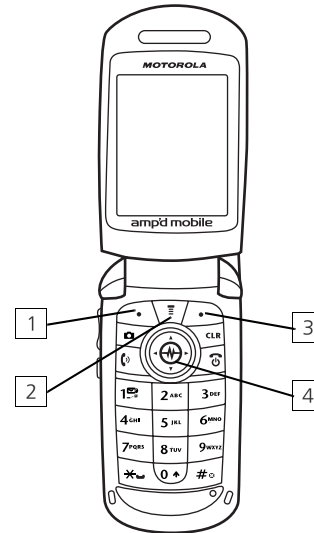

- 1 **Left Soft Key** Perform functions identified by left display prompt.
- 2 **Menu Key**
- 3 **Right Soft Key** Perform functions identified by right display prompt.
- 4 **5-Way Navigation Key** Scroll through menus & lists, set feature values. Press  key in the center to select highlighted items.

Press **○** to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Amp'd Live™		Amp'd PTT
	Contacts		Recent Calls*
	Message Center*		Media Gallery
	Settings		Tools
	Phone Info		

Note: Features marked with * are optional network/subscription dependent features.

Note: This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

Selecting a Menu Feature

 
To select a menu feature, starting from the home screen:

Press **▽** > **Recent Calls** > **Dialed**.

This example shows that from the home screen, you must press **▽**, scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed**. Press **○** to scroll, and the left/right soft keys to select the functions displayed in the bottom left and right corners of the display.

Selecting a Feature Option

Some features require you to select an option from a list:

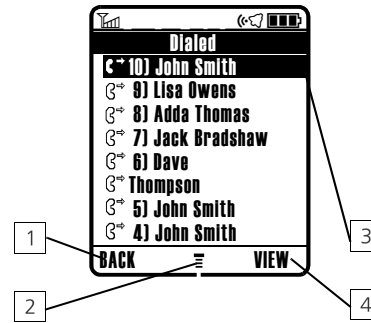

- 1 Press **Back** to return to the previous screen.
- 2 Press **▽** to open the sub-menu.
- 3 Highlighted option.
- 4 Press **View** to view details of highlighted option.

Press **○** to scroll up or down to highlight the option you want.

In a numbered list, press a number key to highlight the option.

 
In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.


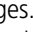

When an option has a list of possible values, press **○** left or right to scroll through and select a value.

When an option has a list of possible numeric values, press a number key to set the value.

 
Entering Text



Some features require you to enter information.

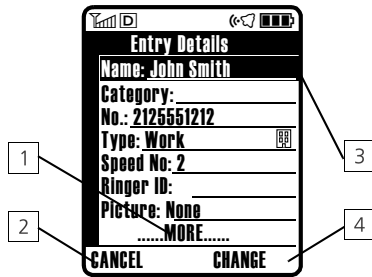

- 1 Press **○** to scroll down to other options.
- 2 Press **Cancel**  to exit without making changes. **Done**  displays when you enter or edit information.
- 3 Highlighted option.
- 4 Press **Change**  to enter or edit information.

The message center lets you compose and send text messages.

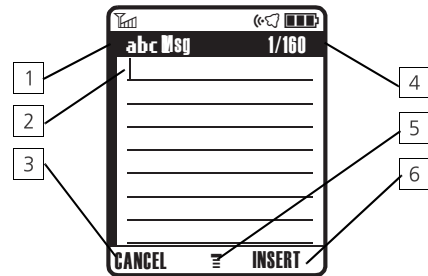

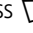
- 1 For indicator descriptions, see following section.
- 2 Flashing cursor indicates insertion point.
- 3 Press **CLR** to exit without making changes.
- 4 Character counter.
- 5 Press  to open the sub-menu.
- 6 Press **Insert**  to insert a quick note picture or sound.

Choosing a Text Entry Method


Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another mode.

Press  in any text entry screen to select one of the following entry methods:

Primary	The primary text entry method (see below to set).
Numeric	Enter numbers only (see page 33).
Symbol	Enter symbols only (see page 33).


Alternatively, you can select a text entry method in any text entry screen by pressing  > **Entry Mode**.

Setting Up a Text Entry Method

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup**, then choose:

iTAP English	Let the phone predict each word (in English) as you press keys (see page 32).
iTAP Espanol	Let the phone predict each word (in Spanish) as you press keys.
Tap	Enter letters and numbers by pressing a key one or more times.




Using Capitalization

Press  in any text entry screen to change text case. The following indicators show capitalization status:

abc = no capital letters	Abc = capitalize next letter only
ABC = all capital letters	

Text Entry Method Indicators

The following indicators identify the text entry setting:

Indicator	Setting
1	Tap, no capital letters
1↑	Tap, capitalize next letter only
1↑	Tap, all capital letters
	iTAP, no capital letters
	iTAP, capitalize next letter only
	iTAP, all capital letters




The following indicators identify **Numeric** or **Symbol** entry method:



123 = numeric method	@ = symbol method
----------------------	-------------------

Using Tap Method


This is the standard method for entering text on your phone.


Tap method cycles through the letters and numbers of the key you press.

Press	To
a keypad key 1 or more times	select a letter, number, or symbol
keypad keys	enter remaining characters Tip: Press  to accept a word completion, or  to insert a space.
 key	store the text

In a text entry screen, you can press  to switch entry modes. The entry mode is displayed in the upper left corner as the  is pressed.

 When you enter text with Tap method, the soft key functions change.

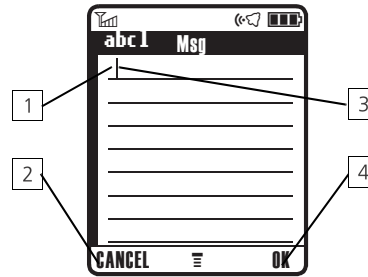


- 1 Character displays at insertion point.
- 2 Press **CLR** to delete character to the left of the insertion point.
- 3 After 2 seconds, character is accepted and the cursor moves to the next position.
- 4 Press **OK**  to accept and store text.



Character Chart


Use this chart as a guide for entering characters with Tap method.

1	. ? ! , @ ' - _ : ; () & " ~ 1 0 ç i % £ \$ ¥ ¤ € + x * / \ [] = > < # §
2	a b c 2
3	d e f 3
4	g h i 4
5	j k l 5
6	m n o 6
7	p q r s 7
8	t u v 8
9	w x y z 9
0	change text case, for capital letters
*	enter a space (hold to enter a return)
#	change text entry method (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.

Tap Method Text Entry Rules

 
- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.






- If you enter or edit information and do not want to save the changes, press  to exit without saving.

Using iTAP™ Method

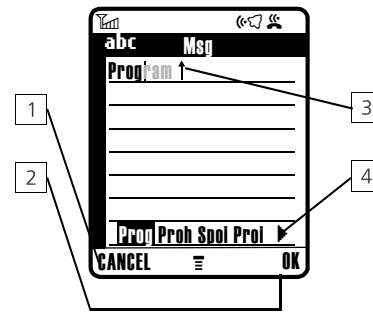iTAP software provides a predictive text entry method that lets you enter a word using 1 key press per letter. This can be faster than Tap method, because your phone combines the key presses into common words.


For example, if you press    , letter combinations that match your keypresses display:




- 1 Press **CLR**  to delete the last letter.
- 2 Press **Select**  to lock highlighted combination.
- 3 Press  to accept **Program**.
- 4 Press  right to highlight another combination. Press  to enter **Prog** and a space.


If you want a different word (such as Progress), continue pressing keypad keys to enter the remaining characters.

Entering Words

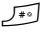In a text entry screen, you can press  to switch entry methods. An indicator shows which method is active (see page 30).

1. Press keypad keys (1 press per letter) to show possible letter combinations at the bottom of the display.
2. Press  left or right to highlight the combination you want.
3. Press **Select** key to lock a highlighted combination. You can press keypad keys to add more letters to the end of the combination.

-or-


Press  to enter the highlighted combination when it spells a word.

A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Using Numeric Method


In a text entry screen, press  to switch entry methods until the **123** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.

Using Symbol Method

In a text entry screen, press  to switch entry methods until the @ (symbol) indicator displays.

1. Press keypad keys (1 press per symbol) to show possible symbol combinations at the bottom of the display.

2. Press  left or right to highlight the combination you want.
3. Press **Select** key to lock a highlighted combination. You can press keypad keys to add more symbols to the end of the combination.


-or-

Press  to enter the highlighted combination.

Symbol Chart



Use this chart as a guide for entering characters with symbol method.

1	. ? ! , @ ' - _ : ; () & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¤ € + x * / \ [] = > < # §
2	@ _ \
3	/ : ;
4	" & '
5	() [] { }
6	¿ ¡ ~
7	< > =
8	\$ £ ¥ ¤ €
9	# % *
0	+ - x * / = > < # §
*	enter a space (hold to enter a return)
#	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, then:

1. Press the  key to delete 1 letter at a time.
2. Hold the  key to delete all the text.

Using the External Display

When the flip is closed, you can use the external display for the following:

- View time, date, and phone status information.
- Read messages that notify you of incoming calls and other events.
- Use the external display as a viewfinder when you take a self portrait with the phone's camera.
- When you use a Bluetooth® headset for speech recognition, view speech-activated dialing commands and other status information.

Using a Removable Memory Card

Note: See page 8 for instructions on inserting and removing a memory card.

Note: You should format a memory card before you can use it.

You can use an optional removable memory card with your phone to store additional multimedia objects such as photos, video clips, and sounds.

Memory Card Tips


- File names for multimedia objects must be less than 12 characters.
- Do not remove the memory card while reading or writing files. Otherwise, the card may be damaged.

- The memory card is recognized as removable memory when connected to a personal computer.
- When you disconnect the phone with the memory card from a personal computer, remove the USB storage equipment on your personal computer. Otherwise, files stored on the memory card could be damaged.

Managing a Memory Card

To manage an inserted memory card:

Press  > **Phone Info** > **Storage Devices**.

1. Press  to scroll to the memory card.
Note: Phone memory is always listed last.
2. Press **Details** key to view memory card information.

-or-

Press  to open the Storage Device menu to perform other procedures (see the table below)

The Storage Device menu can include the following options:



Option	Description
Format	Format the memory card.

Formatting the Memory Card

It is recommended that you format the memory card before you attempt to store any multimedia objects on it.

Note: Formatting the memory card will erase any data already on the card.

1. *With the phone powered off, insert the memory card into the phone (see page 8).*
2. *Turn on the phone.*

3. When the phone is completely powered on, press .
 4. Scroll to **Phone Info** and press the **Select** key.
 5. Scroll to **Storage Devices** and press the **Select** key.
 6. Scroll to **Trans T-Flash** and press the  key.
 7. Scroll to **Format** and press the **Select** key.
The phone displays *Formatting will erase all data.*
 8. Press the **Yes** key to begin formatting the memory card.
- or-**
Press the **No** key to exit without formatting the card.


Storing Multimedia Objects

When a memory card is inserted into your phone, you must select the card before you can store objects to or access objects on it. Use the Switch Storage Device option in the Pictures Menu, Videos Menu, or Sounds Menu.

Viewing Memory Card Contents

To view the contents of an inserted memory card:

Press  > **Media Gallery**.

1. Scroll to and select the desired multimedia object time (Pictures, Sounds, or Videos).
2. Press  to open the menu for the selected multimedia object.
3. Scroll to and select **Switch Storage Devices**.
4. Scroll to and select **TRANS-T-Flash**.

Using the Handsfree Speaker

When you activate your phone's built-in handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the right soft key to turn the handsfree speaker on or off during a call. A soft audio alert confirms activation/deactivation.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press the speakerphone key again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Turning On Airplane Mode

Note: Consult airline staff about the use of Airplane Mode in flight. Turn off your phone whenever instructed to do so by airline staff.

Airplane Mode allows you to disable your phone's radio frequency functions and still use other applications (such as the calculator or datebook functions). This may enable you to use these applications while on an airplane.

Press  > **Settings** > **Airplane Mode**.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

To change a code or password:

Press  > **Settings** > **Security** > **New Passwords**.

Locking and Unlocking Your Phone


You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked.

Locking Your Phone Manually


Press  > **Settings** > **Security** > **Phone Lock** > **Lock Now.**

1. Press keypad keys to enter your unlock code.
2. Press  key to lock the phone.

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.


At the **Enter Unlock Code** prompt:

1. Press keypad keys to enter your unlock code.
2. Press  key to unlock your phone.

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Press  > **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On.**

1. Press keypad keys to enter your unlock code.
2. Press  key to activate automatic lock.

If You Forget a Code or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, contact your service provider.

If you forget your security code or call barring password, contact your service provider.

5 | SETTING UP YOUR PHONE

Storing Your Name and Phone Number

To store or edit your name information on your phone, press from the home screen.

To view your phone number from the home screen or during a call, see page 7.

Setting an Alert Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select 1 of 5 different alert styles: **Loud, Soft, Vibrate, Vibe then Ring, Silent**. The alert style indicator in the display shows the current alert style.

To set an alert style:

Press > **Settings** > **Ring Styles**.

1. Press to scroll to **Style**.
2. Press **Change** key to access the list of alert styles.
3. Press scroll to the desired alert style.
4. Press **Select** key to select the alert style.

Each alert style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press > **Settings** > **Ring Styles** > style **Detail**.

Note: When your phone is connected to a charger or other accessory, the call ringer defaults to **Loud** and uses the current **Loud Detail** setting.

Setting Answer Options

You can use additional methods for answering calls:

Press > **Settings** > **In-Call Setup** > **Answer Options** .

Option	Description
Multi-key	answer by pressing any key
Open to Answer	answer by opening the flip

Setting a Wallpaper Image

You can set the same photo, picture, or animation as a wallpaper (background) image on your phone's home screen and external display.

Press > **Settings** > **Personalize** > **Wallpaper**.

1. Press to scroll to **Picture**.
2. Press **Change** key to open the picture viewer.
3. Press up or down to scroll to a picture, animation, or photo.
Scroll to **(None)** to turn off the wallpaper image.

-or-

Press > **Switch Storage Device**, then up or down to open the **Storage Devices** menu, scroll to and select **TRANS-T-Flash** (the removable memory card), then scroll to a picture, animation, or photo.

4. Press **Select** key to select the image.
5. Press to scroll to **Layout**.
6. Press **Change** key to adjust the image layout.
7. Press to scroll to **Center, Tile, or Fit-to-screen**.

8. Press **Select** key to confirm the layout setting.
9. Press **Back** key to save wallpaper settings.

Tip: Set the resolution to the **Low** setting on your camera when taking pictures to be applied as wallpaper. Low resolution photos display best when applied as **Fit-to-Screen** as wallpaper.



Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time. An animation repeats for 1 minute, then the first frame of the animation displays.


Tip: Turn off the screen saver to extend battery life.


Press  > **Settings** > **Personalize** > **Screen Saver**.

1. Press  to scroll to **Picture**.
2. Press **Change** key to open the picture viewer.
3. Press  up or down to scroll to a picture, animation, or photo. Scroll to **(None)** to turn off the screen saver image.

-or

Press  > **Switch Storage Device**, then  up or down to open the **Storage Devices** menu, scroll to and select **TRANS-T-Flash** (the removable memory card), then scroll to a picture, animation, or photo.

4. Press **Select** key to select the image.
5. Press  scroll to **Delay**.
Note: Setting **Delay** to **Off** disables the screen saver feature.
6. Press **Change** key to set the delay interval.

7. Press  to scroll to the inactivity interval that triggers the screen saver.
8. Press **Select** key to confirm the delay setting.
9. Press **Back** key to save the screen saver settings.

Setting Display Contrast

Press  > **Settings** > **Initial Setup** > **Contrast**.

Setting Display Brightness

Press  > **Settings** > **Initial Setup** > **Brightness**.

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Press  > **Settings** > **Initial Setup** > **Backlight**.

Conserving Battery Power

Some networks and phones include a battery save setting to extend battery life. When this feature is activated, your phone automatically turns off the keypad backlight when it detects that enough ambient light is available.


Press  > **Settings** > **Initial Setup** > **Battery Save**.

6 | CALLING FEATURES




For basic instructions on how to make and answer calls, see page 7.

Changing the Active Line

Change the active phone line to make and receive calls from your other phone number.

Press  > **Phone Info** > **Active Line**.

Redialing a Number

1. Press  to view the *Recent Calls* list.
2. Press  to scroll to the entry you want to call.
3. Press  to redial the number.

Using Automatic Redial


When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

With automatic redial, your phone automatically redials the number for 4 minutes. When the call goes through, your phone rings or vibrates¹ time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

Press  > **Settings** > **Initial Setup** > **Auto Redial**.

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

Press  or **RETRY** key to activate automatic redial.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Press either volume key to turn off the alert for a current incoming call.

Calling an Emergency Number

Your service provider programs 1 or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.


Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


1. Press keypad keys to dial the emergency number.
2. Press  call the emergency number.

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. Lists are sorted from newest to oldest entries. Oldest entries are deleted as new entries are added.

Press  > **Recent Calls**.

Shortcut: Press  from the home screen to view the recent calls list.

1. Press  to scroll to **Received Calls** or **Dialed Calls**.
2. Press **Select** key to select the list.
✓ means the call connected.

- Press **[Call]** to call the entry's number.
Press **[Call]** to send the number as DTMF tones during a call.
- or-**
Press **View** key to view entry details.
- or-**
Press **[Menu]** to open the **Last Calls Menu** to perform various operations on the entry.

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a Contacts entry with the phone number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from Contacts or the Recent Calls lists.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the **[Missed]** (missed call) indicator
 - X Missed Calls**, where **X** is the number of missed calls
- Press **Select** key to see the received calls list.
 - Press **[Select]** to select a call to return.
 - Press **[Call]** to make the call.

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Press **[Menu]** > **Recent Calls** > **Notepad**.

- Press **[Call]** to call the number.
- or-**
Press **[Menu]** to open the **Dialing Menu** to attach a number or insert a special character.
- or-**
Press **Store** key to create a **Contacts** entry with the number in the **No.** field.

Attaching a Number

While dialing (with digits visible in the display):

Press **[Menu]** > **Attach Number** to attach a number from the **Contacts** or **Recent Calls** lists.

Calling with Speed Dial

Each entry you store in **Contacts** is assigned a unique speed dial number.

You can change an entry's speed dial number.

To see an entry's speed dial number, press **[Menu]** > **Contacts**, scroll to the entry, and press the **View** key.

To speed dial a **Contacts** entry:

- Press keypad keys to enter the speed dial number for the entry you want to call.
- Press **[Send]** to submit the number.
- Press **[Call]** to call the entry.

Calling with 1-Touch Dial

To call **Contacts** entries 1 through 9, press and hold the single-digit speed dial number for 1 second.

Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Press  > **Messaging** > **Voicemail** > **CALL**.

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New Voicemail** notification.

Press **CALL** key to listen to the message.

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Muting a Call



1. Press **MUTE** key.

Using DTMF Tones

You can send numbers to the network as dual tone multi-frequency (DTMF) tones during a call. Use DTMF tones to communicate with automated systems that require you to submit a PIN code, password, or credit card number.

To set DTMF tones to be long, short, or off:



Press  > **Settings** > **Initial Setup**.

1. Press  to scroll to **DTMF**.
2. Press **Change** key to access the list of DTMF options.
3. Press  to scroll to the desired options.
4. Press **Select** key to select the DTMF option.

Short sends a short, fixed-duration tone for each key you press. **Long** sends each tone for as long as you press the key. Some systems (such as home answering machines) may require long tones for proper activation.


Sending DTMF Tones During a Call

Using the Keypad

1. Press keypad keys to enter a number to send.
2. Press  to open the **Call Menu**.
3. Press  to scroll to **Send Tones**.
4. Press **Select** key to send the number to the network as DTMF tones.

Sending a Stored Number

During a call, highlight a number in **Contacts** or the **Recent Calls** lists, then:


Press  to make the call.

7 | PUSH-TO-TALK (PTT) CALLS

Push-to-Talk (PTT) lets you talk weakly-talkie style with other Push to Talk subscribers.

PTT and the other features indicated are network and subscription dependent features that are not available in all areas. PTT connectivity requires PTT compatible phones.

PTT Basics

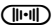Once you are connected, just push and hold the PTT key  to communicate.


Phone Position

When using PTT, hold the phone in a vertical position, one to two inches (2.5 to 5 cm) from your mouth.


Call Sound

PTT calls come through the handsfree speaker by default.



If you are on a call and use Call Waiting to accept any type of incoming call, you hear the sound from the incoming call the same way as the sound from the call you are on. For example, if you are using the phone earpiece for a standard wireless call and then accept an incoming PTT call, you hear the sound from the PTT call through the phone earpiece.

If you connect a headset (sold separately) to the phone, you hear PTT call sound through the headset speaker, and you speak through the headset microphone. You must press the PTT key  to gain floor control of a PTT call and speak to other parties.

Adjusting Volume

Your phone displays **Speaker On** in the home screen to indicate that the handsfree speaker is on. Press **Speaker**  to turn it off.

To adjust handsfree speaker volume during a call, press the volume key (on the left side of the phone) up or down.

To hear a PTT call through the phone earpiece during a call, press **Speaker** . Press **Speaker**  again to switch back to the phone earpiece.

PTT Call Types

You can make two types of PTT calls.



The first type of call, a *PTT call*, automatically connects to the other party. The other party is not able to ignore the call. The call can be one of two types:

- a *private* call to a single PTT user
- a *group* PTT call to more than one PTT user




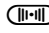

The second type of call, a *Call me alert*, sends the receiving party a text message and a message alert beep to indicate that someone wants to speak with him/her.


The receiving party can answer or ignore the call. Call me alerts are *private* calls only.

Making a Private PTT Call

1. From the home screen, press  to open the Push to Talk menu, scroll to a contact or group, then press .

-or-

- Press  > **Amp'd PTT**, scroll to a PTT contact, then press .
2. To speak during a PTT call, wait for the **Ready to Speak** tone, then press and hold  and begin speaking.
Release  to let the other party speak.
(Only one person can speak at a time.)
If nobody speaks for 20 seconds, the call ends.
 3. Press  to end the call.
If the other party ends the call, you do not have to do anything.

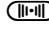
Release  let the other party speak.
(Only one person can speak at a time.)


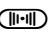

Tip: If you originate a call to someone who is actively engaged in a standard wireless call or a PTT call, you hear the **Ready to Speak** tone and your voice message is stored. The other party can either answer or ignore your call. If the party answers your call, you will both hear the **Floor Free** tone (a single high pitched beep).

Making a Group PTT Call

You must create and save a group before you can call it (see page 46).

Press .



1. Scroll to the group you want to call.
2. Press and hold .
When the audio path is ready and the group is available, you hear the **Ready to Speak** tone.

3. While continuing to hold , speak your message.
Release  to let the group members speak.
4. Press  to end the call.





Sending a Call Me Alert

You can send an alert only to a contact saved in your **PTT Contacts** list. The recipient can ignore the alert or accept it and begin a PTT call with you.

From the home screen:

1. Press .
2. Scroll to the PTT contact you want to call.
3. Press **Options** .
4. Select **Call Me alert**.

The receiving party's phone beeps and displays a message. The message remains until the other party accepts or ignores it.

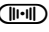5. When you hear the recipient's voice (which indicates that he/she has accepted the alert), press  and wait for the **Ready to Speak** tone.
6. While continuing to hold , speak your message.
Release  to let the other party speak.
7. Press  to end the call.
If the other party ends the call, you do not have to do anything.





Receiving a PTT Call

When your phone receives a private or group PTT call, you hear the caller through the handsfree speaker, and your phone plays the **Open Floor** tone.


In a *private call*, your phone displays **PTT Call** along with the caller's contact name or phone number.




In a group call, your phone displays **PTT Group Call** along with the name of the group.

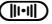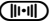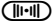1. Press and hold .
2. When you hear the **Ready to Speak** tone, continue to hold  and begin speaking. Release  to let the other party speak.
3. Press  to end the call. If the other party ends the call, you do not have to do anything.

Receiving a Call Me Alert

When it receives a Call me alert, your phone beeps and displays the name or phone number of the caller along with this message: *name/number requests a PTT call*. Press .

To ignore the alert, press **Cancel** .




To accept the alert and call the person, press .

Adding a PTT Contact


You can add new PTT contacts and view them in the **PTT Contacts** list using the main PTT menu.

Note: When you attempt to enter a contact, the potential contact is notified. The potential contact must give permission before you can save his/her phone number as a contact.

Press .

1. Press **Options** .
2. Press  to select **Add Contact**.
3. Enter the PTT contact number and press **Next** .






If the PTT contact number is valid and the other party accepts your request to be added, you see **Invite Status - (name) - Accepted**.

If the other party refuses your request, you see **Invite Status - (name) - Declined**. Press **OK**  to return to the PTT menu.

Note: The other party cannot receive or respond to your request if his/her phone is turned off or if he/she is outside your service area.

Erasing a PTT Contact





Press .

1. Scroll to the PTT contact name you want to erase.
2. Select **Options** .
3. Press  down to select **Delete**.
4. Press **Yes**  or **No** .
5. To erase additional contacts, press  up or down to select contact names, then repeat steps 3 and 4.

Check Contact Availability

In the Recent Calls lists and the PTT menus, your phone displays icons next to PTT contact and group names to indicate availability to participate in a call.

Availability Indicators

Icon	Description
 (green)	Contact Available —The contact (or one member of the group) can accept calls.
 (red)	Do Not Disturb —PTT calls cannot be made to the contact (or any member of the group).
 (dim)	Contact Unavailable —The handset is turned off or the contact is not registered with the voice network.
	Group Member is in pending (originator or terminator). Group Member is in state unknown (awaiting server update). Group is pending.
	Contact is in pending (originator or terminator).
	Contact is in state unknown (awaiting server update).
 (green)	Group is available.
 (dim)	Group is not available.
	Group is set to Do Not Disturb (all users in group have presence of Do Not Disturb).

Setting Your Availability

Note: You can make PTT calls regardless of how you set availability.

1. Press .
2. Select **Availability** .

3. Press  to select **Do Not Disturb** or **Available**.

Available allows you to make and receive PTT calls.

Do Not Disturb ensures that you will not receive PTT calls.

Saving, Editing, and Erasing PTT Groups

You can create up to 30 PTT groups. A group can include up to 30 members.

However, the total number of contacts you can save in your phone (including PTT and non-PTT contacts and groups) cannot exceed 99.




Creating a PTT Group

You can create a PTT group from a list of contacts in another group, or you can create a group from scratch by adding new contacts.


Notes:

- You can establish a group only if your phone is provisioned by your service provider.
- A PTT contact must be provisioned from the handset or a Web interface before you can add it to a group.

Press .

1. Section **Options** .
2. Scroll to **Add Group** and press .
3. Enter the group name and select **Next** .
4. If no PTT contact names appear, go to step 5.


-or-

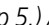
Scroll to the name of the PTT contact you want to add to your new group and press . (If the desired contact is not on the list, go to step 5.) A check mark appears beside the contact name.

Go to step 9 when finished adding PTT contacts to the newly created group.

5. Enter the number of a PTT contact you want to add to the group.


6. Enter the name of the PTT contact you want to add to the group.






7. If you wish to add another contact, select **Add New** .

8. Press **Save**  to save the newly created group.

When you are finished creating a new group and adding members to it, invitations are sent to the members asking for their permission to join your newly created group. The invitation includes your name or number and the group name but does not list all members invited. After accepting an invitation, a new member can select the group name and view the list of members.


Adding a Member to a PTT Group



Press .

1. Highlight the group and select **Options** .
2. Press the center key  to go to the **Add Member** screen.
3. Scroll to the name of the member you want to add to the group.
Note: If no PTT contact names, or if the desired contact is not on the list, then complete steps 4 through 7 of “Saving, Editing, and Erasing PTT Groups” on page 46.
4. Press  to choose **Select**. A check mark appears beside the contact name.
5. Press  right to select **Save**, then press . Your phone sends an invitation to the members you have added to the group.

Editing a PTT Group Name

You can edit the names only of groups you have created.




Press .

1. Scroll to the PTT group name you wish to change.
2. Press **Options** .
3. Scroll down to **Edit**.
4. Edit the group name using your phone's keypad.
5. Press **Next** .
All members in your group are notified and updated.

Erasing a PTT Group


You can erase only groups you have created.


Press .






1. Scroll to the PTT group name you wish to erase.
2. Press **Options** .
3. Scroll down to **Delete** and press **Select** .
*Your phone displays **Erase Group?***
4. Press **Yes** .
Note: Individual members of a PTT group remain in the PTT contacts list after the group is erased.

Erasing a PTT Group Member

You can erase only groups you have created.


Press .




1. Scroll to the PTT group name you wish to edit.
2. Press **Options** .

3. Scroll down to **Delete Members** and press **Select** .
4. Scroll to the contact you wish to erase and press .
A check mark appears beside the contact name. To erase additional members, scroll to their names and press  at each name you select.
5. Press **Delete** .
6. Select **Yes** to erase the member name(s).
-or-
To erase additional members, scroll to their names and press  at each name you select.

Removing Yourself from a PTT Group

You can remove yourself from a PTT group that you did not create.

Press .

1. Scroll to the PTT group name you wish to leave.
2. Press **Options** .
3. Scroll down to **Leave Group**.
4. Press .
5. Press **Yes** .
*Your phone displays **Leave Group?***
6. Select **Yes** to leave the group. Your phone sends a message to your service provider to request that you be removed from the group.
-or-
*Select **No** to discontinue and return to the previous screen.*

Managing Multiple Calls

Your phone can handle two calls at the same time. While you are on a standard wireless or PTT call, you can receive or place another standard wireless or PTT call at the same time.


Erasing PTT Call History

PTT calls are including in the recent calls lists along with standard wireless calls. You can erase them just as you can erase other calls.



8 | PHONE FEATURES





Menu Map

Contents of the Main Menu 		Contents of the Settings Menu	
Amp'd Live™ Amp'd PTT Contacts Recent Calls Received Dialed Notepad Call Times Data Times Data Volumes Messaging* Create Message Voicemail Inbox Outbox Quick Text Drafts Erase Messages Message Settings Media Gallery Camera Pictures Sounds Videos Video Camera	Settings (see Contents of the Settings Menu) Tools Calculator Datebook Shortcuts Voice Records Alarm Clock Phone Info My Tel. Number Active Line Battery Meter Storage Devices Other Information	Ring Styles Style <i>style</i> Detail Personalize Home Screen Main Menu Skin Greeting Wallpaper Screen Saver Sound Settings In-Call Setup In-Call Timer Answer Options Security Phone Lock Lock Application Restrict Calls New Passwords Initial Setup Time and Date Auto PIN Dial Auto Redial Display Timeout Backlight TTY Setup	Initial Setup (con't) Scroll Language Battery Save Contrast Brightness DTMF Hyphenation Master Reset Master Clear Network Info Current Network Set Mode Service Tone Call Drop Tone Car Settings Auto Answer Auto Handsfree Power-off Delay Charger Time Headset Auto Answer Voice Dial Location Location On 911 Only Connection Bluetooth Link Incoming Call USB Settings Airplane Mode







*Optional network/subscription dependent feature.




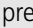


This is the standard main menu layout. Menu organization and feature names may vary on your phone. Not all features may be available on your phone.

Calling Features







Feature	Description
Conference Call	During a call:  > Dial next number, press  , press  .
Restrict Calls	Restrict outgoing or incoming calls:  > Settings > Security > Restrict Calls > <i>unlock code</i>

Messaging













Feature	Description
Send Text Message	Send a text message:  > Messaging > Create Message > New TXT Message
Send Multimedia Message	Send a multimedia message:  > Messaging > Create Message > New PIX Message
Use Media Template	Open an MMS template with preloaded media:  > Messaging > Create Message > PIX Templates
Read Message	Read a new text or multimedia message that you have received: Press the READ key. When you view a video clip in a multimedia message that does not contain text, pressing  right may display a blank screen or restart the video clip.
Store Message Objects	Go to a multimedia message slide, or highlight an object in a letter, then:  > Store File names for stored multimedia objects can not exceed 36 characters.
Quick Text	Send or create a prewritten message:  > Messaging > Quick Text

Feature	Description
Sent Messages	View sent messages:  > Messaging > Outbox
Received Messages	Read received messages:  > Messaging > Inbox Press  to perform various operations on the message. When you view a video clip in a multimedia message that does not contain text, pressing  right may display a blank screen or restart the video clip.
Drafts	View messages saved in the drafts folder:  > Messaging > Drafts
Erase Messages	Delete all messages or only messages from the Outbox or drafts folder:  > Messaging > Erase Messages

Contacts

Feature	Description
Create Entry	Create a new Contacts entry:  > Contacts  > [New Entry] > Phone Number or Email Address You can store up to 1000 Contacts entries.
Create Group Mailing List	Create a group mailing list as a Contacts entry:  > Contacts  > New > Mailing List
Dial Number	Call a number stored in Contacts :  > Contacts , highlight the entry, press  to call

Feature	Description
Voice Dial Number	Voice dial a number stored in Contacts : With phone flip open, press and release the voice key, and say the entry's name (within 2 seconds) exactly as it is stored in Contacts .
Change Speed Dial Number for Entry	Assign a distinctive ringer alert to a Contacts entry: ☰ > Contacts > <i>entry</i> ☰ > Edit > Speed No
Set Ringer ID for Entry	Assign a distinctive ringer alert to a Contacts entry: ☰ > Contacts > <i>entry</i> ☰ > Edit > Ringer ID > <i>ringer name</i>
Set Picture ID for Entry	Assign a picture to display when you receive calls from an entry: ☰ > Contacts > <i>entry</i> ☰ > Edit > Picture > <i>picture</i>
Set Picture ID View	View Contacts entries as text list, or with picture caller ID photos: ☰ > Contacts ☰ > Setup > View by > List or Picture
Set Category for Entry	Set the category for a Contacts entry: ☰ > Contacts > <i>entry</i> ☰ > Edit > Category > <i>category name</i>
Set Category View	View Contacts entries as text list, or with picture caller ID photos: ☰ > Contacts ☰ > Categories > <i>category type</i>
Sort Contacts List	Set the order in which Contacts entries are listed: ☰ > Contacts ☰ > Setup > Sort by > <i>sort order</i>

Feature	Description
Set Primary Number	Set the primary number for a Contacts entry with multiple numbers:  > Contacts > <i>entry</i>  > Set Primary > <i>phone number</i>
View Primary or All Numbers	Set to view only primary numbers or all numbers when viewing entries:  > Contacts > <i>entry</i>  > Setup > View > All Contacts or Primary Contacts
Edit Entry	Edit a Contacts entry:  > Contacts > <i>entry</i>  > Edit
Delete Entry	Delete a Contacts entry:  > Contacts > <i>entry</i>  > Delete
Copy Contacts Entry	Copy a Contacts entry to another location in Contacts :  > Contacts > <i>entry</i>  > Copy Entry > <i>location number</i>
Copy Multiple Contacts Entries	Copy multiple Contacts entries to other locations:  > Contacts > <i>entry</i>  > Copy Entries > From[start]: > <i>starting location number</i> > From[end]: > <i>ending location number</i> > To[start]: > <i>new starting location number</i>

Personalizing Features

Using Speech Commands

You can place calls and perform other tasks by speaking commands to your phone.

1. Press and release the voice button on the right side of the phone.
Your phone displays and speaks **Say a command**, followed by a list of speech commands.
2. Say 1 of the commands listed in the table below.
Your phone performs the corresponding action.

The following are speech commands and the actions they perform:

Speech Command	Description
Call	place a call
Send Picture name	send a multimedia message to the Contacts entry whose <i>name</i> you speak
Send Text name	send a text message to a Contacts entry whose <i>name</i> you speak
Lookup name	look up a Contacts entry by speaking the entry's <i>name</i>
Go To app	use a speech shortcut to access the phone <i>app</i> (application) you specify: Voicemail, Camera, Redial, Received Calls
Check item	check the <i>item</i> you specify: <ul style="list-style-type: none">• Status—network coverage, signal strength, and battery life• Signal—network signal strength• Network—network your phone is currently using• Battery—battery charge level• My Phone Number—view your phone number










Use the **Call** command to place a call in 2 different ways:

- Dial a **Contacts** entry by speaking the name of the entry.
 - Dial any number by speaking the digits in the number.
1. Press and release the voice button on the right side of the phone.
You phone displays **Say a command**, followed by a list of speech commands.
 2. Say "Call," then say the name of the **Contacts** entry, or speak the digits of the phone number.
 - For example, to call the mobile number for a **Contacts** entry named Bill Smith, you would say "Call Bill Smith mobile." (If the entry included only 1 number for Bill Smith, you would simply state "Call Bill Smith.")
 - Similarly, to call the phone number 312-555-1212, you would say "Call 312-555-1212."
If the phone recognizes the name or number, it places the call.
 - If the phone asks you to repeat a name or number, say it again. If the name or number is not valid or is not recognized, the phone does not place the call.
 - If the phone does not recognize the name or number, it displays a list of up to 3 names or numbers, asks, "Did you say ...," and highlights that first item in the list.
 - If the name or number is correct, say "Yes" to place the call.
 - If the name or number is not correct, say "No" to go to the next item on the list.
 - To select the name or number manually, scroll to the name or number on the list and press the **Select** key.
 - To exit the list, say "Cancel."
 - If you reach the end of the list without confirming a number, the phone says, "Sorry, no match found." To try to place the call again, press the **Repeat** key, say "Call," and clearly speak the name or number.







Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.




Additional Personalizing Features

Feature	Description
Ring Style	Change the ring alert for an event:  > Settings > Ring Styles > <i>style Detail</i> > <i>event name</i>
Ringer IDs	Activate distinctive ring alerts assigned to Contacts entries:  > Settings > Ring Styles > <i>style Detail</i> > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > <i>style Detail</i> > Ring Volume
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > <i>style Detail</i> > Key Volume
Clock View	Display an analog clock or digital time readout in the home screen:  > Settings > Personalize > Home Screen > Clock
Skin Appearance	To choose a phone <i>skin</i> that sets the look and feel of your phone's display:  > Settings > Personalize > Skin
Change Soft Keys	Change soft key labels and menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Tools > Shortcuts > <i>shortcut name</i>
Keypad Scrolling Sounds	 > Settings > Personalize > Sound Settings > Scroll Tone


Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys > Icons
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset To reset all options, you need to enter the Security Code (000000).
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries: This option erases all user-entered information stored in your phone memory, including Contacts entries and downloaded files. Once you erase the information, it cannot be recovered. It resets all options back to their factory settings except for the unlock code, security code, and lifetime timer.  > Settings > Initial Setup > Master Clear To clear all information, you need to enter the Security Code (000000).



Dialing Features

Feature	Description
Auto PIN Dial	Some networks require an authenticating PIN code to allow outgoing calls. Use this feature to automatically dial your PIN code.  > Settings > Initial Setup > Auto PIN Dial

Call Monitoring







Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times
In-Call Timer	Set a timer to beep at selected intervals during a call, and display time information during a call:  > Settings > In-Call Setup > In-Call Timer

Handsfree Features







Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Accessory Volume Settings (car kit or headset)	Adjust volume of headsets or car kit accessories that are enabled for Bluetooth® connections: During an active call, press your phone's up or down volume key.
Speaker- phone Automatic Off	Set the speakerphone feature to disable itself 20 seconds after end of call: or  > Settings > Initial Setup > SpeakerPhone
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > Settings > Car Settings > Power-off Delay
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  > Settings > Car Settings > Charger Time





Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application.
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.






Bluetooth® Wireless Connections












Feature	Description
Make Phone Visible to Other Device	<p>Allow an unknown Bluetooth device to discover your phone:</p> <p> > Settings > Connection > Bluetooth Link > Setup > Find Me</p> <p>Tip: After the first connection, you do not need to select Find Me to reconnect.</p>
Connect to Recognized Device	<p>Connect to a recognized handsfree device:</p> <p> > Settings > Connection > Bluetooth Link > Handsfree > <i>device_name</i></p> <p>where <i>device_name</i> is the name of the device with which you want to connect.</p>
Connect to a Handsfree Device During a Call	<p>Switch to a headset or car kit during a call:</p> <p> > Use Bluetooth</p> <p>Note: You cannot switch to a headset or car kit if you are already connected to a Bluetooth device.</p>
Disconnect From Device	<p>Disconnect from a device:</p> <p>Highlight the device name and press the DROP key.</p>
Edit Device Properties	<p>Edit the properties of a recognized device:</p> <p> > Settings > Connection > Bluetooth Link > Device History > Edit</p>
Set Bluetooth Power Permanently On	<p>Set Bluetooth Power to be on whenever your phone is on:</p> <p> Settings > Connection > Bluetooth Link > Setup > Power > On</p>
Set Bluetooth Options	<p>Set your phone's Bluetooth options:</p> <p> > Settings > Connection > Bluetooth Link > Setup</p>

Network Features

Feature	Description
Current Network	View information about network with which phone is currently registered:  > Settings > Network Info > Current Network
Set Mode	Set how your phone searches for a network connection:  > Settings > Network Info > Set Mode
Set Service Tones	Set phone to beep each time the network registration status changes:  > Settings > Network Info > Service Tone
Set Call Drop Alerts	Set phone to emit an alert tone whenever the network drops a call. (Because digital networks are so quiet, the call drop alert may be your only indication that a call has been dropped.)  > Settings > Network Info > Call Drop Tone

Personal Organizer Features







Feature	Description
Create Datebook Event	Create a new datebook event:  > Tools > Datebook , highlight the day, press  , press  > New You can store up to 1000 Datebook events.
View or Edit Datebook Event	View or edit event details:  > Tools > Datebook , highlight the day, press  , press the OK key
Event Reminder	View event reminder: OK key Close event reminder: Back key

Feature	Description
Copy Datebook Event	Copy a datebook event to date and/or time  > Tools > Datebook > <i>day</i> > <i>event</i>   > Copy
Set Alarm	Set an alarm:  > Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press the DISABLE key or  . Set 8-minute delay: Press the SNOOZE key.
Create Voice Memo	Create a voice memo: Press and hold voice key, speak into the phone, release voice key. Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.
Play Voice Memo	Play back a voice memo:  > Tools > Voice Memos > <i>voice memo</i>
Calculator	Calculate numbers:  > Tools > Calculator
Currency Converter	Convert currency:  > Tools > Calculator  > Exchange Rate Enter exchange rate, press the  key, enter amount, and press  > Convert Currency .

Security

Feature	Description
Lock Application	Lock phone applications:  > Settings > Security > Lock Application

News and Entertainment

Feature	Description
Manage Pictures	Manage pictures, animations, and photos:  > Media Gallery > Pictures To access images stored on the removable memory card, press  to open the Pictures Menu , scroll to and select Switch Storage Devices , then scroll to and select TRANS-T-Flash .
Manage Sounds	Manage ring tones and sounds that you have composed or downloaded:  > Media Gallery > Sounds To access sounds stored on the removable memory card, press  to open the Sounds Menu , scroll to and select Switch Storage Devices , then scroll to and select TRANS-T-Flash .
Manage Video Clips	Manage video clips:  > Media Gallery > Videos To access video clips stored on the removable memory card, press  to open the Videos Menu , scroll to and select Switch Storage Devices , then scroll to and select TRANS-T-Flash .

9 | SERVICE AND REPAIRS

If you have questions or need assistance, we're here to help. Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).



10 | SPECIFIC ABSORPTION RATE DATA

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. See the printed *Important Safety and Legal Information* guide or <http://www.motorola.com/rfhealth> for SAR values.²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site: <http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



INDEX

A

- accessories 5
- accessory connector port 1
- alarm clock 62
- alert
 - setting 7, 56
 - turning off 7, 39
- animation
 - screen saver 38
 - viewing 63
 - wallpaper 37
- answering a call 7, 37
- application, locking and unlocking 63
- automatic redial 39

B

- backlight 38
- barring calls 50
- battery
 - charging 6
 - extending battery life 5, 38
 - installing 6
- battery save 38
- Bluetooth 60
- Bluetooth indicator 26
- brightness, setting 38

C

- calculator 62
- call
 - alert, turning off 7, 39
 - answer options 37
 - answering 7
 - barring 50
 - dialed calls list 39
 - dialing 7

- emergency number 39
- handsfree speaker 35
- making 7
- mute 41
- received calls list 39
- receiving 7
- ring style 7, 56
- timers 58
- unanswered call 40
- Call Failed, Number Busy message 39
- caller ID 20, 52
- camera
 - taking a photo 19
- category
 - Contacts entry 52
- center key 27
- character chart 32
- clock
 - selecting analog or digital 56
- codes
 - changing 35
 - default 35, 36
 - forgetting 36
- conference call 50
- Contacts
 - attaching 2 numbers 40
 - category for entry 52
 - dialing a number 51
 - group mailing list 51
 - 1-touch dial 41
 - picture ID 20, 52
 - primary number, setting 53
 - ringer ID 52, 56
 - sorting entries 52
 - speed dial number 40
 - storing an entry 51
 - voice dialing 52

INDEX

coverage indicator 26
customizing the menu 57

D

data call 59
datebook 61
dialed calls list 39
dialing a number 7
display
 backlight 38
 brightness 38
 description 26
 home screen 26
 language 57
 personalizing 57
distinctive ringer alert 56

E

earpiece volume 7
emergency number 39
end key 1
Enter Unlock Code message 36
external display 34

F

fax call 59
5-way navigation key 1, 27

H

handsfree speaker 35
headset jack 1
home screen
 defined 26
 selecting clock view 56

I

incoming call
 answering 7
indicators
 Bluetooth 26
 coverage 26
 message 27
 message waiting 25
 signal strength 26
 text entry mode 27
voicemail message 27, 41

J

joystick 1

K

key
 center key 27
 end 1
 5-way navigation 1, 27
 left soft key 1, 26
 menu 1
 power 1
 right soft key 1, 26
 send 1
 voice 1
 volume control 1, 7
keypad
 answering calls 37
 volume, setting 56

L

language, setting 57
left soft key
 functions 1, 26

INDEX

lock

- application 63
- phone 36

M

making a call 7

master clear 57

master reset 57

menu

- entering text 29
- icons, converting to text 57
- icons, showing or hiding 57
- language, setting 57
- personalizing 57
- rearranging features 57
- using 27
- view, changing 57

menu key 1

message

- MMS, defined 24
- multimedia message 50
- multimedia template 50
- reading 50
- text 50

message indicator 27

message waiting indicator 25

MMS. *See* message

multimedia message

- receiving 25
- sending 24, 50

multimedia messaging service. *See* message

multimedia template 50

mute a call 41

my telephone number 7, 37

N

notepad 40

number

- storing your number 37
- viewing your number 7

O

1-touch dial

- using 41

open to answer 37

optional accessory, defined 5

optional feature, defined 5

P

passwords. *See* codes

phone

- alert, turning off 7, 39
- answer options 37
- clear stored information 57
- codes 35
- keypad, answering calls 37
- language, setting 57
- locking 36
- open to answer 7
- reset all options 57
- ring style 7, 56
- security code 35
- unlock code 35
- unlocking 36

phone number

- attaching 2 numbers 40
- redialing 39
- storing in Contacts 51
- storing your number 37
- viewing your number 7

photo

- picture ID 20, 52



INDEX

- sending 19
- taking 19
- picture
 - screen saver 38
 - viewing 63
 - wallpaper 37
- picture ID 20, 52
 - setting 52
- power key 1
- push to talk calls
 - individual contact 44
- push to talk contacts and groups list
 - adding a contact 44

R

- received calls list 39
- recent calls 39
- redial
 - automatic redial 39
 - busy number 39
- right soft key
 - functions 1, 26
- ring style, setting 7, 56
- ring tone
 - managing 63
- ringer ID
 - setting 52
 - turning on/off 56
- ringer volume, setting 7, 56

S

- screen saver 38
- security code
 - changing 35
 - default 35
- send key 1

- shortcuts 56
- signal strength indicator 26
- silent alert, setting 7, 56
- soft keys
 - functions 26
 - illustration 1
- sound
 - managing 63
- Speaker On message 35
- speakerphone
 - automatic answer 59
- speed dial 40
- standby time, increasing 38
- symbol chart 33

T

- telephone number
 - storing your number 37
 - viewing your number 7
- text
 - capitalization, changing 30
 - character chart 32
 - entering 29
 - symbol chart 33
- text entry mode indicator 27
- timers 58

U

- unlock
 - application 63
 - phone 36
- unlock code
 - bypassing 36
 - changing 35
 - default 35, 36

INDEX

V

- vibrate alert
 - setting 7, 56
 - turning off 7, 39
- video clip
 - downloading 50, 51
 - managing 63
 - recording 21
- voice dial 52, 59
- voice key
 - dialing a number 52
 - illustration 1
- voice memo 62
- voicemail 41
- voicemail message indicator 27, 41
- volume
 - earpiece 7
 - keypad 56
 - ringer 7, 56
- volume keys 1, 7

W

- wallpaper 37



amp'd
mobile™

Curious about Amp'd Mobile™ phones, accessories and content? Check out ampd.com.