

Instruction Manual

Be sure to carefully read this instruction manual **before** using the product to ensure proper use of the stroller, and keep it for future reference. Record the following information for quick reference.

Note: Illustrations are only representative and not actual.


Date Purchased: _____ Model Number: **7040** - _____ Color _____

Located on the rear right leg.


Fabric Pattern _____

Parts List

Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-99-COMBI.

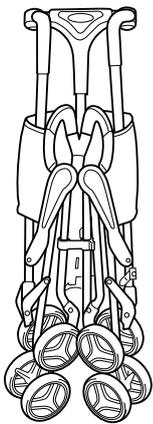


Main Body

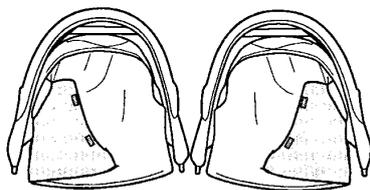


Canopy Left and Right



Warranty Card

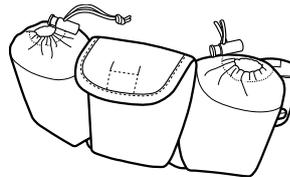


Stroller Pack

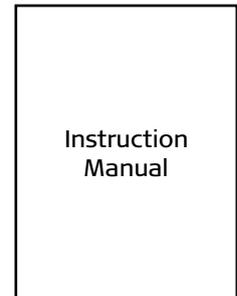

Instruction Manual

Name of Parts

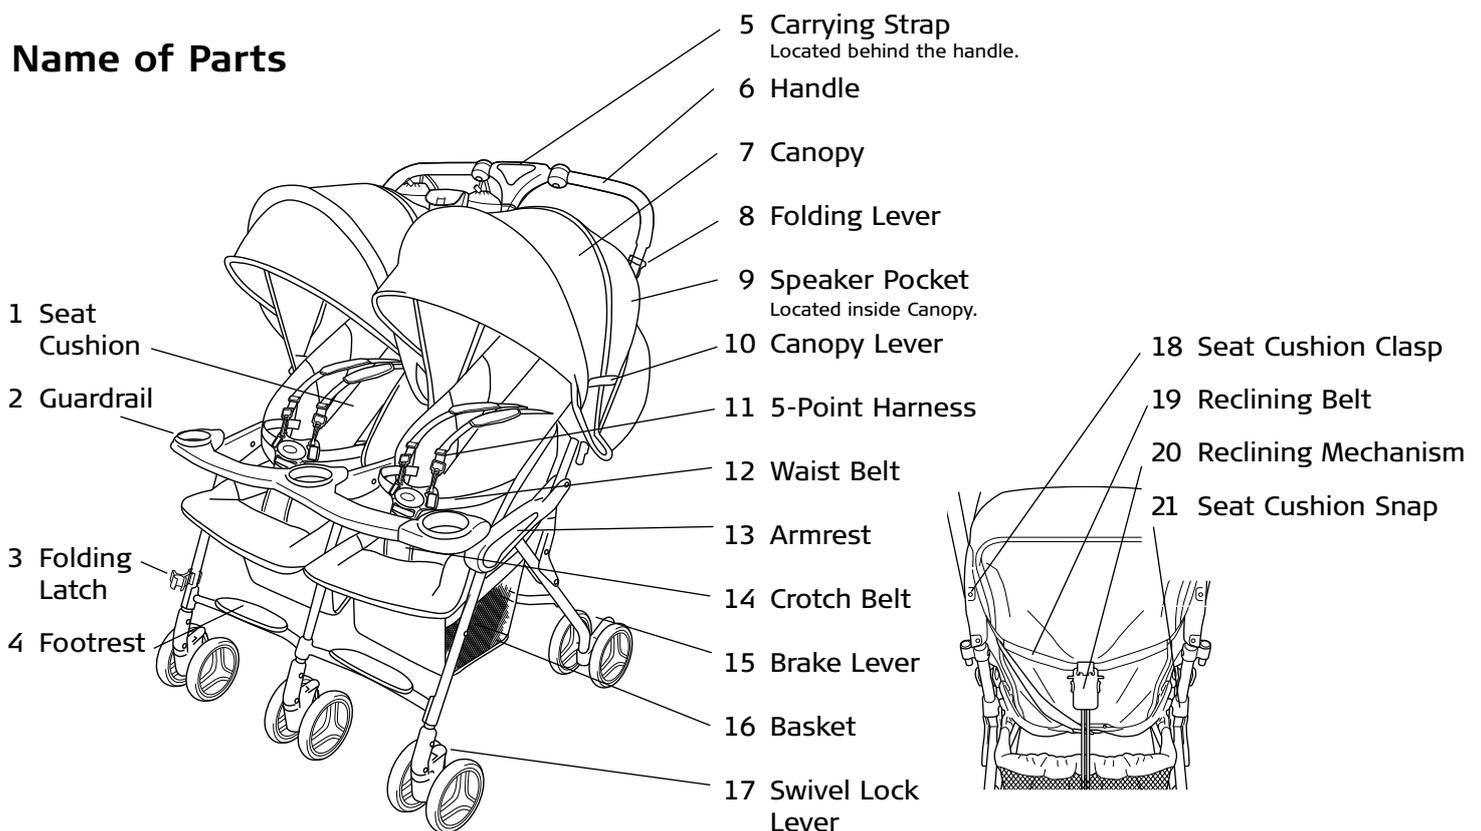

⚠️ WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.

In the event of damage or problems, discontinue use and contact Combi Customer Service for instructions: 1-800-99-COMBI.



⚠️ WARNING
AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE 5-POINT HARNESS.



⚠️ WARNING
NEVER LEAVE CHILD UNATTENDED.

⚠️ WARNING
DO NOT ALLOW CHILDREN TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.



⚠️ WARNING
DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may fold.



⚠️ WARNING
Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

⚠️ WARNING
Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



⚠️ WARNING
Do not allow your child to stand in or on the stroller.



⚠️ WARNING
Do not put or hang items on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

⚠️ WARNING
Do not load more than 10 lbs. (4.5kg) in either basket.



⚠️ WARNING
Never carry more than one child in each seat. Do not allow a child to ride or sit on areas of the stroller other than seat. **Total Maximum weight of children: 90 lbs. (40 kg)**




⚠️ WARNING
Always engage both brakes when parking the stroller.

CAUTIONS:


1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations or personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.

All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Combi reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows. © Combi USA, Inc. 2004

Opening the Stroller

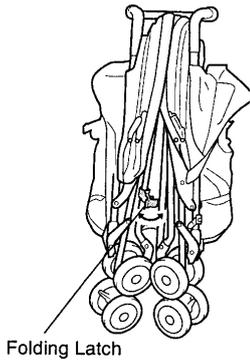

Folding Latch

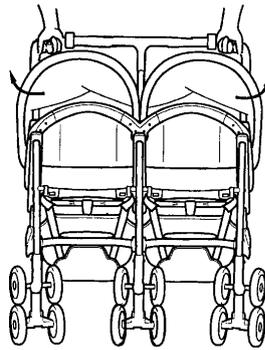


1. Release folding latch by pulling it forward.

2. Grip the handle bar on each side and turn outward to open fully. (Holding from underneath will make the process easier.)

3. Lift up the handle bar and snap it away from you. It will open and automatically lock into position.

Attaching the Canopy

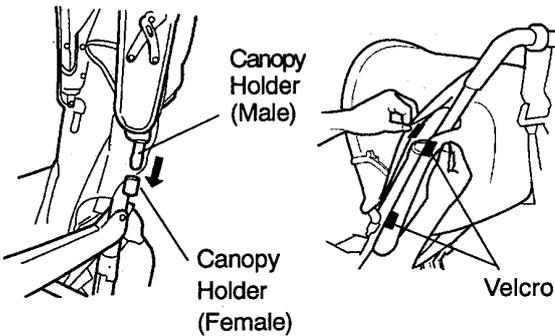

Canopy Holder (Male)

Canopy Holder (Female)


Velcro

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller (by laying it down), be sure the canopy is off the ground to prevent it from bending.

Attaching the Canopy

1. Confirm the canopies will attach on the proper side and face the proper direction.
2. Fully insert the canopy holder (male) into the canopy holder (female) until a click is heard.
3. Fasten the velcro located on both sides around the handle and to the back of the seats.

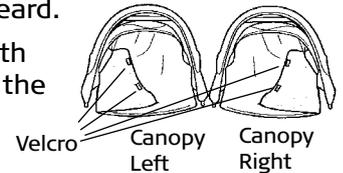

Velcro


Canopy Left

Canopy Right

Removing the Canopy


Pull the velcro apart, squeeze the bottom of the canopy holder (male) and pull the canopy off.

Installing Optional Speakers

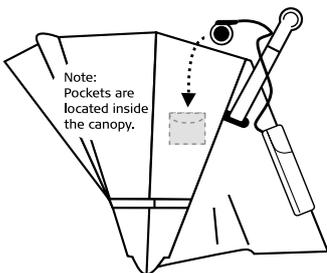


Note: Pockets are located inside the canopy.

1. Place the speaker set with the shorter wires in the left canopy pocket.
2. Place the speaker set with the longer wires in the right canopy pocket.
3. Insert the left speaker's mini-plug into the adapter.
4. Insert the the right speaker's mini-plug into the adapter.

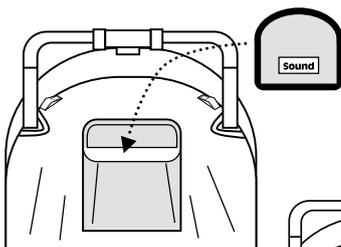

Sound

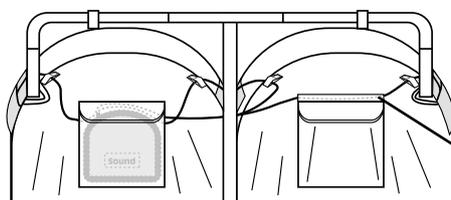

Velcro flap holds & guides speaker wire

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy. This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.


In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.



WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.


Using the Swivel Wheels

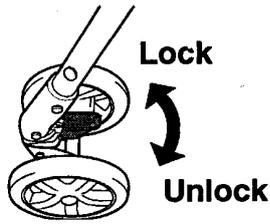

To lock swivels, make sure the lock lever is behind the stroller frame; then lift all lock levers up.

To unlock swivels, push all swivel lock levers down.

Using the Brakes

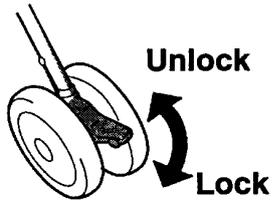

CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

To lock brakes, push all brake levers down. Brake levers are located on the back wheels only.


To unlock brakes, lift all brake levers up.

Adjusting the Reclining Backrest

1. To place the backrest in the upright position, press in the tabs on both sides of the recline mechanism and pull down on the cords while pushing the recline mechanism toward the seat back.
2. To achieve a full recline, press in the tabs on both sides of the recline mechanism and pull downward.


CAUTION

Be careful when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

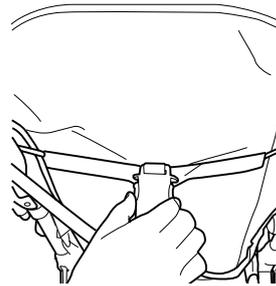

Using the Guardrail

To remove individual sides of the guardrail:

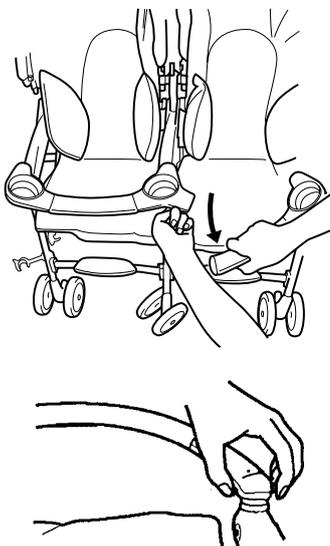


1. Press release button on the underside of the center section of the guardrail and pull out.

Note:
To rotate either side of the guardrail to permit easy access, release center button and swing the guardrail out.

2. Squeeze the buttons on the outside of the stroller and lift up to remove one side of the guardrail

To remove the complete guardrail:

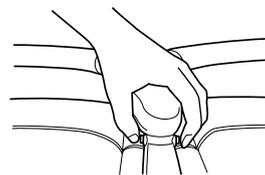


1. Squeeze both buttons on the underside of the middle section and lift up.



2. Squeeze the buttons on the both outside sections of the stroller and lift up to completely remove the guardrail.

Using the Harness

⚠ WARNING Avoid serious injury from falling or sliding out. Always use the 5-point harness.

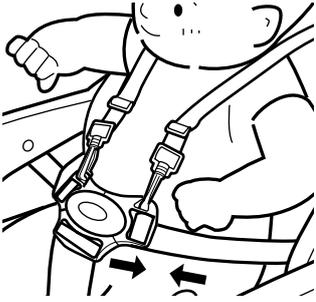


Unbuckling the Harness

1. Press levers down on right and left harness hooks to detach from buckle tongues.
2. Press buckle button down (with Combi logo) and detach buckle tongues from buckle.

Buckling the Harness

1. Place the crotch belt between the baby's legs.
2. Insert buckle tongues into buckle.
3. Lift buckle with tongues inserted and attach right and left hook to holes in buckle tongue
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

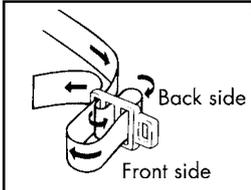


CAUTION

Even when the harness is fastened, be careful not to let the child slip out or stand.

Folding the Stroller

1. Remove all items from the basket.
2. Lock all front swivel wheels.
3. Make sure seat backs are in the upright position.
4. Fold both canopies by lifting up on the canopy levers.
5. Remove your player from the back pocket of the canopy.

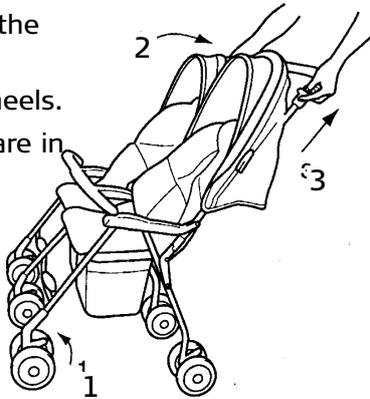

6. While lifting up the folding levers on both sides of the handle, tilt the stroller back until it folds together.




Folding Latch

The stroller can be pulled behind you as shown in diagram A or carried over your shoulder as shown in diagram B.

7. Fold together by bringing the sides of the handle together until the canopies face each other in the middle.




8. Lock the folding latch to hold the stroller together.

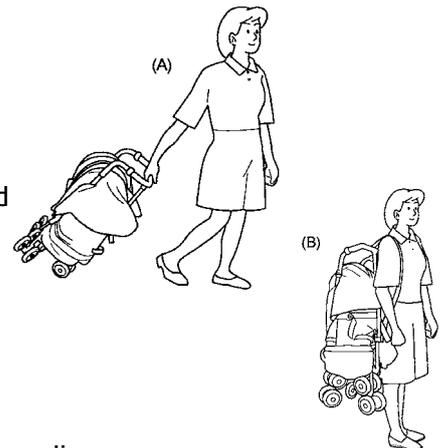

Using the Safety Cover (Boot)

⚠ WARNING: Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless safety cover (boot) is securely fastened.

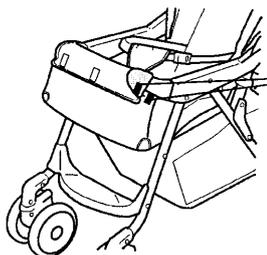

Velcro

Installing the Safety Cover (Boot)

1. Lift the seat cushion and pull safety cover (boot) out.
2. Place the safety cover (boot) over the guardrail and secure it with the velcro.

CAUTION


Before folding the stroller, unfasten and store the safety cover (boot) under the seat. The stroller will not fold with it attached.

Removing/Attaching the Seat Cushion

CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.

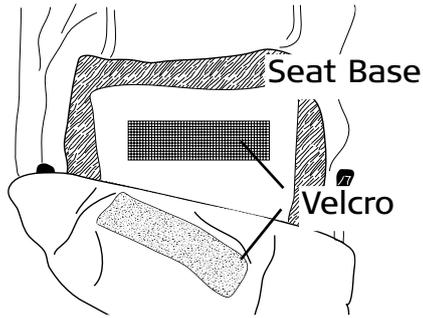

Removing

1. Press levers down on right and left harness hooks to detach hooks from buckle tongues.
2. Press buckle button down (with Combi logo) and detach buckle tongues from buckle.
3. Remove shoulder pads from harness by pulling over harness hooks.

4. Pull top of seat pad forward to detach Velcro..
5. Pull all the harness straps through the top and side slots in cover.
6. Unzip zipper at the base of the seat cover.
7. Pull bottom of seat pad upward to detach Velcro

Attaching


1. Attach Velcro at the bottom of the seat pad to Velcro on the stroller base.
2. Pull top of seat pad forward; the seat pad can rest on the front guard rail.
3. Insert buckle strap into slot at the bottom back of the seat pad.

4. Locate zipper on the back of the seat pad and locate the zipper in the seat bite of the stroller. (The boot also has a zipper; do not use the boot zipper to attach the cover) Zip seat pad to stroller.

5. Insert harness straps with hooks and harness straps with buckle tongues thru slots on back of seat pad.
6. Attach Velcro on top of seat pad to stroller.


Removing & Attaching the Front Swivel Wheels

Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

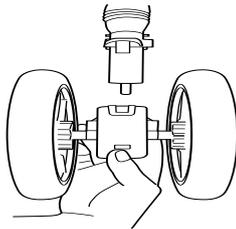

Removing the Swivel Wheels

Press in the square button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.


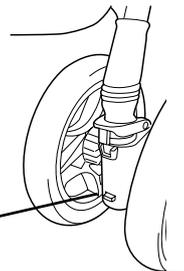


Release Button

Using the Basket

CAUTION

Do not place more than 10 lbs. in either basket. Remove all items from the basket before folding the stroller.

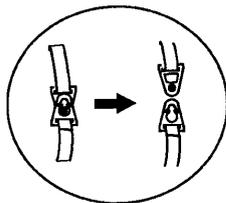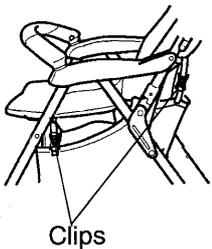

Removing

Unfasten clips on front and side of basket.

Attaching


Reverse the procedures for Removing.

Using the Stroller Pack

Can be used on either side of the handle (left or right).


CAUTION

To avoid burns, do not put bottles/cups with hot liquids in the stroller pack. Do not place more than 2 lbs. in the stroller pack. Remove bottles before folding the stroller.

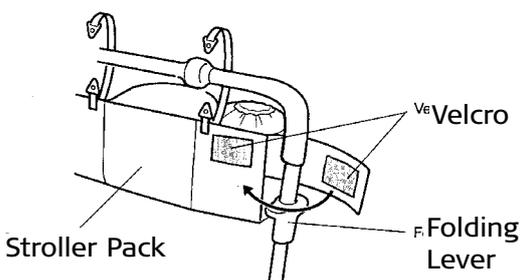

1. Wrap the side velcro straps tightly around the handle tube above the Folding Lever.

2. Wrap the straps over the handle top and fasten the clips together.

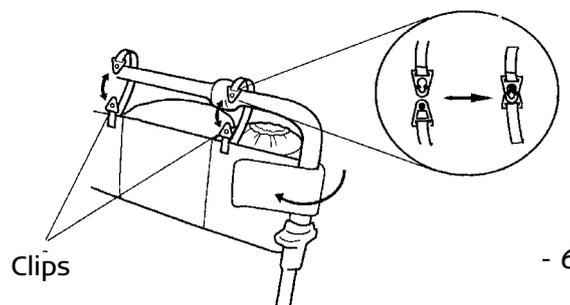

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call customer service for further instruction.

CANOPY, WAIST BELT, FIXED SEAT BASE, STROLLER PACK AND BASKET

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent and apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry. Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

SWIVEL WHEELS


After prolonged normal use, the wheels of your stroller may not swivel as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, test the swivel action to determine whether lubrication is necessary. Using compressed air* aimed at point (a) and (b), blow dirt from the swivel mechanisms. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.

ADDING LUBRICANT

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add a small amount of lubricant (silicone*) to **the swivel shaft**.

Do not use lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Compressed air and silicone spray are available in varying size cans at most hardware stores.

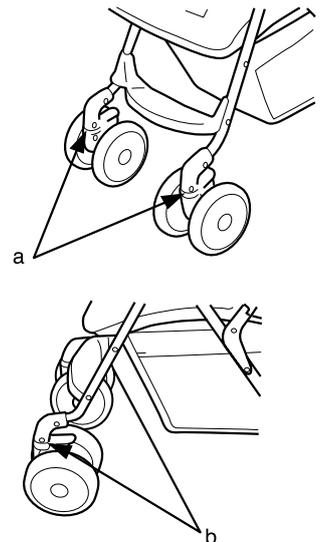

Trouble Shooting

STROLLER WILL NOT FOLD


- Check to see that the waist belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Make sure the seat back is in the upright position.
- Remove your player from back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean wheels and lubricate if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

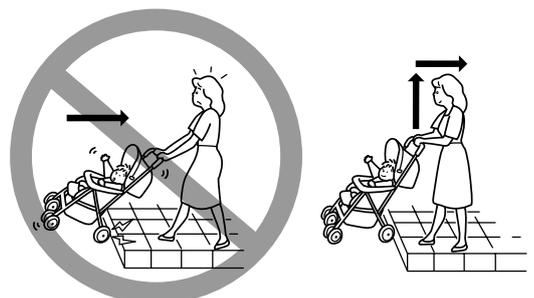



Twin Savvy Stroller

7040 Series

Instruction Manual

If you would like to place an order for replacement parts, please fill out the form below and return it to the following address:

Combi USA, Inc.

Attn: Customer Service Department
1962 Highway 160 W, Suite 100
Fort Mill, SC 29708-8027

or Fax this completed form to

803-548-3663

IMPORTANT: We must have this information to process your order:

Model Number: 7040 - _____ Color & Pattern of Fabric: _____
Located on the rear right leg.

Parts List for the Twin Savvy (7040 Series) only.

	Price	Quantity	Total
1. Canopy (Right side when facing the front of stroller)	\$ 30.00		
2. Canopy (Left side when facing the front of stroller)	30.00		
3. Seat Cushion (Right side when facing the front of stroller)	40.00		
4. Seat Cushion (Left side when facing the front of stroller)	40.00		
5. Guardrail (Right side when facing the front of stroller)	15.00		
6. Guardrail (Left side when facing the front of stroller)	15.00		
7. Basket	20.00		
8. Shoulder Pad Set	10.00/set		
9. Carrying Strap	12.00		
10. Stroller Pack	15.00		
11. Folding Latch	5.00		
12. Wheel Assembly (Set of 2 wheels)	20.00/set		
If you need to order other parts for your stroller, please call us toll-free at 1-800-99-COMBI. Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S.	Amount of Order		
	ADD Shipping & Handling		
	Sales Tax (5%) (SC residents only)		
	Total		

Ship To:

Customer Name _____

Street Address _____

Street Address _____

City, State, Zip _____

Telephone Number _____

Charge to my credit card:

- VISA
- MASTERCARD
- AMERICAN EXPRESS
- DISCOVER

Card Number _____

Expiration Date _____ - _____ - _____

Cardholder's Signature _____

Check enclosed

09/13/04