

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%



Twin Savvy™ 7030 Series

Acoustic Canopy

Patent Pending




Be sure to carefully read this instruction manual **before** using the product to ensure proper use of the stroller, and keep it for future reference. Record the following information for quick reference.

Date Purchased: _____ Model Number: **7030** - _____ Color _____


Parts List

Fabric Pattern _____

Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-992-6624.

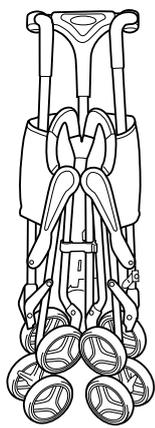

Main Body

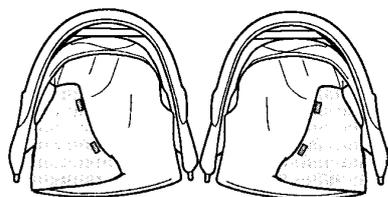

Canopy Left and Right




Speakers
in a Box



Warranty Card




Stroller Pack

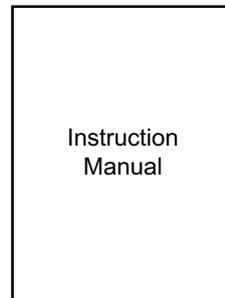

Instruction
Manual

Name of Parts

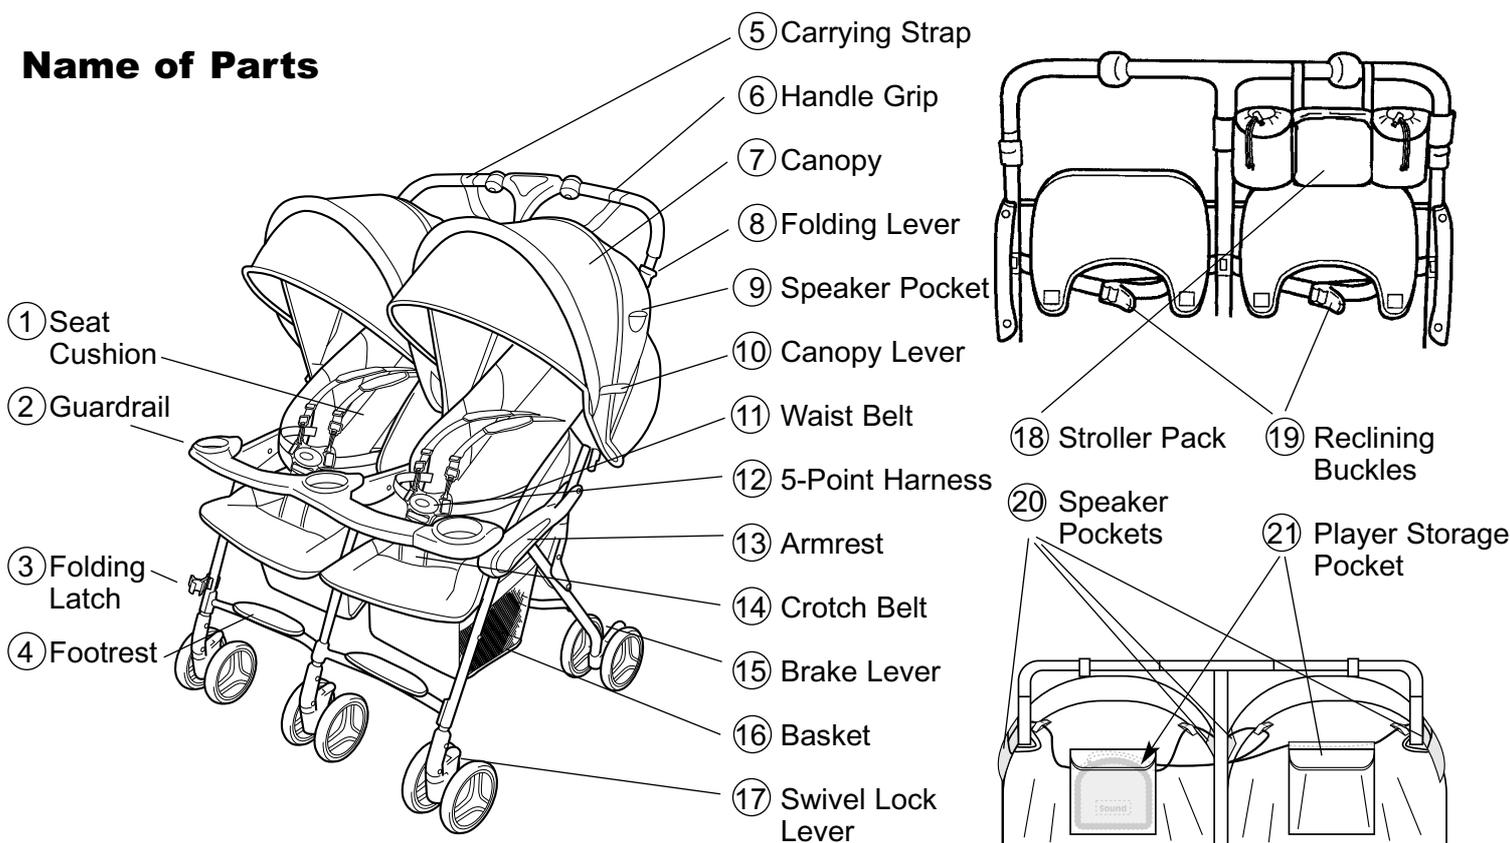

⚠️ WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.

In the event of damage or problems, discontinue use and contact COMBI Customer Service for instructions: 1-800-992-6624.



⚠️ WARNING
AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE SEAT BELT



⚠️ WARNING
NEVER LEAVE CHILD UNATTENDED.

⚠️ WARNING
DO NOT ALLOW CHILDREN TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.



⚠️ WARNING
DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.



⚠️ WARNING
Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

⚠️ WARNING
Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



⚠️ WARNING
Do not allow your child to stand in or on the stroller.



⚠️ WARNING
Do not put or hang things on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

⚠️ WARNING
Do not load more than 12 lbs. (5.4kg) in the basket.



⚠️ WARNING
Never carry more than one child in each seat. Do not allow a child to ride or sit on areas of stroller other than seat. **Total Maximum weight of children: 90 lbs. (40 kg)**



⚠️ WARNING
Always engage both brakes when parking the stroller.

CAUTIONS:

1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations or personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.

*Questions or Concerns
check our website:*

www.combi-intl.com


COMBI

Opening the Stroller



Folding Latch

1. Release folding latch by pulling it forward.

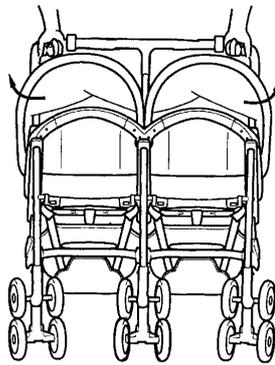

2. Grip the handle bar on each side and turn outward to open fully. (Holding from underneath will make the process easier.)




3. Lift up the handle bar and snap it away from you. It will open and automatically lock into position.

Attaching the Canopy

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

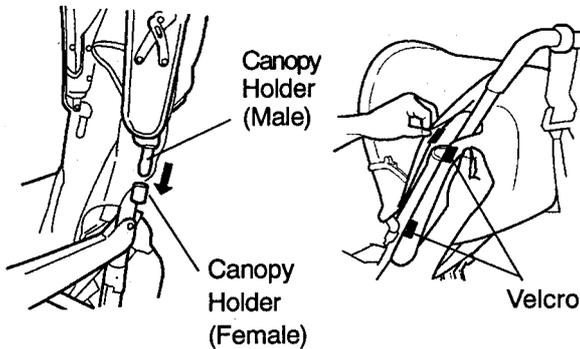


Canopy Holder (Male)

Canopy Holder (Female)

Velcro

Attaching the Canopy

1. Confirm the canopies will attach on the proper side and face the proper direction.
2. Fully insert the canopy holder (male) into the canopy holder (female) until a click is heard.
3. Fasten the velcro located on both sides around the handle and to the back of the seats.

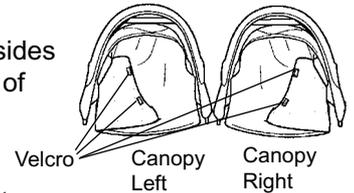

Velcro

Canopy Left

Canopy Right

Removing the Canopy


Pull the velcro apart, squeeze the bottom of the canopy holder (male) and pull the canopy off.



Installing the Speakers

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

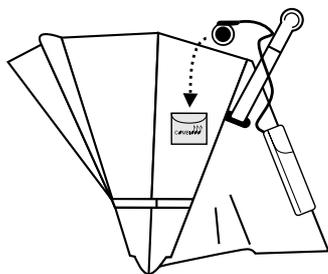

1. Place the speaker set with the shorter wires in the left canopy pockets.
2. Place the speaker set with the longer wires in the right canopy pockets.
3. Insert the left speaker's mini-plug into the adapter.
4. Insert the the right speaker's mini-plug into the adapter.


CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy.


This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.

In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.

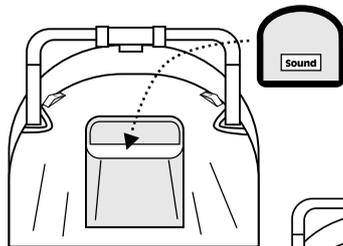

You will only need to use one player to play music out of both canopies.

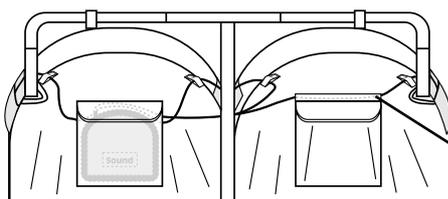


Velcro flap holds & guides speaker wire

WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.




Using the Swivel Wheels

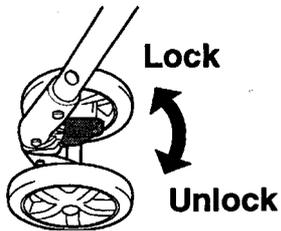

To lock swivels, lift all swivel lock levers **up**.

To unlock swivels, push all swivel lock levers **down**.

Using the Brakes

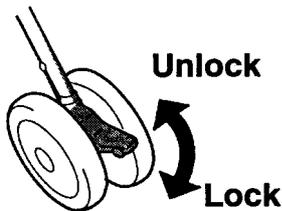


CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.


To lock brakes, push all brake levers **down**.

To unlock brakes, lift all brake levers **up**.

Using the Reclining Backrest

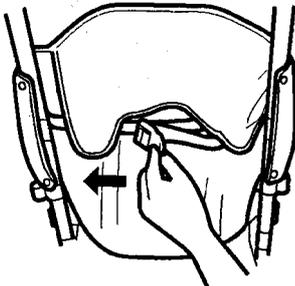

Lift up on the end of the reclining buckle and move it to the left to recline the seat.

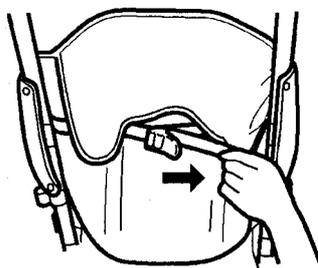

Pull the reclining belt toward the right to bring the seat backrest upright.


CAUTION

Be careful when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.


Do not attempt to pass double stitching on end of the belt.

Using the Guardrail

To remove individual sides of the guardrail:

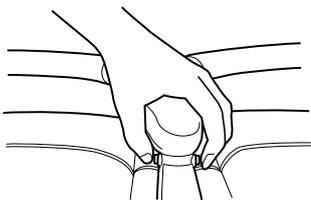


1. Squeeze buttons and lift up.

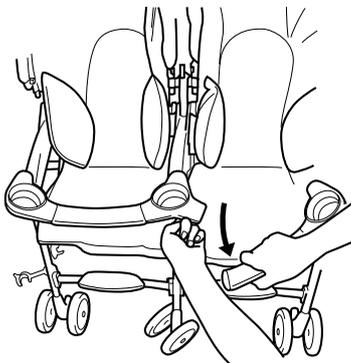


2. Press release button on the underside of guardrail and pull out.

Note:
To open either side of the guardrail to permit easy access, release button and swing the guardrail open.

To remove the complete guardrail:

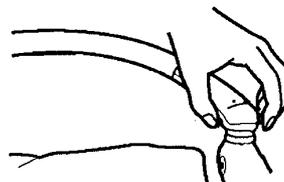


1. Squeeze buttons of both sides and lift up.

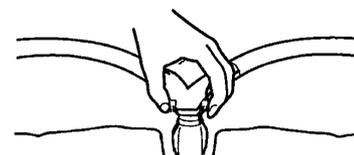


2. Squeeze the buttons in the middle shown in and lift the entire guardrail off.

Using and Adjusting the 5-Point Harness

Avoid serious injury from falling or sliding out. Always use harness.

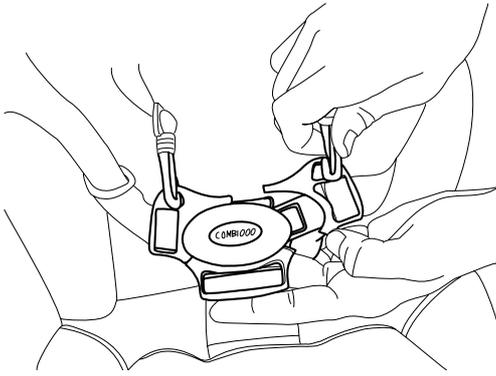


1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle

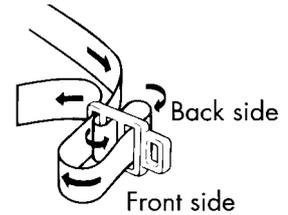


Folding the Stroller


1. Remove all items from the basket.
2. Lock all front swivel wheels.
3. Make sure seat backs are in the upright position.
4. Fold both canopies by lifting up on the canopy levers.
5. Remove your player from the back pocket of the canopy.
6. While lifting up the folding levers on both sides of the handle, tilt the stroller back until it folds together.

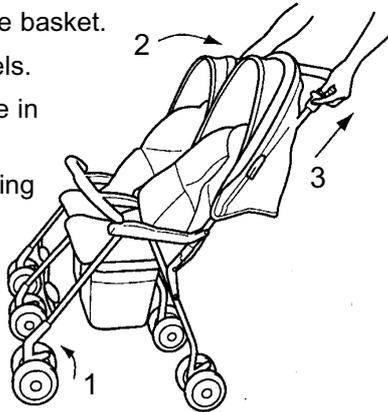

7. Fold together by bringing the sides of the handle together until the canopies face each other in the middle.

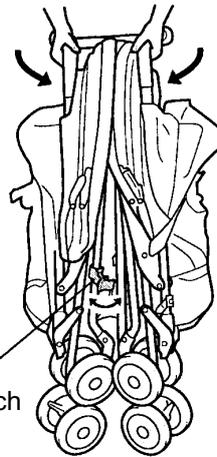


Folding Latch

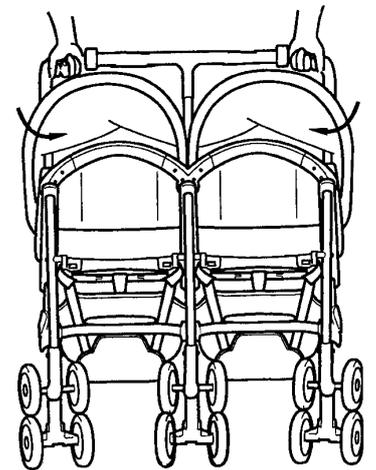


8. Latch the folding latch to hold the stroller together.

The stroller can be pulled behind you as shown in diagram A or carried over your shoulder as shown in diagram B.

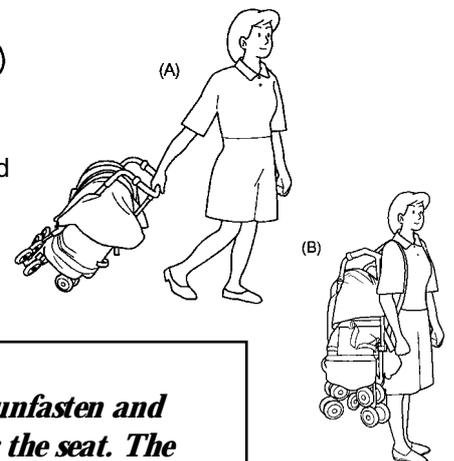

Using the Safety Cover

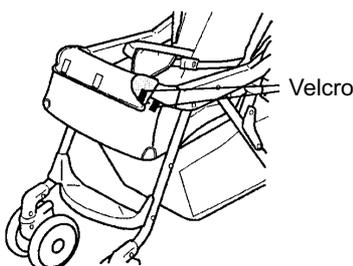

CAUTION

Before folding the stroller, unfasten and store the safety cover under the seat. The stroller will not fold with it attached.

Installing the Safety Cover




1. Lift the seat cushion and pull safety cover out.
2. Place the safety cover over the guardrail and secure it with the velcro.

Removing/Attaching the Seat Cushion

! WARNING

Child may slip into leg openings and strangle. Never use seat in reclined position unless the permanently attached safety cover is used.

** To attach the safety cover, see instructions on page 4.*

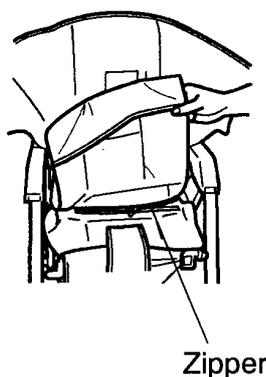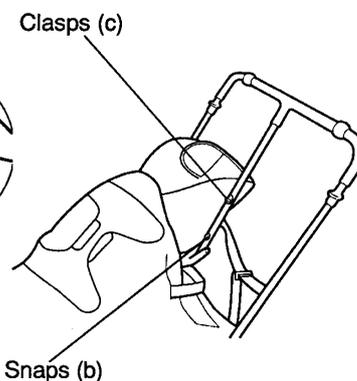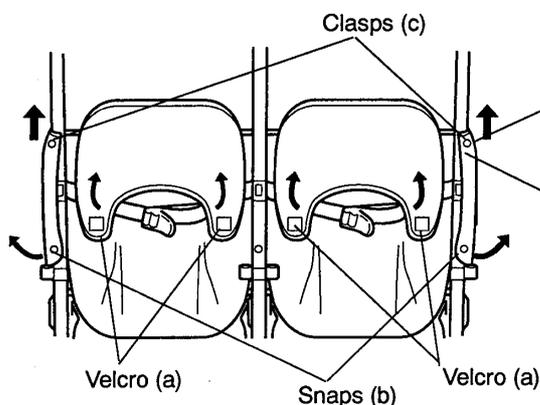

CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.



Removing the Seat Cushion

1. Unbuckle the waist belts from the crotch belts and pull them out from seat cushion.
2. Detach the velcro (a).
3. Detach the snaps (b) and unhook the clasps (c) on each side.
4. Unfasten the zippers underneath the seat cushions.

Attaching the Seat Cushion

Reverse the procedures for **Removing**. After attaching, make sure all snaps and clasps are fastened correctly.

Using the Basket

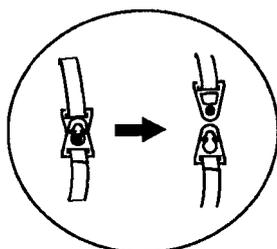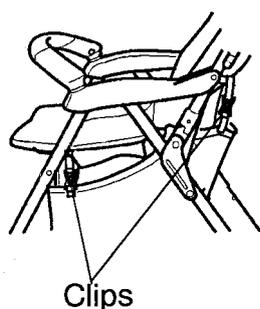

CAUTION

Do not place more than 12 lbs. in the basket. Remove all items from the basket before folding the stroller.

Removing


Unfasten clips on front and side of basket.

Attaching

Reverse the procedures for **Removing**.

Using the Stroller Pack


Can be used on either side of the handle (left or right).

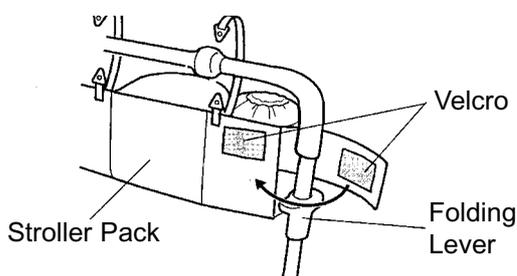

1. Wrap the side velcro straps tightly around the handle tube above the Folding Lever.
2. Wrap the straps over the handle top and fasten the clips together.

CAUTION

To avoid burns, do not put bottles/cups with hot liquids in the stroller pack. Do not place more than 2 lbs. in the stroller pack. Remove bottles before folding the stroller.

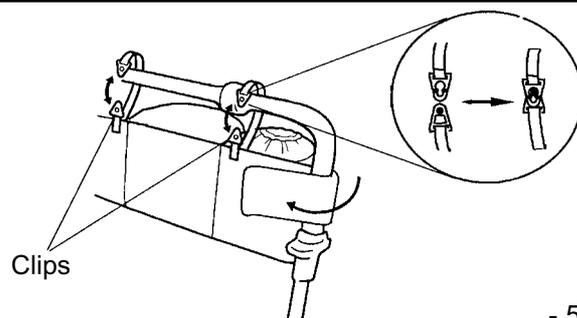

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call customer service for further instruction.

CANOPY, SEAT BELT, FIXED SEAT BASE, STROLLER PACK AND BASKET

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry.

Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

SWIVEL WHEELS



After prolonged normal use, the wheels of your stroller may not swivel as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, test the swivel action to determine whether lubrication is necessary. Using compressed air* aimed at point (a) and (b), blow dirt from the swivel mechanisms. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.

ADDING LUBRICANT

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add a small amount of lubricant (silicone*) to the swivel shaft.

Do not use cooking oil or WD-40 because oil attracts dust and would hinder the movement rather than improve it.

*Compressed air and silicone spray are available in varying size cans at most hardware stores.

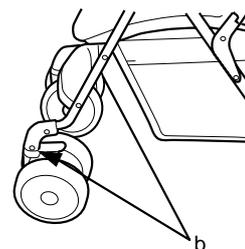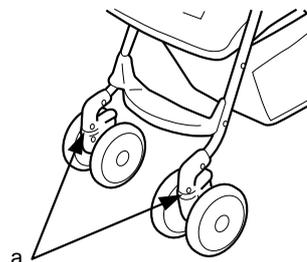

Trouble Shooting

STROLLER WON'T FOLD


- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Make sure the seat back is in the upright position.
- Remove your player from back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean wheels and lubricate if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

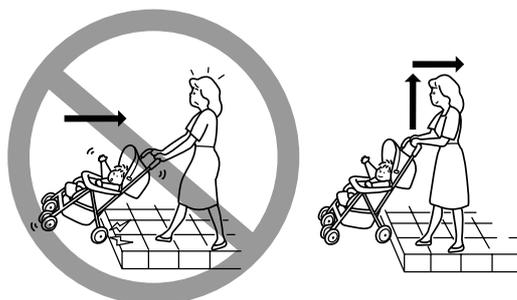

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%

Form

Twin Savvy™ 7030 Series

Acoustic Canopy Patent Pending



If you would like to place an order for the following parts, please fill out the form below and return it to the following address:

~~COMBI International Corporation
Attn: Customer Service Department
199 Easy Street
Carol Stream, IL 60188~~

or ~~Fax this completed form to us at
630-871-0606~~

IMPORTANT: *We must have this information to process your order:*

Model Number: **7030** - _____ Color & Pattern of Fabric: _____

Parts List for the Twin Savvy™ (7030 Series) only.

	Price	Quantity	Total
1. Canopy (Right side when facing the front of stroller)	\$ 30.00		
2. Canopy (Left side when facing the front of stroller)	30.00		
3. Basket	20.00		
4. Seat Cushion	45.00		
5. Guardrail	15.00		
6. Carrying Strap	12.00		
7. Stroller Pack	15.00		
8. Folding Latch	5.00		
9. Acoustic Canopy Speaker Set (Includes two sets of speakers and the adapter)	20.00		
If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.		Amount of Order	
Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.		Sales Tax (7-25%) (IL residents only)	
		Total	

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

Charge to my credit card:

VISA

MASTERCARD

AMERICAN EXPRESS

DISCOVER

Card Number

Expiration Date

-

Cardholder's Signature

Check enclosed

9/5/2003