

Combi

Combi IV 7735 Series Instruction Manual

 
Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference.

Note: Illustrations are only representative and not actual. Attach copy of sales receipt..


Date Purchased: _____ Model Number: 7735 - _____ Color _____

Located near the rear right leg.


Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Consumer Affairs at 1-800-992-6624.

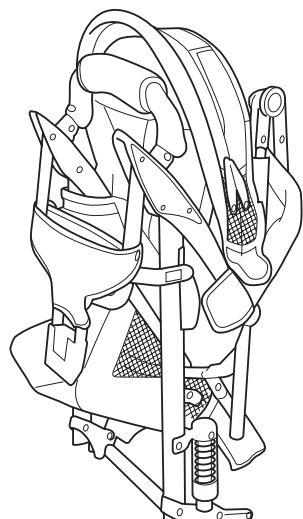


Main Body

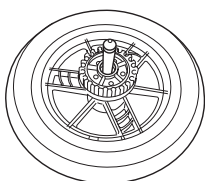 


Rear Wheel x2

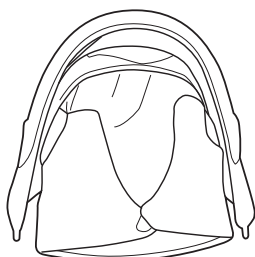 

Canopy

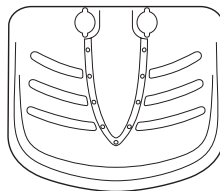 

Footrest x1

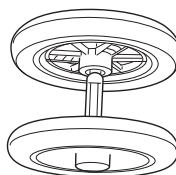 


Front Wheel x1




Parent Tray x1



 Kid's Tray



Combi Centre Connectors (x2)

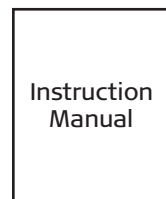 

Instruction Manual

Name of Parts

Infant Car/Seat Carrier Locks

Crotch Belt

Handle Grip

Parent Tray

Extendable Visor

Handle Adjuster

Folding Lever

Canopy Lever

 
5-point Harness

Armrest

Kid's Tray


Seat Cushion

Footrest

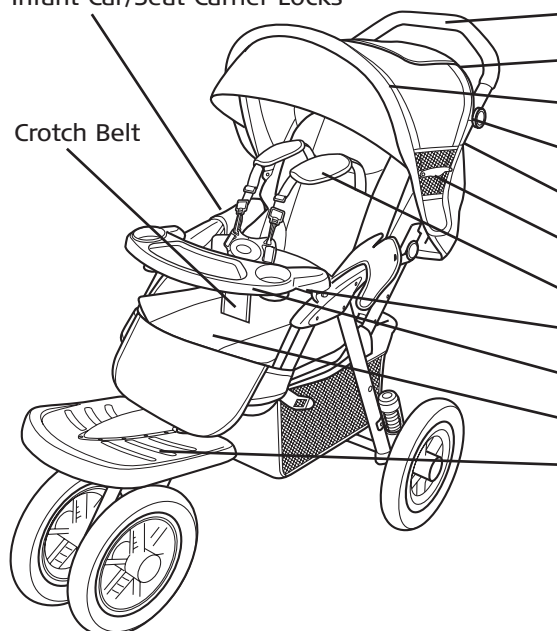

Folding Latch

 
Brake Lever

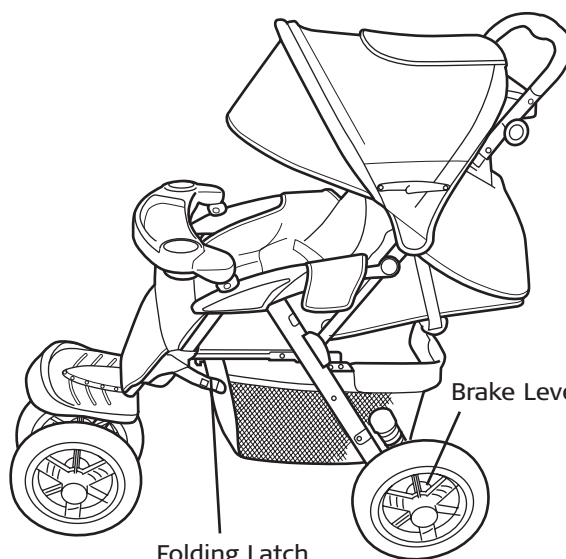



 **WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.**


ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.

In the event of damage or problems, discontinue use and contact Combi Consumer Affairs: 1-800-99-Combi.


 **AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE 5-POINT HARNESS SYSTEM.**


 **DO NOT LIFT AND CARRY** the stroller while occupied. The stroller may fold.


 Do not allow your child to stand in or on the stroller.


 Never carry more than one child in stroller. Do not allow a child to ride or sit on areas of the stroller other than seat.


 **NEVER LEAVE CHILD UNATTENDED.**


 Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.


 Do not hang items on the handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.


 Always engage both brakes when parking the stroller.


 Do not allow children to lean over sides of stroller. It may become unbalanced and tip over.


 Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition. Do not load more than 10 lbs. (4.5kg) in either basket.


 Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.


 When Combi Centre ST or DX infant seat is attached, **ALWAYS** ensure it is secure by pulling up on the handle.


 **ALWAYS** secure your child with the infant carriers 5-point harness before using it with the stroller.


 The guardrail **MUST** be attached to the stroller before attaching the infant carrier.


 To ensure your child's safety, please refer to the Combi Centre ST or DX instruction manuals before using it with this stroller.

 If unable to securely attach the Combi Centre ST or DX to your stroller, discontinue use and contact Consumer Affairs.

 **DO NOT** carry stroller by using the Combi Centre ST or DX infant car seat handle.

 **TIPPING HAZARD: DO NOT** place weight on rear of infant seat while attached to the stroller. This could cause the stroller to become unbalanced and tip over.

 
 This stroller is designed to be pushed at a normal walking speed. This is not a jogging stroller.

 Child may slip into leg openings and strangle. Never use in reclined carriage position unless the permanently attached safety cover is used.

Use only the Combi Centre ST or DX infant carrier with this stroller.

Total Maximum weight of child MUST not exceed 45 lbs. (20 kg).

Opening the Stroller

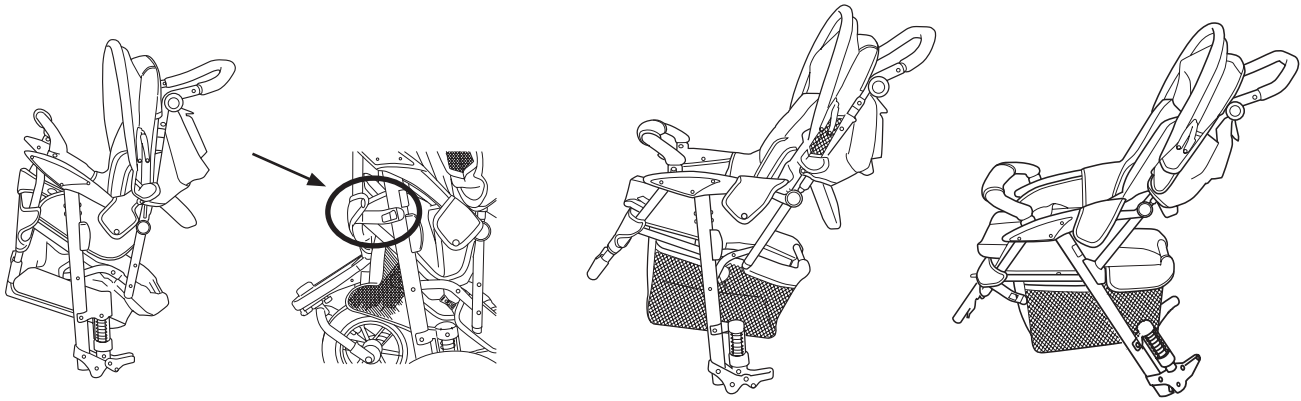

1. Before opening, fully extend the handle by pushing handle adjuster buttons and rotating the handle to upright position.
2. Pull the lock lever out to release the stroller.
3. Lift the handle and snap the stroller away from you. It will open and automatically lock into position.

Front Wheel and Footrest Assembly

1. Lean stroller back and slide the footrest onto the two front stroller legs (figure A) until both upper pins snap in place (figure B). Pull down on footrest to ensure it is secure.
2. With footrest in place, slide wheels onto the two front stroller legs until both lower pins snap in place (figure C). Pull down on wheel to ensure it is secure.


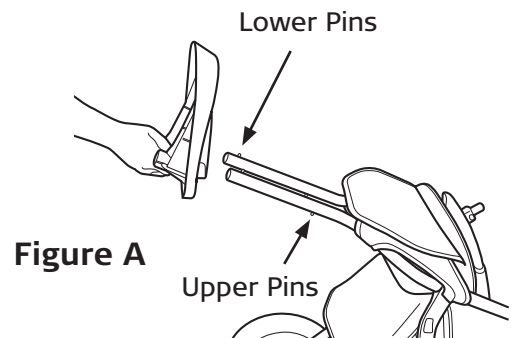 


Figure A

Removing the front wheel and footrest:

1. Press in the two lower pins that secure the front wheel while sliding the wheel off of the stroller leg (figure D).
2. Press in the two upper pins holding the footrest while sliding the footrest off of the stroller leg (figure E).

 Figure B

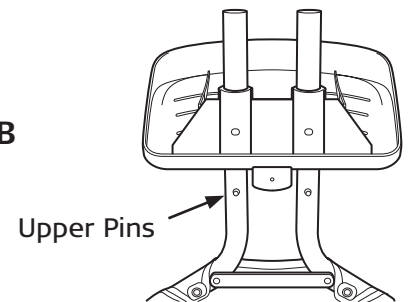

Upper Pins

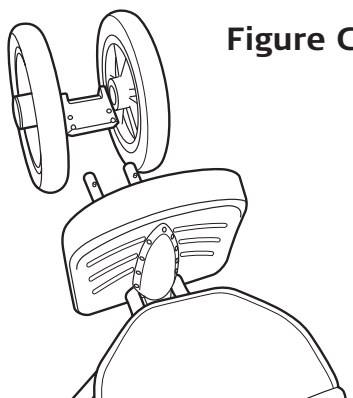 


Figure C

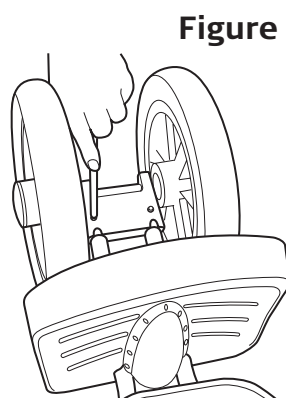 


Figure D

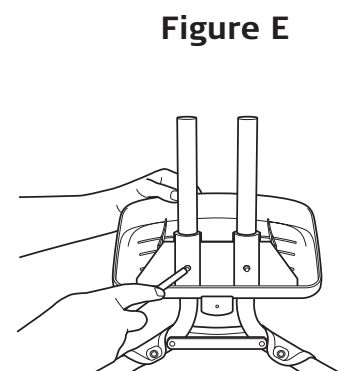 


Figure E

Rear Wheel Assembly

1. Insert wheel into rear axle (figure A) until it clicks into place. Pull wheel out to ensure it is secure.
2. Repeat this step with the opposite side.

Removing the Rear Wheels

Press the release lever as shown in Figure (B) while pulling the rear wheel away from the stroller.

Figure A


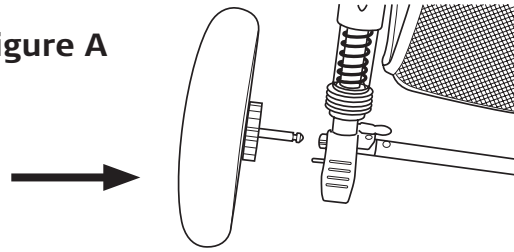 


Figure B

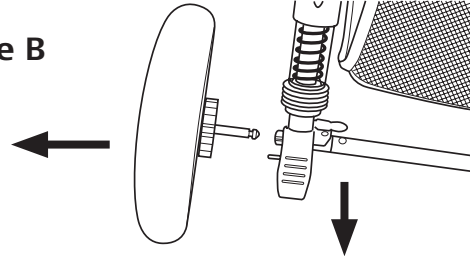 

CAUTION

 
Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

Attaching the Canopy


1. Ensure the canopy is facing the proper direction.
2. Fully insert both sides of the canopy (male) into each side of canopy holders (female).
3. Attach the velcro located on each side of the canopy around the stroller handle.

Removing the Canopy

Pull the velcro apart, squeeze the bottom of the canopy holder (male) and pull the canopy off.

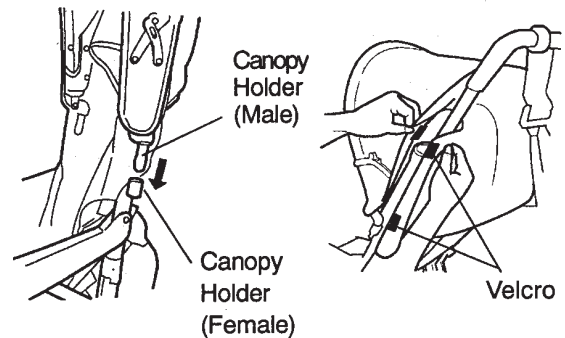

Attaching the Kid's Tray

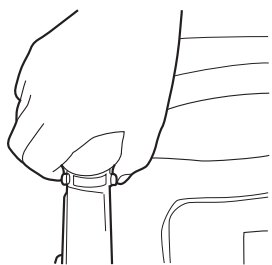 

Attaching the Kid's Tray

 
Push the Kid's Tray into the guardrail posts on the armrest until they lock in place. Check to make sure each side is firmly attached.

Removing the Kid's Tray

Press the buttons on each side of the armrest while pulling the Kid's Tray away.


! WARNING

Pull on each side of the Guardrail to make sure that it is completely attached. Do not lift the stroller by the Guardrail.

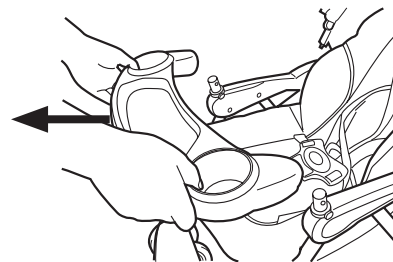

Attaching the Parent Tray

 Holding the Parent Tray with the center compartment facing toward you, align the tongue from both sides of the Parent Tray to the groove on the handle, located opposite the handle adjuster buttons. Slide Parent Tray down until it clicks into place and then pull up on it to be sure it is secure.

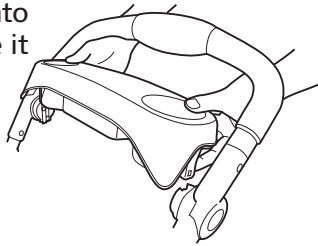

! WARNING

TO AVOID BURNS, never place hot liquids in the Parent Tray. To prevent tipping, DO NOT place more than 3 lbs. on the Parent Tray.

Removing the Parent Tray

Locate the tabs underneath the Parent Tray, on each side of the tray. While pulling the tab out toward the adjuster button, push the Parent Tray upward.

 
Using the Rear Brakes

CAUTION


Push the stroller forward to ensure that the brakes are properly engaged.

To lock brakes, push both brake levers DOWN.

To unlock brakes, push both brake levers UP.

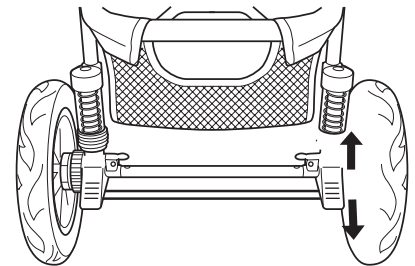

Using the Reclining Backrest

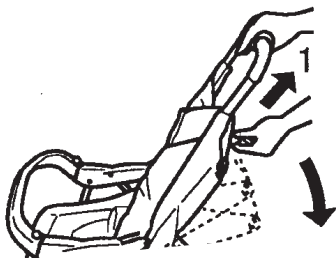 

1. Press the lever at the top of the seat to the left.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.

! WARNING

Never use seat in reclined position unless the permanently attached safety cover is used.

CAUTION

 
 
Be careful when reclining the backrest while your baby is in the stroller to prevent abrupt changes in seating position.

Using and Adjusting the 5-point Harness

CAUTION

Avoid serious injury from falling or sliding out. Always use harness.

1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

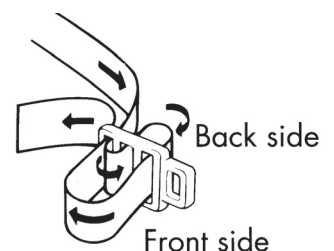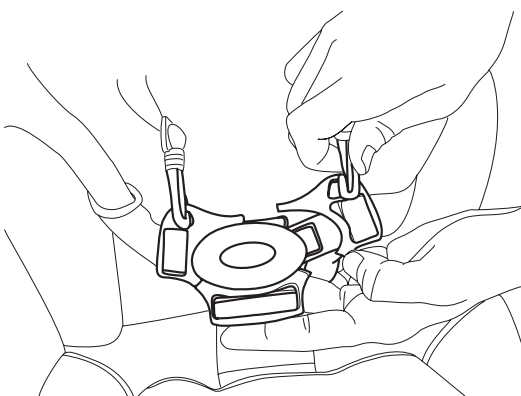

Removing/Attaching the Seat Cushion

CAUTION

If seat cushion is ripped or torn, do not use. Do not use the stroller without the seat cushion.

Removing

1. Unbuckle the 5-point harness and pull all the straps through the seat cushion.
2. Grasp the seat cushion at the top and unfasten from the velcro.


Attaching

1. Pass the 5-point harness straps through the appropriate locations in the seat cushion.
2. Fasten the velcro.

Folding the Stroller

1. Raise the backrest to the upright position.
2. Fold the canopy by lifting the canopy levers.
3. Lift up and hold the Folding Levers located on each side near the top of the handle as shown in the Figure (A). Then, tilt the stroller backward until it starts to fold.
4. Grasp the guardrail and handle in opposite hands and pull together.
5. Engage the folding latch on the side of the stroller as shown in the Figure (B).
6. Rotate handle to fold position as shown in the Figure (C).

 Figure A

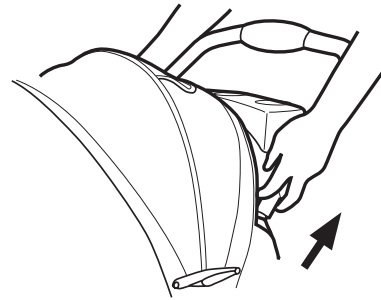

Folding Levers are located below the handle adjuster buttons on each side of the handle.

Figure B



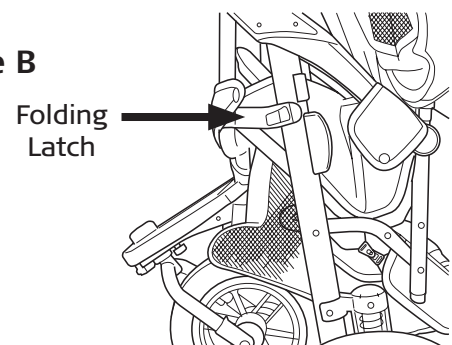 


Figure C

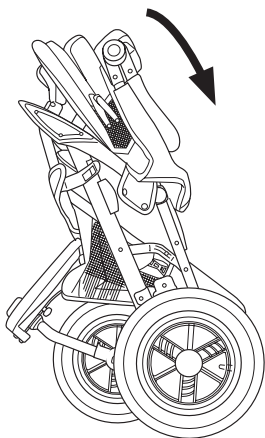 

Using the Safety Cover (Boot)

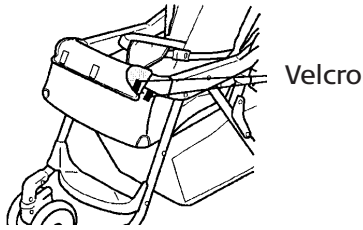 

WARNING

Child may slip into leg openings and strangle. Never use in reclined carriage position(s) unless safety cover (boot) is securely fastened.

CAUTION

Before folding the stroller, unfasten and store the safety cover (boot) under the seat. The stroller will not fold with it attached.

Installing the Safety Cover (Boot)

 
1. Lift the seat cushion and pull safety cover (boot) out.
2. Place the safety cover (boot) over the guardrail and secure it with the velcro.


Travel System


WARNINGS


NOTE:


Make sure you use the Combi Centre Connectors provided with the stroller.

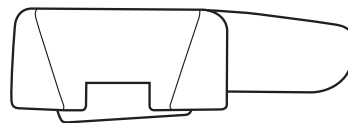


 When the Combi Centre Infant Car Seat/Carrier is in the stroller, always lock into the Combi Centre Connectors.

 Discontinue use if the Combi Centre Connectors are damaged.

 The Kids Tray must be attached when attaching the Combi Centre Infant Car Seat / Carrier.

 If unable to securely attach Combi's Centre Infant Car Seat/Carrier using the Combi Centre Connectors, discontinue use and contact Combi Consumer Affairs.

 Do not carry stroller by using Combi Centre Infant Car Seat/Carrier handle.

 
 
 
 
Using the Travel System

CAUTION


Pull on each Combi Centre Connector to ensure they are secure.

ATTACHING the Combi Centre Connectors and the Combi Centre Car Seat.


1. Undo the Velcro armpad and lay it across the stroller seat cushion.
2. Snap on the Combi Centre Connectors to the armrail. Make sure the Combi Centre Connectors are in the correct position with the slotted groove facing in. Pull up on the Connectors to ensure they are locked.
3. Recline the backrest to the middle or lower position.
4. Fold back the canopy and align the Combi Centre Car Seat with the Connectors. Be sure the car seat is facing the correct direction with the back facing the snack tray. Push the car seat down into the connectors until you hear both sides lock into the Connectors.
5. Lift up on the Combi Centre Car Seat to ensure that it is securely attached to the stroller.

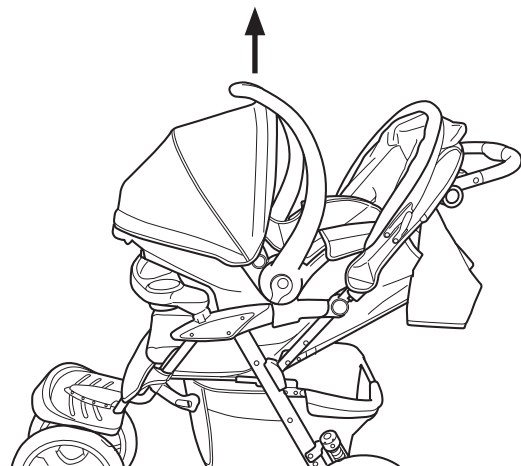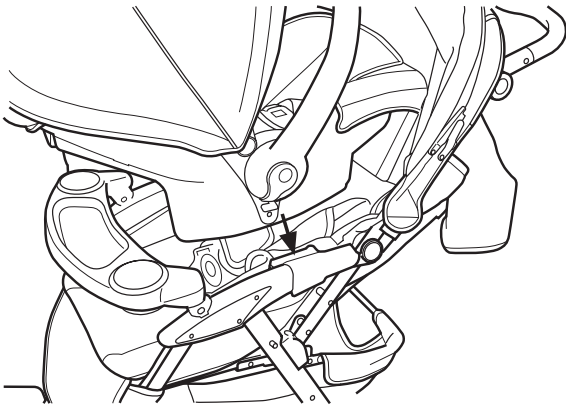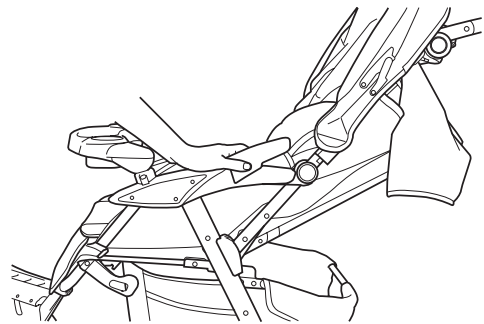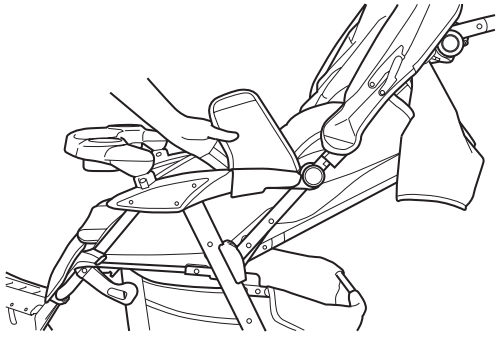

 Removing the Combi Centre Car Seat from the Stroller

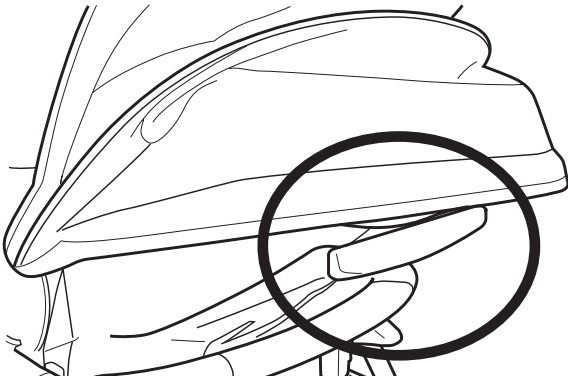

 1. Locate the release lever and pull upward to unlock the Combi Centre Car Seat from the Connectors on the Stroller.

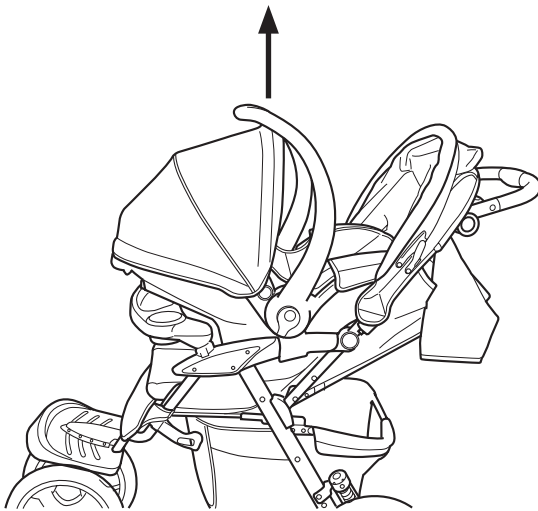

2. While pulling on the release lever, pull the Combi Centre Car Seat up using the car seat handle until both sides release from the stroller Connectors.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call Consumer Affairs for further instruction.

CANOPY, SEAT BELT, FIXED BASE SEAT, TRAVEL BAG, STROLLER PACK AND BASKET

Hand wash with a soft brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry. Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

 
WHEEL ASSEMBLIES

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing the release button and wiping off mud and dirt. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add silicone* to the wheel assemblies in small amounts.

Do not use lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available in varying size cans at most hardware stores.

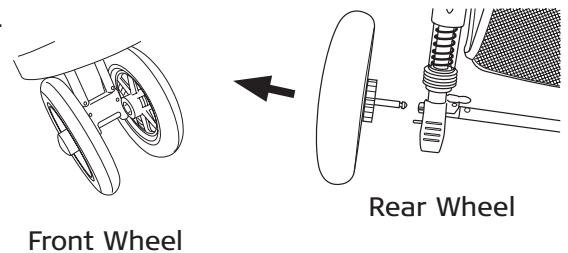

Trouble Shooting

STROLLER WILL NOT FOLD

- Check to see that the attachment strap is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.
- Make sure the seat back is in the upright position.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

 
- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheel clears.

DIFFICULT TO GET DOWN CURBS

- Turn stroller around, bringing rear wheels toward the edge of the curb. Gently lower rear wheels onto the surface below. Once the rear wheels have landed, guide the front portion of the stroller, using the armrest as support.

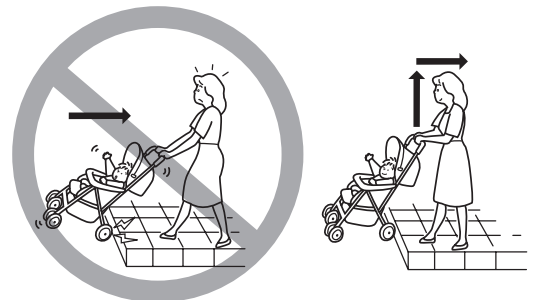

Note: Illustrations are for reference only and may not represent the actual product.

LIMITED WARRANTY

1. Combi Juvenile Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free of defect in materials and workmanship for a period of one (1) year from date of purchase. Warranty is valid for products purchased and used in the U.S. only, and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt in case of return for warranty service is necessary.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service call 1-803-548-6633. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by other than an authorized Combi repair center or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

