Stadium-Seating Tandem Stroller

Owner's Manual (Model 01-068/668)

Read all instructions BEFORE assembly and USE of this stroller. KEEP INSTRUCTIONS FOR FUTURE USE.

If you are missing parts or have any questions about this stroller, contact us first!

Contact our Consumer Relations Department at www.djgusa.com and click on "contact us", or FAX 24 hours a day at 1-800-207-8182, or call 1-800-544-1108 Mon. thru Thur. 7 a.m. to 6 p.m. and Fri. 7 a.m. to 4:30 p.m.

You can also order parts by writing to the address below. Include the product model number, color and a brief description of the part.

Dorel Juvenile Group, Inc. Consumer Relations P.O. Box 2609 Columbus, IN 47202-2609 USA www.djgusa.com



Thank You!

Thank you for purchasing our Stroller, the best choice on the market for value and quality. For proper assembly and safe use of this product, please read and follow these instructions carefully.

Table of Contents

Warnings:	•
Parts list:	Page 3
Assembly:P	age 4 - 6
To Unfold:	Page 4
Install Rear Wheels:	Page 4
Install Front Wheels:	Page 4
Install Front Seat:	Page 5
Install Canopies	Page 5
Install Trays:	Page 5
Use:Pa	age 6 -10
Restraint System:	. Page 6

Recline Seats:Page	e 6
Using Rear Seat as Carriage:Page	
To Use Front Footrest:Page	
Using Brakes:Page	
To Use Swivel Locks:Page	e 8
To Attach Car Seats:Page	e 9
To Fold:Page	10
Remove Pad For Washing:Page	10
Replace Pad After Washing:	11
Warranty:	11
Order Replacement Parts:Page	12

WARNINGS

A WARNING:

Never leave child unattended. Always keep child in view when in stroller. **Please read the following and keep for future reference:**

A WARNINGS:

Avoid serious injury from falling or sliding out. **Always** use seat belt. Check frequently to make sure it is secure.

This stroller is for use by one (1) child in each seating area only.

This stroller is for use with children up to 40 pounds (18 kg.)

Remove clear protective wrapping before using stroller.

Before using stroller, always make sure straps holding seat to frame are secure. (See also "Remove pad for machine washing" section for adjustment instruction). When folding, unfolding or adjusting the stroller, keep child away from moving parts.

Always make sure stroller is **fully open and locked** before using.

Always use the brakes when stroller is stopped.

For use as a stroller only in the upright seating position. It is recommended that the child be able to sit up unassisted.

Parent tray is not designed to hold more than 5 lbs. If weight is exceeded, hazardous conditions may exist.

Child may slip into leg openings and strangle. Never use rear seat in reclined carriage position unless the footrest is completely raised and snapped.

DO NOT:

- use stroller on stairs or escalators.
- allow children to play with or hang onto the stroller.
- allow children to climb into the stroller unassisted.
 Stroller may tip over and injure child.

Basket is not designed to carry more than 20 pounds (9.5 kg.) If weight is exceeded, hazardous conditions may exist.

Do not place or hang parcels, bags or accessories on any other part of the stroller, including the handle or canopy. The stroller may tip over or the canopy may collapse.

Wash pad in cold water. Clean frame with house-hold soap or mild detergent.

Periodically check for loose screws, worn parts, torn material or loose stitching. Tighten and replace parts as needed.

Parts List

NOTE: Please check that you have all the parts shown BEFORE assembling your Stroller.

Parts List:

- A. Frame
- **B. 2 Single Rear Wheels**
- C. 4 Washers (Hardware Bag)
- D. 2 Cotter Pins (Hardware Bag)
- E. 2 Rear Hub Caps
- F. 1 Rear Axle
- G. 2 Dual Front Wheels

- H. Rear Canopy
- I. Parent Tray
- J. Rear Child Tray
- K. Front Canopy
- L. Front Child Tray
- **M.Front Seat**



Assembly Instructions

To Unfold:



Place stroller frame on end as shown.



Grasp handle, pull back and up sharply until frame opens and locks with a click.



View of unfolded stroller.





Push axle assembly onto frame until buttons snap into holes on assembly. Make sure both sides are on completely.



Remove protective packing from axle ends and discard. Remove Cotter pins and washers from axle and set aside. Slide 1 washer onto axle so washer is against the brake. Put one of the single wheels onto axle with hub to the inside. Slide on another washer. Insert straight side of Cotter pin through hole in the axle. Align pegs in wheel cover with holes in wheel and snap on. Repeat for other side.

To Install Front Wheels:



Align front wheel assembly socket with front frame tube as shown.



Push the wheel assembly onto frame tube until it clicks into position. Repeat for other front wheel.



View of assembled front wheels.



To Install Front Seat:



Face seat forward and align sockets on seat with brackets on frame. Push down until seat locks with a click.



To attach seat in rear-facing position, press red buttons on sides of seat to release locks, lift seat off brackets.



Rotate seat 180 degrees, align sockets with brackets and push down until seat locks with a click.

5 To Install Canopies:



Front Canopy: Align canopy tabs with sockets in seat sides, push down until locked. Note: Vent in canopy goes toward back of seat as shown.



Rear Canopy: The rear canopy comes partially installed over frame. To complete, canopy hinge brackets must be attached to stroller frame.



Snap canopy hinge brackets onto frame just below "armrests", aligning hole in brackets over pins on frame as shown.

6 To Install Trays:



Parent Tray: From front of handle, insert tray between handle frame.



Align holes in tray brackets with pins on each side of frame as shown.



Gently pivot tray down until brackets snap around handle frame.

To Install Trays: (continued)



Front seat Tray: Align tubes on tray ends with holes on both sides of seat. Push in until tray locks with a snap. To remove, push both red buttons next to tray, pull out.



Rear seat Tray: Slide tabs on tray brackets into slots on rear seat "armrests" as shown. Push down until tray locks with a snap.



To remove, grasp tray as shown, press tabs with thumbs to release locks, pull up and out.

To Use



To unlock buckle, press in on center button and pull harness out from each side. To buckle, push each side of harness back into buckle until each clicks in place. Belt should fit snugly on child.



6

Adjusting Harness Straps:





To adjust waist strap length:

To shorten, pull out bottom loop (2), then pull on strap end. To lengthen, pull out top loop (3), then pull out on buckle.

8 Using Restraint System:

9 To Recline Seat Backs:



Front Seat: Squeeze release bar on back of seat as shown, tilt seat back to recline position. To return to upright, squeeze release bar, pull to upright.



Rear Seat: To lower seat back, squeeze harness release on back of seat pulling release back while moving seat back to the desired position.



To raise seat back, squeeze harness release and push release up towards seat back while moving seat to the desired position.

10 To Use Rear Seat as carriage:



Recline seat back. Unsnap seat side from frame on both sides as shown.



Lift flap beneath seat front, detach "wings" from underside of flap and fold up.



Place "wing" between frame and seat side and attach to snap where seat side had been attached previously as shown.



Attach seat side to "wing" with two snaps as shown. Repeat for other side.



When complete, carriage should appear as above.

A WARNING: Child may slip into leg openings and strangle. Never use rear seat in reclined carriage position unless the footrest is completely raised and snapped.



To raise footrest, lift up until you hear a "click." To lower, press in on red button, lift slightly and lower footrest.

11 To Use Front Footrest: **12** To Use Rear Brakes:



To lock brake: With stroller stopped, press down on both rear brake levers with foot.



To unlock brake, lift up levers with toe.

13 To Use Swivel Locks:



With front wheels straight, press down on front wheel levers between each set of wheels to lock.



To unlock, pull levers up.

14 To Attach Car Seats:

If you have an Eddie Bauer[®], Cosco[®] or Safety 1st[®] 02-600 or 22-600 series infant car seat(s), the following instructions explain how to attach the car seat(s) to the stroller. Complete instructions for using the car seats are located on the back of the car seat.



Rear seat: Remove mounting bar from between frame beneath front seat. (Grasp red handle and push toward center of bar to release from frame.)



Place mounting bar into the two holes on the inside of stroller arms. Put one end in first, the pull in on the other end to put into second hole.



With back of stroller seat in the reclined position, pull up on the 1-hand release handle on back of car seat and place seat **rear facing** into mounting bar firmly (listen for locking click).



Front seat: Place seat back in upright position. Remove mounting bar from back of front seat frame. (Grasp one end and pull back to release bar from seat frame).



Place mounting bar into the two holes on the inside of seat back as shown. Put one end in first, then, compress bar to place other end into second hole. Place seat in upright position.



Pull up on the 1-hand release handle on back of car seat and place car seat **rear facing** into mounting bar firmly (listen for locking click) until fully locked.

Note: When using two car seats,

- 1. The front stroller seat must be forward-facing.
- 2. Both car seats must be rear-facing.
- 3. Both front and rear trays must be
- in place when car seats are attached.
- 4. Make sure both car seats are locked in place before placing child in car seat.

15 To Remove Car Seats:



To remove each car seat, pull up on the 1-hand release handle and lift car seat out.

WARNING: To avoid serious injury

- Always use tray when car seat is attached.
- Always attach car seat facing to the rear of the stroller.
- Always use the restraint system.
- Place mounting bar in storage position when not in use.

16 To Fold:



Fold rear canopy back to handle. With brakes on, push down on handle to raise front wheels as shown.



Grip red release handle, slide to left and squeeze to release frame lock.



Weight of stroller front will cause frame to fold.



Rear seat side boards must be unsnapped from frame and folded in when folding stroller.



Front wheels may need to be rotated 180° to make latching frame easier.



Attach lock strap on frame side.

17 To Remove Pads for Washing:



Unsnap buckle and feed buckle and strap through hole in seat pad.



Unthread shoulder strap adjusters to enable straps to be pulled back through seat back pad.



Pull pad free from fastening strip on seat back and remove, pulling shoulder straps through holes in pad. Pad should now be ready for washing.

18 To Replace Pads after Washing:



Set pad in stroller as originally positioned. Feed crotch strap and buckle through hole in seat pad.



Thread shoulder straps and adjusters through seat back pad. Reattach pad to seat with attachment strips.



Re-thread shoulder straps through strap adjusters and adjust as per page 6. Re-installation is complete.

One Year Limited Warranty

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows: This product is warranted against defective materials or workmanship for one year from the date of original purchase. An original receipt is required to validate your warranty. DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may contact us at www.djgusa.com and click on "contact us", fax us at 1-800-207-8182 24 hours a day, write to DJG, Consumer Relations Department, P O Box 2609, Columbus, IN 47201-2609, or call 1-800-544-1108 from 7:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 7:00 a.m. to 4:30 p.m. on Friday. Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations:

This warranty does not include damages which arise from misuse or abuse of this product.

Limitation of Damages:

The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

Limitation of warranties and other warranty terms and state law rights:

Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.

Replacement Parts Order Form

Complete the form below. Your model number with color code and manufacturer date code MUST be included on the form to ensure proper replacement parts. Your model number with color code and the date code can be found on a sticker on the stroller frame. Payment in U.S. dollars must accompany your order. Choose parts needed from the list below. You can cross reference your parts with the illustration on pages 2 and 3.

Return the form with payment to: Dorel Juvenile Group, Inc. Consumer Relations Department P.O. Box 2609 Columbus, IN 47202-2609 Fax orders to: 1-800-207-8182

Please make money orders payable to Dorel Juvenile Group, Inc. Fill in the area below to charge to Visa or Mastercard. We do not except personal checks or Discover Card. All outside of U.S. and Canada MUST use credit card. NOTE: If requested color is not available, simular color will be substituted.

	Replacement Parts List				
	Part QuantityCos	t Quantity Ordered	Total Cost		
	2 Single Wheels with Caps \$5.9	•			
We MUST have this	2 Dual Wheels\$4.5				
information to	Hardware Bag				
process your order:	(Axle, Cotter Pins))Х	= \$		
	(Cotter Pins, Washers)\$2.0)Х	= \$		
Model Number	Front Child Tray\$5.9				
(5 digits & 3 let- ters)	Rear Child Tray\$5.9	ЭХ	= \$		
1015)	Parent Tray\$5.9				
Manufacture Date	Front Seat Pad\$16.9				
(4 digit number)	Rear Seat Pad\$16.9				
	Front Canopy\$10.9	ЭХ	= \$		
	Rear Canopy\$11.9				
	Front Car Seat Mounting Bar\$5.0				
	Rear Car Seat Mounting Bar\$5.0				
	Instructions\$0.0)Х	= \$		
	No shipping and handling on instructions for quantit Add \$.50 for each instruction over 6, then add appli		Total \$		
	For Credit Card Use		Sales Tax \$		
	For Credit Card Use	(Indiana, Georgia, Cal Massachusetts reside	ifornia, Arkansas, and ents add applicable sales tax)		
Visa Mas (circle on	stercard Card Exp. Date:	 Add Shipping ar 	nd Handling		
N	c,	(Up to \$25.00	\$5.95		
		- \$25.01 to \$50.00	\$6.95		
Card Number:		\$50.01 to \$75.00	\$50.01 to \$75.00 \$8.95		
		\$75.01 to \$100.00.	\$9.95		
Signature		_/ \$100.01 to \$150.00	\$10.95		
		\$150.01 to \$200.00	\$11.95		
Ship To:		\$200.01 and up	\$13.95)		
Name:			\$		
Address:			nental USA \$ <u>10.00</u>		
City:			Grand Total \$		
State/Province:					
Telephone: ()	Email Address:				