

Congratulations on your purchase of a **Graco® stroller!**

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco[®] stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

Please save your Owner's Manual for future use.

Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our Customer Service Department at 1-800-345-4109 or visit our Internet website, www.gracobaby.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the model and serial numbers ready so your call may be processed quickly and efficiently.

WARNING



Never leave child unattended. Always keep your child in view.




Never use stroller on stairs or escalators You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.



Use of the stroller with a child weighing more than 40 lbs. (18.1 kg) will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.

Avoid serious injury from falling or sliding out. Always use seat belt.

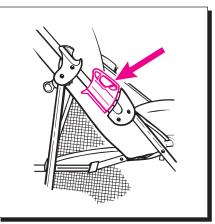

Be certain the stroller is fully erected and latched before allowing your child near the stroller.



Never place child in the stroller with head toward front of the stroller.



DO NOT place purses, shopping bags, parcels and accessory items on handle or canopy. They may fall on the child or change the balance of the stroller and make it unstable.

 
TO PREVENT A HAZARDOUS CONDITION, do not place more than 10 lbs. (4.5 kg) in the storage basket. DO NOT use storage basket as a child carrier. Do not place more than 2 lbs. (0.9 kg) in the storage pocket.

DO NOT ALLOW YOUR CHILD to stand on the basket. It may collapse and cause injury.

NEVER ALLOW YOUR STROLLER to be used as a toy.

STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.

DISCONTINUE USING YOUR STROLLER should it become damaged or broken.



Failure to follow these warnings and the assembly instructions could result in serious injury or death.




DO NOT lift the stroller by the arm bar or child's tray.



Avoid strangulation. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

FOR ADDITIONAL IMPORTANT **INFORMATION**, please see the

Helpful Hints and Care and Maintenance sections in these instructions.

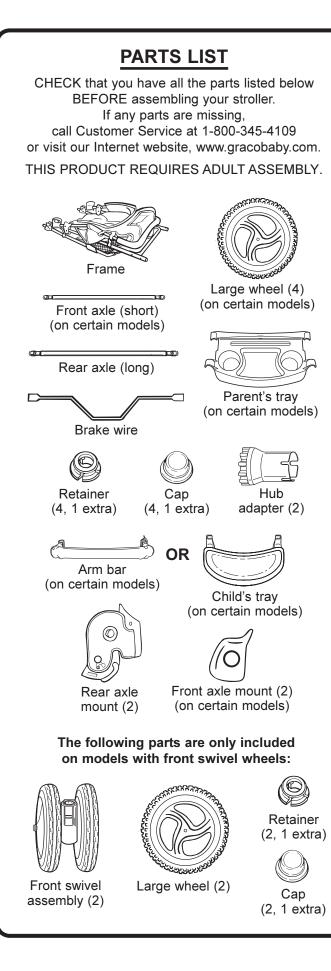

To Unpack Stroller

Step 1.

Flatten stroller carton to protect floor.

Step 2.

Open stroller on carton until locking latches on both sides are locked as shown.


Step 3.

Push down on the footrest until it snaps on the bar under it.

To Assemble Rear Axle

Step 1.

Push rear axle mounts onto brake wire as shown. It is very important to insert the brake wire into the axle mounts correctly. If it is not, the brakes will not work properly.

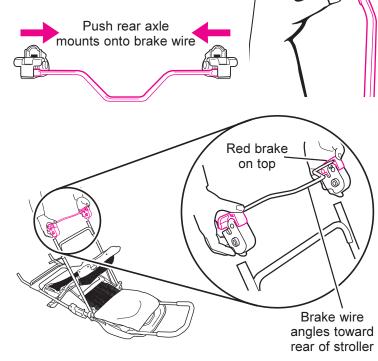

Step 2.

Turn stroller over as pictured above.

Step 3.

Position rear axle mount assembly and brake wire as shown. Push assembly onto rear legs until plastic tabs snap into the slots on the legs.

 
Step 4.

Pull **firmly** on each axle mount to be sure it is securely attached.

HINT: If the axle mounts do not snap on the legs, they may be facing the wrong way. Remove the axle mounts with brake wire and face them the other way.


Step 5.

Insert rear axle (longer axle) through holes in the rear axle mounts. It may be necessary to twist the axle mount slightly to get the axle through the holes.



To Assemble Rear Wheels

Place parts **in order** on rear axle as shown. If the hub adapter will not go against the rear axle mount, push the brake wire down and check to make sure the hub adapter is aligned in the wheel correctly.

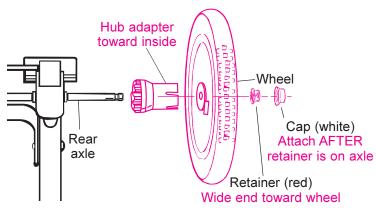


Be sure cap is snapped securely over red retainer.

To Assemble Front Axle*

Step 1.

 
Put both front axle mounts on the frame. (The **pointed side** of the axle mount faces the rear of the stroller.)




Pointed

Step 2.

 Put the axle through the hole in the axle mount and frame. It may be necessary to twist the axle mount slightly to get the axle into the hole.



5

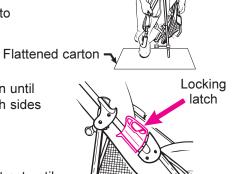


Brake

wire slot

To Assemble Front Wheels*

Place parts **in order** on front axle as shown. Push red retainer onto axle BEFORE attaching white cap. Repeat on other side.

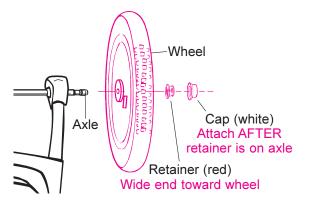


Be sure cap is snapped securely over red retainer.

To Assemble Front Swivel Wheels*

AWARNING

 To prevent serious injury or death from choking, remove and IMMEDIATELY discard the plastic end caps on the front leg pins.



Step 1.

Line up pin with a wheel assembly as shown.

 
Step 2.

Push wheel assembly onto pin until it snaps in place.

Step 3.

Repeat for other wheel assembly.

Pull firmly on each wheel assembly to be sure the wheel assemblies are securely attached.



* On certain models

To Unfold Stroller

Step 1.

Release storage latch located by the stroller handle and begin opening stroller.

Stora

Step 2.

Continue unfolding until both latches lock.

To Use Brakes

AWARNING Always apply brakes when parking stroller.

Push DOWN FIRMLY to park.

Check to make sure brake is on by trying to push the stroller.

Lift UP to stroll

To Adjust Back

Step 1.

Push in the two latches behind the seat to recline it.

Step 2.

To return seat to upright position, lift the seat back until both latches are locked.

AWARNING Fabric caught in the latches may prevent them from locking. When returning seat to upright position, do not allow fabric to be pinched in the latches.

9

AWARNING Avoid serious injury from falling or sliding out. Always use seat belt.

Your stroller will have either a three-point buckle or a double buckle seat belt. Follow the appropriate instructions below.

Three-Point Buckle Seat Belt:

Step 1.

Place crotch strap between child's legs. Snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

Push in on front of buckle to release.

Double Buckle Seat Belt:


Place crotch strap between legs and fasten both belt buckles together. Adjust belt at both buckles as needed to get a snug fit around your child.

Step 2.

Squeeze sides of buckles to release.

To Adjust Canopy

Push or pull canopy to desired position.

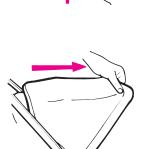

To Fold Stroller

Before folding the stroller, 1) fold the canopy and 2) lock the front swivels (on certain models).

Step 1.


Fully recline the seat back

Step 2.

Pull latches up to release and fold handle down.

Step 3.

Close completely and fasten the storage latch to the handle.

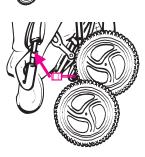


The following optional features are found only on certain models:


To Change to Swivel or Non-swivel Wheels*

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

 Before locking swivels, first push stroller forward a few feet to ensure the wheels are correctly positioned.




  
Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.

 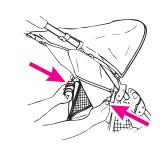












Step 2.

To Use Arm Bar or Child's Tray*

Your stroller may have either a front arm bar or child's tray. Follow the appropriate instructions below.

A WARNING

Always secure your child with the seat belt. The arm bar or child's tray is not a restraint device.

DO NOT lift the stroller by the arm bar or child's tray.

Use care when clamping the arm bar or child's tray on the stroller with a child in the stroller.

Arm Bar:

Step 1.

Clip the end of the arm bar without the plastic tab onto the stroller as shown.

Step 2.

Push on the other side of the arm bar as shown to lock the tab onto the other side tube.

Do not lean downward on the arm bar when it is fastened only at one end. This may damage the arm bar.


Step 3.

Open the arm bar by pulling the tab outward and away from the stroller. Hold the arm bar with your other hand while opening so the bar does not spring open.

The stroller may befolded and stored with the arm bar attached.

Child's Tray:

Snap the child's tray under the fold latch on both leg tubes as shown.

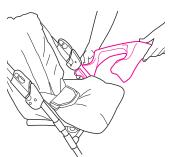

* On certain models

The following optional features are found only on certain models:

To Attach the Graco[®] Safety Seat^{*}

AWARNING Improper use of this stroller with a carrier may result in serious injury or death.

Do not use this stroller with carriers or safety seats other than Graco[®] Travel System models.

Read the manual provided with your Graco[®] Travel System Safety Seat before using the Travel System.

If you do not have the owner's manual for the Graco[®] Travel System Safety Seat, call Graco at 1-888-224-6549.

Make sure the stroller is fully assembled according to the preceding instructions, with the tray attached (the safety seat **CANNOT** be used with the arm bar).

Step 1.

If the stroller is folded, unfold it and RECLINE the stroller seat back to its lowest position.

Step 2.

Push down on the tray to be sure it is securely attached to the stroller.

Step 3.

Unbuckle the stroller seat belt, move the buckles all the way to the loose end of the seat belt webbing, and hang buckles outside of the stroller above the fold release latch.

Step 4.

If your child is already in the safety seat because you have been using it as a carrier, make sure child is secured with the harness.

AWARNING Always secure your child with the safety seat harness when using the safety seat in the stroller.

Step 5.

Move the safety seat handle into the carrying position.

Step 6.

Position the safety seat so that the mounting notches fit over the edge of the tray. Push down on safety seat until the attachment latch snaps onto the tray.



Step 7.

Slide stroller seat belt webbing through vehicle belt hooks on each side of the safety seat. Tighten stroller seat belt buckles against inside of safety seat.

Step 8.

Pull up on safety seat handle to be sure the safety seat is securely attached to the stroller.

To remove safety seat from the stroller, remove stroller seat belts from vehicle belt hooks, squeeze release handle at back of safety seat, and lift safety seat out of the stroller.

To Use Parent's Tray*

A WARNING To avoid burns, never put hot liquids in the parent's tray. To prevent tipping over, do not place more than 3 lbs. (1.4 kg) on the parent's tray.


Step 1.

Snap parent's tray to stroller handle as shown.

To Use Storage Pocket*

A WARNING To prevent a hazardous condition, do not place more than 2 lbs (0.9 kg) in the storage pocket.

A storage pocket is located behind the seat back.

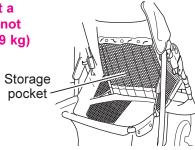

To Use Bottle Holders*

Two mesh pockets are provided in rear of basket for infant bottle storage.

HELPFUL HINTS

IF WHEEL SQUEAKS, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as illustrated.



WHEN USING YOUR STROLLER AT THE BEACH, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

CARE AND MAINTENANCE

TO CLEAN THE SEAT, remove the screws and plastic clasps and hand wash in warm water with a mild detergent. Drip dry only—seat contains plastic inserts. Replace seat on frame with screws and clasps when dry.

REMOVABLE SEAT PAD (if so equipped) may be machine washed in lukewarm water on delicate cycle and drip-dried. NO BLEACH.

FROM TIME TO TIME CHECK YOUR STROLLER for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco[®] replacement parts.

TO CLEAN STROLLER FRAME, use only household soap or detergent and warm water.NO BLEACH.

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

* On certain models

Replacement Parts

Instructions for ordering stroller parts:

Complete form below. Your stroller model number **MUST** be included on the form to ensure proper replacement parts. Your model number can be found on a sticker on the rear leg of your stroller. Payment must accompany your order.

Parts List:

Seat
Seat pad
Canopy
Large wheel*
Front swivel assembly*
Rear axle
Front axle*
Basket
Brake wire
Arm bar*
Child's tray*
Rear axle mount
Front axle mount*
Hub adapter
Storage latch
Parent's tray*
* On certain models only.

Price:** \$21.00 \$ 16.00 \$ 18.00 \$ 8.00 (each) \$ 16.00 \$ 7.00 \$ 7.00 \$ 16.00 \$ 5.00 \$ 12.00 \$13.00 \$ 5.00 \$ 5.00 \$ 5.00 \$ 5.00 \$ 12.00

** Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions, please call toll-free: **1-800-345-4109** or visit our Internet website, www.gracobaby.com.

Return the form below with payment to: GRACO CHILDREN'S PRODUCTS INC. CUSTOMER SERVICE DEPARTMENT P. O. BOX 100, MAIN STREET ELVERSON, PA 19520

Model Number	SHIP TO:
(Must be filled in) □Seat	Name
□ Seat pad □ Canopy □ Large wheel	Address
□ Front swivel assembly □ Rear axle	City, State, Zip
□Front axle □Basket □Brake wire	() Telephone
□ Arm bar □ Child's tray □ Rear axle mount □ Front axle mount	ICheck enclosed (payable to Graco Children's Products Inc.)
□ Hub adapter □ □ Storage latch □ Parent's tray Total:	ICharge to credit card: □Visa □MasterCard □Discover
Shipping & handling: <u>\$5.00</u>	Account #:
6% sales tax (PA only):	Expiration date:
Total amount due:	Signature: