

Horizon Inboard Models

Identification Record

PLEASE RECORD THE FOLLOWING INFORMATION:

1.	Engine Model and Horsepower		Engine Serial Number
2.	Transmission Model	Gear Ratio	Transmission Serial Number
3.	Propeller Number	Pitch	Diameter
4.	Hull Identification Number (HIN)		Purchase Date
5.	Boat Manufacturer	Boat Model	Length

Serial Numbers

The serial numbers are the manufacturer's keys to numerous engineering details which apply to your Mercury MerCruiser® power package. When contacting your Authorized Mercury MerCruiser Dealer about service, **always specify model and serial numbers.**



The description and specifications contained herein were in effect at the time this guide was approved for printing. Mercury Marine, whose policy is one of continuous improvement, reserves the right to discontinue models at any time, or to change specifications or designs, without notice and without incurring obligation.

Mercury Marine, Fond du Lac, Wisconsin, U.S.A.

Printed in U.S.A.

©2001, Mercury Marine

The following are registered trademarks of Brunswick Corporation: AutoBlend, Jet-Prop, Mariner, Merc, MerCathode, MerCruiser, Mercury, Mercury Marine, Quicksilver, RideGuide, Thruster and MMPP.

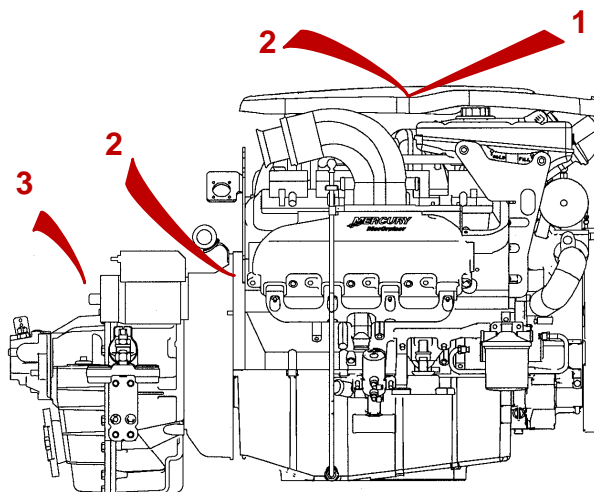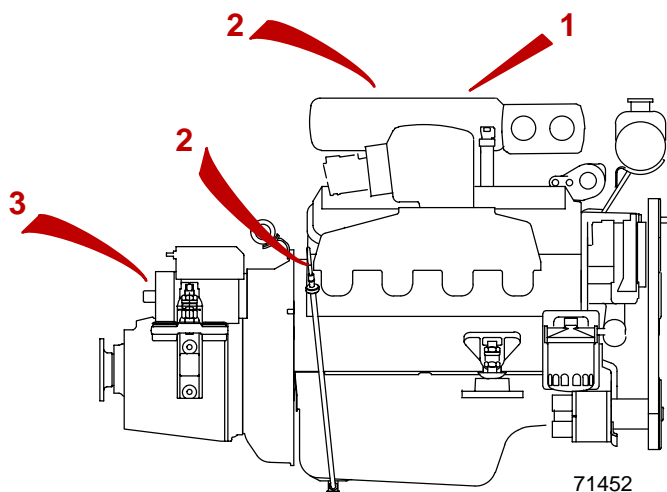

Welcome!

You have selected one of the finest marine power packages available. It incorporates numerous design features to assure operating ease and durability.

With proper care and maintenance, you will thoroughly enjoy using this product for many boating seasons. To ensure maximum performance and carefree use, we ask that you thoroughly read this manual.

The Operation, Maintenance and Warranty Manual contains specific instructions for using and maintaining your product. We suggest that this manual remain with the product for ready reference whenever you are on the water.

Thank you for purchasing one of our Mercury MerCruiser products. We sincerely hope your boating will be pleasant!

Consumer Affairs Department

Warranty Message

The product you have purchased comes with a **limited warranty** from Mercury Marine; the terms of the warranty are set forth in the *Warranty* Sections of this manual. The warranty statement contains a description of what is covered, what is not covered, the duration of coverage, how to best obtain warranty coverage, **important disclaimers and limitations of damages**, and other related information. Please review this important information.

IMPORTANT: This manual contains basic Operation, Maintenance and Warranty information for your Mercury MerCruiser power package. If you desire to perform some of the maintenance items on your own, you should obtain a copy of the Service Manual for your particular power package. Information for obtaining the Service Manual is located at the back of this manual.

Table of Contents

	Page
Identification Record	0
Serial Numbers	0
Welcome!	1
Warranty Information	4
Owner Warranty Registration	4
International Owner Registration	5
Mercury MerCruiser One Year Limited Warranty (Gasoline Fueled Products Only)	6
3 Year Limited Warranty Against Corrosion (Worldwide)	8
Read This Manual Thoroughly	11
General Information	12
Lanyard Stop Switch	12
Exhaust Emissions	13
Safe Boating Suggestions	15
Protecting People In The Water	16
High-Speed And High-Performance Boat Operation	17
Conditions Affecting Operation	17
Weight Distribution (Passengers And Gear) Inside The Boat	17
Bottom Of Boat	17
Propeller Selection	18
How Elevation And Climate Affect Performance	19
Important Information	20
Operation And Maintenance	20
Freezing Temperature Operation	21
Drain Plug and Bilge Pump	21
Attention Required After Submersion	21
Launching And Boat Operation Care	21
Stolen Power Package	22
Replacement Service Parts	22
Do-It-Yourself Maintenance Suggestions	23
Multiple EFI Engine Battery Precautions	24
Diagnosing EFI Problems	24
20-Hour Break-In Period	25
After Break-In Period	25
End of First Season Checkup	25
Operation	26
Instrumentation	26
Audio Warning System	27
Electrical System Overload Protection	29
Remote Controls	30
Specifications	35
Fuel Recommendations	35
Seacock Size Recommendation	36
Sea Strainer Recommendation	36
Crankcase Oil	36
Engine Specifications	37

Maintenance 38

Maintenance Aids	38
Fluid Capacities	38
Routine Maintenance	39
Scheduled Maintenance	40
Checking Fluid Levels	43
Changing Fluids	45
Changing Water Separating Fuel Filter	47
Cleaning Flame Arrestor and Related Components	49
Lubrication	51
Battery	53
Inspection And Maintenance	53

Cold Weather or Extended Storage 54

Power Package Lay Up	54
Draining Instructions	56
Flushing Cooling System	61
Battery Winter Storage	63
Power Package Recommissioning	63

Troubleshooting 64

Starter Motor Will Not Crank Engine, Or Cranks Slow	64
Engine RPM Decreases, Will Not Rise Above 2000 RPM	64
Engine Will Not Start, Or Is Hard To Start	65
Engine Runs Rough, Misses And/Or Backfires	65
Poor Performance	66
Excessive Engine Temperature	66
Low Engine Coolant Temperature	67
Low Engine Oil Pressure	66
Excessive Transmission Fluid Temperature or Slipping Transmission	67
Battery Will Not Come Up On Charge	68
Remote Control Operates Hard, Binds, Has Excessive Free-play Or Makes Unusual Sounds	68

Owner Service Assistance 69

Local Repair Service	69
Service Away From Home	69
Parts And Accessories Inquiries	69
Resolving A Problem	70
Mercury Marine Service Offices	71
Customer Service Literature	72
Ordering Literature	75

Warranty Information

Owner Warranty Registration

UNITED STATES AND CANADA ONLY

- It is important that your selling dealer fills out the Warranty Registration Card completely and mails it to the factory immediately upon sale of the new product.
- It identifies name and address of the original purchaser, product model and serial number(s), date of sale, type of use and selling dealer's code, name and address. The dealer also certifies that you are the original purchaser and user of the product.
- Upon receipt of the Warranty Registration Card at the factory, you will be issued a plastic Owner Warranty Registration Card which is your only valid registration identification. It must be presented to the servicing dealer should warranty service be required. Warranty claims will not be accepted without presentation of this card.
- A temporary Owner Warranty Registration Card will be presented to you when you purchase the product. It is valid only for 30 days from date of sale while your plastic Owner Warranty Registration Card is being processed. Should your product need service during this period, present the temporary registration card to the dealer. He will attach it to your warranty claim form.
- Because of your selling dealer's continuing personal interest in your satisfaction, the product should be returned to him for warranty service.
- If your plastic card is not received within 30 days from date of new product sale, please contact your selling dealer.
- The product warranty is not effective until the product is registered at the factory.
- NOTICE: Registration lists must be maintained by factory and dealer on marine products sold in the United States, should notification under the Federal Boat Safety Act be required.

International Owner Registration

OUTSIDE THE UNITED STATES AND CANADA

- It is important that your selling dealer fills out the Warranty Registration Card completely and mails it to the distributor or Marine Power Service Center responsible for administering the warranty registration/claim program for your area.
- The Warranty Registration Card identifies your name and address, product model and serial number(s), date of sale, type of use and the selling distributor's/dealer's code number, name and address. The distributor/dealer also certifies that you are the original purchaser and user of the product.
- A copy of the Warranty Registration Card, designated as the "Purchaser's Copy," MUST be given to you immediately after the card has been completely filled out by the selling distributor/dealer. This card represents your factory registration identification, and should be retained by you for future use when required. Should you ever require warranty service on this product, your dealer may ask you for the Warranty Registration Card to verify date of purchase and to use the information on the card to prepare the warranty claim form(s).
- In some countries, the Marine Power Service Center will issue you a permanent (plastic) Warranty Registration Card within 30 days after receiving the "Factory Copy" of the Warranty Registration Card from your distributor/dealer. If you receive a plastic Warranty Registration Card, you may discard the "Purchaser's Copy" that you received from the distributor/dealer when you purchased the product. Ask your distributor/dealer if this plastic card program applies to you.
- For further information concerning the Warranty Registration Card and its relationship to Warranty Claim processing, refer to the "International Warranty." Refer to "Table of Contents."

IMPORTANT: Registration lists must be maintained by the factory and dealer in some countries by law. It is our desire to have ALL products registered at the factory should it ever be necessary to contact you. Make sure your dealer/distributor fills out the warranty registration card immediately and sends the factory copy to the Marine Power International Service Center for your area.

Warranty Policies

Mercury MerCruiser One Year Limited Warranty (Gasoline Fueled Products Only)

WHAT IS COVERED

Mercury Marine warrants its new products to be free of defects in material and workmanship during the period described below.

DURATION OF COVERAGE

This Limited Warranty provides coverage for either one (1) year from the date the product is first sold to a recreational use retail purchaser, or the date on which the product is first put into service, whichever occurs first. Commercial users of these products receive warranty coverage of either one (1) year from the date of first retail sale, or the accumulation of 500 hours of operation, whichever occurs first. Commercial use is defined as any work or employment related use of the product, or any use of the product which generates income, for any part of the warranty period, even if the product is only occasionally used for such purposes. The repair or replacement of parts, or the performance of service under this warranty, does not extend the life of this warranty beyond its original expiration date. Unexpired warranty coverage can be transferred from one recreational use customer to a subsequent recreational use customer upon proper re-registration of the product. Unexpired warranty coverage cannot be transferred either to or from a commercial use customer.

CONDITIONS THAT MUST BE MET IN ORDER TO OBTAIN WARRANTY COVERAGE

Warranty coverage is available only to retail customers that purchase from a Dealer authorized by Mercury Marine to distribute the product in the country in which the sale occurred, and then only after the Mercury Marine specified pre-delivery inspection process is completed and documented. Warranty coverage becomes available upon proper registration of the product by the authorized dealer. Inaccurate warranty registration information regarding recreational use, or subsequent change of use from recreational to commercial (unless properly re-registered) may void the warranty at the sole discretion of Mercury Marine. Routine maintenance outlined in the Operation and Maintenance Manual must be timely performed in order to obtain warranty coverage. Mercury Marine reserves the right to make any warranty coverage contingent on proof of proper maintenance.

WHAT MERCURY WILL DO

Mercury's sole and exclusive obligation under this warranty is limited to, at our option, repairing a defective part, replacing such part or parts with new or Mercury Marine certified re-manufactured parts, or refunding the purchase price of the Mercury product. Mercury reserves the right to improve or modify products from time to time without assuming an obligation to modify products previously manufactured.

HOW TO OBTAIN WARRANTY COVERAGE

The customer must provide Mercury with a reasonable opportunity to repair, and reasonable access to the product for warranty service. Warranty claims shall be made by delivering the product for inspection to a Mercury dealer authorized to service the product. If purchaser cannot deliver the product to such a dealer, written notice must be given to Mercury. We will then arrange for the inspection and any covered repair. Purchaser in that case shall pay for all related transportation charges and/or travel time. If the service provided is not covered by this warranty, purchaser shall pay for all related labor and material, and any other expenses associated with that service. Purchaser shall not, unless requested by Mercury, ship the product or parts of the product directly to Mercury. The warranty registration card is the only valid registration identification and must be presented to the dealer at the time warranty service is requested in order to obtain coverage.

WHAT IS NOT COVERED

This limited warranty does not cover routine maintenance items, tune ups, adjustments, normal wear and tear, damage caused by abuse, abnormal use, use of a propeller or gear ratio that does not allow the engine to run in its recommended RPM range (see the Operation and Maintenance Manual), operation of the product in a manner inconsistent with the recommended operation/duty cycle section of the Operation and Maintenance Manual, neglect, accident, submersion, improper installation (proper installation specifications and techniques are set forth in the installation instructions for the product), improper service, use of an accessory or part which damages the Mercury product and was not manufactured or sold by us, jet pump impellers and liners, operation with fuels, oils or lubricants which are not suitable for use with the product (see the Operation and Maintenance Manual), alteration or removal of parts, water entering the engine through the fuel intake, air intake or exhaust system or damage to the product from insufficient cooling water caused by blockage of the cooling system by a foreign body, running the engine out of water, mounting the engine too high on the transom, or running the boat with the engine trimmed out too far. Use of the product for racing or other competitive activity, or operating with a racing type lower unit, at any point, even by a prior owner of the product, voids the warranty.

Expenses related to haul-out, launch, towing, storage, telephone, rental, inconvenience, slip fees, insurance coverage, loan payments, loss of time, loss of income, or any other type of incidental or consequential damages are not covered by this warranty. Also, expenses associated with the removal and/or replacement of boat partitions or material caused by boat design for access to the product are not covered by this warranty.

No individual or entity, including Mercury Marine authorized dealers, has been given authority by Mercury Marine to make any affirmation, representation or warranty regarding the product, other than those contained in this limited warranty, and if made, shall not be enforceable against Mercury Marine.

DISCLAIMERS AND LIMITATIONS

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/COUNTRIES DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE, AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

3 Year Limited Warranty Against Corrosion (Worldwide)

WHAT IS COVERED

Mercury Marine warrants that each new Mercury, Mariner, Mercury Racing, Sport Jet, M² Jet Drive, tracker by Mercury Marine Outboard, MerCruiser Inboard or sterndrive engine (Product) will not be rendered inoperative as a direct result of corrosion for the period of time described below.

DURATION OF COVERAGE

This limited corrosion warranty provides coverage for three (3) years from either the date the product is first sold, or the date on which the product is first put into service, whichever occurs first. The repair and replacement of parts, or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date. Unexpired warranty coverage can be transferred to subsequent (noncommercial use) purchaser upon proper re-registration of the product.

CONDITIONS THAT MUST BE MET IN ORDER TO OBTAIN WARRANTY COVERAGE

Warranty coverage is available only to retail customers that purchase from a Dealer authorized by Mercury Marine to distribute the product in the country in which the sale occurred, and then only after the Mercury Marine specified pre-delivery inspection process is completed and documented. Warranty coverage becomes available upon proper registration of the product by the authorized dealer. Corrosion prevention devices specified in the Operation and Maintenance Manual must be in use on the boat, and routine maintenance outlined in the Operation and Maintenance Manual and must be timely performed (including without limitation the replacement of sacrificial anodes, use of specified lubricants, and touch-up nicks and scratches) in order to maintain warranty coverage. Mercury Marine reserves the right to make warranty coverage contingent upon proof of proper maintenance.

WHAT MERCURY WILL DO

Mercury's sole and exclusive obligation under this warranty is limited to, at our option, repairing a corroded part, replacing such part or parts with new or Mercury Marine certified re-manufactured parts, or refunding the purchase price of the Mercury product. Mercury reserves the right to improve or modify products from time to time without assuming an obligation to modify products previously manufactured.

HOW TO OBTAIN WARRANTY COVERAGE

The customer must provide Mercury with a reasonable opportunity to repair, and reasonable access to the product for warranty service. Warranty claims shall be made by delivering the product for inspection to a Mercury dealer authorized to service the product. If purchaser cannot deliver the product to such a dealer, written notice must be given to Mercury. We will then arrange for the inspection and any covered repair. Purchaser in that case shall pay for all related transportation charges and/or travel time. If the service provided is not covered by this warranty, purchaser shall pay for all related labor and material, and any other expenses associated with that service. Purchaser shall not, unless requested by Mercury, ship the product or parts of the product directly to Mercury. The warranty registration card is the only valid registration identification and must be presented to the dealer at the time warranty service is requested in order to obtain coverage.

WHAT IS NOT COVERED

This limited warranty does not cover electrical system corrosion; corrosion resulting from damage, corrosion which causes purely cosmetic damage, abuse or improper service; corrosion to accessories, instruments, steering systems; corrosion to factory installed jet drive unit; damage due to marine growth; product sold with less than a one year limited Product warranty; replacement parts (parts purchased by the Customer); products used

in a commercial application. Commercial use is defined as any work or employment related use of the product, or any use of the product which generates income, for any part of warranty period, even if the product is only occasionally used for such purposes.

Corrosion damage caused by stray electrical currents (on-shore power connections, nearby boats, submerged metal) is not covered by this corrosion warranty and should be protected against by the use of a corrosion protection system, such as the Mercury Precision Parts or Quicksilver MerCathode system and/or Galvanic Isolator. Corrosion damage caused by improper application of copper base anti-fouling paints is also not covered by this limited warranty. If anti-fouling protection is required, Tri-Butyl-Tin-Adipate (TBTA) base anti-fouling paints are recommended on Outboard and MerCruiser boating applications. In areas where TBTA base paints are prohibited by law, copper base paints can be used on the hull and transom. Do not apply paint to the outboard or MerCruiser product. In addition, care must be taken to avoid an electrical interconnection between the warranted product and the paint. For MerCruiser product, an unpainted gap of at least 1.5 inches should be left around the transom assembly.

DISCLAIMERS AND LIMITATIONS

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/COUNTRIES DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE, AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH VARY FROM STATE TO STATE AND COUNTRY TO COUNTRY.

Transferable Warranty

The product warranty is transferable to a subsequent purchaser, but only for the remainder of the unused portion of the limited warranty. This will not apply to products used for commercial applications.

Direct Sale By Owner

- The second owner can be registered as the new owner and retain the unused portion of the limited warranty by sending the former owner's plastic Owner Warranty Registration Card and a copy of the bill of sale to show proof of ownership. In the United States and Canada, mail to:

Mercury Marine
Attn: Warranty Registration Department
W6250 West Pioneer Road
P.O. Box 1939
Fond du Lac, WI 54936-1939

- A new Owner Warranty Registration Card will be issued with the new owner's name and address. Registration records will be changed on the factory computer registration file.
- There is no charge for this service.

Outside the United States and Canada, please contact the distributor in your country, or the Marine Power International Service Center closest to you, for the transferable warranty procedure that would apply to you.

Mercury Product Protection Plan

United States And Canada Only

(Certain performance products, triple engine installations, and commercial applications are excluded)

The Mercury Product Protection Plan provides coverage against unexpected mechanical and electrical breakdowns that may occur beyond the standard limited warranty.

The optional Mercury Product Protection Plan is the only Factory Plan available for your engine.


Two, three or four - year term plans can be purchased up to 12 months after the original engine registration date.

See your participating Mercury MerCruiser dealer for complete program details.

Read This Manual Thoroughly

IF YOU DON'T UNDERSTAND ANY PORTION, CONTACT YOUR DEALER FOR A DEMONSTRATION OF ACTUAL STARTING AND OPERATING PROCEDURES.

NOTICE

Throughout this publication, and on your power package, **WARNINGS** and **CAUTIONS**, accompanied by the International Hazard Symbol , may be used to alert the installer/user to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. **Observe them carefully.**

These "Safety Alerts" alone cannot eliminate the hazards that they signal. Strict compliance with these special instructions while performing the service, plus "common sense" operation, are major accident prevention measures.

WARNING

WARNING-Hazards or unsafe practices which could result in severe personal injury or death.

CAUTION

CAUTION-Hazards or unsafe practices which could result in minor personal injury or product or property damage.

IMPORTANT: - Indicates information or instructions that are necessary for proper operation and/or maintenance.


WARNING

The operator (driver) is responsible for the correct and safe operation of the boat, the equipment aboard and the safety of all occupants aboard. We strongly recommend that the operator read this Operation, Maintenance and Warranty Manual and thoroughly understand the operational instructions for the power package and all related accessories before the boat is used.

General Information

CA619

Lanyard Stop Switch

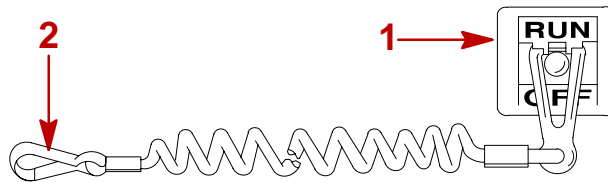

74608

The purpose of a lanyard stop switch (1) is to turn off the engine when the operator moves far enough away from the operator's position (as in accidental ejection from the operator's position) to activate the switch. Some remote control units are equipped with a lanyard stop switch. A lanyard stop switch can be installed on the dashboard or side adjacent to the operator's position.

The lanyard is a cord usually between 4 and 5 ft (1220 and 1524 mm) in length when stretched out with an element on one end made to be inserted into the switch and a snap (2) on the other end for attaching to the operator. The lanyard is coiled to make its at-rest condition as short as possible so as to minimize the likelihood of lanyard entanglement with nearby objects. It is made as long as it is in its stretched condition to minimize the likelihood of accidental activation should the operator choose to move around in an area close to the normal operator's position. If it is desired to have a shorter lanyard, wrap the lanyard around the operator's wrist or leg, or tie a knot in the lanyard.

IMPORTANT: The purpose of a lanyard stop switch is to stop the engine when the operator moves far enough away from the operator's position to activate the switch. This would occur if the operator accidentally falls overboard or moves within the boat a sufficient distance from the operator's position. Accidental ejections and falls overboard are more likely to occur in certain types of boats such as low sided sport boats or bass boats, and high-performance boats. Accidental ejections and falls overboard are also likely to occur as a result of poor operating practices such as sitting on the back of the seat or gunwale at planing speeds, standing at planing speeds, sitting on elevated fishing boat decks, operating at planing speeds in shallow or obstacle-infested waters, releasing your grip on a steering wheel that is pulling in one direction, drinking alcohol or consuming drugs, or daring, high-speed boat maneuvers.

While activation of the lanyard stop switch will stop the engine immediately, a boat will continue to coast for some distance depending upon the velocity and degree of any turn at shut-down. However, the boat will not complete a full circle. While the boat is coasting, it can cause injury to anyone in the boat's path as seriously as the boat would when under power.

We strongly recommend that other occupants be instructed on proper starting and operating procedures should they be required to operate the engine in an emergency (e.g. if the operator is accidentally ejected).

⚠ WARNING

Should the operator fall out of the boat, the possibility of serious injury or death from being run over by the boat can be greatly reduced by stopping the engine immediately. Always properly connect both ends of the stop switch lanyard to the stop switch and the operator.


Accidental or unintended activation of the switch during normal operation is also a possibility. This could cause any, or all, of the following potentially hazardous situations:

- 1 Occupants could be thrown forward due to unexpected loss of forward motion - a particular concern for passengers in the front of the boat who could be ejected over the bow and possibly struck by the gear case or propeller.
- 2 Loss of power and directional control in heavy seas, strong current or high winds.
- 3 Loss of control when docking.

⚠ WARNING

Avoid serious injury or death from deceleration forces resulting from accidental or unintended stop switch activation. The boat operator should never leave the operator's station without first disconnecting the stop switch lanyard from the operator.

Exhaust Emissions

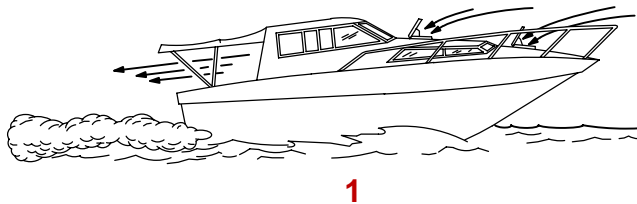

Courtesy of ABYC

Be Alert To Carbon Monoxide Poisoning

Carbon monoxide is present in the exhaust fumes of all internal combustion engines including the outboards, sterndrives and inboard engines that propel boats, as well as the generators that power various boat accessories. Carbon monoxide is a deadly gas that is odorless, colorless and tasteless.

Early symptoms of carbon monoxide poisoning, which should not be confused with seasickness or intoxication, include headache, dizziness, drowsiness, and nausea.

WARNING


Avoid the combination of a running engine and poor ventilation. Prolonged exposure to carbon monoxide in sufficient concentration can lead to unconsciousness, brain damage or death.

GOOD VENTILATION


Ventilate passenger area, open side curtains, or forward hatches to remove fumes.

1 Example of desired air flow through the boat.


POOR VENTILATION

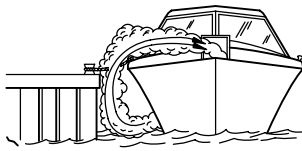

2A

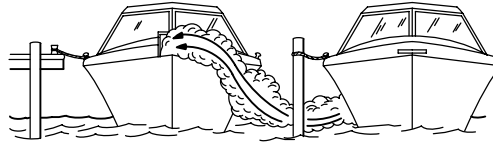

2B

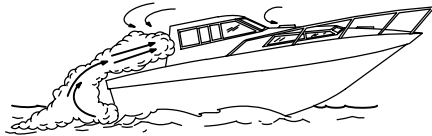

3A



3B

Courtesy of ABYC

Under certain running and/or wind conditions, permanently enclosed or canvas enclosed cabins or cockpits with insufficient ventilation may draw in carbon monoxide. Install one or more carbon monoxide detectors in your boat.

Although the occurrence is rare, on a very calm day, swimmers and passengers in an unclosed area of a stationary boat that contains or is near a running engine may be exposed to a hazardous level of carbon monoxide.

2 Examples of poor ventilation while boat is stationary:

A Running the engine when the boat is moored in a confined space.

B Mooring close to another boat that has its engine running.

3 Examples of poor ventilation while boat is moving:

A Running the boat with the trim angle of the bow too high.

B Running the boat with no forward hatches open (station wagon effect).

Safe Boating Suggestions

In order to safely enjoy the waterways, familiarize yourself with local and other governmental boating regulations and restrictions, and consider the following suggestions.

- **Know and obey all nautical rules and laws of the waterways.** Boat operators should complete a boating safety course. Courses are offered in the U.S.A. by (1) The U.S. Coast Guard Auxiliary, (2) The Power Squadron, (3) The Red Cross and (4) your state or provincial boating law enforcement agency. Inquiries may be made to the Boating Hotline, 1-800-368-5647 or the Boat U.S. Foundation information number 1-800-336-BOAT.

We strongly recommend that all powerboat operators attend one of these courses.

You should also review the NMMA Sources of Waterway Information booklet. It lists regional sources of safety, cruising and local navigation and is available at no charge by writing to:

Sources of Waterway Information
National Marine Manufacturers Association
410 N. Michigan Avenue
Chicago, IL 60611 U.S.A.

- **Perform safety checks and required maintenance.** Follow a regular schedule and ensure that all repairs are properly made.
- **Check safety equipment on board.** Here are suggestions of the types of safety equipment to carry when boating:
 - 1 Approved fire extinguisher(s); paddle or oar.
 - 2 Signal devices: flashlight, rockets or flares, flag and whistle or horn.
 - 3 Spare propeller, thrust hubs and an appropriate wrench.
 - 4 Tools for necessary minor repairs; first aid kit and book.
 - 5 Anchor and extra anchor line; water-proof storage containers.
 - 6 Manual bilge pump and extra drain plugs; compass and map or chart of area.
 - 7 Spare operating equipment; batteries, bulbs, fuses, etc.
 - 8 Transistor radio.
 - 9 Drinking water.
- **Know signs of weather change and avoid foul weather and rough-sea boating.**
- **Tell someone where you are going and when you expect to return.**
- **Passenger boarding.** Stop the engine whenever passengers are boarding, unloading or are near the back (stern) of the boat. Just shifting the drive unit into neutral is not sufficient.
- **Use personal flotation devices.** Federal Law requires that there be a U.S. Coast Guard approved, wearable-type life jacket (personal flotation device), correctly sized and readily accessible for every person on board, plus a throwable cushion or ring. We strongly advise that everyone wear a life jacket at all times while in the boat.
- **Prepare other boat operators.** Instruct at least one person on board in the basics of starting and operating the engine and boat handling in case the driver becomes disabled or falls overboard.
- **Do not overload your boat.** Most boats are rated and certified for maximum load (weight) capacities (refer to your boat capacity plate). Know your boat's operating and loading limitations. Know if your boat will float if full of water. When in doubt, contact your dealer or the boats manufacturer.

- **Make sure everyone in the boat is properly seated.** Don't allow anyone to sit or ride on any part of the boat that was not intended for such use. This includes backs of seats, gunwales, transom, bow, decks, raised fishing seats, any rotating fishing seat; anywhere that sudden unexpected acceleration, sudden stopping, unexpected loss of boat control or sudden boat movement could cause a person to be thrown overboard or into the boat. See that all passengers have a proper seat and are in it before any boat movement.
- **Never be under the influence of alcohol or drugs while boating (it is the law).** They impair your judgment and greatly reduce your ability to react quickly.
- **Know your boating area and avoid hazardous locations.**
- **Be alert.** The operator of the boat is responsible by law to "maintain a proper lookout by sight (and hearing)." The operator must have an unobstructed view particularly to the front. No passengers, load, or fishing seats should block the operators view when operating the boat above idle or planing transition speed. Watch "the other guy," the water and your wake.
- **Never drive your boat directly behind a water skier in case the skier falls.** As an example, your boat traveling at 25 miles per hour (40 km/hr) in 5 seconds will overtake a fallen skier who was 200 feet in front of you.
- **Watch fallen skiers.** When using your boat for water skiing or similar activities, always keep a fallen or down skier on the operator's side of the boat while returning to attend the skier. The operator should always have the down skier in sight and never back up to the skier or anyone in the water.
- **Report accidents.** Boat operators are required by law to file a Boating Accident Report with their state boating law enforcement agency when their boat is involved in certain boating accidents. A boating accident must be reported if (1) there is loss of life or probable loss of life, (2) there is personal injury requiring medical treatment beyond first aid, (3) there is damage to boats or other property where the damage value exceeds \$500.00 or (4) there is complete loss of the boat. Seek further assistance from local law enforcement.

CA282

Protecting People In The Water

While You Are Cruising

It is very difficult for a person standing or floating in the water to take quick action to avoid a boat heading in his/her direction even at slow speed.

Always slow down and exercise extreme caution any time you are boating in an area where there might be people in the water.

Whenever a boat is moving (coasting) and the drive unit is in neutral position, there is sufficient force by the water on the propeller to cause the propeller to rotate. This neutral propeller rotation can cause serious injury.

While Boat Is Stationary

Shift the drive unit into neutral and shut off the engine before allowing people to swim or be in the water near your boat.

WARNING

Stop your engine immediately whenever anyone in the water is near your boat. Serious injury to the person in the water is likely if contacted by a rotating propeller, a moving boat, a moving gear case, or any solid device rigidly attached to a moving boat or gear case.

High-Speed And High-Performance Boat Operation

If your boat is considered a high-speed or high-performance boat with which you are unfamiliar, we recommend that you never operate it at its high speed capability without first requesting an initial orientation and familiarization demonstration ride with your dealer or an operator experienced with your boat. For additional information, obtain a copy of our *Hi-Performance Boat Operation* booklet (Part Number 90-849250R--1) from your dealer, distributor, or Mercury Marine.

Conditions Affecting Operation

Weight Distribution (Passengers And Gear) Inside The Boat

Shifting weight to rear (stern):

- Generally increases speed and engine rpm.
- At extremes, can cause boat to porpoise.
- Causes bow to bounce in choppy water.
- Increases danger of waves splashing into boat when coming off plane.

Shifting weight to front (bow):

- Improves ease of planing.
- Improves rough water ride.
- At extremes, can cause boat to veer back and forth (bow steer).

Bottom Of Boat

To maintain maximum speed, the boat bottom should be:

- Clean, free of barnacles and marine growth.
- Free of distortion; nearly flat where it contacts the water.
- Straight and smooth, fore and aft.

Marine vegetation may accumulate when boat is docked. This growth must be removed before operation; it may clog water inlets and cause engine to overheat.

Propeller Selection

IMPORTANT: Installed propeller must allow engine to run at its specified maximum wide open throttle revolutions per minute (rpm). Use an accurate service tachometer to verify engine operating rpm.

It is the responsibility of the boat manufacturer and/or the selling dealer to equip the power package with the correct propeller. Refer to Specifications for engine WOT and operating rpm range.

IMPORTANT: The engines covered in this manual are equipped with an rpm rev-limiter that is set to an upper (or limited) rpm amount. This limit is slightly above the normal operating range of the engine and is designed to help prevent damage from excessive engine rpm. Once the rpm drop into the recommended operating rpm range normal engine operation resumes.

Select a propeller that will allow the engine power package to operate at or near the top end of the recommended WOT operating rpm range with a normal load.

If full throttle operation is below the recommended range, the propeller must be changed to prevent loss of performance and possible engine damage. On the other hand, operating an engine above the recommended operating rpm range will cause higher than normal wear and/or damage.

After initial propeller selection, the following common problems may require that the propeller be changed to a lower pitch.

- Warmer weather and greater humidity cause a loss of rpm.
- Operating in a higher elevation causes a loss of rpm.
- Operating with a damaged propeller or dirty boat bottom causes a loss of rpm.
- Operating with increased load (additional passengers, pulling skiers) causes a loss of rpm.

For better acceleration, such as is needed for water skiing, use the next lower pitch propeller. Do not operate at full throttle when using the lower pitch propeller but not pulling skiers.

How Elevation And Climate Affect Performance

Elevation has a very noticeable effect on the wide open throttle power of an engine. Since air gets thinner as elevation increases, the engine begins to starve for air. Humidity, barometric pressure and temperature do have a noticeable effect on the density of air. Heat and humidity thin the air. This condition can become particularly annoying when the propeller testing was done on a cool, dry day. Then later; on a hot, sultry day, the boat doesn't seem to have the same performance.

Although some performance can be regained by dropping to a lower pitch propeller, the basic problem still exists. In some cases, a gear ratio change to more reduction is possible and very beneficial.

Summer conditions of high temperature, low barometric pressure and high humidity all combine to reduce the engine power. This, in turn, is reflected in decreased boat speeds, as much as 2 or 3 miles per hour in some cases. Nothing will regain this speed for the boater, but the coming of cool, dry weather.

In pointing out the practical consequences of weather effects, an engine running on a hot, humid, summer day, may encounter a loss of as much as 14% of the horsepower it would produce on a dry, brisk spring or fall day. With the drop in available horsepower, this propeller will, in effect, become too large. Consequently, the engine operates at less than its recommended rpm. This will result in further loss of horsepower at the propeller with another decrease in boat speed. This secondary loss, however, can be somewhat regained by switching to a lower-pitch propeller that allows the engine to again run at recommended rpm.

For boaters to realize optimum engine performance under changing weather conditions, it is essential that the engine be propped to allow it to operate at or near the top end of the recommended maximum rpm range at WOT with a normal boat load.

Not only does this allow the engine to develop full power, but equally important is the fact that the engine also will be operating in an rpm range that discourages detonation. This, of course, enhances overall reliability and durability of the engine.

Important Information

Operation And Maintenance

OWNER/OPERATOR RESPONSIBILITIES

It is the operator's responsibility to perform all safety checks; to ensure that all lubrication and maintenance instructions are complied with for safe operation and to return the unit to an Authorized Mercury MerCruiser Dealer for a periodic checkup.

Normal maintenance service and replacement parts are the responsibility of the owner/operator and as such, are not considered defects in workmanship or material within the terms of the warranty. Individual operating habits and usage contribute to the need for maintenance service.

Proper maintenance and care of your power package will assure optimum performance and dependability, and will keep your overall operating expenses at a minimum. See your Authorized Mercury MerCruiser Dealer for service aids.

CA864

DEALER RESPONSIBILITIES

In general, a dealer's responsibilities to the customer include predelivery inspection and preparation such as:

- Make sure that the boat is properly equipped.
- Prior to delivery, make certain that the Mercury MerCruiser power package and other equipment are in proper operating condition.
- Make all necessary adjustments for maximum efficiency.
- Familiarize the customer with the on-board equipment.
- Explain and demonstrate the operation of the power package and boat.
- At the time of delivery, the dealer should provide you with a copy of a Predelivery Inspection Checklist.
- Your selling dealer should fill out the Warranty Registration Card completely and mail it to the factory immediately upon sale of the new product.

Freezing Temperature Operation

IMPORTANT: If boat is operated during periods of freezing temperature, precautions must be taken to prevent freezing damage to power package. Damage caused by freezing **IS NOT** covered by Mercury MerCruiser Limited Warranty.

Drain Plug and Bilge Pump

The engine compartment in your boat is a natural place for water to collect. For this reason, boats are normally equipped with a drain plug and/or a bilge pump. It is very important to check these items on a regular basis to ensure that the water level does not rise to come in contact with your power package. Components on your engine will be damaged if submerged. Damage caused by submersion is not covered by the Mercury MerCruiser Limited Warranty.

Attention Required After Submersion

- Before recovery, contact an Authorized Mercury MerCruiser Dealer.
- After recovery, immediate service by an Authorized Mercury MerCruiser Dealer is required to prevent serious damage to power package.

Launching And Boat Operation Care

CAUTION

During launching from a trailer, if the unloading ramp is steep or the trailer bed must be tilted, the boat may enter the water rapidly and at a steep angle. This may force water through the exhaust system into the cylinders. The more weight on the transom, the more likely this is to occur.

Slowing down rapidly or stopping suddenly may cause a following wave to “swamp” the transom. In this instance, water may enter the cylinders through the exhaust system.

When backing up rapidly, the same situation may occur as stated in the preceding paragraph.

In any of these situations, water entering the engine could cause severe damage to internal parts. Refer to Attention Required After Submersion.

Stolen Power Package

If your power package is stolen, immediately advise the local authorities and Mercury Marine of the model and serial numbers and to whom the recovery is to be reported. This “Stolen Motor” information is placed into a file at Mercury Marine to aid authorities and dealers in recovery of stolen motors.

Replacement Service Parts

WARNING

Electrical, ignition and fuel system components on Mercury MerCruiser gasoline power packages are designed and manufactured to comply with U.S. Coast Guard rules and regulations to minimize risks of fire or explosion.

Use of replacement electrical, ignition or fuel system components, which do not comply to these rules and regulations, could result in a fire or explosion hazard and should be avoided.

When servicing the electrical, ignition and fuel systems, it is extremely important that all components are properly installed and tightened. If not, any electrical or ignition component would permit sparks to ignite fuel vapors from fuel system leaks, if they existed.

Marine engines are expected to operate at or near full-throttle for most of their life. They are also expected to operate in both fresh and saltwater environments. These conditions require numerous special parts. Care should be exercised when replacing marine engine parts as specifications are quite different from those of the standard automotive engine.

For example, one of the most important, and probably the least suspected special replacement part, is the cylinder head gasket. Since saltwater is highly corrosive, the steel-type automotive head gasket cannot be used. A marine engine head gasket uses special materials to resist corrosive action.

Since marine engines must be capable of running at or near maximum rpm much of the time, special valve springs, valve lifters, pistons, bearings, camshafts and other heavy-duty moving parts are required for long life and peak performance.

These are but a few of the many special modifications that are required in Mercury MerCruiser marine engines to provide long life and dependable performance.

Do-It-Yourself Maintenance Suggestions

If you are one of those persons who likes to do-it-yourself, here are some suggestions for you.

- Present-day marine equipment, such as your Mercury MerCruiser power package, are highly technical pieces of machinery. Electronic ignition and special fuel delivery systems provide greater fuel economies, but also are more complex for the untrained mechanic.
- Do not attempt any repairs which are not covered in this manual unless you are aware of the precautions Cautions and Warnings and procedures required. Your safety is of our concern.
- If you attempt to service the product yourself, we suggest you order the service manual for that model. The service manual outlines the correct procedures to follow. It is written for the trained mechanic, so there may be procedures you don't understand. Do not attempt repairs if you do not understand the procedures.
- There are special tools and equipment that are required to perform some repairs. Do not attempt these repairs unless you have these special tools and/or equipment. You can cause damage to the product in excess of the cost a dealer would charge you.
- Also, if you partially disassemble an engine or drive assembly and are unable to repair it, the dealer's mechanic must reassemble the components and test to determine the problem. This will cost you more than taking it to the dealer immediately upon having a problem. It may be a very simple adjustment to correct the problem.
- Do not telephone the dealer, service office or the factory to attempt for them to diagnose a problem or request the repair procedure. It is difficult for them to diagnose a problem over the telephone.
- Your Authorized Dealer is there to service your power package. They have qualified factory-trained mechanics.

It is recommended you have the dealer do periodic maintenance checks on your power package. Have them winterize it in the fall and service it before the boating season. This will reduce the possibility of any problems occurring during your boating season when you want trouble-free boating pleasure.

NOTE: All references to EFI models apply to EFI and MPI engines.

NOTE: All references to ECM apply to all engine control modules.

Multiple EFI Engine Battery Precautions

Situation

Alternators: Alternators are designed to charge the battery that supplies electrical power to the engine that the alternator is mounted on. When batteries for two different engines are connected, one alternator will supply all of the charging current for both batteries. Normally, the other engine's alternator will not be required to supply any charging current.

EFI Electronic Control Module (ECM): The ECM requires a stable voltage source. During multiple engine operation, an onboard electrical device may cause a sudden drain of voltage at the engine's battery. The voltage may go below the ECM's minimum required voltage. Also, the alternator on the other engine may now start charging. This could cause a voltage spike in the engine's electrical system.

In either case, the ECM could shut off. When the voltage returns to the range that the ECM requires, the ECM will reset itself. The engine will now run normally. This ECM shut down usually happens so fast that the engine just appears to have an ignition miss.

Recommendations

Batteries: Boats with multi-engine EFI power packages require each engine be connected to its own battery. This ensures that the engine's Electronic Control Module (ECM) has a stable voltage source.

Battery Switches: Battery switches should always be positioned so each engine is running off its own battery. DO NOT operate engines with switches in **BOTH** or **ALL** position. In an emergency, another engine's battery can be used to start an engine with a dead battery.

Battery Isolators: Isolators can be used to charge an auxiliary battery used for powering accessories in the boat. They should not be used to charge the battery of another engine in the boat unless the type of isolator is specifically designed for this purpose.

Generators: The generator's battery should be considered another engine's battery.

Diagnosing EFI Problems

Your Authorized Mercury MerCruiser Dealer has the proper service tools for diagnosing problems on Electronic Fuel Injection (EFI) Systems. The Electronic Control Module (ECM) on these engines has the ability to detect some problems with the system when they occur, and store this information in the ECM's memory. This data can then be read later by a service technician using a special diagnostic tool.

20-Hour Break-In Period

IMPORTANT: The first 20 hours of operation is the engine break-in period. Correct break-in is essential to obtain minimum oil consumption and maximum engine performance. During this break-in period, the following rules must be observed:

- Do not operate below 1500 rpm for extended periods of time for first 10 hours. Shift into gear as soon as possible after starting and advance throttle above 1500 rpm **if conditions permit safe operation.**
- Do not operate at one speed consistently for extended periods.
- Do not exceed 3/4 throttle during first 10 hours. During next 10 hours, occasional operation at full throttle is permissible (5 minutes at a time maximum).
- Avoid full throttle acceleration from IDLE speed.
- Do not operate at full throttle until engine reaches normal operating temperature.
- Frequently check crankcase oil level. Add oil if needed. It is normal for oil consumption to be high during break-in period.

After Break-In Period










To help extend the life of your Mercury MerCruiser power package, the following recommendations should be considered;

- Use a propeller that allows the engine to operate at or near the top of the maximum rpm range (See Specifications section) when at full throttle with a normal boat load.
- Operation at 3/4 throttle setting or lower is recommended. Refrain from prolonged operation at maximum (full throttle) rpm.

End of First Season Checkup

At the end of the first season of operation, an Authorized Mercury MerCruiser Dealer should be contacted to discuss and/or perform various scheduled maintenance items. If you are in an area where the product is operated continuously (year-round operation), you should contact your dealer at the end of the first 100 hours of operation, or once yearly, whichever occurs first.

Operation

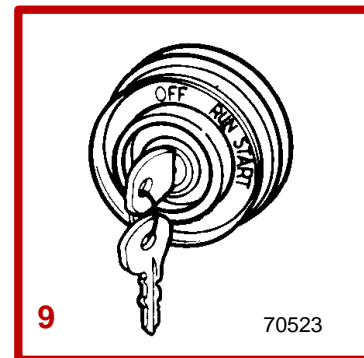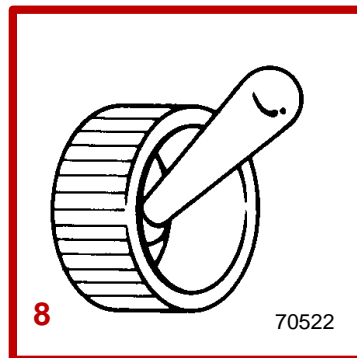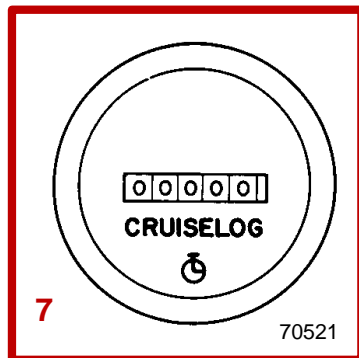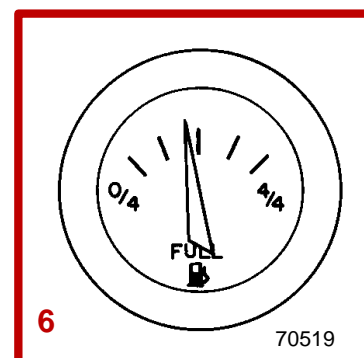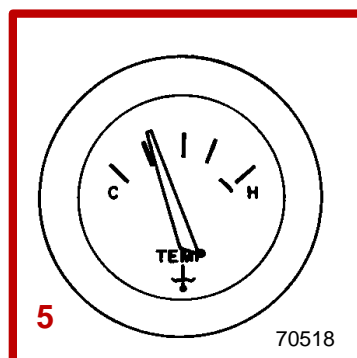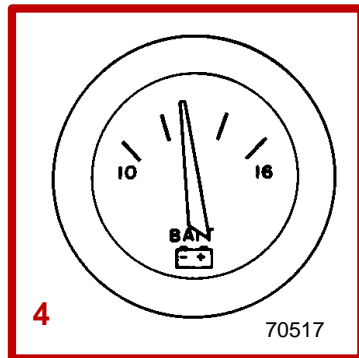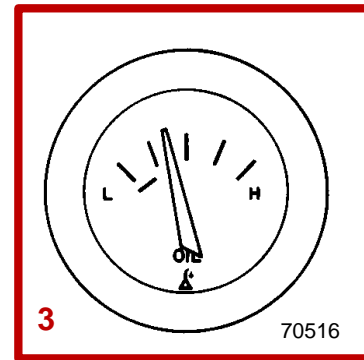
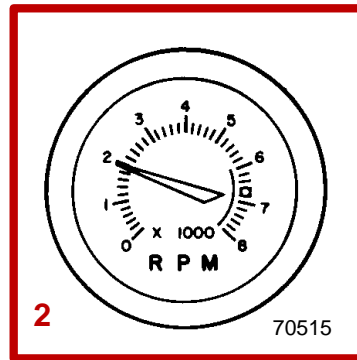
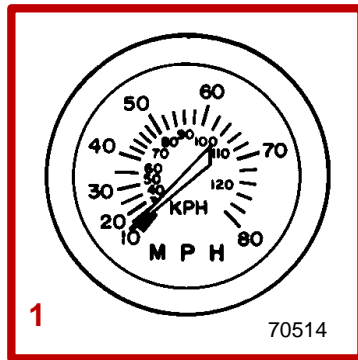


Instrumentation

The following is a brief explanation of instrumentation typically found on some boats. The owner/operator should be familiar with all instruments and their functions on the boat.

- 1 **Speedometer** - indicates boat speed.
- 2 **Tachometer** - indicates engine rpm.
- 3 **Oil Pressure Gauge** - indicates engine oil pressure.
- 4 **Battery Meter** - indicates battery voltage.
- 5 **Water Temperature Gauge** - indicates engine operating temperature.
- 6 **Fuel Gauge** - Indicates quantity of fuel in tank.
- 7 **Hour Meter** - records engine running time.
- 8 **Bilge Blower Switch** - Operates bilge blower (If equipped - See Starting, Shifting and Stopping).
- 9 **Ignition Switch** - allows operator to start and stop engine.

Audio Warning System

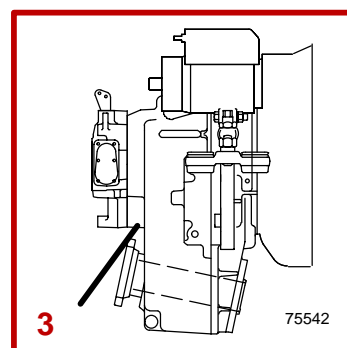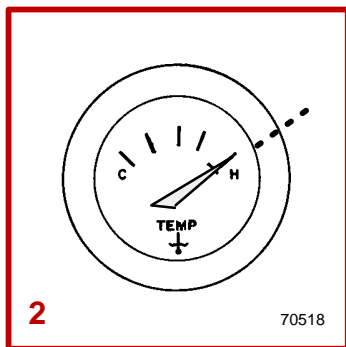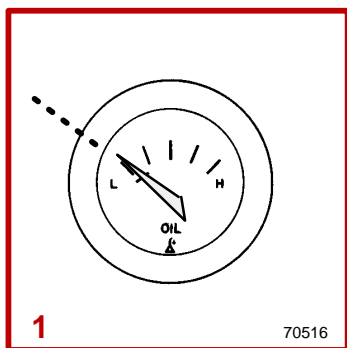

Your MerCruiser power package may be equipped with an Audio Warning System.

The audio warning system alarm will sound if one of the following occur:

- 1 Engine Oil Pressure Too Low
- 2 Engine Temperature Too Hot
- 3 Transmission Fluid Temperature Too Hot
- 4 Engine Guardian Strategy Activated (Refer to 8.1L Engine Guardian Strategy.)







NOTE: To test the system:

Turn the ignition switch to the ON position without cranking the engine. The alarm will sound if the system is working correctly.

⚠ CAUTION

Avoid engine damage. Do not operate engine once the alarm has sounded EXCEPT TO AVOID A HAZARDOUS SITUATION. The Audio Warning System will not protect the engine from damage. It is designed to warn the operator that a problem has occurred.

When the alarm sounds with the engine running, stop engine immediately. Investigate cause and correct it, if possible. If cause cannot be determined, consult your Authorized Mercury MerCruiser Dealer.

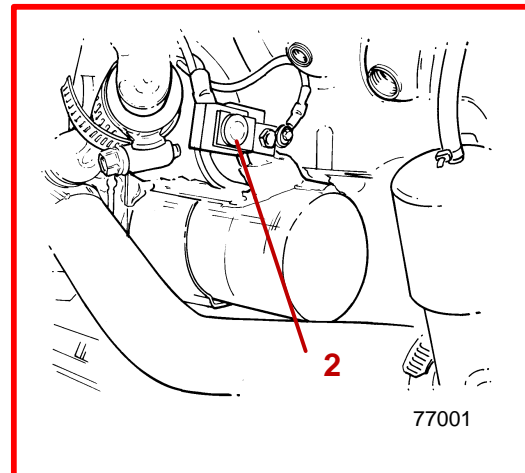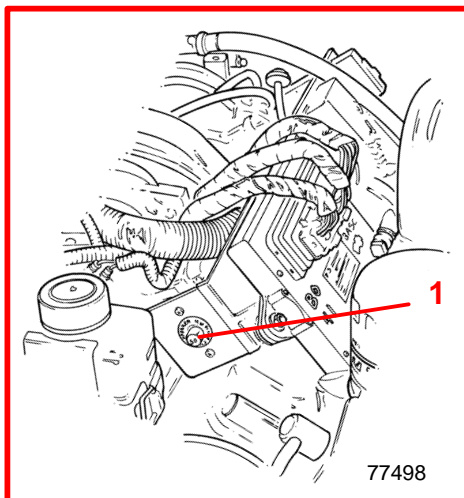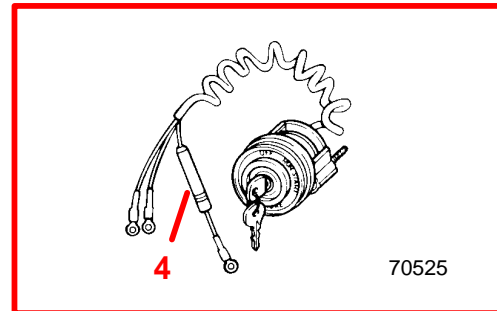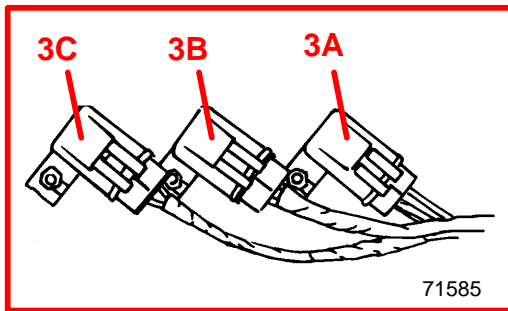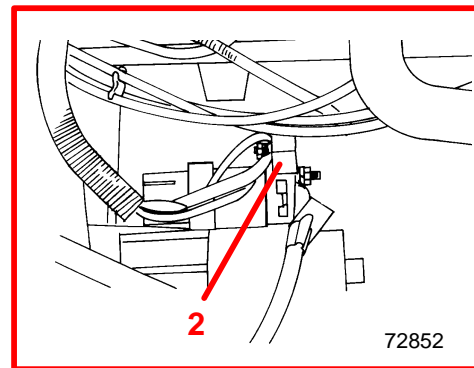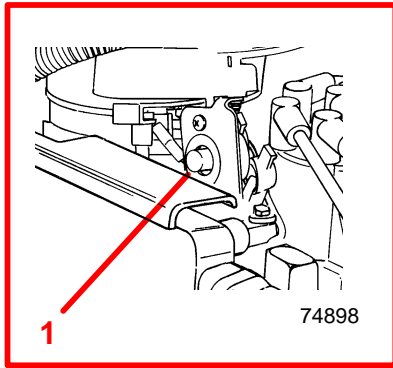

Electrical System Overload Protection

If an electrical overload occurs, a fuse will blow or the circuit breaker will trip open. The cause must be found and corrected before replacing fuse or resetting circuit breaker.

- 1 A circuit breaker provides protection for engine wiring harness and instrumentation power lead. Reset by pushing RESET button IN.

NOTE: *In an emergency, when engine must be operated and cause for high current draw cannot be located and corrected, turn OFF or disconnect all accessories connected to engine and instrumentation wiring. Reset circuit breaker. If breaker remains open, electrical overload has not been eliminated. Further checks must be made on electrical system.*

- 2 A 90 Amp fuse is located on the starter solenoid. This fuse is designed to protect the engine wiring harness if an electrical overload occurs.
- 3 Three fuses are located on the port side of the engine. These fuses control various EFI circuits.


350 MAG MPI:

- A Fuel Pump Fuse - 15 Amp
- B ECM / Injector Fuse - 10 Amp
- C ECM / Battery Fuse - 15 Amp

8.1S Horizon:

- Fuse AB is the Fuel Pump Fuse (20 Amp)
 - Fuse CD is the PCM 555 Power Fuse (20 Amp)
 - Fuse EF is the Injector Fuse (20 Amp)
- 4 A 20 amp fuse may be located in ignition switch "I" terminal lead to protect electrical system. Check for blown fuse if key is turned to START and nothing happens (and circuit breaker is not tripped).

Remote Controls

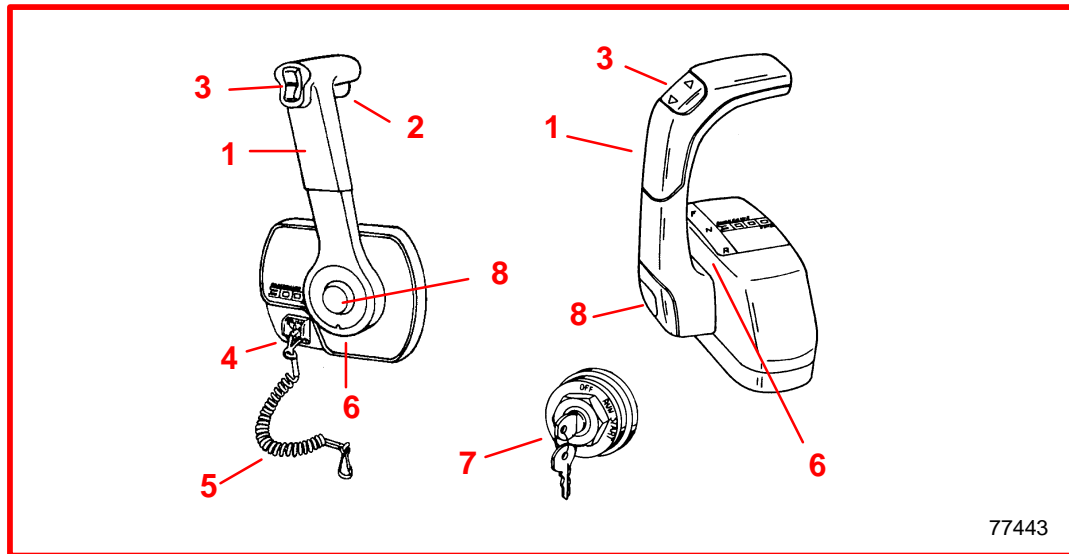

Remote Control Features

Your boat may be equipped with a Mercury Precision or Quicksilver remote control. All controls may not have all features shown. If boat is equipped with a remote control other than shown, consult your dealer for a description and/or demonstration of the control.

- 1 Single Control Handle** - Operation of the shift and throttle are controlled by the movement of the control handle. Push the control handle forward from NEUTRAL with a quick firm motion to the first detent for FORWARD gear. Continue pushing forward to increase speed. Pull the control handle back from NEUTRAL with a quick firm motion to the first detent for REVERSE gear. Continue pushing back to decrease speed.
- A Dual Control Handles** - Shift and throttle are controlled by separate handles with throttle control at IDLE, push shift control forward for FORWARD or pull back for REVERSE. Then push the throttle control forward to increase speed.
- 2 Neutral Release Lever** - Prevents accidental shift and throttle engagement. Neutral lock button must be pushed IN to move the control handle out of NEUTRAL.
- 3 Trim/Tilt Button(if Equipped)** - Refer to Power Trim Operation.
- 4 Lanyard Stop Switch** - Turns ignition OFF whenever the operator (when attached to the lanyard) moves far enough away from the operator's position to activate the switch. Refer to the Lanyard Stop Switch Safety Explanation and Warning in the General Information Section.
- 5 Lanyard** - Refer to the Lanyard Stop Switch Safety Explanation and Warning in the General Information Section.
- 6 Throttle Friction Adjustment** - Console controls require cover removal for adjustment.
- 7 Ignition Key Switch** - OFF, ON, START.
- 8 Throttle Only Button** - Allows engine throttle advancement without shifting the engine. This is done by disengaging the shift mechanism from the control handle. The throttle only button can be depressed only when the remote control handle is in the NEUTRAL position, and should only be used to assist in starting the engine.

Kiekhaefer Remote Control Features

Consult your dealer for a description and/or demonstration of other remote controls.

- 1 Shift Control Handle** - Push the control handle forward from NEUTRAL with a quick firm motion for FORWARD gear. Pull the control handle back from NEUTRAL with a quick firm motion for REVERSE gear.

CAUTION

On Dual Engine Applications: Both shift control handles should be moved simultaneously into the same gear.

- A Dual Engine Shift Control Handles** - Dual engine applications have separate control handles for each engine. The operation of the dual engine control handles is the same as the single engine control handle.
- 2 Throttle Control Handle** - Push the control handle forward to increase speed. Pull the control handle back toward the detent to decrease speed. Pulling the control handle past the detent will increase reverse speed.

CAUTION

On Dual Engine Applications: Always operate dual engines at similar rpm.

- A Dual Engine Throttle Control Handles** - Dual engine applications have separate control handles for each engine. The operation of the dual engine control handles is the same as the single engine control handle.
- 3 Trim Button (If Equipped)** - Refer to Power Trim Operation.

Starting, Shifting And Stopping

WARNING

Before starting engine, operate bilge blower for at least five minutes to remove any explosive fumes from engine compartment. If boat is not equipped with a bilge blower, open engine hatch and leave open while starting engine.

CAUTION

It is good practice to ventilate the engine compartment prior to servicing any engine components to remove any fuel vapors which may cause difficulty breathing or be an irritant.

CAUTION

Observe the following:

- Do not start engine without water being supplied to seawater pickup pump (to prevent pump or engine damage).
- Do not operate starter motor continuously for more than 30 seconds.
- Never shift drive unit unless engine is at IDLE rpm.

Perform the following as appropriate:

- 1 Check all items listed in Operation Chart.
- 2 Perform any other necessary checks, as indicated by your dealer, or specified in your boat owner's manual.
- 3 Place control handle in NEUTRAL.
- 4 Position throttle setting as follows:

A COLD ENGINE - Leave in NEUTRAL/IDLE speed position.

B WARM ENGINE - Leave in NEUTRAL/IDLE speed position.

C FLOODED ENGINE - Turn ignition switch to ON position. Push the throttle only button and place the throttle lever in the 50% position. Attempt to start engine. As soon as engine starts, return throttle to the IDLE position.
- 5 Turn ignition key to the START position. Release key when engine starts and allow switch to return to the RUN position.
- 6 Check oil pressure gauge immediately after engine starts. If oil pressure is not within specified range (Refer to Specifications), stop engine immediately and determine cause.
- 7 If engine is cold, operate engine for 1 or 2 minutes at fast idle (1000-1500 rpm).
- 8 After engine has warmed up, check water temperature gauge to ensure that engine temperature is not abnormally high. If it is, stop engine immediately and determine cause.
- 9 Be sure charging system is functioning correctly.
- 10 Observe power package for fuel, oil, water and exhaust leaks.
- 11 To shift unit into gear, move control/shift lever with a firm, quick motion forward to shift into FORWARD gear, or backward to shift into REVERSE gear. After shifting unit, advance throttle to desired setting.
- 12 To shift unit out of gear, move control/shift lever to NEUTRAL and allow engine to drop to IDLE speed. If engine has been operating at a high speed for a long period of time, allow engine to cool by operating at IDLE speed for 3 to 5 minutes.
- 13 Turn ignition key to OFF.

⚠ CAUTION

To avoid possible ingestion of water that can damage engine components:

- **Do not turn the ignition key off when the engine is running above idle speed.**
- **Do not use the lanyard stop switch to shut off the engine above idle speed.**
- **When coming off plane, if a large following wave may roll over the boat's transom, apply a short, light burst of throttle to minimize the wave action against the stern of the boat.**
- **Do not come off plane quickly, shift into reverse and shut off engine.**

CH54

8.1L Engine Guardian Strategy

IMPORTANT: Boat speed could be reduced to idle and may not respond to throttle.

Engine Guardian Strategy is designed to help reduce the potential for engine damage by reducing engine power when a potential problem is sensed. Engine Guardian monitors:

- Oil Pressure
- Coolant Temperature
- Sea Pump Pressure
- Exhaust Manifold Temperature

For example, if one exhaust manifold's water cooling passages become partially blocked, Engine Guardian Strategy will reduce the power level of the engine to bring the temperature on that manifold back into the normal operating temperature range. If the debris passes through and full water flow is restored, engine power levels are restored back to normal. In other words, Engine Guardian Strategy is a looped feedback or smart system.

CH64

When Engine Guardian Strategy is activated the Audio Warning System alarm will beep. In Guardian Mode the alarm will sound in the following patterns:

- 2 beeps per minute
- Constant beep
- Continuous beeping

Refer to the Engine Guardian Strategy troubleshooting.

Operation Chart

BEFORE STARTING	AFTER STARTING	WHILE UNDERWAY	AFTER STOPPING
Open engine hatch.	Observe all gauges to check condition of engine. If not normal, stop engine.	Observe all gauges to monitor engine condition. If not normal, stop engine.	Turn ignition key OFF.
Check engine oil level.	Check for fuel, oil, water, fluid and exhaust leaks.	Listen for audio warning horn signifying Guardian Mode.	Turn battery switch OFF, if equipped.
Check coolant level.	Check shift and throttle control operation.		Close fuel shutoff valve, if equipped.
Check transmission fluid.	Check steering operation.		Close seacock, if equipped.
Turn battery switch ON, if equipped.			Flush cooling system if in saltwater.
Operate bilge blowers, if equipped.			Open air actuated drain system if boat is out of water or seacock is closed.
Open fuel shutoff valve, if equipped.			
Close air actuated drain system.			
Listen for Audio Warning Alarm to sound when the ignition switch is in the ON position.			

Specifications

Fuel Recommendations

CAUTION

Use of improper gasoline can damage your engine seriously. Engine damage resulting from use of improper gasoline is considered misuse of engine, and damage caused thereby will not be covered under the limited warranty.

FUEL RATINGS

Mercury MerCruiser engines will operate satisfactorily when using a major brand of unleaded gasoline as follows:

USA and Canada - having a posted pump Octane Rating of 87 (R+M)/2 minimum. Premium gasoline [92 (R+M)/2 Octane] is also acceptable. DO NOT use leaded gasoline.

Outside USA and Canada - having a posted pump Octane Rating of 90 RON minimum. Premium gasoline (98 RON) is also acceptable. If unleaded gasoline is not available, use a major brand of leaded gasoline.

CA878

USING REFORMULATED (OXYGENATED) GASOLINES (USA ONLY)

This type of gasoline is required in certain areas of the USA. The two types of oxygenates used in these fuels is Alcohol (Ethanol) or Ether (MTBE or ETBE). If Ethanol is the oxygenate that is used in the gasoline in your area, refer to Gasolines Containing Alcohol also.

These Reformulated Gasolines are acceptable for use in your Mercury MerCruiser engine.

CA879

GASOLINES CONTAINING ALCOHOL

If the gasoline in your area contains either methanol (methyl alcohol) or ethanol (ethyl alcohol), you should be aware of certain adverse effects that can occur. These adverse effects are more severe with methanol. Increasing the percentage of alcohol in the fuel can also worsen these adverse effects.

Some of these adverse effects are caused because the alcohol in the gasoline can absorb moisture from the air, resulting in a separation of the water/alcohol from the gasoline in the fuel tank.

The fuel system components on your Mercury MerCruiser engine will withstand up to 10% alcohol content in the gasoline. We do not know what percentage your boat's fuel system will withstand. Contact your boat manufacturer for specific recommendations on the boat's fuel system components (fuel tanks, fuel lines, and fittings). Be aware that gasolines containing alcohol may cause increased:

- Corrosion of metal parts.
- Deterioration of rubber or plastic parts.
- Fuel permeation through rubber fuel lines.
- Starting and operating difficulties.

WARNING

FIRE AND EXPLOSION HAZARD: Fuel leakage from any part of fuel system can be a fire and explosion hazard which can cause serious bodily injury or death. Careful periodic inspection of entire fuel system is mandatory, particularly after storage. All fuel components including fuel tanks, whether plastic metal or fiberglass, fuel lines, fittings, fuel filters and carburetors/fuel injection components should be inspected for leakage, softening, hardening, swelling or corrosion. Any sign of leakage or deterioration requires replacement before further engine operation.

Because of possible adverse effects of alcohol in gasoline, it is recommended that only alcohol-free gasoline be used where possible. If only fuel containing alcohol is available, or if the presence of alcohol is unknown, increased inspection frequency for leaks and abnormalities is required.

IMPORTANT: When operating a Mercury MerCruiser engine on gasoline containing alcohol, storage of gasoline in the fuel tank for long periods should be avoided. Long periods of storage, common to boats, create unique problems. In cars alcohol-blend fuels normally are consumed before they can absorb enough moisture to cause trouble, but boats often sit idle long enough for phase separation to take place. In addition, internal corrosion may take place during storage if alcohol has washed protective oil films from internal components.

CC540

Seacock Size Recommendation

Seacock used must have an internal cross-sectional area equal to or greater than hose to prevent restricting waterflow. Install valve in an area where it will be easily accessible and supported adequately to prevent hose fatigue. A 1-1/4 in. (32 mm) brass ball or gate valve is suggested.

CC16

Sea Strainer Recommendation

Strainer used must be of sufficient size to ensure that an adequate supply of water will be maintained for cooling engine. A minimum of 30 gallons per minute (114 liters per minute) flow rate is required.

CA693


Crankcase Oil

To help obtain optimum engine performance and to provide maximum protection, we strongly recommend the use of Quicksilver 4-Cycle 25W-40 Marine Engine Oil. This oil is a special blend of 25-weight and 40-weight oils for marine engines. If not available, a good grade, straight weight, detergent automotive oil of correct viscosity, with an API classification of SH, CF/CF-2, may be used.

In those areas where Quicksilver 4-Cycle 25W-40 Marine Engine Oil or a recommended straight weight oil are not available, a multi-viscosity 20W-40 or, as a second but less preferable choice, 20W-50, with API service ratings of SH, CF/CF-2 may be used.

IMPORTANT: The use of non-detergent oils, multi-viscosity oils (other than Quicksilver 25W-40 or a good quality 20W-40 or 20W-50), synthetic oils, low quality oils or oils that contain solid additives are specifically not recommended.

The chart below is a guide to crankcase oil selection. The oil filter should always be changed when changing engine oil.

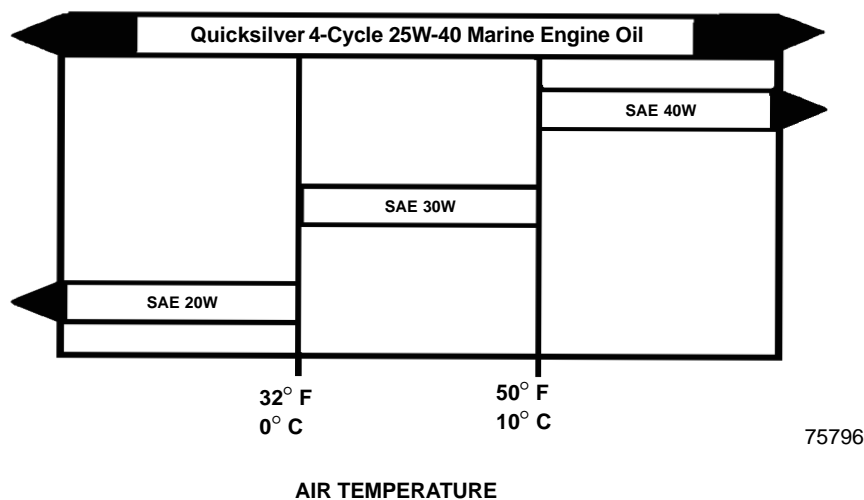

75796

Engine Specifications

Model	350 Mag MPI Horizon	8.1 S Horizon
Propshaft Horsepower	300 ¹	370 ¹
Propshaft Kilowatts	224 ¹	276 ¹
Displacement	350 cid (5.7L)	496 cid (8.1L)
Maximum RPM @ WOT ²	4400-4800 rpm	4200-4600 rpm
Idle RPM in NEUTRAL ⁴	600 rpm	650 rpm
Oil Pressure @ 2000 RPM	30-70 psi (207-483 kPa)	Minimum 30 psi (207 kPa)
Oil Pressure @ Idle	Minimum 4 psi (28 kPa)	Minimum 15 psi (103 kPa)
Thermostat	160° F (71° C)	
Timing @ Idle RPM ³	8°	NA
Firing Order	1-8-4-3-6-5-7-2	1-8-7-2-6-5-4-3
Electrical System	12-Volt Negative (-) Ground	
Alternator Rating - Hot Operating Amps	65 Amps	
Alternator Rating - Cold Operating Amps	72 Amps	
Recommended Battery Rating	Min 550 cca / 700 mca / 120 Ah	Min. 650 cca / 825 mca / 180 Ah

¹ Power Rated in Accordance with NMMA (National Marine Manufacturers' Association) rating procedures.

² Measured using an accurate service tachometer, with engine at normal operating temperature.

³ A special procedure must be followed to check or adjust timing. Consult your Authorized Mercury MerCruiser Dealer before attempting this procedure.

⁴ Idle speed on EFI models is not adjustable.

Maintenance

WARNING

Always disconnect battery cables from battery before working around electrical system components to prevent injury to yourself or damage to electrical system.

IMPORTANT: Refer to MAINTENANCE CHART for complete listing of all scheduled maintenance to be performed. Some listings can be done by owner/operator, while others should be performed by an Authorized Mercury MerCruiser Dealer. Before attempting maintenance or repair procedures not covered in this manual, it is recommended that a Mercury MerCruiser Service Manual be purchased and read thoroughly.

NOTE: Maintenance points are color coded for ease of identification.

- Blue-Coolant
- Yellow-Engine Oil
- Orange-Fuel
- Brown-Transmission Fluid

Maintenance Aids

- 1 Transmission - Dexron III Automatic Transmission Fluid.
- 2 Crankcase Oil - Quicksilver 4-Cycle Marine Engine Oil. (Refer to Specifications for alternatives and oil recommendations for varying ambient temperatures.)
- 3 Closed Cooling System Coolant - Extended Life 5/100 Ethylene Glycol Antifreeze/Coolant.
- 4 All Exterior Surfaces - Quicksilver Primer and Spray Paint and Quicksilver Corrosion Guard.

Fluid Capacities

Engine

NOTICE

Measurements: U.S. Quarts (Liters)

All capacities are approximate fluid measures.

Model	350 cid / 5.7 L	496 cid / 8.1 L
Crankcase Oil (With Filter) ¹	5.5 (5.25)	9 (8.5)
Seawater Cooling System ²	15 (14.1)	NA
Closed Cooling System	20 (19)	19 (18)

¹ Always use dipstick to determine exact quantity of oil or fluid required.

² Seawater Cooling System capacity information is for winterization use only.

IMPORTANT: It may be necessary to adjust oil levels depending on installation angle and cooling systems (heat exchanger and fluid lines).

Transmission

NOTICE	
Measurements: U.S. Quarts (Liters)	
All capacities are approximate fluid measures.	

Make and Model	Capacity	Fluid Type
Velvet Drive		Mobil 424 <u>or</u> Dexron III Automatic Transmission Fluid Do Not Mix!
71C In-Line	1-1/2 (1.33) ¹	Dexron III Automatic Transmission Fluid
72 Series V Drive	3 (2.75) ¹	
5000A	2-3/4 (2.6)	
5000V	3-1/2 (3.3) ¹	
ZF (Hurth)		Dexron III Automatic Transmission Fluid
630V	4-1/2 (4.0)	Dexron III Automatic Transmission Fluid
630A	4-1/2 (4.0)	
800A	6 (5.5)	

¹ Fluid should be circulated and then rechecked. Add additional fluid as necessary.

CC1041

Gas Inboard

Routine Maintenance *				
	Each Day Start	Each Day End	Weekly	Every Two Months
Check crankcase oil (interval can be extended based on experience).	★			
If operating in salt, brackish or polluted waters, flush cooling system after each use.		★		
Check transmission fluid.			★	
Check water pickups for debris or marine growth. Check water strainer and clean. Check coolant level.			★	
Check battery connections and fluid level.				★

* Only perform maintenance which applies to your particular power package



Gas Inboard (Continued)

Scheduled Maintenance *									
	Annu- ally	Every 100 hours or Annually ◆	Every 200 hours or 3 years ◆	Every 300 hours or 3 years ◆	Every 2 years	Every 5 years	Every 500 hours or 5 years ◆	Every 1000 hours or 5 years ◆	Per OEM
Touch-up paint power package and spray with corrosion guard.	★								
Change crankcase oil and filter.		★							
Change transmission fluid.		★							
Replace fuel filter(s).		★							
Check steering system and remote control for loose, missing or damaged parts. Lubricate cables and linkages.		★							
Retorque engine mounts.				★					
Check spark plugs, wires, distributor cap and ignition timing. Check and adjust idle speed.				★					
Clean flame arrestor.		★							
Check electrical system for loose, damaged or corroded fasteners.				★					
Inspect condition and tension of belts.				★					
Check cooling system and exhaust system hose clamps for tightness. Inspect both systems for damage or leaks.				★					
Disassemble and inspect seawater pump and replace worn components.				★					
Clean seawater section of closed cooling system. Clean, inspect and test pressure cap.				★					
Replace coolant.						★			
Check engine-to-propeller shaft alignment.									★

* Only perform maintenance which applies to your particular power package

◆ Whichever Occurs First

THIS PAGE IS INTENTIONALLY BLANK

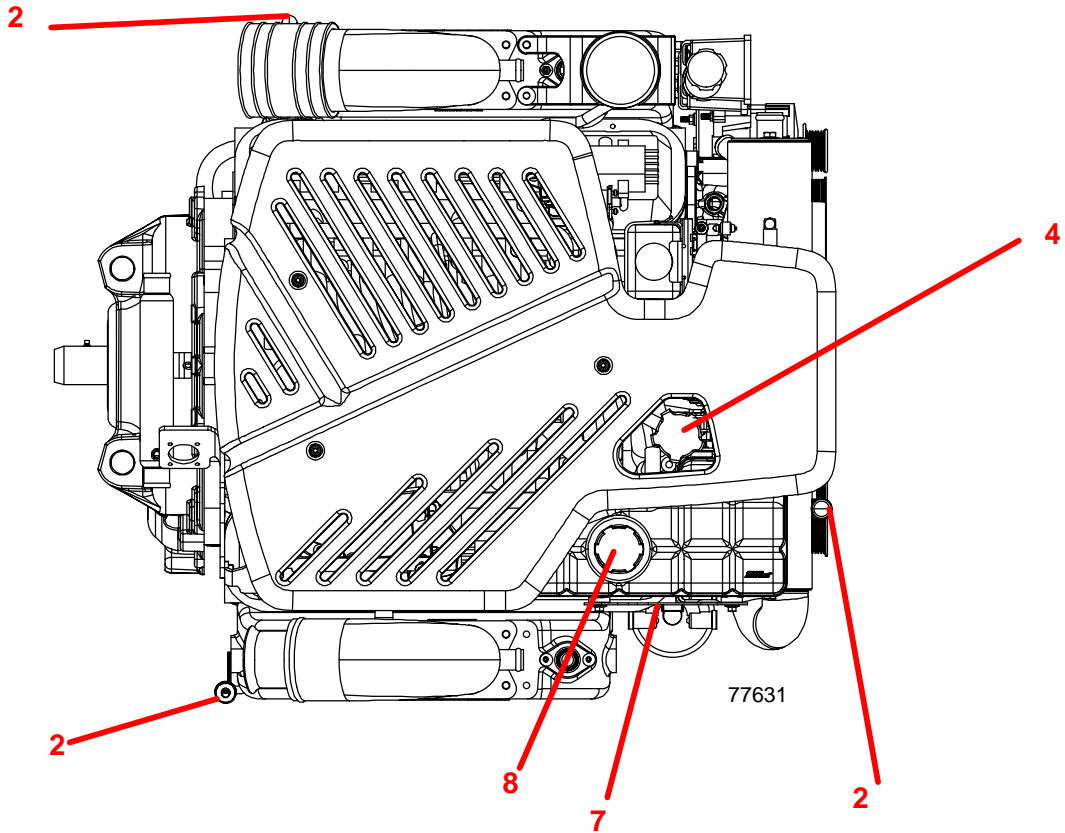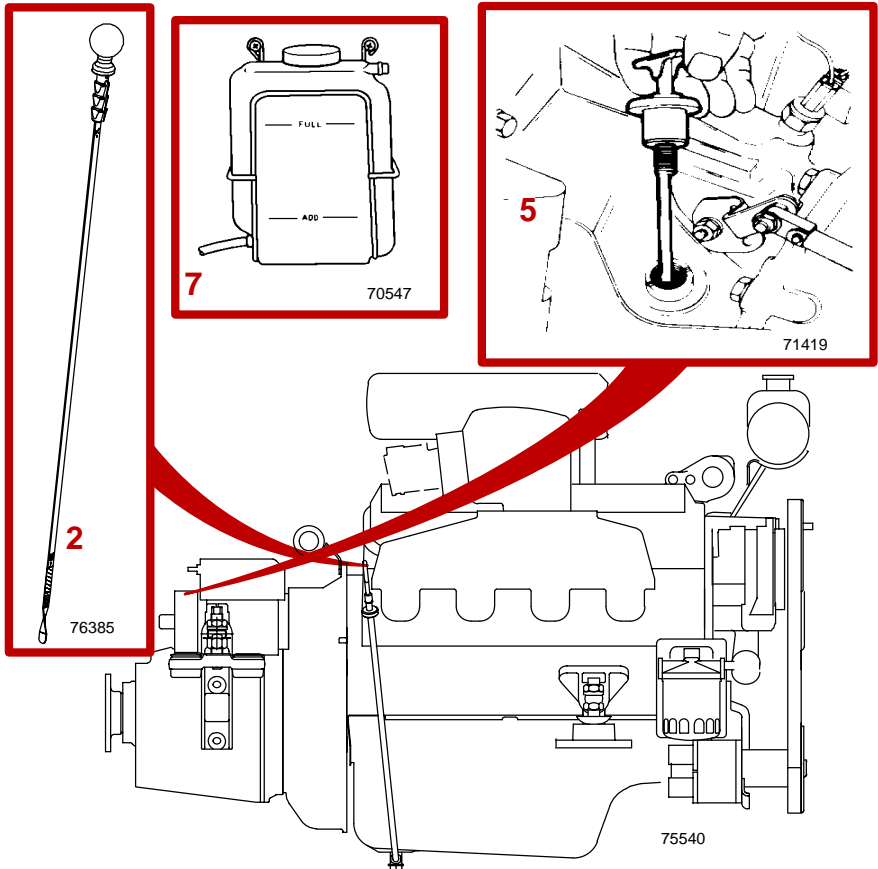

Checking Fluid Levels

CAUTION

Mercury MerCruiser recommends that the crankcase oil be checked **BEFORE** starting the engine. If it is necessary to check the oil level after starting the engine, stop engine and allow a minimum of 10 minutes for the oil to drain back into the oil pan.

CHECKING CRANKCASE OIL

IMPORTANT: Boat must be at rest in the water to obtain an accurate reading in the following procedure.

- 1 Check oil level before starting engine.
- 2 Remove dipstick. Wipe clean.

NOTE: 8.1L Models: Ensure that dipstick is installed with oil level indication marks facing the rear of the engine (flywheel end).

- 3 Reinstall dipstick fully into dipstick tube. Wait 60 seconds to allow trapped air to vent.
- 4 Remove dipstick and observe oil level. Oil level must be between FULL or OK RANGE and ADD. If oil level is below ADD:
- 5 Remove oil filler cap. Add specified oil to bring level up to, but not over, FULL or OK RANGE mark on dipstick.

IMPORTANT: DO NOT overfill crankcase oil.

CHECKING TRANSMISSION FLUID

IMPORTANT: Engine must be operated at 1500 rpm for 2 minutes immediately prior to checking level.

IMPORTANT: DO NOT screw dipstick in; press it firmly in and remove to obtain an accurate reading.

- 6 Velvet Drive Transmissions - Stop engine and quickly check fluid level by turning T-handle counterclockwise, to remove dipstick. If fluid is below top (full) line, add specified fluid through dipstick hole. Do not overfill. Reinstall dipstick securely.

CH63

- 7 ZF/Hurth Transmissions - Stop engine and quickly remove dipstick to check level. If fluid is below top (full) line, add specified fluid through dipstick hole. Do not overfill. Reinstall dipstick securely.

CC1042





CHECKING ENGINE COOLANT

WARNING

Avoid serious injury from burns. Do not remove coolant cap when engine is hot. Coolant may discharge violently.

IMPORTANT: Check engine coolant **BEFORE** starting engine.

- 8 Check coolant level in coolant reservoir. Add specified coolant as required.
- 9 If coolant is low, inspect gasket in cap for damage and replace if necessary.
- 10 Inspect coolant recovery system for leaks.

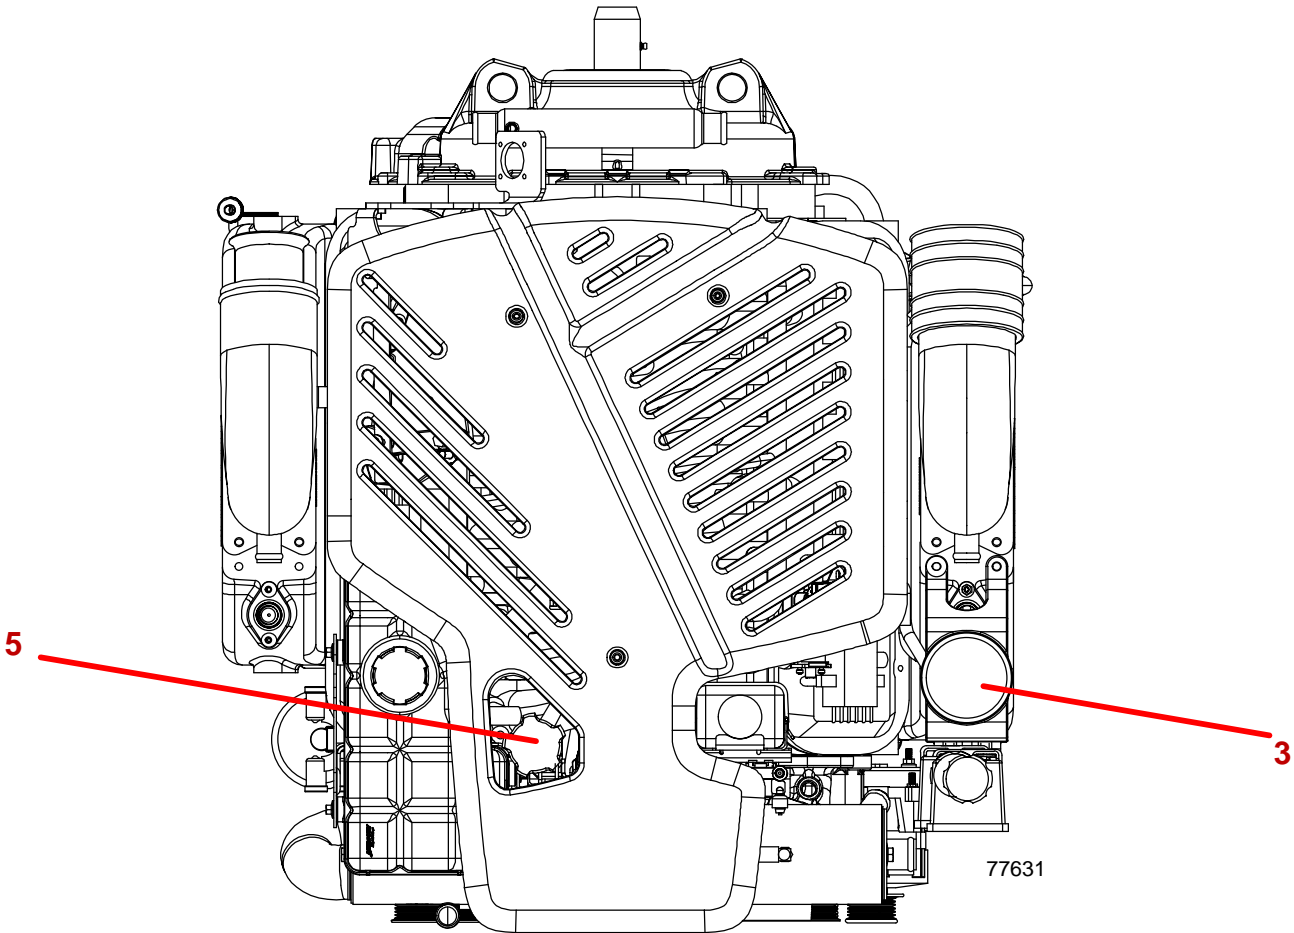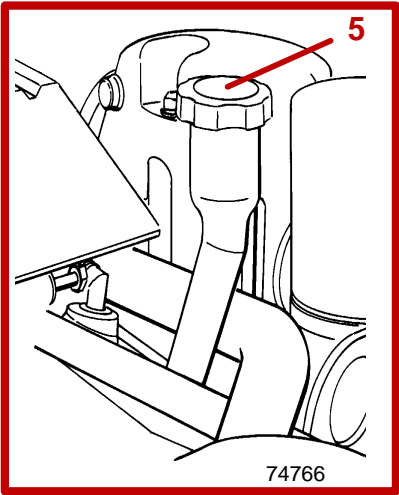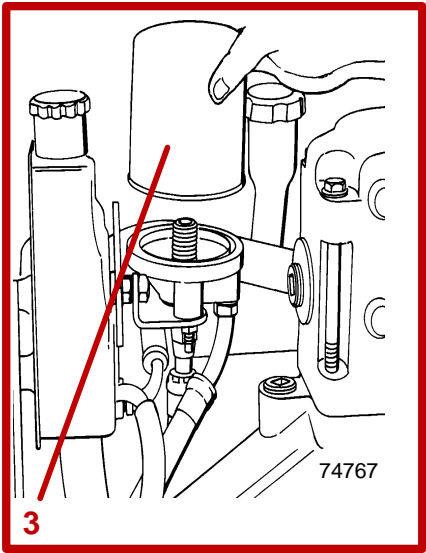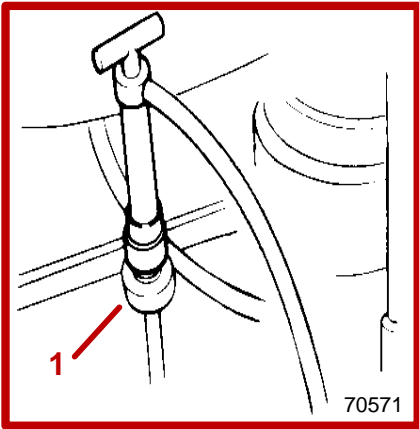

Changing Fluids

Refer to Maintenance for change interval. Crankcase oil should be changed before placing boat in storage.

Changing Crankcase Oil and Filter

CAUTION

ENVIRONMENTAL HAZARD! Discharge of oil or oil waste into the environment is restricted by law. Do not spill oil or oil waste into the environment when using or servicing your boat. Contain and dispose of oil or oil waste as defined by local authorities.

IMPORTANT: Change crankcase oil when engine is warm from operation. Warm oil flows more freely, carrying away more impurities. Use only recommended engine oil (refer to Specifications).

1 With engine at normal operating temperature, remove drain plug from oil drain hose or remove dipstick.

NOTE: If engine is factory equipped with Quick Drain Oil Hose, pull tether through bilge drain before removing drain plug from oil drain hose.

2 Drain crankcase oil using quick drain oil hose.

NOTE: If drain plug is not accessible because of boat construction, oil may be removed through dipstick tube, using a Quicksilver Crankcase Oil Pump. (See Quicksilver Accessory Guide.)

3 Drain crankcase oil using Quicksilver Crankcase Oil Pump.

A Insert hose end of crankcase oil pump onto an appropriate container and using handle, pump until crankcase is empty.

B Remove pump.

4 After oil has drained completely, reinstall drain plug or dipstick and tighten securely.


5 Remove and discard oil filter and its sealing ring.

6 Coat sealing ring on new filter with engine oil and install. Tighten filter securely (following filter manufacturer's instructions). DO NOT overtighten.


7 Remove oil filler cap. Add recommended engine oil to bring level up to, but not over, FULL or OK RANGE mark on dipstick. Refer to Specifications.

8 Start engine and check for leaks.

IMPORTANT: Always use dipstick to determine exactly how much oil is required.

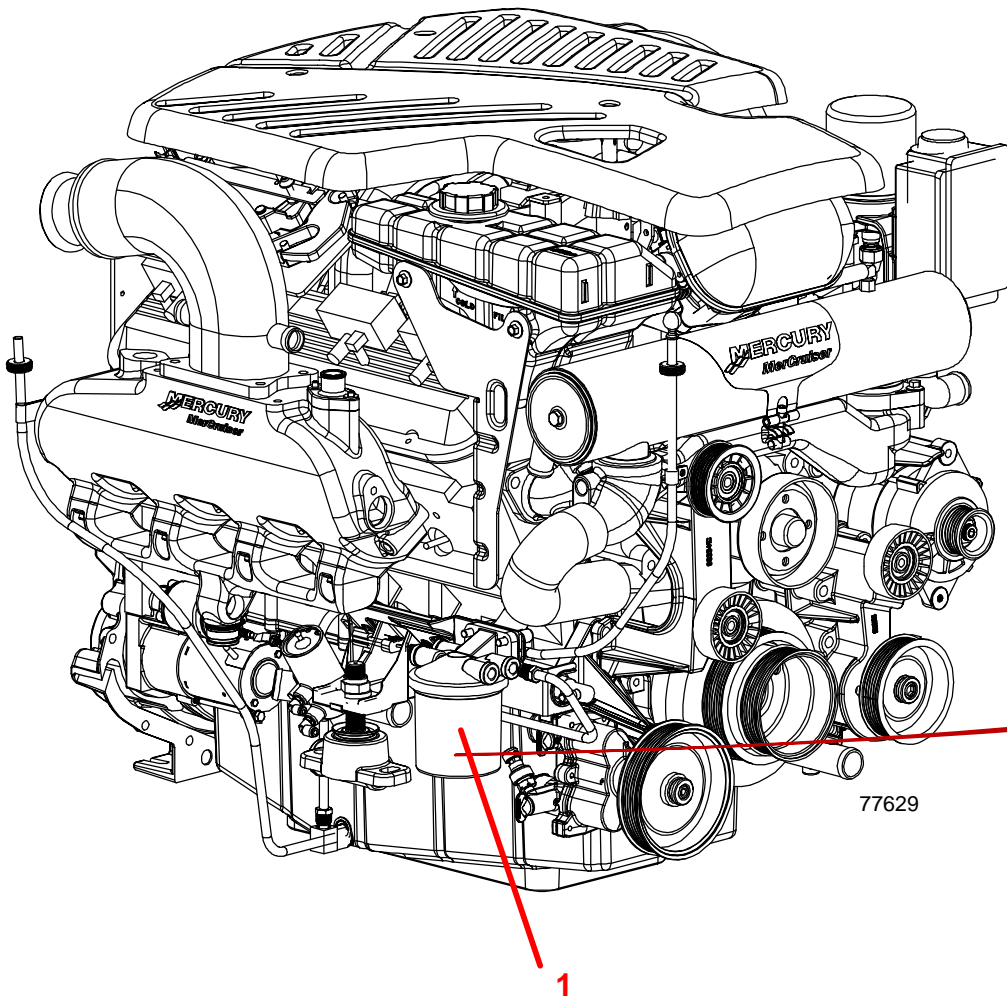

77629

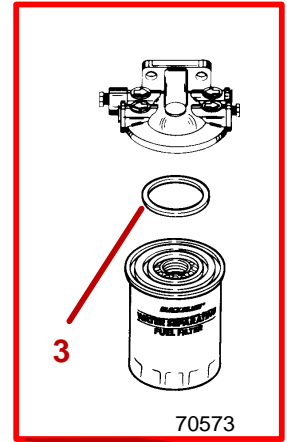

Changing Water Separating Fuel Filter

WARNING

Be careful when changing water separating fuel filter. Gasoline is extremely flammable and highly explosive under certain conditions. Be sure ignition key is OFF. Do not smoke or allow spark or open flame in area when changing fuel filter. Wipe up any spilled fuel immediately.

WARNING

Make sure no fuel leaks exist before closing engine hatch.

CAUTION

The electric fuel pump and factory installed water separating fuel filter have been carefully designed to function properly together. Do not install additional fuel filters and/or water separating fuel filters between fuel tank and engine.

WARNING

Avoid Fire or Explosion: Fuel injection system is pressurized during operation. Use care when removing water separating fuel filter. Fuel could spray on hot engine causing fire or explosion. Allow engine to cool down before attempting to remove the water separating fuel filter in the following procedure. Also, hold a clean shop towel over the water separating fuel filter when removing it, to help avoid fuel spraying on the engine.

The installation of additional fuel filters and/or water separating fuel filters may cause:




- Fuel Vapor Locking
- Difficult Warm-Starting
- Piston Detonation Due to Lean Fuel Mixture
- Poor Driveability

1 Remove water separating fuel filter and sealing ring from mounting bracket. Discard filter and sealing ring.

CAUTION

ENVIRONMENTAL HAZARD! Discharge of oil or oil waste into the environment is restricted by law. Do not spill oil or oil waste into the environment when using or servicing your boat. Contain and dispose of oil or oil waste as defined by local authorities.

- 2** Coat sealing ring on new water separating fuel filter with engine oil. Thread water separating fuel filter onto bracket and tighten securely by hand. Do not use a filter wrench.
- 3** Start and operate engine. Check water separating fuel filter connection for gasoline leaks. If leaks exist, stop engine immediately and recheck filter installation. If leaks continue, contact your Authorized Mercury MerCruiser Dealer.

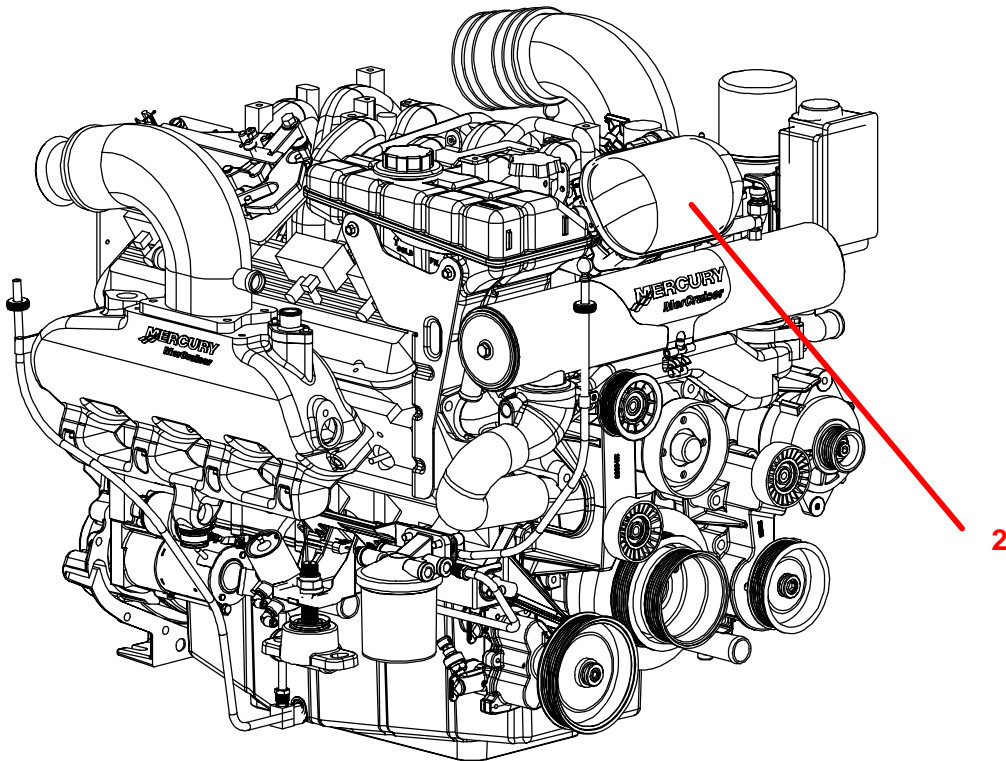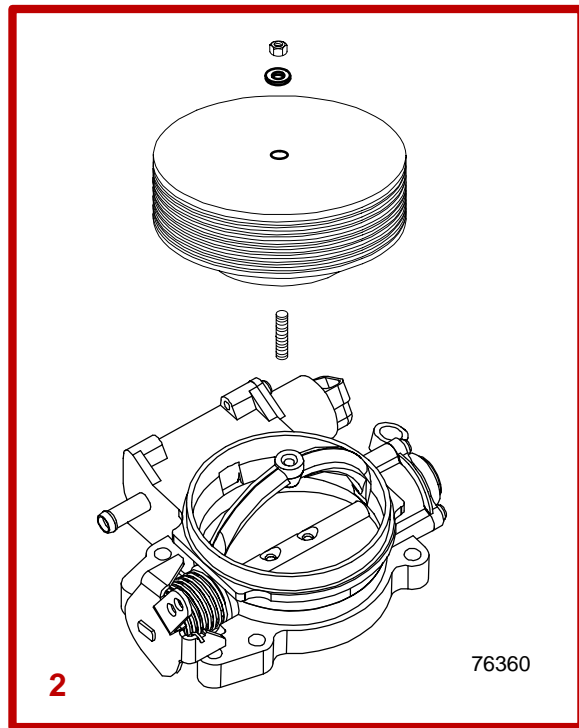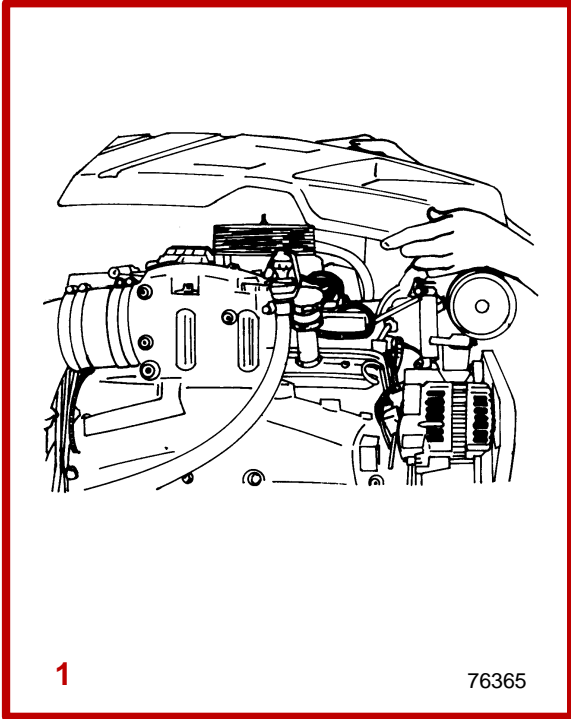

Cleaning Flame Arrestor and Related Components

WARNING





Avoid gasoline fire or explosion. Gasoline is extremely flammable and highly explosive under certain conditions. Be careful when cleaning flame arrestor and crankcase ventilation hoses; ensure that ignition is OFF. DO NOT smoke or allow sources of spark or open flame in area when cleaning flame arrestor and crankcase ventilation hoses.

- 1 Remove cover.
- 2 Remove flame arrestor and related components.
- 3 Clean flame arrestor in solvent. Dry with compressed air or allow to air dry completely.

WARNING

Avoid gasoline fire or explosion. Gasoline is extremely flammable and highly explosive under certain conditions. NEVER use gasoline as a cleaning solvent.

- 4 **350 MAG MPI:** Clean crankcase ventilation hoses in solvent. Dry with compressed air or allow to air dry completely.
- 5 **350 MAG MPI:** Inspect crankcase ventilation hoses for cracks or deterioration and replace if necessary.
- 6 Reinstall flame arrestor and related components in reverse order.
- 7 Tighten flame arrestor fastener securely.
- 8 Reinstall cover.

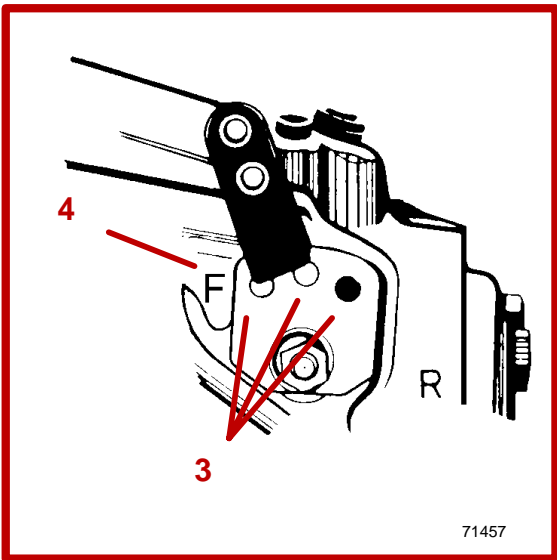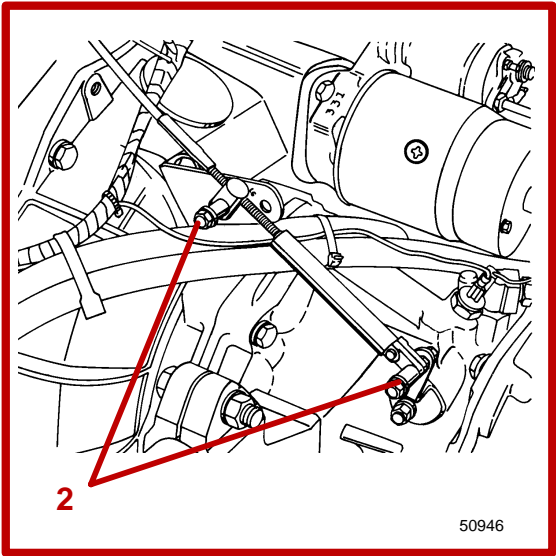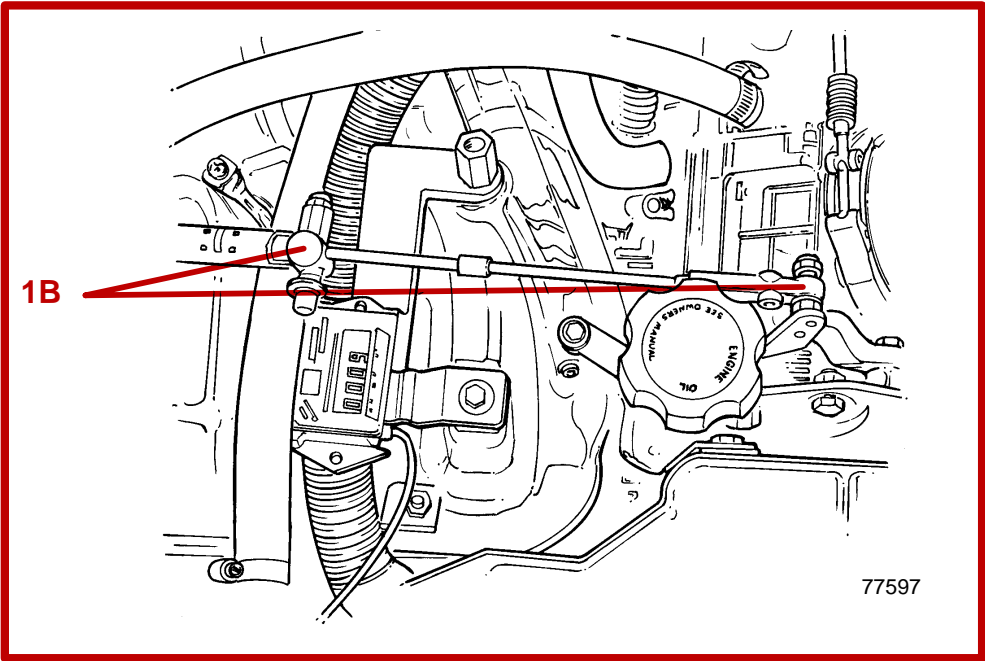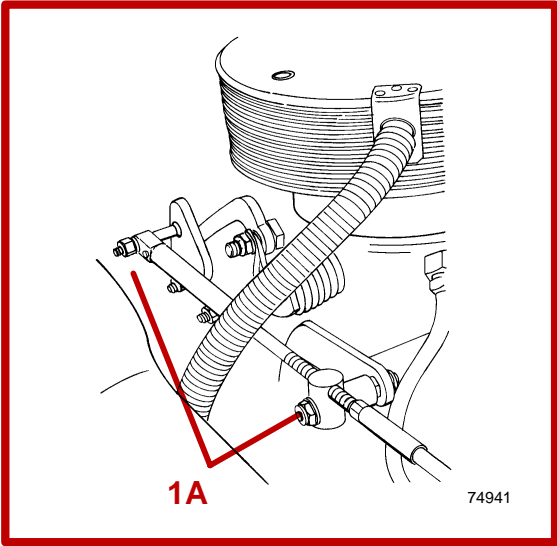

Lubrication

CA73

Throttle Cable

- 1 Lubricate pivot points with SAE 30W motor oil.

CH33

A 350 Mag MPI Models

B 8.1S Horizon Models

CC1020

Shift Cable

- 2 Lubricate pivot points with SAE 30W motor oil.
- 3 Lubricate poppet ball and holes in lever with SAE 30W motor oil.

IMPORTANT: Poppet Ball MUST BE centered in detent hole for each F-N-R position.

- 4 Shift lever must be over this letter when propelling boat FORWARD. This does not apply to Velvet Drive Down-Angle Transmission. On this transmission, the shift lever will be positioned aft (rear) for "Forward Gear - Right Hand Rotation Propeller" and will be positioned forward (front) for "Forward Gear - Left Hand Rotation Propeller."

CAUTION

Remote control shift cable and linkages must position transmission shift lever so that it is fully in the FORWARD and REVERSE gear detent positions with the lever over the letter "F" on transmission case when propelling boat forward. There are no letters "F or R" on Velvet Drive Down-Angle and V-Drive Transmissions. IMPROPER POSITIONING OF SHIFT LEVER MAY CAUSE TRANSMISSION TO FAIL. Damage caused to transmission as a result of improper shift lever positioning will not be covered by Velvet Drive Transmission Warranty.



To obtain service and/or parts literature for your Velvet Drive transmission, contact:

Velvet Drive
Marine and Industrial Transmissions
200 Theodore Rice Boulevard
Industrial Park
New Bedford, MA 02745 U.S.A.

CC846

To obtain service and/or parts literature for your ZF/Hurth transmission, contact:

Mercury Marine
Publications Department
P.O. Box 1939
Fond du Lac, WI 54936-1939

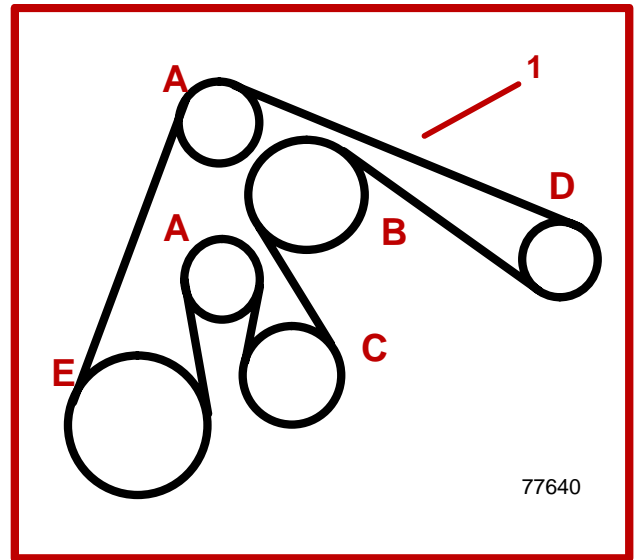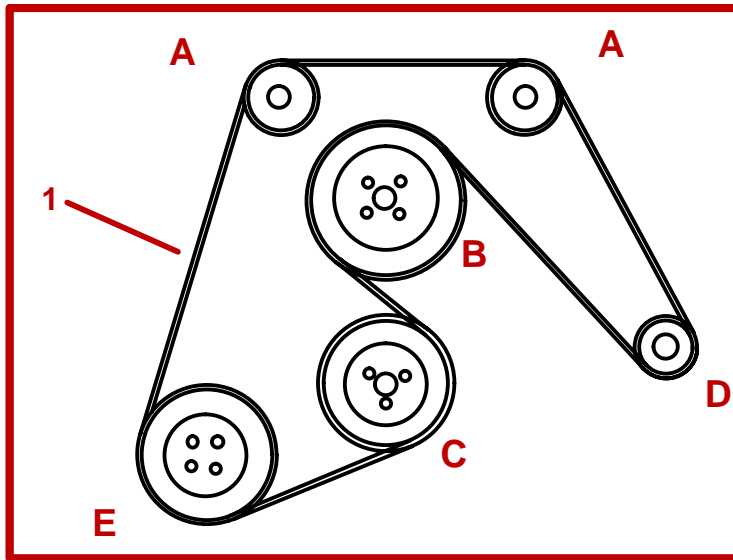

77640

CC992

Serpentine Drive Belt

⚠ WARNING

Avoid injury caused by hands or clothing being caught between belts and pulleys. Make sure engine is shut off and ignition key is removed before inspecting belts.

Belt must be periodically inspected for condition and tension.

NOTE: Belt deflection is to be measured on the belt at the location that has the longest distance between two pulleys.

- 1** Check the tension of the serpentine drive belt. If there is more than 1/4 in. (6 mm) deflection, the tension needs adjustment.

See your Authorized Mercury MerCruiser Dealer to have the tension adjusted or belt replaced.

A Idler Pulley

B Circulating Pump Pulley

C Crankshaft Pulley

D Alternator Pulley

E Seawater Pump Pulley

Miscellaneous Maintenance

Battery

All lead acid batteries discharge when not in use. Recharge every 30 to 45 days or when specific gravity drops below battery manufacturer's specifications.

Refer to specific instructions and warnings accompanying your battery. If this information is not available, observe the following precautions when handling a battery.

WARNING

Avoid serious injury from gasoline fire or explosion. Do not use jumper cables and a booster battery to start engine. Do not recharge a weak battery in the boat. Remove battery and recharge in a ventilated area away from fuel vapors, sparks or flames.

WARNING

Batteries contain acid which can cause severe burns - Avoid contact with skin, eyes and clothing. Batteries also produce hydrogen and oxygen gases when being charged. This explosive gas escapes fill/vent cell caps and may form an explosive atmosphere around the battery for several hours after it has been charged. Sparks or flames can ignite the gas and cause an explosion which may shatter the battery and could cause blindness or other serious injury.

Safety glasses and rubber gloves are recommended when handling batteries or filling with electrolyte. Hydrogen gases that escape from the battery during charging are explosive. When charging batteries, be sure battery compartment or area where batteries are located, is well-vented. Battery electrolyte is a corrosive acid and should be handled with care. If electrolyte is spilled or splashed on any part of the body, immediately flush the exposed area with liberal amounts of water and obtain medical aid as soon as possible.

Inspection And Maintenance

Inspect power package often, and at regular intervals, to help maintain its top operating performance and correct potential problems before they occur. The entire power package should be checked carefully, including all accessible engine parts.

Check for loose, damaged or missing parts, hoses and clamps; tighten or replace as required.

Check plug leads and electrical leads for damage.

Remove and inspect propeller. If badly nicked, bent or cracked, see your Authorized Mercury MerCruiser Dealer.

Repair nicks and corrosion damage on power package exterior finish. Use Quicksilver spray paints - see your Authorized Mercury MerCruiser Dealer.

Cold Weather Or Extended Storage

Power Package Lay Up

IMPORTANT: Mercury MerCruiser strongly recommends that this service be performed by an Authorized Mercury MerCruiser Dealer. Damage caused by freezing IS NOT covered by the Mercury MerCruiser Limited Warranty.

WARNING

Avoid Fire or Explosion: Ensure that engine compartment is well ventilated and no gasoline vapors are present during the following operation to prevent a potential fire hazard.

WARNING

BE CAREFUL while working on fuel system; gasoline is extremely flammable and highly explosive under certain conditions. Be sure that ignition key is OFF and do not smoke or allow sources of spark and/or open flames in the area.

WARNING

Avoid Fire or Explosion: Fuel injection system is pressurized during operation. Use care when removing water separating fuel filter. Fuel could spray on hot engine causing fire or explosion. Allow engine to cool down before attempting to remove the water separating fuel filter in the following procedure. Also, hold a clean shop towel over the water separating fuel filter when removing it, to help avoid fuel spraying on the engine.

CAUTION

DO NOT operate engine without water flowing through seawater pickup pump, as pump impeller may be damaged and subsequent overheating damage to engine may result.

IMPORTANT: Before starting engine, a water source must be attached to the seawater pickup pump. Follow all warnings and flushing attachments procedures stated, in **FLUSHING COOLING SYSTEM**.

- 1 Fill fuel tank with fresh gasoline that does not contain alcohol and a sufficient amount of Quicksilver Gasoline Stabilizer for Marine Engines to treat gasoline. Follow instructions on container.
- 2 **If boat is to be placed in storage with fuel containing alcohol in fuel tanks (if fuel without alcohol is not available):** Fuel tanks should be drained as low as possible and Quicksilver Gasoline Stabilizer for Marine Engines added to any fuel remaining in the tank. Refer to Fuel Recommendations for additional information.

NOTE: If desired, a portable fuel tank can be used to perform the remainder of the power package layup procedures. Be sure to add an appropriate amount of Gasoline Stabilizer to the portable tank.

- 3 Operate engine sufficiently to bring it up to normal operating temperature and allow fuel with Quicksilver Gasoline Stabilizer to circulate through fuel system. Shut off engine.
- 4 Change oil and oil filter. Refer to changing crankcase oil.
- 5 Flush cooling system. Refer to Flushing Cooling System.
- 6 Close the fuel shut-off valve, if equipped. If no fuel shut-off valve is present, a suitable method must be employed to STOP the flow of fuel from the fuel tank to the engine before proceeding.
- 7 Prepare fuel system for extended storage as follows:

- A** Allow engine to cool down.
- B** Remove the water separating fuel filter. Refer to Changing Water Separating Fuel Filter.
- C** Pour out a small amount of fuel into a suitable container, then add approximately 2 fluid ounces (60 ml) of Quicksilver 2-Cycle Outboard Oil to fuel in the water separating fuel filter.
- D** Reinstall water separating fuel filter.
- E** Disconnect harness connections from fuel pump and fuel boost pump.
- F** Start and operate engine at idle speed until the water separating fuel filter and fuel injection system are empty and engine stops.
- G** Remove and discard water separating fuel filter.
- H** Install a new water separating fuel filter.
- I** Reconnect harness connections at both fuel pumps.
- 8** Clean flame arrestor. Refer to Cleaning Flame Arrestor and Related Components.
- 9** Lubricate all items listed in Lubrication section.
- 10** Drain seawater section of cooling system. Refer to Draining Instructions.
- 11** Test coolant to ensure that it will withstand the lowest temperature expected during storage.
- 12** Service batteries.
- 13** Clean outside of engine and repaint any areas required with Quicksilver Primer and Spray Paint. After paint has dried, spray Quicksilver Corrosion and Rust Preventive Type II or wipe down with Quicksilver Storage Seal or SAE 20W engine oil.

Draining Instructions

NOTE: If recommended coolant is unavailable, any type of ethylene glycol based antifreeze may be used, but it will require replacement every two years.

IMPORTANT: Drain seawater section of closed cooling system only.

IMPORTANT: Boat must be as level as possible to ensure complete draining of cooling system.

CAUTION

Seawater section of cooling system **MUST BE COMPLETELY** drained for winter storage or immediately after cold weather use if the possibility of freezing temperatures exist. Failure to comply may result in trapped water causing freeze and/or corrosion damage to engine. Damage caused by freezing **IS NOT** covered by the Mercury MerCruiser Limited Warranty.

CAUTION





If engine will be exposed to freezing temperatures, ensure closed cooling section is filled with an ethylene glycol antifreeze and water solution properly mixed to protect engine to lowest temperature to which it will be exposed.

IMPORTANT: Closed cooling section must be kept filled year-round with recommended coolant.

IMPORTANT: Do not use Propylene Glycol Antifreeze in the closed cooling section of the engine.

CAUTION





Ensure that boat is out of the water or seacock is closed and that bilge pump is operating. Excess water in the bilge can damage engine or cause boat to sink.

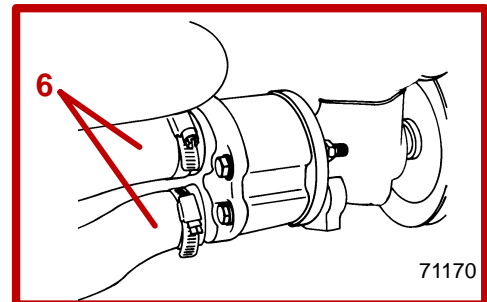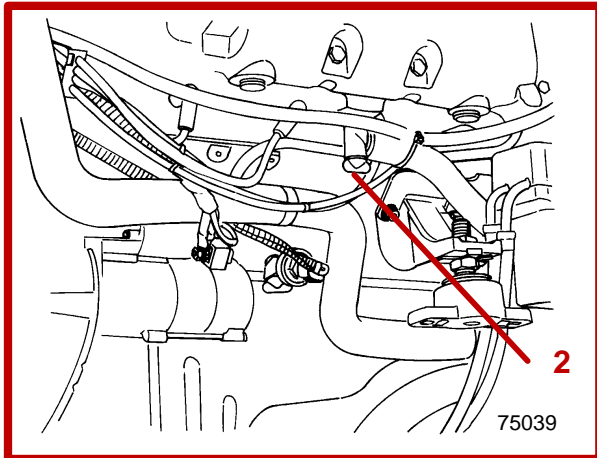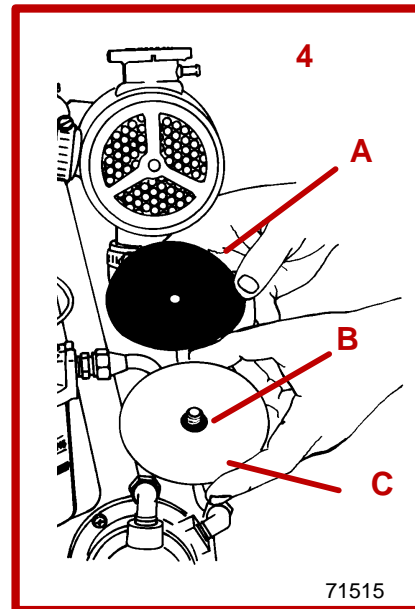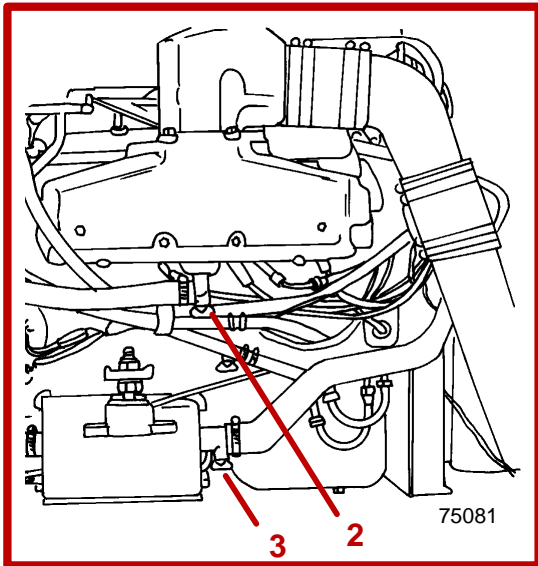350 MAG MPI Only

- 1 Ensure engine is as level as possible to ensure complete draining of cooling system.
- 2 Remove drain plugs (port and starboard) from bottom of exhaust manifolds.
- 3 Remove drain plug from fuel cooler, if equipped.
- 4 Remove end caps (C), sealing washers (B) and gaskets (A) from the heat exchanger.

IMPORTANT: Use compressed air to blow any remaining water from the tubes in the heat exchanger.

- 5 Repeatedly clean out drain holes using a stiff piece of wire. Do this until entire system is drained.
- 6 Loosen hose clamps and remove both hoses from seawater pickup pump.
- 7 Crank engine over slightly with starter motor to purge any water trapped in seawater pickup pump. **DO NOT** allow engine to start.
- 8 After seawater section of cooling system has been drained completely, reconnect all hoses, reinstall heat exchanger end caps with new gaskets, and reinstall drain plugs.

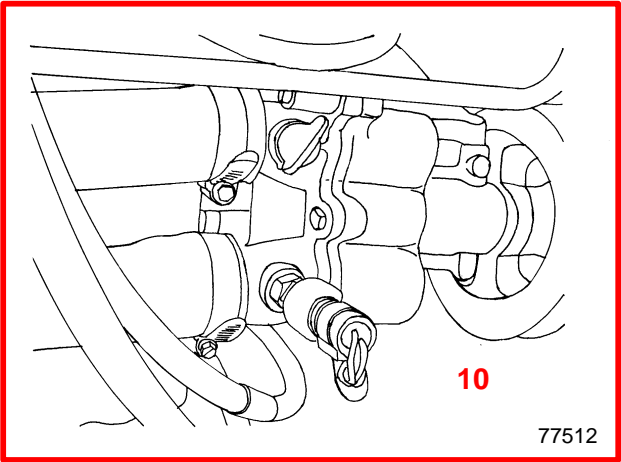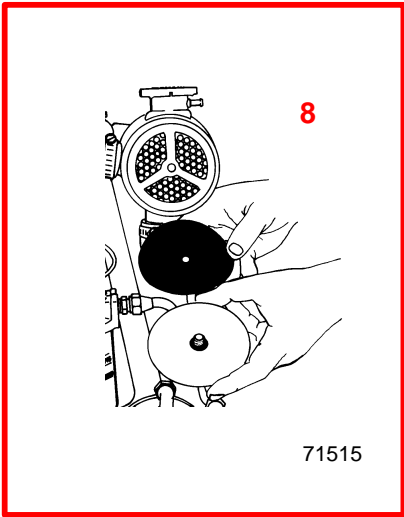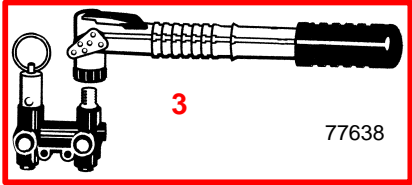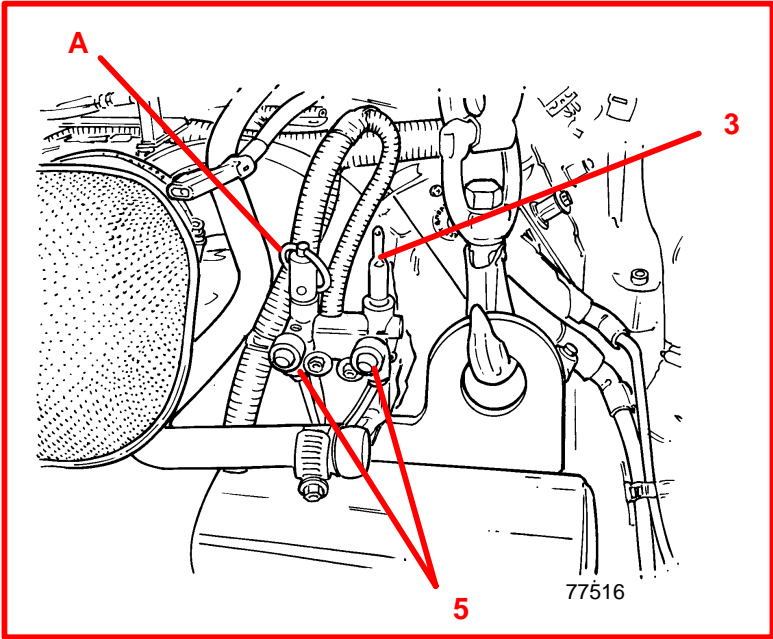

8.1 S Horizon Only

CC1024

SINGLE POINT DRAIN SYSTEM

CAUTION

Freeze damage can occur if operating where temperatures are below 32° F. Use Manual Drain System to ensure heat exchanger is completely drained.

NOTE: This procedure is written for the air pump that is attached to the engine. However, any air source can be used.

- 1 Remove air pump from engine.
- 2 Ensure that lever on top of pump is flush with the handle (horizontal).
- 3 Install air pump on the actuator fitting.
- 4 Pull lever on air pump up (vertical) to lock pump on actuator fitting.
- 5 Pump air into the system until both green indicators extend and water drains from both sides of the engine.
- 6 Most water will drain from the engine in 3-4 minutes, however, some will remain trapped in the heat exchanger. In order to prevent freeze damage, leave system pressurized while transporting boat or during other maintenance items to allow the remaining water to drain.

IMPORTANT: Before launching boat, pull up on manual release valve (A). Verify that green indicators are no longer extended.

CAUTION




Manual release valve may not close completely. Ensure valve is completely seated.

MANUAL DRAIN SYSTEM

NOTE: If air actuated drain system fails, use the blue drain plugs to drain engine.

NOTE: It may be necessary to lift, bend or lower hoses to allow water to drain completely when hoses are disconnected.

- 7 Remove blue drain plugs from front and rear of cool fuel cell and from the seawater pump.
- 8 Remove end caps, sealing washers and gaskets from heat exchangers.
- 9 Repeatedly clean out drain holes using a stiff piece of wire. Do this until entire system is drained.
- 10 Remove both hoses from seawater pump.
- 11 Crank engine over slightly with starter motor to purge any water trapped in seawater pickup pump. **DO NOT ALLOW ENGINE TO START.**

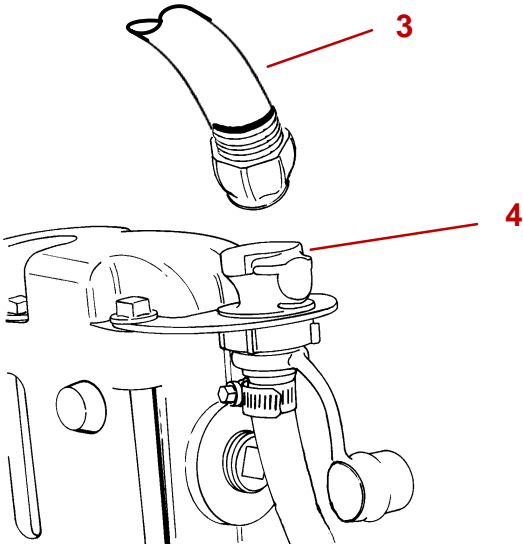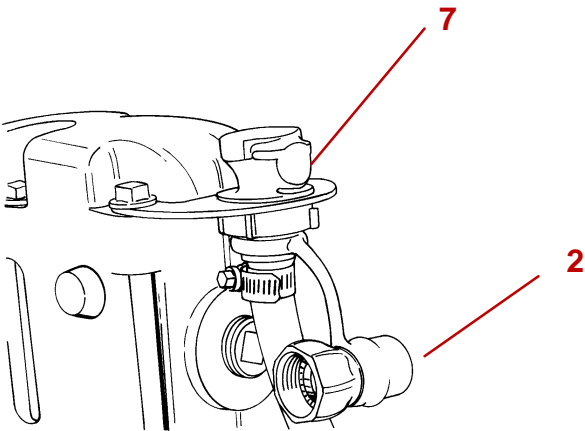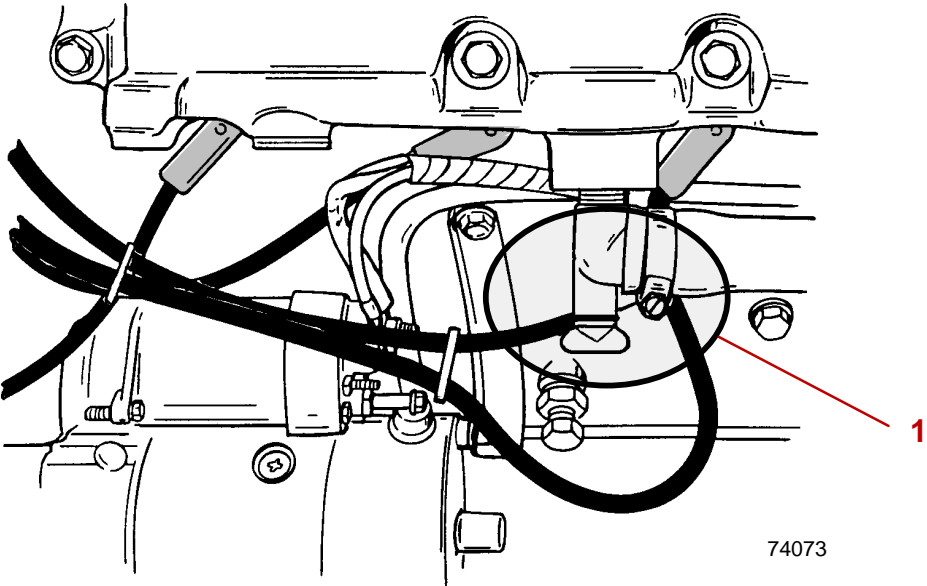

Flushing Cooling System – 350 MAG MPI Only

NOTE: Flushing is needed only for saltwater applications. Flushing is recommended after each outing for best results.

CAUTION

Do NOT start engine at any point in this procedure. If boat is in the water, starting engine during this procedure will pull in seawater. If boat is out of the water, starting engine may damage the seawater pump.

IMPORTANT: Do not use this method on boats equipped with waterlift exhaust collectors or mufflers.

- 1 Remove blue drain plug from the 90° elbows located on the bottom of both exhaust manifolds.
- 2 Remove blue cap from flush socket.
- 3 Attach quick connect to a water hose.
- 4 Turn on the water hose.
- 5 Snap the quick connect and the water hose into the flush socket on the engine.


IMPORTANT: Run bilge pump during flushing to pump flushing water overboard.

- 6 Flush engine for 10 minutes.
- 7 Disconnect the quick connect and water hose from the flush socket on the engine by pressing the release button on the flush socket.
- 8 Reinstall both drain plugs into the 90° elbows located on the bottom of both exhaust manifolds.
- 9 Reconnect the quick connect and hose into the flush socket on the engine and let flushing water run for a maximum of 15 seconds. This amount of flushing water is used to fill exhaust manifolds and flush the exhaust elbows.

CAUTION

Do not let water run more than 15 seconds or too much flushing water will collect in the muffler.

- 10 Disconnect the quick connect and water hose from the flush socket on the engine.
- 11 Attach to next engine, if equipped, and repeat procedure.
- 12 Turn off water.
- 13 Remove quick connect from the water hose.
- 14 Replace blue cap into the flush socket on the engine.

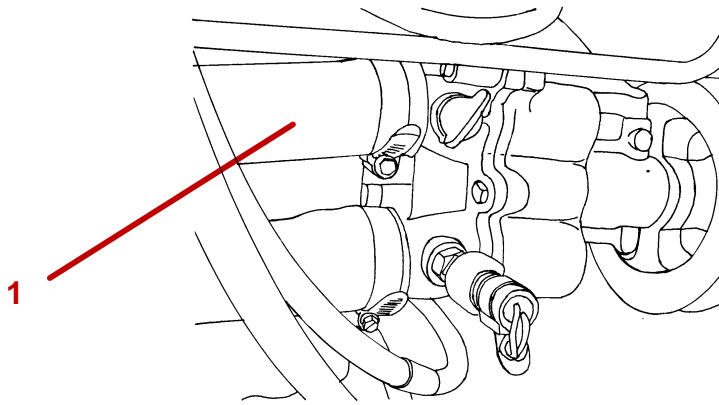

CH48

Flushing Cooling System – 8.1 S Horizon Only

⚠ WARNING

When flushing, be certain the area around propeller is clear, and no one is standing nearby. To avoid possible injury, remove propeller.

⚠ CAUTION

Do not run engine above 1500 rpm when flushing. Suction created by seawater pickup pump may collapse flushing hose, causing engine to overheat.

⚠ CAUTION

Watch temperature gauge on dash to ensure that engine does not overheat.

⚠ CAUTION

If cooling system is to be flushed with boat in the water, water inlet valve (if equipped) must be closed, or water inlet hose must be disconnected and plugged to prevent water from flowing into boat.

⚠ CAUTION

If boat is in the water, do not open water inlet valve until engine is to be restarted to prevent contaminated water from flowing back into engine.

NOTE: To prevent silt and/or salt buildup in cooling system, flush with freshwater at specified intervals.

- 1 Disconnect water inlet hose (upper hose) from aft end of seawater pickup pump. Using appropriate connector, connect hose between connector and water tap.
- 2 Partially open water tap (about 1/2 maximum).
- 3 Place remote control in NEUTRAL, idle speed position, and start engine. Operate engine at idle speed, in NEUTRAL, for about 10 minutes or until discharge water is clear.
- 4 Stop engine. Shut off water, remove flushing connector from pump inlet and reconnect water inlet hose. Tighten hose clamp securely.

Battery Winter Storage

Follow battery manufacturer's instructions for storage.

Power Package Recommissioning

WARNING

To prevent possible injury or damage to equipment, do not install battery until all maintenance has been performed on engine.

CAUTION

Refer to **FLUSHING COOLING SYSTEM** before starting engine.

- 1 Verify that all cooling system hoses are connected and tight and all drain plugs are installed and tight.

IMPORTANT: Before launching boat, pull up on manual release valve. Verify that green indicators are no longer extended.

- 2 Pull up on manual release valve to release pressure from the drain system.

CAUTION

Manual release valve may not close completely. Ensure valve is completely seated.

- 3 Verify that air actuator and water drain system pressure indicators have returned to the closed position and that the manual relief valve is completely closed.
- 4 Inspect serpentine drive belt condition and tension. Refer to Serpentine Drive Belt.
- 5 Perform all lubrication and maintenance specified for completion Annually in maintenance schedule, except items which were performed at time of engine layup.

CAUTION

When installing battery (in next step), be sure to connect positive battery cable to positive (+) terminal and negative (grounded) battery cable to negative (–) battery terminal. If battery cables are reversed, damage to electrical system WILL result.

- 6 Install fully charged battery. Clean battery cable clamps and terminals to help retard corrosion. Coat terminal connections with a battery terminal anti-corrosion agent.

CAUTION

DO NOT operate engine without cooling water being supplied to seawater pickup pump or water pump impeller will be damaged and subsequent overheating damage to engine may result.

- 7 Start engine and closely observe instrumentation to ensure that all systems are functioning properly.
- 8 Carefully inspect entire engine for fuel, oil, water and exhaust leaks.
- 9 Check steering system, shift and throttle controls for proper operation.

Troubleshooting

Starter Motor Will Not Crank Engine, Or Cranks Slow

Possible Cause	Remedy
Battery switch turned off.	Turn switch on.
Remote control not in neutral position.	Position control lever in neutral.
Open circuit breaker or blown fuse.	Check and reset circuit breaker or replace fuse.
Loose or dirty electrical connections or damaged wiring.	Check all electrical connections and wires (especially battery cables). Clean and tighten faulty connection.
Bad battery.	Test and replace if bad.

CC1033

Engine RPM Decreases, Will Not Rise Above 2000 RPM

Possible Cause	Remedy
Guardian Mode.	Have an Authorized Mercury MerCruiser Dealer check trouble codes to determine fault.

CH

Engine Guardian Strategy

Possible Cause	Remedy
Sensor Malfunction - 2 beeps per minute.	Have an Authorized Mercury MerCruiser Dealer check trouble codes to determine fault.
Disconnected, short or corroded circuit - 2 beeps per minute.	
Engine coolant temperature overheat condition - constant beep.	
Engine oil pressure low - constant beep.	
Maximum RPM exceeded - constant beep.	
Seawater pressure low - constant beep.	
Exhaust manifold overheat condition - constant beep.	

Engine Will Not Start, Or Is Hard To Start

Possible Cause	Remedy
Improper starting procedure.	Read starting procedure.
Empty fuel tank or fuel shutoff valve closed.	Fill tank or open valve.
Engine flooded.	Do not attempt to start engine for at least 5 minutes. Refer to Starting Procedures.
Faulty ignition system component.	Service ignition system.
Clogged fuel filters.	Replace filters.
Stale or contaminated fuel.	If contaminated, drain tank. Fill with fresh fuel.
Fuel line or tank vent line kinked or clogged.	Replace kinked lines or blow out lines with compressed air to remove obstruction.
EFI System Fault.	Have EFI System checked by an Authorized Mercury MerCruiser Dealer.
Faulty wire connections.	Check wire connections.
Lanyard Stop Switch activated.	Check Lanyard Stop Switch.

CH25

Engine Runs Rough, Misses And/Or Backfires

Possible Cause	Remedy
Idle speed too low.	EFI Models: Have EFI system checked by an Authorized Mercury MerCruiser Dealer.
Ignition System fault.	Service ignition system.
Clogged fuel filter.	Replace filter.
Stale or contaminated fuel.	If contaminated, drain tank. Fill with fresh fuel.
Kinked or clogged fuel line or fuel tank vent line.	Replace kinked lines or blow out lines with compressed air to remove obstruction.
Flame Arrestor plugged with foreign material.	Clean Flame Arrestor.
EFI System Fault.	Have EFI System checked by an Authorized Mercury MerCruiser Dealer.
Low on fuel.	Fill tank.
Engine timing off.	Check timing.

Poor Performance

Possible Cause	Remedy
Throttle not fully open.	Inspect throttle cable and linkages for proper operation.
Damaged or improper propeller.	Replace propeller.
Excessive bilge water.	Drain and check for cause of entry.
Boat overloaded or load improperly distributed.	Reduce load or redistribute load more evenly.
Boat bottom fouled or damaged.	Clean or repair as necessary.
Flame Arrestor dirty.	Clean Flame Arrestor.
Ignition Problem.	See Engine Runs Rough, Misses or Backfires.
Engine overheating.	See Excessive Engine Temperature.
EFI System fault (If Equipped).	Have EFI System checked by an Authorized Mercury MerCruiser Dealer.

Excessive Engine Temperature

Possible Cause	Remedy
Water Inlet valve closed (If Equipped).	Open valve completely.
Drive belt loose or in poor condition.	Replace or adjust belt.
Seawater pickups obstructed.	Remove obstruction.
Faulty thermostat.	Replace.
Coolant level low in closed cooling system.	Check for cause of low coolant level and repair. Fill system with proper coolant solution.
Heat Exchanger Cores plugged with foreign material.	Clean Heat Exchanger.
Loss of pressure in closed cooling system.	Check for leaks. Clean, inspect and test pressure cap.
Kinked, collapsed, or broken hose.	Straighten or replace hose.
Transmission fluid cooler and/or engine oil cooler plugged with foreign material.	Disconnect hoses from coolers and flush out with a water hose in direction opposite normal water flow.

CC1046

Low Engine Coolant Temperature

Possible Cause	Remedy
Faulty Thermostat.	Replace.

CC1047

Low Engine Oil Pressure

Possible Cause	Remedy
Insufficient oil in crankcase.	Check and add oil.
Excessive oil in crankcase (causing it to become aerated).	Check and remove required amount of oil. Check for cause of excessive oil (improper filling, bad fuel pump).
Engine oil cooler hose kinked causing excessive oil temperature and thinning of the oil.	Oil Cooler restricted. Straighten hose or replace, if damaged.
Diluted or improper viscosity oil.	Change oil and oil filter, using correct grade and viscosity oil. Determine cause for dilution (excessive idling, faulty fuel pump).

CC524

Excessive Transmission Fluid Temperature or Slipping Transmission

Possible Cause	Remedy
Low fluid level.	Maintain fluid level.
Transmission shift lever not positioned properly (causing clutches to slip and overheat fluid).	Inspect shift linkages and shift lever positioning.
Fluid cooler hoses kinked.	Straighten hoses or replace, if damaged.

Battery Will Not Come Up On Charge

Possible Cause	Remedy
Excessive current draw from battery.	Turn off non-essential accessories.
Loose or dirty electrical connections or damaged wiring.	Check all associated electrical connections and wires (especially battery cables). Clean and tighten faulty connections. Repair or replace damaged wiring.
Alternator drive belt loose or in poor condition.	Replace and/or adjust.
Unacceptable battery condition.	Test battery.

Remote Control Operates Hard, Binds, Has Excessive Free-play Or Makes Unusual Sounds

Possible Cause	Remedy
Insufficient lubrication on shift and throttle linkage fasteners.	Lubricate.
Loose or missing shift and throttle linkages.	Check all throttle linkages. If any are loose or missing, see Authorized Mercury MerCruiser Dealer immediately.
Obstruction in shift or throttle linkages.	Remove obstruction.
Shift or throttle cable kinked.	Straighten cable or have dealer replace cable if damaged beyond repair.

Owner Service Assistance

Local Repair Service

Always return your Mercury MerCruiser powered boat to your local Authorized Dealer, should the need for service arise. Only he has the factory trained mechanics, knowledge, special tools and equipment and the genuine Quicksilver parts and accessories* to properly service your engine should the need occur. He knows your engine best.

* Quicksilver parts and accessories are engineered and built by Mercury Marine, specifically for Mercury MerCruiser® sterndrives and inboards.

Service Away From Home

If you are away from your local dealer and the need arises for service, contact the nearest Authorized Dealer. Refer to the Yellow Pages of the telephone directory. If, for any reason, you cannot obtain service, contact the nearest Regional Service Center. Outside the United States and Canada, contact the nearest Marine Power International Service Center.

Parts And Accessories Inquiries

All inquiries concerning Quicksilver replacement parts and accessories should be directed to your local Authorized Dealer. The dealer has the necessary information to order parts and accessories for you should he not have them in stock. Only Authorized Dealers can purchase genuine Quicksilver parts and accessories from the factory. Mercury Marine does not sell to unauthorized dealers or retail customers. When inquiring on parts and accessories, the dealer requires the **motor model** and **serial number(s)** to order the correct parts.

Resolving A Problem



Satisfaction with your Mercury MerCruiser product is very important to your dealer and to us. If you ever have a problem, question or concern about your power package, contact your dealer or any Authorized Mercury MerCruiser Dealership. If additional assistance is required, take these steps.

- 1** *Talk with the dealership's sales manager or service manager. If this has already been done, then contact the owner of the dealership.*
- 2** *Should you have a question, concern or problem that cannot be resolved by your dealership, please contact Mercury Marine Service Office for assistance. Mercury Marine will work with you and your dealership to resolve all problems.*

The following information will be needed by the service office:




- Your name and address
- Daytime telephone number
- Model and serial numbers for your power package
- The name and address of your dealership
- Nature of problem

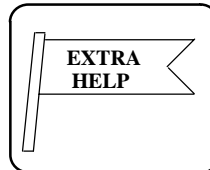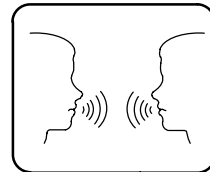Mercury Marine Service Offices are listed on the next page.



Mercury Marine Service Offices

For assistance, call, fax, or write. Please include your daytime telephone number with mail and fax correspondence.

Telephone 	Fax 	Mail 
United States		
(405) 743-6566	(405) 743-6570	Mercury MerCruiser 3003 N. Perkins Rd. Stillwater, OK 74075
Canada		
(905) 567-MERC (6372)	(905) 567-8515	Mercury Marine Ltd. 2395 Meadowpine Blvd. Mississauga, Ontario Canada L5N 7W6
Australia, Pacific		
(61) (3) 9791-5822	(61) (3) 9793-5880	Mercury Marine Australia 132-140 Frankston Road Dandenong, Victoria 3164 Australia
Europe, Middle East, Africa		
(32) (87) 32 • 32 • 11	(32) (87) 31 • 19 • 65	Marine Power - Europe, Inc. Parc Industriel de Petit-Rechain B-4800 Verviers Belgium
Mexico, Central America, South America, Caribbean		
(305) 385-9585	(305) 385-5507	Mercury Marine - Latin America & Caribbean 9010 S.W. 137th Ave. Suite 226 Miami, FL 33186 U.S.A.
Japan		
81-53-426-2500	81-53-423-2510	Mercury Marine - Japan 283-1 Anshin-cho Hamamatsu Shizuoka, 435-0005 Japan
Asia, Singapore		
5466160	5467789	Mercury Marine Singapore 72 Loyang Way Singapore 508762

Customer Service Literature

English Language

English language publications are available from:

Mercury Marine
Attn: Publications Department
W6250 West Pioneer Road
P.O. Box 1939
Fond du Lac, WI 54936-1939

Outside the United States and Canada, contact the nearest Mercury Marine or Marine Power International Service Center for further information.

When ordering be sure to:

1. List your product, model, year and serial number(s).
2. Check the literature and quantities you want.
3. Enclose full remittance in check or money order (NO C.O.D.'s).

CA781

Other Languages

To obtain an Operation and Maintenance and Warranty Manual in another language, contact the nearest Mercury Marine or Marine Power International Service Center for information. A list of part numbers for other languages is provided with your power package.

caa781

Andre sprog

Kontakt det nærmeste Mercury Marine eller Marine Power International servicecenter for oplysninger om hvordan du kan anskaffe en Betjenings- og vedligeholdelsesmanual på et andet sprog. En liste med reservedelsnumre for andre sprog leveres sammen med din power-pakke.

cab781

Andere talen

Voor het verkrijgen van een Handleiding voor gebruik en onderhoud in andere talen dient u contact op te nemen met het dichtstbijzijnde internationale servicecentrum van Mercury Marine of Marine Power voor informatie hierover. Een lijst met onderdeelnummers voor andere talen wordt bij uw motorinstallatie geleverd.

cac781

Muut kielet

Saadaksesi Käyttö- ja huolto-ohjekirjoja muilla kielillä, ota yhteys lähimpään Mercury Marine tai Marine Power International huoltokeskukseen, josta saat lähempiä tietoja. Moottorisi mukana seuraa monikielinen varaosanumeroluettelo.

cad781

Autres langues

Pour obtenir un Manuel d'utilisation et d'entretien dans une autre langue, contactez le centre de service après-vente international Mercury Marine ou Marine Power le plus proche pour toute information. Une liste des numéros de pièces en d'autres langues accompagne votre bloc-moteur.

Andere Sprachen

Um eine Betriebs– und Wartungsanleitung in einer anderen Sprache zu erhalten, wenden Sie sich an das nächste Mercury Marine oder Marine Power International Service Center. Eine Liste mit Teilenummern für Fremdsprachen ist im Lieferumfang Ihres Motors enthalten.

caf781

Altre lingue

Per ottenere il manuale di funzionamento e manutenzione in altra lingua, contattate il centro assistenza internazionale Mercury Marine o Marine Power più vicino. In dotazione con il gruppo motore, viene fornito l'elenco dei codici prodotto dei componenti venduti all'estero.

cag781

Andre språk

Ytterligere informasjon om bruks– og vedlikeholdshåndbok på andre språk kan fås ved henvendelse til nærmeste internasjonale servicecenter for Mercury Marine eller Marine Power. En liste over delenumre for andre språk følger med aggregatet.

cah781

Outros Idiomas

Para obter um Manual de Operação e Manutenção em outro idioma, contate o Centro de Serviço Internacional de “Marine Power” (Potência Marinha) ou a Mercury Marine mais próxima para obter informações. Uma lista de números de referência para outros idiomas é fornecida com o seu pacote de propulsão.

caj781

Otros idiomas

Para obtener un Manual de operación y mantenimiento en otro idioma, póngase en contacto con el centro de servicio más cercano de Mercury Marine o Marine Power International para recibir información. Con su conjunto motriz se entrega una lista de los números de pieza para los otros idiomas.

cak781

Andra språk

För att få Instruktions– och underhållsböcker på andra språk, kontakta närmaste Mercury Marine eller Marine Power International servicecenter, som kan ge ytterligare information. En förteckning över artikelnummer på andra språk medföljer ditt kraftpaket.

CAm781

Άλλες γλώσσες

Για να αποκτήσετε ένα Εγχειρίδιο Λειτουργίας και Συντήρησης σε άλλη γλώσσα, επικοινωνήστε με το πλησιέστερο Διεθνές Κέντρο Σέρβις της Mercury Marine ή της Marine Power για πληροφορίες. Το πακέτο ισχύος σας συνοδεύεται από έναν κατάλογο αριθμών παραγγελίας για άλλες γλώσσες.

THIS PAGE IS INTENTIONALLY BLANK

Ordering Literature




Before ordering literature, please have the following information about your power package available:

Model _____ **Horsepower** _____
Serial Number _____ **Year** _____

United States and Canada

For information on additional literature that is available for your particular Mercury MerCruiser power package and how to order that literature contact your nearest dealer or contact:

Mercury Marine

Telephone 	Fax 	Mail 
(920) 929-5110	(920) 929-4894	Mercury Marine Attn: Publications Department P.O. Box 1939 Fond du Lac, WI 54936-1939

Outside The United States and Canada

Contact your nearest dealer or Marine Power Service Center for information on additional literature that is available for your particular Mercury MerCruiser power package and how to order that literature.

Please return with payment to:

Mercury Marine
 Attn: Publications Department
 P.O. Box 1939
 Fond du Lac, WI 54936-1939

Ship To: (Please Print Or Type - This Is Your Shipping Label)

Name _____

Address _____

City _____ State _____ ZIP _____
