

GRACO®

Stroller

OWNER'S MANUAL

Model No. _____

Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label on the rear leg of your new stroller.



**Models 7950, 7955,
7965 and 7970**

Congratulations on your purchase of a Graco® stroller!

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco® stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

**Please save your Owner's Manual
for future use.**


Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, www.gracobaby.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.


⚠ WARNING




Never leave child unattended.
Always keep your child in view.

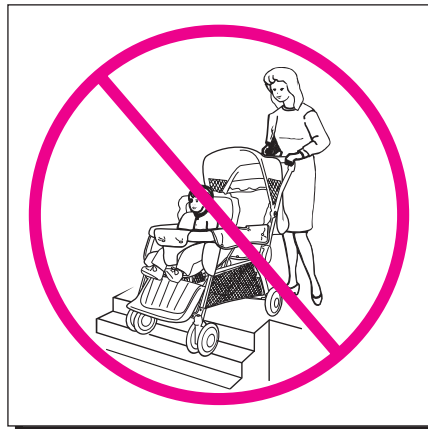

Never use stroller on stairs or escalators.
You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.

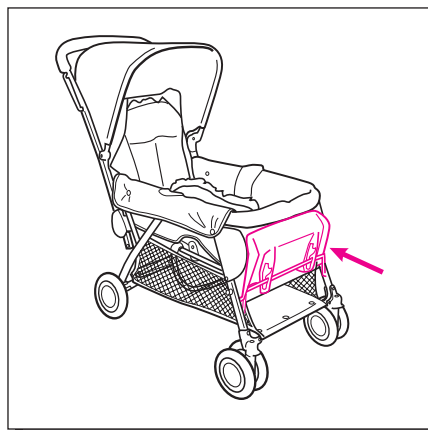

Child may slip into leg openings and strangle. Never use in a reclined carriage position unless front footrest is raised to cover the front opening and wire snapped into lower notch. For rear seat recline, snap flap in six (6) places to back of front seat.

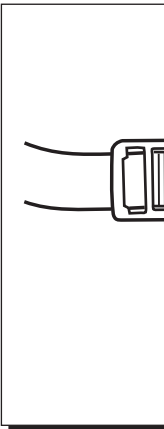

Avoid serious sliding out.




Avoid strangulation items with a strap, neck, suspension, or attachment.




DO NOT place bags, parcels on handle or on the child or of the stroller.

Failure to follow these warnings and the assembly instructions could result in serious injury or death.

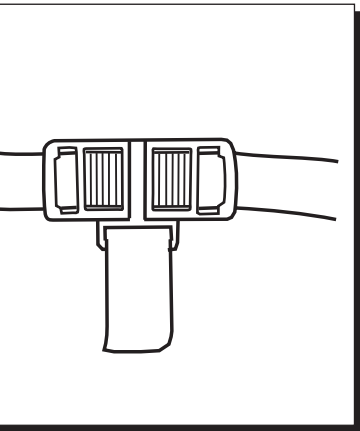

...d serious injury from falling or ...g out. Always use seat belt.

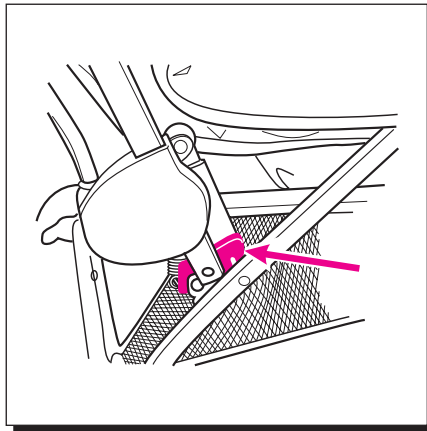

Be certain the stroller is fully erected and latched before allowing your child near the stroller.



Never place child in the stroller with head toward front of the stroller.



...strangulation. **DO NOT** place ... with a string around your child's ... suspend strings from this prod- ... attach strings to toys.



Use of the stroller with two children weighing a total of more than 80 lbs. (36.2 kg) will cause excessive wear and stress on the stroller. The weight in either seat should not exceed 40 lbs. (18.1 kg).



Avoid possible tipping back. When using with only one child, always use front seat. When using with two children, always place the child in the front seat before placing the other child in the rear seat. Always remove the child from the rear seat before removing the child from the front seat.



DO NOT place purses, shopping parcels and accessory items in the basket or canopy. They may fall on the child or change the balance of the stroller and make it unstable.

TO PREVENT A HAZARDOUS CONDITION, do not place more than 10 lbs. (4.5 kg) in the storage basket or more than 2 lbs. (0.9 kg) in the canopy bag.

NEVER ALLOW YOUR STROLLER to be used as a toy.

STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.


DISCONTINUE USING YOUR STROLLER should it become damaged or broken.

FOR ADDITIONAL IMPORTANT INFORMATION, please see the Helpful Hints and Care and Maintenance sections in these instructions.

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your stroller. If any parts are missing, call Customer Service at 1-800-345-4109 or visit our Internet website, www.gracobaby.com.


THIS PRODUCT REQUIRES ADULT ASSEMBLY. No tools required for assembly.

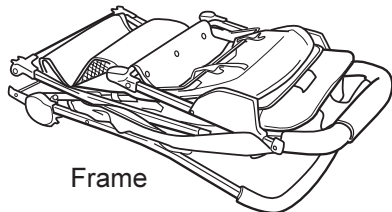

Frame



Rear canopy

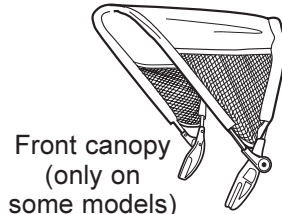


Front canopy (only on some models)



Rear axle



 Rear hubcap (2, only on some models)



Pin (2)




Cap (2, 1 extra)



Retainer (2, 1 extra)



Swivel lock button (2)

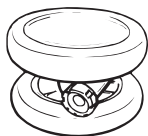

Front wheel assembly (2)




Rear wheel (2)

To Unpack Stroller

Step 1.

Flatten stroller carton to protect floor.


Open stroller on carton as shown until latched.

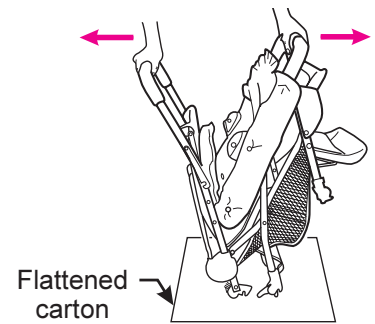

Flattened carton

Step 2.

Be sure frame is latched as shown before continuing assembly.

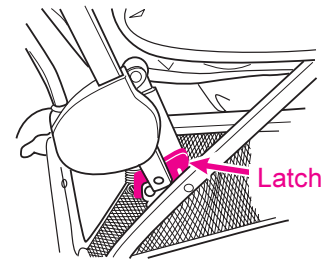


Latch

To Assemble Front Wheels


Step 1.

Snap swivel lock button onto wheel mount as shown. This must be done BEFORE pin is inserted (next step).

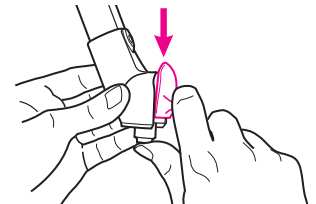

Step 2.

Insert pin through hole in wheel mount. Then push **round** end of a front wheel assembly up onto pin as shown until it snaps into place.

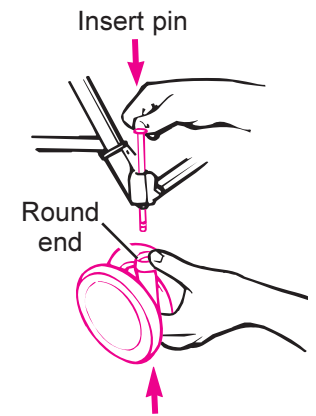

Insert pin

Round end

Check wheel attachment by pulling down on the front wheel assembly.

Push wheels up


Step 3.

Repeat above steps for the other side.

To Assemble Rear Wheels


Step 1.

Turn stroller over as shown.

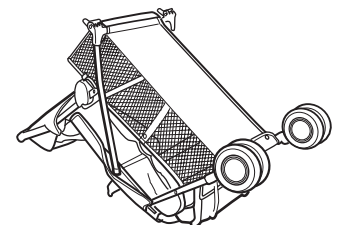


Step 2.

Place **ONE** rear wheel, red retainer, cap, and hubcap (only on certain models) on one end of rear axle **in order** as shown below. Push red retainer onto axle **BEFORE** attaching white cap. **Do not place other wheel on axle at this time.**

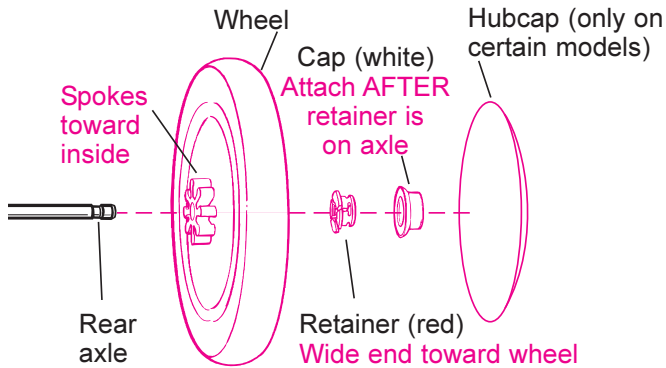


Snap red retainer into axle groove. Then snap cap over the red retainer as shown. **Be sure cap is snapped securely over red retainer.** Snap the hubcap (only on some models) on last.

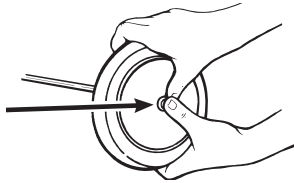

Step 3.


Unsnap the basket flap from the rear brace, and slide rear axle with wheel assembly through the hole in one axle bracket.

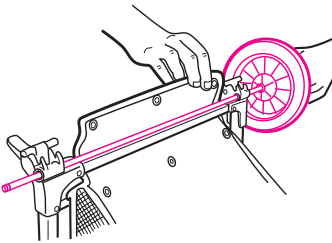

Continue to push the rear axle into the hole of the other axle bracket.

Step 4.


Snap the basket flap around both the rear axle and the rear brace.

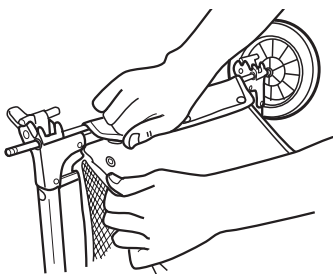

This may be easier if the stroller is partially folded. See the "To Fold Stroller" instructions.


Step 5.

Place other rear wheel onto the rear axle. Snap the red retainer and cap onto the axle as shown in Step 2.

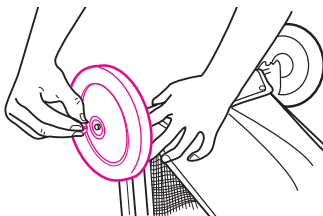

Step 6.


Only on certain models, snap the remaining hubcap onto rear wheel to complete the assembly.

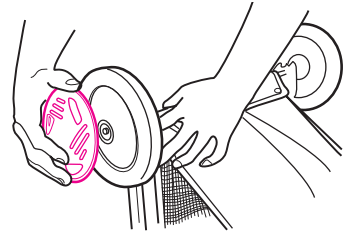

To Unfold Stroller

Step 1.


Release the latch found on one side of stroller.

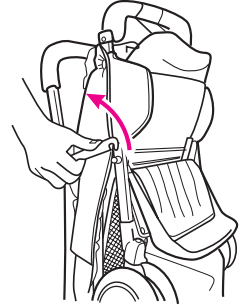

Step 2.

Unfold stroller as shown.

▲ WARNING Be certain the stroller is fully erected and latched before allowing your child near the stroller.

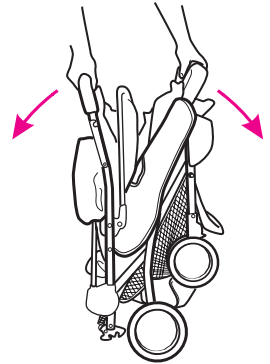

To Raise Footrests


Lift footrest and hook wire into footrest bracket.




To Use Brakes

▲ WARNING Always apply both brakes to park stroller.

Push **DOWN** to park.

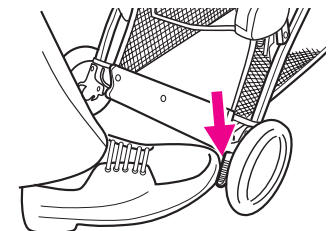

Lift **UP** to stroll.

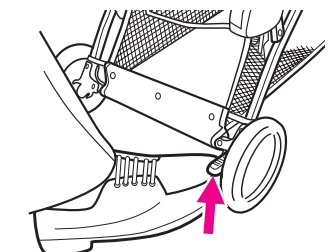


To Secure Your Child

⚠ WARNING Avoid serious injury from falling or sliding out. Always use seat belt.


Step 1.

Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

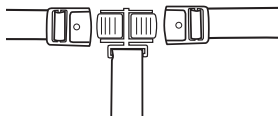

Step 2.

Push in on front of buckle to release.

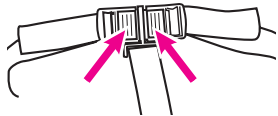


To Adjust Backs

Step 1.


Push back of seat slightly forward while squeezing lever as shown to unlock.

Do not pull on this bar!

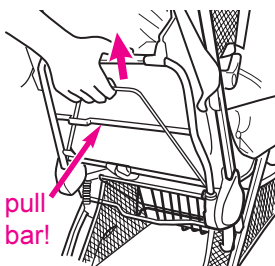


Step 2.

Adjust to desired position. Rear seat has four positions, front seat has three. You may use any combination of seat positions.

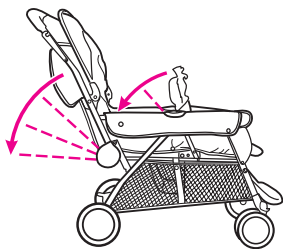


⚠ WARNING Child may slip into leg openings and strangle.

NEVER use front seat in a reclined carriage position unless footrest is raised to cover the front opening and wire is snapped into lower notch.

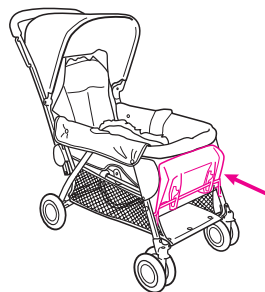

NEVER use rear seat in a reclined carriage position unless footrest opening behind front seat has first been closed by snapping the flap in six places to the back of the front seat.

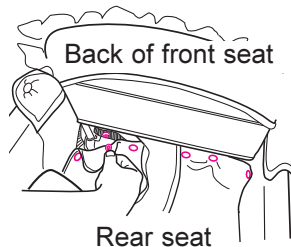


Step 3.

To return seat back to a more upright position, push forward on back until it snaps into desired position. (Front seat middle position locks for safety—unlock by squeezing lever before pushing into full upright position.)

To Change to Swivel or Non-swivel Wheels

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

Before locking swivels, first push stroller forward a few feet to ensure that the wheels are correctly positioned.

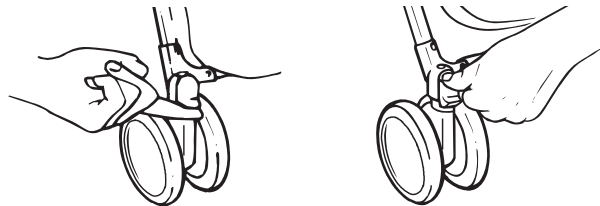

Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.


To Install Rear Canopy

Step 1.

Fully recline the rear seat. Locate small knobs on the inside of the handle.

Step 2.

Hold canopy by mounting brackets as shown. Push brackets in slightly and align holes in brackets with knobs on handle. Mount brackets onto knobs.

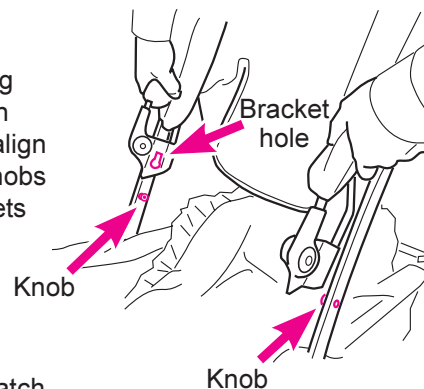

Step 3.

Slide brackets down to latch. **Be sure fabric is not caught under brackets.**

Step 4.

Snap canopy fabric to seat back.

To Remove Rear Canopy

Step 1.


Fully recline the rear seat.

Step 2.

Unsnap canopy fabric from stroller.

Step 3.

Slide both brackets up, then push brackets in slightly to remove canopy.

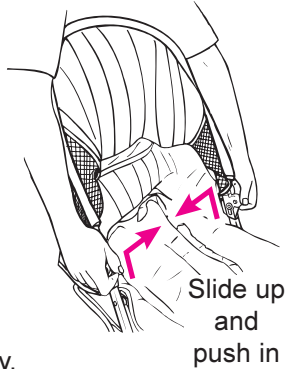

To Install Front Canopy (found only on some models):

Step 1.


Fully recline the front seat.

Step 2.

Unsnap small flaps on top of both armrests.

Step 3.

Make sure arrows on inside of canopy bracket face toward the front of stroller.

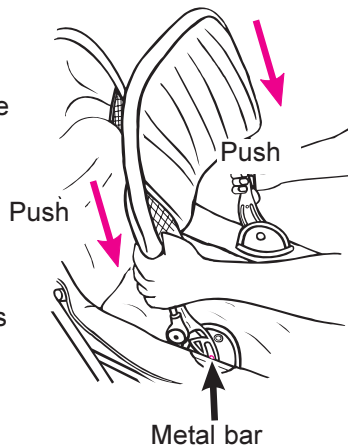

Step 4.

Insert brackets through elastic, then through holes on armrests as shown.

Step 5.

Push both brackets down at the same time onto stroller frame until they snap into place. Brackets must fit over metal bars on inside of frame. **Be sure fabric is not caught under brackets.**


Step 6.

Resnap small flaps on armrests when front canopy is not in use.

To Adjust Canopies

Push or pull canopy to desired position.

Canopy bag (on certain models) carries a maximum of 2 pounds (0.9 kg).

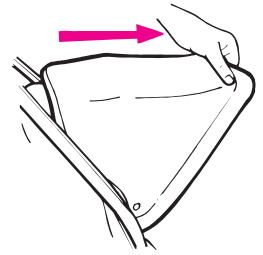


To Fold Stroller

NOTE: Before folding, (1) adjust backs to upright position; (2) fold canopy; (3) align front wheels with frame.


Step 1.

Push on rod to fold as shown.

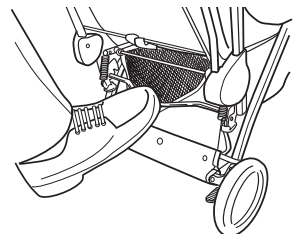


Step 2.

Release secondary latch as shown.

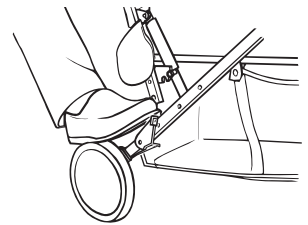


Step 3.

Push handle forward.

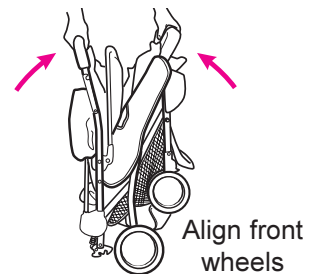


Step 4.

Lock latch.

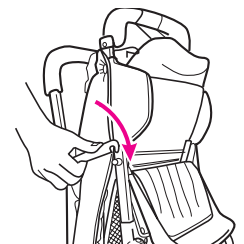

HELPFUL HINTS

IF WHEEL SQUEAKS, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as shown.

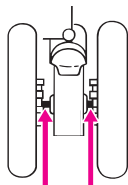

WHEN USING YOUR STROLLER AT THE BEACH, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

CARE AND MAINTENANCE

DO NOT MACHINE WASH SEAT (with permanent inner boards). It should only be wiped with a mild detergent, taking care not to soak the material. **NO BLEACH.**

REMOVABLE SEAT PAD may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

FROM TIME TO TIME CHECK YOUR STROLLER for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

TO CLEAN STROLLER FRAME, use only household soap or detergent and warm water. **NO BLEACH.**

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

Replacement Parts

Instructions for ordering stroller parts:

Complete form at right. Your stroller model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the rear leg of your stroller.** Payment must accompany your order.

Parts List:	Price:**
Seat assembly	\$35.00
Front seat soft pad*	\$18.00
Rear seat soft pad*	\$17.00
Front wheel assembly	\$16.00 (each)
(2 wheels per unit)	
Rear wheel	\$ 8.00
Rear axle	\$ 7.00 (each)
Slung basket	\$16.00
Front footrest cover	\$13.00
Rear footrest cover	\$13.00
Rear canopy fabric	\$12.00
Rear canopy frame	\$ 5.00
Rear canopy mounts (2)	\$ 5.00
Front canopy fabric & frame* ..	\$15.00
Hubcaps*	\$ 7.00

* Only on some models.

** Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

1-800-345-4109

or visit our Internet website, www.gracobaby.com.

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100, MAIN STREET
ELVERSON, PA 19520

Model Number	SHIP TO:
(Must be filled in)	Name
<input type="checkbox"/> Seat assembly	Address
<input type="checkbox"/> Front seat soft pad	City, State, Zip
<input type="checkbox"/> Rear seat soft pad	()
<input type="checkbox"/> Front wheel assembly	Telephone
<input type="checkbox"/> Rear wheel	
<input type="checkbox"/> Rear axle	
<input type="checkbox"/> Slung basket	
<input type="checkbox"/> Front footrest cover	
<input type="checkbox"/> Rear footrest cover	
<input type="checkbox"/> Rear canopy fabric	
<input type="checkbox"/> Rear canopy frame	
<input type="checkbox"/> Rear canopy mounts	
<input type="checkbox"/> Front canopy fabric & frame*	<input type="checkbox"/> Check enclosed (payable to Graco Children's Products Inc.)
<input type="checkbox"/> Hubcaps*	<input type="checkbox"/> Charge to credit card:
* Only on some models.	<input type="checkbox"/> Visa
	<input type="checkbox"/> MasterCard
	<input type="checkbox"/> Discover
Total: _____	Account #: _____
Shipping & handling: _____ \$5.00	Expiration date: _____
6% sales tax (PA only): _____	Signature: _____
Total amount due: _____	