

PS660 Firmware Upgrade Instruction

1. Save firmware file to SD-Card or PS660 internal memory. (Please select one.)

1.1 If want to upgrade firmware from SD-Card.

Save firmware file (*.bin) to SD-Card, then insert SD-Card into card-socket of PS660.


1.2 If want to upgrade firmware from PS660 built-in memory.

Save firmware file (*.bin) to PS660 internal memory via USB cable.


2. Go to service menu to upgrade firmware.

Power on your PS660. Press “ENTER” then “ZOOM-” in sequence on the keypad (Pic 1).

Service menu will display on the screen. Then select ISP - Firmware Upgrade mode.(Pic 2)

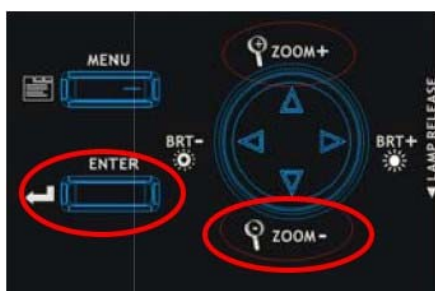

Pic 1

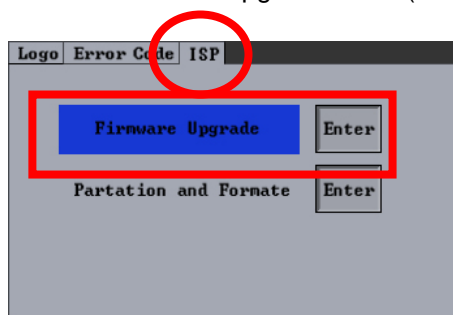


Pic 2

3. Choose Firmware version

If you save the firmware file properly, PS660 will detect new firmware version automatically. Then select “Yes” button to upgrade firmware. (Pic 3)

Notes : If two more firmware files coexist in the SD card / internal memory, DC260 always detect the latest version.

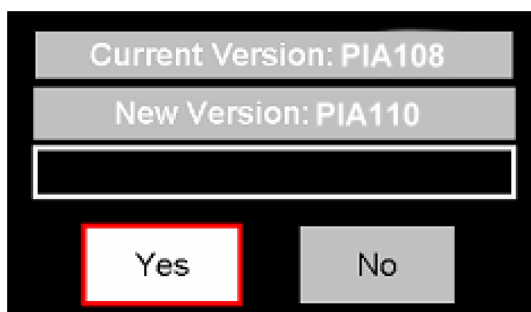

Pic 3

4. Restart unit when firmware upgrade finished


After firmware upgrade is successful, below window will be shown. Then restart your PS660. (Pic 4)



Pic 4

5. Check firmware version

Go to OSD menu to check the firmware version, then execute "Factory Reset". (Pic 5)

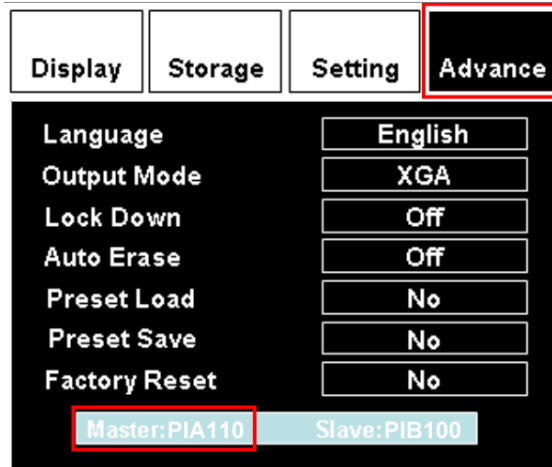

Pic 5

6. Finish