



***MOTOROLA***

 
Mobile  
Telephone  
**E398**

***LET'S START >***

# Welcome

---


Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola E398 series GSM wireless phone.

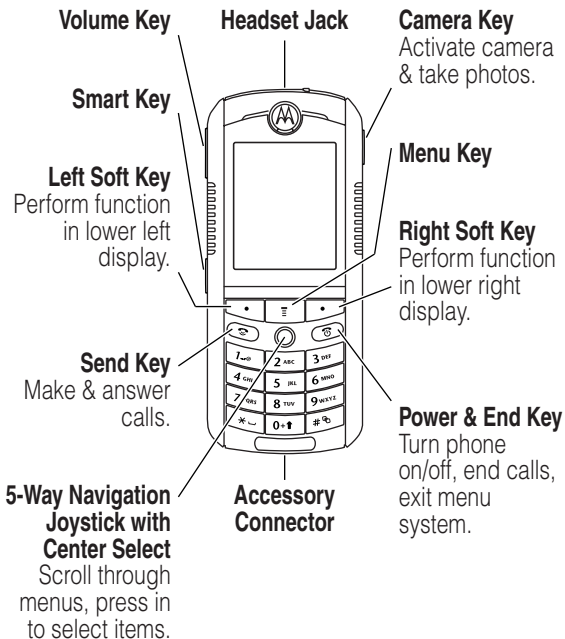

**Note:** Your phone may not appear exactly as shown above. All key locations, sequences, and functions remain the same regardless of your phone's appearance.

# Check It Out!

 ---

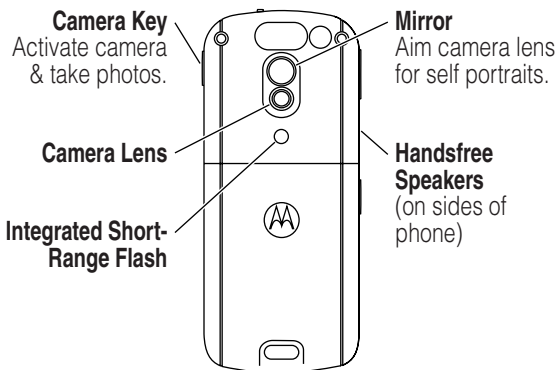

Feature	Description
<b>Take Photo</b>	Press the camera key to activate the camera, point lens at subject, then press the camera key to take a photo.
<b>Send Photo</b>	Send the photo to a phone number or email address: Press <b>STORE</b> (📎) > <b>Send In Message</b> .
<b>Set Photo as Picture ID</b>	Assign a photo to a phonebook entry to enable picture caller ID: ☰ > <b>Multimedia</b> > <b>Pictures</b> > <i>photo</i> ☰ > <b>Apply As</b> > <b>Phonebook Entry</b>

Feature	Description
<b>Send Multimedia Message</b>	<p>Send a multimedia message with pictures, animations, sounds, and videos:</p> <p> &gt; <b>Messages</b> &gt; <b>Create Message</b> &gt; <b>New Multimedia Msg</b></p>
<b>Use Memory Card</b>	<p>Set the memory location you want to use to store and retrieve files:</p> <p>Go to a multimedia menu (such as <b>Pictures</b> or <b>Sounds</b>), then press</p> <p> &gt; <b>Switch Storage Device</b> &gt; <i>device name</i>.</p>
<b>Create Playlist</b>	<p>Create a playlist of songs to play on your phone:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Sounds</b> &gt; <b>[New Playlist]</b></p>
<b>Play Video Clip</b>	<p>Play a video clip:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Videos</b> &gt; <i>video clip</i></p>
<b>Phone Skin</b>	<p>Apply a different skin to the phone display:</p> <p> &gt; <b>Settings</b> &gt; <b>Personalize</b> &gt; <b>Skin</b> &gt; <i>skin</i></p>
<b>Rhythm Lights</b>	<p>Activate rhythm lights to flash in sync with the sounds around you:</p> <p> &gt; <b>Settings</b> &gt; <b>Personalize</b> &gt; <b>Rhythm Lights</b></p>
<b>Ring Lights</b>	<p>Choose ring lights for incoming calls:</p> <p> &gt; <b>Settings</b> &gt; <b>Ring Styles</b> &gt; <b>Ring Lights</b> &gt; <i>light pattern</i></p>
<b>Event Lights</b>	<p>Activate event lights for incoming text and voicemail messages, alarms, and other events:</p> <p> &gt; <b>Settings</b> &gt; <b>Ring Styles</b> &gt; <b>Event Lights</b> &gt; <b>On</b></p>



Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196  
1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)  
[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

# Contents

---

<b>Getting Started</b>	8
About This Guide	8
Installing the SIM Card	9
Installing a Memory Card	11
Battery Use	11
Installing the Battery	13
Charging the Battery	14
Turning Your Phone On	15
Adjusting Volume	15
Making a Call	16
Answering a Call	16
Viewing Your Phone Number	17
Locking and Unlocking the Keypad	17
<b>Highlight Features</b>	18
Taking and Sending a Photo	18
Sending a Multimedia Message	20
Using a Removable Memory Card	23
Creating a Music Playlist	24
Playing Video Clips	26
<b>Learning to Use Your Phone</b>	27
Using the Display	27
Using the 5-Way Navigation Joystick	32
Using Menus	33
Entering Text	36
Using the Smart Key	46
Using the Handsfree Speaker	46
Changing a Code, PIN, or Password	47
Locking and Unlocking Your Phone	47

If You Forget a Code, PIN, or Password . . . . .	49
Using the Phonebook . . . . .	49
<b>Setting Up Your Phone</b> . . . . .	52
Storing Your Name and Phone Number . . . . .	52
Setting the Time and Date . . . . .	52
Setting a Ring Style. . . . .	52
Setting Answer Options. . . . .	53
Activating Vibe Sync . . . . .	54
Activating Rhythm Lights. . . . .	54
Setting Ring Lights . . . . .	55
Setting Event Lights . . . . .	56
Setting a Wallpaper Image . . . . .	56
Setting a Screen Saver Image . . . . .	57
Changing Phone Skin . . . . .	58
Setting Display Brightness . . . . .	59
Adjusting the Backlight . . . . .	59
Setting Display Timeout . . . . .	59
Setting Up a Bluetooth® Wireless Connection . . . . .	60
<b>Calling Features</b> . . . . .	61
Changing the Active Line . . . . .	61
Redialing a Number . . . . .	61
Using Automatic Redial. . . . .	62
Using Caller ID . . . . .	62
Canceling an Incoming Call . . . . .	63
Turning Off a Call Alert . . . . .	64
Calling an Emergency Number . . . . .	64
Dialing International Numbers. . . . .	64
Viewing Recent Calls . . . . .	65
Returning an Unanswered Call . . . . .	67
Using the Notepad . . . . .	67
Attaching a Number . . . . .	68

Calling With Speed Dial . . . . .	68
Calling With 1-Touch Dial . . . . .	69
Using Voicemail . . . . .	69
Using Call Waiting. . . . .	71
Putting a Call On Hold . . . . .	71
Transferring a Call. . . . .	72
<b>Phone Features . . . . .</b>	<b>73</b>
Main Menu . . . . .	73
Settings Menu. . . . .	74
Feature Quick Reference . . . . .	75
<b>Specific Absorption Rate Data . . . . .</b>	<b>94</b>
<b>Safety and General Information . . . . .</b>	<b>101</b>
<b>Index . . . . .</b>	<b>102</b>
<b>Wireless Phone Safety Tips. . . . .</b>	<b>113</b>



# Getting Started

---



**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

## About This Guide

This guide describes the basic features of your Motorola wireless phone.

**Note:** A *More Here* reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)

<http://motorola.ca/consumer> (Canada)

or contact the local Motorola Customer Call Center.

## Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

## Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

## Installing the SIM Card

 
Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.



**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.




*Getting Started*

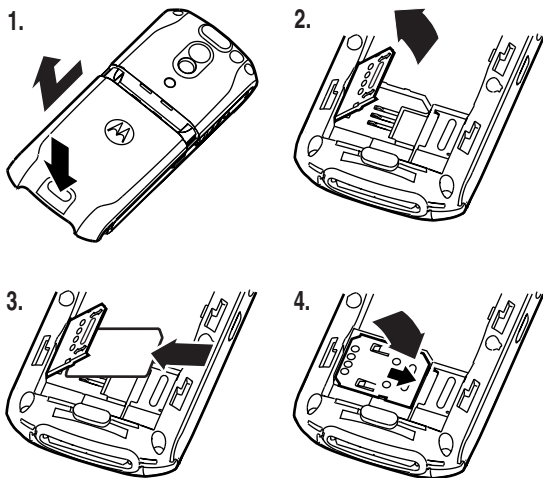

## Installing a Memory Card

You can install a removable memory card in your phone. You can store additional multimedia objects (such as photos and sounds) on the memory card.

 **Caution:** Do not bend or scratch your memory card. Avoid exposing your memory card to static electricity, water, or dirt.

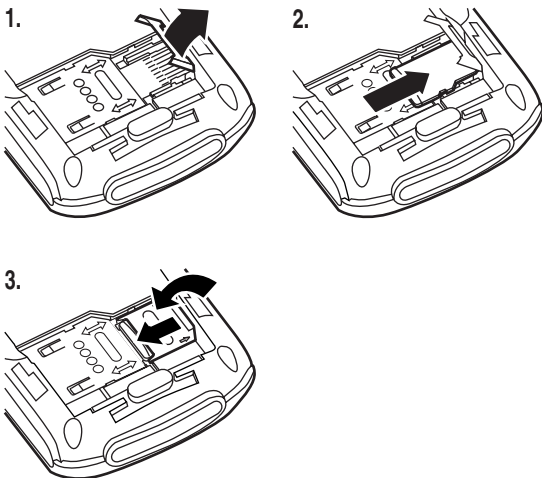

## Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use;

items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.



**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label

for battery type. Contact your local recycling center for proper disposal methods.

**Warning:** Never dispose of batteries in a fire because they may explode.



 
## Installing the Battery



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

**Note:** Your phone is shipped with a clear protective liner covering the battery door latch. Remove the liner to ensure that the battery door attaches and closes properly.

*Getting Started*

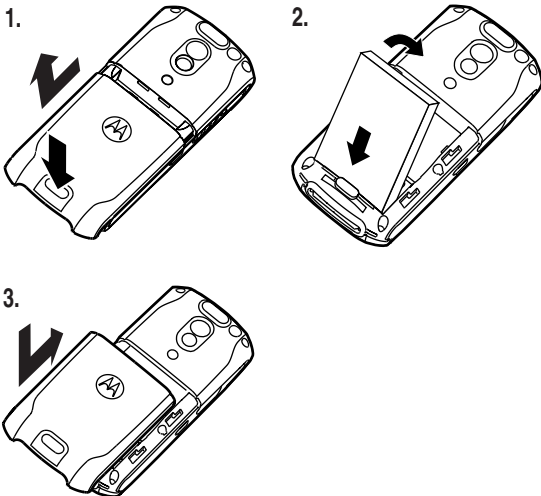


# Charging the Battery



New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

## Action

 - 1 Insert the travel charger plug into your phone with the release tab facing up. Make sure that both of the plug's connector hooks engage to lock the plug in place.

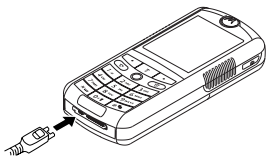


**Note:** It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

**Tip:** You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.


# Turning Your Phone On

## Action


- 1 Press and hold  (power key) for 2 seconds to turn the phone on.



**Note:** It may take up to 4 seconds for the display to illuminate after you turn the phone on.



- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

**Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

 
- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

**Note:** At startup, you are given the option to personalize your phone. Select **YES** () to set personal phone options, or **NO** () to go to the idle display. For more information about personalizing your phone, see page 81.

## Adjusting Volume

Press the volume key up or down to:

- increase or decrease earpiece volume during a call

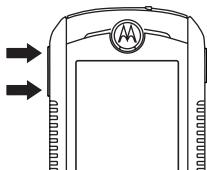







- increase or decrease the ringer volume setting when the home screen is visible

**Tip:** At the lowest volume setting, press the volume key down once to switch to vibrate alert. Press it down again to switch to silent alert. Press the volume key up to cycle back to vibrate alert, then ring alert.

- turn off an incoming call alert




## Making a Call

	Press	To
1	keypad keys	dial the phone number
2		make the call
3		end the call and “hang up” the phone when you are finished

**Note:** You must dial the phone number from the home screen (see page 27).

 

## Answering a Call


When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

	Press	To
1	 or <b>ANSWER</b> (  )	answer the call
2		end the call and “hang up” the phone when you are finished



## Viewing Your Phone Number

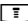

To view your phone number from the home screen, press  .


While you are on a call, press  > **My Tel. Numbers**.

**Note:** Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 52. If you do not know your phone number, contact your service provider.

## Locking and Unlocking the Keypad

 You can lock your phone keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press	To
 	lock or unlock your keypad

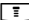Select  > **Settings** > **Security** > **Lock Keypad** to view instructions on how to lock/unlock the keypad.

**Note:** Incoming calls and messages unlock the keypad.

# Highlight Features




You can do much more with your phone than make and receive calls!

## Taking and Sending a Photo


**Shortcut:** Press the camera key to activate the camera. Press the camera key again to take a photo.

To activate your phone's camera using the menu system:

**Find the Feature**       > **Multimedia** > **Camera**

**Tip:** When you want to take photos in low-light settings, press  > **Flash** > **On** to activate the built-in flash.

The active viewfinder image appears on your display.

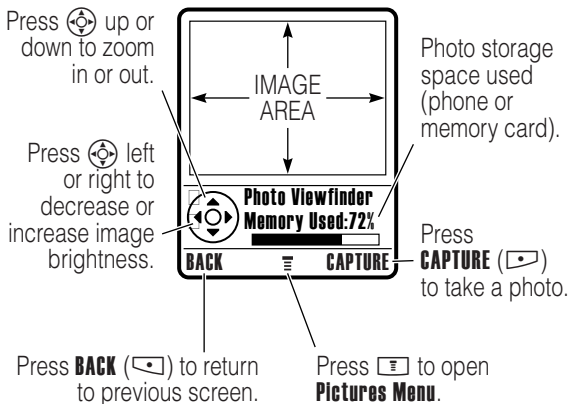 

Point the camera lens at the photo subject, then:

Press	To
1 <b>CAPTURE</b> (📷)	take a photo
2 <b>STORE</b> (📷)	view storage options
or	
<b>DISCARD</b> (📷)	delete the photo and return to active viewfinder
	If you choose to store the photo, continue to step 4.
3 (📶)	scroll to <b>Send in Message</b> , <b>Store Only</b> , <b>Send as iMessage</b> , <b>Apply as Wallpaper</b> , <b>Apply as Screen Saver</b> , or <b>Apply as Phonebook Entry</b>
4 <b>SELECT</b> (📷)	perform the storage option of your choice

Press (📷) to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
<b>Go To Pictures</b>	View pictures and photos stored on your phone.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Delete All</b>	Delete all pictures.
<b>Pictures Setup</b>	Open the setup menu to adjust picture settings.





Option	Description
<b>Switch Storage Device</b>	Save the photo in phone memory or on the memory card.
<b>View Free Space</b>	See how much memory remains for storing pictures.
<b>Flash</b>	Activate the flash for photos taken in low-light settings.




## ***Sending a Multimedia Message***


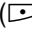 

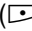 








A *Multimedia Messaging Service (MMS)* multimedia message contains one or more slides with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

### **Find the Feature**


 
 
 





-  > **Messages**
- > **Create Message**
- > **New Multimedia Msg**

Press	To
1 keypad keys	enter slide text
2 	open the <b>MMS Menu</b>
3 	scroll to <b>Insert</b>
4 <b>SELECT</b> (  )	display a list of items you can insert

Press	To
5 	scroll to <b>Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info</b>
6 <b>SELECT</b> (  )	select the file type
7 	highlight the file you want
8 <b>SELECT</b> (  )	insert the file
	To add another slide to the message, continue to step 9.
	To send the message, go to step 14.
9 	open the <b>MMS Menu</b> to insert a new slide
10 	scroll to <b>Insert</b>
11 <b>SELECT</b> (  )	display a list of items you can insert
12 	scroll to <b>New Page</b>
13 <b>SELECT</b> (  )	insert a new slide after the current slide
	Repeat steps 1 to 8 to enter contents for the new slide.
14 <b>OK</b> (  )	store the message



 

Press	To
15 	scroll to a <b>Send To</b> option:  Highlight <b>[One Time Entry]</b> to enter one or more phone numbers and/or email addresses.  Highlight <b>[New Phonebook Entry]</b> to enter a number/address and add it to the phonebook.  Or highlight an existing phonebook entry.
16 <b>SELECT</b> 	select <b>[One Time Entry]</b> or <b>[New Phonebook Entry]</b>
or	
<b>ADD</b> 	add a phonebook entry to the list of recipients
17 <b>DONE</b> 	store the numbers/addresses
18 	scroll to <b>Subject</b>
19 <b>CHANGE</b> 	select <b>Subject</b>
20 keypad keys	enter the subject
21 <b>OK</b> 	store the subject
22 <b>CHANGE</b> 	select <b>Attachments</b> to attach a file to the message, if desired
23 	scroll to <b>Picture, Voice Record, Sound, or Video</b>



Press	To
<b>24 SELECT</b> (⏏)	select the file type
<b>25</b> (⬅️)	highlight the file you want
<b>26 SELECT</b> (⏏)	attach the file
<b>27 BACK</b> (⬅️)	return to the message editor
<b>28</b> (⬅️)	scroll to <b>Receipt</b> to request a receipt, if desired
<b>29 CHANGE</b> (⏏)	select <b>Receipt</b>
<b>30 ADD</b> (⏏) or <b>REMOVE</b> (⏏)	activate/deactivate the delivery report
<b>31 DONE</b> (⏏)	return to the message editor
<b>32 SEND</b> (⏏)	send the message
or	
(☰)	view message details, save the message in the drafts folder, or cancel the message



## Using a Removable Memory Card

You can use an optional memory card or other storage device with your phone to store and retrieve multimedia objects (such as photos and sounds). To install a memory card, see page 11.




To view and manage an installed memory card:

### Find the Feature

(☰) > **Settings** > **Phone Status**  
> **Storage Devices**






Press	To
1 	scroll to the memory card
<b>Note:</b> Phone memory is always listed last.	
2 <b>DETAILS</b> (  )	view memory card information
<b>or</b>	
	open the <b>Storage Device</b> menu to perform other procedures

The **Storage Device** menu can include the following options:


Option	Description
<b>Format</b>	Format the memory card.
<b>Rename</b>	Rename the memory card.

When a memory card is installed on your phone, the phone prompts you to select a storage device when you download or store a multimedia object.

To view the contents of a memory card, go to the multimedia menu for a specific object type (such as **Pictures** or **Sounds**), then press  > **Switch Storage Device** > *device name*.

## Creating a Music Playlist

You can download and play a variety of different types of ring tones and sound files on your phone. You can store these sound files in phone memory, or on a memory card.








**Tip:** To see the sound files stored on a memory card, go to the **Sounds** menu, then press  > **Switch Storage Device** > *device name*.

You can create a playlist of selected sound files that play in the order you specify. Playlists that you create are stored in the **Sounds** menu.

To create a playlist:

### Find the Feature

 > **Multimedia** > **Sounds**  
> **[New Playlist]**

Press	To
1 <b>CHANGE</b> (  )	select <b>Name</b>
2 keypad keys	enter a name for the playlist
3 <b>OK</b> (  )	store the name
4 <b>CHANGE</b> (  )	select <b>Audio Files</b>
5 	scroll to a sound file
6 <b>CHECK</b> (  )	add the sound file to the playlist
	Repeat steps 5 and 6 to add more sound files to the playlist
7 <b>DONE</b> (  )	store the selected sound files
8 <b>DONE</b> (  )	store the playlist

To listen to a playlist:

### Find the Feature


 > **Multimedia** > **Sounds**  
> *playlist name*



## Playing Video Clips



You can download and play video clips on your phone. You can store these video clips in phone memory, or on a memory card.


**Tip:** To see the video clips stored on a memory card, go to the **Videos** menu, then press  > **Switch Storage Device** > *device name*.


To play a video clip:

 
### Find the Feature

 > **Multimedia** > **Videos**  
> *video clip*

The video clip displays in the video clip playback screen:


Press  up or down to pause or play video clip.

Press  left or right to skip to previous or next video clip.

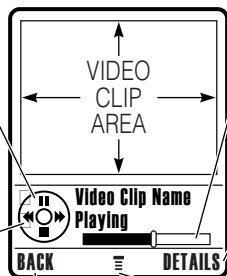

Timer indicates % played.

Press **DETAILS** () to view video clip information.

Press **BACK** () to return to previous screen.


Press  to open **Videos Menu**.

# Learning to Use Your Phone

 See page 1 for a basic phone diagram.

## Using the Display


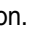 
The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

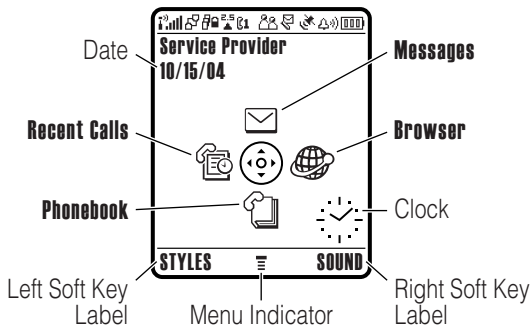

Press the 5-way navigation joystick (⬇️) up, down, left, or right to select a menu feature icon. If you select a menu icon by mistake, press (⬅️) to return to the home screen.

The ☰ (menu) indicator shows that you can press the menu key (⬅️) to enter the main menu.




Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the indicated function.

### Notes:

 
- Your home screen may appear different than shown. For example, your service provider may hide the menu feature icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 82.
- Your phone can display an analog or digital clock in the home screen (see page 82).
- Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you press any key. To set the time that the backlight stays on, see page 59.
- To extend battery life, you can set the display to turn off after a period of inactivity. The display turns back on when you press any key. To set the time that the display stays on, see page 59.

 



The following status indicators can display:

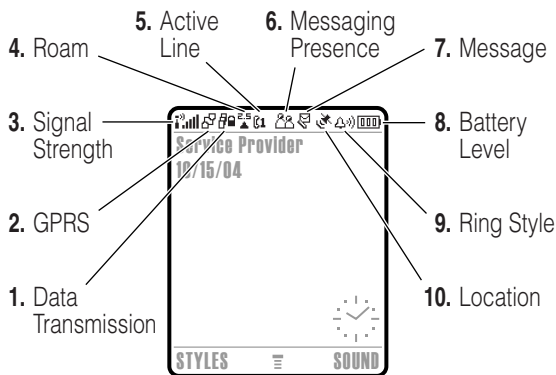


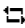 
**1. Data Transmission Indicator** Shows connection and data transmission status. Indicators can include:


 = secure packet data transfer

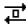
 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

  = secure *Circuit Switch Data* (CSD) call

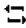 = unsecure CSD call

 = Bluetooth® connection





**2. GPRS Indicator** Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other indicators can include:

= GPRS PDP context active

= GPRS packet data available

**3. Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator is displayed.



**4. Roam Indicator** Shows when your phone is seeking or using another network outside your home network. Indicators can include:

= 2.5G home

= 2.5G roam

= 2G home

= 2G roam



**5. Active Line Indicator** Shows or to indicate the current active phone line. Other indicators can include:

= line 1 active, call forward on

= line 2 active, call forward on

= alarm activated



**6. Messaging Presence Indicator** Shows when instant messaging is active. Indicators can include:

= IM active

= available for IM

= busy

= invisible to IM

= available for phone calls

= offline

When a Java™ application is active, a (Java midlet) indicator can display in this location.



**7. Message Indicator** Displays when you receive a new message. Indicators can include:

= text message

= voicemail message

= voicemail and text message

= answering machine

= IM message


= active chat session


When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size in bytes/kilobytes (multimedia message or letter).

**8. Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.




## 9. Ring Style Indicator Shows the ring style setting.

  = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

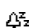 = silent






**10. Location Indicator** Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

 = location on


 = location off


## Using the 5-Way Navigation Joystick

   
Press the 5-way navigation joystick () up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press in the 5-way navigation joystick () to select a highlighted menu item.

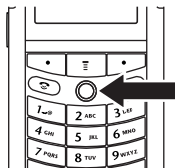



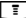

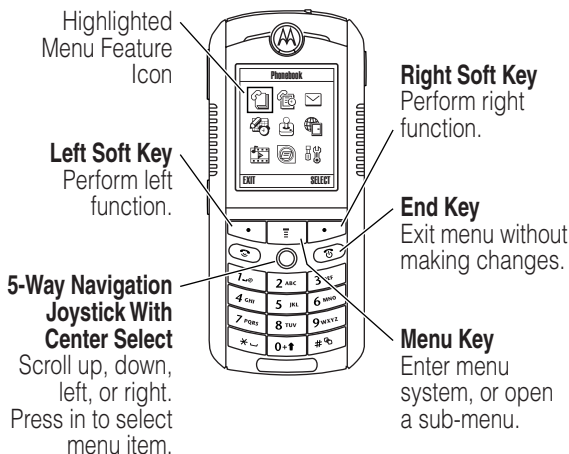

# Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.

Menu Icon	Feature	Menu Icon	Feature
	Phonebook		Recent Calls
	Messages		Office Tools
	Games & Apps		Web Access



Menu Icon	Feature	Menu Icon	Feature
	<b>Multimedia</b>		<b>IM</b>
	<b>Settings</b>		<b>Chat</b>

## Selecting a Menu Feature

This guide shows you how to select a menu feature, starting from the home screen.

 
### Find the Feature

> **Recent Calls** > **Dialed Calls**

This example shows that from the home screen, you must press , scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press to scroll. Press in to select the highlighted item. Press the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

## Selecting a Feature Option

Some features require you to select an option from a list:

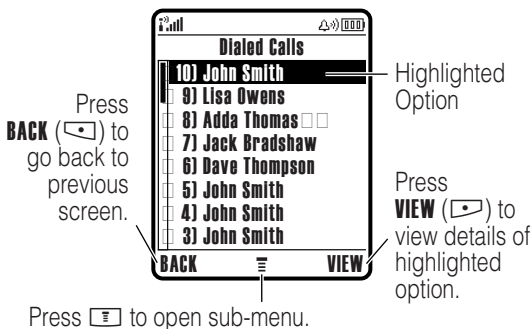


- Press to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.



# Entering Text

 Some features require you to enter information.

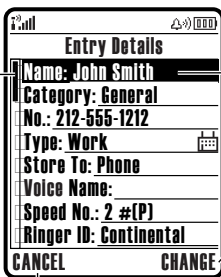


Press to scroll down to other options.

Highlighted Option

Press **CHANGE** () to enter or edit information.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.

 The message center lets you compose and send text messages.

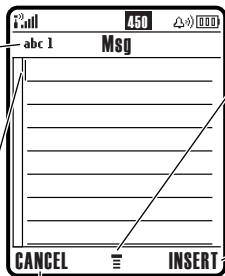

For indicator descriptions, see following section.

*Flashing cursor indicates insertion point.*


Press to open sub-menu.

Press **INSERT** () to insert a quick note, picture, or sound.


Press **CANCEL** () to exit without making changes.

## Choosing a Text Entry Method


Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press  in any text entry screen to select one of the following entry methods:

<b>Primary</b>	The primary text entry method (see below to set).
<b>Numeric</b>	Enter numbers only (see page 44).
<b>Symbol</b>	Enter symbols only (see page 44).
<b>Secondary</b>	The secondary text entry method (see below to set).

Alternatively, you can select a text entry method in any text entry screen by pressing  > **Entry Mode**.

 
## Setting Up a Text Entry Method

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

<b>iTAP</b>	Use iTAP® method to let the phone predict each word as you press keys (see page 42).
<b>Tap</b>	Enter letters and numbers by pressing a key one or more times.
<b>Tap Extended</b>	Enter letters, numbers, and symbols by pressing a key one or more times.
<b>None</b>	Hide the <b>Secondary</b> setting (only available for <b>Secondary Setup</b> ).



## Using Capitalization

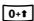Press  in any text entry screen to change text case. The following indicators show capitalization status:

abc = no capital letters







Abc = capitalize next

ABC = all capital letters

letter only

## Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑	2↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalize next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry method:




123 = numeric method


@ = symbol method

## Using Tap Method

This is the standard method for entering text on your phone.

Regular **Tap** method cycles through the letters and number of the key you press. **Tap Extended** method also cycles through additional symbols as shown in the “Character Chart” on page 41.

Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 Keypad keys	enter remaining characters <b>Tip:</b> Press  right to accept a word completion, or  to insert a space.
3 <b>OK</b> (  )	store the text

In a text entry screen, you can press  to switch entry methods. An indicator shows which method is active (see page 38). If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry method, see page 37.

 




When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

Character displays at insertion point.


Press **DELETE** (⏮) to delete character to left of insertion point.

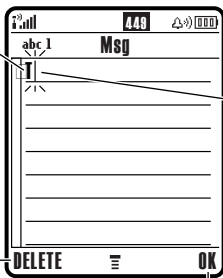

After 2 seconds, character is accepted and cursor moves to next position.

Press **OK** (⏭) to accept and store text.

 When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

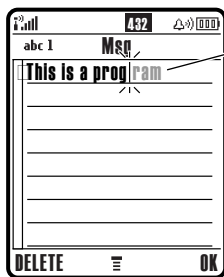
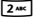 







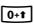 





Press ⏭ right to accept **program**, or press ⏮ to reject it and enter a space after **prog**.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

## Character Chart

Use this chart as a guide for entering characters with **Tap Extended** method.




	. 1 ? ! , @ _ & ~ : ; " - ( ) ' ¿ ¡ % £ \$ ¥ ¤ € + x * / \ [ ] = > < # §
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ē é è ê φ
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ò ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û
	w x y z 9 ξ ψ
	<i>change text case, for capital letters</i>
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>

**Note:** This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

## Tap Method Text Entry Rules





- Press a keypad key repeatedly to cycle through its characters.

 


- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

## Using iTAP<sup>®</sup> Method


iTAP software provides a predictive text entry method that lets you enter a word using one keypress per letter. This can be faster than **Tap** method, because your phone combines the keypresses into common words.

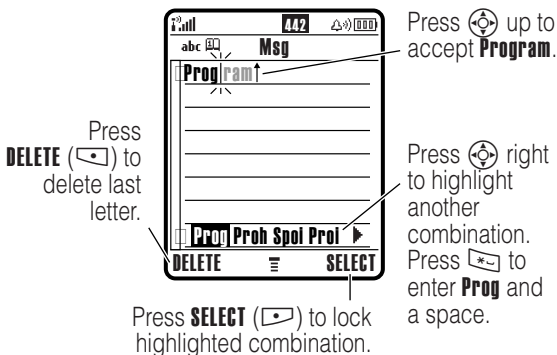


For example, if you press    , letter combinations that match your keypresses display:



If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

## Entering Words

In a text entry screen, you can press  to switch entry methods. An indicator tells you which method is active (see page 38). If **ITAP** method is not available as the **Primary** or **Secondary** entry method, see page 37.

Press	To
1 Keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want
3 <b>SELECT</b> (  )	lock a highlighted combination  You can press keypad keys to add more letters to the end of the combination.
or  	enter the highlighted combination when it spells a word  A space is automatically inserted after the word.


If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When




you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.



## Using Numeric Method

In a text entry screen, press  to switch entry methods until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.

## Using Symbol Method

In a text entry screen, press  to switch entry methods until the @ (symbol) indicator displays.

Press	To
1 Keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 <b>SELECT</b> (  )	lock a highlighted combination

You can press keypad keys to add more symbols to the end of the combination.










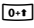 


or




enter the highlighted combination

## Symbol Chart



Use this chart as a guide for entering characters with symbol method.

	. ? ! , @ _ & ~ : ; " - ( ) ' ` ; ı % £ \$ ¥ ¤ €
	@ _ \
	/ : ;
	" & '
	( ) [ ] { }
	ı i ~
	< > =
	\$ £ ¥ ¤ €
	# % *
	+ - x * / = > < # §
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>

**Note:** This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

 
## Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action
Press <b>DELETE</b> (  ) to delete one letter at a time.
Hold <b>DELETE</b> (  ) to delete the entire message.



## Using the Smart Key

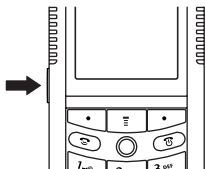

The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as pushing in the 5-way navigation joystick (⬇️).

## Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (🔊) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (🔊) again or turn the phone off.

**Note:** The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

## Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

### Find the Feature

 > Settings > Security  
> New Passwords

## Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 64).






## Locking Your Phone Manually

### Find the Feature


 > **Settings** > **Security**  
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	lock the phone

## Unlocking Your Phone

**Tip:** Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	unlock your phone

## Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

### Find the Feature



 > **Settings** > **Security**  
> **Phone Lock**  
> **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	activate automatic lock

# If You Forget a Code, PIN, or Password

**Note:** Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> (  )	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

## Using the Phonebook

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 78 and the *More Here* guide (described on page 8).



## Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (☐) to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) under the same **Name**.

## Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (☐) to begin. When prompted, press **RECORD** (☐) and say the entry's name (within 2 seconds). When prompted, press **RECORD** (☐) and repeat the name. Press **DONE** (☐) to store the voice name.

**Note:** This option is not available for entries stored on the SIM card.

## Dialing a Number

Press ☐ > **Phonebook**, highlight the phonebook entry, press ☐ to call.

## Voice Dialing a Number



From the home screen, press and hold ☐ for 2 seconds, release, then say the entry's name (within 2 seconds).

## Sorting Phonebook Entries

Press ☐ > **Phonebook**, press ☐ > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.



When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 81.

## ***Setting a Picture ID for a Phonebook Entry***



Press  > **Phonebook** > *entry*, press  > **Edit** > **Picture** > *picture name*.

Also see pages 2 and 18.

## ***Setting Picture ID View***

Press  > **Phonebook**, press  > **Setup** > **View by** > **Picture**.

## ***Viewing Entries By Category***

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 80.



# Setting Up Your Phone

## Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

### Find the Feature

> Settings > Phone Status  
> My Tel. Numbers

**Shortcut:** Press from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

## Setting the Time and Date

You must set the time and date to use the datebook.

### Find the Feature

> Settings > Initial Setup  
> Time and Date

## Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.






You can select one of 5 different ring styles. The ring style indicator in the display shows the current ring style (see page 32).

To set a ring style:

### Find the Feature

 > **Settings** > **Ring Styles**  
> **Style**

Press	To
1 	scroll to the ring style
2 <b>SELECT</b> (  )	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > *Style Detail*.

## Setting Answer Options

You can use additional, alternative methods to answer an incoming call.





### Multi-Key

answer by pressing any key

To activate or deactivate an answer option:

### Find the Feature

 > **Settings** > **In-Call Setup**  
> **Answer Options**

Press	To
1 	scroll to <b>Multi-Key</b>
2 <b>CHANGE</b> (  )	select the option
3 	scroll to <b>On</b> or <b>Off</b>
4 <b>SELECT</b> (  )	confirm the setting



## Activating Vibe Sync

Some ring tones include vibrations. You can turn these vibrations on or off.

### Find the Feature

 > **Settings** > **Initial Setup**  
> **Vibe Sync** > **On** or **Off**

This setting does not affect game vibrations.

**Note:** You might feel your phone vibrate a little when you bump or move it. This is natural movement from the vibration unit, and does not affect phone performance or durability.

## Activating Rhythm Lights

Rhythm lights make your phone's display and keys flash in synchronization with music or sounds around you.

### Find the Feature

 > **Settings** > **Personalize**  
> **Rhythm Lights**

You can adjust the following options:

Option	Description
<b>Pattern</b>	Choose a light pattern to activate rhythm lights, or turn the lights <b>Off</b> .
<b>Timer</b>	Set the number of minutes rhythm lights stay active (up to 10 minutes).

Option	Description
<b>Sensitivity</b>	Set how loud the music has to be before rhythm lights respond. Values range from 1 (least sensitive) to 7 (most sensitive).

### Notes:

- Rhythm lights work only when your phone is idle and your battery is not low. Rhythm lights pause if you press a key or receive a call or message.
- Your phone can also flash for incoming calls and messages (see page 80). Some games might make your phone flash and vibrate.

## Setting Ring Lights

Set up your phone to display a light pattern when you receive an incoming call. To select a light pattern:

### Find the Feature

 > **Settings** > **Ring Styles**  
 > **Ring Lights**  
 > *light pattern*

The same light pattern displays for all incoming calls. You can use the light ID feature to display a distinctive light pattern when you receive calls from entries in a phonebook category. To set a light ID for a phonebook category, see page 80.





## Setting Event Lights

When event lights are activated, your phone displays a light pattern to notify you of the following events: incoming calls from phonebook categories, incoming text and voicemail messages, alarms, power up, power down, battery charging, Bluetooth<sup>®</sup> connect, Bluetooth activity, and Bluetooth disconnect.


To turn event lights on or off:

### Find the Feature

 > **Settings** > **Ring Styles**  
> **Event Lights** > **On** or **Off**




## Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

**Tip:** To see the picture files stored on a memory card, go to the **Pictures** menu, then press  > **Switch Storage Device** > *device name*.

### Find the Feature

 > **Settings** > **Personalize**  
> **Wallpaper**

Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation
	Scroll to <b>(None)</b> to turn off the wallpaper image.

Press	To
4 <b>SELECT</b> (◻◻)	select the image
5 (⬅️➡️)	scroll to <b>Layout</b>
6 <b>CHANGE</b> (◻◻)	adjust the image layout
7 (⬅️➡️)	scroll to <b>Center</b> , <b>Tile</b> , or <b>Fit-to-screen</b>
	<b>Center</b> places the image in the center of the display.
	<b>Tile</b> fills the display with adjacent copies of the image.
	<b>Fit-to-screen</b> resizes the image, if necessary, to fit the display.
8 <b>SELECT</b> (◻◻)	confirm the layout setting
9 <b>BACK</b> (◻◻)	save wallpaper settings

## Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.









 
**Tip:** To see the picture files stored on a memory card, go to the **Pictures** menu, then press (⌂) > **Switch Storage Device** > *device name*.



**Tip:** Turn off the screen saver to extend battery life.

### Find the Feature

 > **Settings** > **Personalize**  
> **Screen Saver**

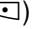
Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation  Scroll to <b>(None)</b> to turn off the screen saver image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Delay</b>
6 <b>CHANGE</b> (  )	set the delay interval
7 	scroll to the inactivity interval that triggers the screen saver
8 <b>SELECT</b> (  )	confirm the delay setting
9 <b>BACK</b> (  )	save screen saver settings

## Changing Phone Skin

Change the look and feel of your phone's display by selecting a different skin setting.

### Find the Feature

 > **Settings** > **Personalize**  
> **Skin** > *skin*

Your phone displays the new skin. Press **BACK** () to return to the previous skin.

# Setting Display Brightness

## Find the Feature

 > Settings > Initial Setup  
> Brightness

## Adjusting the Backlight

Set the amount of time that the display backlight remains on.

## Find the Feature

 > Settings > Initial Setup  
> Backlight

**Note:** Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you press any key.

## Setting Display Timeout

To extend battery life, you can set the display to turn off when no activity is detected for a period of time.

## Find the Feature

 > Settings > Initial Setup  
> Display Timeout

**Note:** The display turns back on when you press any key.



# Setting Up a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth-enabled headset accessory, speakerphone, or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.


To connect your phone to a headset accessory or handsfree device:



## Find the Feature

 > **Settings** > **Connection**  
> **Bluetooth Link**  
> **Handsfree**  
> **[Look For Devices]**



Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone lists the connected device and identifies it with a ✓ (in use) indicator.

To connect to a device, highlight the device name and press **SELECT** ()

The device may request permission to bond with your phone. Select **YES** () and enter the correct PIN code to create a secure connection with the device. When the connection is made, the  (Bluetooth) indicator or a **Bluetooth Connected** message displays in the home screen.

# Calling Features

For basic instructions on how to make and answer calls, see page 16.

## Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.




**Note:** This feature is available only for dual-line-enabled SIM cards.

### Find the Feature

 > **Settings** > **Phone Status**  
> **Active Line**

The active line indicator in the display shows the current active phone line (see page 30).

## Redialing a Number

	Press	To
1		view the dialed calls list
2		scroll to the entry you want to call
3		redial the number





# Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

To redial the phone number:

Press	To
 or <b>RETRY</b> (  )	activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

## Using Caller ID

### Incoming Calls



*Calling line identification* (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.

The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook. For more information, see page 78.

## Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

### Find the Feature

> **Settings** > **In-Call Setup**  
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialing (with digits visible in the display):

Press	To
> <b>Hide ID/Show ID</b>	hide or show your caller ID for the next call

## Canceling an Incoming Call

While the phone is ringing or vibrating:

Press	To
<b>IGNORE</b> ()	cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.





## Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

 
## Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


	Press	To
1	keypad keys	dial the emergency number
2		call the emergency number

## Dialing International Numbers

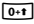Press and hold  to insert the local international access code (+) for the country from which you are calling.



# Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.






**Shortcut:** Press  from the home screen to view the dialed calls list.

## Find the Feature

 > Recent Calls

Press	To
1 	scroll to <b>Received Calls</b> or <b>Dialed Calls</b>
2 <b>SELECT</b> (  )	select the list



Press	To
3 	scroll to an entry  <b>Note:</b> ✓ means the call connected.
4 	call the entry's number  <b>Tip:</b> Press and hold  for 2 seconds to send the number as DTMF tones during a call.
or	
VIEW 	view entry details
or	
	open the <b>Last Calls Menu</b> to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.

Option	Description
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones.  <b>Note:</b> This option displays only during a call.
<b>Talk then Fax</b>	Talk and then send a fax in the same call (see page 87).



## Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the (missed call) indicator
- X Missed Calls**, where **X** is the number of missed calls

Press	To
<b>1 VIEW</b> (	see the received calls list
<b>2</b>	select a call to return
<b>3</b>	make the call



## Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you

entered but did not call. To retrieve the number stored in the notepad:

### Find the Feature

 > Recent Calls > Notepad

### Press

### To




call the number

or



open the **Dialing Menu** to attach a number or insert a special character

or

**STORE** ()

create a phonebook entry with the number in the **No.** field

## Attaching a Number

While dialing (with digits visible in the display):

### Press

### To



 > **Attach Number**

attach a number from the phonebook or recent calls lists



## Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number.

**Tip:** To see an entry's speed dial number, press

 > **Phonebook**, scroll to the entry, press **VIEW** ()

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

## Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

**Tip:** You must specify which phone number list you want to use with this feature: phone memory phonebook, or SIM card phonebook (see page 81).

## Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

**Note:** Your service provider may include additional information about using this feature.

## Listening to Voicemail Messages


### Find the Feature


 > Messages > VoiceMail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.



## Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New VoiceMail** notification.

Press	To
<b>CALL</b> (  )	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.


## Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

### Find the Feature

 > **Messages**

 > **VoiceMail Setup**

Press	To
<b>1</b> keypad keys	enter your voicemail number
<b>2</b> <b>OK</b> (  )	store the number

**Note:** You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more about these characters, see the *More Here* guide.

# Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2 <b>SWITCH</b> (	switch between calls
or	
<b>LINK</b> (	connect the 2 calls
or	
> <b>End Call On Hold</b>	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

## Find the Feature

> **Settings** > **In-Call Setup**  
> **Call Waiting**

# Putting a Call On Hold

Press	To
<b>HOLD</b> () (if available) or	put the call on hold
> <b>Hold</b>	





# Transferring a Call



You can announce that you are transferring an active call to another party, or you can directly transfer the call.

## Announce the Call Transfer

**Find the Feature**

> Hold

Press	To
1 keypad keys	dial the number where you are transferring the call
2	call the number and speak to the person who answers
3	open the menu
4	scroll to <b>Transfer</b>
5 <b>SELECT</b> ()	select <b>Transfer</b>
6 <b>OK</b> ()	confirm the transfer

## Do Not Announce the Call Transfer

**Find the Feature**

> Transfer

Press	To
1 keypad keys	dial the number where you are transferring the call
2	transfer the call



# Phone Features

## Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.



### Phonebook



### Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes



### Messages

- Create Message
- Message Inbox
- Voicemail
- Email Msgs
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates



### Office Tools

- SIM Apps
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Dialing Services
  - Fixed Dial
  - Service Dial
  - Quick Dial



### Games & Apps



### Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions



### Multimedia

- Themes
- Camera
- Pictures
- Sounds
- MotoMixer
- Videos



### IM



### Settings

(see next page)



### Chat



# Settings Menu



## Personalize

- Rhythm Lights
- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



## Ring Styles

- Style
- Style Detail
- Ring Lights
- Event Lights



## Connection

- Bluetooth Link
- Sync



## Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



## In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



## Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup
- Scroll
- Vibe Sync
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



## Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery Meter
- Storage Devices
- Other Information



## Headset

- Auto Answer
- Voice Dial



## Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



## Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



## Security

- Phone Lock
- Lock Keypad
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords









## Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP

# Feature Quick Reference







This section helps you locate features on your phone that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 8).

## Calling Features

Feature	Description
<b>Conference Call</b>	During a call:  > <b>Hold</b> , dial next number, press  , press <b>LINK</b> (  ).
<b>Call Forwarding</b>	Set up or cancel call forwarding:  > <b>Settings</b> > <b>Call Forward</b>
<b>Call Barring</b>	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b>
<b>TTY Calls</b>	Set up your phone for use with an optional TTY device:  > <b>Settings</b> > <b>Initial Setup</b> > <b>TTY Setup</b>












# Messages

Feature	Description
<b>Send Text Message</b>	<p>Send a text message:</p> <p> &gt; <b>Messages</b></p> <p>&gt; <b>Create Message</b></p> <p>&gt; <b>New Short Message</b></p>
<b>Send Multimedia Message</b>	<p>Send a multimedia message:</p> <p> &gt; <b>Messages</b></p> <p>&gt; <b>Create Message</b></p> <p>&gt; <b>New Multimedia Msg</b></p>
<b>Send Letter</b>	<p>Send a multimedia letter:</p> <p> &gt; <b>Messages</b></p> <p>&gt; <b>Create Message</b> &gt; <b>New Letter</b></p>
<b>Use MMS Template</b>	<p>Open an MMS template with preloaded media:</p> <p> &gt; <b>Messages</b></p> <p>&gt; <b>Create Message</b></p> <p>&gt; <b>MMS Templates</b></p>
<b>Read Message</b>	<p>Read a new text or multimedia message that you have received:</p> <p>Press <b>READ</b> ().</p>
<b>Store Message Objects</b>	<p>Go to a multimedia message slide, or highlight an object in a letter, then:</p> <p> &gt; <b>Store</b></p>











## Instant Messaging

Feature	Description	
<b>Log In</b>	Log in to instant messaging:  > <b>IM</b> > <b>Log In</b>	
<b>Find Others Online</b>	After you sign on: Select <b>Contact List</b> to see a list of other users.	
<b>Start Conversation</b>	Start a conversation: From your <b>Contact List</b> , highlight a name in <b>Online Contacts</b> , press <b>SEND IM</b> (  ).	
<b>Open Active Conversation</b>	Open a conversation in progress: From your <b>Contact List</b> , highlight a name in <b>Conversations</b> , press <b>VIEW</b> (  ).	
<b>End Conversation</b>	From the conversation display:  > <b>End Conversation</b>	
<b>Log Out</b>	Log out of instant messaging: Select <b>Log Out</b> from the <b>IM Online</b> menu.	





## Chat

Feature	Description	
<b>Start Chat</b>	Start a new chat session:  > <b>Chat</b>  > <b>New Chat</b>	
<b>Receive Chat Request</b>	When you receive a chat request: Press <b>ACCEPT</b> (  ) or <b>IGNORE</b> (  )	
<b>End Chat</b>	During a chat session:  > <b>End Chat</b>	










## Email

Feature	Description	
<b>Send Email Message</b>	Send an email message:  > <b>Messages</b> > <b>Create Message</b> > <b>New Email</b>	
<b>Read Email Message</b>	Read a new email message that you have received: Press <b>READ</b> (  )	

## Phonebook












Feature	Description
<b>Create Entry</b>	Create a new phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Phone Number</b> or <b>Email Address</b>








Feature	Description
<b>Create Group Mailing List</b>	<p>Create a group mailing list as a phonebook entry:</p> <p> &gt; <b>Phonebook</b></p> <p> &gt; <b>New</b> &gt; <b>Mailing List</b></p>
<b>Dial Number</b>	<p>Call a number stored in the phonebook:</p> <p> &gt; <b>Phonebook</b>, highlight the phonebook entry, press  to call</p>
<b>Voice Dial Number</b>	<p>Voice dial a number stored in the phonebook:</p> <p>From the home screen, press and hold  for 2 seconds, release, then say the entry's name (within 2 seconds).</p>
<b>Set Ringer ID for Entry</b>	<p>Assign a distinctive ringer alert to a phonebook entry:</p> <p> &gt; <b>Phonebook</b> &gt; <i>entry</i></p> <p> &gt; <b>Edit</b> &gt; <b>Ringer ID</b> &gt; <i>ringer name</i></p> <p><b>Note:</b> The <b>Ringer ID</b> option is not available for entries stored on the SIM card.</p>
<b>Set Picture ID for Entry</b>	<p>Assign a photo or picture to a phonebook entry:</p> <p> &gt; <b>Phonebook</b> &gt; <i>entry</i></p> <p> &gt; <b>Edit</b> &gt; <b>Picture</b> &gt; <i>picture name</i></p> <p><b>Note:</b> The <b>Picture</b> option is not available for entries stored on the SIM card.</p>











 



Feature	Description
<b>Set Picture ID View</b>	View phonebook entries as text list, or with picture caller ID photos:  > <b>Phonebook</b>  > <b>Setup</b> > <b>View by</b> > <i>list view</i>
<b>Set Category for Entry</b>	Set the category for a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Category</b> > <i>category name</i>  <b>Note:</b> The <b>Category</b> option is not available for entries stored on the SIM card.
<b>Set Category View</b>	Set a phonebook category view:  > <b>Phonebook</b>  > <b>Categories</b> > <i>category view</i>
<b>Set Category Light ID</b>	Set a distinctive light pattern to be displayed when you receive calls from phonebook entries in a specific category:  > <b>Phonebook</b>  > <b>Categories</b> , scroll to entry, press  > <b>Edit</b> > <b>Light ID</b> .  <b>Note:</b> The <b>Light ID</b> option is not available for entries stored on the SIM card.
<b>Sort Phonebook List</b>	Set the order in which phonebook entries are listed:  > <b>Phonebook</b>  > <b>Setup</b> > <b>Sort by</b> > <i>sort order</i>

Feature	Description
<b>Set Primary Number</b>	Set the primary number for a phonebook entry with multiple numbers:  > <b>Phonebook</b> , scroll to entry, press  > <b>Set Primary</b> > <i>phone number</i> .
<b>Copy Phonebook Entry to Another Device</b>	Copy a phonebook entry to another phone, computer, or device:  > <b>Phonebook</b> , highlight the entry, press  > <b>Send</b> > <b>Bluetooth</b>
<b>1-Touch Dial</b>	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > <b>Settings</b> > <b>Initial Setup</b> > <b>1-Touch Dial</b>

## Personalizing Features




Feature	Description
<b>Ring Style</b>	Change the ring alert for an event:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <i>event name</i>
<b>Ringer IDs</b>	Activate distinctive ring alerts assigned to phonebook entries:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ringer IDs</b>
<b>Ring Volume</b>	Set ringer volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ring Volume</b>



Feature	Description
<b>Keypad Volume</b>	Set keypad keypress volume:  > <b>Settings</b> > <b>Ring Styles</b> > <i>Style Detail</i> > <b>Key Volume</b>
<b>Reminders</b>	Set reminder alerts for messages that you receive:  > <b>Settings</b> > <b>Ring Styles</b> > <i>Style Detail</i> > <b>Reminders</b>
<b>Clock View</b>	Display an analog clock or digital time readout in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Clock</b>
<b>Menu View</b>	Display the main menu as graphic icons or as a text-based list:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>View</b>
<b>Main Menu</b>	Reorder your phone's main menu:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>Reorder</b>
<b>Show or Hide Menu Icons</b>	Show or hide menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Home Keys</b> > <b>Icons</b>
<b>Change Soft Keys &amp; Menu Icons</b>	Change soft key labels and menu feature icons in the home screen  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Home Keys</b>




 





Feature	Description
<b>Shortcuts</b>	<p>Create a shortcut to a menu item: Highlight the menu item, then press and hold .</p> <p>Select a shortcut:   &gt; <b>Office Tools</b> &gt; <b>Shortcuts</b>            &gt; <i>shortcut name</i></p>

## Menu Features

Feature	Description
<b>Language</b>	<p>Set menu language:   &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>Language</b></p>
<b>Master Reset</b>	<p>Reset all options <i>except</i> unlock code, security code, and lifetime timer:   &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>Master Reset</b></p>
<b>Master Clear</b>	<p>Reset all options <i>except</i> unlock code, security code, and lifetime timer, and clear all user settings and entries <i>except</i> SIM card information:   &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>Master Clear</b></p>




## Dialing Features







Feature	Description
<b>Fixed Dial</b>	<p>Turn fixed dialing on or off:</p> <p> &gt; <b>Settings</b> &gt; <b>Security</b> &gt; <b>Fixed Dial</b></p> <p>Use the fixed dial list:</p> <p> &gt; <b>Office Tools</b> &gt; <b>Dialing Services</b> &gt; <b>Fixed Dial</b></p> 
<b>Service Dial</b>	<p>Dial service phone numbers:</p> <p> &gt; <b>Office Tools</b> &gt; <b>Dialing Services</b> &gt; <b>Service Dial</b></p> 
<b>Quick Dial</b>	<p>Dial preprogrammed phone numbers:</p> <p> &gt; <b>Office Tools</b> &gt; <b>Dialing Services</b> &gt; <b>Quick Dial</b></p> 
<b>DTMF Tones</b>	<p>Activate DTMF tones:</p> <p> &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>DTMF</b></p> <p>Send DTMF tones during a call: Press number keys.</p> <p>Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press</p> <p> &gt; <b>Send Tones.</b></p>

## Call Monitoring

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to

the moment you end the call by pressing . This time includes busy signals and ringing.

**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.**












Feature	Description
<b>Call Times</b>	View call timers:  > <b>Recent Calls</b> > <b>Call Times</b> 
<b>In-Call Timer</b>	Display time or cost information during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b> 
<b>Call Cost</b>	View call cost trackers:  > <b>Recent Calls</b> > <b>Call Cost</b> 

## ***Handsfree Features***


**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always



obey the laws and regulations on the use of these products.



Feature	Description	
<b>Speaker-phone</b>	Activate a connected external speakerphone during a call: Press <b>SPEAKER</b> (  ) (if available) or  > <b>Spkrphone On.</b>	
<b>Auto Answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings &gt; Car Settings or Headset &gt; Auto Answer</b>	
<b>Voice Dial</b> (headset)	Enable voice dial with headset send/end key:  > <b>Settings &gt; Headset &gt; Voice Dial</b>	
<b>Auto Handsfree</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings &gt; Car Settings &gt; Auto Handsfree</b>	
<b>Power-Off Delay</b> (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > <b>Settings &gt; Car Settings &gt; Power-Off Delay</b>	



Feature	Description
<b>Charger Time</b> (car kit)	Charge the phone for a period of time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Charger Time</b>




 

 

 





## ***Data and Fax Calls***


Feature	Description
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application.
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application.
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, press  > <b>Dialing Menu</b> > <b>Talk Then Fax</b> , then press  to make the call.






# Bluetooth® Wireless Connections

Feature	Description
<b>Set Up a Wireless Connection</b>	<p>Set up a Bluetooth wireless connection to a headset accessory, car kit, or external device:</p> <p> &gt; <b>Settings</b> &gt; <b>Connection</b>            &gt; <b>Bluetooth Link</b> &gt; <b>Handsfree</b>            &gt; <b>[Look For Devices]</b></p>
<b>Make Phone Visible to Other Device</b>	<p>Allow an unknown Bluetooth device to discover your phone:</p> <p> &gt; <b>Settings</b> &gt; <b>Connection</b>            &gt; <b>Bluetooth Link</b> &gt; <b>Setup</b> &gt; <b>Find Me</b></p> 
<b>Connect to Recognized Device</b>	<p>Connect to a recognized handsfree device:</p> <p> &gt; <b>Settings</b> &gt; <b>Connection</b>            &gt; <b>Bluetooth Link</b> &gt; <b>Handsfree</b>            &gt; <i>device name</i></p> 
<b>Disconnect From Device</b>	<p>Disconnect from a device:</p> <p>Highlight the device name and press <b>DROP</b> ().</p> 
<b>Switch to Device During Call</b>	<p>Switch to a headset or car kit during a call:</p> <p> &gt; <b>Use Bluetooth</b></p> 
<b>Edit Device Properties</b>	<p>Edit the properties of a recognized device:</p> <p>Highlight the device name and press  &gt; <b>Edit</b>.</p> 







Feature	Description
<b>Set Bluetooth Options</b>	Set your phone's Bluetooth options:  > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Setup</b>

## ***Network Features***












Feature	Description
<b>Network Settings</b>	View network information and adjust network settings:  > <b>Settings</b> > <b>Network</b>



## ***Personal Organizer Features***



Feature	Description
<b>Create Datebook Event</b>	Create a new datebook event:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the center select button, press  > <b>New</b>
<b>View Datebook Event</b>	View or edit event details:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the center select button, press <b>VIEW</b> (  )
<b>Event Reminder</b>	View event reminder: <b>VIEW</b> (  )  Dismiss event reminder: <b>EXIT</b> (  )





 




Feature	Description
<b>Copy Datebook Event to Another Device</b>	Copy a datebook event to another phone, computer, or device:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the center select button, highlight the event, press  > <b>Send</b> > <b>Bluetooth</b>
<b>Set Alarm</b>	Set an alarm:  > <b>Office Tools</b> > <b>Alarm Clock</b>
<b>Turn Off Alarm</b>	Turn off alarm: Press <b>DISABLE</b> (  ) or  Set 8-minute delay: Press <b>SNOOZE</b> (  )
<b>Calculator</b>	Calculate numbers:  > <b>Office Tools</b> > <b>Calculator</b>
<b>Currency Converter</b>	Convert currency:  > <b>Office Tools</b> > <b>Calculator</b>  > <b>Exchange Rate</b> Enter exchange rate, press <b>OK</b> (  ), enter amount, press  > <b>Convert Currency</b> .







 

 



## Security

Feature	Description
<b>SIM PIN</b>	Lock or unlock the SIM card:  > <b>Settings</b> > <b>Security</b> > <b>SIM PIN</b>  <b>Caution:</b> If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b> .
<b>Lock Application</b>	Lock phone applications:  > <b>Settings</b> > <b>Security</b> > <b>Lock Application</b>



 


## News and Entertainment

Feature	Description
<b>Launch Micro-Browser</b>	Start a micro-browser session:  > <b>Web Access</b> > <b>Browser</b> 
<b>Download Objects from Web Page</b>	Download a picture, sound, or phone theme from a Web page: Highlight the file, press <b>SELECT</b> (  ) , press <b>STORE</b> (  ). 
<b>Web Sessions</b>	Select or create a Web session:  > <b>Web Access</b> > <b>Web Sessions</b> 



Feature	Description
<b>Apply Phone Theme</b>	<p>Apply a grouped set of image and sound files to your phone:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Themes</b> &gt; <i>theme</i></p> 
<b>Download Game or Application (Micro-Browser)</b>	<p>Download a Java™ game or application with the micro-browser:</p> <p> &gt; <b>Web Access</b> &gt; <b>Browser</b>, highlight the application, press <b>SELECT</b> () , press <b>DOWNLOAD</b> () .</p> 
<b>Download Game or Application (Computer)</b>	<p>Download a Java game or application from a computer:</p> <p>Connect your phone to the computer, press  &gt; <b>Settings</b> &gt; <b>Java Settings</b> &gt; <b>Java App Loader</b>.</p> 
<b>Launch Game or Application</b>	<p>Launch a Java game or application:</p> <p> &gt; <b>Games &amp; Apps</b>, highlight the application, press <b>SELECT</b> () .</p> 
<b>Manage Pictures</b>	<p>Manage pictures and animations:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Pictures</b></p> 
<b>Manage Sounds</b>	<p>Manage ring tones, sounds that you have composed or downloaded:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Sounds</b></p>



Feature	Description
<b>Manage Video Clips</b>	Manage video clips:  > <b>Multimedia</b> > <b>Videos</b>
<b>Edit Sounds With MotoMixer</b>	Edit MIDI-based sound files that you can use with your phone:  > <b>Multimedia</b> > <b>MotoMixer</b> > <b>[New Mix]</b> or <i>mix file name</i>
<b>Create Ring Tones</b>	Create iMelody ring tones that you can use with your phone:  > <b>Multimedia</b> > <b>Sounds</b> > <b>[New iMelody]</b>
<b>Camera</b>	Adjust light level and other settings for the integrated camera:  > <b>Multimedia</b> > <b>Camera</b>  > <b>Pictures Setup</b>

## ***Specific Absorption Rate Data***

---

**This model phone meets the international standards for exposure to radio waves.**

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.<sup>1</sup> Tests for SAR are conducted in accordance with CENELEC<sup>2</sup> testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is 1.01 W/kg.<sup>3</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this

product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

1. The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
2. CENELEC is a European Union standards body.
3. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

ITC03-182



# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.  
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

## ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

## ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

## ***Body-Worn Operation***

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

## ***Approved Accessories***

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

## ***RF Energy Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

## ***Facilities***

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website: [www.Motorola.com/callsmart](http://www.Motorola.com/callsmart).

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






### ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

## Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

## ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

# Index

---

## A

- accessories 9, 75
- active line indicator 30
- active line, changing 61
- alarm clock 90
- alert
  - creating 93
  - defined 52
  - setting 16, 52, 81
  - turning off 16, 64
- animation
  - downloading 76, 91
  - screen saver 57
  - viewing 92
  - wallpaper 56
- answering a call 16, 53
- application, locking and
  - unlocking 91
- automatic redial 62

## B

- backlight 59
- barring calls 75
- battery
  - charging 14
  - extending battery life 11,  
28, 58, 59

- installing 13
- level indicator 31
- Bluetooth 60, 81, 88, 89, 90
- brightness, setting 59
- browser. *See* micro-browser

## C

- calculator 90
- call
  - adding digits after phone  
number 67
  - alert, turning off 16, 64
  - answer options 53
  - answering 16
  - barring 75
  - barring password,  
changing 47
  - call waiting 71
  - canceling 63
  - costs 85
  - deleting 65
  - dialed calls list 65
  - dialing 16
  - emergency number 64
  - ending 16
  - forwarding 75
  - handsfree speaker 46
  - hold 71

- international access code
  - 64
- making 16
- received calls list 65
- receiving 16
- recent calls 65
- ring style 16, 52, 81
- speakerphone 86
- storing 65
- talk then fax 67
- timers 85
- transferring 72
- unanswered call 67
- Call Failed, Number Busy
  - message 62
- call waiting 71
- caller ID 2, 19, 20, 51, 62,
  - 66, 79, 80
- calling line identification.
  - See caller ID
- camera
  - settings 93
  - taking a photo 2, 18
- car kit 85
- character chart 41
- chat 78
- clock
  - illustration 27
  - selecting analog or digital 82
  - setting 52

- codes
  - changing 47
  - default 47, 48, 49
  - forgetting 49
- conference call 75
- cursor 36
- customizing the menu 82

## D

- data call 87
- date, setting 52
- datebook 89
- deleting a call 65
- dialed calls list 65
- dialing a number 16, 84
- display
  - backlight 59
  - brightness 59
  - description 27
  - home screen 27
  - language 83
  - personalizing 82
  - skin 3, 58
  - timeout 59
- distinctive ringer alert 81
- drafts folder 23
- DTMF tones
  - activating 84
  - sending 66, 67, 84



## **E**

- earpiece volume 15
- email 78
  - draft 23
  - reminders, turning on/off 82
- emergency number 64
- end key 16
- ending a call 16
- Enter Unlock Code
  - message 48, 49
- event lights 3, 56

## **F**

- fax call 67, 87
- 5-way navigation joystick 32
- fixed dial 84
- flashing cursor 36
- forwarding calls 75

## **G**

- games 92
- GPRS indicator 30
- groove tunes 93

## **H**

- handsfree speaker 46
- handsfree use 85

- headset accessory, using 85
- Hide ID feature 66
- hold a call 71
- home keys, personalizing 82
- home screen
  - defined 27
  - selecting clock view 82

## **I**

- IM 77
- incoming call
  - answering 16
  - canceling 63
  - forwarding 75
- Incoming Call message 62
- indicators
  - active line 30
  - battery level 31
  - GPRS 30
  - Java midlet 31
  - location 32
  - loud ring style 32
  - message 31
  - messaging presence 31
  - missed call 67
  - ring style 32
  - roam 30
  - signal strength 30
  - silent alert 32

- soft ring style 32
- text case 38
- text entry method 31, 38
- transmission 29
- vibrate alert 32
- vibrate and ring style 32
- voicemail message 31, 70

instant messaging. *See* IM

international access code 64

iTAP software 42

## **J**

- Java applications 92
- Java midlet indicator 31
- joystick 32

## **K**

key

- end 16
- left soft key 28, 82
- lock 17
- menu 34
- power 15
- right soft key 28, 82
- send 16, 65
- smart 46
- volume control 15

- keypad
  - answering calls 53
  - locking and unlocking 17
  - volume, setting 82

## **L**

- language, setting 83
- left soft key
  - functions 28
  - personalizing 82
- light ID, setting 80
- line, changing 61
- location indicator 32
- lock
  - application 91
  - keypad 17
  - phone 47
  - SIM card 91
- Low Battery message 31

## **M**

- making a call 16
- master clear 83
- master reset 83
- memory card 20
  - defined 11
  - installing 11
  - using 3

- menu
  - entering text 36
  - icons, changing in home screen 82
  - icons, converting to text 82
  - icons, described 27
  - icons, showing or hiding 82
  - language, setting 83
  - lists 35
  - navigating 33
  - personalizing 82
  - rearranging features 82
  - using features 35
  - view, changing 82
- menu key 34
- message
  - chat 78
  - menu feature icon 27
  - MMS template 76
  - MMS, defined 20
  - multimedia letter 76
  - multimedia message 76
  - reading 76
  - reminders, turning on/off 82
  - text 76
- message indicator 31
- messages menu feature icon 27

- messaging presence
  - indicator 31
- micro-browser
  - browser setup 91
  - Java applications 92
  - menu feature icon 27
  - using 91
  - Web sessions 91
- missed call indicator 67
- Missed Calls message 67
- MMS template 76
- MMS. *See* message
- More Here* guide 8
- MotoMixer 93
- multimedia letter, sending 76
- multimedia message
  - sending 3, 20, 76
- multimedia messaging
  - service. *See* message
- my telephone number 17, 52

**N**

- network settings 89
- notepad 67
- number
  - storing your number 52
  - viewing your number 17
- numbers, entering 44

## O

- 1-touch dial
  - setting preference 81
  - using 69
- optional accessory, defined 9
- optional feature, defined 9

## P

passwords. *See* codes

phone

- active line indicator 30
- active line, changing 61
- alert, turning off 16, 64
- answer options 53
- clear stored information 83
- codes 47
- date, setting 52
- keypad, answering calls 53
- keypad, locking and unlocking 17
- language, setting 83
- locking 47
- network settings 89
- reset all options 83
- ring style 16, 52, 81
- security code 47
- skin 3, 58
- time, setting 52

turning on/off 15

unlock code 47

unlocking 15, 47, 48, 49

phone number

active line indicator 30

active line, changing 61

adding digits after 67

attaching 2 numbers 67, 68

international access code 64

redialing 61

storing in phonebook 78

storing your number 52

viewing your number 17

phone theme 92

phonebook

attaching 2 numbers 67, 68

category views 51, 80

copying entries 81

dialing a number 79

entry category 80

group mailing list 79

light ID 80

1-touch dial 69

picture ID 2, 19, 20, 51, 62, 79, 80

primary number, setting 81

ringer ID 79, 81

sorting entries 50, 80

- phonebook (continued)
  - speed dial number 68
  - storing an entry 78
  - voice dialing 79
- photo
  - downloading 76, 91
  - picture ID 2, 19, 20, 51, 62, 79, 80
  - sending 2, 18
  - taking 2, 18
- picture
  - downloading 76, 91
  - screen saver 57
  - viewing 92
  - wallpaper 56
- picture ID 2, 19, 20, 51, 62, 79, 80
- PIN code
  - changing 47
  - entering 91
- PIN2 code, changing 47
- playlist 3, 24
- power key 15
- predictive text entry 42
- primary text entry method 37

## Q

- quick dial 84

## R

- received calls list 65
- recent calls 65
- redial
  - automatic redial 62
  - busy number 61
- reference guide 8
- reminders
  - turning on/off 82
- rhythm lights 3, 54
- right soft key
  - functions 28
  - personalizing 82
- ring lights 3, 55
- ring style indicators 32
- ring style, setting 16, 52, 81
- ring tone
  - creating 93
  - downloading 76, 91
  - editing with MotoMixer 93
  - managing 92
- ringer ID
  - setting 79
  - turning on/off 81
- ringer volume, setting 16, 81
- roam indicator 30

## S

- screen saver 57
- secondary text entry
  - method 37
- security code
  - changing 47
  - default 47
  - forgetting 49
- send key 16, 65
- service dial 84
- shortcuts 83
- Show ID feature 66
- signal strength indicator 30
- silent alert indicator 32
- silent alert, setting 16, 52, 81
- SIM Blocked message 15, 91
- SIM card
  - defined 9
  - installing 9
  - locking 91
  - PIN code entry 15
  - PIN code, changing 47
  - PIN2 code, changing 47
  - precautions 10, 11
  - SIM Blocked message 15, 91
- SIM PIN code
  - changing 47
  - entering 91

- SIM PIN2 code, changing 47

- skin 3, 58
- smart key 46
- soft keys
  - functions 28
  - personalizing 82
- sound
  - creating 93
  - downloading 76, 91
  - managing 92
- Speaker On message 46
- speakerphone
  - activating 86
  - automatic answer 86
- speed dial 68
- standby time, increasing 58, 59
- storing a call 65
- symbol chart 45
- symbols, entering 44

## T

- talk then fax call 67
- tap method text entry 39
- telephone number
  - storing your number 52
  - viewing your number 17

## text

- capitalization, changing 38
- character chart 41
- entering 36
- entry method, selecting 37
- entry method, setup 37
- flashing cursor 36
- iTAP software predictive text entry 42
- numeric method 44
- symbol chart 45
- symbol method 44
- tap method 39
- text case indicator 38
- text entry method
  - selecting 37
  - setup 37
- text entry method indicator 31, 38
- theme 92
- time, setting 52
- timers 85
- transfer a call 72
- transmission indicator 29
- travel charger 14
- TTY device 75

## U

- unlock
  - application 91
  - keypad 17
  - phone 47
- unlock code
  - bypassing 49
  - changing 47
  - default 47, 48, 49
  - entering 15, 48
  - forgetting 49

## V

- vibe sync 54
- vibrate alert
  - setting 16, 52, 81
  - turning off 16, 64
- video clip
  - downloading 76, 91
  - managing 93
  - playing 3, 26
- voice dial 79, 86
- voice key
  - dialing a number 79
- voicemail 69
- voicemail message indicator 31, 70

- volume
  - earpiece 15
  - keypad 82
  - ringer 16, 81
- volume key 15

## **W**

- wallpaper 56
- Web pages 91
- Web sessions 91







**MOTOROLA**

# ***Wireless Phone Safety Tips***

*“Safety is your most important call!”*

**Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.**

**When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:**

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a handsfree device.** If possible, add an additional layer of convenience to your wireless

phone with one of the many Motorola Original™ handsfree accessories available today.



- 3 Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*



- 9 Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

\* Wherever wireless phone service is available.

**Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.**



For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>



## ***European Union Directives Conformance Statement***



Hereby, Motorola declares that this product is in compliance with

The essential requirements and other relevant provisions of Directive 1999/5/EC

All other relevant EU Directives

IMEI: 350034/40/394721/9	
<b>CE0168</b>	
Type: MC3-41D12	Product Approval Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte) - to find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.



**motorola.com**

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. © Motorola, Inc., 2004.

Specifications are subject to change without notice.