


HP LaserJet M9040/9050 MFP Service Manual



For the complete PDF manual
please visit www.LaserPros.com

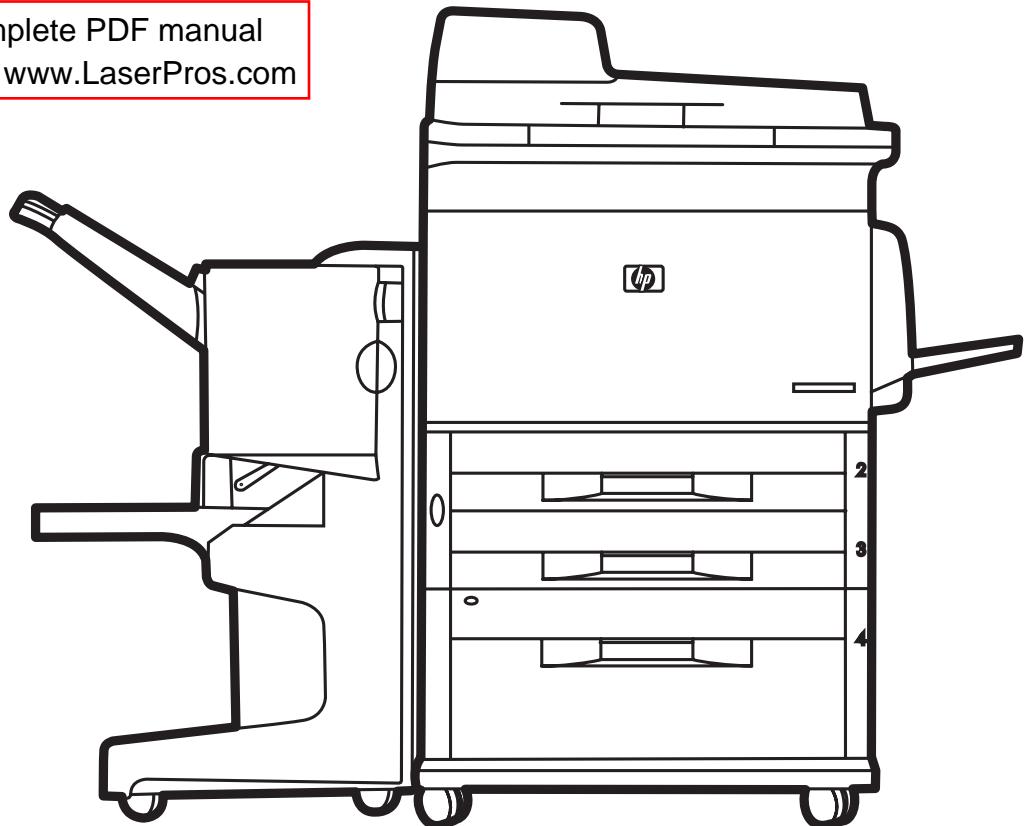

HP LaserJet M9040/9050 MFP Series

Service Manual



Copyright and License

© 2008 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CC395-90956

Edition 1, 04/2008

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Java™ is a US trademark of Sun Microsystems, Inc.

Microsoft®, Windows®, and Windows®XP are U.S. registered trademarks of Microsoft Corporation.

Windows Vista® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency.

Table of contents

1 Product basics

| | |
|-----------------------------------|----|
| Product introduction | 2 |
| Product features | 3 |
| Product walkaround | 7 |
| Output devices | 8 |
| 3,000-sheet stacker | 8 |
| 3,000-sheet stapler/stacker | 8 |
| Paper handling features | 8 |
| Stapling information | 8 |
| Multifunction finisher | 8 |
| Paper handling features | 8 |
| Stapling information | 9 |
| Booklets | 9 |
| 8-bin mailbox | 10 |

2 Control panel

| | |
|--|----|
| Use the control panel | 12 |
| Control-panel layout | 12 |
| Home screen | 13 |
| Buttons on the touchscreen | 14 |
| Control-panel help system | 14 |
| Use the Administration menu | 15 |
| Navigate the Administration menu | 15 |
| Information menu | 16 |
| Default Job Options menu | 17 |
| Default Options for Originals | 17 |
| Default Copy Options | 18 |
| Default Fax Options | 19 |
| Default E-mail Options | 20 |
| Default Send to Folder Options | 21 |
| Default Print Options | 22 |
| Time/Scheduling menu | 23 |
| Management menu | 25 |
| Initial Setup menu | 26 |

| | |
|---|----|
| Networking and I/O | 26 |
| Fax Setup | 34 |
| E-mail Setup | 37 |
| Send Setup menu | 37 |
| Device Behavior menu | 38 |
| Print Quality menu | 42 |
| Troubleshooting menu | 44 |
| Resets menu | 46 |
| Service menu | 46 |
| 3 Paper and print media | |
| Understand paper and print media use | 48 |
| Supported paper and print media sizes | 49 |
| Custom paper sizes | 50 |
| Special paper or print media guidelines | 51 |
| Load paper and print media | 52 |
| Load Tray 1 | 52 |
| Load Trays 2, 3, and 4 | 53 |
| Configure trays | 59 |
| Configure a tray when loading media | 59 |
| Configure a tray by using the Supplies Status button on the touchscreen | 59 |
| Select the media by source, type, or size | 59 |
| Source | 60 |
| Type and Size | 60 |
| Select the output bin | 61 |
| Select an output location | 62 |
| Printing | 62 |
| Copying | 62 |
| 4 Manage and maintain | |
| Information pages | 64 |
| Embedded Web server | 66 |
| Open the embedded Web server by using a network connection | 66 |
| Embedded Web server sections | 67 |
| HP Easy Printer Care | 70 |
| Supported operating systems | 70 |
| Open the HP Easy Printer Care software | 70 |
| HP Easy Printer Care software sections | 70 |
| Use HP Web Jetadmin software | 73 |
| HP Printer Utility for Macintosh | 74 |
| Open the HP Printer Utility | 74 |
| Print a cleaning page | 74 |
| Print a configuration page | 74 |

| | |
|--|----|
| View supplies status | 75 |
| Order supplies online and use other support features | 75 |
| Upload a file to the product | 75 |
| Update the firmware | 76 |
| Activate the two-sided printing (duplexing) mode | 76 |
| Lock or unlock storage devices | 76 |
| Save or print stored jobs | 76 |
| Configure trays | 77 |
| Change network settings | 77 |
| Open the embedded Web server | 77 |
| Set up e-mail alerts | 78 |
| Security features | 79 |
| Secure the embedded Web server | 79 |
| Secure Disk Erase | 79 |
| Data affected | 79 |
| Gain access to Secure Disk Erase | 80 |
| Additional Information | 80 |
| Security lock | 80 |
| Authentication | 80 |
| Lock the control-panel menus | 80 |
| Set the real-time clock | 82 |
| Clean the product | 83 |
| Print a cleaning page | 83 |
| Clean the product hardware | 83 |
| Clean the ADF delivery system | 85 |
| Configure alerts | 90 |
| Manage supplies | 91 |
| HP print cartridges | 91 |
| Non-HP print cartridges | 91 |
| Print cartridge authentication | 91 |
| HP fraud hotline | 91 |
| Print cartridge storage | 91 |
| Print cartridge life expectancy | 92 |
| Check the print cartridge life | 92 |
| Control panel | 92 |
| Embedded Web server | 92 |
| HP Easy Printer Care | 92 |
| HP Web Jetadmin | 92 |
| Printer maintenance kit | 93 |
| Manage memory | 94 |
| Determine memory requirements | 94 |
| Install memory | 94 |
| Verify memory installation | 97 |
| Economy settings | 98 |

| | |
|---|-----|
| Sleep and wake | 98 |
| 5 Theory of operation | |
| Basic operation | 100 |
| Sequence of operation | 101 |
| Product start up sequence (turn on product) | 103 |
| Timing chart | 104 |
| Scanner subsystem | 105 |
| Mechanical structure | 105 |
| Motors and fans | 106 |
| Basic block diagram | 107 |
| Basic system configuration | 108 |
| Scanner unit systems | 108 |
| Scan mode | 109 |
| Power supply assembly | 109 |
| Sleep mode | 110 |
| Low-voltage power supply circuit | 111 |
| Protective functions | 112 |
| Scanner controller circuit | 113 |
| Flatbed operation | 115 |
| Flatbed document exposure control | 115 |
| Flatbed optical drive control | 115 |
| Flatbed optical unit operation | 116 |
| Flatbed document size detection | 117 |
| ADF operation | 119 |
| ADF document exposure control | 119 |
| ADF document feed control | 120 |
| ADF document size detection | 122 |
| ADF feeder sensors | 123 |
| ADF document skew detection | 123 |
| Scanned data flow | 124 |
| Copy processor | 125 |
| Scanning process control signals | 126 |
| Typical scanning process flow | 127 |
| Engine control system | 128 |
| DC controller PCA | 129 |
| High-voltage power supply circuit | 130 |
| Low-voltage power supply | 132 |
| Fuser control circuit | 132 |
| Formatter system | 134 |
| Formatter hardware | 134 |
| Laser/scanner system | 135 |
| Image formation system | 136 |

| | |
|---|-----|
| The image formation process | 136 |
| Print cartridge | 137 |
| Print cartridge design | 138 |
| No-shake toner | 138 |
| Cartridge memory | 138 |
| Toner seal | 138 |
| Toner level detection | 139 |
| Pickup and feed system | 140 |
| Media-size detection | 140 |
| Media-level detection | 140 |
| Multifeed prevention | 140 |
| Transparency media detection | 140 |
| Fuser-wrapping jam detection | 140 |
| Jam detection | 141 |
| Tray 1 | 146 |
| Tray 1 driver PCA | 146 |
| Tray 1 power supply | 146 |
| Tray 1 sequence of operation | 146 |
| Tray 1 pickup and feed | 147 |
| Tray 1 jam detection | 147 |
| Tray 4 | 148 |
| Tray 4 driver PCA | 148 |
| Tray 4 power supply | 148 |
| Tray 4 sequence of operation | 148 |
| Tray 4 pickup and feed | 149 |
| Tray 4 media level and media size detection | 149 |
| Tray 4 jam detection | 149 |

6 Removal and replacement

| | |
|--|-----|
| Removal and replacement strategy | 152 |
| Repair notices | 152 |
| Electrostatic discharge | 153 |
| Required tools | 153 |
| Product orientation | 154 |
| Front and right side orientation | 154 |
| Back and left side orientation | 155 |
| Scanner assembly covers | 156 |
| Control panel | 156 |
| Reinstall the control panel | 157 |
| ADF feeder cover | 157 |
| Reinstall the ADF feeder cover | 158 |
| ADF feeder cover handle | 159 |
| ADF back cover | 159 |

| | |
|--|-----|
| ADF front cover | 161 |
| Lower delivery roller cover | 161 |
| Reinstall the delivery roller cover | 162 |
| White board cover | 162 |
| Copy processor/connect board | 163 |
| Reinstall the copy processor/connect board | 164 |
| Flatbed rail cover | 164 |
| Flatbed back cover | 164 |
| Flatbed right cover | 166 |
| Reinstall the flatbed right cover | 166 |
| Flatbed left cover | 167 |
| Flatbed upper front cover | 168 |
| Flatbed lower front cover | 168 |
| ADF base cover assembly | 169 |
| Reinstall the ADF base cover assembly | 173 |
| Scanner glass | 174 |
| Reinstall the scanner glass | 175 |
| Scan engine internal assemblies | 176 |
| ADF and flatbed internal assemblies | 176 |
| ADF main assembly | 176 |
| Reinstall the ADF main assembly | 181 |
| ADF optical assembly | 181 |
| Reinstall the ADF optical assembly | 188 |
| ADF shading filter | 188 |
| Flatbed optical unit | 190 |
| Reinstall the flatbed optical unit | 193 |
| Switch and solenoids | 193 |
| ADF feeder cover detection switch | 193 |
| Weight solenoid | 194 |
| Shutter solenoid | 195 |
| Motors and fans | 196 |
| Pickup motor | 196 |
| Reinstall the pickup motor | 196 |
| Delivery motor | 197 |
| Reinstall | 197 |
| Flatbed motor | 198 |
| Reinstall the flatbed motor | 199 |
| Power supply assembly | 199 |
| Reinstall power supply assembly | 202 |
| ADF fan assembly | 202 |
| Reinstall the ADF fan assembly | 203 |
| Flatbed fan assembly | 203 |
| Rollers and belts | 204 |
| Pickup roller (D roller) | 204 |

| | |
|---|-----|
| Pickup roller assembly | 204 |
| Reinstall the pickup roller assembly | 205 |
| Feed roller assembly | 205 |
| Lower registration roller assembly | 206 |
| Reinstall the lower registration assembly | 212 |
| Lower delivery roller | 212 |
| Reinstall the lower delivery roller | 213 |
| Upper delivery roller assembly | 213 |
| Reinstall the upper delivery roller assembly | 214 |
| Separation belt assembly | 214 |
| Reinstall the separation belt assembly | 217 |
| Separation belts | 217 |
| Reinstall the separation belts | 219 |
| PCAs | 219 |
| ADF intermediate PCA | 219 |
| ADF width detection sensor assembly | 220 |
| Reinstall the ADF width detection sensor assembly | 220 |
| Flatbed intermediate PCA | 221 |
| Scanner controller board | 222 |
| Intermediate PCA | 224 |
| Scan engine | 225 |
| Reinstall the scan engine | 229 |
| Laser/scanner assembly | 230 |
| Delivery fan assembly | 231 |
| Delivery motor | 233 |
| Print engine covers | 234 |
| Front cover | 234 |
| Right door | 235 |
| Right lower cover | 236 |
| Left upper cover | 236 |
| Reinstall the left upper cover | 237 |
| Left door and diverter | 238 |
| Left back cover | 238 |
| Back cover | 239 |
| Right and left rail covers | 240 |
| Front assemblies | 241 |
| Cartridge release lever | 241 |
| Print cartridge | 242 |
| Reinstall the print cartridge | 243 |
| Transfer-roller assembly | 243 |
| Reinstall the transfer-roller assembly | 244 |
| Tray 2 and Tray 3 (interchangeable) | 244 |
| Rollers (pickup, feed, or separation) | 245 |
| Fuser-jam-removal knob | 245 |

| | |
|---|-----|
| Reinstall the fuser-jam-removal knob | 246 |
| Registration-jam-removal knob | 246 |
| Reinstall the registration-jam-removal knob | 247 |
| Right assemblies | 248 |
| Tray 1 | 248 |
| Paper-input unit (PIU) | 249 |
| Reinstall the paper-input unit | 252 |
| Registration assembly | 252 |
| Reinstall the registration assembly | 253 |
| Transfer-guide assembly | 253 |
| Reinstall the transfer-guide assembly | 254 |
| Left assemblies | 255 |
| Duplexer | 255 |
| Fuser assembly | 256 |
| Back assemblies | 258 |
| Formatter | 258 |
| Low-voltage power supply | 259 |
| High-voltage power supply | 261 |
| DC controller | 262 |
| Toner-sensor contact assembly | 264 |
| Reinstall the toner-sensor contact assembly | 265 |
| Drum motor | 265 |
| Feed-drive assembly | 266 |
| Reinstall the feed-drive assembly | 267 |
| Power-supply fan (fan 1) | 267 |
| Cartridge fan (fan 5) | 268 |
| Reinstall the cartridge fan | 270 |
| Controller fan (fan 2) | 270 |
| Jetlink connector | 271 |
| Duplexer connector holder assembly | 272 |
| Fuser delivery-drive assembly | 273 |
| Reinstall the fuser delivery assembly | 275 |
| Tray 4 | 276 |
| Orientation | 276 |
| Tray 4 left side cover | 276 |
| Reinstall the Tray 4 left side cover | 276 |
| Tray 4 right side cover | 277 |
| Reinstall the Tray 4 right side cover | 277 |
| Tray 4 back covers | 278 |
| Tray 4 center back cover | 278 |
| Tray 4 right back cover | 278 |
| Tray 4 left back cover | 278 |
| Tray 4 | 279 |
| Tray 4 rollers (pickup, feed, and separation) | 279 |

| | |
|--|-----|
| Reinstall the Tray 4 rollers | 280 |
| Tray 4 registration assembly | 280 |
| Tray 4 drive motor | 281 |
| Tray 4 drive assembly | 282 |
| Tray 4 controller board | 283 |
| Paper-size detection switch PCA | 284 |
| Reinstall the paper-size switch PCA | 285 |
| Tray 4 power supply | 285 |
| Tray 4 pickup assembly | 286 |
| Tray 4 paper-connecting unit | 288 |
| 7 Solve problems | |
| Troubleshooting process | 290 |
| Preliminary operating checks | 290 |
| Installation environment | 290 |
| Media checks | 291 |
| Scanner and ADF checks | 291 |
| General troubleshooting information | 292 |
| Abnormal noises are evident, such as grinding or chattering when the main motor is turned on | 292 |
| Media does not feed from Tray X when printing from a software program; the paper-path test is successful | 292 |
| Media does not print from Tray 4 | 292 |
| The product stops printing and hangs on certain jobs | 293 |
| Envelopes are wrinkling | 293 |
| Fusing is poor | 293 |
| The product feeds from an incorrect tray when different media is selected for the first page of the job | 293 |
| Power-on checks | 295 |
| Malfunction troubleshooting | 296 |
| Troubleshooting by using control-panel messages | 297 |
| Event log page | 297 |
| Print the event log | 297 |
| Interpret the event log | 297 |
| Sample event log | 298 |
| View the event log | 298 |
| Control-panel error messages | 299 |
| User- and service-level diagnostics | 322 |
| Copy processor LEDs | 322 |
| Troubleshooting menu | 323 |
| Paper-path test | 324 |
| Print a paper-path test | 324 |
| Service test | 324 |
| Perform a service test | 324 |

| | |
|--|-----|
| Service-level diagnostics | 326 |
| Engine test | 326 |
| Service menu | 326 |
| Other diagnostics | 330 |
| Boot-up key sequences | 330 |
| Low-level boot-up key sequence for selecting a language, performing a cold reset, and enabling and disabling embedded LAN | 331 |
| Medium-level boot-up key sequence for initializing disks | 331 |
| High-level boot-up key sequence for NVRAM initialization, manufacturing, and skipping disk-load and calibration | 331 |
| Drum rotation functional check | 332 |
| Calibrations | 332 |
| Control panel touchscreen calibration | 333 |
| Simplified scanner and ADF calibration | 333 |
| ADF calibrations | 336 |
| Left side front calibration | 336 |
| Left side back calibration | 338 |
| Leading edge front calibration | 339 |
| Leading edge back calibration | 340 |
| ADF plain scaling calibration | 340 |
| ADF heavy scaling calibration | 341 |
| Glass calibrations | 341 |
| Left side glass calibration | 341 |
| Leading edge glass calibration | 342 |
| Glass scaling calibration | 343 |
| Plain motor speed calibration | 343 |
| Measurement and adjustment | 345 |
| ADF unit height adjustment | 345 |
| ADF skew adjustment | 346 |
| ADF width sensor adjustment | 348 |
| Weight solenoid stroke adjustment | 348 |
| Tray 4 diagnostics | 349 |
| Motor test | 349 |
| Standalone running test | 349 |
| Sensor test | 350 |
| Light-pattern interpretation | 350 |
| Clear jams | 352 |
| Jam locations | 352 |
| ADF jams | 353 |
| Clear jams from the duplexer | 354 |
| Clear jams from the input-tray areas | 356 |
| Clear jams from the output areas | 359 |
| Solve repeated jams | 372 |
| Image-formation troubleshooting | 373 |

| | |
|--|-----|
| Print image defects | 373 |
| Print/stop test | 374 |
| Economode | 374 |
| Skew | 375 |
| Copy-image defects | 375 |
| Scanner controller PCA | 377 |
| Connector locations | 379 |
| Electrical structure | 380 |
| Wiring diagrams | 381 |
| Image-defect tables | 383 |
| Repeating defect ruler | 391 |
| Media troubleshooting | 392 |
| Determine the problem source | 392 |
| Isolate the paper path | 392 |
| Try using the straightest paper path | 392 |
| Check the duplexing path | 392 |
| Isolate the source of a jam | 392 |
| Determine the location of a jam | 392 |
| Determine whether the product is experiencing misfeeds or multifeed jams | 392 |
| Isolate a media brand | 393 |
| Isolate a media type | 393 |
| Communication troubleshooting | 394 |
| Communications check | 394 |
| EIO troubleshooting | 394 |
| Jetdirect configuration | 394 |
| Embedded LAN troubleshooting | 394 |
| Error codes | 395 |
| LAN diagnostics | 395 |
| Wiring diagrams | 399 |

8 Parts and diagrams

| | |
|---|-----|
| Order parts, accessories, and supplies | 405 |
| Supplies part numbers | 406 |
| Consumables, supplies, accessories, FRUs, and documents | 406 |
| Common hardware | 409 |
| Illustrations and parts lists | 410 |
| Scanner assembly | 412 |
| Scanner engine covers and panels | 414 |
| Print engine covers and panels | 418 |
| Flatbed scanner assembly | 420 |
| Flatbed optical assembly | 426 |
| ADF scanner assembly | 430 |
| ADF paper pickup assembly | 434 |

| | |
|---|-----|
| ADF main assembly | 440 |
| ADF optical assembly | 444 |
| Scanner engine PCAs | 446 |
| Left door and diverter | 448 |
| Right cover assembly | 450 |
| Print engine internal components | 452 |
| Drum feed drive assembly | 460 |
| Fuser delivery drive assembly | 462 |
| Cartridge lifter assembly | 464 |
| 500-sheet trays (Tray 2 and Tray 3) | 466 |
| Paper input unit | 468 |
| Registration assembly | 470 |
| Transfer roller assembly | 472 |
| Delivery assembly | 474 |
| PCA locations | 476 |
| Tray 4 main body | 478 |
| Tray 4 drive assembly | 482 |
| Tray 4 PCA location | 484 |
| Tray 1 assembly | 486 |
| Alphabetical parts list | 488 |
| Numerical parts list | 512 |

Appendix A Service and support

| | |
|---|-----|
| Hewlett-Packard limited warranty statement | 537 |
| Customer self repair warranty service | 538 |
| Print cartridge limited warranty statement | 539 |
| HP Customer Care | 540 |
| Online Services | 540 |
| Telephone support | 540 |
| Software utilities, drivers, and electronic information | 540 |
| HP direct ordering for accessories or supplies | 540 |
| HP service information | 540 |
| HP service agreements | 540 |
| HP Easy Printer Care | 541 |
| HP support and information for Macintosh computers | 541 |

Appendix B Specifications

| | |
|---------------------------------|-----|
| Physical specifications | 544 |
| Electrical specifications | 545 |
| Acoustic emissions | 546 |
| Operating environment | 546 |

Appendix C Regulatory information

| | |
|------------------------------------|------------|
| FCC regulations | 548 |
| Declaration of conformity | 549 |
| Certificate of volatility | 550 |
| Types of memory | 550 |
| Volatile memory | 550 |
| Non-volatile memory | 550 |
| Hard-disk-drive memory | 550 |
| Safety statements | 551 |
| Laser safety | 551 |
| Canadian DOC regulations | 551 |
| VCCI statement (Japan) | 551 |
| Power cord statement (Japan) | 551 |
| EMI statement (Korea) | 551 |
| EMI statement (Taiwan) | 551 |
| Laser statement for Finland | 552 |
| Substances table (China) | 553 |
| Index | 555 |