



Air Conditioner with R-410A Refrigerant

Application Guideline and Service Manual

SAFETY CONSIDERATIONS

Installation, service, and repair of these units should be attempted only by trained service technicians familiar with standard service instruction and training material.

All equipment should be installed in accordance with accepted practices and unit Installation Instructions, and in compliance with all national and local codes. Power should be turned off when servicing or repairing electrical components. Extreme caution should be observed when troubleshooting electrical components with power on. Observe all warning notices posted on equipment and in instructions or manuals.

⚠ CAUTION

R-410A systems operate at higher pressures than standard R-22 systems. Do not use R-22 service equipment or components on R-410A equipment.

Refrigeration system contains refrigerant under pressure. Extreme caution should be observed when handling refrigerants. Wear safety glasses and gloves to prevent personal injury. During normal system operation, some components are hot and can cause burns. Rotating fan blades can cause personal injury. Appropriate safety considerations are posted throughout this manual where potentially dangerous techniques are addressed.

INTRODUCTION

Section 1 of this Application Guideline and Service Manual provides the required system information necessary to install the R-410A air conditioner in all applications. Section 2 provides the necessary information to service, repair, and maintain the family of R-410A air conditioners. Section 3 of this manual is an appendix. Use table of contents to locate desired topic.

TABLE OF CONTENTS

	Page
SECTION 1—APPLICATION GUIDELINE	2-7
• INSTALLATION GUIDELINE	
Residential New Construction	
Add-On Replacement (Retrofit)	
Desert or Seacoast	
• REQUIRED FIELD-INSTALLED ACCESSORIES	
• ACCESSORY DESCRIPTIONS	
• LOW-AMBIENT GUIDELINE	
• LONG-LINE GUIDELINE	
Interconnecting Tubing	
Metering Device	
Tubing Configuration	
Charging Information	
SECTION 2—SERVICE MANUAL	8-22

- UNIT IDENTIFICATION
 - Model Number Nomenclature
 - Serial Number Nomenclature
- CABINET ASSEMBLY8
 - Remove Top Cover
 - Remove Fan Motor Assembly
 - Information Plate
- ELECTRICAL9
 - Aluminum Wire
 - Contactor
 - Capacitor
 - PTC Devices
 - Cycle Protector
 - Crankcase Heater
 - Time-Delay Relay
 - Pressure Switches
 - Fan Motor
 - Compressor Plug
 - Low-Voltage Terminals
- COPELAND SCROLL COMPRESSOR13
 - Mechanical Failure
 - Electrical Failure
- REFRIGERATION SYSTEM15
 - Refrigerant
 - Compressor Oil
 - Brazing
 - Service Valves and Pumpdown
 - Filter Drier
 - Accumulator
 - AccuRater®
 - Thermostatic Expansion Valve (TXV)
- REFRIGERATION SYSTEM REPAIR19
 - Leak Detection
 - Coil Removal
 - Compressor Removal and Replacement
 - System Clean-Up After Burnout
 - Evacuation
 - R-410A Refrigerant Charging
 - Checking Charge
- CARE AND MAINTENANCE21
 - Cleaning
 - Desert and Seacoast Locations
- SECTION 3—APPENDIX**23-26
- PRESSURE vs. TEMPERATURE CHART FOR R-410A
- SUBCOOLING CHARGING TABLE
- TROUBLESHOOTING CHART
- QUICK REFERENCE GUIDE

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.

SECTION 1—APPLICATION GUIDELINE

INSTALLATION GUIDELINE

RESIDENTIAL NEW CONSTRUCTION

Specifications for this unit in the residential new construction market require the outdoor unit, indoor unit, refrigerant tubing sets, metering device, and filter drier listed in Product Data Digest (PDD). There can be no deviation. Consult unit Installation Instructions for detailed information.

ADD-ON REPLACEMENT (RETROFIT)

Specifications for this unit in the add-on replacement/retrofit market require change-out of outdoor unit, metering device, and all capillary tube coils. Change-out of indoor coil is recommended. There can be no deviation.

1. If system is being replaced due to compressor electrical failure, assume acid is in system. If system is being replaced for any other reason, use approved acid test kit to determine acid level. If even low levels of acid are detected install factory approved, 100% activated alumina suction-line filter drier in addition to the factory supplied liquid-line filter drier.
2. Drain oil from low points or traps in suction-line and evaporator if they were not replaced.
3. Change-out indoor coil or verify existing coil is listed in the PDD.
4. Change-out metering device to factory supplied device specifically designed for R-410A.

5. Replace outdoor unit with R-410A outdoor unit.
6. Install factory-supplied liquid-line filter drier.

⚠ WARNING

Never install a suction-line filter drier in the liquid-line of an R-410A system. Failure to follow this warning can cause a fire, personal injury, or death.

7. If suction-line filter drier was installed for system clean up: operate system for 10 hr. Monitor pressure drop across drier. If pressure drop exceeds 3 psig replace suction-line and liquid-line filter driers. Be sure to purge system with dry nitrogen when replacing filter driers. Continue to monitor pressure drop across suction-line filter drier. After 10 hr of run time, remove suction-line filter drier and replace liquid-line filter drier. **Never leave suction-line filter drier in system longer than 72 hr (actual time).**
8. Charge system. (See unit information plate.)

SEACOAST

Installation of these units in seacoast locations requires the use of a coastal filter. (See section on cleaning.)

Table 1—Required Field-Installed Accessories

ACCESSORY	ORDERING NUMBER	REQUIRED FOR LOW-AMBIENT APPLICATION	REQUIRED FOR LONG-LINE APPLICATION†	REQUIRED FOR SEA-COAST APPLICATION
Crankcase Heater—All Sizes	KAACH1201AAA	YES	YES	NO
Evaporator Freeze Thermostat—All Sizes	KAAFT0101AAA	YES	NO	NO
Winter Start Control—All Sizes	KAAWS0101AAA	YES	NO	NO
Compressor Start Assist(PTC) OR Capacitor/Relay—All Sizes	KAACS0201PTC	YES	YES	NO
	KSAHS0401AAA			
Low-Ambient Controller OR Motor Master®—All Sizes	P251-0083(RCD)	YES	NO	NO
	32LT660004(RCD)*			
Wind Baffle Fig. 1—All Sizes	N/A	SEE LOW-AMBIENT INSTRUCTIONS	NO	NO
Coastal Filter—All Sizes	KAACF0201MED	NO	NO	YES
Support Feet—All Sizes	KSASF0101AAA	RECOMMENDED	NO	RECOMMENDED

* Fan motor with ball bearings required.

† Liquid-line solenoid may be required. (See Fig. 4.)

ACCESSORY DESCRIPTIONS

LOW-AMBIENT CONTROLLER — Low-ambient controller is a cycle control device activated by a temperature sensor mounted

on a header tube of the outdoor coil. It is designed to cycle the outdoor fan motor in order to maintain condensing temperature within normal operating limits (approximately 130° to 110°F high,

70° to 50°F low). The control will maintain working head pressure at low-ambient temperatures down to -20°F when properly installed.

COMPRESSOR CRANKCASE HEATER — An electric heater which mounts to base of compressor to keep lubricant warm during off cycles. Improves compressor lubrication on restart and minimizes chance of refrigerant slugging. May or may not include a thermostat control.

EVAPORATOR FREEZE THERMOSTAT — An SPST temperature activated switch stops unit operation when evaporator reaches freeze-up conditions.

WINTER START CONTROL — An SPST delay relay which bypasses the low-pressure switch for approximately 3 minutes to permit start up for cooling operation under low-load conditions.

WIND BAFFLE — A field-fabricated sheet metal cover used to stop prevailing winds or where outdoor ambient temperature is less than 0°F during unit operation.

COMPRESSOR START ASSIST (PTC) — Solid-state electrical device which gives a "soft" boost to the compressor at each start.

MOTOR MASTER® CONTROL — A fan speed control device activated by a temperature sensor. Designed to control condenser fan motor speed in response to the saturated, condensing temperature during operation in cooling mode only. For outdoor temperature down to -20°F, it maintains condensing temperature at 100°F ± 10°F.

COMPRESSOR START ASSIST (CAPACITOR/RELAY) — Start capacitor and start relay gives "hard" boost to compressor motor at each start.

LIQUID-LINE SOLENOID — An electrically operated shut-off valve to be installed at outdoor or indoor unit (depending on tubing configuration) and which stops and starts refrigerant liquid flow in response to compressor operation. Maintains a column of refrigerant liquid ready for action at next compressor operation cycle.

COASTAL FILTER — A mesh screen inserted under top cover and inside base pan to protect condenser coil from salt damage without restricting airflow.

SUPPORT FEET — Four stick-on plastic feet which raise unit 4 in. above mounting pad. This allows sand, dirt, and other debris to be flushed from unit base; minimizes corrosion.

LOW-AMBIENT GUIDELINE

The recommended minimum operating temperature for this system is 55°F outdoor ambient. R-410A air conditioner may be applied at ambient temperatures below 55°F when required accessories are installed. (See Table 1 and Fig. 1.)

LONG-LINE GUIDELINE

This guideline provides the required system changes for the R-410A air conditioner having piping requirements greater than 50 ft or installations where indoor unit is located above or below outdoor unit, by more than 8 ft. This guide is intended to cover applications outside the standard Installation Instructions.

INTERCONNECTING TUBING

Table 2 lists the recommended interconnecting vapor-line diameters for equivalent total line lengths. The R-410A air conditioner installed in long-line applications must use **only 3/8-in. liquid lines**. Equivalent line lengths equal the linear length (measured) of the interconnecting vapor tubing plus losses due to elbows. (See Table 3 and Fig. 3.) Liquid lines larger than 3/8-in. Od will greatly increase the charge quantity of the system. Excessive charge will

increase risk of migration and compressor damage. Table 2 provides estimated percentage of nominal cooling capacity losses based on the standard required vapor line size versus what is selected for the long-line application.

Refer to the outdoor unit PDD to find the standard recommended vapor-line diameter. Calculate the linear length of vapor tube required, adding any losses for the total number of elbows for the application. (See Table 3.) Using this equivalent length select the desired vapor-line size from Table 2. Subtract nominal percentage loss from outdoor unit presale literature Detailed Cooling Capacities for given indoor/outdoor combination. Reference all notes of Table 2.

NOTE: When specifying the vapor-line insulation, be aware of the following standard practice.

Tubing kits should meet the following recommendations to minimize losses through the insulation: 5/8-in. and 3/4-in. tubing kits should be supplied with 3/8-in. insulation; 7/8-in. and 1-1/8-in. tubing kits should be supplied with 1/2-in. insulation. For minimal capacity loss in long-line application, 1/2-in. insulation should be specified.

NOTE: Special consideration must be given to isolating interconnecting tubing from building structure. Isolate tubing so that vibration or noise is not transmitted into the structure. (See Fig. 2.)

METERING DEVICE

An ACCURATER piston or an R-410A TXV can be installed for long-line applications.

A liquid-line solenoid valve can be used for certain long line applications. (See Fig. 4.) The solenoid valve has a flow arrow stamped on the body of the valve. When solenoid is closed (not energized) and pressure is applied in the direction of the flow arrow, complete shutoff will occur.

If a piston is used and total equivalent horizontal length is 100 ft or longer, indoor piston must be increased 1 full size. No piston changes are required for the allowable 30 ft vertical elevation.

A TXV may be used instead of a piston for an indoor metering device. When sizing an accessory TXV, refer to unit presale literature.


TUBING CONFIGURATION

Fig. 4 through 6 will detail the proper installation of equipment and provide applications where accessories may be required. Reference all notes of appropriate fig.

CHARGING INFORMATION

Use superheat charging method for ACCURATER pistons. Use subcooling charging method for TXV applications. The standard charging methods can be found in refrigerant system charging section of the Service Manual. Since total system charge is increased for long-line application, it is necessary to calculate additional refrigerant charge. The rating plate charge of a given outdoor unit is for a standard application of 15 ft of interconnecting tubing. For line lengths greater than 15 ft, add 0.50 oz of refrigerant per foot of additional line length. The rating plate charge can be found on outdoor unit rating plate or in outdoor unit presale literature. Long-line applications do not require additional oil charge.

NOTE: Charging units with long refrigerant lines must be done carefully to avoid over charging. Pressure and temperature changes are slower with long lines. Adding or removing charge must be done slowly to allow time for system to stabilize.

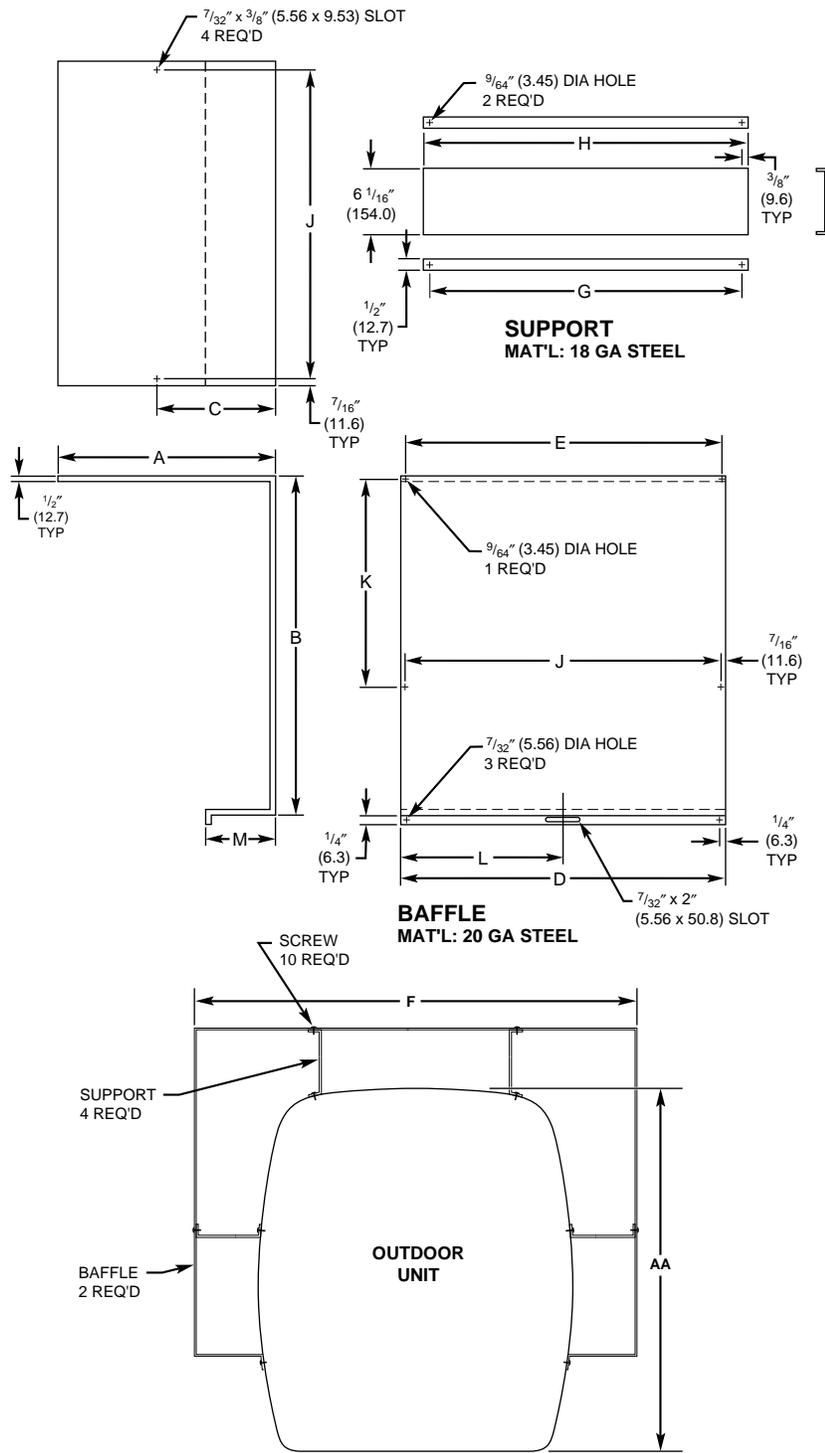

BAFFLE ASSEMBLY

A95444

DIMENSIONS		AA		A	B	C	D	E	F	G	H	J	K	L	M
	Unit Size		Unit Height	In.	In.	In.	In.	In.	In.	In.	In.	In.	In.	In.	In.
TECH2000	Small	27-1/2	23 13/16	17	25 1/4	10 3/8	19 3/4	20 1/2	34	19 11/16	20 7/16	19 5/8	0	0	6 1/8
			27 13/16	17	25 1/4	10 3/8	23 3/4	24 1/2	34	23 11/16	24 7/16	23 5/8	0	11 7/8	6 1/8
			33 13/16	17	25 1/4	10 3/8	29 3/4	30 1/2	34	29 11/16	30 7/16	29 5/8	0	14 7/8	6 1/8
InViroFlow Top	Medium	34-15/16	27 13/16	21	32	11 3/16	23 3/4	24 1/2	42	23 11/16	24 7/16	23 5/8	19 11/16	11 7/8	6 11/16
			33 13/16	21	32	11 3/16	29 3/4	30 1/2	42	29 11/16	30 7/16	29 5/8	19 11/16	14 7/8	6 11/16
			39 13/16	21	32	11 3/16	35 3/4	36 1/2	42	35 11/16	36 7/16	35 5/8	19 11/16	17 7/8	6 11/16
	Large	45	33 13/16	25 3/16	42	12 15/16	29 3/4	30 1/2	50 7/16	29 11/16	30 7/16	29 5/8	22 11/16	14 7/8	7 1/16
			39 13/16	25 3/16	42	12 15/16	35 3/4	36 1/2	50 7/16	35 11/16	36 7/16	35 5/8	22 11/16	17 7/8	7 1/16

Fig. 1—Wind Baffle Construction/Dimensions

NOTE: Avoid contact between tubing and structure

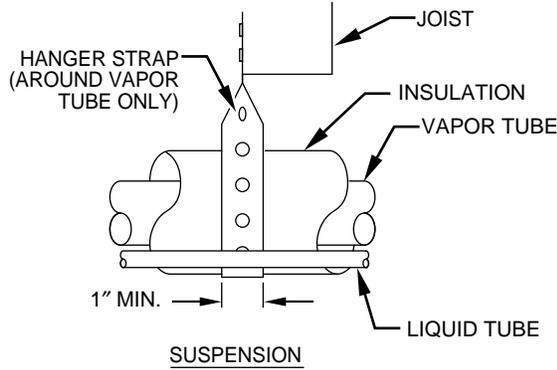
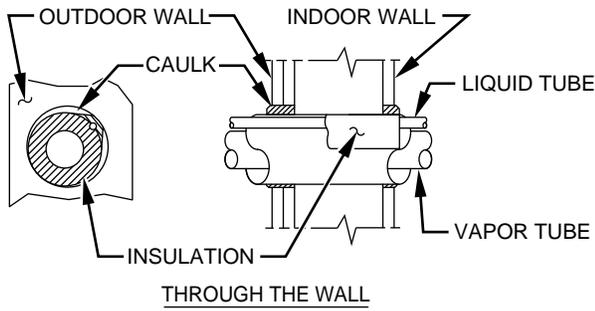


Fig. 2—Tubing Support

A94028

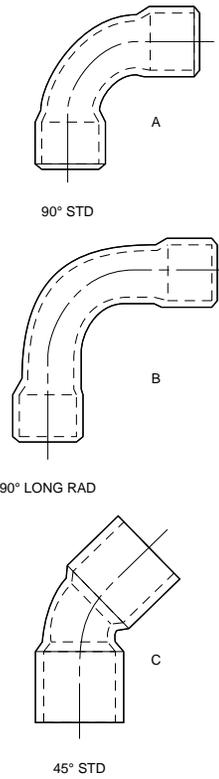


Fig. 3—Tube Bend Losses

A92498

Table 2—Estimated Percentage of Nominal Cooling Capacity Losses

UNIT NOMINAL SIZE (BTU)	STANDARD VAPOR LINE† (IN.)	LONG-LINE VAPOR LINE‡ (IN.)	PERCENTAGE OF COOLING CAPACITY LOSS (BTU) VERSUS EQUIVALENT LENGTH*						
			25 Ft	50 Ft	75 Ft	100 Ft	125 Ft	150 Ft	175 Ft
24,000	5/8	5/8	0	1	2	3	4	6	7
		3/4	0	0	0	1	1	2	2
		7/8	0	0	0	0	0	1	1
30,000	3/4	5/8	1	2	3	4	5	6	7
		3/4	0	0	1	1	2	2	2
		7/8	0	0	0	0	1	1	1
36,000	3/4	5/8	1	3	5	6	8	9	11
		3/4	0	1	1	2	3	3	4
		7/8	0	0	0	0	1	1	2
42,000	7/8	3/4	0	1	2	2	3	4	5
		7/8	0	0	0	1	1	1	2
		1-1/8	0	0	0	0	0	0	0
48,000	7/8	3/4	1	1	2	3	2	4	7
		7/8	0	0	1	1	2	3	3
		1-1/8	0	0	0	0	0	0	1
60,000	1-1/8	3/4	2	3	5	7	8	10	11
		7/8	1	2	2	3	4	5	6
		1-1/8	0	0	1	1	1	1	2

*Standard vapor line diameter required per outdoor unit presale literature.


†Vapor line diameter that may be selected for a long-line application. If smaller vapor lines are selected but not specified within the table, large capacity losses will occur and defrost capacities will be reduced. If larger vapor lines are selected but not specified within the table, refrigerant oil return will be impaired due to velocity losses.

‡The estimated percentage of cooling capacity that must be subtracted from Detailed Cooling Capacities specified in outdoor unit presale literature for any given indoor/outdoor combination.

**Not approved due to excessive loss of capacity.

Table 3—Fitting Losses in Equivalent Ft

TUBE SIZE OD (IN.)	90° STD FIG. 3-A	90° L.R. FIG. 3-B	45° STD FIG. 3-C
5/8	1.6	1.0	0.8
3/4	1.8	1.2	0.9
7/8	2.0	1.4	1.0
1-1/8	2.6	1.7	1.3

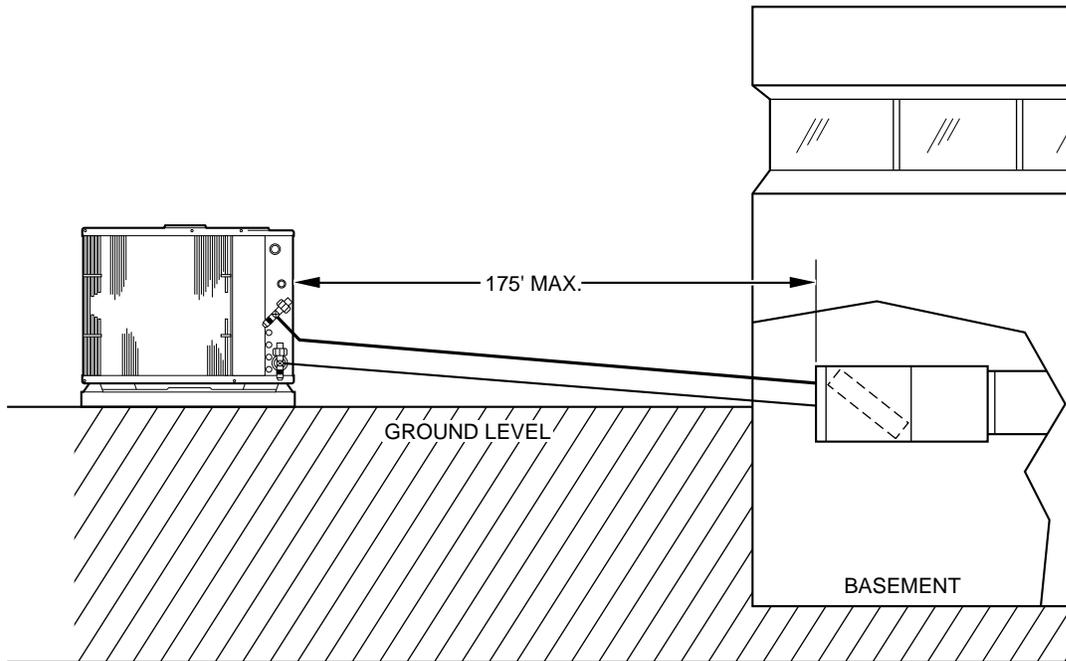


Application: Air conditioner installed in horizontal configuration.

A95451

- A hard shut-off TXV or liquid-line solenoid must be installed at indoor unit.
- A crankcase heater must be installed on compressor.
- Vapor line should slope toward indoor unit.
- The above requirements provide refrigerant migration protection during off-cycle due to temperature or slight elevation differences between indoor and outdoor units.
- Maximum equivalent line length is 175 ft between indoor and outdoor units.

Fig. 4—Units Installed in a Horizontal Configuration

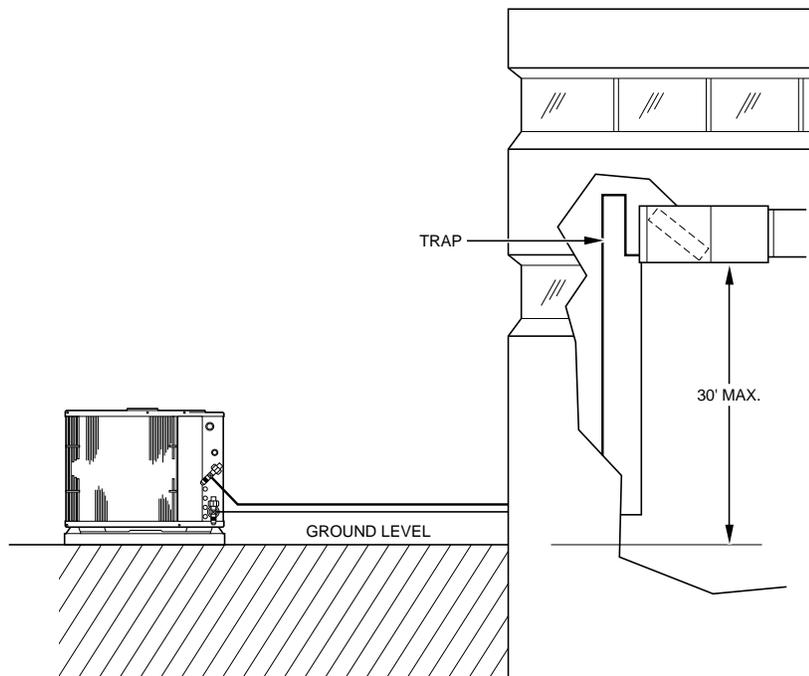


Application: Air conditioner installed below indoor unit.

A95452

- A crankcase heater must be installed on compressor.
- An inverted vapor-line trap must be installed at indoor unit. The top peak of trap must be greater than height of indoor coil.
- The above requirements provide protection against condensed refrigerant collecting in the vapor line.
- Maximum elevation between units is 30 ft. Maximum equivalent total line length is 175 ft.

Fig. 5—Indoor Unit Above Outdoor Unit

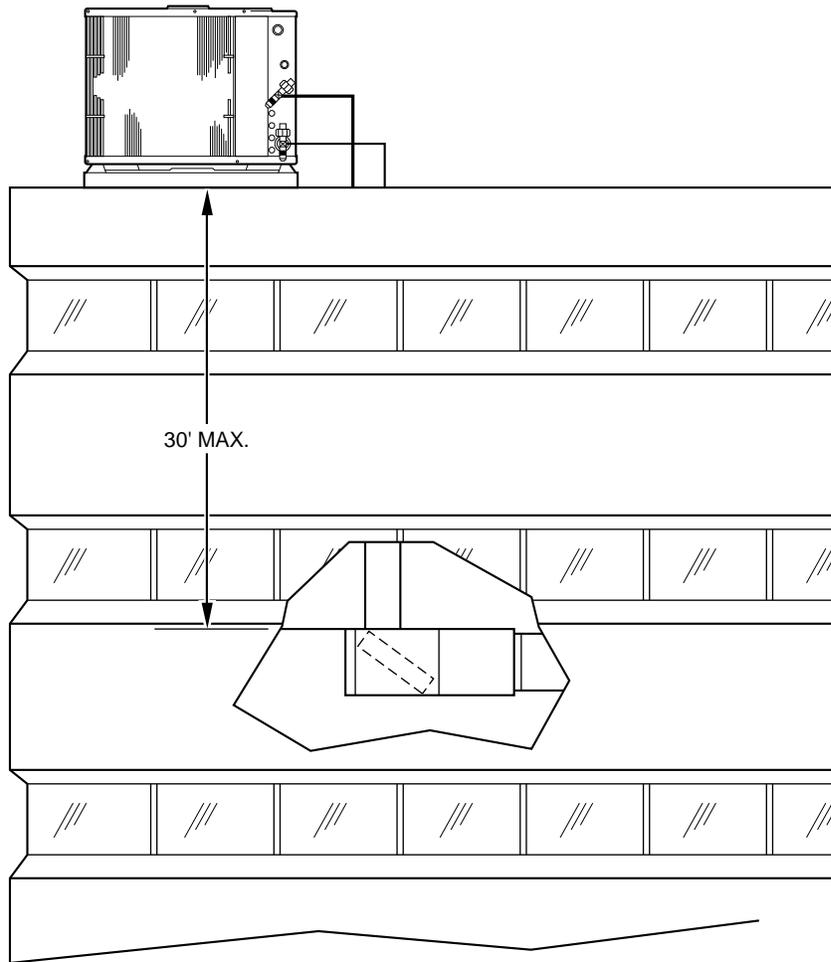

Application: Air conditioner installed above indoor unit.

A95453

- A crankcase heater must be installed on compressor.
- The above requirements provide protection against refrigerant migration to compressor when outdoor temperature is lower than indoor temperature.
- Maximum elevation between units is 30 ft. Maximum equivalent total line length is 175 ft.

Fig. 6—Indoor Unit Below Outdoor Unit

SECTION 2—SERVICE MANUAL

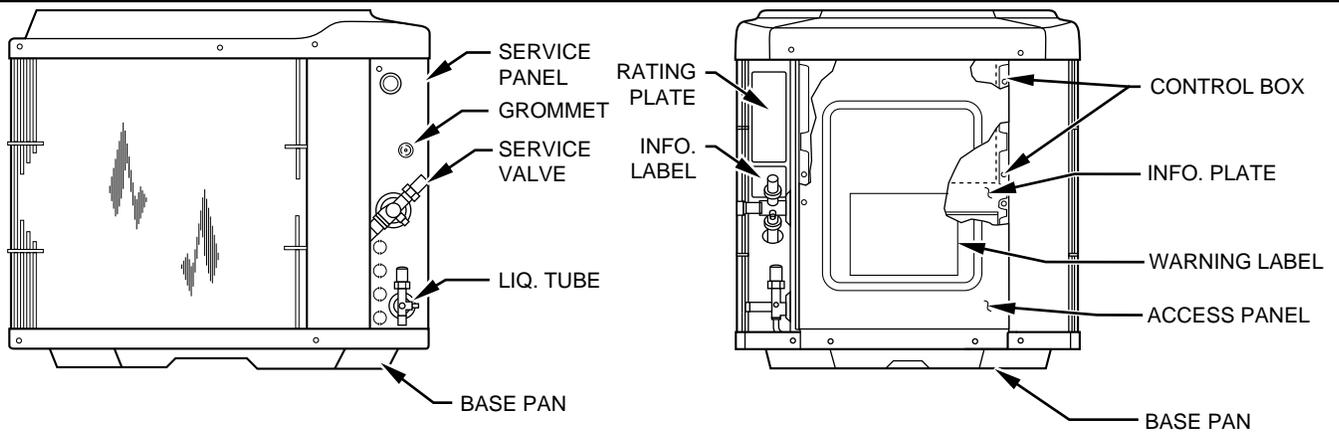


Fig. 7—Callouts for R-410A Air Conditioner

A95410

⚠ WARNING

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause personal injury, death, or property damage. Consult a qualified installer, service agency or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product.

Troubleshooting Chart for the R-410A Air Conditioner is provided in appendix at back of this manual. It will enable the service technician to use a systematic approach to locating the cause of a problem and correcting system malfunctions.

UNIT IDENTIFICATION

This section explains how to obtain model and serial number from unit rating plate. These numbers are needed to service and repair the R-410A air conditioner.

MODEL NUMBER NOMENCLATURE

Model number is found on unit rating plate. (See Fig. 7 and 8.)

SERIAL NUMBER NOMENCLATURE

Serial number is found on unit rating plate. (See Fig. 7 and 9.)

4. Disconnect fan motor wires and cut wire ties. Remove wires from control box. Refer to unit wiring label.
5. Remove screws holding top cover to coil grille and corner posts.
6. Lift top cover from unit.
7. Reverse sequence for reassembly.

REMOVE FAN MOTOR ASSEMBLY

1. Perform items 1 through 6 from above.
2. Remove nuts securing fan motor to top cover.
3. Remove motor and fan blade assembly.
4. Reverse sequence for reassembly.
5. Prior to applying power, check that fan rotates freely.

INFORMATION PLATE

The information plate is secured to front of control box and provides the control box cover. (See Fig. 10.) This plate also provides a surface to attach the wiring schematic, superheat charging tables with instructions, and warning labels. The plate has 2 tabs on top edge that are bent down at slightly more than 90°. When information plate is removed, these tabs can be inserted into 2 mating slots in bottom front edge of control box and plate will

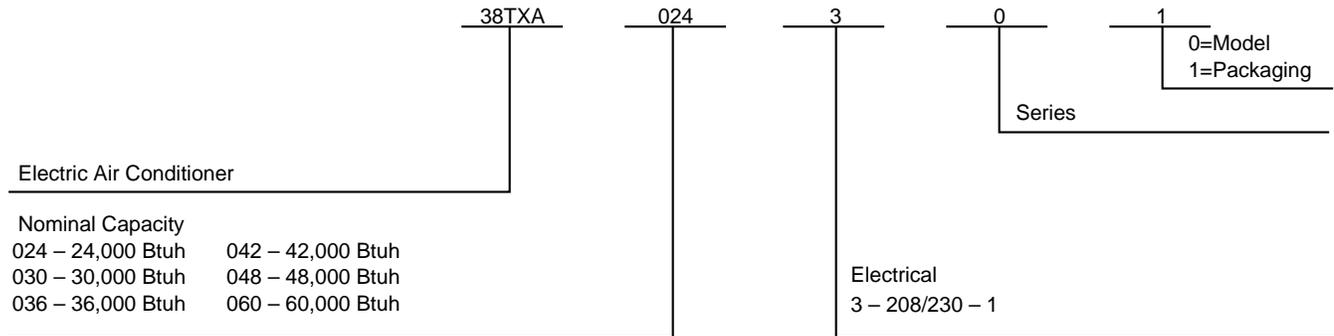


Fig. 8—Model Number Nomenclature

A95405

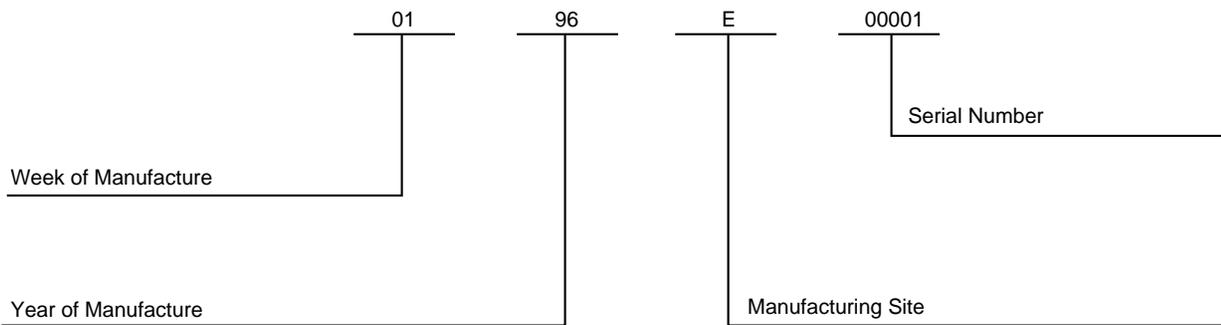


Fig. 9—Serial Number Nomenclature

A95406


CABINET ASSEMBLY

Certain maintenance routines and repairs require removal of cabinet panels. (See Fig. 7.)

REMOVE TOP COVER

1. Turn off all power to outdoor and indoor units.
2. Remove access panel.
3. Remove information plate.

hang down forming a lower front panel. (See Fig. 11.) This is convenient when access to controls is required while unit is operating. The information plate on small size casing completely covers opening below control box. On larger models information plate may not cover entire opening. In this instance, top cover can be removed and placed on its side to cover additional space.

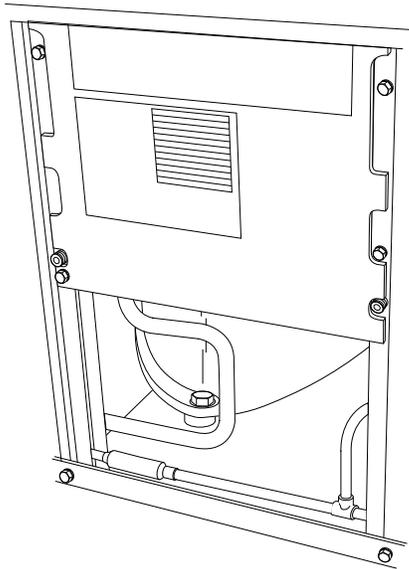

A95506

Fig. 10—Information Plate

ELECTRICAL

⚠ WARNING


Exercise extreme caution when working on any electrical components. Shut off all power to system prior to troubleshooting. Some troubleshooting techniques require power to remain on. In these instances, exercise extreme caution to avoid danger of electrical shock. **ONLY TRAINED SERVICE PERSONNEL SHOULD PERFORM ELECTRICAL TROUBLESHOOTING.** Failure to follow this warning can cause a fire, personal injury, or death.

ALUMINUM WIRE


⚠ CAUTION

Aluminum wire may be used in the branch circuit (such as the circuit between the main and unit disconnect), but only copper wire may be used between the unit disconnect and the unit.

Whenever aluminum wire is used in branch circuit wiring with this unit, adhere to the following recommendations.

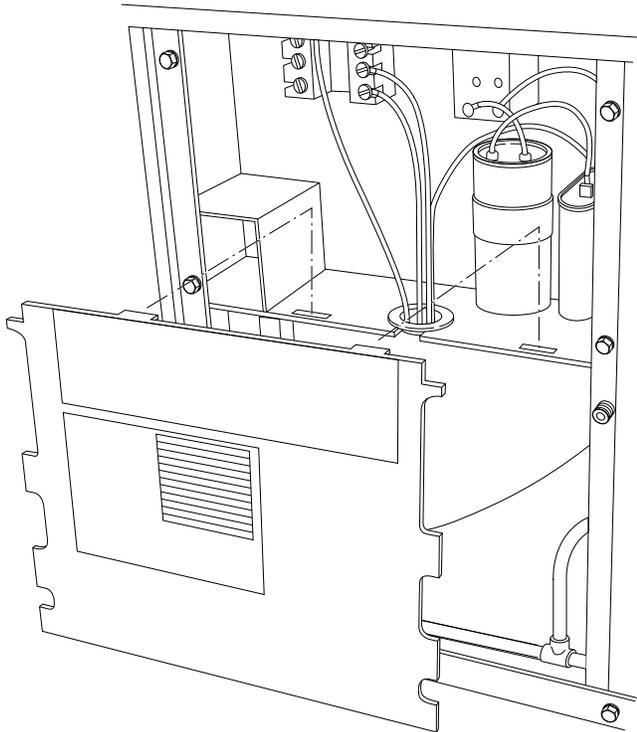

A95507

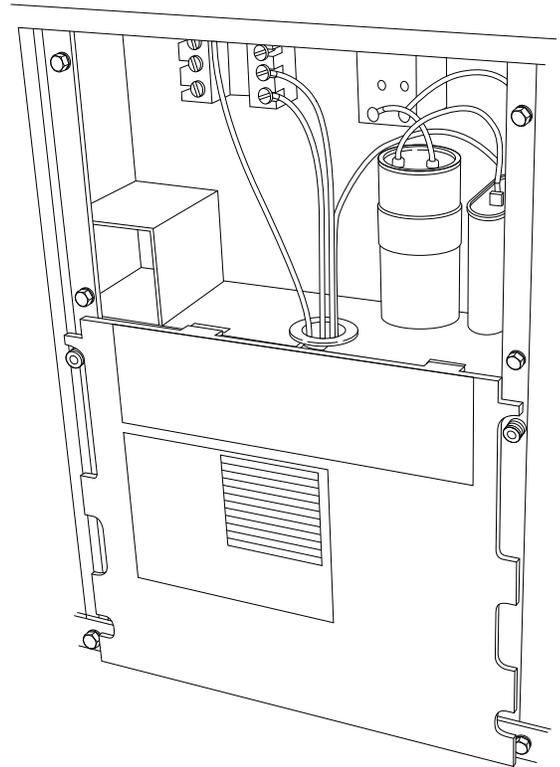


A95508

Fig. 11—Information Plate Removed/Installed Below Control Box

Connections must be made in accordance with the National Electrical Code (NEC), using connectors approved for aluminum wire. The connectors must be UL approved (marked Al/Cu with the UL symbol) for the application and wire size. The wire size selected must have a current capacity not less than that of the copper wire specified, and must not create a voltage drop between service panel and unit in excess of 2 percent of unit rated voltage. To prepare wire before installing the connector, all aluminum wire must be "brush-scratched" and coated with a corrosion inhibitor such as Pentrox A. When it is suspected that connection will be exposed to moisture, it is very important to cover entire connection completely to prevent an electrochemical action that will cause connection to fail very quickly. Do not reduce effective size of wire, such as cutting off strands so that wire will fit a connector. Proper size connectors should be used. Check all factory and field electrical connections for tightness. This should also be done after unit has reached operating temperatures, especially if aluminum conductors are used.

CONTACTOR

The contactor provides a means of applying power to unit using low voltage (24v) from transformer in order to power contactor coil. (See Fig. 12.) Depending on unit model, you may encounter single- or double-pole contactors to break power. Exercise extreme caution when troubleshooting as 1 side of line may be electrically energized.

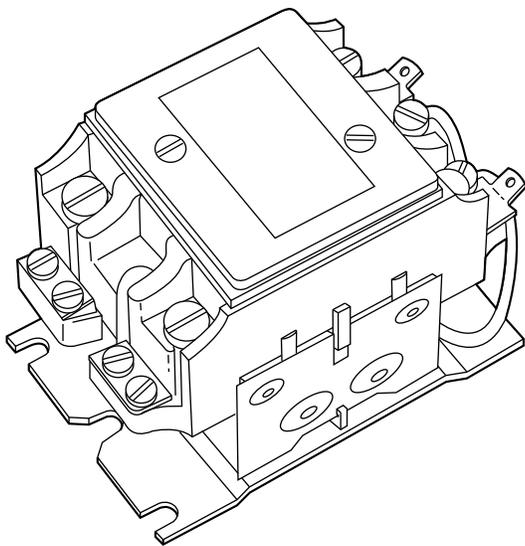

A88350

Fig. 12—Contactor

The contactor coil is powered by 24vac. If contactor does not operate:

1. With power off, check whether contacts are free to move. Check for severe burning or arcing on contact points.
2. With power off, use ohmmeter to check for continuity of coil. Disconnect leads before checking. A low resistance reading is normal. Do not look for a specific value, as different part numbers will have different resistance values.
3. Reconnect leads and apply low-voltage power to contactor coil. This may be done by leaving high-voltage power to outdoor unit off and turning thermostat to cooling. Check voltage at coil with voltmeter. Reading should be between 20v and 30v. Contactor should pull in if voltage is correct and coil is good. If contactor does not pull in, replace contactor.


4. With high-voltage power off and contacts pulled in, check for continuity across contacts with ohmmeter. A very low or 0 resistance should be read. Higher readings could indicate burned or pitted contacts which may cause future failures.

CAPACITOR

⚠ WARNING

Capacitors can store electrical energy when power is off. Electrical shock can result if you touch the capacitor terminals and discharge the stored energy. Exercise extreme caution when working near capacitors. With power off, discharge stored energy by shorting across the capacitor terminals with a 15,000-ohm, 2-watt resistor. Failure to follow this warning can cause a fire, personal injury, or death.

NOTE: If bleed resistor is wired across start capacitor, it must be disconnected to avoid erroneous readings when ohmmeter is applied across capacitor. (See Fig. 13.)

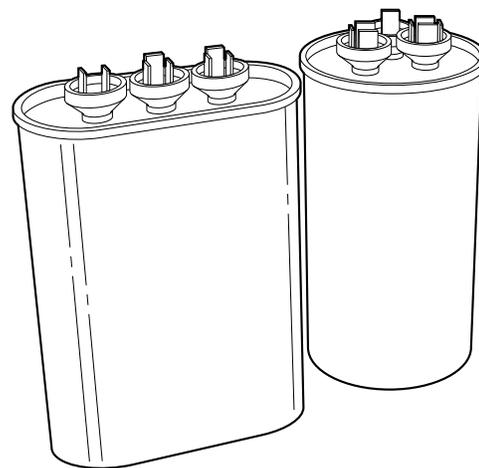

A94006

Fig. 13—Capacitor

⚠ WARNING

Always check capacitors with power off. Attempting to troubleshoot a capacitor with power on can be dangerous. Defective capacitors may explode when power is applied. Insulating fluid inside is combustible and may ignite, causing burns. Failure to follow this warning can cause a fire, personal injury, or death.

Capacitors are used as a phase-shifting device to aid in starting certain single-phase motors. Check capacitors as follows.

1. With power off, discharge capacitors as outlined above. Disconnect capacitor from circuit. Put ohmmeter on R X 10k scale. Using ohmmeter, check each terminal to ground (use capacitor case). Discard any capacitor which measures 1/2 scale deflection or less. Place ohmmeter leads across capacitor and place on R X 10k scale. Meter should jump to a low resistance value and slowly climb to higher value. Failure of meter to do this indicates an open capacitor. If resistance stays at 0 or a low value, capacitor is internally shorted.
2. Capacitance testers are available which will read value of capacitor. If value is not within ± 10 percent value stated on capacitor, it should be replaced. If capacitor is not open or shorted, the capacitance value is calculated by measuring voltage across capacitor and current it draws.

⚠ WARNING

Exercise extreme caution when taking readings while power is on. Electrical shock can cause personal injury or death.

Use following formula to calculate capacitance:

$$\text{Capacitance (mfd)} = \frac{2650 \times \text{amps}}{\text{volts}}$$

- Remove any capacitor that shows signs of bulging, dents, or leaking. Do not apply power to a defective capacitor as it may explode.

PTC DEVICES

Sometimes under adverse conditions, a standard run capacitor in a system is inadequate to start compressor. In these instances, a start assist device is used to provide an extra starting boost to compressor motor. This device is called a positive temperature coefficient (PTC) or thermistor. (See Fig. 14.) It is a resistor wired in parallel with the run capacitor. As current flows through the PTC at start-up, it heats up. As PTC heats up, its resistance increases greatly until it effectively lowers the current through itself to an extremely low value. This, in effect, removes the PTC from the circuit.

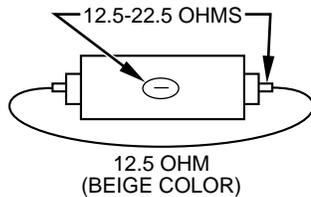


Fig. 14—PTC Device

A94007


After system shutdown, resistor cools and resistance value returns to normal until next time system starts. Thermistor device is adequate for most conditions, however, in systems where off cycle is short, device cannot fully cool and becomes less effective as a start device. It is an easy device to troubleshoot. Shut off all power to system.

Check thermistor with ohmmeter as described below. Shut off all power to unit. Remove PTC from unit. Wait at least 10 minutes for PTC to cool to ambient temperature.

Measure resistance of PTC with ohmmeter as shown in Fig. 14.

The cold resistance (RT) of any PTC device should be approximately 100-180 percent of device ohm rating.

12.5-ohm PTC = 12.5-22.5 ohm resistance - beige color

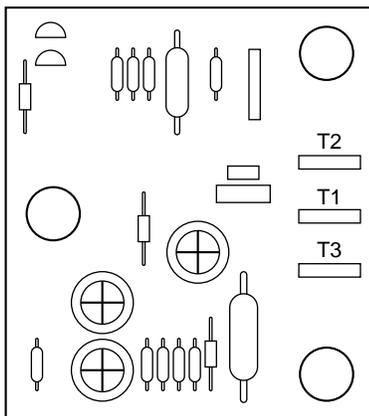

HN67ZA008

Fig. 15—Cycle Protector Device

A94005

If PTC resistance is appreciably less than rating or more than 200 percent higher than rating, device is defective.

CYCLE PROTECTOR

Solid-state cycle protector protects unit compressor by preventing short cycling. After a system shutdown, cycle protector provides for a 5 ± 2-minute delay before compressor restarts. On normal start-up, a 5-minute delay occurs before thermostat closes. After thermostat closes, cycle protector device provides a 3-sec delay. (See Fig. 15, 16, and 17.)

Cycle protector is simple to troubleshoot. Only a voltmeter capable of reading 24v is needed. Device is in control circuit, therefore, troubleshooting is safe with control power (24v) on and high-voltage power off.


With high-voltage power off, attach voltmeter leads across T1 and T3, and set thermostat so that Y terminal is energized. Make sure all protective devices in series with Y terminal are closed. Voltmeter should read 24v across T1 and T3. With 24v still applied, move voltmeter leads to T2 and T3. After 5 ± 2 minutes, voltmeter should read 24v, indicating control is functioning normally. If no time delay is encountered or device never times out, change control.

CRANKCASE HEATER

Crankcase heater is a device for keeping compressor oil warm. By keeping oil warm, refrigerant does not migrate to and condense in compressor shell when the compressor is off. This prevents flooded starts which can damage compressor.

On units that have a single-pole contactor, the crankcase heater is wired in parallel with the contactor contacts and in series with the compressor. (See Fig. 18.) When contacts open, a circuit is completed from line side of the contactor, through crankcase heater, through run windings of compressor, and to other side of line. When contacts are closed, there is no circuit through crankcase heater because both leads are connected to same side of line. This allows heater to **operate** when system is **not** calling for cooling. The heater **does not operate** when system is calling for cooling.

The crankcase heater is powered by high-voltage power of unit. Use extreme caution troubleshooting this device with power on. The easiest method of troubleshooting is to apply voltmeter across crankcase heater leads to see if heater has power. Do not touch heater. Carefully feel area around crankcase heater. If warm, crankcase heater is probably functioning. Do not rely on this method as absolute evidence heater is functioning. If compressor has been running, the area will still be warm.

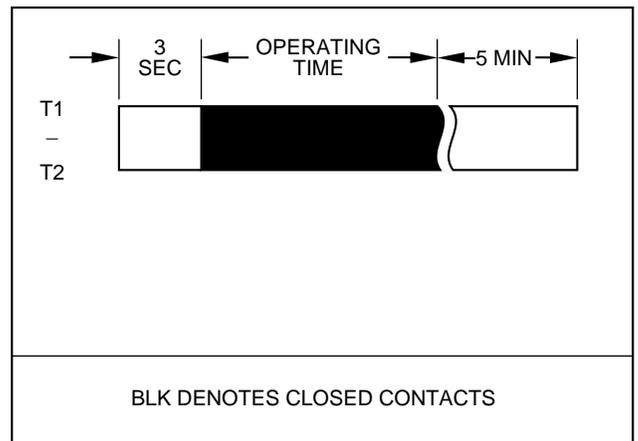

HN67ZA008

Fig. 16—Cycle Protector Sequence

A94009


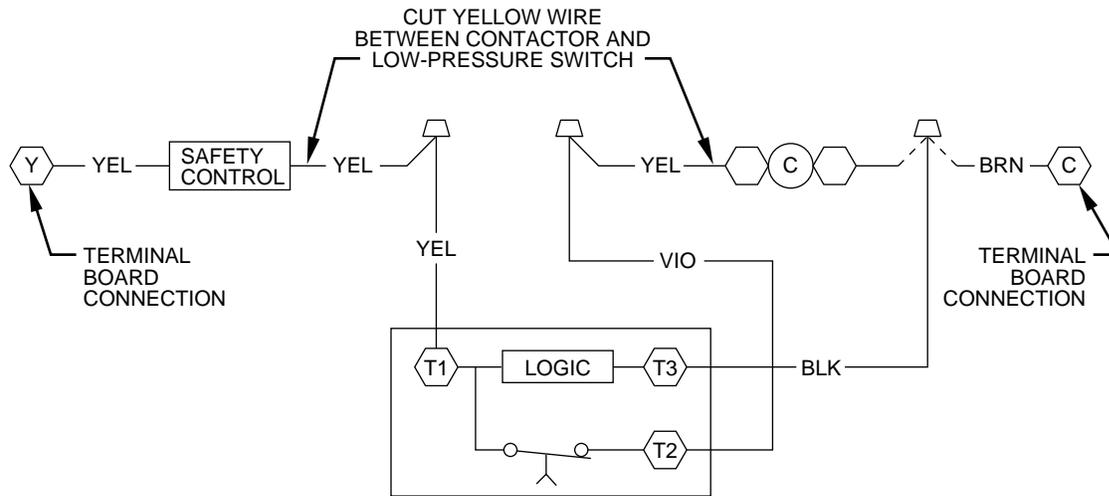


Fig. 17—Cycle Protector Wiring

A88415

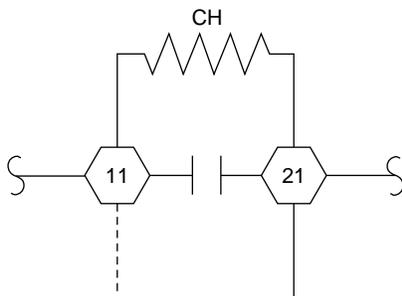

A94008

Fig. 18—Wiring for Single-Pole Contactor

With power off and heater leads disconnected, check across leads with ohmmeter. Do not look for a specific resistance reading. Check for resistance or an open circuit. Change heater if an open circuit is detected.

TIME-DELAY RELAY

The TDR is a solid-state control, recycle delay timer which keeps the indoor blower operating for 90 sec after thermostat is satisfied. This delay enables blower to remove residual cooling in coil after compression shutdown, thereby improving efficiency of system. The sequence of operation is that on closure of wall thermostat and at end of a fixed on delay of 1 sec, fan relay is energized. When thermostat is satisfied, an off delay is initiated. When fixed delay of 90 ± 20 sec is completed, fan relay is de-energized and fan motor stops. If wall thermostat closes during this delay, TDR is reset and fan relay remains energized. The TDR is a 24-v device that operates within a range of 15v to 30v and draws about 0.5 amps.

If the blower runs continuously instead of cycling off when fan switch is set on AUTO, TDR is probably defective and must be replaced.

PRESSURE SWITCHES

Pressure switches are protective devices wired into control circuit (low voltage). They shut off compressor if abnormally high or low pressures are present in the refrigeration circuit. The low- and high- pressure switches are specifically designed to operate with R-410A systems. R-22 pressure switches must **not** be used as replacements for the R-410A air conditioner. R-410A pressure switches are identified by a pink stripe down each wire.

LOW-PRESSURE SWITCH—The low-pressure switch is located on suction line and protects against low suction pressures

caused by such events as loss of charge, low airflow across indoor coil, dirty filters, etc. It opens on a pressure drop at about 50 psig. If system pressure is above this, switch should be closed.

HIGH-PRESSURE SWITCH—The high-pressure switch is located in liquid line and protects against excessive condenser coil pressure. It opens at 610 psig. High pressure may be caused by a dirty condenser coil, failed fan motor, or condenser air recirculation.

To check switch, turn off all power to unit, disconnect leads on switch, and apply ohmmeter leads across switch. You should have continuity on a good switch. Because these switches are attached to refrigeration system under pressure, it is not advisable to remove this device for troubleshooting unless you are reasonably certain that a problem exists. If switch must be removed, remove and recover all system charge so that pressure gages read 0 psi. Never open system without breaking vacuum with dry nitrogen.

⚠ WARNING

Wear safety glasses and gloves when working with refrigerants.

Apply heat with torch to solder joint and remove switch. Wear safety glasses when using torch. Have quenching cloth available. Oil vapor in line may ignite when switch is removed.

Braze in 1/4-in. flare fitting and replace pressure switch.

FAN MOTOR

Fan motor rotates fan blade that either draws or blows air through outdoor coil to perform heat exchange. Motors are totally enclosed to increase reliability. This also eliminates need for rain shield. For the correct position of fan blade assembly, the fan hub should be flush with the motor shaft. Replacement motors and blades may vary slightly.

⚠ WARNING

Turn off all power to unit before servicing or replacing fan motor. Be sure unit main power switch is turned off. Failure to do so may result in electric shock, death, or injury from rotating fan blade.

The bearings are permanently lubricated, therefore, no oil ports are provided.

For suspected electrical failures, check for loose or faulty electrical connections, or defective fan motor capacitor. Fan motor is

equipped with thermal overload device in motor windings which may open under adverse operating conditions. Allow time for motor to cool so device can reset. Further checking of motor can be done with an ohmmeter. Set scale on R X 1 position, and check for continuity between 3 leads. Replace motors that show an open circuit in any of the windings. Place 1 lead of ohmmeter on each motor lead. At same time, place other ohmmeter lead on motor case (ground). Replace any motor that shows resistance to ground, arcing, burning, or overheating.

COMPRESSOR PLUG

The compressor electrical plug provides a quick-tight connection to compressor terminals. The plug completely covers compressor terminals and mating female terminals are completely encapsulated in plug. Therefore, terminals are isolated from any moisture so corrosion and resultant pitted or discolored terminals are reduced. The plug is oriented to relief slot in terminal box so cover cannot be secured if wires are not positioned in slot, assuring correct electrical connection at compressor. The plug can be removed by simultaneously pulling while "rocking" plug. However, these plugs are specialized and vary in terminal orientation. Therefore, plugs can be used on only specific compressor. The configuration around fusite terminals is outline of terminal covers. The slot through which wires of plug are routed is oriented on bottom and slightly to left. The correct plug can be connected easily to compressor terminals and plug wires routed easily through slot in terminal cover.

LOW-VOLTAGE TERMINALS

The low-voltage terminal designations and their description/function are used on all split-system condensers.

G—Energizes indoor blower circuit.

R—Energizes 24-v power from transformer.

Y—Energizes contactor for cooling.

C—Common side of transformer.

COPELAND SCROLL COMPRESSOR (R-410A REFRIGERANT)

The compressor used in this product is specifically designed to operate with R-410A refrigerant and cannot be interchanged.

The compressor is an electrical (as well as mechanical) device. Exercise extreme caution when working near compressors. Power should be shut off, if possible, for most troubleshooting techniques. Refrigerants present additional safety hazards.

⚠ WARNING

Wear safety glasses and gloves when handling refrigerants. Failure to follow this warning can cause a fire, personal injury, or death.

The scroll compressor pumps refrigerant through the system by the interaction of a stationary and an orbiting scroll. (See Fig. 19.) The scroll compressor has no dynamic suction or discharge valves, and it is more tolerant of stresses caused by debris, liquid slugging, and flooded starts. The compressor is equipped with an anti-rotational device and an internal pressure relief port. The anti-rotational device prevents the scroll from turning backwards and replaces the need for a cycle protector. The pressure relief port is a safety device, designed to protect against extreme high pressure. The relief port has an operating range between 550 and 625 psi differential pressure.

The Copeland scroll compressor uses Mobil EAL ARTIC 22CC®, the only oil recommended for oil recharge. (See Table 4.)

COMPRESSOR FAILURES

Compressor failures are classified in 2 broad failure categories; mechanical and electrical. Both types are discussed below.

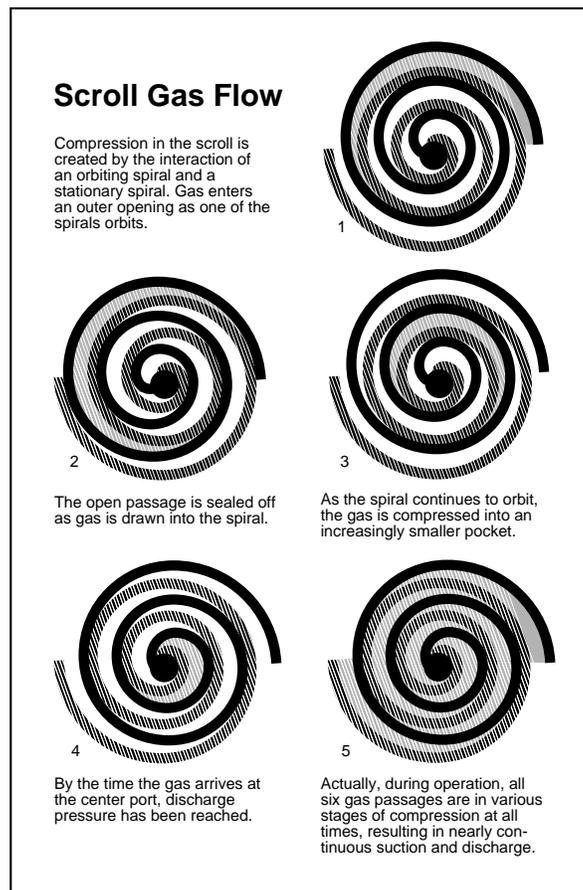


Fig. 19—Scroll Compressor Refrigerant Flow

A90198

Table 4—Oil Charging

COMPRESSOR PART NO.	COLD RECHARGE OZ.
ZP23-26	38
ZP32-41	42

MECHANICAL FAILURES

A compressor is a mechanical pump driven by an electric motor contained in a welded or hermetic shell. In a mechanical failure, motor or electrical circuit appears normal, but compressor does not function normally.


⚠ WARNING

Do not supply power to unit with compressor terminal box cover removed. Failure to follow this warning can cause a fire, personal injury, or death.

⚠ WARNING

Exercise extreme caution when reading compressor currents when high-voltage power is on. Correct any of the problems described below before installing and running a replacement compressor. Wear safety glasses and gloves when handling refrigerants. Failure to follow this warning can cause a fire, personal injury, or death.

LOCKED ROTOR — In this type of failure, compressor motor and all starting components are normal. When compressor attempts to start, it draws locked rotor current and cycles off on the internal protection. Locked rotor current is measured by applying

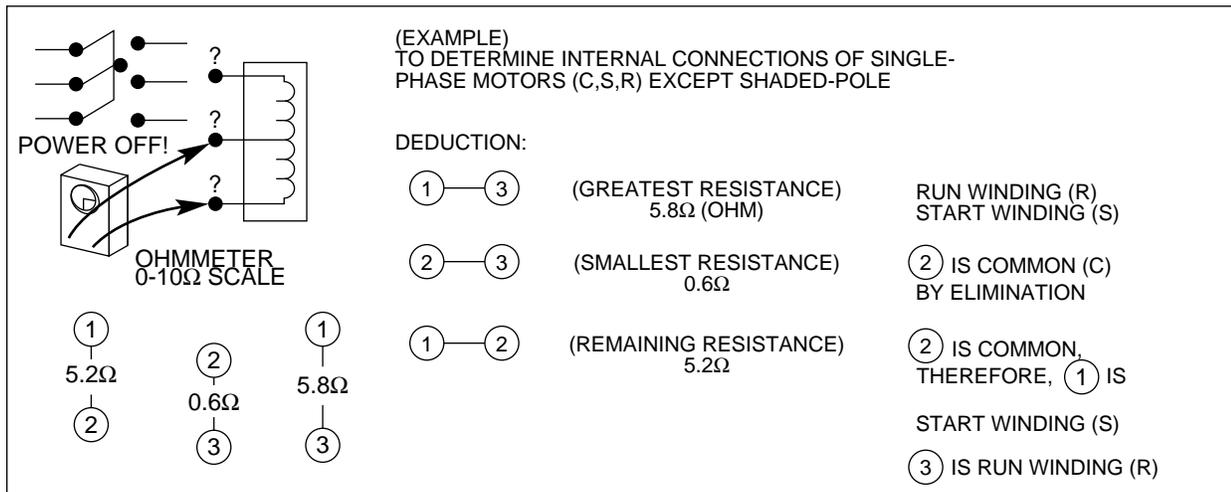

A88344

Fig. 20—Identifying Internal Connections

a clamp-on ammeter around common (blk) lead of compressor. Current drawn when it attempts to start is then measured. Locked rotor amp (LRA) value is stamped on compressor nameplate.

If compressor draws locked rotor amps and all other external sources of problems have been eliminated, compressor must be replaced. Because compressor is a sealed unit, it is impossible to determine exact mechanical failure. However, complete system should be checked for abnormalities such as incorrect refrigerant charge, restrictions, insufficient airflow across indoor or outdoor coil, etc., which could be contributing to the failure.

RUNS, DOES NOT PUMP — In this type of failure, compressor motor runs and turns compressor, but compressor does not pump refrigerant. A clamp-on ammeter on common leg shows a very low current draw, much lower than rated load amp (RLA) value stamped on compressor nameplate. Because no refrigerant is being pumped, there is no return gas to cool compressor motor. It eventually overheats and shuts off on its internal protection.

NOISY COMPRESSOR — Noise may be caused by a variety of internal or external problems such as loosened hardware. System problems such as an overcharged compressor (especially at start-up) may also cause excessive noise.

COMPRESSOR LEAKS — Sometimes a leak is detected at weld seam around girth of compressor, or at a fitting that joins compressor shell. Many of these leaks can be repaired and the compressor saved if correct procedure is followed.

1. Turn off all power to unit.
2. Remove and recover all refrigerant from system so that gage pressures are 0 psi.
3. Clean area around leak to bare metal.
4. Apply flux and repair joint with silver brazing alloy. Do not use low temperature solder such as 50-50.
5. Clean off excess flux, check for leaks, and apply paint over repaired area to prevent corrosion.

Do not use this method to repair a compressor leak due to severe corrosion. Never attempt to repair a compressor leaking at electric terminals. This type of failure requires compressor replacement.

ELECTRICAL FAILURES

The compressor mechanical pump is driven by an electric motor within its hermetic shell. In electrical failures, compressor does not run although external electrical and mechanical systems appear normal. Compressor must be checked electrically for abnormalities.

Before troubleshooting compressor motor, review this description of compressor motor terminal identification.

SINGLE-PHASE MOTORS

To identify terminals C, S, and R:

1. Turn off all unit power.
2. Discharge run and start capacitors to prevent shock.
3. Remove all wires from motor terminals.
4. Read resistance between all pairs of terminals using an ohmmeter on 0-10 ohm scale.
5. Determine 2 terminals that provide greatest resistance reading.

Through elimination, remaining terminal must be common (C). Greatest resistance between common (C) and another terminal indicates start winding because it has more turns. This terminal is start (S). Remaining terminal will be run winding (R). (See Fig. 20.)

NOTE: If compressor is hot, allow time to cool and internal line break to reset. There is an internal line break protector which must be closed.

NOTE: Ohm readings in Fig. 20 are examples, not actual measurements.

All compressors are equipped with internal motor protection. If motor becomes hot for any reason, protector opens. Compressor should always be allowed to cool and protector to close before troubleshooting. Always turn off all power to unit and disconnect leads at compressor terminals before taking readings.

Most common motor failures are due to either an open, grounded, or short circuit. When a compressor fails to start or run, 3 tests can help determine the problem. First, all possible external causes should be eliminated, such as overloads, improper voltage, pressure equalization, defective capacitor(s), relays, wiring, etc. Compressor has internal line break overload, so be certain it is closed.

OPEN CIRCUIT

To determine if any winding has a break in the internal wires and current is unable to pass through, follow these steps.

1. Be sure all power is off.
2. Discharge all capacitors.
3. Remove wires from terminals C, S, and R.
4. Check resistance from C-R, C-S, and R-S using an ohmmeter on 0-1000 ohm scale.

Because winding resistances are usually less than 10 ohms, each reading appears to be approximately 0 ohm. If resistance remains at 1000 ohms, an open or break exists and compressor should be replaced.

⚠ CAUTION

Be sure internal line break overload is not temporarily open.

GROUND CIRCUIT

To determine if a wire has broken or come in direct contact with shell, causing a direct short to ground follow these steps.

1. Allow crankcase heaters to remain on for several hr before checking motor to ensure windings are not saturated with refrigerant.
2. Using an ohmmeter on R X 10,000 ohm scale or megohmmeter (follow manufacturer's instructions).
3. Be sure all power is off.
4. Discharge all capacitors.
5. Remove wires from terminals C, S, and R.
6. Place 1 meter probe on ground or on compressor shell. Make a good metal-to-metal contact. Place other probe on terminals C, S, and R in sequence.
7. Note meter scale.
8. If reading of 0 or low resistance is obtained, motor is grounded. Replace compressor.

Compressor resistance to ground should not be less than 1000 ohms per volt of operating voltage.

Example:

230 volts X 1000 ohms/volt = 230,000 ohms minimum.

SHORT CIRCUIT

To determine if any wires within windings have broken through their insulation and made contact with other wires, thereby shorting all or part of the winding(s), be sure the following conditions are met.

1. Correct motor winding resistances must be known before testing, either from previous readings or from manufacturer's specifications.
2. Temperature of windings must be as specified, usually about 70 °F.
3. Resistance measuring instrument must have an accuracy within ± 5 -10 percent. This requires an accurate ohmmeter such as a Wheatstone bridge or null balance-type instrument.
4. Motor must be dry or free from direct contact with liquid refrigerant.

MAKE THIS CRITICAL TEST

(Not advisable unless above conditions are met)

1. Be sure all power is off.
2. Discharge all capacitors.
3. Remove wires from terminals C, S, and R.
4. Place instrument probes together and determine probe and lead wire resistance.
5. Check resistance readings from C-R, C-S, and R-S.
6. Subtract instrument probe and lead resistance from each reading.

If any reading is within ± 20 percent of known resistance, motor is probably normal. Usually a considerable difference in reading is noted if a turn-to-turn short is present.

REFRIGERATION SYSTEM

REFRIGERANT

⚠ CAUTION

This system uses refrigerant R-410A which has higher pressures than R-22 and other refrigerants. No other refrigerant may be used in this system. Gage set, hoses, and recovery system must be designed to handle R-410A. If you are unsure consult the equipment manufacturer.

In an air conditioning system, refrigerant transfers heat from one place to another. It is useful to understand flow of refrigerant in a system. In a straight cooling system, compressed hot gas leaves compressor and enters condensing coil. As gas passes through condenser coil, it rejects heat and condenses into liquid. The liquid leaves condensing unit through liquid line and enters metering device at indoor coil. As it passes through metering device, it becomes a gas-liquid mixture. As it passes through indoor coil, it absorbs heat and the refrigerant moves to the compressor and is again compressed to a hot gas, and cycle repeats.

COMPRESSOR OIL

⚠ CAUTION

The compressor in this system uses a polyol ester (POE) oil Mobil EAL ARTIC 22CC. This oil is extremely hygroscopic, meaning it absorbs water readily. POE oils can absorb 15 times as much water as other oils designed for HCFC and CFC refrigerants. Take all necessary precautions to avoid exposure of the oil to the atmosphere.

BRAZING

When brazing is required in the refrigeration system, certain basics should be remembered. The following are a few of the basic rules.


1. Clean joints make the best joints. To clean:
 - a. Remove all oxidation from surfaces to a shiny finish before brazing.
 - b. Remove all flux residue with brush and water while material is still hot.
2. Use "sil-fos" or "phos-copper" for copper-to-copper only. No flux is required.
3. Silver solder is used on copper-to-brass, copper-to-steel, or copper-to-copper. Flux is required when using silver solder. Low temperature solder is not recommended.
4. Fluxes should be used carefully. Avoid excessive application and do not allow fluxes to enter into the system.
5. Brazing temperature of copper is proper when it is heated to a dull red color.

This section on brazing is not intended to teach a technician how to braze. There are books and classes which teach and refine brazing techniques. The basic points above are listed only as a reminder.

SERVICE VALVES AND PUMPDOWN

Service valves provide a means for holding original factory charge in outdoor unit prior to hookup to indoor coil. They also contain gage ports for measuring system pressures, and provide shut-off convenience for certain types of repairs. (See Fig. 21.)

The service valve is a combination front seating/back seating valve, which has a metal-to-metal seat in both the open and closed positions. When it is fully back seated, the service port is not

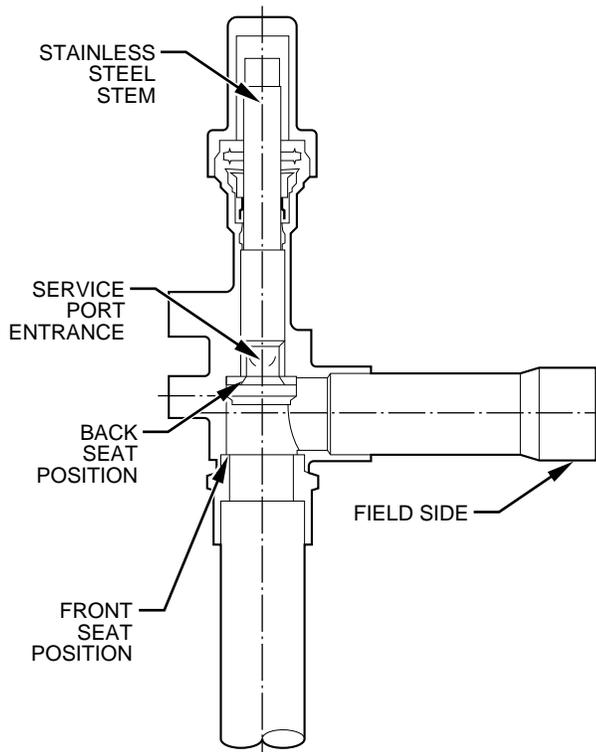

FORGED BACK SEATING VALVE

A91435

Fig. 21—Service Valve

pressurized. To pressurize the service port, this valve must be moved off the back seating position. This valve does not contain a Schrader fitting. The service valves are designed for sweat connection to field tubing.

The service valves in outdoor unit come from factory front seated. This means that refrigerant charge is isolated from line-set connection ports. The interconnecting tubing (line set) can be brazed to service valves using either silver bearing or non-silver bearing brazing material. Consult local codes. Before brazing line-set to valves, belled ends of sweat connections on service valves must be cleaned so that no brass plating remains on either inside or outside of bell joint. **To prevent damage to valve and/or cap "O" ring, use a wet cloth or other acceptable heat-sinking material on valve before brazing.** To prevent damage to unit, use a metal barrier between brazing area and unit.

After the brazing operation and the refrigerant tubing and evaporator coil have been evacuated, valve stem can be turned counter-clockwise until it opens or back seats, which releases refrigerant into tubing and evaporator coil. The system can now be operated.

Back seating service valves must be back seated (turned counter-clockwise until seated) before service port caps can be removed and hoses of gage manifold connected. In this position, refrigerant has access from and through outdoor and indoor unit.

The service valve stem cap is tightened to 20 ft/lb torque and service port caps to 9 ± 2 ft/lb torque. The seating surface of valve stem has a knife set edge against which caps are tightened to attain a metal-to-metal seal.

The service valve cannot be field repaired, therefore, only a complete valve or valve stem and service port caps are available for replacement.

If service valve is to be replaced, a metal barrier must be inserted between valve and unit to prevent damaging unit exterior from heat of the brazing operations.

⚠ WARNING

Wear safety glasses and gloves when handling refrigerants. Failure to follow this warning can cause a fire, personal injury, or death.

PUMPDOWN PROCEDURE — Service valves provide a convenient shut-off valve useful for certain refrigeration system repairs. System may be pumped down to make repairs on low side without losing complete refrigerant charge.

1. Attach pressure gage to suction service valve gage port.
2. Front seat liquid-line valve.
3. Start unit in cooling mode. Run until low-pressure switch opens at 50 psig (350kPa). Do not allow compressor to pump to a vacuum.
4. Shut off unit. Front seat suction valve.
5. Recover remaining refrigerant.

NOTE: All outdoor unit coils will hold only factory-supplied amount of refrigerant. Excess refrigerant, such as in long-line applications, may cause unit to relieve pressure through internal pressure relief valve (indicated by sudden rise of suction pressure) before suction pressure reaches 50 psig (350 Kpa). If this occurs, shut off unit immediately, front seat suction valve, and recover remaining refrigerant.

FILTER DRIER

The filter drier is specifically designed to operate with R-410A, use only factory-authorized components. When removing a filter drier, use a tubing cutter to cut drier from system. **Do not unsweat a filter drier** from system. Heat from unsweating will release moisture and contaminants from drier into the system.

ACCUMULATOR

The accumulator is specifically designed to operate with R-410A, use only factory-authorized components. Under some light load conditions on indoor coils, liquid refrigerant is present in suction gas returning to compressor. The accumulator stores liquid and allows it to boil off into a vapor so it can be safely returned to compressor. Since a compressor is designed to pump refrigerant in its gaseous state, introduction of liquid into it could cause severe damage or total failure of compressor.

The accumulator is a passive device which seldom needs replacing. Occasionally its internal oil return orifice or bleed hole may become plugged. Some oil is contained in refrigerant returning to compressor. It cannot boil off in accumulator with liquid refrigerant. The bleed hole allows a small amount of oil and refrigerant to enter the return line where velocity of refrigerant returns it to compressor. If bleed hole plugs, oil is trapped in accumulator, and compressor will eventually fail from lack of lubrication. If bleed hole is plugged, accumulator must be changed. The accumulator has a fusible element located in the bottom end bell. (See Fig. 22.) This fusible element will melt at 430° F and vent the refrigerant if this temperature is reached either internal or external to the system. If fuse melts, the accumulator must be replaced.

To change accumulator:

1. Shut off all power to unit.
2. Remove and reclaim all refrigerant from system.
3. Break vacuum with dry nitrogen. Do not exceed 5 psig.

NOTE: Coil may be removed for access to accumulator. Refer to appropriate sections of Service Manual for instructions.

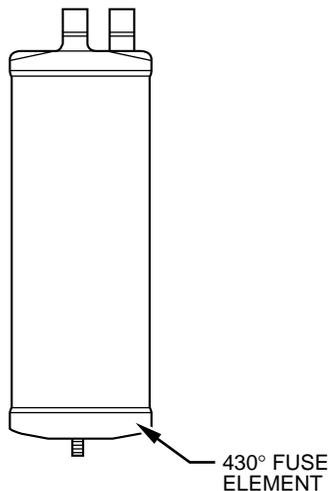


Fig. 22—Accumulator

A88410

⚠ WARNING

Wear safety glasses and gloves when working on refrigerants and when using brazing torch. Failure to follow this warning can cause a fire, personal injury, or death.

4. When accumulator is exposed, remove it from system with tubing cutter.
5. Tape ends of open tubing.
6. Scratch matching marks on tubing stubs and old accumulator. Scratch matching marks on new accumulator. Unbrazed stubs from old accumulator and braze into new accumulator.
7. Thoroughly rinse any flux residue from joints and paint with corrosion-resistant coating such as zinc-rich paint.
8. Reinstall factory authorized accumulator into system with copper slip couplings.
9. Evacuate and charge system.


Pour and measure oil quantity (if any) from old accumulator. If more than 20 percent of oil charge is trapped in accumulator, add new POE oil to compressor to make up for this loss. (See Table 4.)

ACCURATER

AccuRater piston has a refrigerant metering hole through it. The retainer forms a sealing surface for liquid-line flare connection. Any R-22 piston must be replaced with factory-approved piston for R-410A. If unit is shipped with a piston ring (located in piston bag) be sure it is installed per Fig. 23. The piston ring will ensure the piston stays seated during all operating conditions. To check, clean, or replace piston follow these steps. (See Fig. 23.)

1. Shut off power to unit.
2. Pump unit down using pumpdown procedure described in this service manual.
3. Loosen nut and remove liquid line flare connection from AccuRater.
4. Pull retainer out of body, being careful not to scratch flare sealing surface. If retainer does not pull out easily, carefully use locking pliers to remove it.
5. Slide piston and piston ring out by inserting a small soft wire with small kinks through metering hole. Do not damage metering hole, sealing surface around piston cones, or fluted portion of piston.
6. Clean piston refrigerant metering hole.

7. Install a new retainer O-ring or retainer assembly before reassembling AccuRater.

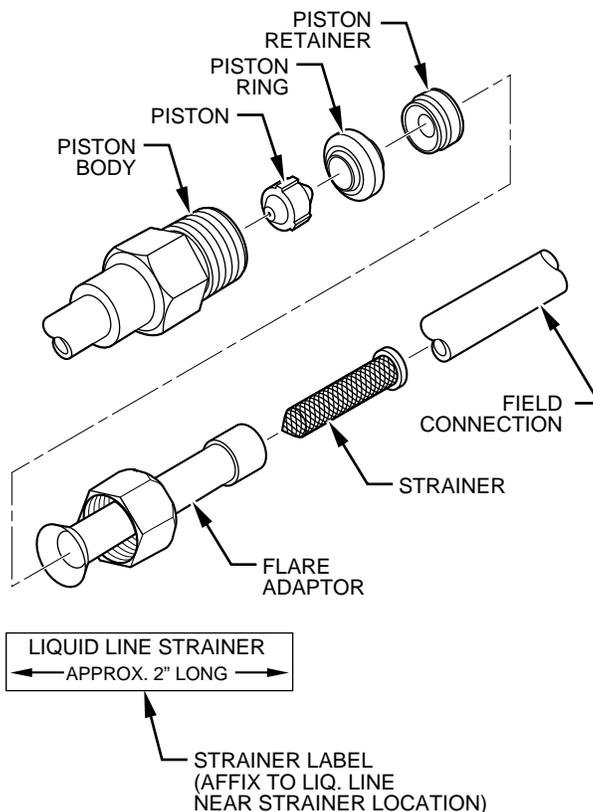

A95615

Fig. 23—AccuRater Components

THERMOSTATIC EXPANSION VALVE (TXV)

The thermostatic expansion valve is specifically designed to operate with R-410A. **Do not use an R-22 TXV.**

HARD SHUT-OFF (HSO) — Has no bleed port and allows no bleed through after system shutdown. No pressure equalization occurs.

The standard TXV is a metering device that is used in air conditioning systems to adjust to changing load conditions by maintaining a preset superheat temperature at the outlet of evaporator coil. The volume of refrigerant metered through valve seat is dependent upon the following: (See Fig. 26.)

1. Superheat temperature sensed by cap tube sensing bulb on suction tube at outlet of evaporator coil. As long as this bulb and cap tube contains some liquid refrigerant, this temperature is converted into suction pressure pushing downward on diaphragm, which tends to open valve via pushrods.
2. The suction pressure at outlet of evaporator coil is transferred via external equalizer tube to underside of diaphragm.
3. The needle valve on pin carrier is spring loaded, which exerts pressure on underside of diaphragm via pushrods and tends to close valve. Therefore, bulb pressure equals evaporator pressure (at outlet of coil) plus spring pressure. If load increases, temperature increases at bulb, which increases pressure on topside of diaphragm, which pushes pin carrier away from seat, opening valve and increasing flow of refrigerant. The increased refrigerant flow causes increased leaving evaporator pressure which is transferred via equalizer tube to underside of diaphragm. This tends to cause the pin carrier spring pressure to close valve. The refrigerant flow is effectively stabilized to load demand with negligible change in superheat.

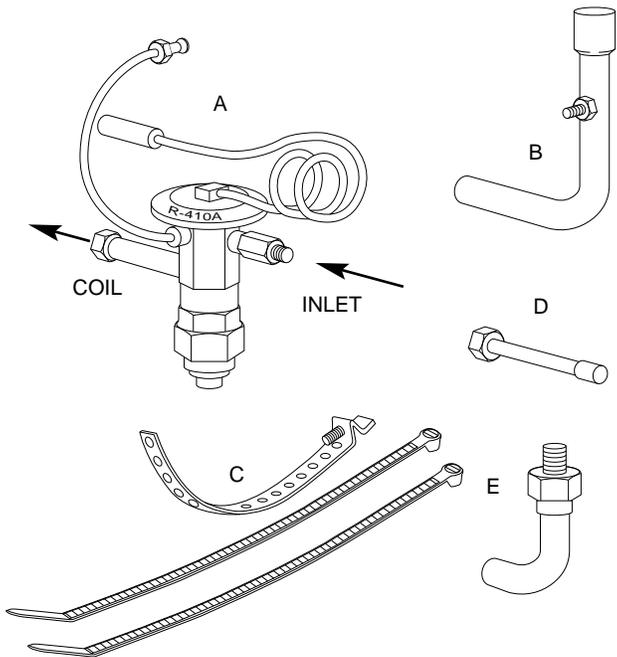


Fig. 24—R-410A TXV Kit Components

A95504

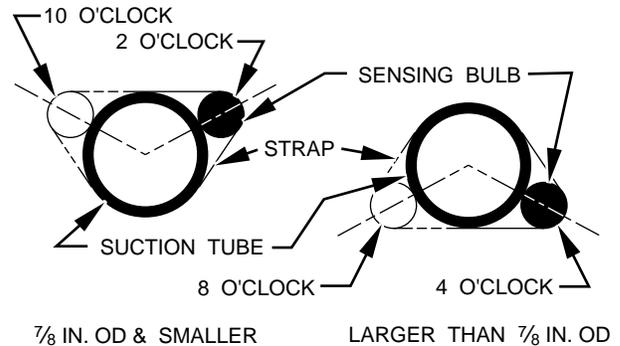


Fig. 25—Position of Sensing Bulb

A81032

REPLACING TXV

An existing R-22 TXV must be replaced with a factory-approved TXV specifically designed for R-410A. To replace an R-22 TXV follow these steps.

1. Remove piston retainer or existing TXV. If existing piston is not removed, TXV will not function properly.
2. Use tubing cutter to remove flare nut from distributor.
3. Braze a field-fabricated tube from distributor to outside of cabinet. Leave enough exposed tubing to attach supplied equalizer coupling. (See Fig. 24-E.)
4. Attach coupling Fig. 24-E to exposed end of tube. Use silver solder.
5. Attach TXV to coupling. Use a backup wrench to avoid damaging tubing. Follow flow arrow on valve.
6. Install TXV equalizer adapter Fig. 24-B on indoor coil suction line. Adapter has a 1/4-in. male flare connection.
7. Connect free end of equalizer tube on TXV to 1/4-in fitting on adapter.
8. Attach TXV bulb to horizontal section of suction line using clamps Fig. 24-C. (See Fig. 25.) for proper placement of bulb and insulate with field-supplied tape.
9. Attach straight flare (Fig. 24-D.) to TXV. Braze field-supplied tubing to belled ends of liquid and vapor lines.
10. Insulate liquid line between TXV assembly and coil connections with field-supplied insulation tape to prevent sweating.

REFRIGERATION SYSTEM REPAIR

LEAK DETECTION

New installations should be checked for leaks prior to complete charging.

If a system has lost all or most of its charge, system must be pressurized again to approximately 150 lb minimum. This can be done by adding refrigerant using normal charging procedures or by pressurizing system with nitrogen (less expensive than refrigerant). Nitrogen also leaks faster than R-410A. Nitrogen cannot, however, be detected by an electronic leak detector. (See Fig. 28.)

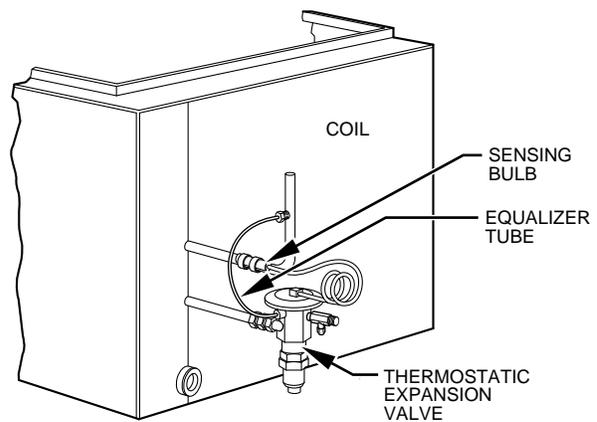


Fig. 26—Typical TXV Installation

A95616

⚠ WARNING

Due to the high pressure of nitrogen, it should never be used without a pressure regulator on the tank. Failure to follow this warning can cause a fire, personal injury, or death.

Assuming that a system is pressurized with either all refrigerant or a mixture of nitrogen and refrigerant, leaks in the system can be found with an electronic leak detector that is capable of detecting HFC refrigerant.

If system has been operating for some time, make first check for a leak visually. Since refrigerant carries a small quantity of oil, traces of oil at any joint or connection is an indication that refrigerant is leaking at that point.

A simple and inexpensive method of testing for leaks is to use soap bubbles. Any solution of water and soap may be used. Soap solution is applied to all joints and connections in system. A small pinhole leak is located by tracing bubbles in soap solution around leak. If the leak is very small, several minutes may pass before a bubble will form. Popular commercial leak detection solutions give better, longer-lasting bubbles and more accurate results than

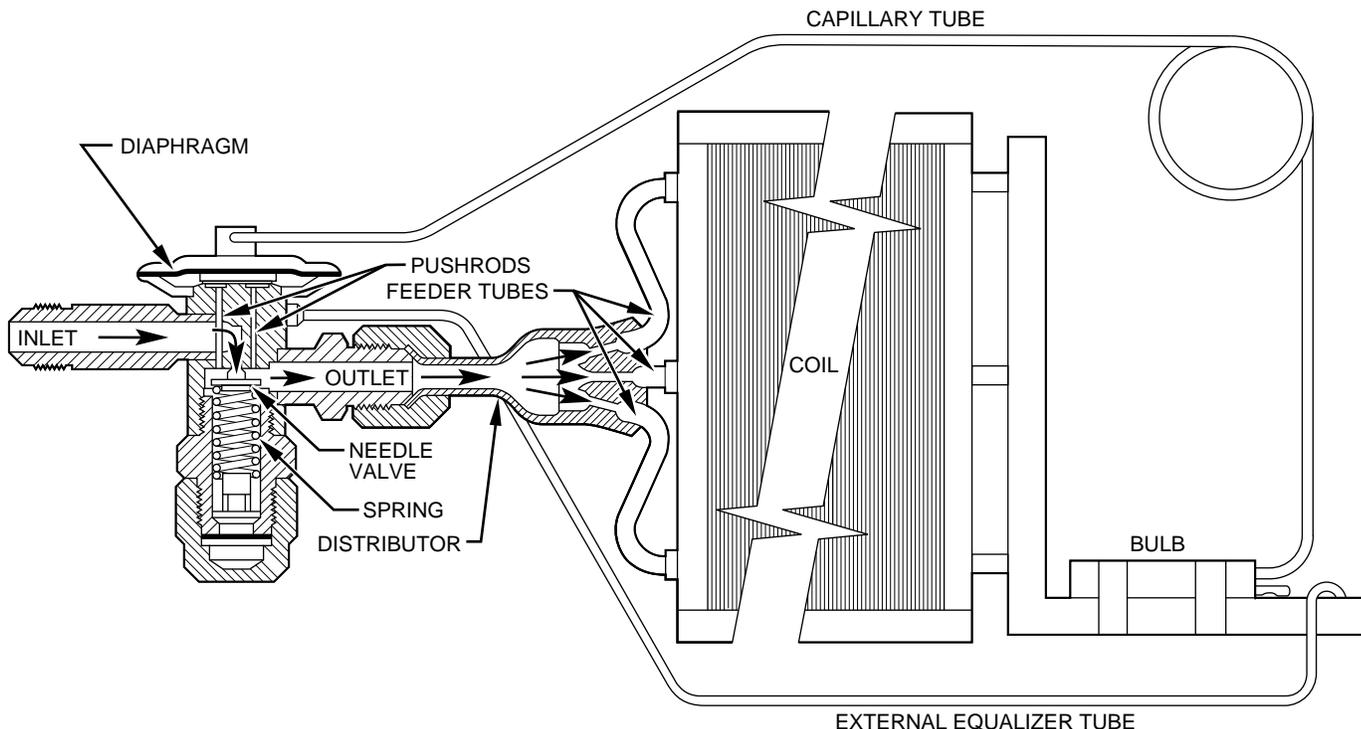


Fig. 27—TXV Operation

A94056

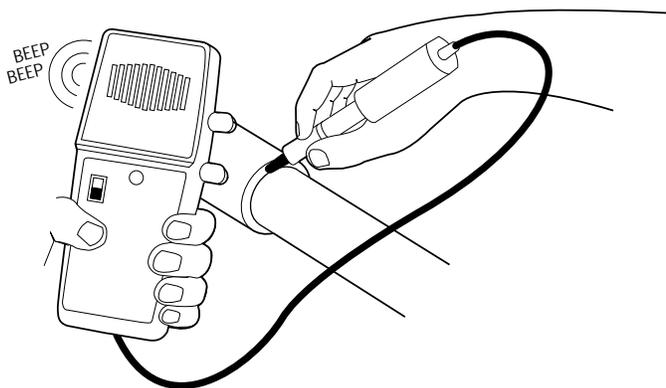


Fig. 28—Electronic Leak Detection

A95422

Use an electronic leak detector designed for HFCs to check for leaks. This unquestionably is the most efficient and easiest method for checking leaks. There are various types of electronic leak detectors. Electronic leak detectors must be suitable for R-410A refrigerant. Check with manufacturer of equipment for suitability. Generally speaking, they are portable, lightweight, and consist of a box with several switches and a probe or sniffer. Detector is turned on and probe is passed around all fittings and connections in system. Leak is detected by either the movement of a pointer on detector dial, a buzzing sound, or a light.

In all instances when a leak is found, system charge must be recovered and leak repaired before final charging and operation. After leak testing or leak is repaired, evacuate system reclaiming refrigerant and recharge with correct refrigerant charge.

COIL REMOVAL

Coils are easy to remove if required for compressor removal, or to replace coil. Shut off all power to unit. Remove and recover refrigerant from system through service valves.

1. Remove top cover. (See Remove Top Cover in Cabinet section of the manual.)
2. Remove screws in base pan to coil grille.
3. Remove coil grille from unit.
4. Remove screws on corner post holding coil tube sheet.

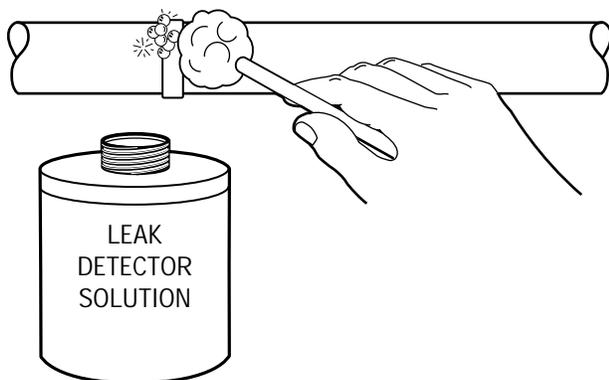


Fig. 29—Bubble Leak Detection

A95423

plain soapy water. The bubble solution should be removed from the tubing and fittings after checking for leaks as some solutions may corrode the metal.

⚠ WARNING
Cut tubing to reduce possibility of fire and personal injury.

5. Use midjet tubing cutter to cut liquid and vapor lines at both sides of coil. Cut in convenient location for easy reassembly with copper slip couplings.

- Lift coil vertically from basepan and carefully place aside.
- Reverse procedure to reinstall coil.
- Replace filter drier, evacuate system, recharge, and check for normal system operation.

COMPRESSOR REMOVAL AND REPLACEMENT

Once it is determined that compressor has failed and the reason established, compressor must be replaced.

⚠ CAUTION

Turn off all power to unit before proceeding. Wear safety glasses and gloves when handling refrigerants. Acids formed as a result of motor burnout can cause burns.

⚠ WARNING

Wear safety glasses and gloves when handling refrigerants and when using brazing torch. Failure to follow this warning can cause a fire, personal injury, or death.

- Shut off all power to unit.
- Remove and recover all refrigerant from system until pressure gages read 0 psi. Use all service ports. Never open a system under a vacuum to atmosphere. Break vacuum with dry nitrogen holding charge first. Do not exceed 5 psig.
- Disconnect electrical leads from compressor. Disconnect or remove crankcase heater and remove compressor hold-down bolts.
- Cut compressor from system with tubing cutter. Do not use brazing torch for compressor removal. Oil vapor may ignite when compressor is disconnected.
- Scratch matching marks on stubs in old compressor. Make corresponding marks on replacement compressor.
- Use torch to remove stubs from old compressor and to reinstall them in replacement compressor.
- Use copper couplings to tie compressor back into system.
- Replace filter drier, evacuate system, recharge, and check for normal system operation.

⚠ CAUTION

Do not leave system open to atmosphere. Product damage could occur. Compressor oil is highly susceptible to moisture absorption.

SYSTEM CLEAN-UP AFTER BURNOUT


Some compressor electrical failures can cause motor to burn. When this occurs, byproducts of burn, which include sludge, carbon, and acids, contaminate system. If burnout is severe enough, system must be cleaned before replacement compressor is installed. The 2 types of motor burnout are classified as mild or severe.

In mild burnout, there is little or no detectable odor. Compressor oil is clear or slightly discolored. An acid test of compressor oil will be negative. This type of failure is treated the same as mechanical failure. Liquid-line strainer should be removed and liquid-line filter drier replaced.

In a severe burnout, there is a strong, pungent, rotten egg odor. Compressor oil is very dark. Evidence of burning may be present in tubing connected to compressor. An acid test of compressor oil will be positive. Follow these steps.

- TXV must be cleaned or replaced.
- Drain any trapped oil from accumulator if used.

- Remove and discard liquid-line strainer and filter drier.
- After system is reassembled, install liquid and suction-line R-410A filter driers.
- Operate system for 10 hr. Monitor pressure drop across drier. If pressure drop exceeds 3 psig replace suction-line and liquid-line filter driers. Be sure to purge system with dry nitrogen when replacing filter driers. Continue to monitor pressure drop across suction-line filter drier. After 10 hr of run time, remove suction-line filter drier and replace liquid-line filter drier. **Never leave suction-line filter drier in system longer than 72 hr (actual time).**
- Charge system. (See unit information plate.)

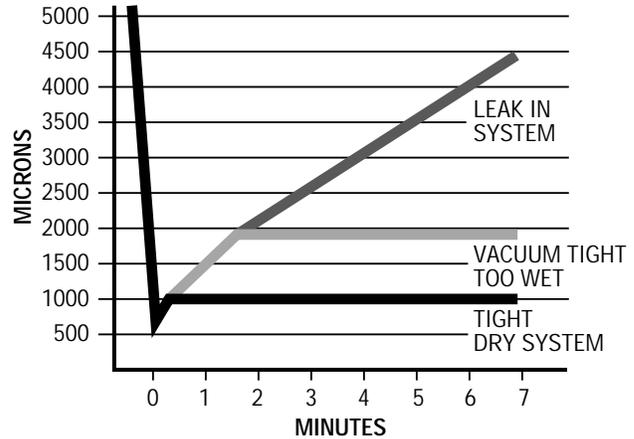

A95424

Fig. 30—Deep Vacuum Graph

EVACUATION

Proper evacuation of a unit will remove non-condensibles and assure a tight, dry system before charging. The 2 methods used to evacuate a system are the deep vacuum method and the triple evacuation method.


DEEP VACUUM METHOD — The deep vacuum method requires a vacuum pump capable of pulling a vacuum of 500 microns and a vacuum gage capable of accurately measuring this vacuum depth. The deep vacuum method is the most positive way of assuring a system is free of air and liquid water. (See Fig. 30.)

TRIPLE EVACUATION METHOD — The triple evacuation method should only be used when vacuum pump is capable of pumping down to only 28 in. of mercury vacuum, and system does not contain any liquid water. The procedure is as follows. (See Fig. 31.)

- Pump system down to 28 in. of mercury vacuum and allow pump to continue to operate for additional 15 minutes.
- Close service valves and shut off vacuum pump.
- Connect a nitrogen cylinder and regulator to system and open until system pressure is 2 psig.
- Close service valve and allow system to stand for 1 hr, during which time dry nitrogen will be able to diffuse throughout system, absorbing moisture.
- Repeat procedure 3 times. System will then be free of any contaminants and water vapor.

R-410A REFRIGERANT CHARGING

Refer to unit information plate for superheat charging procedure. **R-410A refrigerant cylinders contain a dip tube which allows liquid refrigerant to flow from cylinder in upright position.**

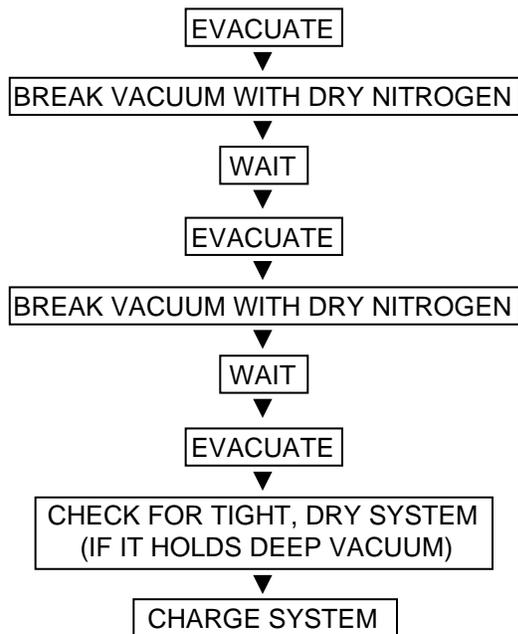

A95425

Fig. 31—Triple Evacuation Method

Charge R-410A units with cylinder in upright position and a commercial type metering device in the manifold hose. Charge refrigerant into suction-line.

For all approved combinations, system must be charged correctly for normal system operation and reliable operation of components.

If system has lost all charge, weigh in charge using dial-a-charge designed for R-410A refrigerant or digital scale.

System charge should be fine tuned by using superheat method.

CHARGE ACCURATELY

Undercharge	Proper Charge	Overcharge
<ul style="list-style-type: none"> • LOW LOW-SIDE PRESSURE • HIGH SUPERHEAT • OVERHEATED COMPRESSOR AND MOTOR • LOW SYSTEM CAPACITY • POOR EFFICIENCY • SLUDGE/ CARBONIZATION 	<ul style="list-style-type: none"> • LONG LIFE • SAFE OPERATION • DESIGN CAPACITY • PEAK EFFICIENCY 	<ul style="list-style-type: none"> • HIGH HIGH-SIDE PRESSURE • HIGH DISCHARGE TEMPERATURE • FLOODBACK • LOW SYSTEM CAPACITY • POOR EFFICIENCY • SLUDGE/ CARBONIZATION

Fig. 32—Charging

CHECKING CHARGE

Superheat charging is the process of charging refrigerant in a system until temperature (superheat) of suction gas entering compressor reaches a prescribed value. Small variations of charge affect suction gas superheat temperatures greatly. Therefore, this method of charging is very accurate. This method can be used with fixed restrictor-type metering devices such as AccuRater. For units using a TXV, subcooling method must be used. To charge by superheat, a service technician will need an accurate superheat thermocouple or thermistor-type thermometer, a sling psychrom-

eter, and a gage manifold. Do not use mercury or small dial type thermometers as they are not adequate for this type of measurement. Refer to unit information plate for superheat charging procedure.

SUBCOOLING CHARGING METHOD (SEE CHARGING TABLE IN APPENDIX)

1. Operate unit a minimum of 15 minutes before checking charge.
2. Measure liquid service valve pressure by attaching an accurate gage to service port.
3. Measure liquid-line temperature by attaching an accurate thermistor-type or electronic thermometer to liquid line near outdoor coil.
4. Refer to unit information plate to find required subcooling temperature for unit. Find point at which the required subcooling temperature intersects measured liquid service valve pressure.
5. To obtain required subcooling temperature at a specific liquid-line pressure, add refrigerant if liquid-line temperature is higher than indicated or remove refrigerant if temperature is lower. Allow a tolerance of 3°F.

CARE AND MAINTENANCE

To assure high performance and minimize possible equipment malfunction, it is essential that maintenance be performed periodically on this equipment. The frequency with which maintenance is performed is dependent on such factors as hours of operation, geographic location, and local environmental conditions.

⚠ WARNING

Disconnect all electrical power to unit before performing any maintenance or service on outdoor unit. Remember to disconnect power supply to air handler as this unit supplies low-voltage power to the outdoor unit. Failure to follow this warning can cause a fire, personal injury, or death.

The minimum maintenance that should be performed on this equipment is as follows.

1. Check outdoor coil for cleanliness each month during cooling season and clean as necessary.
2. Check fan motor and blade for cleanliness each heating and cooling season and clean as necessary.
3. Check electrical connections for tightness and controls for proper operation each cooling season and service as necessary.

⚠ CAUTION

Because of possible damage to the equipment or personal injury, maintenance should be performed by qualified personnel only.

CLEANING

Cleaning Coil

1. Remove top cover. (See Remove Top Cover in Cabinet section of this manual.)

⚠ CAUTION

Coil fin damage can result in higher operating costs or compressor damage. Do not use flame, high-pressure water, steam, volatile or corrosive cleaners on fins or tubing.

2. Clean coil using vacuum cleaner and its crevice tool. Move crevice tool vertically, close to area being cleaned, making

sure tool touches only dirt on fins and not fins. To prevent fin damage, do not scrub fins with tool or move tool horizontally against fins.

3. If oil deposits are present, spray coil with ordinary household detergent. Wait 10 minutes, and proceed to next step.
4. Using garden hose, spray coil vertically downward with constant stream of water at moderate pressure. Keep nozzle at a 15- to 20° angle, about 3 in. from coil face and 18 in. from tube. Spray so debris is washed out of coil and basepan.
5. Reinstall top cover and position blade. (See Fig. 7.)
6. Reconnect electrical power and check for proper operation.

Cleaning Outdoor Fan Motor and Blade

1. Remove fan motor and blade. Be careful not to bend or dent fan blade.
2. Clean motor and blade with soft brush or cloth. Be careful not to disturb balance weights on fan blade.
3. Check fan blade setscrew for tightness.
4. Reinstall fan motor and blade to top cover and check for alignment.
5. Reinstall top cover and position blade. (See Fig. 7.)
6. Reconnect electrical power and check for proper operation.

Electrical Controls and Wiring

1. Disconnect power to both outdoor and indoor units.
2. Check all electrical connections for tightness. Tighten all screws on electrical connections. If any connections appear to be burned or smokey, disassemble the connection, clean all parts and stripped wires, and reassemble. Use a new connector if old one is burned or corroded, and crimp tightly.
3. Reconnect electrical power to indoor and outdoor units and observe unit through 1 complete operating cycle.
4. If there are any discrepancies in operating cycle, troubleshoot to find the cause and correct.

Refrigerant Circuit

1. Check refrigerant charge using the superheat method, and if low on charge, check unit for leaks using an electronic leak detector.

2. If any leaks are found, remove and reclaim or isolate charge (pumpdown) if applicable. Make necessary repairs.
3. Evacuate, recharge, and observe unit through 1 complete operating cycle.

Final Check-Out

After the unit has been operating, the following items should be checked.

1. Check that unit operational noise is not excessive due to vibration of component, tubing, panels, etc. If present, isolate problem and correct.
2. Check to be sure caps are installed on service valves and are tight.
3. Check to be sure tools, loose parts, and debris are removed from unit.
4. Check to be sure all panels and screws are in place and tight.

Desert and Seacoast Locations

Special consideration must be given to installation and maintenance of condensing units installed in coastal or desert locations. This is because salt and alkali content of sand adheres to aluminum fins of coil and can cause premature coil failure due to corrosion from salt, alkali, and moisture.

Preventive measures can be taken during installations, such as:

1. Locate unit on side of structure opposite prevailing winds.
2. Elevate unit to height where drifting sand cannot pile up against coil. Four in. high mounting feet are available as accessories and can be used to elevate unit.
3. Addition of coastal filter (See PDD for accessory listing).

Maintenance in desert and seacoast locations

1. Frequent inspection of coil and basepan especially after storms and/or high winds.
2. Clean coil by flushing out sand from between coil fins and out of basepan as frequently as inspection determines necessary.
3. In off season, cover with covering that allows air to circulate through but prevents sand from sifting in (such as canvas material). Do not use plastic because plastic will hold moisture.

SECTION 3—APPENDIX

Pressure vs. Temperature Chart
R-410A

PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F
12	-37.7	114	37.8	216	74.3	318	100.2	420	120.7	522	137.6
14	-34.7	116	38.7	218	74.9	320	100.7	422	121.0	524	137.9
16	-32.0	118	39.5	220	75.5	322	101.1	424	121.4	526	138.3
18	-29.4	120	40.5	222	76.1	324	101.6	426	121.7	528	138.6
20	-36.9	122	41.3	224	76.7	326	102.0	428	122.1	530	138.9
22	-24.5	124	42.2	226	77.2	328	102.4	430	122.5	532	139.2
24	-22.2	126	43.0	228	77.8	330	102.9	432	122.8	534	139.5
26	-20.0	128	43.8	230	78.4	332	103.3	434	123.2	536	139.8
28	-17.9	130	44.7	232	78.9	334	103.7	436	123.5	538	140.1
30	-15.8	132	45.5	234	79.5	336	104.2	438	123.9	540	140.4
32	-13.8	134	46.3	236	80.0	338	104.6	440	124.2	544	141.0
34	-11.9	136	47.1	238	80.6	340	105.1	442	124.6	548	141.6
36	-10.1	138	47.9	240	81.1	342	105.4	444	124.9	552	142.1
38	-8.3	140	48.7	242	81.6	344	105.8	446	125.3	556	142.7
40	-6.5	142	49.5	244	82.2	346	106.3	448	125.6	560	143.3
42	-4.5	144	50.3	246	82.7	348	106.6	450	126.0	564	143.9
44	-3.2	146	51.1	248	83.3	350	107.1	452	126.3	568	144.5
46	-1.6	148	51.8	250	83.8	352	107.5	454	126.6	572	145.0
48	0.0	150	52.5	252	84.3	354	107.9	456	127.0	576	145.6
50	1.5	152	53.3	254	84.8	356	108.3	458	127.3	580	146.2
52	3.0	154	54.0	256	85.4	358	108.8	460	127.7	584	146.7
54	4.5	156	54.8	258	85.9	360	109.2	462	128.0	588	147.3
56	5.9	158	55.5	260	86.4	362	109.6	464	128.3	592	147.9
58	7.3	160	56.2	262	86.9	364	110.0	466	128.7	596	148.4
60	8.6	162	57.0	264	87.4	366	110.4	468	129.0	600	149.0
62	10.0	164	57.7	266	87.9	368	110.8	470	129.3	604	149.5
64	11.3	166	58.4	268	88.4	370	111.2	472	129.7	608	150.1
66	12.6	168	59.0	270	88.9	372	111.6	474	130.0	612	150.6
68	13.8	170	59.8	272	89.4	374	112.0	476	130.3	616	151.2
70	15.1	172	60.5	274	89.9	376	112.4	478	130.7	620	151.7
72	16.3	174	61.1	276	90.4	378	112.6	480	131.0	624	152.3
74	17.5	176	61.8	278	90.9	380	113.1	482	131.3	628	152.8
76	18.7	178	62.5	280	91.4	382	113.5	484	131.6	632	153.4
78	19.8	180	63.1	282	91.9	384	113.9	486	132.0	636	153.9
80	21.0	182	63.8	284	92.4	386	114.3	488	132.3	640	154.5
82	22.1	184	64.5	286	92.8	388	114.7	490	132.6	644	155.0
84	23.2	186	65.1	288	93.3	390	115.0	492	132.9	648	155.5
86	24.3	188	65.8	290	93.8	392	115.5	494	133.3	652	156.1
88	25.4	190	66.4	292	94.3	394	115.8	496	133.6	656	156.6
90	26.4	192	67.0	294	94.8	396	116.2	498	133.9	660	157.1
92	27.4	194	67.7	296	95.2	398	116.6	500	134.0	664	157.7
94	28.5	196	68.3	298	95.7	400	117.0	502	134.5	668	158.2
96	29.5	198	68.9	300	96.2	402	117.3	504	134.8	672	158.7
98	30.5	200	69.5	302	96.6	404	117.7	506	135.2	676	159.2
100	31.2	202	70.1	304	97.1	406	118.1	508	135.5	680	159.8
102	32.2	204	70.7	306	97.5	408	118.5	510	135.8	684	160.3
104	33.2	206	71.4	308	98.0	410	118.8	512	136.1	688	160.8
106	34.1	208	72.0	310	98.4	412	119.2	514	136.4	692	161.3
108	35.1	210	72.6	312	98.9	414	119.6	516	136.7	696	161.8
110	35.5	212	73.2	314	99.3	416	119.9	518	137.0		
112	36.9	214	73.8	316	99.7	418	120.3	520	137.3		

*Based on ALLIED SIGNAL Data


REQUIRED LIQUID LINE TEMPERATURE

LIQUID PRESSURE AT SERVICE VALVE (PSIG)	REQUIRED SUBCOOLING TEMPERATURE (°F)					
	8	10	12	14	16	18
189	58	56	54	52	50	48
195	60	58	56	54	52	50
202	62	60	58	56	54	52
208	64	62	60	58	56	54
215	66	64	62	60	58	56
222	68	66	64	62	60	58
229	70	68	66	64	62	60
236	72	70	68	66	64	62
243	74	72	70	68	66	64
251	76	74	72	70	68	66
259	78	76	74	72	70	68
266	80	78	76	74	72	70
274	82	80	78	76	74	72
283	84	82	80	78	76	74
291	86	84	82	80	78	76
299	88	86	84	82	80	78
308	90	88	86	84	82	80
317	92	90	88	86	84	82
326	94	92	90	88	86	84
335	96	94	92	90	88	86
345	98	96	94	92	90	88
354	100	98	96	94	92	90
364	102	100	98	96	94	92
374	104	102	100	98	96	94
384	106	104	102	100	98	96
395	108	106	104	102	100	98
406	110	108	106	104	102	100
416	112	110	108	106	104	102
427	114	112	110	108	106	104
439	116	114	112	110	108	106
450	118	116	114	112	110	108
462	120	118	116	114	112	110
474	122	120	118	116	114	112
486	124	122	120	118	116	114
499	126	124	122	120	118	116
511	128	126	124	122	120	118

Subcooling Charging Table

A95617

AIR CONDITIONER TROUBLESHOOTING CHART

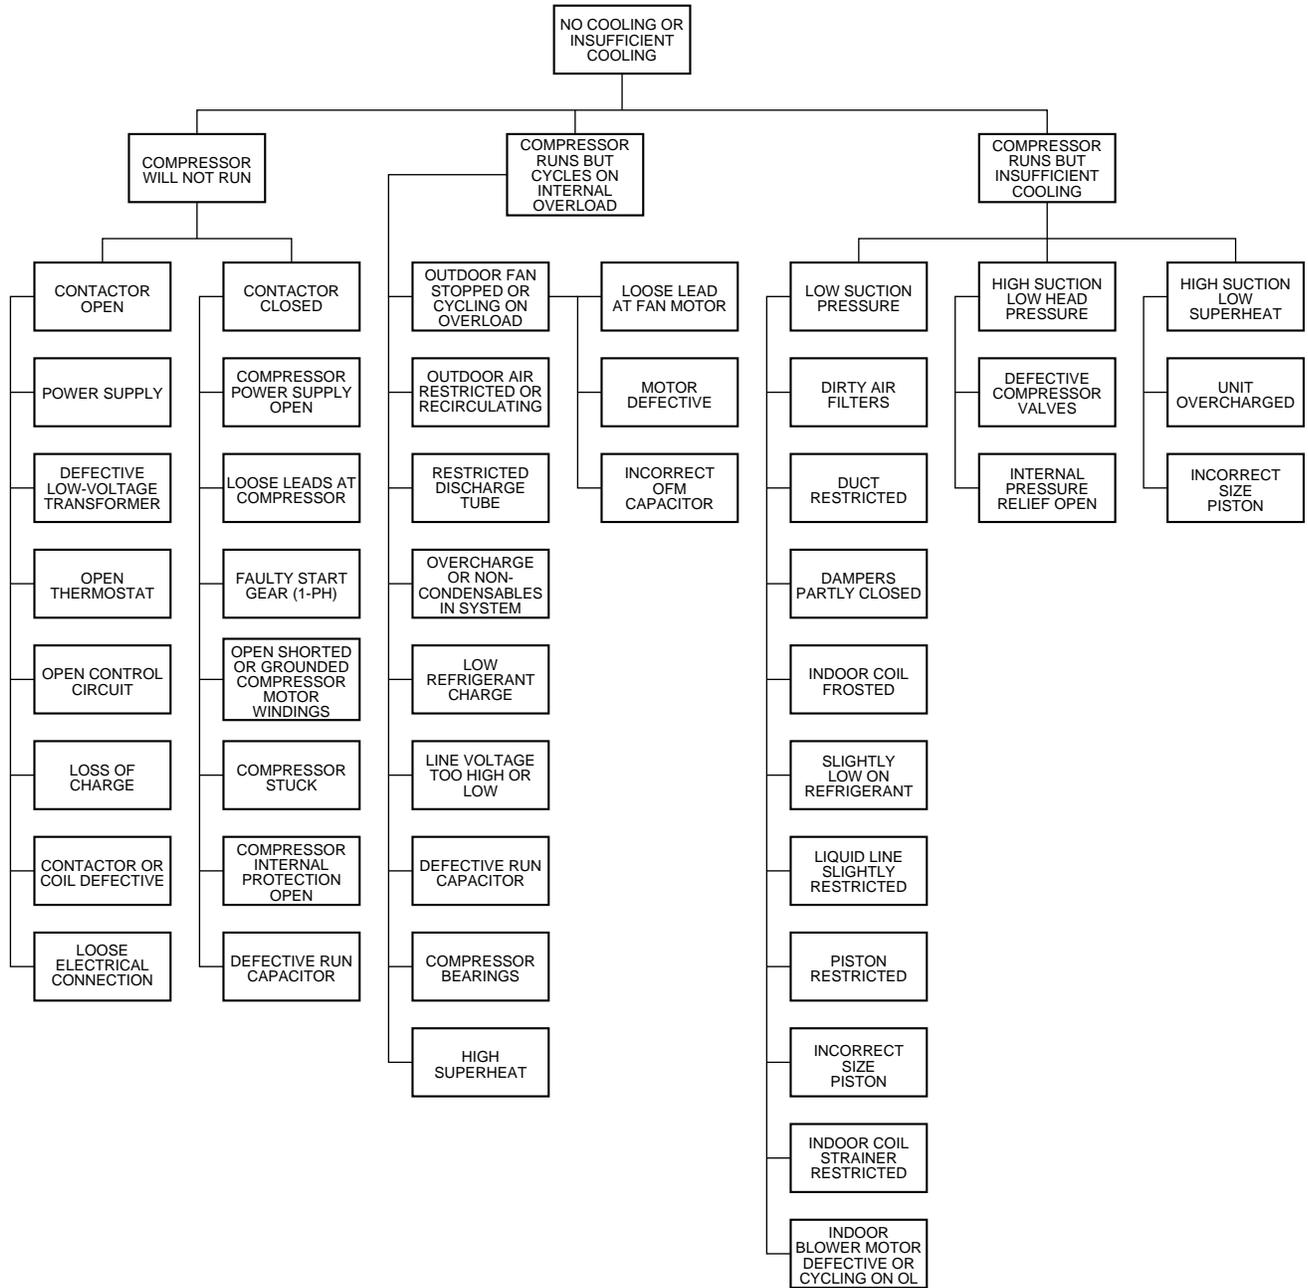

Air Conditioner Troubleshooting Chart

A90208

ATTENTION INSTALLERS AND SERVICE TECHNICIANS!

AIR CONDITIONER WITH R-410A—QUICK REFERENCE GUIDE

- R-410A refrigerant operates at 50%-70% higher pressures than R-22. Be sure that servicing equipment and replacement components are designed to operate with R-410A.
- R-410A refrigerant cylinders are rose colored.
- R-410A refrigerant cylinders have a dip tube which allows liquid to flow out of cylinder in upright position.
- R-410A systems should be charged with liquid refrigerant. Use a commercial type metering device in the manifold hose.
- R-410A, as with other HFCs, is only compatible with POE oils.
- Vacuum pumps will not remove moisture from oil.
- Do not use liquid-line filter driers with rated working pressures less than 600 psig.
- Do not install a suction-line filter drier in liquid-line.
- POE oils absorb moisture rapidly. Do not expose oil to atmosphere.
- Wrap all filter driers and service valves with wet cloth when brazing.
- A liquid-line filter drier is required on every unit.
- Do not use an R-22 TXV.
- If indoor unit is equipped with a TXV, it must be changed to an R-410A TXV.
- Never open system to atmosphere while it is under a vacuum.
- When system must be opened for service, break vacuum with dry nitrogen and replace filter driers.
- Do not vent R-410A into the atmosphere.
- Observe all **warnings**, **cautions**, and **bold** text.
- Do not use capillary tube indoor coils.