



Keep this manual for future reference. If you sell or give this convenience stroller away, make sure you give this manual to the new owner. Ask them to read instructions completely.

CONVENIENCE STROLLER

Operating Instructions

Important: Read and follow these Safety Rules and Assembly Instructions before operating stroller. If you have any questions concerning the safe use of this product, contact InSTEP, LLC at 1-800-242-6110, M-F, 8:00 a.m. – 5:00 p.m. CST or visit our web site at www.instep.net or email us at info@instep.net before using.

Safety Rules:

-  **WARNING:** Failure to follow these warnings and assembly instructions could result in serious injury or death.
-  **WARNING:** Immediately discard any plastic wrapping.
-  **WARNING:** Never allow children to fold, assemble or disassemble the stroller.
-  **WARNING:** Maximum weight capacity for the Single stroller is 40 lbs. or 18.2 kg.
-  **WARNING:** Never place child in stroller on their back with their head forward and feet rearward.
-  **WARNING:** Avoid serious injury from falling or sliding out. Always use seatbelt.
-  **WARNING:** Never leave child unattended.
-  **WARNING:** Never use this stroller with roller skates or in-line skates.
-  **WARNING:** Never allow stroller to be used as a toy or allow children to give rides to others.
-  **WARNING:** Never use stroller if it becomes damaged.
-  **WARNING:** Always be aware of traffic around you when walking.
-  **WARNING:** Always engage brakes when you stop or when you let go of handle.
-  **WARNING:** Accessories or parcels placed in or on the stroller may cause it to become unstable.
-  **WARNING:** Maximum weight for objects in bottom basket is 5 lbs. or 2.2 kg. Excessive weight may cause a hazardous, unstable condition.
-  **WARNING:** Child may slip into leg openings and strangle. Never use in a reclined carriage position unless T-shield/waist strap placement has been re-adjusted.

IMPORTANT

We appreciate your purchase of one of our many fine products. We are sure that you will be satisfied with your selection. Great care and effort has been taken, however occasionally problems may occur. PLEASE DO NOT RETURN PRODUCT TO THE STORE. To ensure prompt and correct handling of problems, or to answer questions, please contact us at either our Toll-Free Customer Service Number or Email us at our number listed below. Service will be quicker if you have your model number (found on the product and box) along with this instruction sheet ready when calling. If you have any questions concerning the safe use of this product, please contact us 1-800-242-6110 press "1" for customer service and then "2" to speak to a representative or Email us at info@instep.net or visit our web site at www.instep.net.

For Model CS300 Only

Tires are shipped deflated, DO NOT OVERINFLATE. Please inflate slowly, with short bursts, to 20-25 PSI maximum. 25 PSI will provide a comfortable ride for your child.


Parts List

<u>Description</u>	<u>Qty.</u>	<u>Description</u>	<u>Qty.</u>
Frame Assembly	1	Rear Wheel Kit consists of:	
Front Wheel Assembly (Dual wheels)	2	Rear hub/brake cog	2
Rear Wheel	2	Rear axle retaining clip	2
Rear Axle Assembly	1	Rear axle cap	2
		Rear wheel hub cap	2

Stroller Assembly Instructions




Step 1. Unfold Stroller

Release storage latch located on side of stroller (Figure A). Grasp frame as shown and open until side latches engage (Figure B).

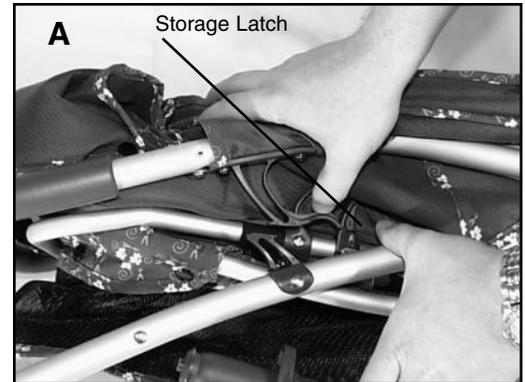







Step 2. Front Wheel Assembly

Turn stroller on its side. Slide the front wheel assembly onto one of the front legs. Push until the wheel assembly locks into place. Repeat for other side (Figure C1). Pull firmly on each wheel assembly to ensure that they are securely attached. Note: to remove front wheels, press the tab located beneath wheel assembly (Figure C2).

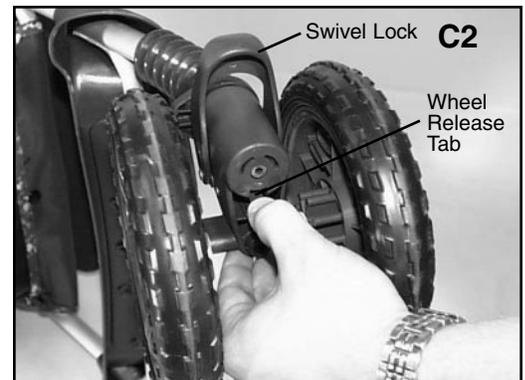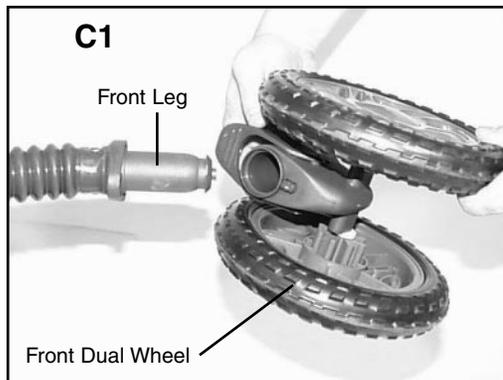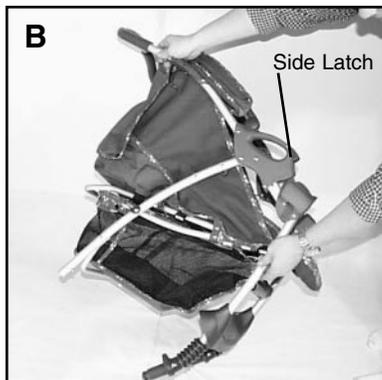



Step 3. Rear Wheel Assembly

Turn stroller onto its front as shown (Figure D). Slide the rear axle assembly onto frame as shown (Figure E1). Note: to remove rear axle assembly push up the plastic baffles while pushing in the silver release button pull off the axle assembly (Figure E2). Place rear brake cog on the rear wheel – turn the cog so the grooves line up with the ribs on the wheel sprocket, then push the adapter on. Slide the wheel with brake cog onto the axle (Figure F1). Place the wide end of the retaining clip onto the grooved end of the axle, then press to snap into place (Figure F2). Position the axle cap over retaining clip and then press to snap into place (Figure F3). Place the hubcaps on the wheels – align the hubcap tabs with the holes in the center of the wheel, then press into place (Figure F4). Repeat for other side.

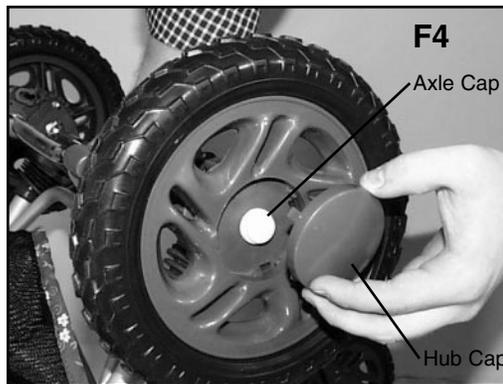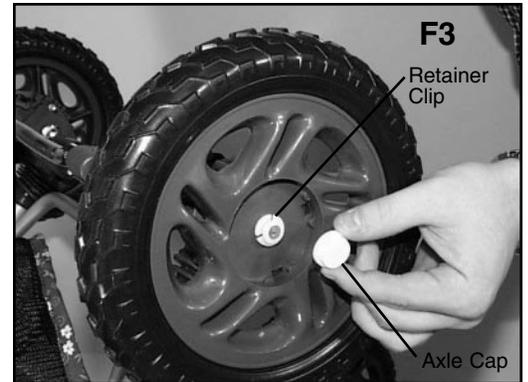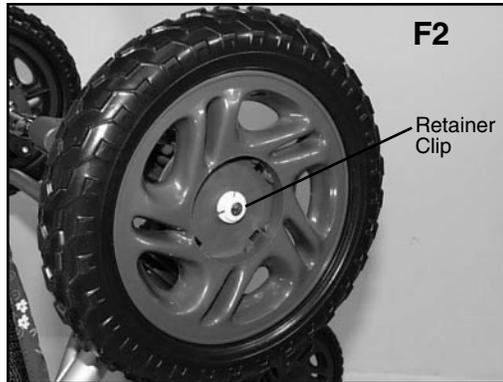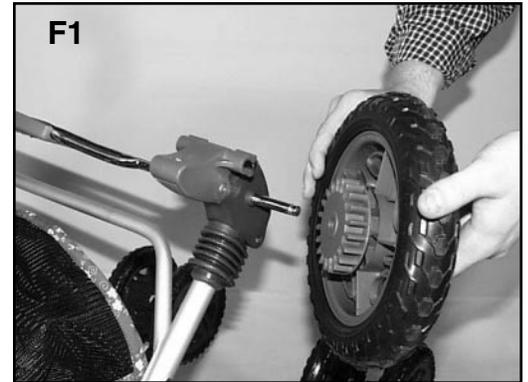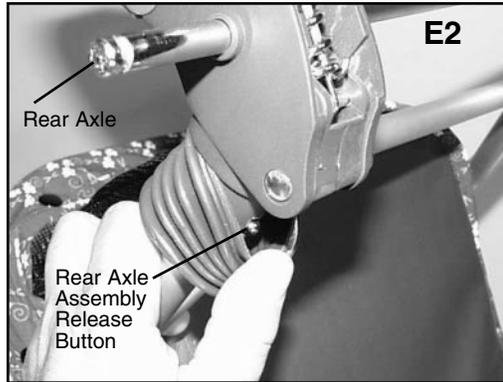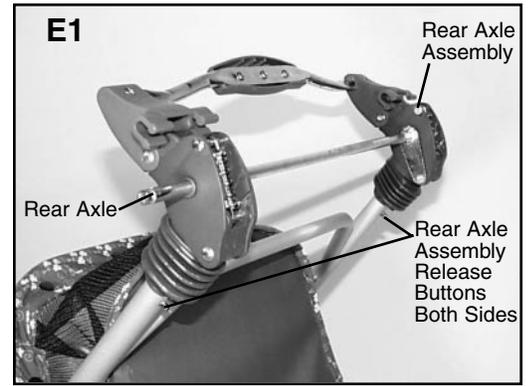

Step 4. Mount child napper bar

Position bar as shown with tabs on the bottom. (Figure G1) Push in until tabs lock in place. To remove napper bar, push up on bottom tabs and pull off napper bar (Figure G2).

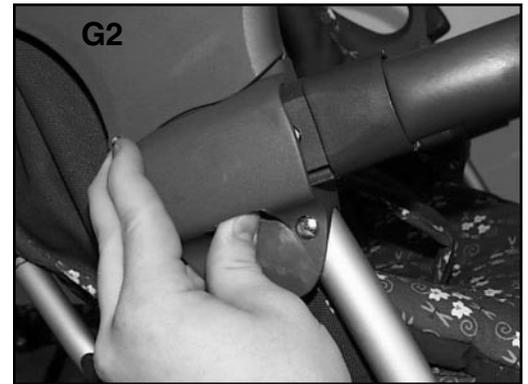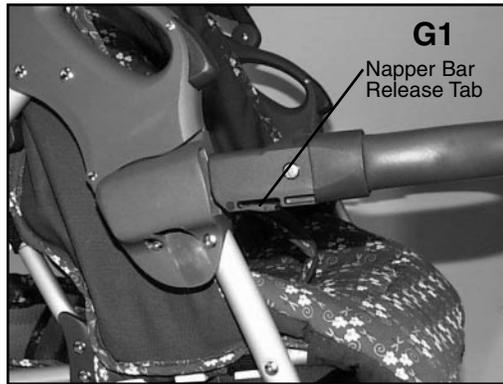

Step 5. Adjust Canopy

Push or pull canopy to the desired position.

Use Instructions

WARNING: Always remove child from stroller before folding.

To fold stroller:

Step 1. Retract canopy and fully recline seat before folding (Figure H). (See "To adjust 3-position recline seat")

Step 2. Push in side buttons and lift slightly upon side handles as shown, stroller will automatically begin to fold (Figure I).


Step 3. Continue folding by pushing frame together until storage latch engages (Figure J).



To unfold stroller:

Release storage latch located on side of stroller, continue unfolding until side latches engage (See Figure J).

To engage rear brakes: Step lightly on the center brake bar to engage brakes. To disengage, lift up on brake bar (Figure K).

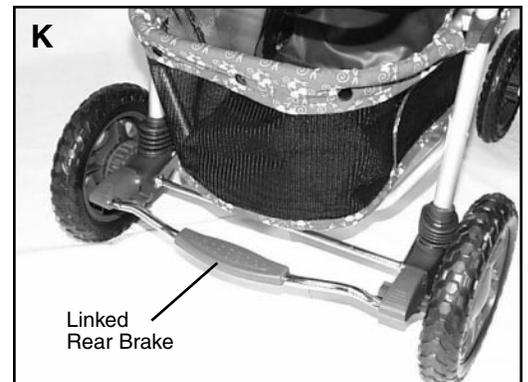

To place child in stroller:

Always engage rear brakes so stroller is steady. Lift canopy from both sides and rotate back. Place child in stroller with the T-shield between the child's legs. Fasten the waist buckle. Adjust belt so that it fits snugly around the child's waist (Figure L). (Note: To release, squeeze sides of buckle)

 **WARNING:** Avoid serious injury from falling or sliding out. Always use seatbelt.

To adjust 3-position recline seat:

To fully recline seat, pull up on the recline bar as shown. (Figure M) To position seat upright, push back of seat until side tabs fall into side notches.

 **WARNING:** Child may slip into leg openings and strangle. Never use in a reclined carriage position unless T-shield/waist strap have been readjusted to the seats new position.

For Models CS150T, CS200 and CS300

Child's Convenience Tray

The napper bar must be used when using the child's tray.

Step 1. Snap the child's tray onto both side latches as shown (Figure N).



Parent's Convenience Tray

 **WARNING:** To avoid burns, never put hot liquids in the parent tray. To prevent tipping over do not place more than 3 lb. or 1.4 kg on parent tray.

Phillips screw driver is required for installation.

Step 1. Fold the tray several times in the hinge area to break in the hinge (Figure O1).

Step 2. Align the holes on the tray with knob on frame and snap tray into place over knob. Repeat for other side (Figure O2).

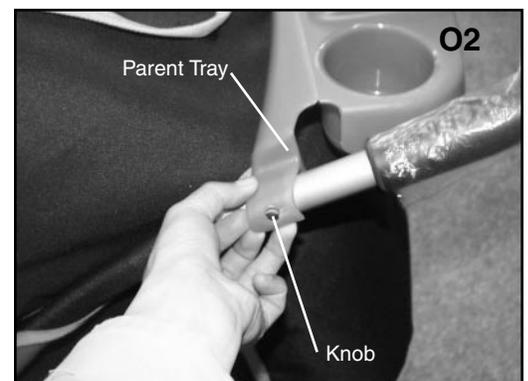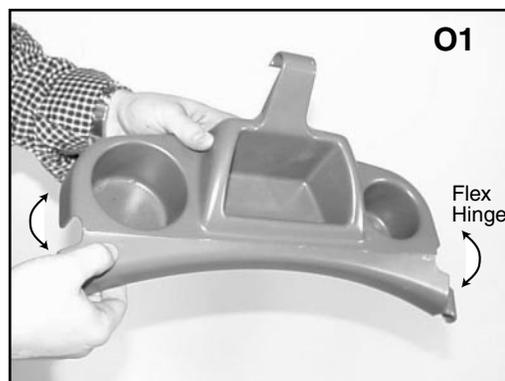

Care and Maintenance

Check fasteners

After one hour of use, check all fasteners to make sure they are secure. Adjust if necessary. Periodically check the stroller to ensure that it is in good operating condition.

To clean seat and canopy:

If light cleaning is required, use a soft cloth with warm water and mild soap then air dry. Do not put into washing machine. Do not put in dryer. DO NOT BLEACH.

To clean frame:

Wipe using a soft cloth with warm water and mild soap. Air dry. DO NOT USE polish or abrasives.

Accessory Name	Description	Item Number	Retail Price	Ship & Handling	Qty.	Total Cost
Child Tray--Blue	Fits on all InSTEP Convenience Strollers napper bar. Offers additional convenience.	13-SA066	\$10.00	\$3.00		
Parent Tray--Blue	Fits on all InSTEP Convenience Strollers handle bar. Parent console tray with two cup/bottle holders and one storage tray.	13-SA068	\$10.00	\$3.00		
Convenience Stroller Weather Shield	Fits on all InSTEP Convenience Strollers. For use with the CS100, CS150T, CS200 and CS300. Made of heavy duty clear vinyl with black trim.	13-SA070	\$14.99	\$3.00		
Convenience Stroller Bug Screen	Fits on all InSTEP Convenience Strollers. For use with the CS100, CS150T, CS200 and CS300. Made of polyester mesh.	13-SA072	\$10.99	\$3.00		
				Total		

MN Residents add 6.5% Tax
All prices are US Funds, Canadian Tax/Duty not included.

Order by any of these 4 convenient ways:

* Mail this form along with check or VISA or Master Card number listed to:

InSTEP LLC
2425 Enterprise Drive
Suite 900
Mendota Heights, MN 55120

* Fax this form along with your credit card information to:
(612) 881-1899

* Call our customer service department at
1-800-242-6110 or (612) 881-1984

* Order on line at our web site www.instep.net

Depending on your location, allow 7-10 business days for shipment.

VISA or Master Card Only

Card # _____ Expiration Date _____

Cardholder Signature _____

Ship to Name: _____

Address: _____

City/ST/ZIP _____

Phone# _____

To Place Order, Call 1-800-242-6110



WARNING:

If you have any questions concerning the safe use of this product, please contact InSTEP LLC before using:

1-800-242-6110

8am-5pm CST, Monday-Friday, or MAIL to:



2425 Enterprise Drive, Suite #900

Mendota Heights, MN 55120

Tel: 1-800-242-6110

or visit our web site at www.instep.net
email: info@instep.net