



#### Zooper / USA

Lan Enterprises, LLC  
10140 SW Allen Blvd., Suite E  
Beaverton, OR 97005  
Toll Free number: 1-888-742-9899  
FAX: 503-352-0929  
E-mail: [info@zooper.com](mailto:info@zooper.com)  
Web: [www.zooper.com](http://www.zooper.com)

 
 
#### Zooper / Canada

Peter John M. Distributions, Inc.  
88 SW Marine Dr.  
Vancouver, BC  
Canada  
V5X 2R1  
Tel: 1-888-597-0992  
E-mail: [info@zooperbabycanada.com](mailto:info@zooperbabycanada.com)

INTERNATIONAL MODEL NUMBER: HC900C

#### FOOTREST

To lower the footrest, bring the plastic oval shaped cover down. When not using the footrest, push it back up in place under the footrest fabric covering.(Fig 10)

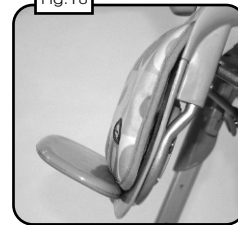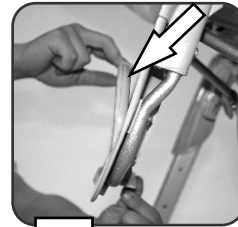

#### CLOSING THE HIGH CHAIR:

With one foot anchoring the rear base tube, simultaneously push in on the two plastic buttons located on the plastic moldings on top of the frame, and bring in the front legs of the chair towards you to close. The front and rear legs remain partially separated so that the chair will stand on its own. (Fig 11).

**WARNING:** Do not force the front and rear legs completely together as this may damage your high chair. Be sure children are at a safe distance and cannot reach moving parts whenever opening or closing the high chair.



6

INTERNATIONAL MODEL NUMBER: HC900C

#### WHEELS:

The wheels lock into position by pressing on the small levers located on top of each wheel

**WARNING:** Always make sure the wheels are in the

#### SAFETY HARNESS




Zooper provides a special 5-point harness system for the ultimate in safety. Used properly, this harness system will keep your child seated and safe. To secure your child in the harness, push buckles (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust slider (D) to fit snugly and comfortably around your child. (Fig 8). Follow the same procedure to adjust the shoulder straps. Always retighten the harness when the child is in a sit up or layback position.

**WARNING:** The child should be secured in the high chair at all times by the 5-point harness restraining system, either in the reclining or upright position. The tray is not designed to hold the child in the chair. It is recommended that the high chair be used only by

#### HEIGHT ADJUSTABILITY

The seat adjusts to 4 positions. To move the down press in on both buttons on the levers located on the inside of the high chair legs. While pressing on these buttons, move the seat down into desired position.(Fig 9). To raise the chair, put one foot on the rear base bar, one hand on either top plastic molding, and with you other hand, pull the seat up into desired position. There is no need to press the release buttons when raising the chair.

**WARNING:** Never make any adjustments to the seat with your child seated in the high chair. Be sure children are at a safe distance and cannot reach moving parts whenever adjusting the high chair.

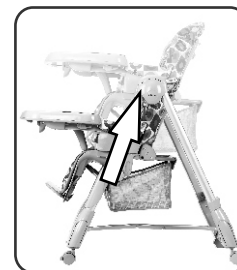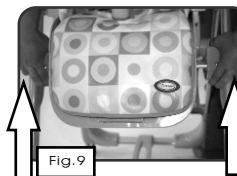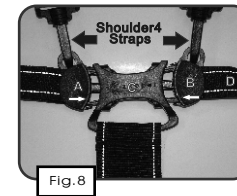

5



PEAS & CARROTS HC900C

## WARNINGS

#### GENERAL CARE AND SAFETY TIPS:

##### WARNINGS

- Prevent serious injury or death from falls or sliding out.
- Always secure child in the 5-point safety harness restraint system.
- Always keep child in view when in high chair.
- Never leave your child unattended.
- Never use the high chair near an open fire or exposed flame.
- It is recommended the high chair be used only by children capable of sitting upright unassisted.
- This product is not recommended for use with a child over 45 lbs.
- Do not overload the basket: Maximum load is 7 lbs.
- Never hang bags or other items from the high chair.
- The tray should always be attached to the seat when your child is seated in the high chair. Never use the high chair without the tray attached.
- It may be unsafe to use accessories other than those approved by the manufacturer or distributor.

##### MAINTENANCE

- Seat fabric may be removed and hand washed using cold water and mild soap.
- Do not machine dry fabric.
- Do not use bleach when washing the seat fabric.
- Tubes and plastic parts may be wiped clean with wet cloth.
- The removable stack tray can be washed in the dishwasher. It is recommended that you use the top rack.

In order to maintain the highest quality standards, the distributor reserves the right to improve or alter any Zooper design without notice or obligation to any previous purchaser. For questions or service needs, please contact the service center located in your country of residence. Sending in your warrantee card will help expedite any service needs.

1

INTERNATIONAL MODEL NUMBER: HC900C

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR HIGH CHAIR AND KEEP THEM FOR FUTURE REFERENCE. THE SAFETY OF YOUR CHILD DEPENDS ON IT.

Thank you for choosing Zooper.

#### TO OPEN THE HIGH CHAIR:

Press on the plastic buttons located on the inside of the top plastic moldings of the frame. While pressing on both buttons push the front legs of the high chair out to open completely. (Fig1). High chair should be unlocked and in a steady and stable position while opened.

**WARNING:** Always make sure that your child is not seated in the high chair while making these adjustments. Be sure children are at a safe distance and cannot reach moving parts whenever opening or closing the high chair.



2

INTERNATIONAL MODEL NUMBER: HC900C




#### ATTACHING THE BACKREST:

The backrest is packed separately from the seat base. To attach the backrest, locate the spring lock buttons on the outside of the tubes of the backrest bar. (Fig2). Make sure the buttons are coming out of the holes correctly and have not slipped inside the tube during shipping. If you are missing a spring lock, please contact the appropriate service center, listed after maintenance instructions, for a replacement part. Push the backrest bar completely into the two entry holes located on the back of the seat base. Visually check to see that the silver spring heads pop into the small holes located on either side of the bottom of the seat. (Fig3). Also, pull out on the backrest bar to make sure that it has locked into place.

#### ATTACHING THE CROTCH STRAP

Next located the crotch strap. It is fixed to the lower part of the seat belt and goes through the fabric opening in the middle of the seat near the footrest. Make sure the rectangular plastic anchor is inserted into the corresponding slot on the base of the seat itself. (Fig 4) Check that it is properly inserted by pulling out on the strap. It should not pull through the opening slot of the seat.

**WARNING:** Failure to use the crotch strap correctly could result in injury to your child. Always make sure the crotch strap is threaded correctly and securely through the seat and the seat fabric before placing your child in the chair.

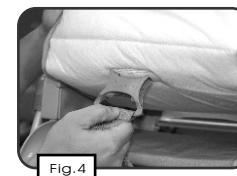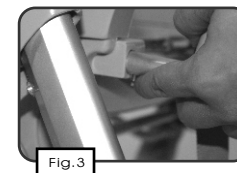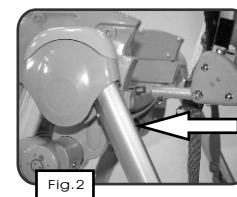


3

INTERNATIONAL MODEL NUMBER: HC900C

#### ATTACHING THE SEAT FABRIC

Once the backrest and crotch strap have been properly installed as detailed above, complete the fabric attachment by snapping the armrest padding to the outside of the plastic armrest molding.

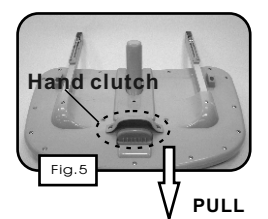


#### ATTACHING THE BASKET

Attach the basket by snapping around the tubes of the backrest bar.

#### ATTACHING THE TRAY:


The tray attaches to the high chair by inserting the tubes of the tray into the openings at the ends of the armrests. Locate the hand clutch on the underside of the tray.(Fig 5). Pull the lever toward you with one hand while pushing in the tray with the other hand until you hear the click. Pull on the tray to make sure that it has locked into place.(Fig 6). To remove the tray, pull the level as above while pulling out on the tray with the other hand.

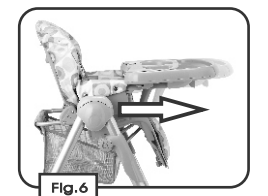

**WARNING:** The tray should always be attached to the seat when your child is seated in the high chair. Never use the high chair without the tray attached.

#### TRAY STORAGE:

For storage, the tray can be attached to the back of the high chair. Just above the rear base plastic moldings there are two plastic holders. On the underside of the tray there are two inert moldings located on the outside of the main tray tubes. These are inserted into the holders for tray storage. (Fig 7).

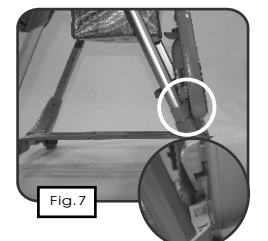

4