

For the complete PDF manual
please visit www.LaserPros.com.

Edition: September 17, 2009



Service Manual

**Lexmark™ T650, T650n, T652dn,
T654dn & T656dne Printer**

4062-XXX

- ***Table of contents***
- ***Start diagnostics***
- ***Safety and notices***
- ***Trademarks***
- ***Index***



Lexmark and Lexmark with diamond design are
trademarks of Lexmark International, Inc., registered
in the United States and/or other countries.

Edition: September 17, 2009

The following paragraph does not apply to any country where such provisions are inconsistent with local law:
LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22X/002-1, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark, Lexmark with diamond design, and MarkNet are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

PCL® is a registered trademark of the Hewlett-Packard Company.

All other trademarks are the property of their respective owners.

© 2008 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Table of contents

Table of contents	iii
Notices and safety information	xv
Laser notice	xv
Lithium warning	ii-xxi
Safety information	xxi
Preface	xxiv
Conventions	xxiv
General information	1-1
Maintenance approach	1-1
Options	1-2
Available internal options	1-2
Media handling options	1-2
Printer configurations	1-3
Basic model	1-3
Fully configured model	1-4
Supported paper sizes, types, and weights	1-6
Paper sizes supported by the printer	1-6
Paper types and weights supported by the printer	1-7
Paper types and weights supported by the output bins	1-7
Tools required	1-8
Acronyms	1-9
Diagnostic information	2-1
Start	2-1
Confirm the installation status	2-2
Power-on Reset sequence	2-2
Entering Diagnostics mode	2-2
User attendance messages	2-3
Error code table 1	2-14
Service checks	2-126
Sensor (input) service check	2-126
Sensor (fuser output) service check	2-126
Sensor (narrow media) service check	2-127
Sensor (duplex input) service check	2-127
Sensor (duplex input) service check (external duplex only)	2-128
Sensor (duplex exit) service check (external duplex only)	2-128
Sensor (pass through) service check	2-129
Sensor (envelope feeder empty) service check	2-129
Sensor (input) late jam service check	2-129
Sensor (input) lingering jam service check	2-132
Sensor (input) early jam service check	2-133
Sensor (input) static jam service check	2-135
Sensor (fuser output) late jam service check	2-135
Sensor (fuser output) lingering jam service check	2-137
Sensor (fuser output) static jam service check	2-138
Sensor (narrow media) late jam service check	2-139
Sensor (narrow media) static jam service check	2-140
Sensor (duplex input) late jam service check	2-141
Sensor (duplex input) lingering jam service check	2-142
Sensor (duplex input) static jam service check	2-144
Sensor (pass through) late jam service check	2-145

Sensor (pass through) lingering jam service check	2-146
Sensor (pass through) static jam service check	2-147
Sensor (stapler pass through) late jam service check	2-148
Sensor (stapler pass through) lingering jam service check	2-149
Sensor (stapler pass through) static jam service check	2-149
Sensor (output pass through) late jam service check	2-150
Sensor (output pass through) lingering jam service check	2-151
Sensor (output pass through) static jam service check	2-152
Sensor (mailbox empty) late jam service check	2-153
Sensor (mailbox empty) lingering jam service check	2-154
Sensor (mailbox empty) static jam service check	2-154
Sensor (toner empty) service check	2-155
NVRAM mismatch failure (950.00 through 950.29) service check	2-155
	2-156
Image quality trouble	2-157
Printer Related Troubleshooting	2-157
Image quality symptoms	2-157
Image Quality	2-158
Faint print (Low contrast)	2-158
Blank print (no print)	2-160
Solid black	2-162
Vertical lines and bands (process direction)	2-163
Horizontal white stripes or bands (side to side direction)	2-164
Vertical stripes (process direction)	2-165
Horizontal stripes (side to side direction)	2-166
Partial lack	2-168
Spots	2-169
After image	2-171
Background (fog)	2-172
Skew	2-173
Media damage	2-174
No fuse	2-176
Network service check	2-177
Diagnostic aids	3-1
Understanding the printer control panel (models T650, T652, and T654)	3-1
Accessing service menus (models T650, T652, and T654)	3-2
Diagnostics mode (models T650, T652, and T654)	3-3
Entering Diagnostics mode (models T650, T652, and T654)	3-3
Available tests	3-3
Exiting Diagnostics mode (models T650, T652, and T654)	3-5
REGISTRATION	3-5
Quick Test	3-6
PRINT TESTS	3-7
Input source tests	3-7
Print quality pages (Prt Quality Pgs)	3-7
HARDWARE TESTS	3-8
Panel Test	3-8
Button Test	3-8
DRAM Test	3-8
USB HS Test Mode	3-9
RFID Option Test	3-10
DUPLEX TESTS	3-12
Quick Test (duplex)	3-12
Top Margin (duplex)	3-13
Sensor Test (duplex)	3-13
Motor Test (duplex)	3-14
Duplex Feed 1	3-14
Duplex Feed 2	3-14

INPUT TRAY TESTS	3-14
Feed Tests (input tray)	3-15
Sensor Test (input tray)	3-15
OUTPUT BIN TESTS	3-15
Feed Tests (output bins)	3-15
Feed To All Bins	3-16
Sensor Test (standard output bin)	3-16
Sensor Test (Output Expander)	3-17
Sensor Test (high capacity output stacker)	3-17
Sensor Tests (5-bin mailbox)	3-18
Deflector Test	3-18
StapleSmart FINISHER TESTS	3-18
Staple Test	3-18
Feed Tests (finisher)	3-18
Sensor Test (finisher)	3-18
BASE SENSOR TEST	3-19
PRINTER SETUP	3-19
Defaults	3-19
Printed Page Count	3-19
Perm Page Count (permanent page count)	3-20
Serial Number	3-20
Engine Setting 1 through 16	3-20
Model Name	3-20
Configuration ID	3-20
Edge to Edge	3-21
EP SETUP	3-21
EP Defaults	3-21
Fuser Temperature (Fuser Temp)	3-21
Fuser Page Count	3-21
Warm Up Time	3-21
Transfer	3-21
Print Contrast	3-22
Charge Roll	3-22
Gap Adjust	3-22
Auto Dark Adj	3-22
REPORTS	3-23
EVENT LOG	3-23
Display Log	3-23
Print Log	3-23
Clear Log	3-24
EXIT DIAGNOSTICS (models T650, T652, and T654)	3-24
Configuration menu (CONFIG MENU) (models T650, T652, and T654)	3-25
Entering Configuration Menu (models T650, T652, and T654)	3-25
Available menus	3-25
Maintenance page count (Maint Cnt Value)	3-25
Maintenance page counter reset (Reset Cnt)	3-26
Print quality pages (Prt Quality Pgs)	3-26
Reports	3-26
SIZE SENSING	3-27
Panel Menus	3-27
PPDS Emulation	3-27
Demo Mode	3-27
Factory Defaults	3-28
LES Applications	3-28
Energy Conserve	3-28
Paper Prompts	3-28
Env Prompts	3-28
Action for Prompts	3-28
Font Sharpening	3-28

Wiper Messages	3-28
Clear Custom Status	3-28
Best Speed	3-29
Exit Config Menu (models T650, T652, and T654)	3-29
Understanding the printer control panel (model T656)	3-29
Accessing service menus (model T656)	3-30
Diagnostics Menu (model T656)	3-31
Entering Diagnostics Menu (model T656)	3-31
Available tests	3-31
Registration (printer)	3-33
Quick Test	3-34
PRINT TESTS	3-35
Input source tests	3-35
Printing Quality Pages	3-35
HARDWARE TESTS	3-36
Panel Test	3-36
Button Test	3-36
DRAM Test	3-37
USB HS Test Mode	3-37
DUPLEX TESTS	3-38
Quick Test (duplex)	3-38
Top Margin (duplex)	3-38
Left Margin (duplex)	3-39
Sensor Test (duplex)	3-39
Motor Test (duplex)	3-39
Duplex Feed 1	3-40
Duplex Feed 2	3-40
INPUT TRAY TESTS	3-40
Feed Tests (input tray)	3-40
Sensor Test (input tray)	3-41
OUTPUT BIN TESTS	3-41
Feed Tests (output bins)	3-41
Sensor Test (standard output bin)	3-41
BASE SENSOR TEST	3-42
DEVICE TESTS	3-43
Quick Disk Test	3-43
Disk Test/Clean	3-43
PRINTER SETUP	3-44
Defaults	3-44
Printed Page Count	3-44
Permanent Page Count	3-44
Serial Number	3-44
Engine Settings 1 through 16	3-44
Model Name	3-44
Configuration ID	3-45
Edge to Edge	3-45
EP SETUP	3-45
EP Defaults	3-46
Fuser Temperature (Fuser Temp)	3-46
Fuser Page Count	3-46
Warm Up Time	3-46
Transfer	3-46
Print Contrast	3-46
Charge Roll	3-46
Gap Adjust	3-47
Auto Dark Adjust	3-47
REPORTS	3-47
Menu Settings Page	3-47
EVENT LOG	3-47

Display Log	3-47
Print Log	3-48
Clear Log	3-48
Configuration menu (CONFIG MENU) (model T656)	3-49
Entering Configuration Menu (model T656)	3-49
Available menus	3-49
Maintenance Counter Value	3-49
Reset Maintenance Counter	3-50
Print Quality Pages	3-51
Reports	3-51
Menu Settings Page	3-51
Event Log	3-51
SIZE SENSING	3-52
Panel Menus	3-52
PPDS Emulation	3-52
Factory Defaults	3-54
Energy Conserve	3-54
Paper Prompts	3-55
Envelope Prompts	3-55
Action for Prompts	3-55
Jobs On Disk	3-55
Disk Encryption	3-56
Wipe Disk	3-57
Font Sharpening	3-57
Require Standby	3-57
LES Applications	3-58
Key Repeat Initial Delay	3-58
Key Repeat Rate	3-58
Wiper Message	3-58
Clear Custom Status	3-58
USB speed	3-59
Exit Configuration Menu (model T656)	3-59
Printer overview	3-60
Basic model	3-60
Printer theory	3-61
Model T650 with duplex, paper path, rolls, and sensors	3-61
Models T652 and T654 paper path rolls and sensors	3-62
Functions of main components	3-62
Media tray assembly	3-62
Rear media guide	3-62
Side guide	3-63
Wear strips	3-63
Media tray assembly	3-63
Detection of media size	3-63
Pick arm assembly	3-64
Switch (media size)	3-65
Sensor (media empty)	3-65
Sensor (media low)	3-65
Multi-purpose feeder (MPF)	3-65
MPF feed roll	3-65
MPF pick solenoid	3-65
Sensor (MPF media empty)	3-65
Supported paper sizes, types, and weights	3-66
Paper sizes supported by the printer	3-66
Registration	3-67
Sensor (input)	3-67
Aligner assembly	3-67
Transfer	3-68
Transfer roll assembly	3-68

Polygon printhead assembly	3-69
Oscillating printhead assembly	3-71
Fuser	3-72
Fuser components	3-72
Heat roll	3-73
Pressure roll	3-73
Heater lamp	3-73
Thermal cutoff	3-73
Thermistor	3-73
Sensor (fuser output)	3-73
Sensor (narrow media)	3-73
Fuser unit assembly (type 1 and type 2)	3-73
Type 1 fuser unit assembly	3-73
Type 2 fuser unit assembly	3-74
Exit	3-74
Sensor (standard bin full)	3-74
Drive	3-75
Main drive motor assembly	3-75
Redrive motor assembly	3-75
Electrical components and controller	3-76
Switch (printer front door interlock)	3-76
Main cooling fan	3-76
Print cartridge cooling fan	3-76
Duplex cooling fan	3-76
LVPS card assembly	3-76
HVPS card assembly	3-76
System card assembly	3-77
Control	3-77
Printhead control	3-77
Rotation of printhead motor	3-77
Determination of printhead ready	3-77
Printhead reference value	3-77
Fuser control	3-77
Fuser control method	3-77
Fuser lamp on/off control	3-77
Fuser warm-up	3-78
Xerographic and print cartridge components	3-78
Charge	3-79
Exposure	3-79
Development	3-80
Transfer	3-81
Cleaning	3-82
Auto density sensing	3-83
High Capacity Input Tray (HCIT) tray assembly	3-84
250-sheet/550-sheet tray assembly	3-85
Media size sensing	3-85
Media level sensing	3-86
Pick arm assembly	3-86
Switch (media size)	3-87
Sensor (media empty)	3-87
Sensor (media low)	3-87
Sensor (pass-thru)	3-87
Media transport path	3-89
Model T650 paper path, rolls, and sensors	3-89
Models T652 and T654 paper path, rolls, and sensors	3-90
Functions of main components	3-90
Media tray assembly	3-90
Rear media guide	3-90
Side guide	3-90

Wear strips	3-91
Media tray assembly	3-91
Detection of media size	3-91
Pick arm assembly	3-91
Switch (media size)	3-91
Sensor (media empty)	3-91
Sensor (media low)	3-92
Duplex	3-93
Layout of media transport path	3-93
Model T650 duplex paper path	3-93
Models T652 and T654 duplex paper path	3-94
Functions of main components	3-94
Sensor (duplex input)	3-94
Duplex drive motor assembly	3-95
Understanding jam numbers and locations	3-96
200 and 201 paper jams	3-96
202 and 203 paper jams	3-97
230 paper jam	3-98
Rear paper jams	3-98
Front paper jams	3-99
231-239 paper jams (optional external duplex unit)	3-100
Rear paper jams	3-100
Front paper jams	3-100
241–245 paper jams	3-101
250 paper jam	3-102
260 paper jam	3-103
271–279 paper jams	3-103
280 paper jam	3-104
281 paper jam	3-105
282 paper jam	3-105
283 staple jam	3-106
Security Reset Jumper	3-108
Security Reset Jumper	3-108
Repair Information	4-1
Handling ESD-sensitive parts	4-1
Adjustments	4-2
Polygon and Oscillating printhead mechanical registration adjustment	4-2
Oscillating printhead assembly electronic adjustment	4-3
Alignment assembly adjustment	4-4
Fuser solenoid adjustment	4-6
Gap adjustment	4-6
Removals	4-7
Replacement note: To replace a removed part, reverse the order of removal unless noted otherwise.	4-7
Access door removal (T650, T652, T654)	4-8
Alignment assembly removal (T650, T652, T654)	4-8
Connection access cover, rear removal (T650, T652, T654)	4-11
Connection bezel assembly, rear removal (T650)	4-11
Connection bezel assembly, rear removal (T652, T654)	4-12
Cover assembly, rear lower removal (T650)	4-13
Cover assembly, rear lower (T652, T654)	4-13
Charge roll assembly removal (T650, T652, T654)	4-14
Door assembly, rear removal (T650, T652, T654)	4-15
Duplex guide assembly, rear removal (T652, T654)	4-15
Duplex assembly removal (T652, T654)	4-16
Duplex cooling fan removal (T652, T654)	4-18
Duplex drive motor assembly removal (T652, T654)	4-19
Duplex input sensor assembly removal (T652, T654)	4-20

Duplex guide assembly, front removal (T652, T654)	4-21
Fuser access door assembly removal (T650, T652, T654)	4-22
Fuser drive release linkage removal (T650, T652, T654)	4-23
Fuser unit assembly removal (T650, T652, T654)	4-23
Fuser wiper cover assembly removal (T650, T652, T654)	4-24
HVPS card assembly removal (T650, T652, T654)	4-24
Inner deflector removal (T650, T652, T654)	4-25
Laser cover removal (T650, T652, T654)	4-27
LCD screen bezel removal (T650, T652, T654)	4-28
LVPS card assembly removal (T650)	4-29
LVPS card assembly removal (T652, T654)	4-31
Main cooling fan removal (T650, T652, T654)	4-32
Main drive motor assembly removal (T650, T652, T654)	4-34
Media out actuator removal (T650, T652, T654)	4-35
Media support removal (T650, T652, T654)	4-36
Media turn guide removal (T650, T652, T654)	4-36
MPF cam gear removal (T650, T652, T654)	4-37
MPF lift plate assembly removal (T650, T652, T654)	4-37
MPF media out actuator removal (T650, T652, T654)	4-38
MPF pick roll assembly removal (T650, T652, T654)	4-38
MPF pick solenoid assembly removal (T650, T652, T654)	4-39
MPF tray door assembly removal (T650, T652, T654)	4-41
Operator panel latch assembly removal (T650, T652, T654)	4-43
Operator panel door assembly removal (T650, T652, T654)	4-44
Operator panel hinge assembly, left removal (T650, T652, T654)	4-45
Operator panel hinge assembly, right removal (T650, T652, T654)	4-47
Operator panel door assembly removal (models X651, X652, X654, and X656)	4-49
Operator panel cover latch assembly removal (models X651, X652, X654, and X656)	4-52
Option drive shaft removal (T650, T652, T654)	4-52
Output cover assembly removal (T650, T652, T654)	4-54
Pick arm assembly removal (T650, T652, T654)	4-54
Pick roll assembly removal (T650, T652, T654)	4-57
Print cartridge cooling fan removal (T650, T652, T654)	4-57
Print cartridge clamp assembly removal (T650, T652, T654)	4-58
Print cartridge ID connector assembly removal (T650, T652, T654)	4-59
Printhead assembly removal (T650)	4-60
Printhead assembly removal (T652, T654)	4-61
Redrive assembly removal (T650, T652, T654)	4-62
Redrive motor assembly removal (T652, T654)	4-63
Side cover, left removal (T650)	4-65
Side cover, left removal (T652 and T654)	4-66
Side cover, right removal (T650)	4-67
Side cover, right removal (T652, T654)	4-68
Sensor (duplex input) removal (T652, T654)	4-68
Sensor (media level) removal (T650, T652, T654)	4-70
Sensor (media out) removal (T650, T652, T654)	4-70
Sensor (toner empty) removal (T650, T652, T654)	4-71
Sensor (input) removal (T650, T652, T654)	4-71
Sensor shield assembly removal (T650, T652, T654)	4-72
Sensor (standard bin exit) removal (T650, T652, T654)	4-73
Sensor (toner density) removal (T650, T652, T654)	4-73
Standard bin actuator assembly removal (T650, T652, T654)	4-73
Switch (media size) assembly removal (T650, T652, T654)	4-74
System card assembly removal (T650, T652, T654, T656)	4-76
Transfer roll assembly removal (T650, T652, T654)	4-78
Transfer roll bracket assembly, left removal (T650, T652, T654)	4-79
Transfer roll bracket assembly, right removal (T650, T652, T654)	4-80
Transfer deflector removal (T650, T652, T654)	4-80
Tray roller catch assembly removal (T650, T652, T654)	4-81

Option removals	4-83
5-bin mailbox rear door assembly removal	4-84
5-bin mailbox left outer cover removal	4-85
5-bin mailbox left inner cover removal	4-85
5-bin mailbox right outer cover removal	4-86
5-bin mailbox right inner cover removal	4-87
5-bin mailbox top cover removal	4-88
5-bin mailbox media bin full actuator removal	4-89
5-bin mailbox sensor (pass through) removal	4-90
5-bin mailbox sensor (media bin empty) removal	4-91
5-bin mailbox controller card assembly removal	4-92
5-bin mailbox static brush mylar assembly removal	4-93
5-bin mailbox media bin fifth deflector removal	4-94
5-bin mailbox media bin first through fourth deflector removal	4-95
5-bin mailbox media bin extension assembly removal	4-96
5-bin mailbox deflector gate solenoid removal	4-96
5-bin mailbox transport solenoid removal	4-98
5-bin mailbox sensor (deflector gate HP) removal	4-99
250-sheet option tray assembly	4-101
250-sheet media tray assembly removal	4-101
250-sheet pick arm bracket assembly removal	4-102
250-sheet media out actuator removal	4-104
250-sheet frame assembly removal	4-104
250-sheet controller card assembly removal	4-106
550-sheet option tray assembly	4-107
550-sheet media tray assembly removal	4-107
550-sheet pick arm bracket assembly removal	4-108
550-sheet bellcrank recoil spring removal	4-109
550-sheet frame assembly removal	4-109
550-sheet controller card assembly removal	4-111
550-sheet option drive shaft with spring removal	4-113
Anti-tip latch assembly removal	4-113
High capacity input tray (HCIT)	4-114
High capacity input tray (HCIT) media tray assembly removal	4-115
High capacity input tray (HCIT) tray cover, front removal	4-116
High capacity input tray (HCIT) cover, rear removal	4-118
High capacity input tray (HCIT) cover, right removal	4-120
High capacity input tray (HCIT) cover, left removal	4-122
High capacity input tray (HCIT) anti-tip latch assembly removal	4-123
High capacity input tray (HCIT) drawer slide assembly removal	4-124
High capacity input tray (HCIT) tray lift drive motor assembly removal	4-125
High capacity input tray (HCIT) controller card assembly removal	4-126
High capacity input tray (HCIT) media size actuator assembly removal	4-127
High capacity input tray (HCIT) pick arm bracket assembly removal	4-130
High capacity input tray (HCIT) tray closed latch with spring removal	4-132
High capacity stacker rear door assembly removal	4-132
High capacity stacker right cover removal	4-134
High capacity stacker left cover removal	4-135
High capacity stacker media output bin assembly removal	4-136
High capacity stacker controller card cover panel removal	4-137
High capacity stacker switch (media bin HP) removal	4-138
High capacity stacker sensor (media bin full) assembly removal	4-139
High capacity stacker sensor (media bin full) bracket assembly removal	4-139
High capacity stacker controller card assembly (upper and lower) removal	4-140
High capacity stacker right frame removal	4-141
High capacity stacker left frame removal	4-142
High capacity stacker upper deflector gate removal	4-143
High capacity stacker sensor (pass through) removal	4-144
High capacity stacker left mounting bracket removal	4-146

High capacity stacker sensor (deflector gate HP) removal	4-147
Installing / Removing the RFID UHF option	4-148
Lower interface cable assembly removal	4-156
Media size actuator removal	4-157
Media tray catch spring removal	4-158
Media out actuator removal (models T652 and T654)	4-158
Media size actuator removal	4-159
Media tray catch spring removal	4-159
Media tray roller catch assembly removal	4-159
Output expander rear door assembly removal	4-161
Output expander left outer cover removal	4-161
Output expander left inner cover removal	4-162
Output expander right outer cover removal	4-162
Output expander right inner cover removal	4-163
Output expander media bin latch (left and right) removal	4-163
Output expander media output bin assembly removal	4-164
Output expander media bin full actuator removal	4-164
Output expander sensors (media bin full) assembly removal	4-165
Output expander sensor (media bin full) bracket assembly removal	4-166
Output expander controller card cover panel removal	4-166
Output expander controller card removal	4-168
Output expander sensor (pass through) removal	4-169
Output expander deflector gate removal	4-170
Output expander sensor (deflector gate HP) removal	4-171
SFP stapler assembly rear door assembly removal	4-172
SFP stapler assembly right cover removal	4-172
SFP stapler assembly left cover removal	4-173
SFP stapler assembly top cover removal	4-174
SFP stapler assembly handle cover removal	4-175
SFP stapler assembly LED sensor cover removal	4-176
SFP stapler assembly sensor (finisher bin media present) removal	4-177
SFP stapler assembly standard output bin LED and LED clear lens removal	4-178
SFP stapler assembly tamper drive belt removal	4-179
SFP stapler assembly tamper drive motor assembly removal	4-180
SFP stapler assembly media stack flap and media stack flap actuator removal	4-181
SFP stapler assembly stapler unit assembly removal	4-182
SFP stapler assembly paddle drive motor assembly removal	4-183
SFP stapler assembly sensor (media stack) removal	4-184
SFP stapler assembly sensor (paddle HP) removal	4-185
SFP stapler assembly sensor (stapler access door interlock) removal	4-186
SFP stapler assembly sensor (tamper HP left and right) removal	4-187
SFP stapler assembly sensor (bin full send) removal	4-188
SFP stapler assembly sensor (bin full receive) removal	4-189
SFP stapler assembly sensor (media in stapler) removal	4-189
SFP stapler assembly sensor (deflector HP) removal	4-190
Stapler/stacker controller card assembly removal	4-192
Sensor (HCIT tray raised HP) with cable assembly removal	4-192
Sensor (HCIT pass through) with cable removal	4-195
Sensor (pass through) with cable removal	4-196
Sensor (pass through) with cable removal	4-196
Tray roller catch assembly removal	4-196
Tray roller catch assembly removal	4-197
Upper interface cable assembly removal	4-197
Connector locations and connections	5-1
Connections	5-1
Preventive maintenance	6-1
Safety inspection guide	6-1

Lubrication specifications	6-1
Individual maintenance part expected life	6-1
Scheduled maintenance	6-2
Maintenance kit	6-2
Parts catalog	7-1
How to use this parts catalog	7-1
Assembly 1: Covers	7-2
Assembly 2: T650, T652, and T654 Operator panel	7-4
Assembly 3: T656dne Operator panel, MPF and smart card	7-6
Assembly 4: Drive motor assemblies and duplex	7-8
Assembly 5: Media path and ducts	7-10
Assembly 6: Printhead, charge, and transfer	7-12
Assembly 7: Pick arm assembly, trays, and MPF	7-14
Assembly 8: LVPS, fuser and electrical cables 1	7-16
Assembly 9: HVPS, system card, and electrical cables 2	7-18
Assembly 10: 250 Sheet option tray assembly	7-20
Assembly 11: 550 Sheet option tray assembly	7-22
Assembly 12: HCIT Sheet option tray assembly	7-24
Assembly 13: SFP stapler assembly #1	7-26
Assembly 14: SFP stapler assembly #2	7-28
Assembly 15: SFP stapler assembly #3	7-30
Assembly 16: SFP stapler assembly #4	7-32
Assembly 17: 5-bin mailbox #1	7-34
Assembly 18: 5-bin mailbox #2io	7-36
Assembly 19: High capacity stacker	7-38
Assembly 20: Output expander	7-40
Assembly 21: Envelope feeder and external duplex	7-42
Assembly 22: RFID UHF Option assembly	7-44
Assembly 23: Miscellaneous	7-45
Assembly 24: Power cords	7-47
Assembly 25: Universal trays and accessories	7-48
Index	I-1
Part number index	I-5

For the complete PDF manual
please visit www.LaserPros.com.

