

LEG REST

To lower the leg rest, push up on the lever located on the underside of the seat (Fig. 10). To raise, simply push up on the leg rest.



⚠ WARNING: Never allow your child to sit on the leg rest. This may result in injury to your child and/or damage to your Zooper. Children should always be properly seated with the safety harness fastened.

USING THE BRAKES

To engage the brakes, step down on each rear brake lever located between the two wheels. (Fig. 11). Always check that the brakes have fully engaged by pushing forward on the stroller to make sure it stays in place. Lift the brake levers with your foot to release the brakes.




⚠ WARNING: Always engage the both brakes when you are not holding onto the stroller and check that the brakes have been properly engaged as described above. Always engage the brakes when putting your child in, or taking your child out, of the stroller.

5


SWIVEL WHEELS

The swivel-locking lever is located on the back of the front wheel block where it meets the frame (Fig. 12). Push the lever up to allow the front wheels to swivel. To lock the wheels into a fixed position, push down on the locking lever and move the stroller forward. The wheels will lock automatically. The wheels should be locked in the fixed position when walking over uneven surfaces.

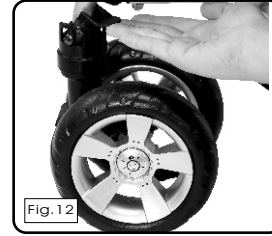

FULLY ENCLOSE THE CARRIAGE SPACE

Follow these steps to enclose the seat area whenever the backrest is fully reclined: First remove the armrest. Then lift leg rest fabric over and off the plastic leg rest extenders. Zip both sides of the leg rest fabric onto the sides to the seat fabric (Fig. 13). Zip down fully and completely. Secure the armrest back onto the stroller.

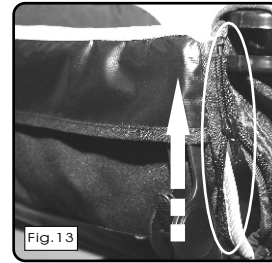


⚠ WARNING: Your child may slip into leg openings and strangle. Never use the stroller with the backrest fully reclined unless the leg rest fabric is fully and completely zipped together to the seat fabric and the canopy is properly snapped onto the seat and backrest.

6

SECURING INFANT CARRIER

It is possible your infant carrier will NOT be compatible with this stroller. Therefore, for first-time installation, evaluate according to these directions without your child in the carrier. To install the infant carrier, first be sure it has been removed from the car seat base. Then remove the armrest of the stroller and insert the thin adaptor bar just as you would the armrest (Fig. 14). Recline the backrest about 3/4 of the way down enough so that your carrier will fit level onto the stroller seat. Place the carrier onto the stroller so that the mounting notch of the infant carrier fits onto the adaptor bar. (Fig. 15), and the front of the carrier rests on the backrest. (If the mounting notch of your carrier is too small to fit onto the adaptor bar, then position the entire carrier between the adaptor bar, or armrest, and the backrest. As long as it fits level onto the seat and can be secured as described below, then it is still compatible with the stroller). The restraint safety strap attaches to the two metal D-shaped rings on either side of the seat belt. Place the restraint safety strap through the provided spaces on each side of the car seat (auto seatbelt path), or over the top of the carrier if your model does not have that opening. Now adjust the strap to tightly secure the carrier to the stroller. The tighter that you set this strap will directly affect how secure the car seat feels in the stroller. A well-tightened strap will be easily demonstrated by lifting the entire stroller and car seat as one solid unit, by the bar of the car seat.

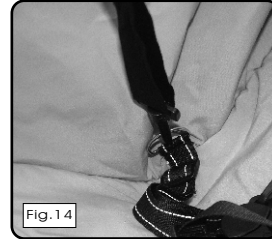


⚠ WARNING: Do not use an infant carrier if it does not secure to the stroller as described above. Any infant carriers rated for weights over 20 lbs are also not compatible with this stroller. Excessive weight may cause a hazardous unstable condition to exist.

⚠ WARNING: Only the following infant car seat models are compatible with this stroller: Graco - Snuggler, Peg Perego - Viaggio, Britax - Companion.

7

ADJUSTABLE HANDLE

To extend the handle, press the metal button located on the plastic tube brace just below the handle. With the button held down, pull the handle out into the desired Position (Fig. 16). There are two extension positions. To lower the handle, press the metal button as above and push the handle down.

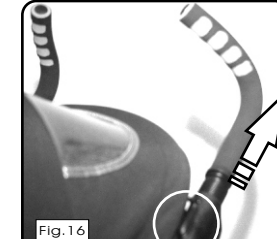




⚠ WARNING: Never hang bags of any kind or other items from the handle. This may cause the stroller to become unstable.

CLOSING THE STROLLER FOR TRAVEL OR STORAGE

Each time, before closing your stroller, check the following:

- Your child is clear of moving parts
- The rear brakes have been set
- The backrest is in the full, upright position
- The front wheels are secure in the locked mode
- The canopy is retracted
- All items have been removed from the basket
- Never attempt to fold or close your Zooper with your child inside

First release the primary lock by lifting the foot block up with your foot (Fig. 17). Then lift up on the secondary lock tab, just above the foot block, to release the frame. Then step down on the safety lock located on the right side of the stroller (Fig. 18). Push the handles forward and collapse the stroller down into the folded position (Fig. 19). Check to be sure the red frame lock secures to the locking pin.

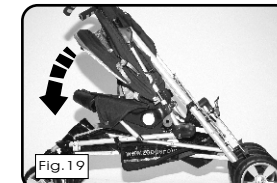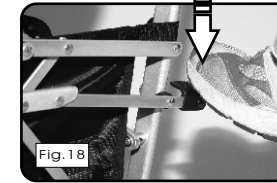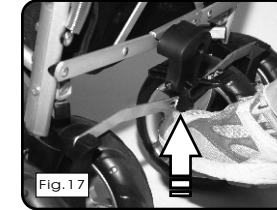

8



User Guide Hula BU828E/Z

⚠ WARNINGS

IMPORTANT CARE AND SAFETY INFORMATION

- Avoid serious injury from falling or sliding out, always use safety harness provided.
- Always engage the rear brakes when not holding onto your stroller.
- Never leave your child unattended.
- Never use the stroller near an open fire or exposed flame.
- Never allow the stroller to be used as a toy.
- Never allow more than one child at a time in the stroller.
- Never hang bags or other items from the handle or on the canopy. This may cause the stroller to become unstable.
- Never use the stroller on stairs or escalators.
- Do not overload the basket. Maximum load is 7 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- Do not overload the canopy pocket. Maximum load is 2 lbs. Excessive weight may create a hazardous unstable condition to exist.
- Before each use, check to make sure the stroller is set up properly and that all the wheels are properly and securely attached.
- This stroller is not recommended for use with a child over 55 lbs.
- This stroller is designed as a walking stroller. We do not recommend running, roller blading, or other such activities with this stroller.
- This stroller is a single stroller. Do not use any attachments that allow for a second child.
- It may be unsafe to use accessories other than those approved by the manufacturer or distributor.

MAINTENANCE

- Do not fold your stroller when wet.
- Machine wash removable seat and armrest covers using gentle cycle, cold water, and a mild detergent. The canopy can only be spot washed.
- Line dry fabric parts.
- Never use bleach when washing.
- Do not leave your stroller in direct sunlight for extended periods of time.
- Clean and lubricate all moving parts on the stroller frame and wheels as needed. Use only a penetrating silicon based lubricant.
- Regularly check for loose screws, broken parts, etc. Use only Zooper approved replacement parts available through the service centers listed below.
- Wipe off any sand, salt or other corrosive residue after each use where the stroller may be exposed to those elements.

1

IMPORTANT: READ THESE SAFETY INSTRUCTIONS CAREFULLY BEFORE USING YOUR STROLLER AND KEEP THEM FOR FUTURE REFERENCE. THE SAFETY OF YOUR CHILD DEPENDS ON IT.

Thank you for choosing Zooper.

UNLOCKING & OPENING THE FRAME




We recommend you choose a good floor surface. Your Zooper has a strong metal frame that could scratch hardwood floors or other sensitive surfaces. To open the stroller, first lift up on the red colored frame lock located on the left side of the stroller (Fig. 1). Be sure the frame lock detaches from the metal locking pin. Grasp the handle and pull back and up so that the stroller frame opens (Fig. 2). Step down on the foot block while pulling back on the handle so that the frame snaps open (Fig. 3).

⚠ WARNING: Be sure children are at a safe distance and cannot reach moving parts whenever opening or closing the stroller. Always make sure the stroller has opened fully by checking to see that the metal bars connecting the foot block to the frame are straight and parallel to the ground.

REAR WHEELS

To install the rear wheels, line up each wheel block with a rear leg tube (Fig. 4). The brake levers must be facing out, away from the stroller. Locate the spring lock buttons on the outside of the rear leg tubes. Make sure the buttons are coming out of the buttonholes and have not slipped inside the tube during shipping. If you are missing a spring lock, please contact the appropriate service center listed at the back of these instructions for replacement parts. Push the rear wheel block onto the rear frame leg until it clicks onto the spring lock button. Then repeat for the other wheel block. Check visually that the buttons have popped out of the small holes on the outside of the wheel assembly. Pull out on each wheel block to make sure that it has locked into place.

⚠ WARNING: Do not use stroller if the buttons do not properly pop out and lock the rear wheels in place. Contact the appropriate service center listed at the back of these instructions for replacement parts.

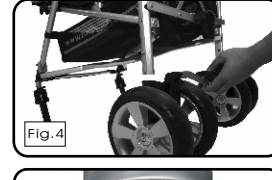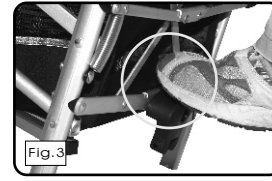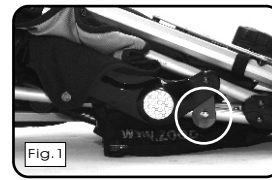

2

FRONT WHEEL BLOCKS

Line up each front wheel block with the front leg and push firmly together (Fig. 5). Always check to see that the wheels have been properly installed by pulling out on the wheel block. It should be locked to the front leg. To remove, push in on the looped metal retention clip located on the underside of the wheel block, and pull the wheel block off.

ARMREST




To install the armrest, pinch in and push up on the underside of the armrest clip (Fig. 6). Remove the clip completely. Slide the armrest into the slots and reinsert the clip. Snap the fabric crotch strap around the armrest. To open armrest from either end, pinch in on the clips as noted above and swing the armrest out. The entire armrest can be removed by pulling out both clips.

⚠ WARNING: Never pick up stroller by the armrest.

CANOPY

The canopy attaches onto the stroller frame above each side armrest (Fig. 7). Push firmly to install. Open the canopy by pushing down on the plastic side canopy braces. Be sure to snap the canopy to the sides of the seat and backrest fabric. Retract the canopy by first pulling up on the side braces then pushing the canopy hood back. The canopy can be converted to allow more air flow through the stroller. The canopy may also be used as a napper canopy. Locate the zipper on the rear rib of the canopy. When unzipped, the canopy will fall forward over the bumper bar, completely shading baby from the world. Unzip the lower half of the canopy from the upper half. This will leave a mesh cover that can snap to the back of the seat. To remove the canopy, first undo the snaps. Then press the release tabs, located on the plastic slots, while pulling up on the canopy shafts.


⚠ WARNING: Do not try to retract the canopy when the side canopy braces are fully open or with the sun visor extended. This may damage the canopy. Whenever the seatback is in the fully reclined position, make sure that the canopy snaps or mesh snaps are buttoned onto the back and sides of the seat fabric. Do not overload the canopy pocket. Maximum load is 2 lbs (1 kg). Excessive weight may create a hazardous unstable condition to exist.

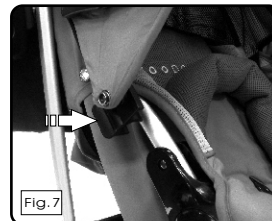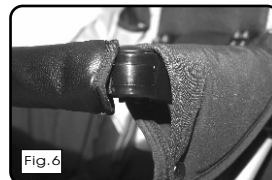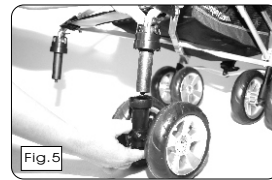

3

ADJUSTING THE SEATBACK


To lower the backrest, lift up on the plastic lever located in the middle of the seatback and move the seatback down into desired position. Then release the lever to secure the seatback (Fig. 8). To raise the backrest, push up on the back of the seat until it clicks into the desired position.

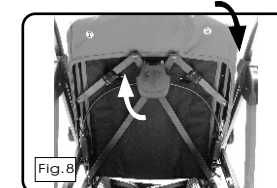

⚠ WARNING: Always keep your child in sight when making these adjustments. Check the fitting of the safety harness each time the backrest is adjusted to be sure a snug, yet comfortable fitting is maintained.

SAFETY HARNESS

Zooper provides a special 5-point harness safety system on all our strollers. Used properly, this harness will keep your child seated and safe. To secure your child in the harness, push buckles (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust slider (D) to fit snugly and comfortably around your child (Fig. 9). Follow the same procedure to adjust the shoulder straps. Always re-tighten the harness when your child is in a sit up or layback position.

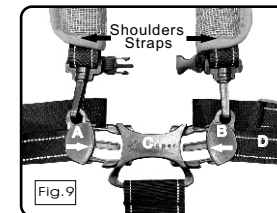

⚠ WARNING: Avoid serious injury or death from falling or sliding out. Always use the seat belt. Never leave your child unattended.

4



Zooper / USA
Lan Enterprises, LLC
10140 SW Allen Blvd., Suite E
Beaverton, OR 97005
Toll Free number: 1-888-742-9899
FAX: 503-352-0929
E-mail: info@zooper.com
Web: www.zooper.com

Zooper / Canada
Peter John M. Distributions, Inc.
88 SW Marine Dr.
Vancouver, BC
Canada
V5X 2R1
Tel: 1-888-597-0992
E-mail: info@zooperbabycanada.com