



Zooper / USA

Lan Enterprises, LLC
10140 SW Allen Blvd., Suite E
Beaverton, OR 97005
Toll Free number: 1-888-742-9899
FAX: 503-352-0929
E-mail: info@zooper.com
Web: www.zooper.com

Zooper / Canada

Peter John M. Distributions, Inc.
88 SW Marine Dr.
Vancouver, BC
Canada
V5X 2R1
Tel: 1-888-597-0992
E-mail: info@zooperbabycanada.com

 
 
INTERNATIONAL MODEL NUMBER: BU820X/T

CLOSING THE STROLLER FOR TRAVEL OR STORAGE

Each time, before closing your stroller, check the following:

- Your child is clear of moving parts
- The rear brakes have been set
- The backrest is in the full, upright position
- The front wheels are secure in the locked mode
- The canopy is retracted
- All items have been removed from the basket
- Never attempt to fold or close your Zooper with your Child inside

First release the primary lock by lifting the foot block up with your foot (Fig 12). Then lift up on the secondary lock tab, just above the foot block, to release the frame. Push the handles forward and collapse the stroller down into the folded position (Fig 13). Attach the frame lock (Fig 14).

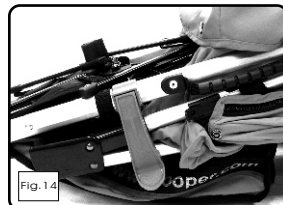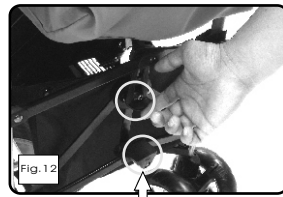

6

INTERNATIONAL MODEL NUMBER: BU820X/T

USING THE BRAKES

 
To engage the brakes, step down on break lever, (Fig. 10). The brake lever should be facing out. Always check that the brakes have fully engaged by pushing forward on the stroller to make sure it stays in place. Lift the brake lever with your foot to release the brakes.

WARNING: Always engage the brakes when you are not holding onto the stroller and check that the brakes have been properly engaged as described above. Always engage the brakes when putting your child in, or taking your child out, of the stroller.



SWIVEL WHEELS

The swivel-locking lever is located on the back of the front wheel block where it meets the frame (Fig. 11). Push the lever up to allow the front wheels to swivel. To lock the wheels into a fixed position, push down on the locking lever and move the stroller forward. The wheels will lock automatically. The wheels should be locked in the fixed position when walking over uneven surfaces.

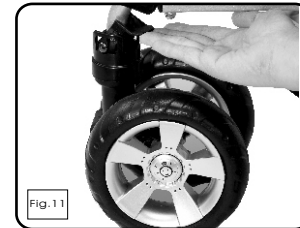

5



User Guide Twist BU820X/T

WARNINGS

IMPORTANT CARE AND SAFETY INFORMATION

- Avoid serious injury from falling or sliding out, always use safety harness provided.
- This stroller is designed for a child six months of age until the child weighs 55 lbs.
- This stroller is not suitable for use with newborns.
- This stroller is not compatible with any infant car seat carriers.
- Always engage both rear brakes when not holding onto your stroller.
- Never leave your child unattended.
- Never use the stroller near an open fire or exposed flame.
- Never allow the stroller to be used as a toy.
- Never allow more than one child at a time in the stroller.
- Never hang bags or other items from the handle or on the canopy. This may cause the stroller to become unstable.
- Never use the stroller on stairs or escalators.
- Do not overload the basket. Maximum load is 7 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- This stroller is not recommended for use with a child over 55 lbs.
- This stroller is designed as a walking stroller. We do not recommend running, roller blading, or other such activities with this stroller.
- This stroller is a single stroller, do not use any attachments that allow for a second child.
- It may be unsafe to use accessories other than those approved by the manufacturer or distributor.

MAINTENANCE

- Do not fold your stroller when wet.
- Machine wash removable seat and armrest covers using gentle cycle, cold water, and a mild detergent. Do not use bleach. The canopy can only be spot washed.
- Do not use dryer to dry fabric parts.
- Do not leave your stroller in direct sunlight for extended periods of time.
- Clean and lubricate all moving parts on the stroller frame and wheels as needed.
- Use only a penetrating silicon based lubricant.
- Regularly check for loose screws, broken parts, etc. Use only Zooper approved replacement parts available through the service centers listed below.
- Wipe off any sand, salt or other corrosive residue after each use where the stroller may be exposed to those elements.

1

INTERNATIONAL MODEL NUMBER: BU820X/T

IMPORTANT: READ THESE SAFETY INSTRUCTIONS CAREFULLY BEFORE USING YOUR STROLLER AND KEEP THEM FOR FUTURE REFERENCE. THE SAFETY OF YOUR CHILD DEPENDS ON IT.

Thank you for choosing Zooper.

 
 
 
 
UNLOCKING & OPENING THE FRAME

We recommend you choose a good floor surface. Your Zooper has a strong metal frame that could scratch hardwood floors or other sensitive surfaces. To open the frame, first pull back on the frame lock which connects the rear leg to the handle (Fig. 1). Grasp the handle and pull back and up so that the stroller frame opens (Fig. 2). Step down on the foot block while pulling back on the handle so that the frame snaps open (Fig. 3).

WARNING: Be sure children are at a safe distance and cannot reach moving parts whenever opening or closing the stroller. Do not open the frame by stepping down on the brake lever as this may result in damage to your Zooper. Always step down on the foot block to open the stroller. Always make sure the stroller has been opened fully by checking to see that the metal bars connecting the foot block to the frame are straight and parallel to the ground.

FRONT WHEEL BLOCKS

Line up each front wheel block with the front leg and push firmly together (Fig 4). Always check to see that the wheels have been properly installed by pulling out on the wheel block. It should be locked to the front leg. To remove, push in on the looped metal retention clip located on the underside of the wheel block, and pull the wheel block off.

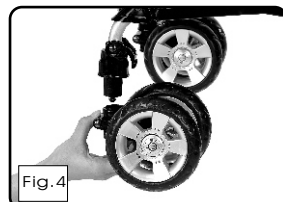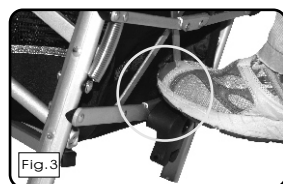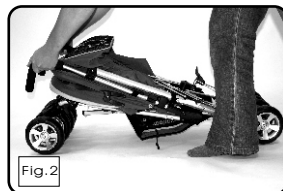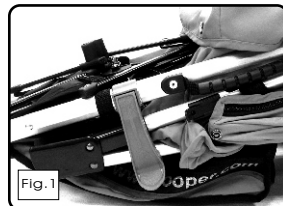

2

INTERNATIONAL MODEL NUMBER: BU820X/T

REAR WHEELS

 
To install the rear wheels, line up each wheel block with each rear leg tube (Fig. 5). The brake levers must be facing out, away from the stroller. Locate the spring lock buttons on the outside of the rear leg tubes. Make sure the buttons are coming out of the button holes and have not slipped inside the tube during shipping. If you are missing a spring lock, please contact the appropriate service center listed at the back of these instructions for replacement parts. Push the rear wheel block onto the rear frame leg until it clicks onto the spring lock button. Then repeat for the other wheel block. Check visually that the buttons have popped out of the small holes on the outside of the wheel assembly. Pull out on each wheel block to make sure that it has locked into place.

WARNING: Do not use this stroller if the buttons do not properly pop out and lock the rear wheels in place. Contact the appropriate service center listed at the back of these instructions for replacement parts.

ATTACHING THE CANOPY

To attach the canopy, insert the plastic shafts into the plastic slots located on the outside of the main stroller tubes (Fig 10). They are inserted from the bottom up. Lift up to check that each side is locked into position. Open the canopy by pushing down on the plastic side canopy braces. Be sure to snap the canopy to the seat and backrest fabric whenever the seat is fully reclined. Retract the canopy by first pulling up on the side braces, then pushing the canopy hood back. The canopy can be converted to allow more air flow through the stroller. Unzip the lower half of the canopy from the upper half. This will leave a mesh cover that can snap to the back of the seat. The canopy may also be used as a napper canopy. Locate the zipper on the rear rib of the canopy. When unzipped, the canopy will fall forward over the bumper bar, completely shading baby from the world. To remove the canopy, first undo the snaps. Then pull the release tabs outward and slide the canopy down, off the slots.

WARNING: Do not try to retract the canopy when the side canopy braces are fully open or with the sun visor extended. This may damage the canopy.

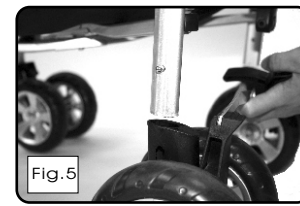

3

INTERNATIONAL MODEL NUMBER: BU820X/T

ADJUSTING THE SEATBACK

To recline the backrest, push down simultaneously on the backrest tabs located on either side of the stroller (Fig. 7). Move the seat into desired position. To raise the backrest, simply push up on the back of the seat until it is in the desired position.

WARNING: Always keep your child in sight when making these kinds of adjustments. Check the fitting of the safety harness each time the backrest is adjusted to be sure a snug, yet comfortable fitting is maintained.

SAFETY HARNESS

 
Zooper provides a special 5-point harness safety system. Used properly, this harness will keep your child seated and safe. To secure your child in the harness, push buckles (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust slider (D) to fit snugly and comfortably around your child (Fig 8). Follow the same procedure to adjust the shoulder straps. Always retighten the harness when your child is in a sit up or layback position.

WARNING: Avoid serious injury or death from falling or sliding out. ALWAYS use the seat belt. NEVER leave your child unattended.

LEG REST

To lower the leg rest, push up on the lever located on the underside of the seat (Fig 9). Move into the down position. To raise, simply push up on the leg rest.

WARNING: Never allow your child to sit on the leg rest. This may result in injury to your child and/or damage to your Zooper. Children should always be properly seated with the safety harness

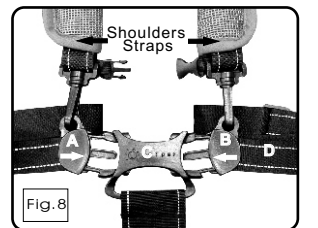

4