



EC9841

A & B Series Nitrogen Oxides Analyser

Service Manual

Revision: E

www.ecotech.com

Table of Contents

MANUAL HISTORY	3
SAFETY REQUIREMENTS	4
SERVICE AND SPARE PARTS	5
1. 0 INSTALLATION	6
1.1 INITIAL CHECK	6
1.1.1 Remove the Top Cover	6
1.1.2 Service Switch	7
1.1.3 Inspect the Components	7
1.1.4 Reinsert Dislodged Boards	8
1.1.5 Cable Connections	8
2. 0 THEORY OF OPERATION	9
2.1 INSTRUMENT DESCRIPTION	10
2.1.1 Power/Microprocessor Module	11
2.1.2 Sensor Module	14
2.2 OPERATION MODES	17
2.2.1 Startup Mode	17
2.2.2 Measure Modes	18
3. 0 MAINTENANCE	20
3.1 MAINTENANCE SCHEDULE	20
3.2 REPLACEABLE PARTS	21
3.2.1 Expected Life Span of Consumables	23
3.3 MAINTENANCE PROCEDURES	23
3.3.1 Check Particulate Filter	25
3.3.2 Particulate Filter Replacement Procedure (A Series)	25
3.3.3 Clean Fan Filter	26
3.3.4 Exhaust Scrubber (B Series)	26
3.3.5 DFU Replacement	26
3.3.6 Sintered Filter Replacement	27
3.3.7 PMT Desiccant Pack Replacement	28
3.3.8 PMT Cooler Replacement	29
3.3.9 Reaction Cell Cleaning	32
3.3.10 Pressure Transducer Handling	35
3.3.11 Leak Test Procedure	36
3.4 HIDDEN MENU	37
3.4.1 Pressure & Flow Calibration sub-menus	38
3.5 FLOW/PRESSURE CALIBRATION	39
3.5.1 Setup	39
3.5.2 Pressure Calibration	39
3.5.3 Flow Calibration	41
3.6 PREPROCESSOR ID ENTRY	42
3.7 FIRMWARE UPDATE	43
4. 0 TROUBLESHOOTING	46
4.1 DC POWER SUPPLY VOLTAGES	46
4.2 TROUBLESHOOTING THE EC9841 ANALYZER	46
4.2.1 Preprocessor Pots Menu	47
4.2.2 Valve Test Menu	47
4.2.3 Event Log	48
4.2.4 Instrument Status	49

4.2.5 System Temperatures	50
4.2.6 System Faults	50
4.3 TEST FUNCTIONS	52
4.3.1 Optic.....	52
4.3.2 Preamp.....	52
4.3.3 Electric.....	52
4.3.4 Use of Diagnostic Modes.....	52
4.4 TROUBLESHOOTING GUIDE.....	53
INDEX	I

Manual History

This manual is the combination of two previous versions which have now been merged into one document to cater for the continuing development of the EC9800 series analyzers. The original manuals were:

- ML9841A Service Manual, PN: 98412026, Rev. T, September 1998.
- ML9841B Service Manual, PN: 98417005, Rev. K, July 1999.

The scope of this new manual covers the following analyzers:

- EC9841A Nitrogen Oxides Analyzer, (A-Series), PN: 98413000-104.
- EC9841B Nitrogen Oxides, (B-Series), PN: 98417000-1.

Both of the instruments are manufactured by Ecotech P/L in Australia and support the new (SMD) Microprocessor Board (Part number 98000063-4). This manual is current for firmware version 1.11 and above.

This manual should only be used in conjunction with *EC9841 Nitrogen Oxides, Operation Manual PN: 98417600 Rev E, June 2005*.

Ecotech Manual ID: MAN 0013
Manual PN: 98417601.
Current Revision: E
Date Released: May 2007.
Description: EC9841 Nitrogen Oxides, Service Manual, A & B Series.

Revision History

Rev	Date	Summary	Affected Pages
A	January 2004	New Release for new Microprocessor Board. A & B series Combined. Based on original manuals.	All
B	February 2004	Changes to menu options and structure.	All
C	June 2005	Changed to updated EC manual	All
E	May 2007	Updated specifications, language and links within pdf manual created.	All

Safety Requirements

- To reduce risk of personal injury caused by electrical shock, follow all safety notices and warnings in this documentation.
- This equipment should *always* be used with a protective earth installed.
- The EC9841 is compliant with the requirements of EN61010-1 A2:1995, Safety Requirements for Equipment for Measurement, Control, and Laboratory Use.
- If the equipment is used for purposes not specified by the manufacturer, the protection provided by this equipment may be impaired.
- Replacement of any part should only be carried out by qualified personnel, only using parts specified by the manufacturer. Always disconnect power source before removing or replacing any components.
- The Ozone Generator contains dangerous levels of voltage. Make sure the power is disconnected when opening the generator unit. If unfamiliar with the ozone generator refer to figure 8 in the service manual.
- This unit generates Ozone, for this reason, the exhaust pump must be connected through a charcoal scrubber to remove excess ozone.
- Surfaces marked with a “Caution, Hot Surface” (see internationally recognized symbols on page 4) sticker may get hot and deliver burns. Measure the temperature on the surface before making any contact with it.

Equipment Rating

- 100-120/220-240V~ ±10%
- 50/60 Hz
- 250 VA max
- FUSE: 5/3.15A T 250V
- All wiring must be in accordance with local norms and be carried out by experienced personnel.

Service and Spare Parts

For world wide customer service & spare parts contact ECOTECH:

Address: Ecotech Pty Ltd
1492 Ferntree Gully Road
Knoxfield
Australia. VIC 3180

Phone: +61 1300 364 946

Fax: +61 1300 688 763

Email - Service: ecotech@ecotech.com.au

Email - Spare Parts: parts@ecotech.com.au

Web: www.ecotech.com.au

1.0 Installation

1.1 Initial Check

Verify that the serial number label on the documentation and the serial number(s) on the analyzer match.

Check to make certain your instrument arrived undamaged. If you find damage, report it as described in the preface, on the page titled *Claims for Damaged Shipments and Shipping Discrepancies* in the Operation manual.

Analyzers are shipped ready to power up. Occasionally, however, rough handling during shipment causes dislodged PC boards, disconnected cables, or incorrectly positioned switches. Verify that your instrument is in operating condition by performing the following procedure.

1.1.1 Remove the Top Cover

Grasp the front top corners of the front panel and pull forward. The panel will pop loose and pivot forward. See Figure 1. The top cover retaining hardware is then visible as shown in Figure 2. Use a screwdriver to unscrew the two captive screws. When the two captive screws are loosened, slide the cover backward about 4 inches and lift the top cover straight up.

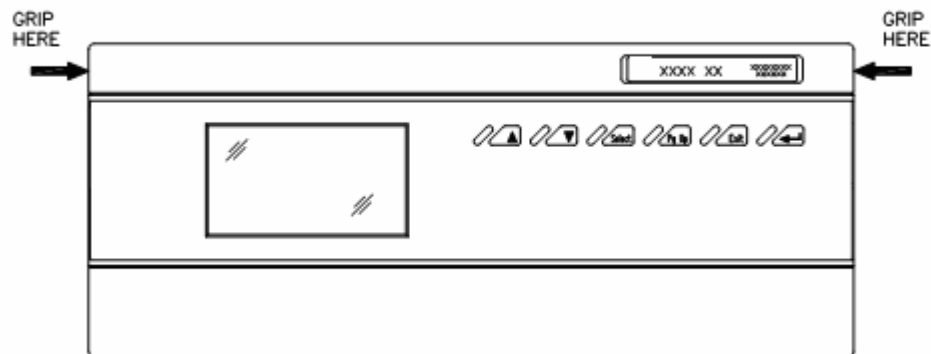


Figure 1. Opening the Front Panel

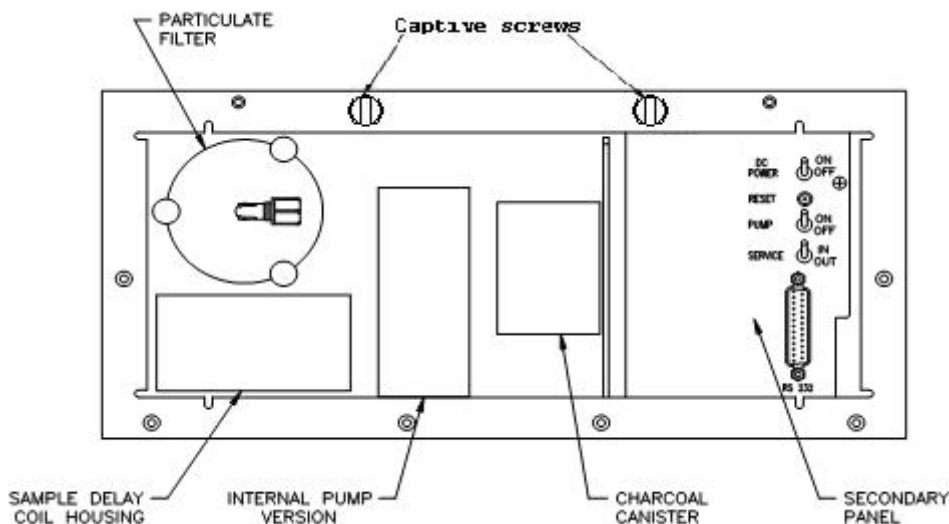


Figure 2. The Secondary Panel (A series)

1.1.2 Service Switch

Opening the front panel allows a view of the secondary panel where four switches are visible. The position of the toggle switches for operating mode is:

DC Power	ON
Pump	ON
Service	IN

The Reset switch is not a toggle switch and is only activated when pressed. It resets the microprocessor. For the EC9841 the pump switch is only applicable if an internal pump has been installed. Most instruments use an external pump to give better vacuum.

When in the OUT position, the Service switch sets the `OUT OF SERVICE` bit in the 50-pin I/O interface and in the status word from the serial port. The OUT position has no other effect on the operation or validity of the data obtained from the analyzer. When the Service switch is set from OUT to IN, the instrument returns to the normal operating conditions.

1.1.3 Inspect the Components

Verify that the components were not damaged in shipping. If any PC boards are dislodged or cables disconnected, follow the instructions below.

1.1.4 Reinsert Dislodged Boards

The bottom edge of the boards must be held in place by the guides. The top of the boards must be attached to the metal bulkheads by the plastic or metal studs with spring tips.

1.1.5 Cable Connections

The cable connectors and the board connectors must be matched securely in place for correct connection. The red indicator on each cable must be positioned at the arrowhead mark on the board connector. Make the connection by pressing the cable connector into the mating connector until a click is heard. Then, fold the retainers inward to secure the connection (see Figure 3).


 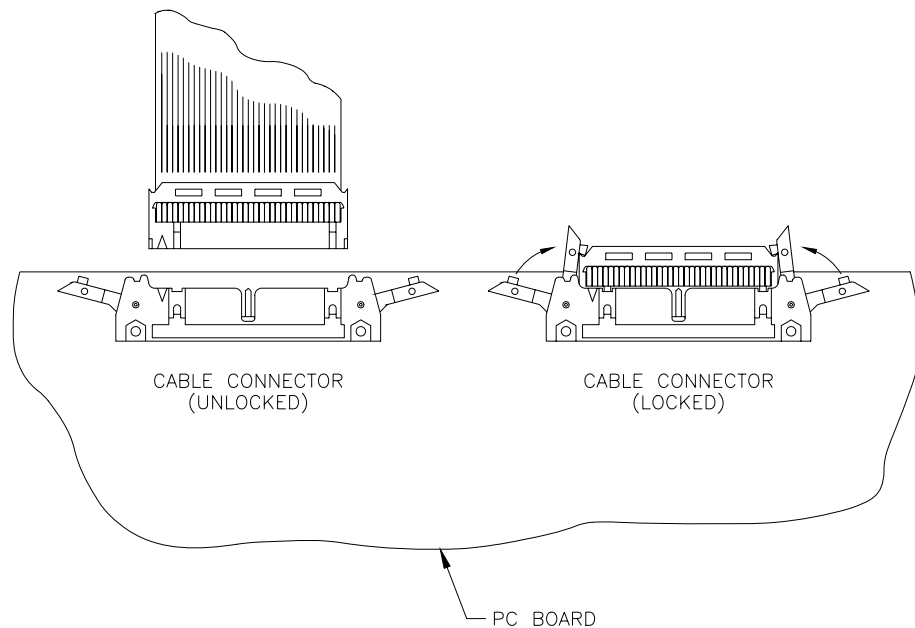


Figure 3. Cable Connections

2.0 Theory of Operation

The EC9841 analyzer uses gas-phase chemiluminescence detection to perform continuous analysis of nitric oxide (NO), total oxides of nitrogen (NO_x), and nitrogen dioxide (NO₂). The EC9841 design represents an advance in nitrogen oxides analysis technology achieved primarily by using adaptive microprocessor control of a single measurement channel. The instrument consists of a pneumatic system, an NO₂-to-NO converter (molycon), a reaction cell, detector (PMT), and processing electronics.

The analysis of nitrogen oxides by chemiluminescence is generally acknowledged to be the best direct measurement technique. The method is based on the luminescence from an activated molecular NO₂ species produced by the reaction between NO and O₃ in an evacuated chamber. The NO molecules react with ozone to form the activated species NO₂* according to the reaction mechanism:



As the activated species NO₂* reverts to a lower energy state, it emits broad-band radiation from 500 to 3000 nm, with a maximum intensity at approximately 1100 nm. Since one NO molecule is required to form one NO₂* molecule, the intensity of the chemiluminescent reaction is directly proportional to the NO concentration in the sample. The PMT current is then directly proportional to the chemiluminescence intensity.

In order to measure the zero offset of the instrument, a background measurement is performed every 70 seconds by diverting the sample flow from the reaction cell to the cell bypass line. This measurement is electronically subtracted from all subsequent measurements to achieve very stable measurements.

The simplified flow diagram is illustrated in Figure 4 below.

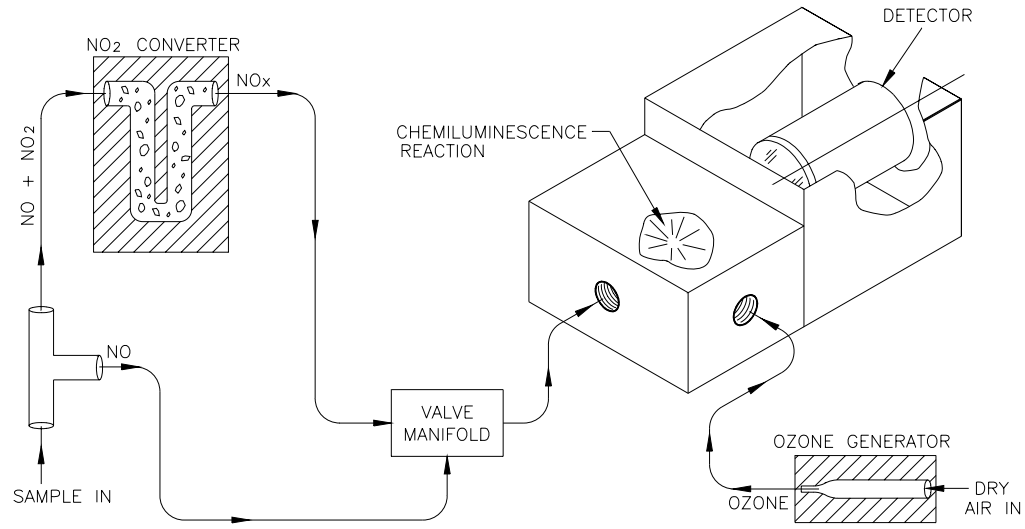


Figure 4. Flow Diagram

The EC9800 analyzer family uses the advanced digital Kalman filter. This filter provides the best possible compromise between response time and noise reduction for the type of signal and noise present in ambient air analyzers and their application.

The Ecotech implementation of the filter enhances the analyzer's measurement method by making the time constant variable, depending on the change rate of the measured value. If the signal rate is changing rapidly, the instrument is allowed to respond quickly. When the signal is steady, a long integration time is used to reduce noise. The system continuously analyzes the signal and uses the appropriate filtering time. Ecotech analyzers have passed USEPA equivalency testing using this advanced signal filtering method.

2.1 Instrument Description

The instrument is designed in a modular format consisting of a power/microprocessor module and a sensor module. The power/microprocessor module contains the power supply, voltage regulators, and the system microprocessor. The sensor module contains all components necessary to measure the pollutant gas. The slight variations between the A and B series analyzers are illustrated using system block diagrams (Figure 5 & Figure 6) and major component layout diagrams (Figure 7 & Figure 8).

2.1.1 Power/Microprocessor Module

The power/microprocessor module can be described in three sections: the power supply, the voltage regulator, and the microprocessor.

2.1.1.1 Power Supply

The power supply is a self-contained unit housed in a steel case. It is designed to meet UL, VDE, CSA, and other regulatory requirements. It converts 99 to 264 VAC 50/60 Hz to 12 VDC power for distribution within the analyzer. The power supply also furnishes a 250 msec power extension in the event of power failure to allow the computer to store data before the power failure can affect it.

2.1.1.2 Voltage Regulator

The voltage regulator board regulates and distributes the different voltages needed throughout the system: 12 VDC to +5 VDC for the digital circuitry and 12 VDC to ± 10 v for analog circuitry. An additional +15 VDC supply is present to power the microprocessor display supplies and analog output circuits. The voltage regulator also furnishes a 300 msec power extension in the event of power failure to allow the computer to store data before the power failure can affect it.

2.1.1.3 Microprocessor

The microprocessor board contains a battery backed clock/calendar and an onboard 16-bit microprocessor (MC68HC12) operating at 16 MHz. The microprocessor board is the control center for input and output apparatus such as the 2 inch by 4 inch liquid crystal display (LCD), keyboard switches, the serial ports, and the 50-pin I/O connector on the rear panel. The 50-pin I/O connector input accepts control lines from the rear panel and sends status and failure signals to solid state relay drivers. Support circuitry for the liquid crystal display includes a -20 V power supply and digitally adjusted potentiometers for contrast level.

All analog voltages from the sensor assembly are digitized by the analog-to-digital (A/D) converter for microprocessor use. Digital-to-analog (D/A) conversion of three channels is used to send 0 to 20 mA analog signals to the 50-pin I/O connector.

The microprocessor has electrically erasable ROMs which store the operating program and internally logged data. Program upgrades can be easily made through the serial port. The Service and Reset switches are located on the front of the board and are accessible when the top is removed or when the front panel is opened. The microprocessor also has provisions for USB and optional TCIP connections through the rear panel.

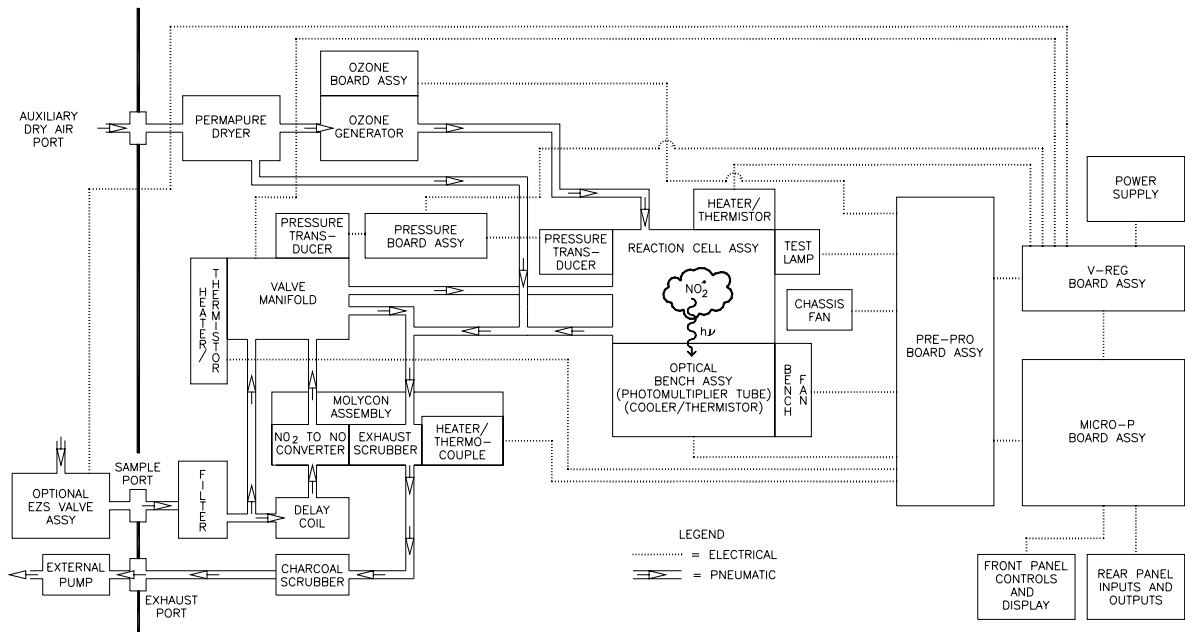


Figure 5. System Block Diagram (A Series)

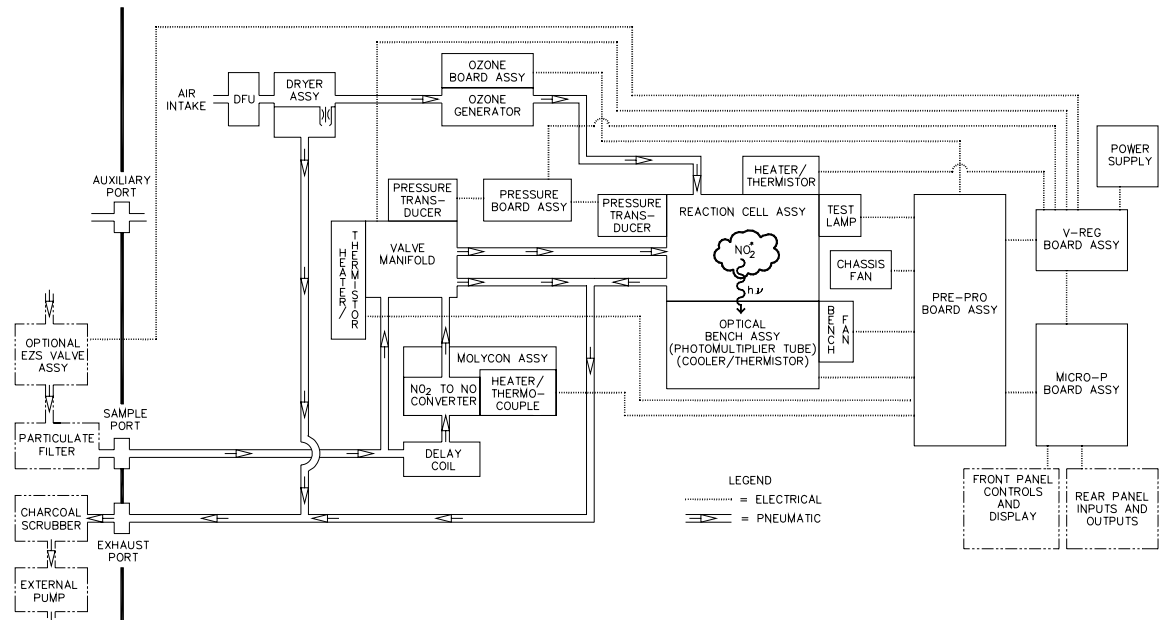


Figure 6. System Block Diagram (B Series)

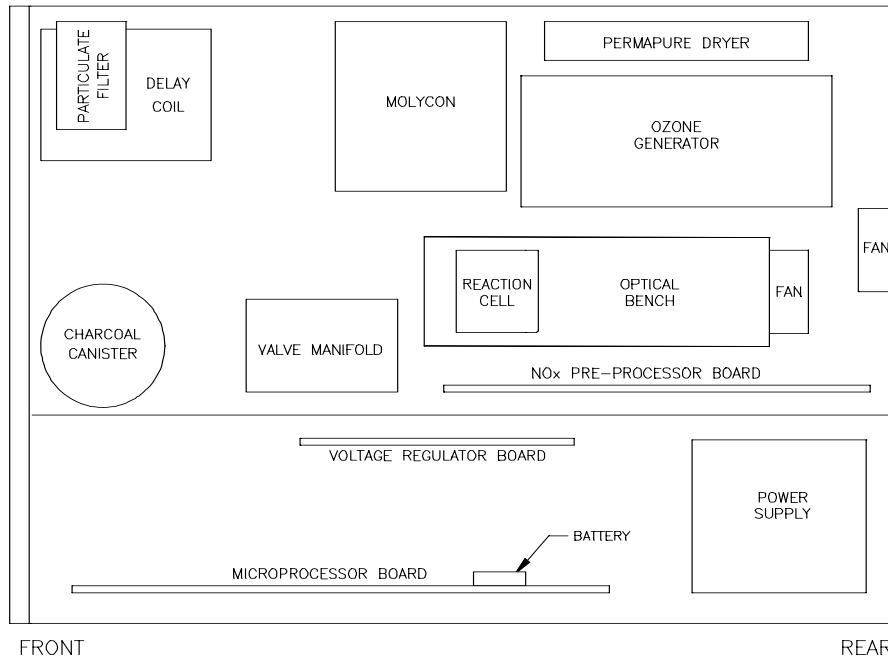


Figure 7. Major Components (A Series)

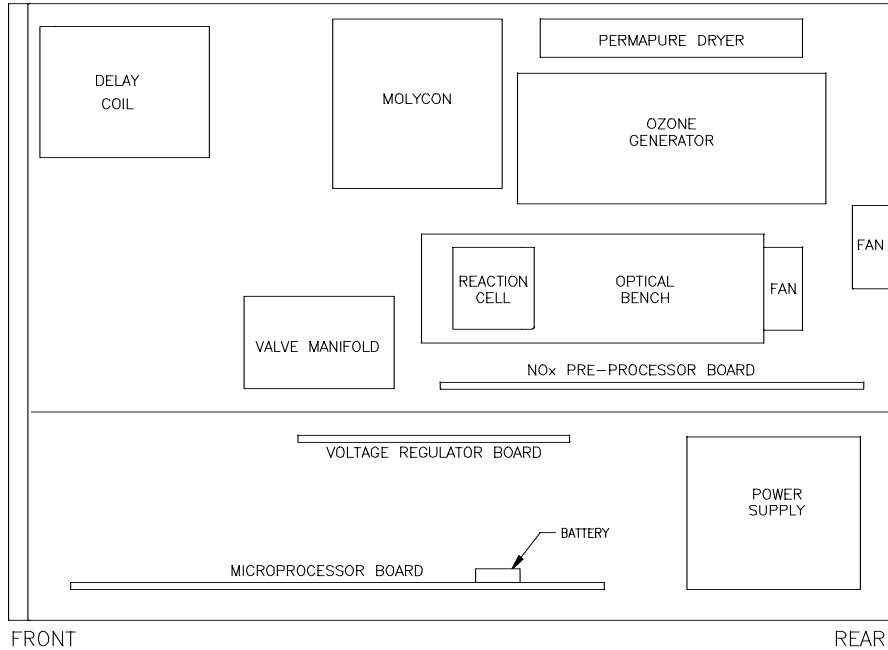


Figure 8. Major Components (B Series)

2.1.2 Sensor Module

The sensor module comprises three areas of description: pneumatics, optics, and electronics.

2.1.2.1 Pneumatics

The pneumatic system continuously supplies sample air to the reaction cell at a constant rate, allowing the sample to be measured before exiting the analyzer. See Figure 9 & Figure 10 for the pneumatic diagram.

The pump pulls a strong vacuum that draws sample air into the inlet and through the particulate filter. The sample flows both directly to the valve manifold (NO port) and through a sample delay coil and the molycon to the valve manifold (NO_x port). Within the valve manifold the sample then flows through the critical orifice which maintains constant flow and strong vacuum in the reaction cell. The sample is selected to either come from the NO port or from the NO_x port to the reaction cell via the sample switching valves. Sample then flows to the reaction cell for measurement and out to the external exhaust scrubber and pump.

The EC9841 performs a dynamic auto-zero of the instrument, by diverting the sample past the reaction cell to the cell bypass line. This results in a background measurement of the remaining reaction signal.

- *Particulate Filter.* The particulate filter is designed to remove particles larger than 5 microns and to expose the sample to only nonreactive materials of Kynar, Teflon, and Viton. The filtering agent is a 47 mm diameter, 5 micron filter. This filter is not supplied with the B series analyzer and must be purchased as an option.

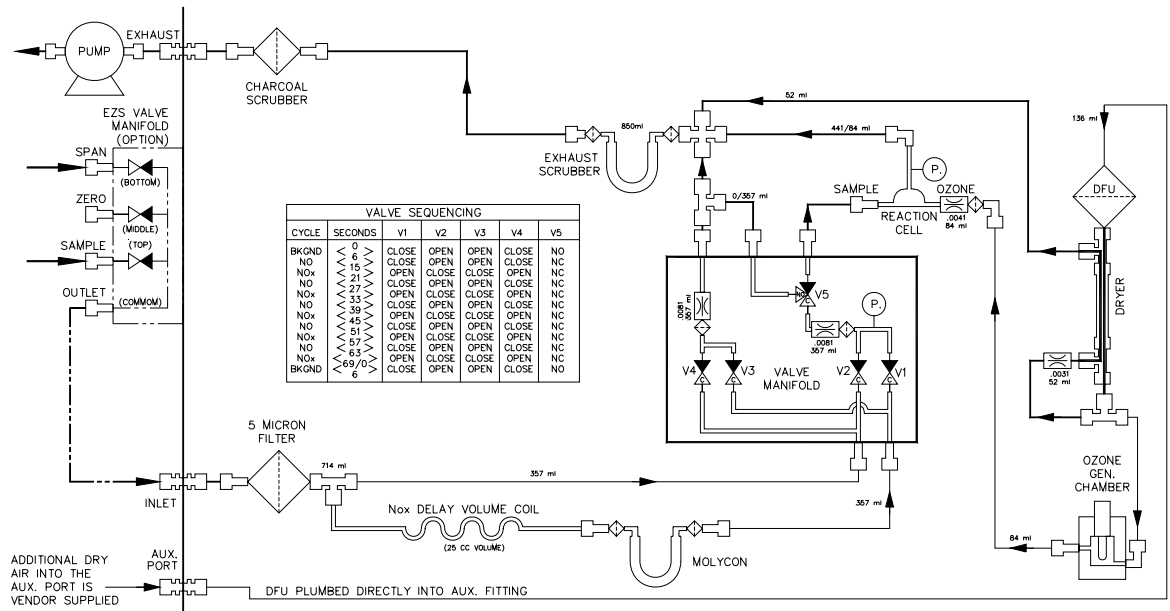


Figure 9. Pneumatic Diagram (A Series)

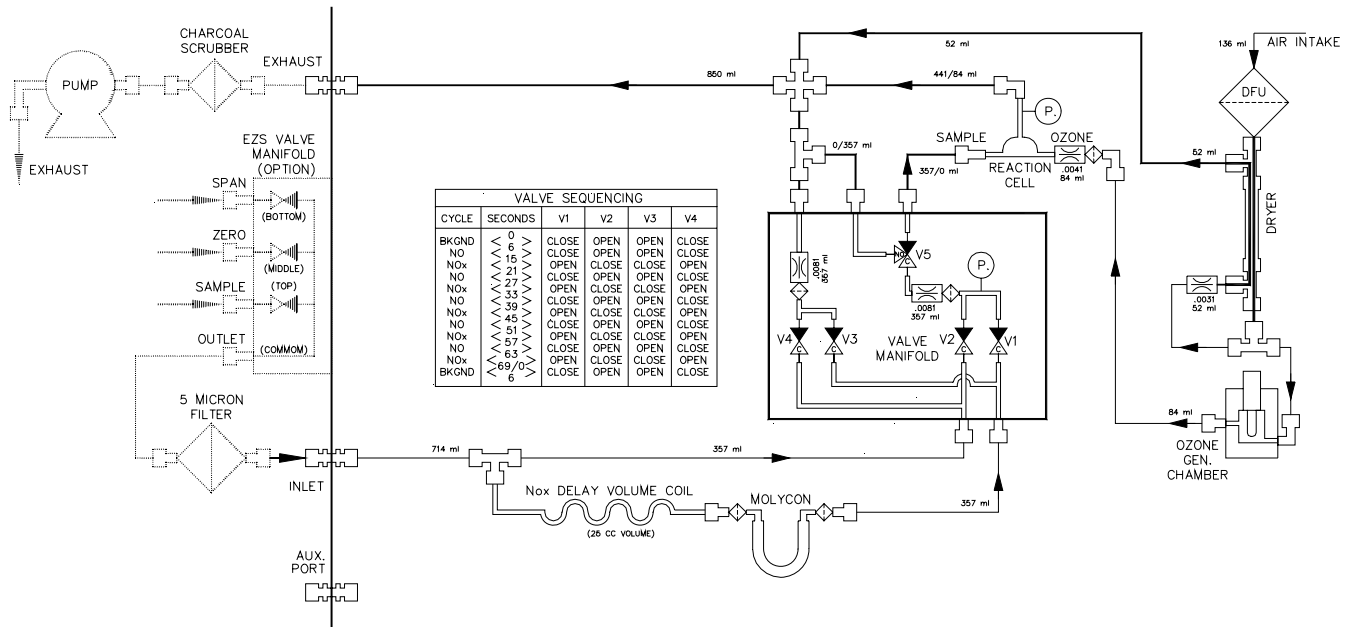


Figure 10. Pneumatic Diagram (B Series)

- *Delay Loop.* The delay volume loop allows the analyzer to measure NO and NO_x from the same physical sample. As sample is drawn directly into the reaction cell for NO, it is also drawn into the delay loop upstream of the molycon. This sample will remain resident in this loop until the NO_x measurement cycle, where the sample will be pulled from this loop, through the molycon, and into the reaction cell for measurement. This helps minimize artifact anomalies from dissimilar measurement samples.
- *Molycon Converter.* The EC9841 analyzer uses a molybdenum converter for reducing NO₂ to NO. Molybdenum reacts with NO₂ at near 315° C to form molybdenum oxide and NO. At this temperature, other nitrogen compounds such as ammonia are not oxidized to NO.
- *Valve Manifold.* The valve manifold controls all of the pneumatic switching of the NO and NO_x gas samples for the measurement and background cycles and the sample and bypass flow control orifices. The manifold also contains a pressure transducer and pressure PCA to support the transducers. As the critical orifices and the pressure transducer are temperature-sensitive, the valve manifold is temperature-controlled.
- *Pressure Transducers.* Two pressure transducers are present in the EC9841. One is in the manifold which measures the pressure upstream of the critical orifices (ambient pressure). The other transducer is located in the reaction cell downstream of the critical orifices (gas pressure). Sample flow rate is calculated by measuring the upstream (ambient) pressure of the critical sample orifice.
- *Pump.* The external pump pulls a strong vacuum to maintain constant flow and optimum instrument measurement. The nature of the chemilluminiscent reaction requires a strong vacuum be present in the reaction cell for satisfactory measurement.

2.1.2.2 Optics

Chemilluminiscent reaction between NO and O₃ emits broad-band radiation. This radiation is passed through the optic filter to the photomultiplier tube (PMT). The PMT detects the radiation and converts it to a current which is directly proportional to the chemilluminiscent intensity.

- *Reaction Cell.* The cell is designed to optimize signal-to-noise ratio. Its size, gas mixing scheme, and shape are optimized specifically for the side-on-PMT. The reaction cell is heated and controlled to approximately 50° C. The reaction cell also contains the ozone flow orifice and the pressure transducer which measures cell pressure.

- *Optical Bandpass Filter.* The colored glass optical filter limits the light reaching the PMT to the frequency of interest for the NO reaction.
- *Photomultiplier Tube (PMT).* The cooled PMT detects an amount of light proportional to the concentration of NO present in the measurement cell. The PMT is connected to an integrated high voltage power supply (HVPS)/preamp.

2.1.2.3 Electronics

- *Preprocessor.* The preprocessor contains circuitry to amplify low level DC from the photomultiplier (PMT) preamp, a PMT high voltage control, a thermal electric (TE) cooler control circuit, two heater control circuits (Rx cell and molycon), miscellaneous logic to generate test signals and control the ozone generator.
- The DC circuitry consists of a DC amplifier and signal conditioning circuit. The controls include an input potentiometer to set the input gain of the circuit and a variable gain amplifier to maximize the dynamic range of the measurement channel, all under control of the microprocessor.
- The TE cooler circuit controls the PMT to 10° C, while heater circuits control the reaction cell to 50° C and the molycon to 315° C. Test signals are generated for built in diagnostics. The control for the ozone generator is a pass-through signal from the microprocessor.
- *Pressure PCA.* The pressure PCA conditions the signal from both pressure transducers. Calibration data for the transducers is electronically stored in an EAROM on the Pressure PCA. (A SERIES ONLY)
- *PMT High Voltage Supply and Preamplifier.* This is a single component within the PMT housing. Its function is to supply high voltage to the PMT and to amplify the photocurrent signal from the PMT. (A SERIES ONLY)

2.2 Operation Modes

The analyzer operates in a number of different measurement modes. These modes include startup, measurement, and auto-zero modes. Following is a description of each of the operating modes.

2.2.1 Startup Mode

When the instrument is initially powered up, several components in the instrument are allowed to warm up prior to operation. During this time data is reported but should not be considered valid until the `START-UP SEQUENCE`

ACTIVE message is no longer displayed. In addition the ozonator will not turn on until flow is sensed and converter temperature is above 250° C. This process typically requires about 60 minutes.

2.2.1.1 Quick-Start Routine

If the analyzer power is removed for less than two minutes, the full automatic startup routine is replaced by a quick start routine. The analyzer is returned to its last known operating parameters and normal operation is immediately restored. This allows the analyzer to rapidly return to measurement mode and keeps data loss to a minimum. If power is lost for greater than two minutes, a full automatic restart is performed.

2.2.2 Measure Modes

The EC9841 is a continuous measurement stream-switch device. It is constantly switching the measurement stream between NO and NO_x channels at six second intervals. In addition approximately every 70 seconds the auto-zero (background) routine is performed. The current measurement channel can be observed on the main display. The following modes will be displayed:

NO SAMPLE FILL	CELL FILLING WITH NO SAMPLE
NO SAMPLE MEASURE	NO MEASUREMENT IN PROCESS
NOX SAMPLE FILL	CELL FILLING WITH NOX SAMPLE
NOX SAMPLE MEASURE	NOX MEASUREMENT IN PROCESS
BACKGROUND FILL	CELL PURGING SAMPLE FOR AUTO-ZERO
BACKGROUND MEASURE	AUTO-ZERO MEASUREMENT IN PROCESS
BACKGROUND PURGE	CELL PURGING ZERO SAMPLE

A full measurement cycle consists of both the NO and NO_x measurement routines. After each full measurement cycle the two resultant measurements are processed to determine NO and NO_x concentrations, which are then compared to determine the raw NO₂ concentration.

The background cycle allows for an automatic zero correction to eliminate PMT dark current and cell contamination offsets from the PMT. During background the sample is switched past the reaction cell, and only O₃ is allowed to enter the cell. The resultant reaction level is measured and subtracted from subsequent NO and NO_x calculations.

2.2.2.1 Zero

Zero measure allows the sample to be switched to a zero air source either through the EZS valves or from the IZS module. Processing of the signal is identical to measurement processing; the only difference is the source of the sample stream.

2.2.2.2 Span

Span measure allows the sample to be switched to a span gas source either through the EZS valves or from the IZS module. Processing of the signal is identical to measurement processing; the only difference is the source of the sample stream.

2.2.2.3 AZS Cycle

The analyzer can be placed in an AZS cycle mode where the sample stream is automatically switched to zero, then span, then back to sample. For further information on the AZS cycles, refer to the *EC9841 Operation Manual*.

3.0 Maintenance

3.1 Maintenance Schedule

The following outlines a periodic maintenance schedule for the EC9841 analyzer. This schedule is based on experience under normal operating conditions, and may need to be modified to suit specific operating conditions. It is recommended that this schedule be followed in order to maintain reliable, long-term operation of the analyzer.

Interval ¹	Item	Procedure	Section
Weekly	Inlet Particulate Filter	Check/Replace	Service Manual:- 3.3.1
	Event Log / System Faults	Check	Service Manual:- 4.2.3 & 4.2.6
	Precision Check	Check	Operation Manual:- 2.4
Monthly	Fan Filter	Check/Clean	Service Manual:- 3.3.3
	Zero / Span Calibration	Perform	Operation Manual:- 2.4
	Clock	Check	Operation Manual:-2.3.3
	Instrument Status	Check	Service Manual:- 4.2.4
3 Monthly	Converter Efficiency	Check	Operation Manual:-3.8
6 Monthly	PMT Desiccant Packs	Replace ²	Service Manual:- 3.3.7
	Exhaust Scrubbers	Recharge	Service Manual:- 3.3.4
	Multi-point Calibration	Perform	Operation Manual:- 3.2
1 Year	DFU Filter	Replace	Service Manual:- 3.3.5
	Sintered Filter	Replace	Service Manual:- 3.3.6
	Leak Check	Perform	Service Manual:- 3.3.11
	Flow Calibration	Check / Calibrate	Service Manual:- 3.5
2 Year	Clean Reaction Cell	Clean	Service Manual:- 3.3.9

¹ Suggested intervals for normal operation and actual intervals will vary depending upon application. The user can refer to this table as a guideline, but should develop a maintenance schedule to suit their specific requirements.

² Humid conditions may necessitate more frequent replacement.

3.2 Replaceable Parts

EC9841 Analyzer Spare Parts Requirements			
Description	Series	Part Number	Level
Filter, sintered (3 required)	A & B	002-024900	1
Filter unit, disposable	A & B	036-040180	1
O-ring, orifice and filter (3 required)	A & B	25000419-3	1
Desiccant, 5 gram pack (4 required)	A & B	26000260	1
Charcoal, activated, 2 pound bulk container	A & B	850-056500	1
Filter element, 5 micron, consumable (50 each)	A & B	98000098-1	1
Molycon assembly, NO ₂ to NO converter	A	9841017	2
Molycon assembly, NO ₂ to NO converter	B	98415207	2
O-ring, scrubber	A	025-030850	3
O-ring, desiccant access cap	A & B	25000422	3
O-ring, reaction cell housing	A & B	25000423	3
O-ring, reaction cell optical filter	A & B	25000426	3
O-ring, manifold plug	A & B	25000447-008	3
Extraction tool, minifit connectors	A & B	29000141-2	3
Tube, side-on, photomultiplier	A & B	57000010	3
Orifice, 4 mil	A & B	844-012600	3
Orifice, 8 mil (2 required)	A & B	844-012602	3
Pump, external, 115V/60 Hz	A & B	884-017300	3
Pump, external, 100V/50 Hz	A & B	884-017301	3
Pump, external, 230V/50 Hz	A & B	884-017302	3
Pump, external, 110V/50 Hz	A & B	884-017303	3
Thermistor assembly	A & B	885-071600	3
PCA, Voltage Regulator	A & B	98000056	3
Display/switch assembly	A & B	98000057SP	3
PCA, 50-Pin I/O	A	98000066-2	3
PCA, Microprocessor (SMD)	A & B	98000063-4	3
PCA USB Board Assembly	A & B	98007502	3
Power supply, 115/230 VAC to 12 VDC	A & B	98000142	3
Service kit, pump	A & B	98000242	3
Filter, optical, reaction cell	A & B	98410012	3
PCA, Preprocessor	A & B	98410033-2	3

EC9841 Analyzer Spare Parts Requirements			
Description	Series	Part Number	Level
Heater/thermistor assembly, 12-inch	A & B	98410070-2	3
Ozone generator and housing assembly	A & B	98410121-2	3
PCA, Valve Manifold Pressure/Temperature	A & B	98412007SP	3
Valve manifold assembly	A & B	98412021SP	3
HVPS and preamplifier assembly, photomultiplier	A & B	98412028-2-SP	3
Cooler, thermoelectric	A & B	98412028-3-SP	3
Thermistor assembly	A	98412028-4-SP	3
Transducer assembly, pressure	A & B	98412033SP	3
Dryer assembly, PermaPure	A & B	98412046	3

Level 1: General maintenance supplies and expendables such as filters, O-rings, lamps, etc.

Level 2: Critical items that are known from experience to have a higher failure rate, such as pumps, heaters, converters, valves, and circuit boards.

Level 3: Other miscellaneous items not included in Level 1 or 2. This level includes other spare parts that are not expected to fail over a given time frame.

Components marked with shading are essential components which need to be kept on hand at all times.

EC9841 Analyzer Spare Parts Requirements Options and Accessories		
Description	Series	Part Number
Pump, external, 115V/60 Hz, 4 slpm at 20 inches Hg	B	884-017300
Pump, external, 110V/50 Hz, 4 slpm at 20 inches Hg	B	884-017301
Pump, external, 230V/50 Hz, 4 slpm at 20 inches Hg	B	884-017302
Pump, external, 110V/50 Hz, 4 slpm at 20 inches Hg	B	884-017303
Rack mount kit with slides	A & B	98000036-2
PCA, 50-Pin I/O	B	98000066-2
Battery power option, 12 VDC	A & B	98000115
Filter, particulate, sample inlet, 5 micron	B	98000210-1
Filter kit, particulate, sample inlet, 5 micron	A	98000211-1
50-pin connector and shell kit	A & B	98000235-1
Valve manifold kit, external zero/span (EVS)	A & B	98300087
Scrubber, charcoal	B	98415105-7

EC9841 Analyzer Spare Parts Requirements Options and Accessories		
Description	Series	Part Number
EC9841 Operation Manual	A & B	98417600
EC9841 Service Manual	A & B	98417601
Manifold maintenance kit	A & B	98412021-KIT2
Reaction cell maintenance kit	A & B	98412027-KIT2

3.2.1 Expected Life Span of Consumables

Component	Minimum	Typical
Molycon	6 months*	1 to 2 years

3.3 Maintenance Procedures

Following is a list of routine maintenance procedures which may be required through the life of the analyzer.

Recommended equipment to perform maintenance:

- Toolbox
- Oscilloscope
- Digital multimeter (DMM)
- Computer or remote data terminal and connection cable for RS232 communication
- Pressure transducer (absolute) and connection tubing, calibrated in torr
- Flowmeter (2 slpm nominal)
- Wire strippers
- Soldering iron
- Minifit extraction tool
- Orifice removal tool
- Assortment of 1/4" and 1/8" tubing and fittings
- Test zero air source
- Test span gas source
- Leak tester.

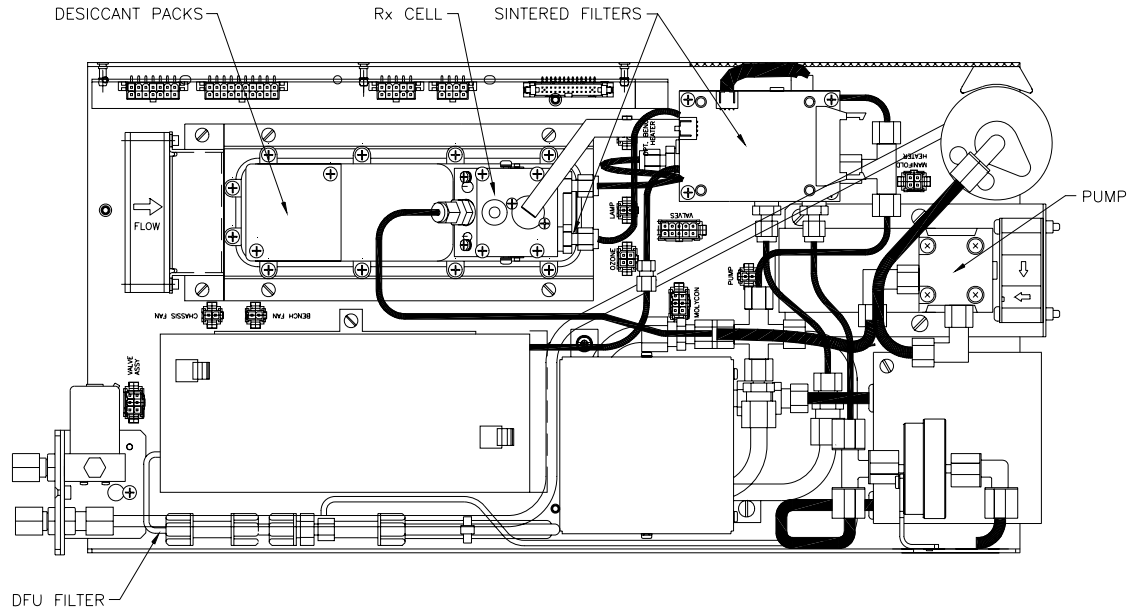


Figure 11. Routine Maintenance Components (A Series)

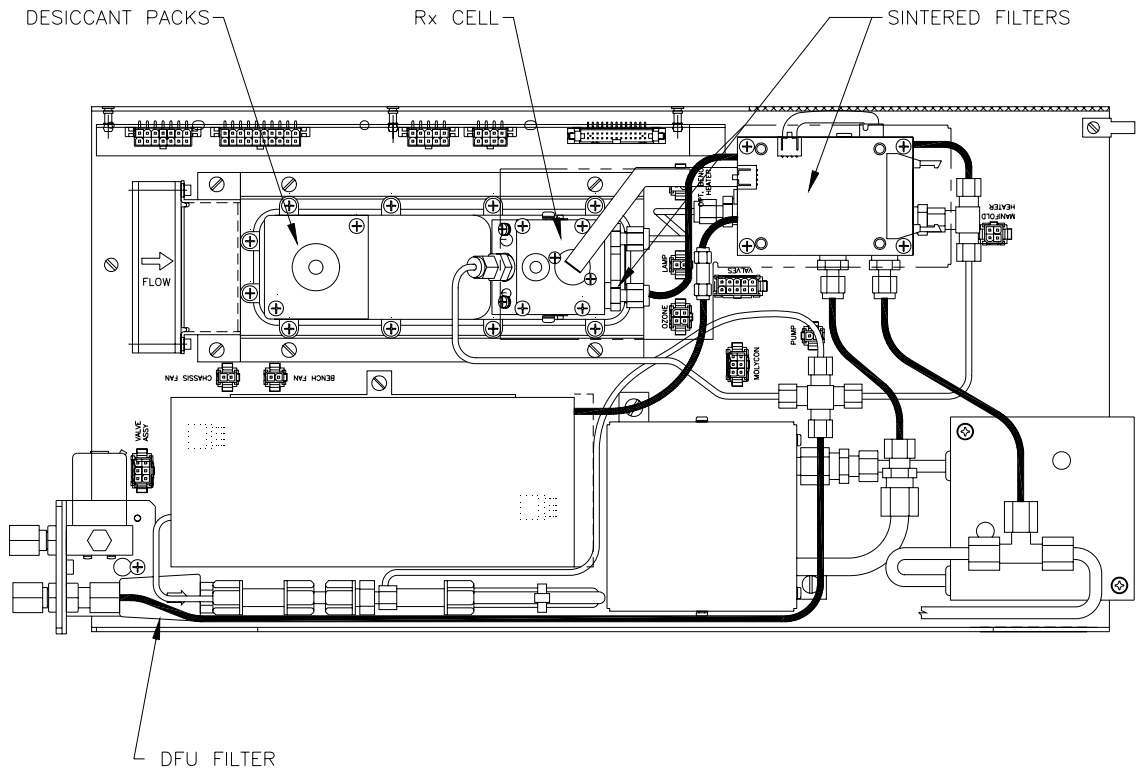


Figure 12. Routine Maintenance Components (B Series)

3.3.1 Check Particulate Filter

The inlet filter prevents particulates from entering the pneumatic components of the EC9841. Contamination of the filter can result in degraded performance of the EC9841, including slow response time, erroneous readings, temperature drift and various other problems.

Several factors affect the filter replacement schedule. In the springtime, for example, the filter might accumulate pollens and dust. Man-made environmental changes such as construction dust might indicate more frequent change, or a climate where dry, dusty conditions are normal might dictate more frequent filter replacement than climates with few natural pollutants.

Determining the schedule for changing the filter is best developed by monitoring the filter at weekly intervals for the first few months, then adapting the schedule to fit the specific site.

3.3.2 Particulate Filter Replacement Procedure (A Series)

Use Figure 13 as reference when performing the filter replacement procedure.

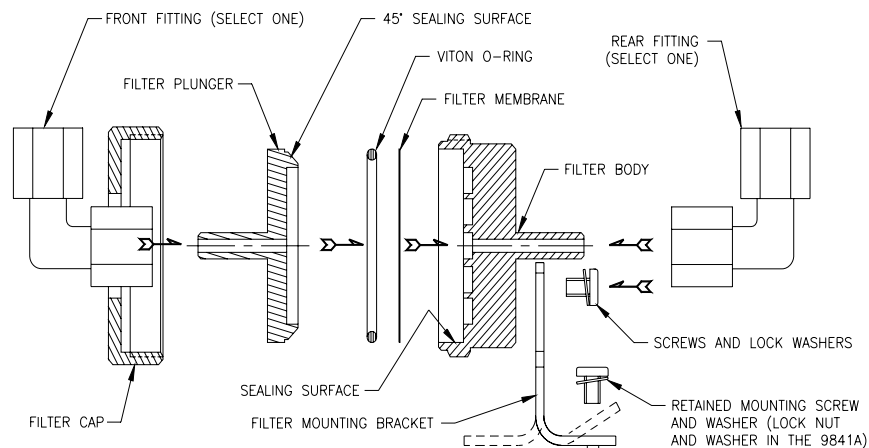


Figure 13. Particulate Filter Replacement

1. Open the front panel to access the service switches and particulate filter. Disconnect the external pump.
2. Completely unthread the filter cap by turning it counterclockwise.

3. Pull the filter plunger out of the body, carefully resting it in a secure place. The O-ring and filter membrane are now exposed inside the filter body.
4. Remove, inspect, and wipe down the O-ring. Replace the O-ring only if damaged.
5. Remove, discard, and replace the old filter membrane.
6. Reinstall the O-ring over the new membrane, reinstall the plunger, and **hand-thread** the cap back into place by turning it clockwise. Do not use tools.
7. Return the Pump to ON.
8. Close the front panel.

3.3.3 Clean Fan Filter

The fan filter is located on the rear of the analyzer. If this filter becomes contaminated with dust and dirt, it may affect the cooling capacity of the analyzer. The fan screen should be cleaned by removing it from the analyzer and blowing it out with compressed air, or by cleaning it with mild soapy water and air drying.

3.3.4 Exhaust Scrubber (B Series)

The optional exhaust scrubber is essential to the reliability of the pump. If the scrubber material expires it will allow O₃ to reach the pump which will severely damage the seals of the pump. The material in the scrubber should be replaced periodically to ensure the longevity of the pump.

Warning

After removal of power from the EC9841B, the exhaust should be maintained for approximately 15 minutes to purge the exhaust of ozone and prevent possible combustion of the charcoal.

3.3.5 DFU Replacement

The zero air entering the permature drier is filtered by a disposable filtration unit (DFU) to prevent contamination of the pneumatics and Rx cell. Failure of the DFU could result in loss of dry air to the O₃ generator, damaging the generator. The DFU is located inside the rear corner of the sensor module. To replace the filter:

Warning

After removal of power from the EC9841, the exhaust should be maintained for approximately 15 minutes to purge the exhaust of ozone and prevent possible combustion of the charcoal.

1. Turn off the analyzer and turn off the pump.
2. Remove and retain the Kynar nut from the end of the DFU.
3. Remove and replace the DFU, ensuring that direction of flow is correct (from rear to front of analyzer).
4. Reinstall the Kynar nut, ensuring that the ferrules are properly installed in the nuts.
5. Turn on the pump.

3.3.6 Sintered Filter Replacement

The sintered filter is used as a final filter to prevent contamination and blockage of the sample orifice. If the filter becomes plugged, it will result in loss of sample flow through the analyzer. Typically, replacement of the sintered filter alone will be sufficient to maintain operation, but occasionally the orifices should be checked and cleaned to ensure proper operation.

Warning

After removal of power from the EC9841, the exhaust should be maintained for approximately 15 minutes to purge the exhaust of ozone and prevent possible combustion of the charcoal.

Caution

Take extreme care not to damage the pressure transducer assemblies on top of the reaction cell and on the side of the valve manifold.

1. Turn off the analyzer and disconnect the pump.
2. Remove the four screws securing the pressure PCA to the valve manifold and disconnect and remove the PCA. Refer to Figure 14.
3. Disconnect the electrical and pneumatic fittings from the manifold assembly, loosen the captive screws securing the manifold to the standoffs, and remove the manifold from the analyzer. It may be helpful to mark the pneumatic fittings prior to removal to ensure they are reconnected to the proper port.

4. Refer to Figure 14 for sintered filter locations in the manifold. Replace the sintered filters. If desired the orifices may be replaced, cleaned with alcohol or cleaned in an ultrasonic bath.
5. Reassemble the manifold assembly in reverse order of the above steps.

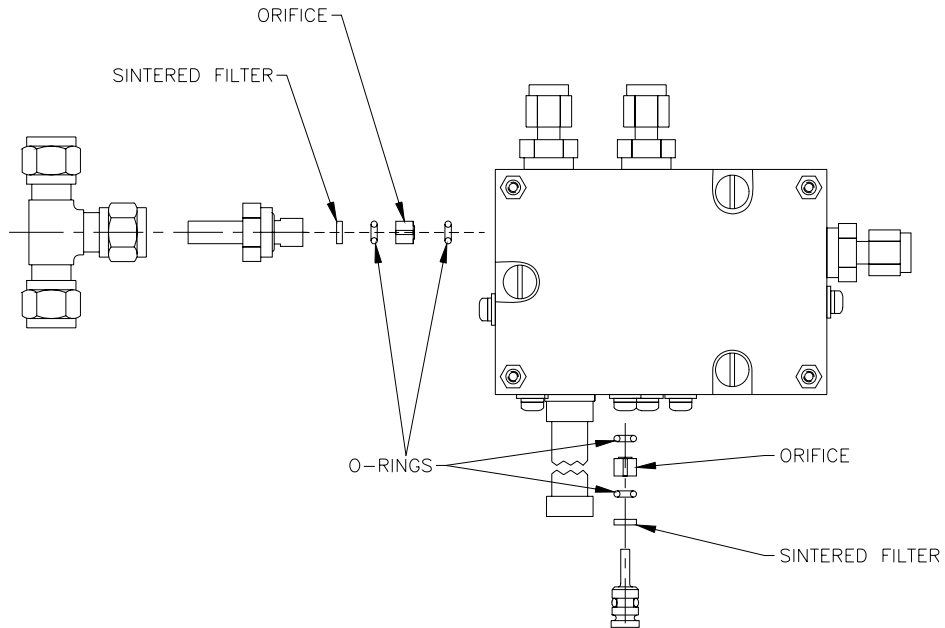


Figure 14. Sintered Filter/Orifice Removal

3.3.7 PMT Desiccant Pack Replacement

The PMT housing contains two desiccant packs to prevent condensation on the cooled PMT housing. If the desiccant expires it will result in corrosion of the PMT housing and premature cooler failure. It is recommended that the desiccant bags be changed at least annually. If moisture is detected inside the housing or the desiccant packs are saturated, the interval should be reduced. To change the desiccant packs, perform the following:

Warning

After removal of power from the EC9841, the exhaust should be maintained for approximately 15 minutes to purge the exhaust of ozone and prevent possible combustion of the charcoal.

Caution

Because the PMT is extremely sensitive to light, it is essential that before opening the PMT assembly to make sure that the analyzer is switched off.

In addition, even when the analyzer is switched off is very important to cover the PMT at all times so that no direct light reaches its window.

1. Turn the analyzer off and disconnect power.
2. Using a Phillips head screwdriver, remove the desiccant pack access cap from the PMT housing. Refer to Figure 12.
3. Remove the old desiccant packs and replace with new. Do not attempt to dry and reuse the old packs.
4. Inspect the inside of the PMT housing (by touch or with an inspection mirror) to check for moisture inside the housing. If moisture is detected inside the housing the desiccant pack replacement interval should be decreased.
5. Reinstall the desiccant cap by gently twisting and pressing the cap back into the PMT housing. It may help to apply a small amount of lubricant to the O-ring on the desiccant cap. Secure with two screws.

Caution

Do not attempt to insert the desiccant cap into the PMT housing by using the screws to pull the cap into place. This will damage the PMT housing.

6. Reconnect power and restart the analyzer.

3.3.8 PMT Cooler Replacement**Warning**

After removal of power from the EC9841, the exhaust should be maintained for approximately 15 minutes to purge the exhaust of ozone and prevent possible combustion of the charcoal.

Caution

Because the PMT is extremely sensitive to light, it is essential that before opening the PMT assembly to make sure that the analyzer is switched off.

In addition, even when the analyzer is switched off is very important to cover the PMT at all times so that no direct light reaches its window.

1. Turn off analyzer power and the pump.
2. Remove the Rx cell/PMT housing assembly from the analyzer.
3. Remove the desiccant access cap and disconnect the electrical connector.
4. Remove the 12 screws that secure the PMT housing cover to the heatsink and lift the cover off the heatsink. It may be necessary to loosen the crossbar or mounting bracket to remove the PMT housing cover.
5. Disconnect the HVPS/preamp from the PMT and remove the PMT from its housing. Refer to Figure 15.

Important

Note the orientation of the red and black cooler wires as they relate to the PMT housing/heatsink. The new cooler must be installed in the same way.

6. From the underside of the heatsink, remove the two screws that secure the PMT cold block to the heatsink and remove the cold block. Refer to Figure 15.
7. Remove the cooler from the heatsink and disconnect the cooler from the electrical connector.

Note

If corrosion or moisture is detected inside the PMT housing assembly, reduce the desiccant replacement interval (replace the desiccant more often).

8. Clean the cooler facings of the heatsink and PMT cold block and recoat with a thin layer of heatsink compound (Dow Corning 340 or equivalent).
9. Install the new cooler in place on the PMT housing, being careful to align it in the notch on the PMT cold block. Ensure the orientation of the red/black wires on the cooler (when viewed from the wire side of the cooler) are red on the right and black on the left.
10. Place the PMT cold block and cooler on the heatsink and secure with the screws from the underside of the heatsink. Ensure the shoulder washers and neoprene washers are properly in place around the screws.

Caution

Alternately tighten each of the screws securing the PMT cold block to the heatsink approximately 1/4 turn until the PMT housing and heatsink are secured flush with the cooler face and the screws are snug. Do *not* over tighten.

11. Connect the cooler wires to the electrical connector, red wire to pin 13 and black wire to pin 12.
12. Reinstall the PMT housing cover, ensuring that the O-ring on the base of the cover remains in place.
13. Install two *new* desiccant packs in the PMT housing.
14. Reconnect the desiccant access cap electrical connector and reinstall the access cap.

Caution

Do not attempt to install the desiccant cap into the PMT housing by using the screws to pull the cap into place. This will damage the PMT housing. A small amount of lubricant on the desiccant cap O-ring will facilitate its installation.

15. Reassemble the Rx cell/PMT housing and reinstall in the analyzer.

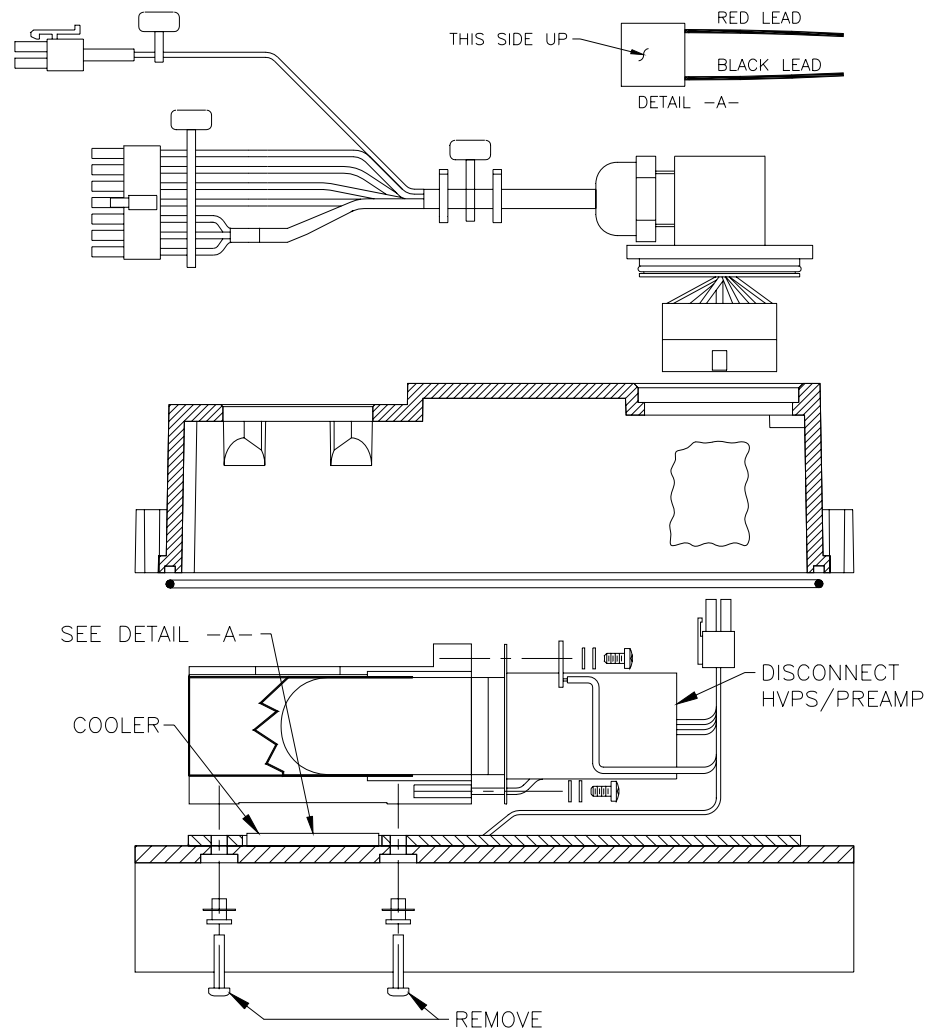


Figure 15. Cooler Replacement

3.3.9 Reaction Cell Cleaning

As O₃ reacts with the contaminants in the air it will begin to deposit a film on the walls and optical filter within the cell. This will result in decreased sensitivity of the analyzer and increase the gain required to read NO. The reaction cell should be cleaned periodically to remove deposits and restore sensitivity.

Caution

Take extreme care not to damage the pressure transducer assembly on top of the reaction cell.

Warning

After removal of power from the EC9841, the exhaust should be maintained for approximately 15 minutes to purge the exhaust of ozone and prevent possible combustion of the charcoal.

1. Turn off the analyzer and disconnect the pump.
2. Disconnect the electrical and pneumatic fittings from the reaction cell, remove the four screws that secure the cell to the PMT housing, and remove the reaction cell from the PMT housing.
3. Refer to Figure 16 and remove the optical filter from the cell.
4. Clean the filter and the inside of the cell with high purity isopropyl alcohol and reassemble the cell.
5. Refer to Figure 16 and remove and replace the sintered filter from under the O₃ inlet fitting. Be sure to use new O-rings. If desired the orifice can be removed and cleaned or replaced.
6. Reassemble the reaction cell in reverse order of the above steps.
7. Recalibrate the analyzer (refer to the *EC9841 Operation Manual*).

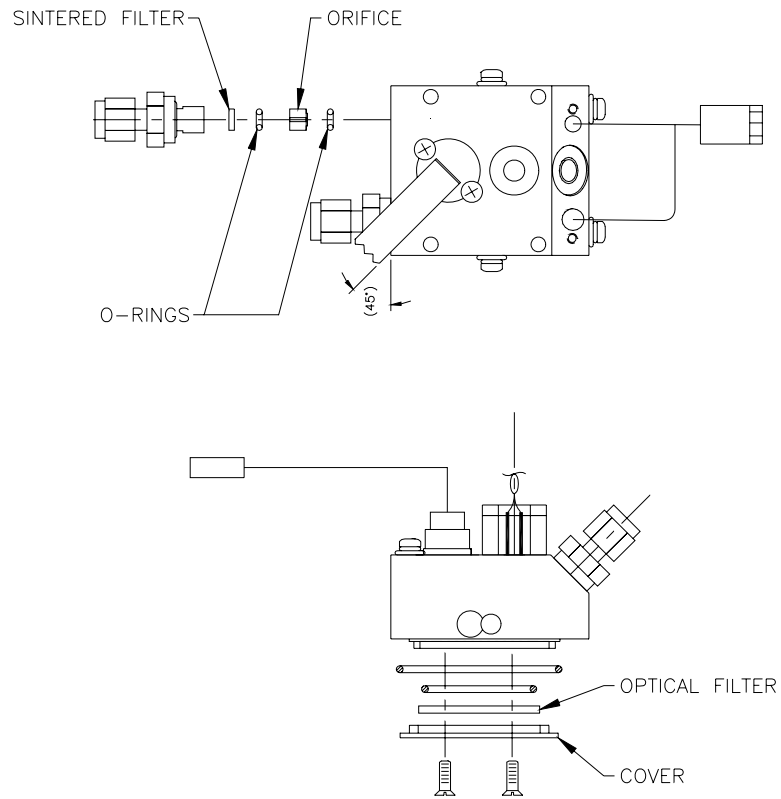


Figure 16. Reaction Cell Cleaning

3.3.10 Pressure Transducer Handling

The pressure transducers used in the EC9841 require careful handling. The following precautions should be taken when removing or installing the transducers:

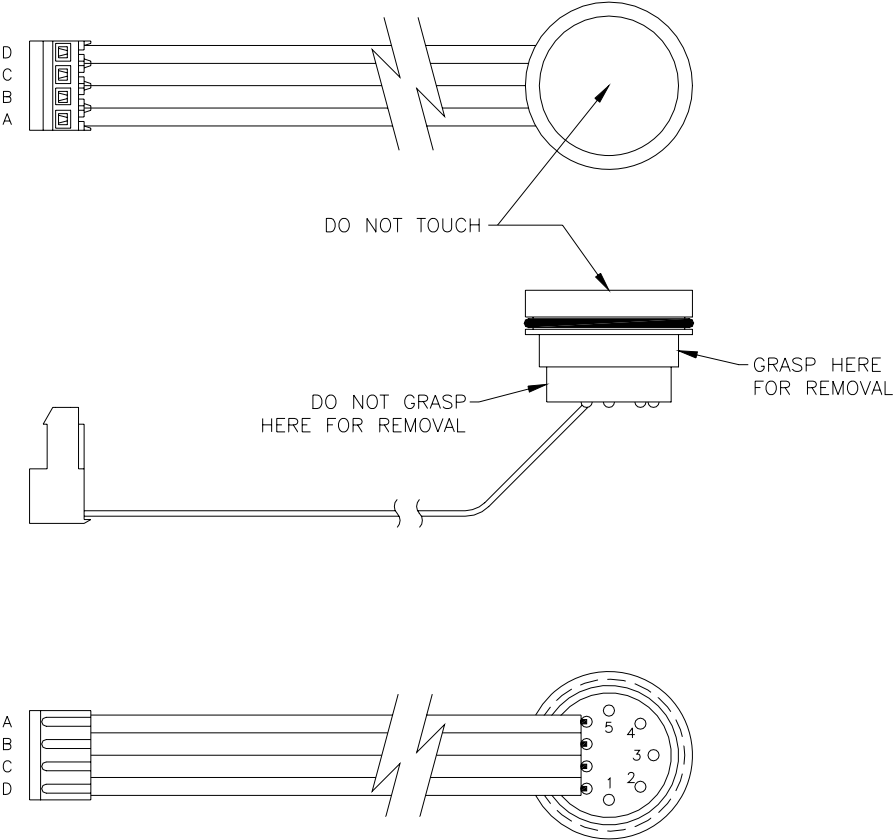


Figure 17. Pressure Transducer Replacement

1. Never touch the sensing face of the transducer (the recessed face opposite the cable connection).
2. Never remove the transducers by pulling on the plastic bodies. Always grasp the transducers by the metal ring at the base of the plastic housing.
3. Remove and reinstall the transducers by gently twisting them in or out of their mounting sockets. Do not force them in or out.
4. Do not place excess force on the electrical cable's connection to the transducer.

5. After a transducer is replaced, the pressure PCA should be recalibrated. Refer to section 3.5

3.3.11 Leak Test Procedure

This is a test for the pneumatic system of the instrument. The display readings will indicate whether the system is leaking or not.

Note

This procedure applies *only to the instrument*. It does not include the EZS valve option. The option, if included in the instrument, must be disabled to perform this test.

1. Enter the TEST MENU, select the OUTPUT TEST MENU, then select VALVE TEST MENU; from these items pick VALVE SEQUENCING and set to OFF.
2. Plug the Inlet port on the rear panel and the DFU filter inlet inside the instrument.
3. Enter the INSTRUMENT STATUS screen. Both GAS PRESSURE and AMBIENT PRESSURE should drop to approximately 50% of the normal GAS PRESSURE reading.

Note

If the readings do not drop to within 10 torr of each other, there is probably a leak. The pneumatic diagram in Figure 10 and the VALVE TEST MENU can be used to isolate portions of the pneumatic system and possibly isolate the leak.

4. Return to the OUTPUT TEST MENU, choose VALVE TEST MENU, and select VALVE SEQUENCING: ON.
5. Press <Exit> and unplug the instrument inlet port and the DFU filter inlet (inside the instrument).

If a leak is detected, attempt to isolate the leak by using the VALVE TEST MENU and the pneumatic diagram to select and close off different sections of the analyzer.

The actual flow through the analyzer should be checked by turning on the exhaust pump and connecting a Flowmeter to the Measure inlet (ensure that the analyzer is in SAMPLE MEASURE). Actual flow through the analyzer should be approximately 0.62 slpm. If flow is too low, perform the sintered filter

replacement procedure in section 3.3.6. If flow is too high, there is probably a leak around the sintered filter or orifice.

3.4 Hidden Menu

The new software features of the Ecotech Microprocessor board (SMD version) provide provisions for a hidden menu. This enables the experienced user to access menus for maintenance purposes. These menus eliminate the need for a portable computer to perform flow & pressure calibrations.

To access the hidden menu, simultaneously press three keys on the front panel from the primary screen as follows:

Up arrow (▲), <Pg Up> and *Enter*> (↵)

The following menu will be displayed:

```

                                HIDDEN MENU

SERIES                          A
ANALYZER TYPE                   9841
SUB TYPE                        STANDARD
FLOW BLOCK TYPE                 ISO
GAS NAME                        _____
PRESSURE CALIBRATION MENU
FLOW CALIBRATION MENU
  
```

Figure 18. Hidden Menu

SERIES

Allows the user to choose the correct series of analyzer. The options are A, B & S. The selection must reflect the Hardware to which it is being installed. i.e. for a 9841B analyzer, it must be set to B in order to operate correctly. The S option is reserved for special system software.

ANALYSER TYPE

Allows the user to choose the correct analyzer type. The options are 9810, 9811, 9812, 9820, 9830, 9841, 9842 & 9850. The selection must reflect the Hardware to which it is being installed. i.e. for an EC9841 analyzer, it must be set to 9841 in order to operate correctly. The analyzer type will default to ???? if the device type has not been set or cannot be read from the preprocessor board.

SUB TYPE

Allows the user to set the correct Hardware options for this analyzer. The options for the EC9841 A & B series are: STANDARD, TRACE & HIGH LVL.

GAS NAME

Allows the user to set a 3 character name for the primary gas name (NO). The name entered here will be used to replace the primary gas name (NO) in all screens. If the first character is a space then NO will be used as a gas name.

FLOW BLOCK TYPE

Displays the type of flow block installed. If the flow block is not connected or calibrated, then no type will be displayed. For all EC9841 series analyzers, the flow blocks type should be set to ISO.

3.4.1 Pressure & Flow Calibration sub-menus

The pressure and flow calibration menus allow the user to manually calibrate the pressure transducers and calibrate the flow of the flow controllers. The contents of the pressure and flow calibration menus are described below.

CRITICAL ORIFICE

Designated flow rate of the critical orifice installed in the flow/pressure assembly. For the 9841B, this should be set to 0.64 unless otherwise specified.

PRESSURE 1 HIGH

Pressure entered during ambient calibration.

PRESSURE 1 LOW

Pressure entered during low pressure calibration.

VALVE SEQUENCING

Turn the valve sequencing on or off. Same as in the Valve Test Menu. When turned off, the appropriate valve sequence will set ready for pressure calibration.

AMBIENT PRESSURE

Current pressure measured from the flow block.

GAS PRESSURE

Current pressure measured from the flow block.

GAS FLOW

Current gas flow measured from the flow block.

Figure 19 displays the flow calibration menu for the 9841B analyzer.

FLOW CALIBRATION MENU	
FLOW BLOCK TYPE	ISO
CRITICAL ORIFICE	0.640
PRESSURE 1 HIGH	743.0 TORR
PRESSURE 1 LOW	250.0 TORR
VALVE SEQUENCING	ON
AMBIENT PRESSURE	750.0 TORR
GAS PRESSURE	250.0 TORR
GAS FLOW	0.640 SLPM

Figure 19. Flow Calibration Menu

3.5 Flow/Pressure Calibration

The pressure and flow calibrations should be performed whenever a flow or pressure reading becomes suspect, when a transducer is replaced, or can be performed as an annual maintenance item. This procedure recalibrates both pressure transducers.

3.5.1 Setup

The following equipment is required:

- Pressure transducer (absolute); calibrated in torr.
- Flowmeter, 1 slpm nominal
- ¼” fitting with hose to suit pressure transducer.

3.5.2 Pressure Calibration

Note

The EC9841 analyzer should be left running for at least one hour with the pump switched on before this procedure is attempted. This will allow the valve manifold temperature to stabilize to 50°C.

Warning

After removal of power from the EC9841, the exhaust should be maintained for approximately 15 minutes to purge the exhaust of ozone and prevent possible combustion of the charcoal.

PRESSURE CALIBRATION MENU	
PRESSURE 1 HIGH	743.0 TORR
PRESSURE 1 LOW	250.0 TORR
VALVE SEQUENCING	ON
AMBIENT PRESSURE	750.0 TORR
GAS PRESSURE	250.0 TORR
GAS FLOW	1.000 SLPM

Figure 20. Pressure Calibration Menu for ISO Flow Block

1. From the TEST MENU select OZONATOR: OFF.
2. After 15 minutes turn off the pump.
3. From the HIDDEN MENU, set the FLOW BLOCK TYPE TO ISO, and press Enter> (↵).
4. Press Reset on the analyzer secondary panel.
5. Disconnect the Teflon line from the O₃ generator to the measurement cell and connect a calibrated pressure transducer to this port on the measurement cell (as shown in Figure 21).
6. From the HIDDEN MENU, select the PRESSURE CALIBRATION MENU. The menu of Figure 20 should be displayed.
7. Allow 30 seconds for the pressure reading to stabilize to ambient pressure on both the calibrated pressure transducer and the analyzer. This reading (in TORR) should be the ambient pressure. Set this value as PRESSURE 1 HIGH in the PRESSURE CALIBRATION MENU and press Enter> (↵).

Note

To convert from millibar to TORR, multiply the pressure by 0.75.

8. Connect the pump to the exhaust port and turn on the pump.
9. From the PRESSURE CALIBRATION MENU set the VALVE SEQUENCING OFF and press Enter> (↵).

10. Allow the pump to evacuate the cell and the pressure reading to stabilize. This reading should be low (typically 100 to 200 torr), and is dependent upon the capacity of the pump. This reading should be the gas pressure. Set this value as **PRESSURE 1 LOW** in the **PRESSURE CALIBRATION MENU** and press **Enter** (<↵>).
11. Disconnect the pressure transducer from the measurement cell inlet and reconnect the O₃ inlet tubing.
12. Press **Reset** on the analyzer secondary panel.
13. From the **TEST MENU** select **OZONATOR: ON**.

The flow calibration must now be completed.

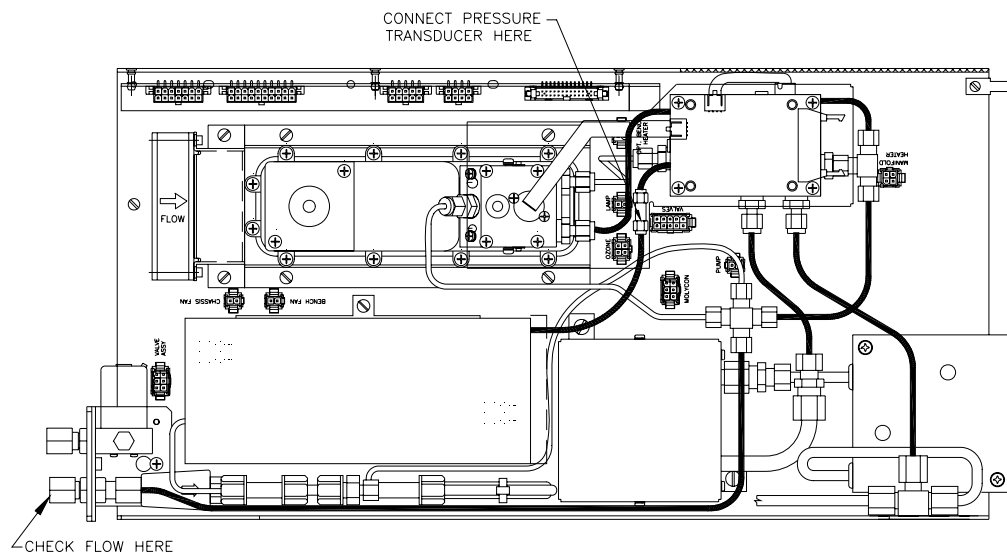


Figure 21. Pressure Calibration (B Series)

3.5.3 Flow Calibration

1. From the **HIDDEN MENU**, select the **FLOW CALIBRATION MENU**. The menu of Figure 22 should be displayed.

FLOW CALIBRATION MENU	
CRITICAL ORIFICE	0.640
VALVE SEQUENCING	ON
AMBIENT PRESSURE	750.0 TORR
GAS PRESSURE	250.0 TORR
GAS FLOW	0.640 SLPM

Figure 22. Flow Calibration Menu for ISO flow block

2. Set the **CRITICAL ORIFICE** to **0.640** and press Enter> (↵).
3. Press Reset on the analyzer secondary panel.
4. The actual flow should now be checked by turning on the pump and connecting a flow meter to the sample inlet of the analyzer. The flow should read approximately 0.64 slpm. If the flow is too low, perform the sintered filter/orifice replacement procedure. If flow is too high, there is probably a leak.

3.6 Preprocessor ID Entry

This procedure is only required if the microprocessor is not reading the device ID from the preprocessor board, or if the preprocessor board has been replaced.

1. From the **HIDDEN MENU** set the **SERIES** to **A** or **B** depending on which analyzer it is. Then press Enter> (↵).
2. Set the **ANALYSER TYPE** to **9841** and press Enter> (↵).
3. Press Reset on the analyzer secondary panel. The display should now display **9841B NOX ANALYZER**.
4. You may need to erase memory after this procedure to avoid any problems.

This completes the analyzer device type programming.

3.7 Firmware Update

As improvements are made to the EC9800 series analyzers, these can be easily passed on to the user by updating the firmware (software operating within the Microprocessor board).

To update your EC9800 Analyzer, download the Firmware Updater Software. Install this software on a Windows based computer with a COM port. To do this, run the downloaded file 'setup.exe' by double clicking on it, then follow the installation screens to install.

Next, download the required software version for your 9800 analyzer from those listed at the bottom of this page (e.g. V1.00.0002), by right clicking on the link, and choosing 'Save Target As', and saving the .sx file on your computer. You will need to select save as type 'All Files' in the download window.

To update the firmware on the analyzer:

1. Run 'Firmware Updater' from the 'Start - Programs - Ecotech - Firmware Updater' menu.
2. Connect the 9800 analyzer to the computer using a standard serial cable (you can connect to either the Multidrop port on the back of the analyzer, or the service port on the front of the analyzer).
3. Select 'Serial Port' and the COM Port on the computer from those listed on the Firmware Update screen.

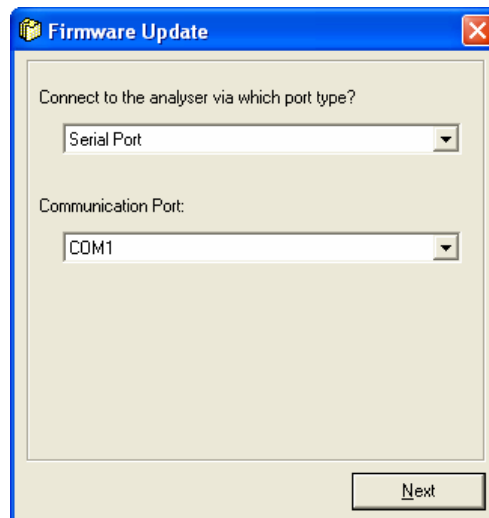


Figure 23 Firmware Update communication settings screenshot

4. Click Next
5. Enter the full path and file name of the firmware (.sx) file you downloaded.
e.g. - C:\TEMP\V1.03.0001.SX assuming the file was saved to C:\TEMP.

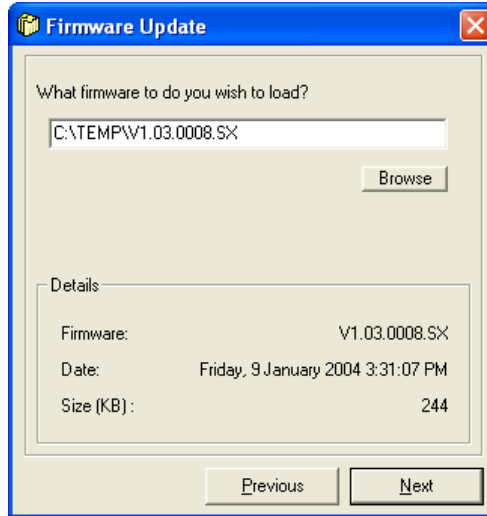


Figure 24. Firmware Update firmware selection screenshot

6. Click Next
7. Tick the boxes as shown in the figure below.

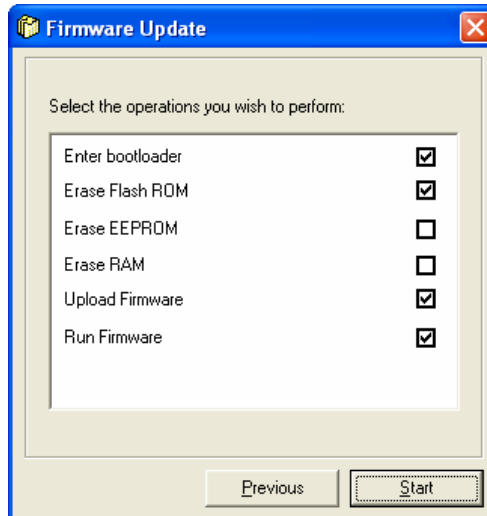


Figure 25. Firmware Update operations screenshot

8. Ensure the analyzer is switched off using the switch under the front panel.

9. Click 'Start'.
10. Switch the analyzer on.
11. The Firmware Updater window will show each step as the firmware is uploaded. DO NOT turn the analyzer off until the 'Close' button is enabled as shown below, and the Analyzer is operating as usual again.

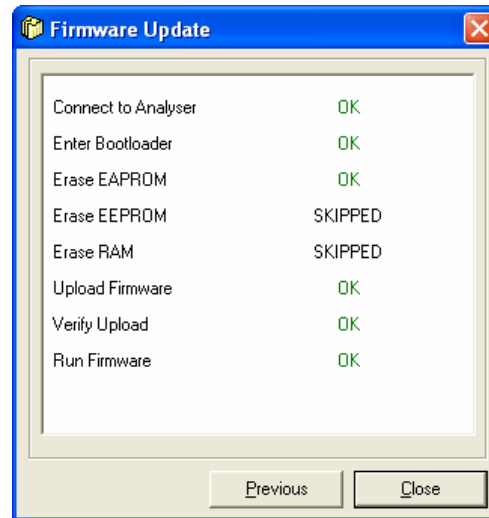


Figure 26. Firmware Update completion screenshot

4.0 Troubleshooting

4.1 DC Power Supply Voltages

Before consulting the troubleshooting section, verify that the DC power supply voltages are present and within the specifications given for each printed circuit board listed in the following table. Circuit board illustrations, indicating test points and other component locations, immediately follow the troubleshooting guide.

Troubleshooting Voltage Table				
PCB	Supply	DVM(-)	DVM(+)	Response
Microprocessor	+12V GOOD* -10V -20V	TP1	TP2 TP3 TP4	+5V ±0.5V -10V ±0.5V -20V ±0.5V
Voltage Reg.	+12V +10V - 10V +5V	TP7 (AGND) TP7 TP7 TP7	TP9 TP8 TP6 TP4	+12V ±0.5V +10V ±0.5V -10V ±0.5V +5V ±0.25
Pressure	+5V +10V -10V	TP1(AGND) TP1 TP1	D2-Cathode U2-8 U2-4	+0.5V ±0.25V +10V ±0.5V -10V ±0.5V
Preprocessor	+12V + 12V(COOLER) +12V(CONVERTER) +12V(MANIFOLD) +12V(O3) +5V +10V -10V -5VR	TP2(AGND) TP2 TP2 TP2 TP2 TP2 TP2 TP2 TP2	J3-1,6 J1-9 J2-1 J2-5 J2-9 J3-3 J3-4 J3-5 J5-3	+12V ±0.5V +12V ±0.5V +12V ±0.5V +12V ±0.5V +12V ±0.5V +5V ±0.25V +10V ±0.5V -10V ±0.5V -5V ±0.25V

* The +12V GOOD test point is a 5 volt status output from the power supply to indicate that the Mains supply is within the correct operating range.

4.2 Troubleshooting the EC9841 Analyzer

Because of the sophisticated design of the EC9841 analyzer, a significant amount of information about the condition of the system is available on the front panel display. You can therefore troubleshoot an operating instrument without opening the front cover.

The most useful menus in terms of troubleshooting are:

- PREPROCESSOR POTS MENU

- VALVE TEST MENU
- EVENT LOG
- INSTRUMENT STATUS
- SYSTEM TEMPERATURES
- SYSTEM FAULTS.

These menus provide information that may indicate a failure or an operational problem. If instrument performance appears to have changed dramatically, the component that is causing the problem can possibly be determined, thereby speeding up the corrective process. It may assist the operator to periodically check and record these parameters to establish an operational history of the analyzer. In addition, information from this section may be requested by Ecotech service support personnel when assistance is required.

4.2.1 Preprocessor Pots Menu

The `PREPROCESSOR POTS` screen displays the potentiometer settings associated with several components, variables, or signals on the preprocessor board. Figure 27 illustrates a typical screen for an instrument that is operating normally. The value of the potentiometer settings is somewhat arbitrary and differences in the examples shown here and the values displayed on an operating instrument should not be construed as a definite indicator of a problem.

PREPROCESSOR POTS		
INPUT	:	40
TEST MEASURE	:	0
HIGH VOLTAGE ADJUST	:	53
NO	0 - 20	PPM
CONC. VOLTAGE	0.1 - 4.5	VOLTS
HIGH VOLTAGE	600 - 700	VOLTS

Figure 27. Preprocessor Pots Menu

4.2.2 Valve Test Menu

The `VALVE TEST MENU` displays the current status of each valve in the instrument. This menu can be particularly useful in correcting flow problems in the machine. The valves can be opened and closed from this menu, thus allowing the operator to determine whether valves are operating correctly. Valve sequencing must be ON in order for correct gas measurement to be accomplished.

Refer to the *EC9841 Operation Manual* for a key to the valve names used in the menu.

VALVE TEST MENU		
INT. VALVE #1	:	OPEN
INT. VALVE #2	:	CLOSED
INT. VALVE #3	:	CLOSED
INT. VALVE #4	:	OPEN
INT. VALVE #5	:	CLOSED
EXT. MEASURE	:	OPEN
EXT. ZERO GAS	:	CLOSED
EXT. SPAN GAS	:	CLOSED
VALVE SEQUENCING	:	ON

Figure 28. Valve Test Menu

4.2.3 Event Log

Upon noting a possible operational problem, examine the `EVENT LOG` menu to determine whether the microprocessor is reporting a system failure or problem. Should the `EVENT LOG` indicate an error, it will also provide information as to the portion or component of the instrument which is at fault.

Event Log Messages		
Message	Description	Action
RAM CHECKSUM FAILURE	Checksum of memory at power down differs from checksum at power up.	Battery failure or system software error. If error persists, call Ecotech Customer Service for instructions.
EAROM X DATA ERROR Y	EAROM designated "X" detected error at location "Y."	Check Pressure PCA cable connections and Pressure PCA.
SERVICE SWITCH ACTIVATED	Unit taken out of service from front panel.	Return analyzer to service using the front panel switch.
LCD DISPLAY BUSY	LCD constantly busy indicates hardware failure in display.	Check display cable connection, Display PCA, and Microprocessor PCA.
SYSTEM POWER FAILURE	Power removed from system.	No action required.
SYSTEM POWER RESTORED	Power applied to system.	No action required.
HIGH VOLTAGE POT LIMIT	High voltage adjustment exceeds range.	Check PMT or High Voltage Module. See the Troubleshooting Section.
A/D CONVERSION ERROR	Analog to Digital converter returning busy status.	Hardware failure in analog interface. Replace the Microprocessor Board.

Event Log Messages		
Message	Description	Action
ZERO FLOW	Instrument flow has gone to zero.	The pump has been turned off or has failed.
SPAN RATIO < 0.75	After AZS cycle, ratio of requested span to measured span is < 0.75.	Instrument span has drifted beyond acceptable limits. Recalibrate as necessary.
SPAN RATIO > 1.25	After AZS cycle, ratio of requested span to measured span is > 1.25.	Instrument span has drifted beyond acceptable limits. Recalibrate as necessary.
RESET DETECTION	Reset button pressed or watchdog timer caused reset.	Unless the reset was not initiated by the user, no action is required.
AZS CYCLE	AZS cycle started.	No action required.
DATA LOGGING MEM FAIL	Occurs if unable to write to datalogging memory.	Battery failure or system software error. If error persists, call Ecotech Customer Service for instructions.
CONTROL LOOP RESTARTED	Occurs when Control Loop has been disabled, and then automatically enabled after the main screen has been visible for the last 1 minute.	No action required.
VALVE SEQUENCING RESTARTED	Occurs when valve sequencing has been disabled, and then automatically enabled after the main screen has been visible for the last 1 minute.	No action required.
GAIN CHANGE (10% VAR MAX)	If the two Instrument gains differ by more than 10% the analyzer will reset the other instrument gains to that of the gain currently being changed.	If when setting the second (NO _x) instrument gain the first (NO) instrument gain changes then the analyzer should be serviced (problem Molycon converter)

4.2.4 Instrument Status

If any of the parameters displayed on the INSTRUMENT STATUS screen vary significantly from the values shown in Figure 29, the fault or operational problem is probably related. This is also true if one of the parameters is demonstrating a rapid change or is oscillating strongly around the desired setpoint. For more information on the operational limits and fault messages, refer to the table in section 4.2.7 System Faults.

INSTRUMENT STATUS			
GAS FLOW	:	0.515 - 0.765	SLPM
GAS PRESSURE	:	75 - 375	TORR
AMBIENT PRESSURE	:	690 - 760	TORR
CONC. VOLTAGE	:	0.1 - 4.5	VOLTS
ANALOG SUPPLY	:	11.6 - 12.2	VOLTS
DIGITAL SUPPLY	:	4.8 - 5.2	VOLTS
HIGH VOLTAGE	:	640 - 660	VOLTS
VERSION 1.11.0002			EXIT

Figure 29. Instrument Status Ranges

4.2.5 System Temperatures

The SYSTEM TEMPERATURES screen provides the reaction cell temperature, the molycon temperature, the chassis temperature, the valve manifold temperature, and the thermoelectric cooler temperature used to cool the PMT. Figure 30 contains the nominal values which should be displayed on this screen. If any of the parameters are outside the acceptable ranges, a significant problem among these components is strongly indicated. For more information on the operational limits and fault messages, refer to the table in section 4.2.7 System Faults.

SYSTEM TEMPERATURES			
CELL TEMP.	:	47 - 53	DEG C
CONV. TEMP.	:	315 - 335	DEG C
CHASSIS TEMP.	:	25 - 40	DEG C
MANIFOLD TEMP.	:	50 - 60	DEG C
COOLER TEMP.	:	10 - 14	DEG C
			EXIT

Figure 30. System Temperatures and Tolerances

4.2.6 System Faults

The SYSTEM FAULTS display shows pass or fail indications for various parameters that are continually monitored. These parameters must be within acceptable operating ranges in order to display PASS. If FAIL is indicated, this indicates a major failure in the affected area. If the instrument is in startup mode, START will be displayed.

Note

The SYSTEM FAULTS screen only indicates a PASS or FAIL for the various analyzer parameters, and is meant to indicate major failures. Desired operating ranges are indicated in the INSTRUMENT STATUS and SYSTEM TEMPERATURE ranges section. If analyzer readings are not within these ranges, it could indicate deterioration of certain assemblies within the analyzer, or minor failures.

The following table lists the possible system fault messages that are displayed on the primary screen if a major failure occurs. If a fault message is displayed, use the Troubleshooting Guide to find the possible cause of the fault.

System Faults Screen	
Message	Description/Failure Limits
OUT OF SERVICE	Indicates the Service switch is in the OFF position. Unless the analyzer is being serviced, this switch should be in the IN position.
ZERO FLOW	Indicates that the sample flow is less than 0.1 slpm.
COOLER FAILURE	Indicates that the cooler temperature or voltage is not within the acceptable limits. A fault is indicated if the cooler temperature is above 15° C or below 0° C.
12 VOLT SUPPLY FAILURE	Indicates that the 12 volt supply voltage is not within the acceptable limits. A fault is indicated if the 12 volt supply voltage is below 11.1 volts or above 14.3 volts.
HIGH VOLTAGE FAILURE	Indicates that the high voltage is not within the acceptable limits. A fault is indicated if the high voltage reading differs by greater than 25% of the expected value as determined from the high voltage pot setting.
CELL TEMPERATURE FAILURE	Indicates that the cell temperature is not within the acceptable limits. A fault is indicated if the cell temperature is below 35° C or above 60° C.
CONVERTER TEMPERATURE FAILURE	Indicates that the converter temperature is not within the acceptable limits. A fault is indicated if the converter temperature is below 250° C or above 350° C.
VALVE MANIFOLD TEMPERATURE FAILURE	Indicates that the valve manifold temperature is not within the acceptable limits. A fault is indicated if the valve manifold temperature is below 45° C or above 65° C.
START UP SEQUENCE ACTIVE	Indicates that the analyzer is in start-up mode. Usually after power-up or reset.

4.3 Test Functions

The following lists the available diagnostic modes in the EC9841 under the TEST MENU:

4.3.1 Optic

The optic test function turns on a small incandescent light bulb in the reaction cell. The glow from this light simulates the glow of the normal chemilluminiscent reaction of NO in the cell, which is then detected by the PMT as if it were an actual signal. This test is used to verify the operation of the PMT, preamp and preprocessor measurement channel.

4.3.2 Preamp

The preamp test function generates an electronic test signal which is applied to the input of the PMT preamp. This simulates an input from the PMT and is then processed as if it were an actual signal. This test is used to verify the operation of the preamp and preprocessor, isolated from the PMT.

4.3.3 Electric

The electric test function generates an electronic test signal which is applied to the input of the preprocessor. This simulates an input to the preprocessor and is then processed as if it were an actual signal. This test is used to verify the operation of the preprocessor PCA measure channel isolated from the PMT and preamp.

4.3.4 Use of Diagnostic Modes

The diagnostic modes are actuated by selecting DIAGNOSTIC MODE: OPTIC or PREAMP or ELECTRIC and adjusting the test measure potentiometer until a response (simulated concentration) is noted. Response to tests will vary depending upon individual analyzer parameters. These tests are typically pass/fail. Functional problems can be isolated to a single component by logical use of the diagnostic modes.

4.4 Troubleshooting Guide

Use this troubleshooting guide to find the symptom. Then follow in order the possible causes and the fault isolation/solution procedures until the problem is discovered. Then take the action described.

If you cannot identify the problem, contact Ecotech at the locations given in the front of this manual.

System Troubleshooting Table		
Symptom	Possible Cause	Fault Isolation/Solution
2. No display	AC power	<ol style="list-style-type: none"> 1. Verify that the line cord is connected. 2. Check that the power supply fuse is not open. The fuse should be 5A (115 v) or 3A (230 v). 3. Verify that the Voltage switch on the power supply is in the proper position.
	DC power	<ol style="list-style-type: none"> 1. Verify the cable connection from the power supply to the VReg board. 2. Check the VReg board for correct voltages as listed in the Troubleshooting Voltages table in section 4.1. If incorrect voltages are found, replace the power supply or VReg. 3. Check Microprocessor test points listed in the Troubleshooting Voltages table table in section 4.1.
	Display	Check the interface cable between the display and J6 on the Microprocessor board.
	Bad display or Microprocessor PCA.	<ol style="list-style-type: none"> 1. Replace the front panel display. 2. Replace the microprocessor board. 3. A bad cable is unlikely, but if you suspect it, perform a pin-for-pin continuity test using an ohmmeter.
3. Zero flow	Pump failed	Replace the pump.
	Filter	Check the particulate filter. Replace if dirty or plugged.
	Pressurized Rx cell	Ensure sample and zero inlets are maintained at ambient pressure.
	Plugged orifice or SS filter	Clean or replace the orifice and SS filter.

System Troubleshooting Table		
Symptom	Possible Cause	Fault Isolation/Solution
4. Noisy or unstable readings	Leaks	A leak dilutes the sample stream and causes low span readings. Variation in the leak causes noise. Perform a leak test as described in section 3.3.10.
	Particulate filter	A contaminated filter causes numerous problems. Replace the particulate filter.
	Unstable flow or pressure	Verify that the flow and pressure readings on the INSTRUMENT STATUS screen are within acceptable limits <i>and steady</i> .
	Temperature	Verify that the temperatures on the SYSTEM TEMPERATURES screen are within the acceptable limits <i>and steady</i> .
	Calibration	Check for incorrect calibration or unstable gas source.
	Ozone generator	Replace the ozone generator.
	PMT	Replace the PMT.
5. Low span	Span setting	Adjust the span using the calibration procedure in the <i>EC9841 Operation Manual</i> .
	Leaks	A leak dilutes the sample stream and causes low span readings. Variation in the leak causes noise. Perform a leak test as described in section 3.3.10.
	Molycon	1. Verify the molycon is 305° to 325° C. 2. Verify that the efficiency of the molycon is higher than 96%. See the <i>EC9841 Operation Manual</i> . 3. Replace the molycon.
	Temperature	Verify that the cell temperature on the SYSTEM TEMPERATURES screen is within range.
	Reaction cell	Verify that the optical filter is clean.
	PMT gain	Verify that the PMT high voltage is within range. (INSTRUMENT STATUS screen).
6. No response to span gas	Span setting	Adjust the span using the calibration procedure in the <i>EC9841 Operation Manual</i> .
	Leaks	A leak dilutes the sample stream and causes low span readings. Variation in the leak causes noise. Perform a leak test as described in section 3.3.10.
	No flow	See the <i>No air flow</i> symptom in this table.
	Detector	1. Verify that the PMT high voltage is between 650 and 850 v. 2. Verify good BNC cable connection between the optical bench and the preprocessor (J4). 3. Use the Optic Test function to verify PMT response

System Troubleshooting Table		
Symptom	Possible Cause	Fault Isolation/Solution
6. Cont'd	Ozone generator	<ol style="list-style-type: none"> 1. Verify that the TEST MENU OZONE GENERATOR: ON. 2. With the ozone generator ON, check the following voltages on the preprocessor board: J2-9 = +12 v J2-11 > 2.4 VDC 3. Replace the ozone generator.
	Valves	Verify that the TEST MENU VALVE SEQUENCING: ON.
	Software lockup	<ol style="list-style-type: none"> 1. Observe whether ECOTECH GLOBE on the display is turning. 2. Verify that other menus can be selected. 3. Press the Reset button on the secondary panel. 4. Check that D5 HEART BEAT LED is flashing on the Microprocessor Board
7. Zero drift	Leak	A leak dilutes the sample stream and causes low span readings and noise. Perform a leak test as described in section 3.3.10.
8. Zero gas will not read 0.000 ppm	Bad zero air	Replace zero air source
	Contaminated reaction cell	Clean reaction cell.
9. Unstable flow or pressure readings	Failed cell control heater	The cell temperature (SYSTEM TEMPERATURES screen) should be $50^{\circ} \pm 5^{\circ}$ C.
10. Response time not at specified value	Low flow	Check sample flow with flow meter. It should be 0.6 to 0.7 slpm at STP. Replace SS filter or orifice if it is not.
11. PMT voltage does not reach 650 v	High voltage	<ol style="list-style-type: none"> 1. Check the high voltage test point (J5-15). Voltage should be at least 2.7 v. 2. Check the high voltage control test point (J5-7). Voltage should be 0.65 to 0.85 v. 3. Replace the preprocessor board.
	Bad Microprocessor or Preprocessor PCA	<p>Check that D5 HEART BEAT LED is flashing on the Microprocessor Board. Check Display connection.</p> <p>Replace the Microprocessor or Preprocessor PCA.</p>
	PMT	The problem could exist in the PMT or in the PMT housing assembly. Consult the factory for further service.
12. Analyzer displays BAD I.D. ANALYZER	Preprocessor ID set wrong	<ol style="list-style-type: none"> 1. Check J5 connector on Microprocessor. 2. Check J6 connector on Preprocessor. 3. Reprogram device ID. 4. Replace Preprocessor

INDEX

A

AZS cycle mode19

B

Block diagram14

C

Cable Connections (illustration)7

Charcoal scrubber maintenance26

Cooler replacement29

Cooler Replacement (illustration)32

D

Data Logging50

DC circuitry17

Delay loop16

Desiccant pack replacement28

DFU replacement27

Diagnostic modes52

E

Electric test function53

Event Log49

F

Fan filter cleaning26

Filter maintenance25

Flow Diagram (illustration)9

Flow/Pressure board calibration37, 38

I

Illustration, Pressure Calibration41

Illustrations, Cable Connections7

Illustrations, Cooler Replacement32

Illustrations, Flow Diagram9

Illustrations, Instrument Status Ranges 37, 39, 40, 42,
51

Illustrations, Major Components13

Illustrations, Opening the Front Panel5

Illustrations, Pneumatic Diagram15

Illustrations, Preprocessor Pots Menu48

Illustrations, Pressure Transducer Replacement35

Illustrations, Reaction Cell Cleaning34

Illustrations, Routine Maintenance Components25

Illustrations, Sintered Filter/Orifice Removal28

Illustrations, System Block Diagram12

Illustrations, System Temperatures and Tolerances 51

Illustrations, Valve Test Menu49

Installation5

Instrument Status Ranges (illustration) 37, 39, 40, 42,
51

Instrument Status screen50

L

Leak test36

M

Maintenance, periodic20

Maintenance, routine23

Major Components (illustration)13

Measure modes18

Microprocessor board10

Modes of operation17

Molycon converter16

O

Opening the Front Panel (illustration)5

Optic test function53

Optical bandpass filter16

Optics system components16

P

Particulate filter maintenance25

Periodic maintenance20

Photomultiplier tube17

PMT17

PMT cooler replacement29

PMT desiccant pack replacement28

Pneumatic Diagram (illustration)15

Power/microprocessor module10

Preamp test function53

Preprocessor board17

Preprocessor Pots Menu48

Preprocessor Pots Menu (illustration)48

Pressure Calibration (illustration)41

Pressure Transducer Replacement (illustration)35

Pressure transducers16

Pressure transducers, handling35

Pump16

R

Reaction cell16

Reaction cell cleaning32

Reaction Cell Cleaning (illustration)34

Replaceable parts21

Routine maintenance23

Routine Maintenance Components (illustration)25

S

Scrubber maintenance26
Sensor module14
Serial port6, 10
Serial Port43
Service switches6
Sintered filter replacement.....27
Sintered Filter/Orifice Removal (illustration).....28
Span measure mode19
Spare parts21
Startup mode.....17
System Faults display51
System Temperatures and Tolerances (illustration) 51
System Temperatures screen51

T

TCIP11

Theory of operation8
Thermoelectric cooler circuit.....17
Troubleshooting.....47, 54

U

USB11, 21

V

Valve manifold16
Valve Test Menu48
Valve Test Menu (illustration)49
Voltage Regulator board.....10

Z

Zero measure mode18