

**Zooper / USA**  
Lan Enterprises, LLC  
10140 SW Allen Blvd., Suite E  
Beaverton, OR 97005  
Toll Free number: 1-888-742-9899  
FAX: 503-352-0929  
E-mail: [info@zooper.com](mailto:info@zooper.com)  
Web: [www.zooper.com](http://www.zooper.com)

**Zooper / Canada**  
Peter John M. Distributions, Inc.  
88 SW Marine Dr.  
Vancouver, BC  
Canada  
V5X 2R1  
Tel: 1-888-597-0992  
E-mail: [info@zooperbabycanada.com](mailto:info@zooperbabycanada.com)

INTERNATIONAL MODEL NUMBER: BU806A/B

### SECURING AN INFANT CARRIER (JUST FOR SL806A)


To install an infant carrier, first be sure that the infant carrier is not attached to its permanent car base. Locate the car seat adapter strap that was packaged with your stroller. It should have a buckle in the center, and a clip on each end. Next, identify the D-rings located in the hip points of the stroller seat. Ensure that infant seat has been removed from its permanent car base.

Step 1: Recline the stroller seat to the 3rd or 4th position.  
Step 2: Attach the car seat adapter strap to the stroller seat by clipping the ends to the D-rings. Adjust the strap so that it is fully extended. Unbuckle the center, and lay the ends out over the armrests of the stroller seat.

Step 3: Place the infant seat into the stroller seat, so that the infant seat is facing the parent. Depending on the size and design of your seat, you will either place it inside the bumper bar, or over the bumper bar.

Step 4: Bring the ends of the adapter strap back over the infant seat, and buckle the center. The belt should be positioned so that it travels over the lap of the infant seat. Some models have belt guides located on the sides, if your model does, make sure the strap is positioned inside these guides.

Step 5: Tighten the strap down so that infant seat is securely fixed into the stroller seat. Infant seat should not lift out of the stroller seat if properly strapped in.

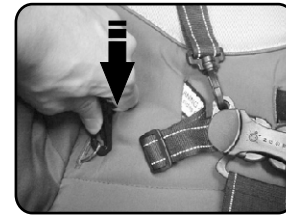


**WARNING:** Only the following infant car seat models are compatible with this stroller: Graco Snuggler, Graco Safeseat, Britax Companion, and Evenflo On My Way

6

INTERNATIONAL MODEL NUMBER: BU806A/B

### SAFETY HARNESS




Zooper provides a special 5-point harness safety system. Used properly, this harness will keep your child seated and safe. To secure your child in the harness, push buckles (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust slider (D) to fit snugly and comfortably around your child see (Fig. 11). Follow the same procedure to adjust the shoulder straps. Always re-tighten the harness when your child is in a sit up or lay back position.

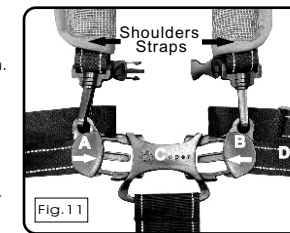

### FOLDING THE STROLLER

Each time, before closing your stroller, check the following:

- Set the stroller brakes
- Retract the canopy
- Move the seatback into the upright position
- Make sure there is nothing in the shopping basket
- Push in on the main frame lock button located in the middle of the stroller handle.
- Push the handle down in the middle until it stops in a "V" shape.
- Pull up on the base frame handle located at the top of the cross bars which connect both rear leg tubes. Pull this handle up toward you until the stroller fully closes and the right side auto frame lock engages.

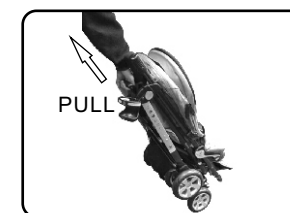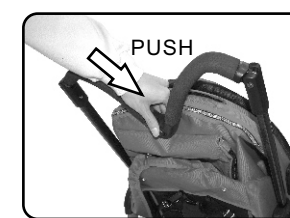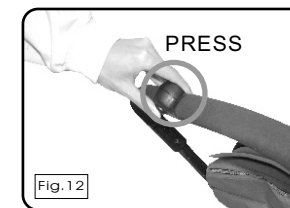

5



## User Guide Bolero BU806A/B

## WARNINGS

### IMPORTANT CARE AND SAFETY INFORMATION

- Avoid serious injury from falling or sliding out, always use safety harness provided.
- Always engage the rear brakes when not holding onto your stroller.
- Never leave your child unattended.
- Never use the stroller near an open fire or exposed flame.
- Never allow the stroller to be used as a toy.
- Never allow more than one child at a time in the stroller.
- Never hang bags or other items from the handle or on the canopy. This may cause the stroller to become unstable.
- Never use the stroller on stairs or escalators.
- Do not overload the basket. Maximum load is 7 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- Do not overload the canopy pocket. Maximum load is 2 lbs. Excessive weight may create a hazardous unstable condition to exist.
- Before each use, check to make sure the stroller is set up properly and that all the wheels are properly and securely attached.
- This stroller is not recommended for use with a child over 55 lbs.
- This stroller is designed as a walking stroller. We do not recommend running, roller blading, or other such activities with this stroller.
- This stroller is a single stroller do not use any attachments that allow for a second child.
- It may be unsafe to use accessories other than those approved by the manufacturer or distributor.

### MAINTENANCE

- Do not fold your stroller when wet.
- Machine wash removable seat and armrest covers using gentle cycle, cold water, and a mild detergent. The canopy can only be spot washed.
- Line dry fabric parts.
- Never use bleach when washing.
- Do not leave your stroller in direct sunlight for extended periods of time.
- Clean and lubricate all moving parts on the stroller frame and wheels as needed. Use only a penetrating silicon based lubricant.
- Regularly check for loose screws, broken parts, etc. Use only Zooper approved replacement parts available through the service centers listed below.
- Wipe off any sand, salt or other corrosive residue after each use where the stroller may be exposed to those elements.

In order to maintain the highest quality standards, the distributor reserves the right to improve or alter any Zooper stroller design without notice or obligation to any previous purchaser. For questions or service needs, please contact the service center located in your country of residence. Sending in your warranty card will help expedite any service needs.

1

INTERNATIONAL MODEL NUMBER: BU806A/B

IMPORTANT: READ THESE SAFETY INSTRUCTIONS CAREFULLY BEFORE USING YOUR STROLLER AND KEEP THEM FOR FUTURE REFERENCE. THE SAFETY OF YOUR CHILD DEPENDS ON IT.

Thank you for choosing Zooper.




### UNLOCKING & OPENING THE FRAME

To open the stroller, first lift up on the black colored frame lock located on the right side of the stroller. (Fig. 1). Be sure the frame lock detaches from the metal locking pin. Then pull up on the main stroller handle while pushing down with your foot on the plastic tab located between the wheels (Fig. 2) Using your hand, push down on the front edge of the seat to ensure the stroller frame has locked properly in the open position. Do not push down on the front armrest bar.

**WARNING:** Be sure children are at a safe distance and cannot reach moving parts whenever opening or closing the stroller.

### ATTACHING THE FRONT WHEELS TO THE FRAME

Press each wheel block firmly onto the metallic tube ends until they "click" into position (Fig. 3). Check to see they have been properly installed by pulling down on the wheel block. To remove the front wheels, push the metal lock located just above the plastic housing and then pull the housing off the metal tubes.

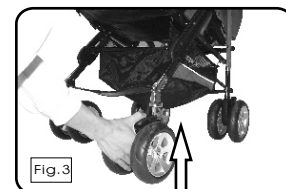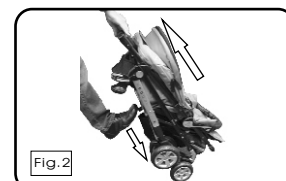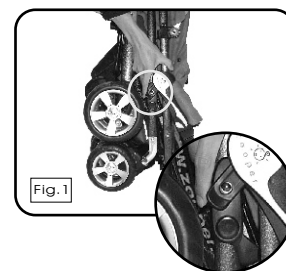

2

INTERNATIONAL MODEL NUMBER: BU806A/B

### ATTACHING THE REAR WHEELS TO THE FRAME

Insert both plastic rear wheel housings onto the rear leg tubes of the stroller (Fig. 4). Make sure the brake levers are facing out, away from the stroller. Then push in each locking spring located on the rear stroller tubes. Holding the locking pin in, slide each wheel block over the pin until it locks into place and the silver head of the locking pin can be seen protruding from the wheel housing (Fig. 5). To remove the rear wheel assembly, push in on the locking pins while pulling down on each wheel block.

**WARNING:** Do not use the stroller if the brake levers are not facing away from the stroller and if the locking pins are not visible as described above. Contact the appropriate service center listed at the back of these instructions if you have questions.

### ADJUSTING THE SEATBACK





To lower the backrest, lift up on the plastic lever located in the middle of the seatback. While holding the lever up, move the seatback down into desired position and then release the lever (Fig. 6). To raise the backrest, push up on the back of the seat until it clicks into the desired position.

**WARNING:** Always keep your child in sight when making these kinds of adjustments. Check the fitting of the safety harness each time the backrest is adjusted to be sure a snug, yet comfortable fitting is maintained.

### USING THE BRAKES

To set the brakes step down on both left and right rear wheel brake levers. Push forward slightly to ensure both brakes have engaged. To release the brakes push the brake levers back inward toward the stroller so that they are parallel with the rear leg tubes. (Fig. 7)

**WARNING:** Always engage both rear brakes whenever not holding onto the stroller. Never leave your child unattended. Do not leave stroller near dangerous places such as stairs, curbs, etc.

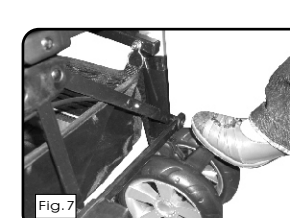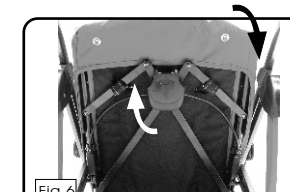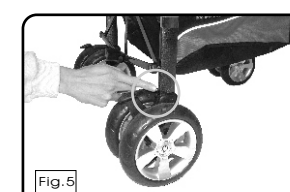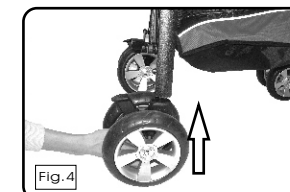

3

INTERNATIONAL MODEL NUMBER: BU806A/B

### ATTACHING THE FRONT BAR TO THE ARMRESTS

To attach the front armrest to the stroller seat, line up the inserts of the armrest bar with the two plastic slots on both sides of the stroller. Slide the inserts completely into these slots, making sure that both sides secure into a locked position. Pull out on each side of the armrest to make sure that the armrest is properly locked into the slots. To remove the armrest, locate the plastic tabs underneath where the armrest connects to the sides of the stroller. Press in the tabs while pulling up on the armrest.

**WARNING:** Never pick the stroller up by the front armrest. To avoid serious injury, ensure that children's hands, arms and feet are well clear of the bumper bar before opening or closing it.

### ENCLOSING THE SEAT WHEN THE BACKREST IS FULLY RECLINED




The seating area must be fully enclosed whenever the seat is in a fully reclined position. To do so, rotate the footrest back so that it is parallel with the side armrests. Then zip both sides of the footrest to the zipper track on the sides of the seat. (Fig. 9)

**WARNING:** Your child may slip into leg openings and strangle. Never use the stroller with the backrest fully reclined unless this seat area is fully enclosed.

### ATTACHING THE CANOPY

To attach the canopy, insert the plastic shafts into the plastic slots located on the outside of the main stroller tubes (Fig. 10). They are inserted from the bottom up. Lift up to check that each side is locked into position. Open the canopy by pushing down on the plastic side canopy braces. Be sure to snap the canopy to the seat and backrest fabric whenever the seat is fully reclined. Retract the canopy by first pulling up on the side braces, then pushing the canopy hood back. The canopy can be converted to allow more air flow through the stroller. Unzip the lower half of the canopy from the upper half. This will leave a mesh cover that can snap to the back of the seat. To remove the canopy, first undo the snaps. Then pull the release tabs outward and slide the canopy down, off the slots.

**WARNING:** The rear panel of the canopy must be snapped onto the seat whenever the seat is fully reclined.

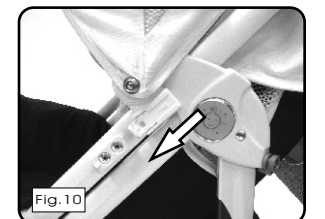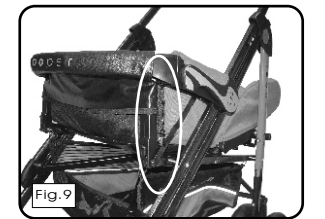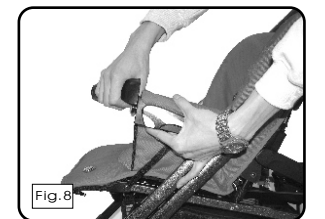

4